2-Color Display High Precision Digital Pressure Switch





Piping Variations Space-saving R1/8, NPT1/8 40.2 Rc1/8, G1/8 M5 x 0.8 Τ ß Ø Series ZSE/ISE40 ø4, ø6 Rc1/8, G1/8 one-touch fitting /M5 x 0.8 New Series ZSE/ISE40A

Mounting Variations





Secret code setting function A function to prevent operation by anyone other than the designated operator while the keys are locked.



An optional 3-digit value is entered.

* The set-value can be checked while the keys are locked.

Power-saving function The display can be turned off to save the power consumption. (Power consumption reduced by max. **20%**)



The value disappears and decimal points start flashing.

Resolution conversion function..... The flickering on the display can be eliminated.



1/10001/100(Only the displayed value is changed,
and there is no effect on the accuracy.)

MPa/kPa switching function

The indication unit for vacuum, compound pressure and positive pressure can be integrated into either MPa or kPa.



kPa Stick the label (enclosed with the product) of a desired unit seal.

∕ SMC



∕⁄∂SMC

Specifications

Model			ZSE40A (vacuum pressure) ZSE40AF (compound pressure) ISE40A (positive press					
Rated pre	ssure rang		0.00 to -14.69 psi	-14.50 to 14.50 psi	-14.5 to 145.0 psi			
Display/S	et pressure	range	1.45 to –15.23 psi	-15.22 to 15.22 psi	–15.2 to 152.3 psi			
Withstand	l pressure	•	72.5 psi	72.5 psi	218 psi			
Display/Minimum unit setting			0.01 psi	0.02 psi	0.1 psi			
Applicable	e fluid		Air, N	Ion-corrosive gas, Non-flammabl	e gas			
Power sur	pply voltage)	12 to 24 VDC ±10%, Ripp	le (p-p) 10% or less (with power	supply polarity protection)			
Current c	onsumption	<u>ו</u>		45 mA or less				
Switch ou	Itput		NPN or I	PNP open collector 2 outputs (Se	electable)			
[Maximum	load current		80 mA				
	Maximum	applied voltage		28 V (at NPN output)				
	Residual v	oltage		1 V or less				
	Response	time	2.5 ms (with anti-	-chattering function: 20, 100, 500), 1000, 2000 ms)			
	Short circu	uit protection		Yes				
Repeat ac	curacy			±0.2% F.S. ±1 digit				
Huotoresic	Hysteresis	mode		Variable (0 or above) Note 1)				
Hysteresis	Window co	omparator mode		variable (0 of above) (see))				
	Note 2) Voltage	Output voltage (Rated pressure range)	1 to 5 V ±2.5% F.S.		0.6 to 5 V ±2.5% F.S.			
	output	Linearity		±1% F.S. or less				
		Output impedance	Approx. 1 kΩ					
Analog output	Note 3)	Output current (Rated pressure range)	4 to 20 mA ±2.5% F.S.		2.4 to 20 mA ±2.5% F.S.			
	Current	Linearity	±1% F.S. or less					
	output	Load impedance	Maximum load impedance: 300 Ω (Power supply voltage 12 V) 600 Ω (Power supply voltage 24 V) Minimum load impedance: 50 Ω					
Auto-shift	input		Non-voltage input (Reed or Solid state), Low level: 0.4 V or less, 5 ms or longer input					
Display			3 1/2-digit, 7-segment, 2-color LCD (Red/Green)					
Display ad	ccuracy		±2% F.S. ±1 digit (Ambient temperature of 77 ±5°F)					
Indicator I	light		Lights up when output is turned ON. OUT1, OUT2: Orange					
	Enclo	sure	IP65					
	Opera	ting temperature range	Operating: 23 to 122°F, Stored: 14 to 140°F (No freezing or condensation)					
	Opera	ting humidity range	Operating/Stored: 35 to 85% RH (No condensation)					
Environm	ent Withs	tand voltage	1000 VAC for 1 minute between live parts and case					
resistance	e Insula	tion resistance	50 M Ω or more between live parts and case (at 500 VDC Mega)					
	Vibrat	tion resistance	10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 20 m/s ² acceleration, in X, Y, Z directions, for 2 hours each (De-energized)					
Impact resistance			100 m/s ² in X, Y, Z directions, 3 times each (De-energized)					
Temperature characteristics			±2% F.S. (Based on 77°F)					
Temperatu	ure charact	eristics		$\pm 2 / 0 F.S.$ (Daseu UII / / F)				
Temperatu Lead wire		eristics	ø3.5, 2 m Conducto	Oilproof heavy-duty vinyl cable or area: 0.15 mm ² (AWG26) Ins	ulator O.D.: 0.95 mm			

Note 1) If the applied voltage fluctuates around the set-value, the hysteresis must be set to a value more than the fluctuating width, otherwise chattering will occur. Note 2) When the analog voltage output is selected, the analog current output cannot be selected.

Note 3) When the analog current output is selected, the analog voltage output cannot be selected.

Piping Specifications

Part no.		01	N01	W1	WF1	M5	C4	C6	
Port size		R1/8 (With M5 female thread)	NPT1/8 (With M5 female thread)	Rc1/8	G1/8	M5 x 0.8 female thread	ø4 one-touch fitting	ø6 one-touch fitting	
Material	Sensor pressure receiving area	Silicon							
of parts in contact with fluid	Piping port		ess nickel plated) HNBR		ZDC2 O-ring: HNBF	3	ZDC2, POM, Stainless steel 304 C3604 (Electroless nickel plated O-ring: HNBR		
Weight		78 g	79 g	97 g 104 g 101		1 g			



Analog Output



Range	Rated pressure range	Α	В	С
For vacuum pressure	0.00 to -14.69 psi	1.47 psi	0	–14.69 psi
For compound pressure	-14.50 to 14.50 psi	_	–14.50 psi	14.50 psi
For positive pressure	–14.5 to 145.0 psi	–14.5 psi	0	145.0 psi

Descriptions

Output (OUT1) display (Orange)

Lights up when OUT1 is turned ON.

Output (OUT2) display (Orange)

Lights up when OUT2 is turned ON.

riangle button

Use this button to select the mode or increase the ON/OFF set-value. It is also used for switching to the peak display mode.



LCD

Displays the current pressure, set mode, selected display unit, and error code. Always use red or green display; or switch between green and red according to the output. Four different display settings are available.

SET button

Use this button to change the mode or confirm the set-value.

\bigtriangledown button

Use this button to select the mode or decrease the ON/OFF set-value. It is also used for switching to the bottom display mode.

Internal Circuits and Wiring Examples

-R

NPN (2 outputs) + Analog voltage output



-T PNP (2 outputs) + Analog voltage output



Max. 80 mA Residual voltage 1 V or less

-X NPN (2 outputs) + Copy function



-S

NPN (2 outputs) + Analog current output



-R/-S NPN (2 outputs) + Auto-shift input



-V PNP (2 outputs) + Analog current output

Back OUT1 Load - 24 VDC

Blue DC (-)

Max. 80 mA Residual voltage 1 V or less

-T/-V PNP (2 outputs) + Auto-shift input



Residual voltage 1 V or less

-Y PNP (2 outputs) + Copy function

Max. 80 mA

Residual voltage 1 V or less



Dimensions





Dimensions



ZSE40A(F)/ISE40A-W1-□-□B□ -WF1-□-□B□

With bracket









Dimensions ZSE40A(F)/ISE40A-W1-□-□D□ -WF1-□-□D□ With bracket 30 Π SMC PRE\$SURE E n ß 886 0UT Ø R 55 4 1.6 35











Dimensions



Note) This is the minimum value for the piping method 01 or N01.

Take the piping material and tubing into account for design. When the corner is to have radius, it must be R3 or less.

Function Details

A Copy function (F97)

The settings of the master pressure switch can be copied to the slave pressure switches. This can reduce the labor for setting and prevent the entry of incorrect set-values. **The set-value can be copied to up to 10 switches simultaneously.** (Maximum communication distance 4 m)



B Auto-preset function (F 4)

Auto-preset function, when selected in the initial setting, calculates and stores the set-value from the measured pressure. The optimum set-value is determined automatically by repeating vacuum and break with the target work piece several times.



C Display calibration function (F 6)

Fine adjustment of the indicated value of the pressure sensor can be made within the range of $\pm 5\%$ of the read value.

(The scattering of the indicated value can be eliminated.)



Note) When the display calibration function is used, the set pressure value may change ± 1 digit.

Formula for Obtaining the Set-Value

P_1 or P_2	H_1 or H_2
P_1 (P_2) = A – (A-B)/4 n_1 (n_2) = B + (A-B)/4	H_1 (H_2) = (A-B)/2

D Peak and bottom display function

This function constantly detects and updates the maximum (minimum) value and allows to hold the maximum (minimum) pressure value.

When the O buttons are simultaneously pressed for 1 second or longer, while "holding", the hold value will be reset.

E Key lock function

This function prevents incorrect operations such as accidentally changing the set-value.

F Zero-clear function

This function clears and resets the zero value on the display of measured pressure.

For the pressure switch with analog output, the analog output shifts according to the indication.The indicated value can be adjusted within \pm 7% F.S. of the pressure when ex-factory. (ZSE40AF (for compound pressure) \pm 3.5% F.S.)

The $F\Box$ in () shows the function code number. Refer to the Operation Manual for the details of operation procedures and function codes.

G Error indication function

Error name	Error code	Description	Remedy	
Overcurrent error		Load current of switch output (OUT1) exceeds 80 mA.	Turn the power off and remove the output factor for	
		Load current of switch output (OUT2) exceeds 80 mA.	the overcurrent. Then, turn the power on.	
Residual pressure error	Er3	During zero-clear operation, pressure over ±7% F.S. is applied. (ZSE40AF (compound) ±3.5% F.S.) After 1 second, the mode will reset to measurement mode. ±1% F.S. of the zero-clear range varies between individual products.	Perform zero-clear operation again after restoring the applied pressure to an atmospheric pressure condition.	
Applied	ННН	Supply pressure exceeds the maximum set pressure.	Reset applied pressure to a level within the set	
pressure error		Supply pressure is below the minimum set pressure.	pressure range.	
Auto-shift error	ift D, f The value measured at the time of auto-shift inpu set pressure range. * After displaying the error code for about 1 secon returns to the measuring mode.		The controller does not respond to the auto-shift signal. Check the equipment and machinery for this point.	
System error	Er0 Er4 Er5 Er7 Er8 Er8	Internal data error	Turn the power off and turn it on again. If the failure cannot be solved, ask SMC for repair.	

If the above remedy cannot recover the operation, ask SMC for repair.

H Anti-chattering function (F 3)

A large bore cylinder or ejector consumes a large volume of air in operation and may experience a temporary drop in the supply pressure. This function prevents detection of such temporary drops in the supply pressure as an error.

Available response time settings 20 ms, 100 ms, 500 ms, 1000 ms, 2000 ms

<Principle>

This function averages pressure values measured during the response time set by the user and then compares the average pressure value with the pressure set point value to output the result on the switch.



Display unit switching function (F 0)

Display units can be switched with this function.

Display unit	P	8	68	bßr	<i>Ρ</i> ς,	ιлН	ññX
Minimum unit setting	kPa	MPa*	kgf/cm ²	bar	psi	inHg	mmHg
ZSE40A (vacuum pressure)	0.1	0.001	0.001	0.001	0.01	0.1	1
ZSE40AF (compound pressure)	0.1	0.001	0.001	0.001	0.02	0.1	1
ISE40A (positive pressure)	1	0.001	0.01	0.01	0.1		

* The ZSE40A (vacuum pressure) and ZSE40AF (compound pressure) will have different setting and display resolution when the unit is set to MPa.

Function Details

The $F\square$ in () shows the function code number. Refer to the Operation Manual for the details of operation procedures and function codes.

J Power-saving mode (F80)

Power-saving mode can be selected.

It shifts to the power-saving mode without button operation for 30 seconds. It is set to the normal mode (Power-saving mode is OFF.) when ex-factory. (Decimal points and operation indicator light (only when the switch output is turned ON.) blink in the power-saving mode.)

K Secret code setting (F81)

It can be set whether secret code input is required or not when key is locked. It is set to input no secret code when ex-factory.

L Auto-shift function (F 5)

When there are large fluctuations in the supply pressure, the switch may fail to operate correctly. The auto-shift function compensates such supply pressure fluctuations. It measures the pressure at the time of auto-shift signal input and uses it as the reference pressure to correct the set-value on the switch.

Set-value correction by auto-shift function



* Rectified value

When the auto-shift is selected, "ooo" will be displayed for about 1 second, and the pressure value at that point will be saved as a rectified values" ". Based on the saved rectified values, the setvalue. Note: $\partial_1^{\text{Mat}} = \partial_1^{\text{Mat}} \partial_1^{\text{Mat}} = \partial_1^{\text{Mat}} \partial_1^{\text{Mat}} \partial_1^{\text{Mat}} = \partial_1^{\text{Mat}} \partial_1^{\text{$

Note) When an output is reversed, "n_ 1", "H_ 1", "n_2", "H_2" will be rectified.

Possible Set Range for Auto-Shift Input

	Regulating pressure range	Possible set range
Compound pressure	–15.22 to 15.22 psi	–30.4 to 30.4 psi
Vacuum pressure	1.45 to -15.23 psi	16.68 to -16.68 psi
Positive pressure	-15.2 to 152.3 psi	–167.5 to 167.5 psi

Auto-shift zero

The basic function of auto-shift zero is the same as the function for auto-shift. Also, it corrects values on the display, based on a pressure value of " ", when the auto-shift is selected.





Please contact SMC for detailed dimensions, specifications, and lead times.



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC), American National Standards Institute (ANSI)*1) and other safety regulations.



1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

*∕∂SM*C

Safety Instructions

ACaution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*²) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.



Series ZSE40A(F)/ISE40A Specific Product Precautions 1

Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.

Handling

A Caution

- 1. Do not drop, bump, or apply excessive impacts (100 m/s²) while handling. Although the body of the sensor may not be damaged, the internal parts of the sensor could be damaged and lead to a malfunction.
- 2. The tensile strength of the cord is 49 N. Applying a greater pulling force on it can cause a malfunction. When handling, hold the body of the sensor—do not dangle it from the cord.
- 3. Do not exceed the screw-in torque of 7 to 9 N·m when connecting the pipe to the switch. Exceeding this torque may cause the switch to malfunction.
- 4. Do not use pressure sensors with corrosive and/or flammable gases or liquids.

Connection

A Caution

- 1. Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output.
- 2. Connections should be done while the power is turned off.
- 3. Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching regulator is used, make sure that the F.G. terminal is grounded.

Operating Environment

\land Warning

- 1. This pressure switch is CE marked; however, it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- 2. This pressure switch does not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.

Operating Environment

A Caution

- 1. Do not use the product in a place where it could be splashed by oils or solvents.
- 2. When this pressure switch is used in a place where water and dust splash on, water and dust may enter inside the switch through the atmospheric vent port. Insert a ø4 tube (I.D. ø2.5) into the atmospheric vent port, and bring piping of the opposite side up to the safe position to keep it from water and dust. Do not bend the tube or close the hole of it. It causes malfunction with the measurement of positive pressure.



- * Make sure that the tube is inserted to the end of the atmospheric vent port.
- * Use SMC tubing, TU0425. (Material: Polyurethane, Tube O.D. ø4, I.D. ø2.5)
- 3. Take measures against static electricity with equipment when this switch is used in connection with resin piping. Also, the ground should be separate from that of the units that generate strong electromagnetic noise or high frequency, otherwise, the switch can be damaged by static electricity.



Series ZSE40A(F)/ISE40A Specific Product Precautions 2

Be sure to read before handling. Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.



2. Mounting with bracket

Mount a bracket to the using two mounting screws and install on piping. The switch can be installed horizontally depending on the installation location.



The tightening torque for bracket mounting screw should be 0.5 to 0.7 N·m for M3 and 1.4 to 1.6 N·m for M4.

Set Pressure Range and Rated Pressure Range

Caution

Set the pressure within the rated pressure range.

The set pressure range is the range of pressure that is possible in setting.

The rated pressure range is the range of pressure that satisfies the specifications (accuracy, linearity, etc.) on the switch.

Although it is possible to set a value outside the rated pressure range, the specifications will not be guaranteed even if the value stays within the set pressure range.

Switch		Pressure range						
51	VIICH	-14.	5 psi 0	14.5	5 psi 72	.5 psi 1	45 psi	
For vacuum pressure	ZSE40A	–14.69 psi –15.23 psi		0 1.45 psi				
For compound pressure	ZSE40AF	–14.5 psi –15.22 psi			14.5 psi 15.22 psi			
For positive pressure	ISE40A	–14.5 psi –15.2 psi					145 psi 152.3 psi	

Rated pressure range of switch





Related Equipment

2-Color Display High Precision Digital Pressure Switch ZSE/ISE30A



Series	Туре	Rated pressure range			
ZSE30AF	Compound pressure	-14.50 to 14.50 psi			
ZSE30A	Low pressure/vacuum	0.00 to -14.65 psi			
ISE30A	Positive pressure	-14.5 to 145.0 psi			
Features	 With one-touch fitting (Straight, Elbow) Space-saving, capable of vertical and horizontal contact mounting With display calibration function Simultaneous copying is possible for maximum 10 units. IP40 				

2-Color Display Digital Pressure Switch *ZSE/ISE80*



Series	Туре	Rated pressure range					
ZSE80F	Compound pressure	–14.50 to 14.50 psi					
ZSE80	Vacuum pressure 0.00 to -14.65 psi						
ISE80	Positive pressure -14.5 to 145.0 psi						
ISE80H	Positive pressure -14.5 to 290 psi						
Features	 Suitable for a wide variety of fluids with stainless diaphragm IP65 RoHS compliant Low leakage. VCR[®], Swagelok[®] compatible fittings can be selected. With one-touch fittings (Straight, Elbow) Back piping, underside piping 						

Global Manufacturing, Distribution and Service Network

ASIA

Worldwide Subsidiaries

EUROPE

AUSTRIA SMC Pneumatik GmbH (Austria) BELGIUM SMC Pneumatics N.V./S.A. **BULGARIA** SMC Industrial Automation Bulgaria EOOD CROATIA SMC Industrijska Automatika d.o.o. CZECH SMC Industrial Automation CZ s r o DENMARK SMC Pneumatik A/S ESTONIA SMC Pneumatics Estonia FINLAND SMC Pneumatics Finland OY FRANCE SMC Pneumatique S.A. GERMANY SMC Pneumatik GmbH GREEK SMC Hellas EPE HUNGARY SMC Hungary Ipari Automatizálási Kft. IRELAND SMC Pneumatics (Ireland) Ltd. ITALY SMC Italia S.p.A.

LATVIA SMC Pneumatics Latvia SIA LIETUVA SMC Pneumatics Lietuva, UAB NETHERLANDS SMC Pneumatics BV NORWAY SMC Pneumatics Norway A/S POLAND SMC Industrial Automation Polska Sp.z.o.o. ROMANIA SMC Romania S.r.l. RUSSIA SMC Pneumatik LLC. SLOVAKIA SMC Priemyselná Automatizáciá, s.r.o. SLOVENIA SMC Industrijska Avtomatika d.o.o. SPAIN/PORTUGAL SMC España, S.A. SWEDEN SMC Pneumatics Sweden AB SWITZERLAND SMC Pneumatik AG UK SMC Pneumatics (U.K.) Ltd.

CHINA SMC (China) Co., Ltd. HONG KONG SMC Pneumatics (Hong kong) Ltd. INDIA SMC Pneumatics (India) Pvt. Ltd. JAPAN SMC Corporation MALAYSIA SMC Pneumatics (S.E.A.) Sdn. Bhd. PHILIPPINES SMC Pneumatics (Philippines), Inc. SINGAPORE SMC Pneumatics (S.E.A.) Pte. Ltd. SOUTH KOREA SMC Pneumatics Korea Co., Ltd. TAIWAN SMC Pneumatics (Taiwan) Co., Ltd. ΤΗΔΙΙ ΔΝΟ SMC Thailand Ltd.

NORTH AMERICA

CANADA SMC Pneumatics (Canada) Ltd. MEXICO SMC Corporation (Mexico) S.A. DE C.V. USA SMC Corporation of America

SOUTH AMERICA

ARGENTINA SMC Argentina S.A. BOLIVIA SMC Pneumatics Bolivia S.R.L. BRAZIL SMC Pneumaticos do Brazil Ltda. CHILE SMC Pneumatics (Chile) S.A. VENEZUELA SMC Neumatica Venezuela S.A.

OCEANIA

AUSTRALIA SMC Pneumatics (Australia) Pty. Ltd. NEW ZEALAND SMC Pneumatics (N.Z.) Ltd.

U.S. & Canadian Sales Offices

EAST WEST Atlanta Austin **Boston** Dallas Charlotte Los Angeles Nashville Phoenix **New Jersey** Portland Richmond San Francisco Rochester Tampa Toronto MIDWEST CANADA Indianapolis Chicago Montreal Cincinnati Toronto Los Angeles Cleveland Vancouver . Detroit Windsor 0000 Indianapolis Milwaukee Minneapolis Sales office & Factory St. Louis Sales office



SMC Corporation of America 10100 SMC Blvd., Noblesville, IN 46060 www.smcusa.com

(800) SMC.SMC1 (762-7621) For International inquires: www.smcworld.com

© 2009 SMC Corporation of America, All Rights Reserved.

All reasonable efforts to ensure the accuracy of the information detailed in this catalog were made at the time of publishing. However, SMC can in no way warrant the information herein contained as specifications are subject to change without notice. NZ- 5M-PG