## OPERATION MANUAL

## MICRO MIST SEPARATOR

Series AMD

To get the best performance from your purchase, be sure to read this manual carefully before use.

Refer drawings or catalogue for construction and specifications.

Understand this operation manual will be revised without notification.


#### MERITS

- Separate and remove foreign material and aerosol oil particle contained in compressed air.
- Filtration rating: 0.01 µm (Filtration efficiency: 99.9%)
- Outlet oil mist concentration: 0.08 ppm (Filter inlet: 24ppm)


#### HINTS ON CORRECT USE


Keep following to operate Micro mist separator properly.

#### Do not use under following environment.

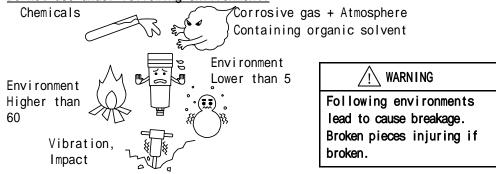

#### Do not use under following conditions.

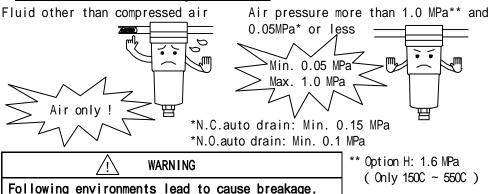

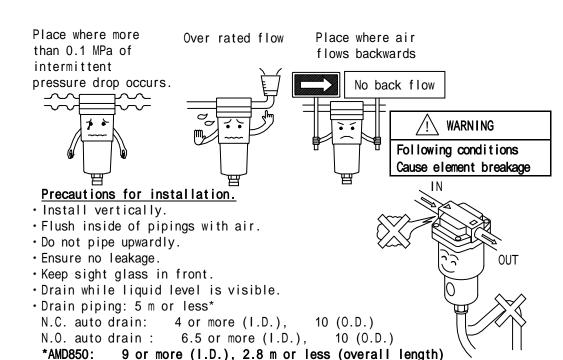

### MAINTENANCE

Replace the element when one of followings occurs.

Pressure drop reaches 0.1 MPa.

Element operates for 2 years.

Element ass'y (gasket, o-ring accessory) model number: AMD-EL\*\*\*

\*\*\* is AMD size symbol. (ex.: AMD-EL150)
[How to replace element ass'y] 0-ring
First, discharge the pressure in
the body. (Make pressure 0 MPa.)

Casket


Remove four hexagon socket head bolt.

Replace element, gasket, o-ring. Tighten hexagon socket head bolt.

Reference table production no. showing production month and

year of a filter. (Mo 2008.1)

SYMBOL	M	N	0	• • •	Z
Year	2008	2009	2010	• •	2021
SYMBOL	0	Р	Q	• • •	Z
Month	Jan	Feb	Mar	• • •	Dec

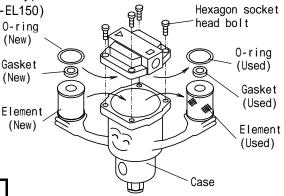

# SMC Corporation

Phone: +81 3 5207 8249 Fax: +81 3 5298 5362 Specifications are subject to change without prior notice and any obligation the part of the manufacturer

©2008 SMC Corporation All Rights Reserved.