

Vacuum Regulator

Series 10-IRV10/20

How to Order

Standard connections

10-IRV - C08

Clean Series

Body size

10	Max. flow 140 l/min (ANR)
20	Max. flow 240 l/min (ANR)

Fittings

Nil	Straight
L	Elbow



Straight



Elbow

Connection tubing O.D.

Symbol	Tubing O.D.	10-IRV10	10-IRV20
C06	Metric	●	●
C08		●	●
C10		—	●
N07	Inch	●	●
N09		●	●
N11		—	●

Accessory ②

Nil	None Note 1)	
G	With pressure gauge Note 2) Note 3) (10-IRV10: With GZ33-K-01-X5, 10-IRV20: With GZ43-K-01-X5)	
ZN	Note 3) With digital pressure switch	NPN open collector 1 output
ZP		PNP open collector 1 output
ZA		NPN open collector 2 outputs
ZB		PNP open collector 2 outputs

Note 1) Two plug nuts are mounted.

Note 2) Pressure gauge accuracy: Within ±3% of full scale

Note 3) Plug nut and gauge nut are included. (For details, refer to back page 3 in CAT.ES60-20.) Accessories are included in the same container.

Accessory ① Note 1)

Nil	None
B	With bracket
L	With bottom bracket

Note 1) Accessories are shipped together.

Bracket



Bottom bracket

Single sided connections

10-IRV 20 A - C08 -

Clean Series

Body size

10	Max. flow 140 l/min (ANR)
20	Max. flow 240 l/min (ANR)

Single sided connections

A	Single sided connections
---	--------------------------

Fittings

Nil	Straight
L	Elbow



Elbow



Straight

Connection tubing O.D.

Symbol	Tubing O.D.	10-IRV10A	10-IRV20A
C06	Metric	●	●
C08		●	●
C10		—	●
N07	Inch	●	●
N09		●	●
N11		—	●

Made to Order

For details, refer to page 10 in CAT.ES60-20.

Symbol	Specification
X1	Integrated digital pressure switch for panel mounting

Accessory ②

Symbol	None Note 1)	
G	With pressure gauge Note 2) Note 3) (10-IRV10A: With GZ33-K-01-X5, 10-IRV20A: With GZ43-K-01-X5)	
ZN	Note 3) With digital pressure switch	NPN open collector 1 output
ZP		PNP open collector 1 output
ZA		NPN open collector 2 outputs
ZB		PNP open collector 2 outputs

Note 1) A plug nut is mounted.

Note 2) Pressure gauge accuracy: Within ±3% of full scale

Note 3) Gauge nut is included. Accessories are included in the same container.

Accessory ① Note 1)

Symbol	None
B	With bracket
L	With bottom bracket

Note 1) Accessories are shipped together.

Bracket



Bottom bracket

Standard Specifications

Model		10-IRV10	10-IRV20
Fluid		Air	
Set pressure range ^{Note 1)}		−100 to −1.3 kPa	
Atmospheric intake consumption ^{Note 2)}		0.6 ℓ/min (ANR) or less	
Knob resolution		0.13 kPa or less	
Ambient and fluid temperature		5 to 60°C	
VAC side tubing O.D.		ø6, ø8 ø1/4", ø5/16"	ø6, ø8, ø10 ø1/4", ø5/16", ø3/8"
SET side tubing O.D.			
Mass (Without accessories)	Standard connections	135 g (10-IRV10-C08)	250 g (10-IRV20-C10)
	Single sided connections	125 g (10-IRV10A-C08)	250 g (10-IRV20A-C10)


Note 1) Use caution it varies depending on the pressure in vacuum pump side.

Note 2) Taking air from atmosphere all the time.


Flow-rate Characteristics (Representative Value)

Conditions:
Vacuum pump exhaust speed:
2500 ℓ/min
VAC side pressure:
-101 kPa (At initial setting)

10-IRV10-C08 (One-touch fitting ø8)

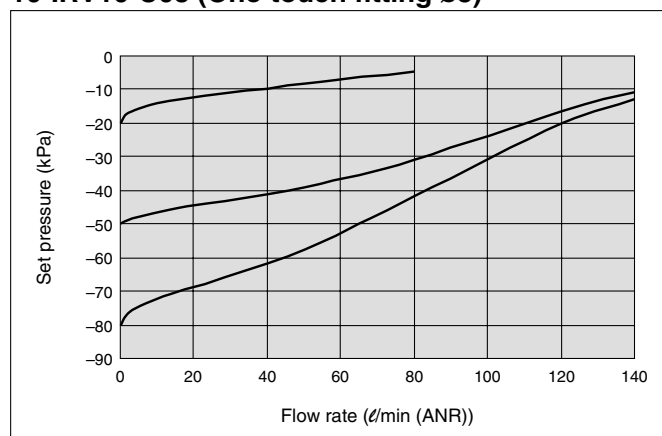


10-IRV20-C10 (One-touch fitting ø10)

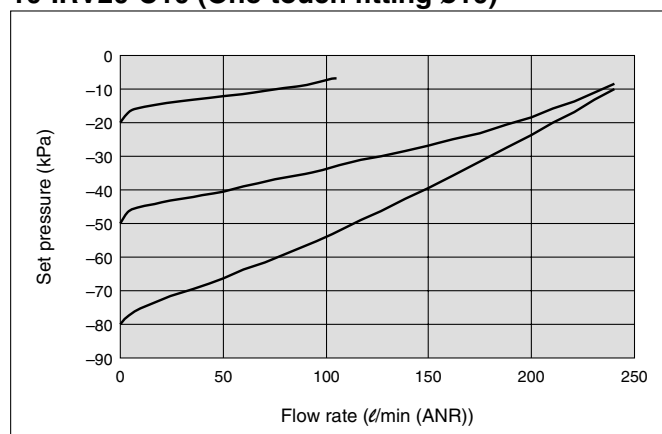


Pressure Characteristics (Representative Value)

10-IRV10

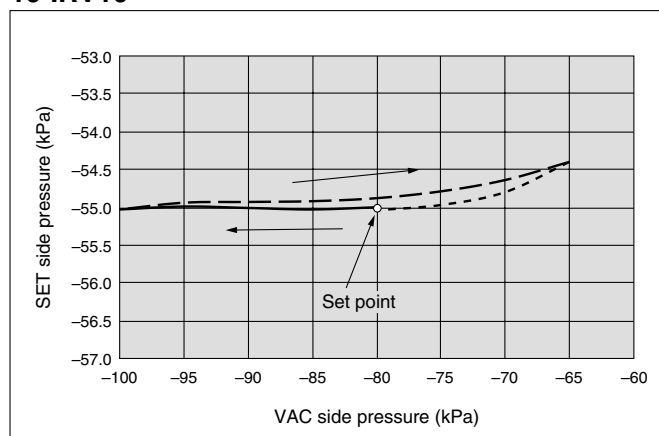


10-IRV20

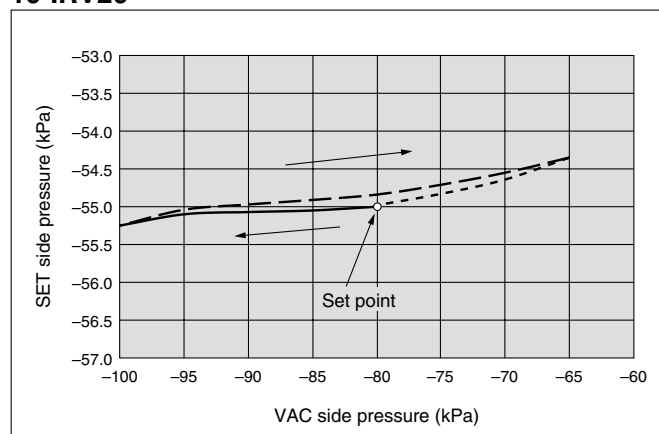

Series 10-IRV10/20

Construction

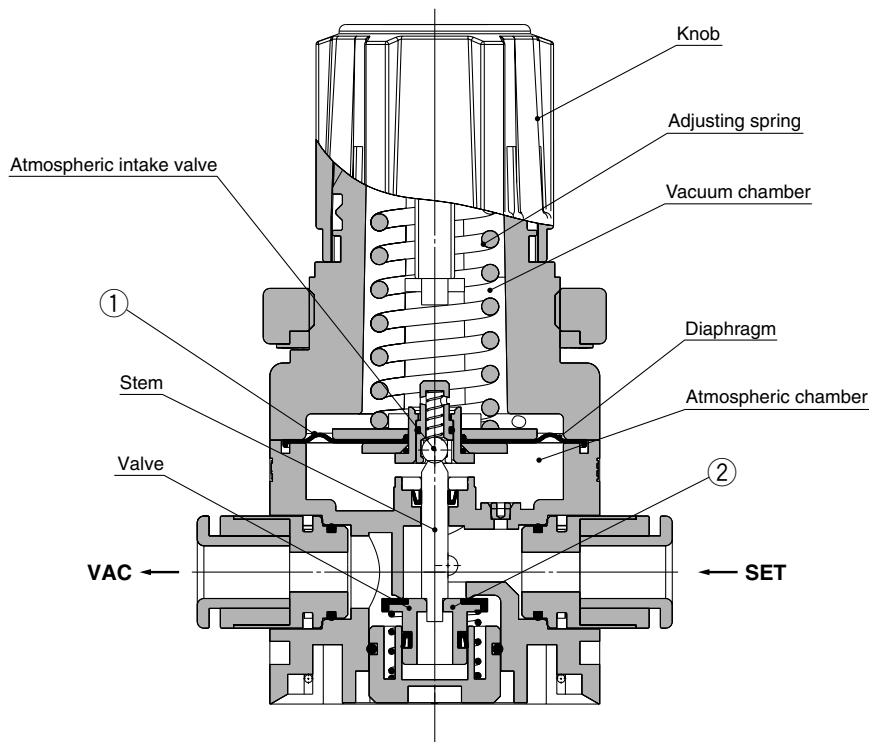

Working principle


When the knob is turned to the right (clockwise), the adjusting spring's generated force pushes down the diaphragm and the valve. This connects the VAC side and SET side, and the degree of vacuum on the SET side increases (becomes closer to an absolute vacuum). Furthermore, the SET side vacuum pressure moves through the air passage into the vacuum chamber, where it is applied to the top side of the diaphragm and counters the adjusting spring's compression force; and this adjusts the SET side pressure. When the degree of vacuum on the SET side is higher than the designated setting value (becomes closer to an absolute vacuum), the balance between the adjusting spring and the SET side pressure in the vacuum chamber is lost, and the diaphragm is pushed up. This causes the valve to close and the atmospheric intake valve to open, which lets atmospheric air into the SET side. When the adjusting spring's compression force and the SET side pressure are balanced, the SET side pressure is set. Also, when the degree of vacuum of the SET side pressure is lower than the designated setting value (becomes closer to the atmosphere), the balance between the adjusting spring and the vacuum chamber is lost, and the diaphragm is pushed down. This causes the atmospheric intake valve to close and the valve to open, which lets air into the VAC side. When the adjusting spring's compression force and the SET side pressure are balanced, the SET side pressure is set.

Replacement Parts


No.	Description	Material	Part no.	
			10-IRV10	10-IRV20
1	Diaphragm assembly	HNBR, etc.	P601010-2	P601020-2
2	Valve assembly	HNBR, etc.	P601010-3	P601020-3

Dimensions/10-IRV10: Standard Connections

10-IRV10-□□□G: With pressure gauge

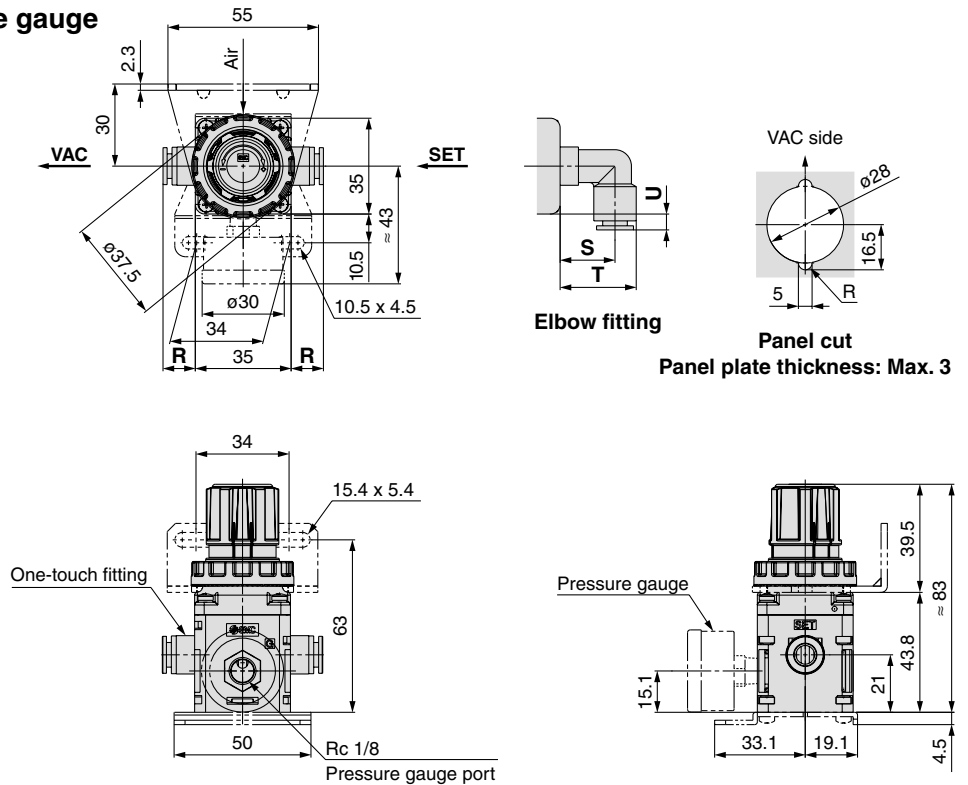




10-IRV10-□□□Z^N_P_A^B: With digital pressure switch

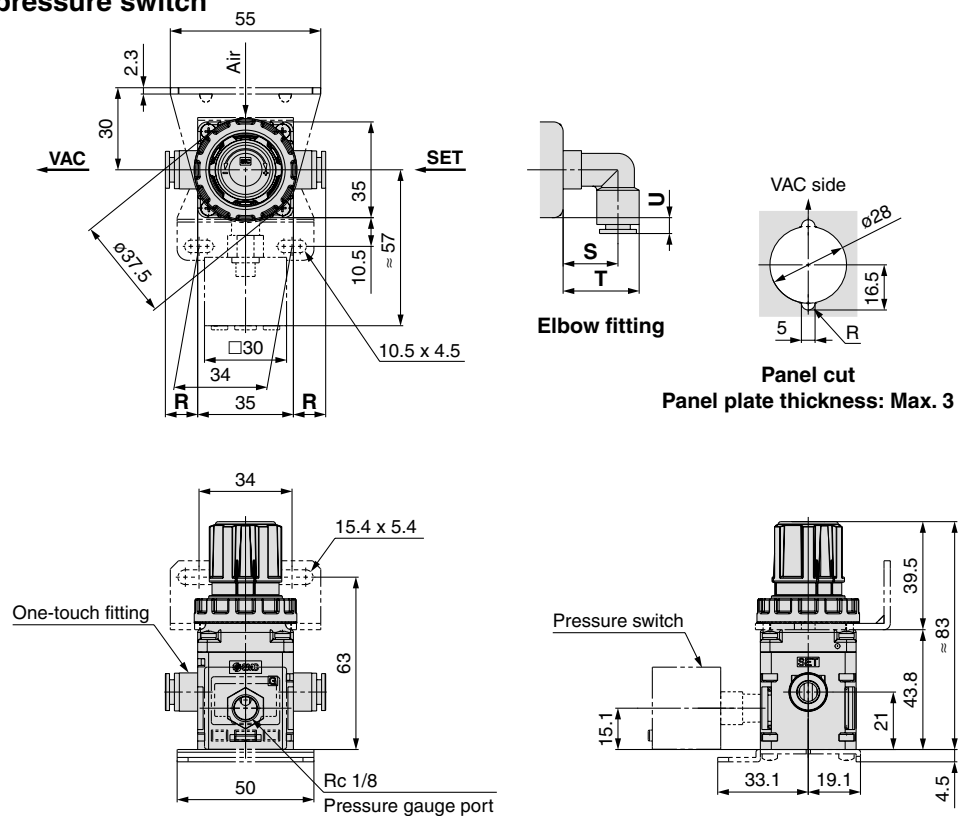

Series 10-IRV10/20

Dimensions/10-IRV10A: Single Sided Connections



10-IRV10A-□□□G: With pressure gauge

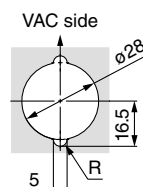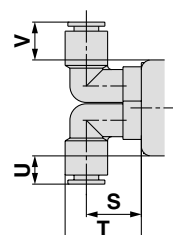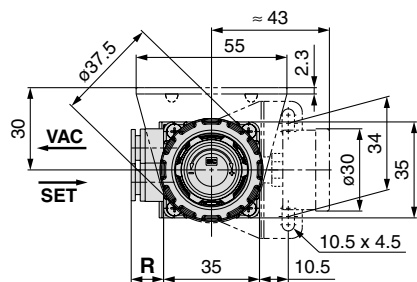

Elbow fitting

Panel cut

Panel plate thickness: Max. 3


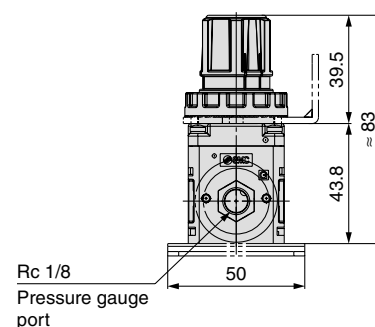
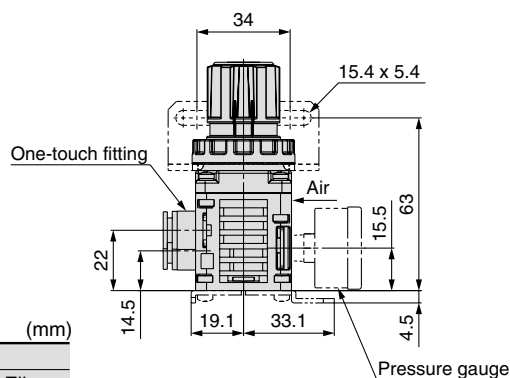


Fitting Part Dimensions

(mm)

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6, ø1/4"	10	19	26	7.5	11
ø8, ø5/16"	12	20	28	10.5	14



10-IRV10A-□□□Z^N_P_B: With digital pressure switch

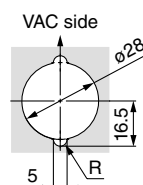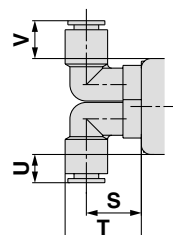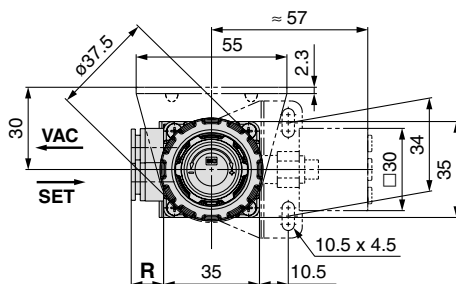

Elbow fitting

Panel cut

Panel plate thickness: Max. 3

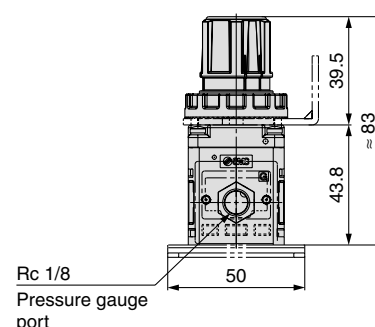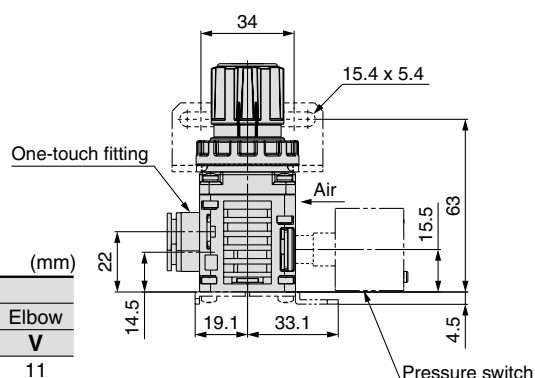



Fitting Part Dimensions

(mm)


Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6, ø1/4"	10	19	26	7.5	11
ø8, ø5/16"	12	20	28	10.5	14

Dimensions/10-IRV20: Standard Connections

10-IRV20-□□□G: With pressure gauge

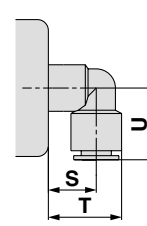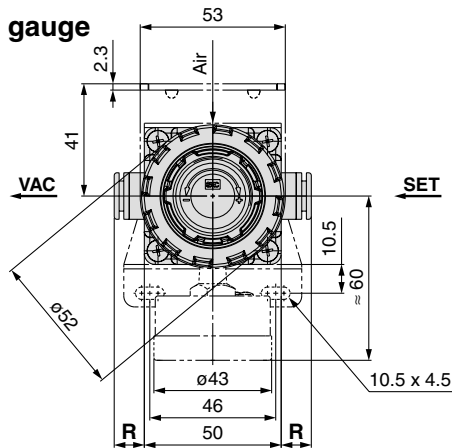

Elbow fitting


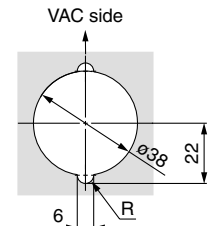


Panel cut
Panel plate thickness: Max. 4



Fitting Part Dimensions

(mm)


Fitting size	VAC/SET			
	Straight	Elbow	Elbow	Elbow
	R	S	T	U
ø6	10.5	21	27.5	21
ø1/4"	10.5	21	27.5	21.5
ø8, ø5/16"	10.5	21	28.5	24
ø10, ø3/8"	11	21	30.5	27

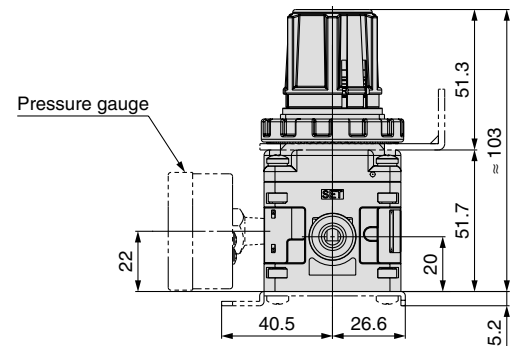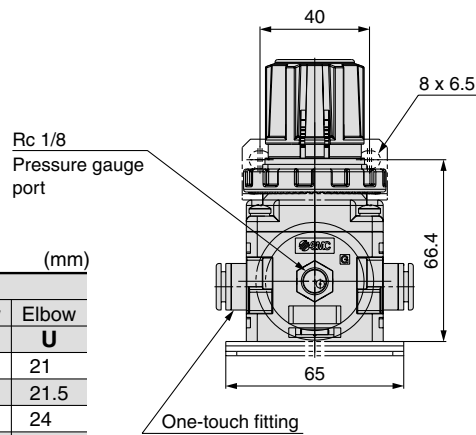

10-IRV20-□□□Z^N_P_A_B: With digital pressure switch

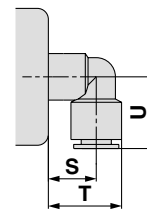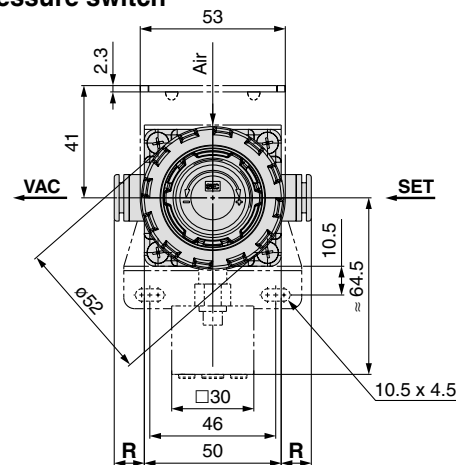

Elbow fitting


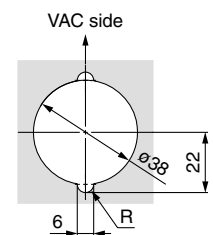


Panel cut
Panel plate thickness: Max. 4


Fitting Part Dimensions

(mm)

Fitting size	VAC/SET			
	Straight	Elbow	Elbow	Elbow
	R	S	T	U
ø6	10.5	21	27.5	21
ø1/4"	10.5	21	27.5	21.5
ø8, ø5/16"	10.5	21	28.5	24
ø10, ø3/8"	11	21	30.5	27

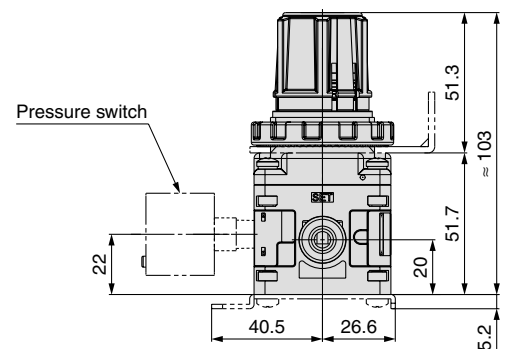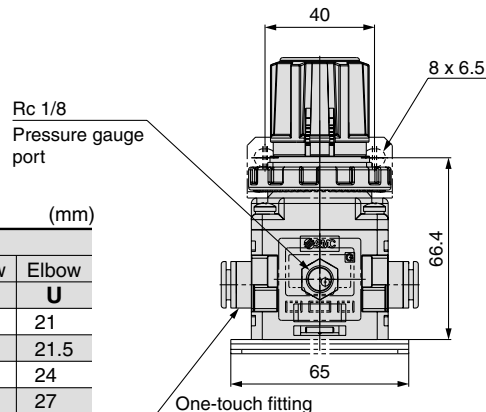


Dimensions/10-IRV20A: Single Sided Connections

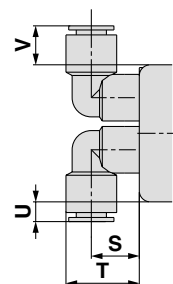



Technical drawing of a pressure washer lance. The drawing shows a side view of the lance with various dimensions and labels. The main body is 40 mm wide. The handle has a diameter of 8 x 6.5 mm. The lance is labeled "One-touch fitting" and "Pressure gauge". The distance from the handle to the nozzle is 26.6 mm. The distance from the handle to the trigger gun is 40.5 mm. The distance from the trigger gun to the nozzle is 21.6 mm. The total length of the lance is 70.4 mm. The distance from the handle to the nozzle is 26.6 mm. The distance from the handle to the trigger gun is 40.5 mm. The distance from the trigger gun to the nozzle is 21.6 mm. The total length of the lance is 70.4 mm.

Row	Elbow
J	V
8	

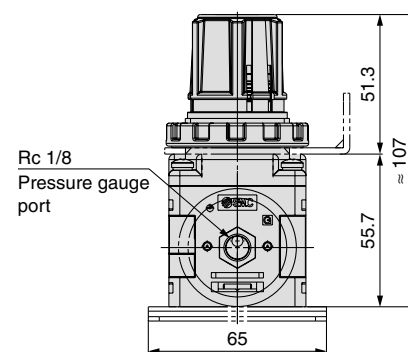

(mm)

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6	10.5	21	27.5	1	8
ø1/4"	10.5	21	27.5	1.5	8.5
ø8, ø5/16"	10.5	21	28.5	4	11
ø10, ø3/8"	11	21	30.5	7	14

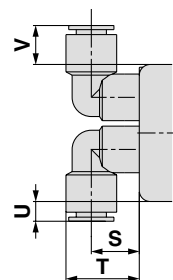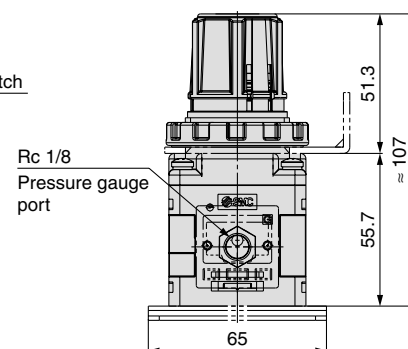[illegible]

(mm)

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6	10.5	21	27.5	1	8
ø1/4"	10.5	21	27.5	1.5	8.5
ø8, ø5/16"	10.5	21	28.5	4	11
ø10, ø3/8"	11	21	30.5	7	14



Series 10-IRV10/20

Specific Product Precautions

Be sure to read this before handling. Refer to “Handling Precautions for SMC Products” (M-E03-3) and the Operation Manual for Safety Instructions and Precautions. Please download the Operation Manual via our website. <http://www.smcworld.com/>

Handling

⚠ Warning

1. When a system hazard can be expected due to a drop in vacuum pressure caused by power loss or vacuum pump trouble, install a safety circuit and configure the system so that it can avoid the danger.
2. When a system hazard can be expected with trouble with the vacuum regulator, install a safety circuit and configure the system so that it can avoid the danger.

Operating Environment

⚠ Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.
2. Do not use in locations influenced by vibrations or impacts.
3. This vacuum regulator always uses atmospheric air, therefore, do not use in dusty environments.
4. In locations which receive direct sunlight, provide a protective cover, etc.
5. In locations near heat sources, block off any radiated heat.

Vacuum Supply

⚠ Caution

1. This vacuum regulator is not to be used for adjusting vacuum pump pressures.
2. Note that an ejector's flow rate is smaller than that of the vacuum regulator, and therefore, it is not suitable as a “vacuum supply”.

Air Supply

⚠ Caution


1. These products are designed for use with air. Please contact SMC if any other fluid will be used.
2. Do not use air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this can cause malfunction.

Precautions

⚠ Caution

1. Connect piping to the port with “VAC” indication for connection to the vacuum pump.
2. To adjust the pressure, turn the knob to the right (clockwise) for changing “atmospheric pressure to vacuum pressure” and to the left (counterclockwise) for changing “vacuum pressure to atmospheric pressure”.
3. When adjusting pressure, do not touch the lateral hole (atmospheric intake hole) of the body.
4. When locking the knob after setting the pressure, press down the knob until the orange band is hidden and a click is heard. On the other hand, when unlocking the knob, pull it up until the orange band is visible and a click is heard.
5. This vacuum regulator is for use with vacuum pressure only. Be sure that positive pressure is not applied instead. In the event that positive pressure is applied, the vacuum regulator will not be damaged. However, the main valve of the pressure adjustment valve will open and positive pressure will enter the vacuum pump. This may cause trouble with the vacuum pump.
6. When the vacuum pump capacity is relatively small or when the inside diameter of the piping is small, a change in the set pressure (the pressure difference between the non-flow and flow conditions) may be large. In this case, change the vacuum pump or the inside diameter of the piping. When changing the vacuum pump is not possible, add a capacity tank (the capacity depends on the operating conditions) to the VAC side.
7. The pressure response time after opening and closing of valves (such as solenoid valves) is influenced in large and small measures by the internal capacity (includes piping capacity) of the set side. Since the vacuum pump capacity also affects the response time, consider all these points before operations.
8. When using a pressure gauge upside down like Fig. 1, it may result in a shifting of the zero point reading. Make sure to use it in the direction like Fig. 2. Gravity will affect the zero point of the gauge which is why it needs to be positioned properly.

10-IRV10

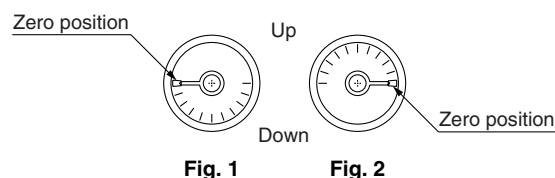

10-IRV20

