Large Size 3 Port Solenoid Valve

Series VP3145/3165/3185

Rubber Seal

Note) CE-compliant: D/DL/DS/DZ only (Electrical entry)

Large flow capacity, small exhaust resistance

(Refer to "Flow Characteristic" table.)

Easy conversion to N.C. or

Function plate makes it possible to use solenoid valve as a N.C. or N.O. valve with the port


Possible to use in vacuum or under low pressures

Vacuum: Up to 101.2 kPa Low pressure: 0 to 0.2 MPa


Free mounting orientation




JIS Symbol

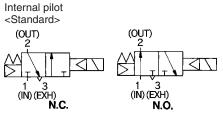


External pilot

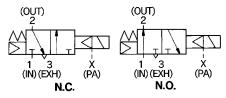

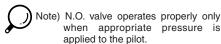

Made to Order (Refer to pages 1501 to 1503 for details.)

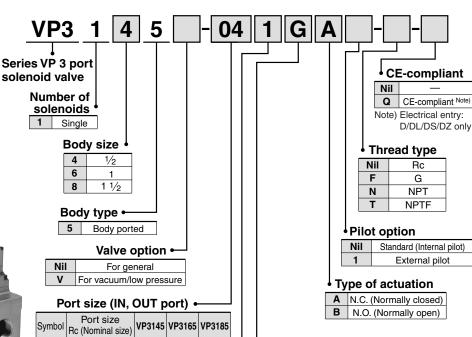

How to Order

Coil rated voltage

•

•

1	100 VAC, 50/60 Hz					
2	200 VAC, 50/60 Hz					
3*	110 VAC, 50/60 Hz					
4*	220 VAC, 50/60 Hz					
5	24 VDC					
6*	12 VDC					
7*	240 VAC, 50/60 Hz					
9*	Other					

DS* * Option

D

TL*

TZ*

Electrical entry

DZ* DIN terminal with light/surge voltage suppressor SYJ

Grommet

Conduit terminal

DIN terminal

Conduit terminal with indicator light

Conduit terminal with surge voltage suppressor

Conduit terminal with light/surge voltage suppressor

DIN terminal with indicator light

DIN terminal with surge voltage suppressor

CE-compliant

VQZ

VP

VG

VP3□

How to Order Pilot Valve Assembly

* Option

VT3113 - 00 | 1 ||G

Coil rated voltage•							
1	100 VAC, 50/60 Hz						
2	200 VAC, 50/60 Hz						
3*	110 VAC, 50/60 Hz						
4*	220 VAC, 50/60 Hz						
5	24 VDC						
6*	12 VDC						
7*	240 VAC, 50/60 Hz						
9*	Other						
* Option							

03

04

06

10

12

14

20

3/8 (10A)

¹/₂ (15A)

3/4 (20A)

1 (25A)

2 (50A)

1 1/4 (32A)

1 ½ (40A)

Electrical entry • CE-compliant							
G	Grommet	_					
Т	Conduit terminal						
D	DIN terminal	•					
TL*	Conduit terminal with indicator light	_					
TS*	Conduit terminal with surge voltage suppressor	_					
TZ*	Conduit terminal with light/surge voltage suppressor	_					
DL* DIN terminal with indicator light							
DS*	DIN terminal with surge voltage suppressor						
DZ*	DZ* DIN terminal with light/surge voltage suppressor						
* Ontic	nn						

CE-compliant Nil Q CE-compliant Note)


Note) Electrical entry: D/DL/DS/DZ only

Series VP3145/3165/3185

External Pilot

Use external pilot model in the following cases.

- Vacuum or low pressure (0.2 MPa or less): Vacuum/Low pressure type
- Using the valve with supply port external throttle: General type
- Air pressure of supply port is slow: General type
- Resistance in outlet side is small in case of air blowing or filling an air tank: General type
- Note 1) Keep external pilot pressure within the pressure range below.
- Note 2) Conversion of internal pilot and external pilot can not be done.

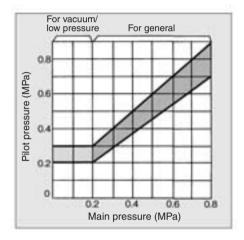

Specifications

Specifications									
Fluid			Air						
Type of actuation			N.C. or N.O. (Convertible)						
Pilot type			Internal pilot			External pilot			
			For general		For vacuum/low pressure		For general		
Operating pressure range (MPa)	Main pressure	0.2 to 0.8		-101.2 kPa to 0.2		0.2 to 0.8			
Operating pressure range (wra)	Pilot pressure			0.2 to 0.3		Refer to the graph left.			
Ambient and fluid temperature	Ambient and fluid temperature (°C)			0 (No freezing) to 60					
Response time (ms) (1)		ON	AC	30	or less	OFF	AC	30 or less	
(at the pressure of 0.5 MPa)		ON	DC	40	or less	OFF	DC	30 or less	
Max. operating frequency (Hz)		3							
Lubrication (2)			Required (Equivalent to turbine oil Class1 ISO VG32)						
Manual override			Yes (Non-locking)						
Mounting orientation			Unrestricted						
Shock/Vibration resistance (m/s²) (3)			150/50						

Note 1)Based on dynamic performance test, JIS B 8374-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)


Note 2) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

Note 3) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and deenergized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Solenoid Specifications

	Standard Option		Grommet (G), Conduit terminal (T) DIN terminal (D)		
Electrical entry			Option Conduit terminal with indicator light (TL), Conduit terminal with surge voltage suppressor (T Conduit terminal with light/surge voltage suppressor (DIN terminal with indicator light (DL), DIN terminal with surge voltage suppressor (DS) DIN terminal with light/surge voltage suppressor (I		
Coil reted veltage (V)	AC (50/60 Hz)		100, 200, 110 *, 220 *, 240 *		
Coil rated voltage (V)	DC		12 *, 24		
Allowable voltage fluctuat	on		-15 to +10% of rated voltage		
Apparent power Note)	AC	Inrush	73 VA (50 Hz), 58 VA (60 Hz)		
Apparent power ****	AC	Holding	28 VA (50 Hz), 17 VA (60 Hz)		
Power consumption Note)	DC		12 W		
Ontion					

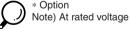

Flow Characteristics/Mass

Valve model	Port	sizo	Flow characteristics						
	Port	Size	$1 \rightarrow 2 \text{ (IN} \rightarrow \text{OUT)}$			$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$			Mass * (kg)
	1(IN), 2(OUT)	3(EXH)	C [dm³/(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	Grommet
	3/8		19	0.43	5.5	18	0.47	5.4	
VP3145	1/2	3/4	23	0.32	6.2	21	0.39	5.8	1.5
	3/4		28	0.36	7.6	26	0.35	7.0	

Valve model	Port s	size	Effective a	Mass * (kg)		
	1 (IN), 2 (OUT)	3(EXH)	$1 \rightarrow 2 (IN \rightarrow OUT)$	$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$	Grommet	
	3/4		230	280		
VP3165	1	11/4	280	310	2.0	
	11/4		310	330		
	11/4		570	650		
VP3185	11/2	2	650	670	2.8	
	2		650	670		




* For grommet Conduit terminal··· +0.2 kg



Construction/Internal Pilot

As in the figure below, this pilot-operated solenoid valve consists of a compact 3 port solenoid valve as the pilot valve and a large 3 port valve as the main valve.

The pilot valve controls opening and closing the main valve. N.C. or N.O. function conversion can be done by switching the pilot passage.

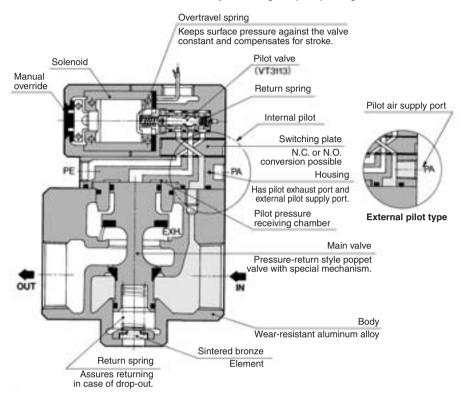

Note) Pilot valve and body are shown in a different direction from the actual product in order to show the construction and air passage.

Piping (Vacuum Use)

1. Piping in general:

EXH port = Vacuum pump/ Suction side)
Blower

OUT port = Tank/ Vacuum pad (Load side)

Plug (2 port valve)


IN port = Air releasing
Air pressure-in

- Following the above piping, vacuum passage is switched between OUT and EXH, therefore, N.C./N.O. indication on the function plate and switching of the vacuum passage are reversed; N.C. (Normally closed) in vacuum passage are reversed:
 - "N.C." indicated on the plate
 - → N.O. in vacuum passage (Normally open)
 - "N.O." indicated on the plate
 - → N.C. in vacuum passage (Normally closed)

N.C./N.O. Conversion

To convert valve operation from N.C. to N.O. or N.O. to N.C., remove the pilot valve, move the function plate along the gasket, both top and bottom until the mark ▶ meets N.C. (N.O.)

Please note however, that the N.O. valve functions properly only when the appropriate pressure is applied to the valve.

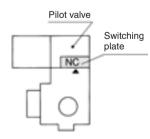

SYJ

VQZ

VP VG


VP3□





Series VP3145

Dimensions: VP3145


Grommet: VP3145□-□□G^A□

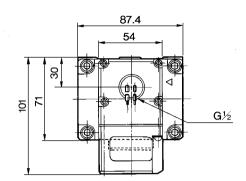

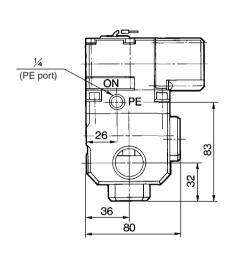

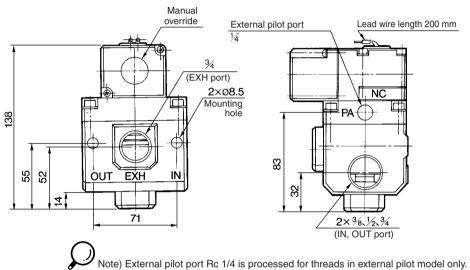


Conduit terminal: VP3145□-□□T^A□

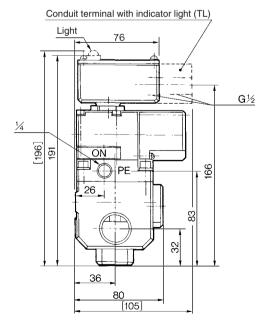


[]: With indicator light (TL)

DIN terminal: VP3145□-□□DB□

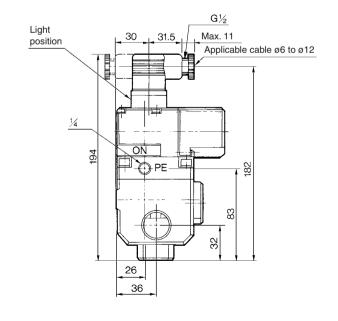


Dimensions: VP3165

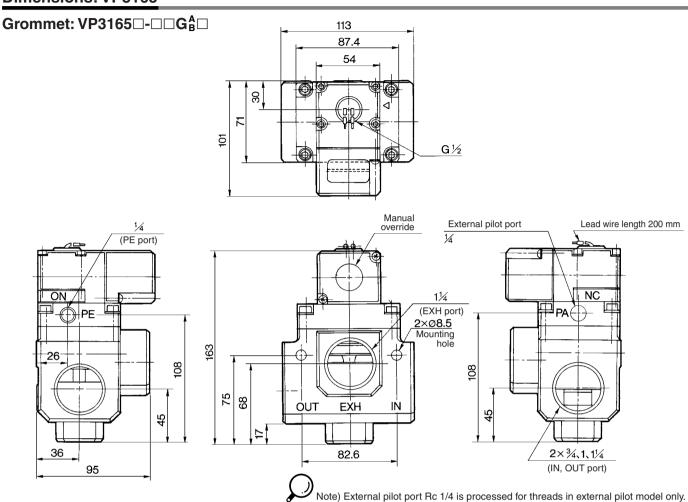


Conduit terminal: VP3165□-□□T^A□

[]: With indicator light (TL)

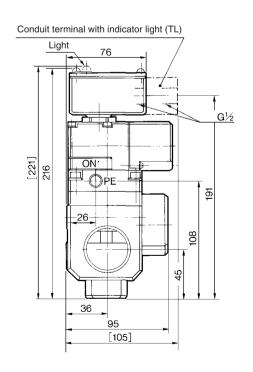

DIN terminal: VP3165□-□□D^A_B□

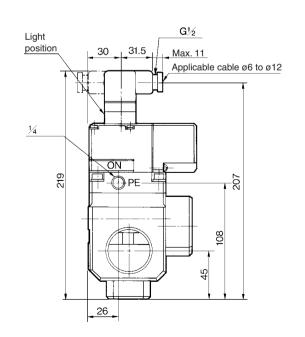

SYJ


VQZ

VP VG


VP3□

Series VP3185


Dimensions: VP3185

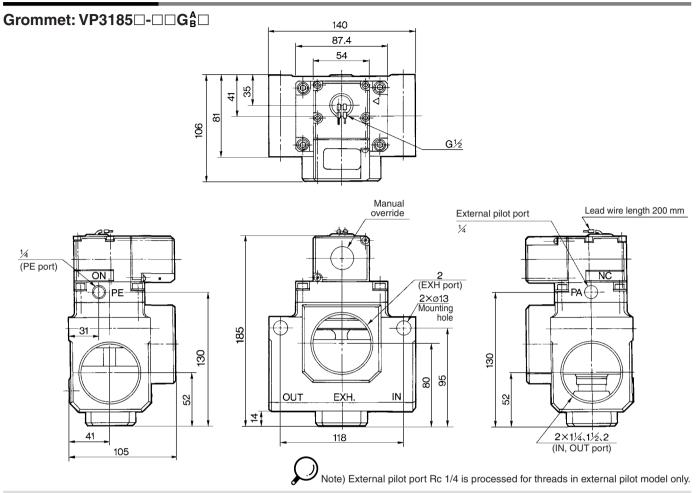

Conduit terminal: VP3185□-□□T^A□

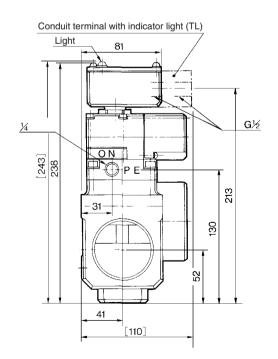

DIN terminal: VP3185□-□□D_B□

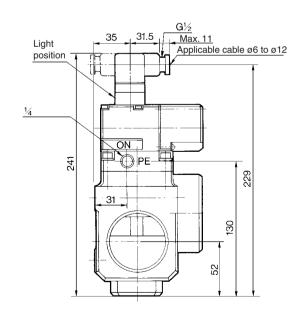

[]: With indicator light (TL)


Made to Order: Series VP3145/3165/3185 Main Valve Double Acting Type: -X80/X81






Note) CE-compliant: D/DO only (Electrical entry)

How to Order

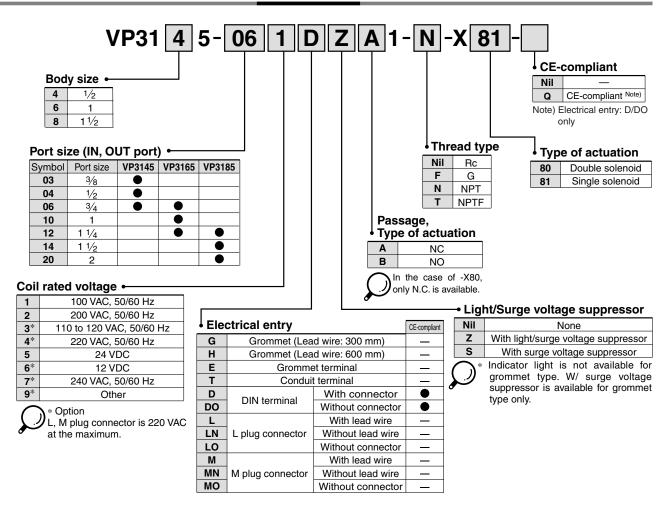


How to Order Pilot Valve Assembl

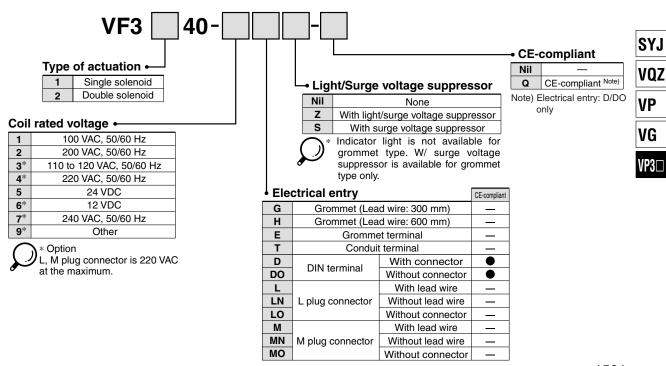


Series VP3145/3165/3185

JIS Symbol -X80

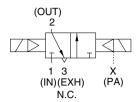

-X81

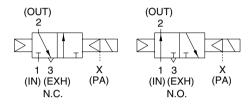

Specifications


Valve configuration	External pilot 3 port solenoid valve
Type of actuation	Double solenoid (-X80), Single solenoid (-X81)
Fluid	Air
Operating pressure range	-101.2 kPa to 0.8 MPa
Pilot pressure	85 to 115% of main pressure, Min. 0.2 MPa
Ambient and fluid temperature	0 to 50°C (No freezing)
Lubrication (1)	Required (Equivalent to turbine oil Class 1 ISO VG32)
Mounting orientation	Unrestricted
Impact/Vibration resistance (2)	150/50 m/s ²

Note 1) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32). Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and deenergized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Solenoid Specifications


Electrical entry	Grommet, Grommet terminal, Conduit terminal DIN terminal, L plug connector, M plug connector			
Coil rated voltage (V)	AC (50/60 Hz)	100, 200, 110*, 220*, 240*		
Con rated voltage (v)	DC	24, 12*		
Allowable voltage fluctuation	–15 to 10%			
Apparent power (AC) Note)	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz		
Apparent power (AC)	Holding	3.4 VA/50 Hz, 2.3 VA/60 Hz		
Power consumption (DC) Note)	W/o indicator light 1.8W			
Power consumption (DC)	W/ indicator light	2W		

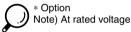

∆ Caution

Piping and other usage are the same as standard products.

Dimensions

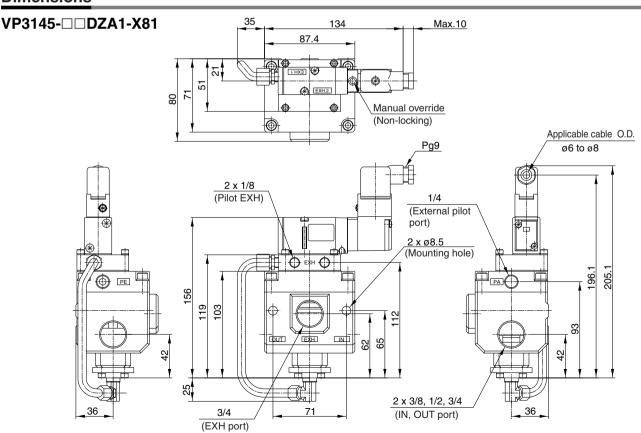

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face. In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.




Large Size 3 Port Solenoid Valve Series VP3145/3165/3185

Dimensions

VP3165-□□**DZA1-X81** 146.5 Max.10 113 87.4 • Manual override (Non-locking) Applicable cable O.D. Pg9 ø6 to ø8 1/4 2 x 1/8 (External pilot Pilot EXH port) 2 x ø8.5 (Mounting hole) **⊕** EM+⊕ **(** ┦⊠⊕ 221 137 144 28 78 85 55 22 22 $1^{1/4}$ (EXH port) 36 82.6 _36 2 x ³/4, 1, 1¹/4 (IN, OUT port)

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
• In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.

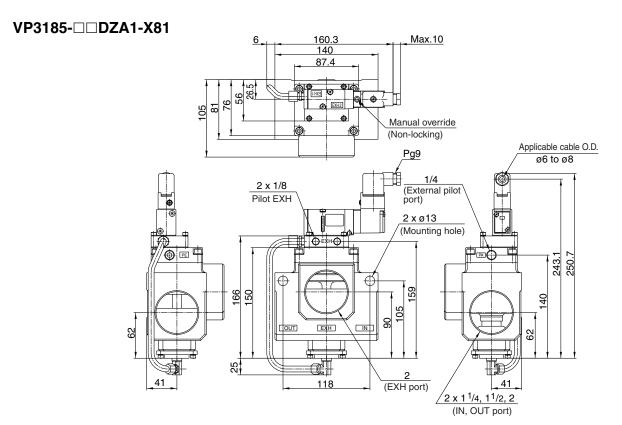

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
• In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.

SYJ

VQZ

VP

VG

VP3□



Series VP3145/3165/3185 Specific Product Precautions

Be sure to read before handling.

Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

△ Caution

Piping

If supply port air pressure drops to less than 0.2 MPa, the valve may malfunction. In such a case, use external pilot type. (When throttling IN port, or operating with OUT port open to the atmosphere or in a similar operation.)

Pressure balance among each port

This solenoid valve is pressure-unbalanced type. Operate it within this pressure range: $IN \ge OUT \ge EXH$. If not operated in the range, the valve will malfunction.

Use as 2 port valve

- Plug EXH port in case of pressure-in and plug IN port in case of vacuum use.
- This valve has slight air leakage and can not be used for such purposes as holding air pressure (including vacuum) in the pressure container.

Supply air

Install an air filter and a lubricator on the upstream side.

Lubrication

This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32). Besides that, for brands of each manufacturer, refer to page 6.

Environment

If using the valve in a dusty environment, install a silencer at EXH port and PE port to prevent dust from entering.

N.C./N.O. conversion

When changing the direction of a switching plate to convert from N.C. to N.O. and vice versa, note that the equipment to be connected will act reversely.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matters 44 to 47.

Light/Surge Voltage Suppressor

	Grommet (G)	Conduit terminal (T)	DIN terminal (D)
With indicator light (L)	None	Neon bulb	48 VDC or less 100 VAC or more Neon bulb
Surge voltage suppressor (S)		Z 5 5	
With light/surge voltage suppressor (Z)	None	Neon bulb Varistor Z	Varistor Z

"Items that are marked "With indicator light," "With surge voltage suppressors," and "With light/surge voltage suppressor" are all non-polar types.

How to Use DIN Terminal

1. Disassembly

- After loosening the screw (1), then if the housing (4) is pulled in the direction of the screw, the connector will be removed from the body of equipment (solenoid, etc.).
- 2) Pull out the screw (1), then remove the gasket (2a) or (2b).
- 3) On the bottom part of the terminal block (3), there's a cut-off part (indication of an arrow) (3a). If a small flat head screwdriver is inserted between the opening in the bottom, terminal block (3) will be removed from the cover (4). (Refer to the figure below.)
- 4) Remove the cable gland (5) and plain washer (6) and rubber seal (7).

2. Wiring

- 1) Pass them through the cable (8) in the order of cable ground (5), washer (6), rubber seal (7), and then insert into the housing (4).
- 2) Dimensions of the cable (8) are the figure as below. Skin the cable and crimp the crimped terminal (9) to the edges.
- 3) Remove the screw with washer (3e) from the bracket (3e). (Loosen in the case of Yshape type terminal.) As shown in the below figure, mount a crimped terminal (9), and then again tighten the screw (3e).
- Note) Tighten within the tightening torque of 0.5 N·m±15%.
- Note: a It is possible to wire even in the state of bare wire. In that case, loosen the screw with washer (3e) and place a lead wire (3d) into the bracket, and then tighten it once again.
 - b Maximum size of crimped terminal (9) is up to 1.25 mm² —3.5 when O terminal. For Y terminal, it is up to 1.25 mm²—4.
 - c Cable (8) external: 6 to 12 mm ø
- Note) For the one with the external dimension ranged between 9 to 12 mmø, remove the inside parts of the rubber seal (7) before using.

3. Assembly

- Terminal block (3) connected with housing (4) should be reinstated. (Push it down until you hear the click sound.)
- Putting rubber seal (7), plain washer (6), in this order into the cable introducing slit on the housing (4), then further tighten the cable gland (5) securely.
- By inserting gasket (2a) or (2b) between the bottom part of the terminal block (3) and a plug on an equipment, screw in (1) on top of the housing (4) and tighten it.

Note) Tighten within the tightening torque of 0.5 N·m ±20%.

Note: The orientation of a connector can be changed arbitrarily, depending on the combination of a housing (4) and a terminal block (3).

