
Compact Vacuum Ejector

Series ZA

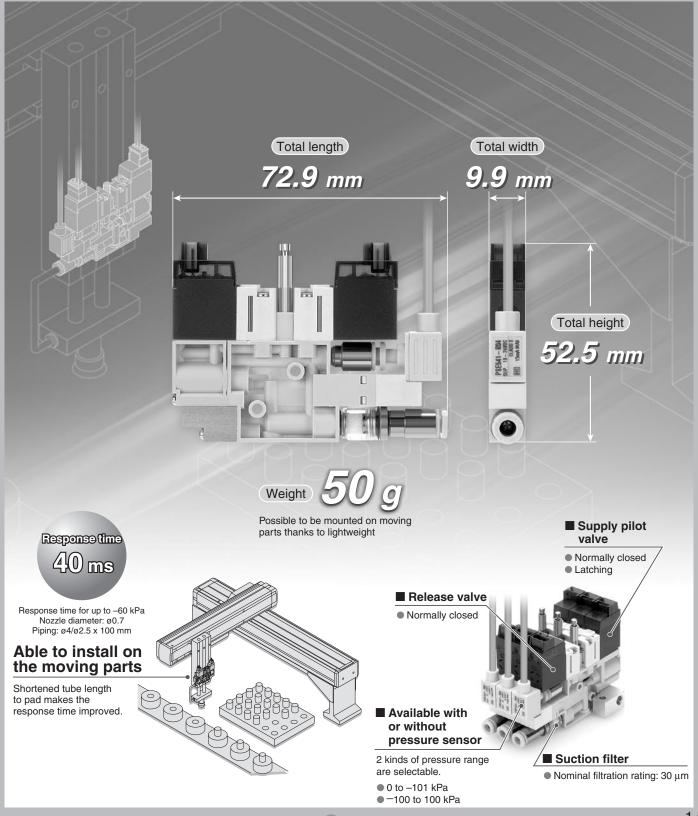

Compact Vacuum Ejector

Series ZA



How to Order

Ejector Unit

ZA1071-K1 5 L - P1-01

Nozzle nominal size

05	0.5
07	0.7

Solenoid valve combination (Refer to Table (1).)

Symbol	For supply	For release	
K1	Normally closed	Normally closed	
J1	Normally closed	None	
Q1	Latching positive common	Normally closed	
Q2	Latching positive common	None	
N1	Latching negative common	Normally closed	
N2	Latching negative common	None	

Pilot valve (Refer to Table (1).)

Nil	Standard (1 W for DC) Note)
Υ	DC low wattage type (0.5 W) Note)

Note) Avoid energizing the solenoid valve for long periods of time. (Refer to Design and Selection on Specific Product Precautions 1.)

_	<u>, </u>	
	1	100 VAC (50/60 Hz)
ı	2	200 VAC (50/60 Hz)
	3	110 VAC (50/60 Hz)
	4	220 VAC (50/60 Hz)
	5	24 VDC
	6	12 VDC

Electrical entry

	Liectifical	citti y		
L	L plug connector, with 0.3 m lead wire, with light/surge voltage suppressor			
LO	L plug connector, without connector, with light/surge voltage suppressor			
М	M plug connector, with 0.3 m lead wire, with light/surge voltage suppressor			
МО	M plug connector, without connector, with light/surge voltage suppressor			
G	Grommet, with 0.3 m lead wire (Not available for latching and AC types.)			

♦ Vacuum (V) port

	Symbol	Applicable tubing O.D.	Part no.
1		3.2 (Straight)	KJS23-M5
2		4 (Straight)	KJS04-M5
	4	3.2 (Elbow)	KJL23-M5
	5	4 (Elbow)	KJL04-M5

Air pressure supply (P) port

Symbol	Applicable tubing O.D.	Part no.
0	Without fitting (M3 x 0.5)	_
2	4 (Straight)	KJS04-M3
5	4 (Elbow)	KJL04-M3
M	Without supply ^{Note)} adapter (For manifold)	Refer to "Construction". (page 5)

Note) O-ring and round head combination screws (M2 x 12) are attached to the supply adapter (M).

Pressure sensor specifications

	Symbol	mbol Rated pressure range and accuracy			
	P1	With pressure sensor (0 to -101 kPa, accuracy ±2% F.S.)	PSE541		
	P1A	With pressure sensor (0 to -101 kPa, accuracy ±1% F.S.)	PSE541A		
	Р3	With pressure sensor (-100 to 100 kPa, accuracy ±2% F.S.)	PSE543		
	РЗА	With pressure sensor (–100 to 100 kPa, accuracy ±1% F.S.)	PSE543A		
B Without pressure se		Without pressure sensor Note 1)	KQ2P-04		

Note 1) One-touch fittings are plugged when the pressure sensor is mounted.

Note 2) This pressure switch detects pressure and converts the data into analog output.

When the product is used as a vacuum switch, a pressure sensor controller Series PSE300 (CAT.ES100-56) is necessary.

• Suction filter

Nil	Without suction filter
F	With suction filter

Manual override

Nil	Non-locking push type
В	Locking type

Table (1) Combination of Solenoid Valve, Pilot Valve and Power Supply Voltage

	()							
Camabination	Solenoid valve combination symbol	Pilot valve symbol	Applicable power supply voltage (V)					
Combination no.			1	2	3	4	5	6
110.			100 AC	200 AC	110 AC	220 AC	24 DC	12 DC
1	K1	Nil	_	_	_	_	•	•
2	K1	Υ	_	_	_	_		
3	J1	Nil	•	•	•		•	
4	J1	Υ	_	_	_	_	•	•
(5)	Q1	Nil	_	_	_	_	•	•
6	Q2	Nil	•	•	•	•	•	•
7	N1	Nil	_	_	_	_	•	•
8	N2	Nil	_	_	_	_	•	•

 $[\]ast$ Combinations (1) to (8) in the above table are the only possible options.

⚠ Warning


The filter case of this suction filter is made of nylon. The product will be damaged if solvents such as alcohol or chemicals are splashed on it. Avoid using it in an atmosphere where such solvents are present.

This suction filter is exclusive to Series ZA. Do not use for other purposes.



How to Order



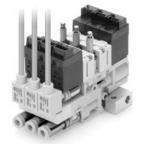

Number of stations

	o. o.aoo				
01	1 station				
02	2 stations				
:	:				
08	8 stations				

Right common air pressure supply (P) port (viewed from the vacuum (V) port side)

Symbol	Applicable tubing O.D.	Part no.
Symbol	Applicable lubing O.D.	Part no.
0 Without fitting (M5 x 0.8)		
2	4 (Straight)	KJS04-M5
3	6 (Straight)	KJS06-M5
5 4 (Elbow)		KJL04-M5
6 (Elbow)		KJL06-M5
Р	With plug	ZX1-MP1

Left common air pressure supply (P) port (viewed from the vacuum (V) port side)

		· / ·
Symbol	Applicable tubing O.D.	Part no.
0	Without fitting (M5 x 0.8)	_
2	4 (Straight)	KJS04-M5
3 6 (Straight)		KJS06-M5
5	4 (Elbow)	KJL04-M5
6	6 (Elbow)	KJL06-M5
Р	With plug	ZX1-MP1

Maximum Simultaneous Opreating Stations

maximum cimulaticodo oprodung otationo				
Manifold model	Ejector nozzle diameter			
Iviarillola model	ø0.5	ø0.7		
ZZA1 Stations -2P (KJS04-M5 one side) -5P (KJL04-M5 one side)	4 stations	2 stations		
ZZA1 Stations -22 (KJS04-M5 both sides) -55 (KJL04-M5 both sides)	8 stations	4 stations		
ZZA1 Stations -3P (KJS06-M5 one side)	8 stations	4 stations		
ZZA1 Stations -6P (KJL06-M5 one side)	6 stations	3 stations		
ZZA1 Stations -33 (KJS06-M5 both sides)	8 stations	8 stations		
ZZA1 Stations -66 (KJL06-M5 both sides)	8 stations	6 stations		

Manifold Ordering Example


ZZA108-2P

*ZA1071-K15L-FP1-M2 4 pcs. (Stations 1 to 4) 3 pcs. (Stations 5 to 7) *ZA1051-Q15L-FB-M1

*ZA1-BP1 1 pc. (Station 8)


Blanking plate assembly

Note) The stations are sequentially numbered. When viewed from the side of the vacuum ports, the far left station is designated as station 1.

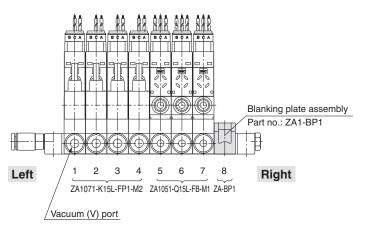


Flow Characteristics / Exhaust Characteristics

ZA05 Exhaust Characteristics

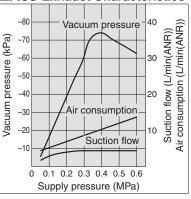


ZA05 Flow Characteristics

Supply pressure: 0.4 MPa -80 Vacuum pressure (kPa) -60 -40 -20 Suction flow (L/min(ANR))

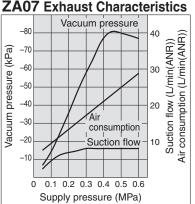

ZA07 Flow Characteristics

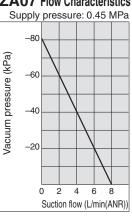

Specifications

General Specifications

Maximum operating pressure	0.50 MPa
Minimum operating pressure	0.20 MPa
Operating temperature range	5 to 50°C (No condensation)
Fluid	Air
Vibration resistance Note)	30 m/s ²

Note) There was no malfunction confirmed when tested under the following conditions: From 10 to 500 to 10 Hz and whichever of the following is smaller: 1.5 mm amplitude or 98 m/s² acceleration in X, Y, Z direction for 2 hours each. (initial value)

Ejector

Nozzle nominal diameter	0.5 mm	0.7 mm
Standard supply pressure Note)	0.40 MPa	0.45 MPa
Maximum vacuum pressure Note)	-74 kPa	–78 kPa
Maximum suction flow	4 L/min (ANR)	8 L/min (ANR)
Air consumption	12 L/min (ANR)	28 L/min (ANR)

Note) The maximum vacuum pressure was determined by applying the standard supply pressure. Different supply pressures are required to determine a model.

Weight

Single unit				
With pressure sensor	50 g			
Without pressure sensor	45 g			
Manifold base	Manifold base			
1 station	9 g			
2 stations	11 g			
3 stations	13 g			
4 stations	15 g			
5 stations	17 g			
6 stations	19 g			
7 stations	21 g			
8 stations	23 g			

 Calculation of weight for the manifold type (Single unit weight) x (Number of stations)
 + (Manifold base)


Example) 5 stations manifold with pressure sensors

50 (g) x 5 + 17 (g) = 267 (g)

Pressure Sensor

Model	PSE541	PSE541A	PSE543	PSE543A		
Rated pressure range	0 to -101 kPa -100 to 100 kPa			100 kPa		
Proof pressure	500 kPa					
Fluid		Air, Non-corrosive gas	s, Non-flammable gas			
Output voltage		1 to 5 VDC (within rated pressure range)				
Output impedance	Approx. 1 kΩ					
Power supply voltage	12 to 24 VDC, Ripple (p-p) 10% or less (with power supply polarity protection)					
Current consumption	15 mA or less					
Accuracy (Ambient temperature 25°C)	±2% F.S. or less	±1% F.S. or less	±2% F.S. or less	±1% F.S. or less		
Linearity	±0.4% F.S. or less					
Repeatability	$\pm 0.2\%$ F.S. or less Effects to the output value due to supply voltage: $\pm 0.8\%$ F.S. or less					
Temperature characteristics	±2% F.S. or less (based on 25°C)					
Enclosure	IP40					
Ambient humidity range	Operating/Stored: 35 to 80% RH (No condensation)					
Withstand voltage	1000 VAC or more, 50/60 Hz for 1 minute between terminals and housing					
Insulation resistance	50 $M\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing					

Construction

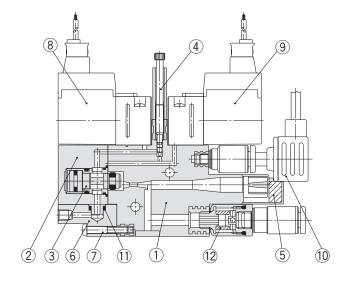

Component Parts


No.	Description	Material
1	Body	PBT
2	Valve cover	PBT
3	Poppet valve assembly	

Replacement Parts


No.	Description	Part no.
4	Release flow adjusting needle assembly	
5	Sound absorbing material	ZA1-SAE2
6	Supply adapter	XT631-ZA1-KA2
7*	Round head combination screw	M2 x 12
8	Supply pilot valve	VQ110□-□□□
9	Release valve	VQ110□-□□□
10	Pressure sensor	PSE54□□-R04
11*	O-ring	ø3.0 x ø1.0
12	Filter element	ZA1-FE-30

^{*} For above parts of No. 7 and No. 11, the parts assembly ZA1-OP-1 (10 pcs each) is available.

How to Order

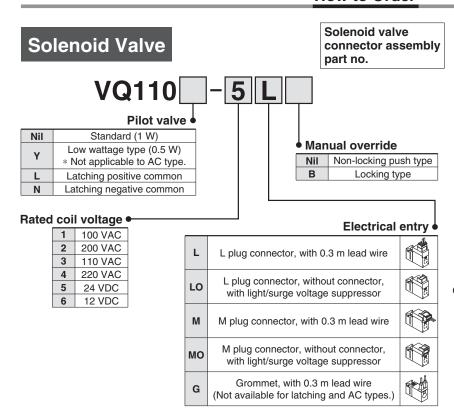

How to order connector assembly DC Single

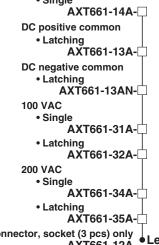

Connector, socket (3 pcs) only

AXT661-12A


Lead wire length


		,
Nil	300 mm	
6	600 mm	
10	1000 mm	
20	2000 mm	
30	3000 mm	


Lead-wire length of the plug connector


The lead-wire length for a valve with a lead-wire is 300 mm. When in need of a valve with a lead-wire longer than 600 mm, place an order for a valve without a connector and connector assembly.

Vacuum Pressure Switch

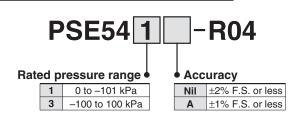

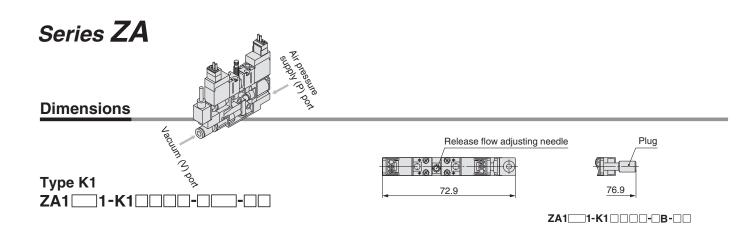


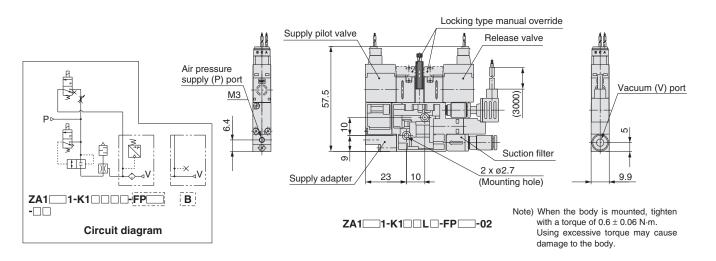

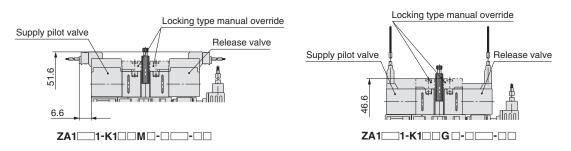


Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation

Dimensions after the fittings are installed on the vacuum (V) port, and air pressure supply (P) port of a single unit are shown below.

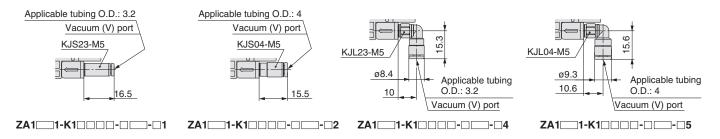


Dimensions of the vacuum (V) port fittings after installation

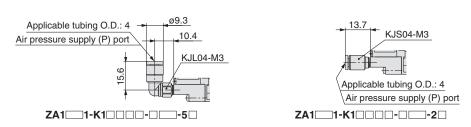



Dimensions of the air pressure supply (P) port fittings after installation




Compact Vacuum Ejector Series ZA

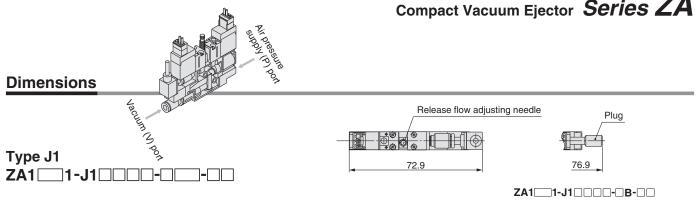

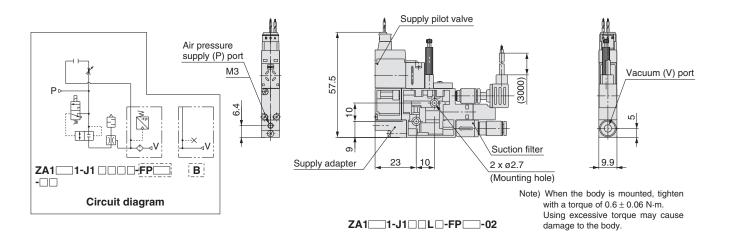


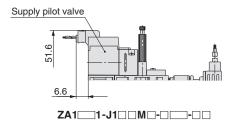

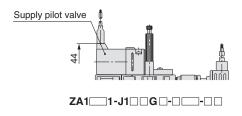


Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation

Dimensions after the fittings are installed on the vacuum (V) port, and air pressure supply (P) port of a single unit are shown below.

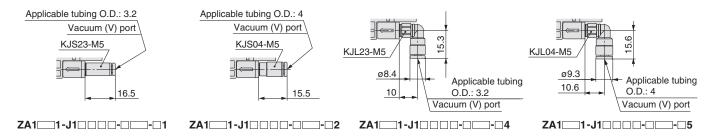


Dimensions of the vacuum (V) port fittings after installation

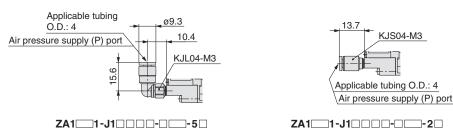


Dimensions of the air pressure supply (P) port fittings after installation



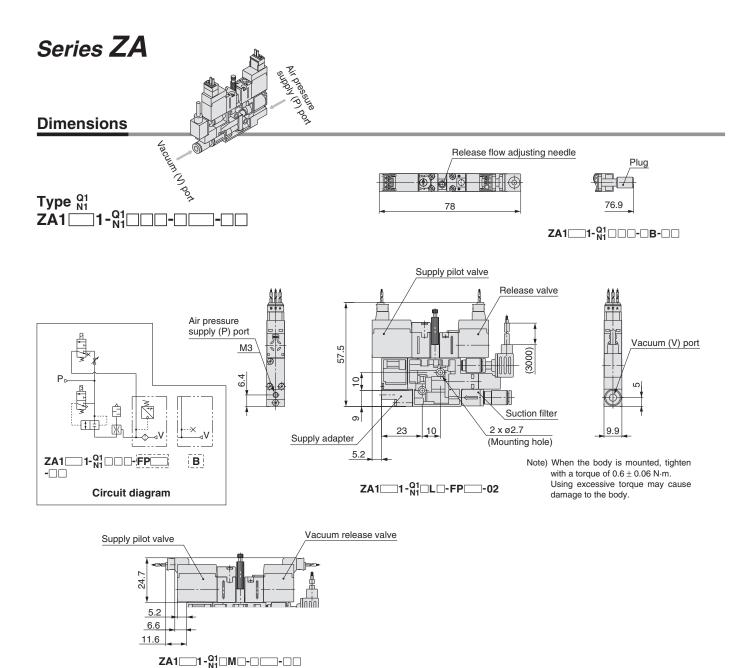


Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation

Dimensions after the fittings are installed on the vacuum (V) port, and air pressure supply (P) port of a single unit are shown below.

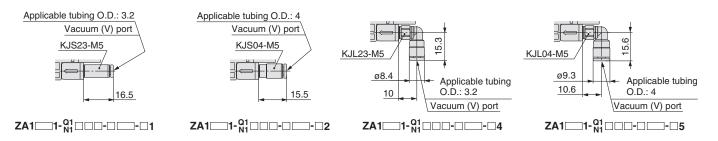


Dimensions of the vacuum (V) port fittings after installation

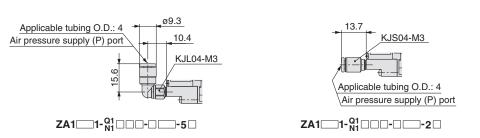



Dimensions of the air pressure supply (P) port fittings after installation



Compact Vacuum Ejector Series ZA

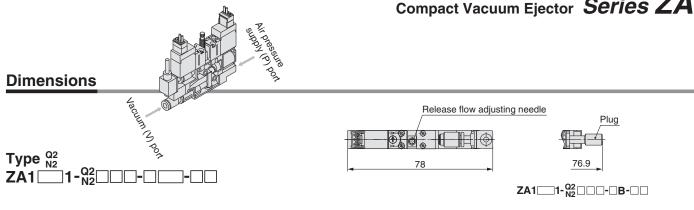


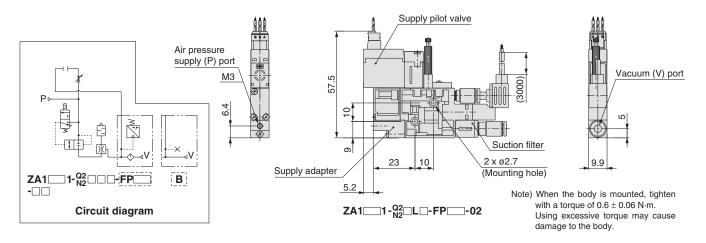

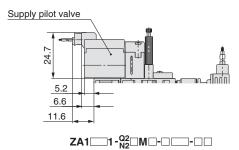


Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation

Dimensions after the fittings are installed on the vacuum (V) port, and air pressure supply (P) port of a single unit are shown below.

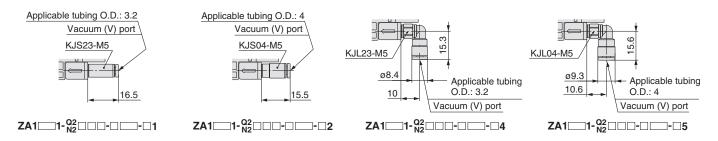


Dimensions of the vacuum (V) port fittings after installation

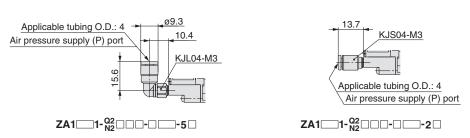

Dimensions of the air pressure supply (P) port fittings after installation




Series ZA

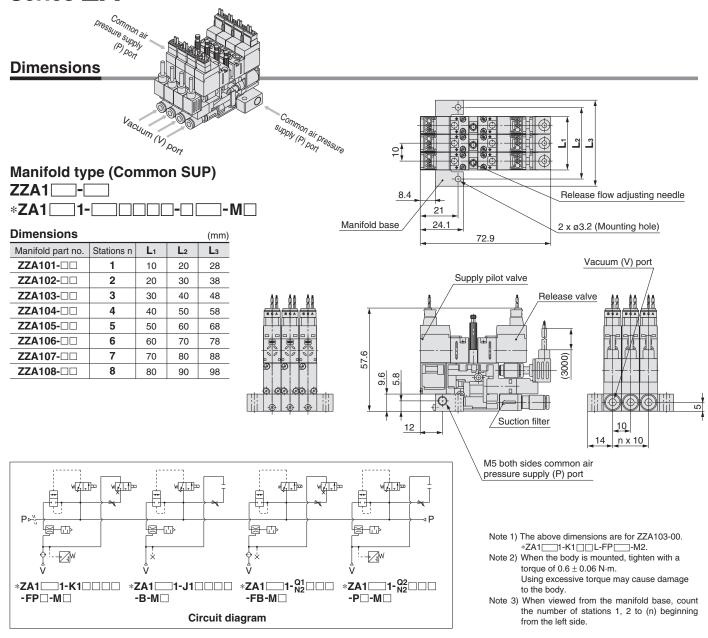


Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation

Dimensions after the fittings are installed on the vacuum (V) port, and the common air pressure supply (P) port of a manifold are shown below.

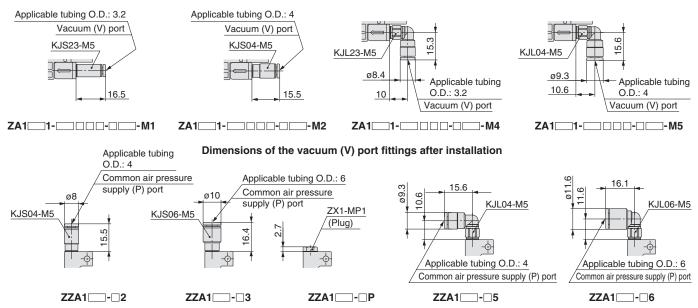


Dimensions after the fittings are installed on the common air pressure supply (P) port

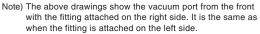



Manifold Type: How to Increase / Decrease Manifold Stations

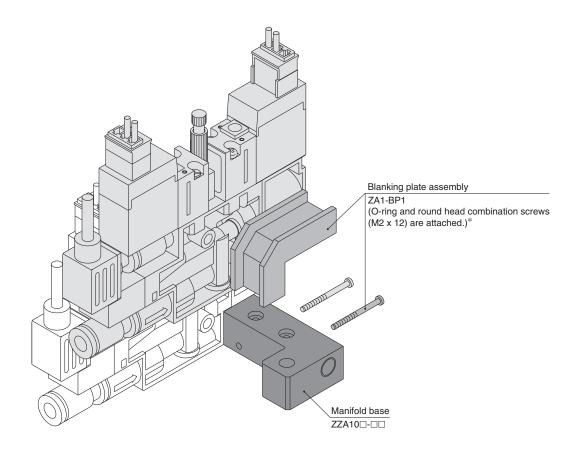

 ^{*} An assembly kit (part no. ZA1-OP-1) is available which includes 10 pcs each of O-rings and round head combination screws.



Series ZA **Specific Product Precautions 1**

Be sure to read before handling. Refer to Best Pneumatics No. 4 for Safety Instructions and Vacuum Equipment Precautions.

Design and Selection

.⚠Warning

1. Avoid energizing the solenoid valve for long periods of time.

If a solenoid valve is energized for a long period of time, the coil will get hot and the performance may be reduced. Additionally, the peripheral equipment in close proximity may also be badly affected. Use a low wattage solenoid valve when the solenoid valve is energized continuously or when the duration of the energization is longer than the non-energized period each day. Periods of energization can be shortened by using a latching type solenoid valve. But, do not energize the coil on both A and B sides simultaneously when using the latching

Continuous energization of the solenoid valve should be less than 10 minutes in duration and the energization period should be shorter than the non-energized period. Take measures for any heat radiation so that the temperature is within the range of solenoid valve specifications when the solenoid valve is mounted on the control panel. Please pay special attention to any temperature increases when a manifold type with 3 stations or more is energized continuously or when three individual units are placed in close proximity.

2. Use the vacuum equipment within the operating supply pressure range.

When the operating with a lower supply pressure, the vacuum performance will be reduced and the poppet valve will cause

Never use the vacuum equipment more than the operating supply pressure range as this may cause damage to the product resulting in potentially dangerous operation.

3. Suspension of operation for long periods of time

Please use caution — as detailed below — when the vacuum equipment is turned off for periods in excess of 6 hours.

Be sure to turn off the pressure supply to the vacuum equipment.

Please observe this precautions as the supply pressure will be applied for a extra period of time due to the line pressure increase and may result in damage to the vacuum equipment.

Be sure to turn off the power supply to the solenoid valve and the pressure switch.

Please observe this precautions as any heat generated due to the length of energization time may seriously affect the vacuum equipment and peripheral equipment resulting in potentially dangerous operation.

4. Exhaust port (EXH port) on the vacuum ejector

Please check the exhaust port (EXH port) on the vacuum ejector, so that any exhaust resistance will not be increased due to insulating materials or restrictions in the piping. The exhaust resistance may reduce the ejector's performance. Additionally, never use this product in an application where the exhaust port is blocked when detaching a workpiece. This misuse may result in possible damage to the product.

5. Vacuum release flow adjusting needle

Adjust the vacuum release flow adjusting needle from the fully closed to the open state by 1/8 to 1/4 turns to detach a workpiece completely during the ON time of a release valve.

Do not supply compressed air while the vacuum release flow adjusting needle is adjusted. Securely lock it with a lock nut after adjustment.

⚠ Warning


6. How to use the latching type solenoid valve

Our Latching type solenoid are fitted with a self-detaining mechanism. Its construction features an armature inside the solenoid which is set or reset using spontaneous energization. (20 ms or greater) Therefore, continuous energization is not required.


How to Use the Latching Type Plug Connector


Wiring specifications

Wiring should be connected as shown below. Connect with the power supply respectively.

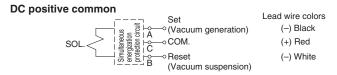

DC negative common

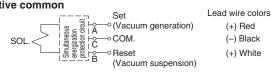

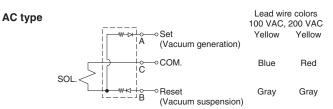

Special care must be taken for the latching type.

- 1. Avoid using this product with a circuit which electrifies both the set and reset signals simultaneously.
- 2. The minimum energization time required for self-detaining is 20
- 3. Please contact us when using this product in locations where there are vibration levels of 30 m/s² or above or highly magnetic fields. No problems arise in normal usage or locations.
- 4. This valve retains the reset position (Flow path: A \rightarrow R) at the time of shipment. However, it may alter to the set position during transporatation or due to vibration when mounting the valve. Therefore, confirm the home position either manually or with power supply prior to use.

7. Suction filter

This suction filter is dedicated to the ZA series. Avoid using it for other purposes.



Series ZA Specific Product Precautions 2

Be sure to read before handling. Refer to Best Pneumatics No. 4 for Safety Instructions and Vacuum Equipment Precautions.

Mounting

Marning

1. When the body is mounted, tighten with a torque of 0.6 \pm 0.06 N·m.

Using excessive torque may cause damage to the body.

Operating Environment

Marning

1. Suction filter

The filter case of this suction filter is made of nylon. The product will be damaged if solvents such as alcohol or chemicals are splashed on it. Avoid using it in an atmosphere where such solvents are present.

