D. P. Lube (Unit) Series ALD(U)600/900

- Centralized control of multi-point lubrication
- Low oil consumption volume
- Simplified oil feeding volume setting in which only the pressure differential is adjusted.
- Oil can be replenished by merely opening and closing the oil filler plug without stopping the air line.
- The condition of the generation of micromist can be checked from the oil filler port.







ALDU600 (with panel)

Float Switch Specifications

Voltage	200 VAC, 200 VDC
Max. cut off capacity	12 VAC, 10 W DC
Max. cut off current	0.6 A AC, 0.5 A DC
Contact point construction	1a, 1b
Level indication	Bottom limit indication

Model ALD600 Port size (2) 3/4 1 Fluid 1 Proof pressure 0 Operating pressure range 0.1 to 1 Operating pressure differential range 0 Recommended press. differential 1 Press. differential setting min. flow ⁽³⁾ 2000 Recommended lubricant Turbine of the formation of the forma	1.5 0 MPa 0.03 to 0 0.05	0.1 MPa MPa	ALDU900 11/4 11/2 2 0 1.0 MPa	A				
Port size ⁽²⁾ 1 Fluid Proof pressure Operating pressure range Operating pressure differential range Recommended press. differential Press. differential setting min. flow ⁽³⁾ Bowl capacity between levels (cm ³) 2000 Recommended lubricant Turbine di	11/2 2 A 1.5 0 MPa 0.03 to 0 0.05	1 MPa 0.15 to 0.1 MPa MPa	1½ 2	A				
Proof pressure 0.1 to 1 Operating pressure range 0.1 to 1 Operating pressure differential range 0.1 to 1 Recommended press. differential 0.1 Press. differential setting min. flow ⁽³⁾ 0.1 Bowl capacity between levels (cm ³) 2000 Recommended lubricant Turbine dettermine dette	1.5 0 MPa 0.03 to 0 0.05	MPa 0.15 to 0.1 MPa MPa	o 1.0 MPa	A A IF				
Operating pressure range 0.1 to 1 Operating pressure differential range	0 MPa 0.03 to 0.05	0.15 to 0.1 MPa MPa	o 1.0 MPa	A				
Derating pressure differential range Recommended press. differential Press. differential setting min. flow ⁽³⁾ Bowl capacity between levels (cm ³) Recommended lubricant Turbine d	0.03 to 0.05	0.1 MPa MPa	o 1.0 MPa					
Recommended press. differential Press. differential setting min. flow ⁽³⁾ Bowl capacity between levels (cm ³) 2000 Recommended lubricant Turbine of	0.05	MPa		IF				
Press. differential setting min. flow ⁽³⁾ Bowl capacity between levels (cm ³) 2000 Recommended lubricant Turbine (IF				
Bowl capacity between levels (cm ³) 2000 Recommended lubricant Turbine of	102 <i>(</i> /mi	n (ANR)						
Recommended lubricant Turbine		in (ANR)						
	5000	2000	5000	V				
Ambient and	il Class 1(With	no additives), ISO VG32						
	 E to 60°C							
fluid temperature	5 to 60°C							
Bowl material Epoxy	Epoxy resin with glass fiber, Polycarbonate							
Weight (kg) 8.9								
Note1) D.P. Lube unit has an attached fil	er at primary side	of D.P. Lube.	<u>. </u>					

Condition: Inlet pressure = 0.5 MPa, Pressure differential = 0.05 MPa Note4) () is weight with panel.

Accessory (Option) Part No.

			Par	t no.		VY1
Description	Model	ALD600	ALD900	ALDU600	ALDU900	
Bracket		126130P	126044P	126130P	126044P 113449 ⁽¹⁾	G
Diackei		120130P	1200446	120130P	113543 ⁽²⁾	PPA
Panel		—	_	12661P	12651-1P	
Float switch S1		IS430-1	IS420-1	IS430-1	IS420-1	AL
Tioat Switch	S2	IS430-2	IS420-2	IS430-2	IS420-2	


Note1) Bracket for filter mounting: For Rc 1 $\frac{1}{4}$, 1 $\frac{1}{2}$ Thread machining on filter body is needed. Note2) Bracket for filter mounting: For Rc 2

How to Order 20 **S1** ALD 9 00 -Β Float switch Style 4 None Nil ALD D.P. Lube (Single unit) 1b (without oil ON) S1 ALDU D.P. Lube unit Thread type Nil S2 1a (without oil OFF) Rc Body size (Standard) Ν NPT 6 1B **9** 2B Accessory Port size Symbol Description 3/4 06 Nil 10 1 в Bracket 12 1 1/4 Ρ Panel 14 1 1/2 20 2


VE


Series ALD600/900


Piping Example

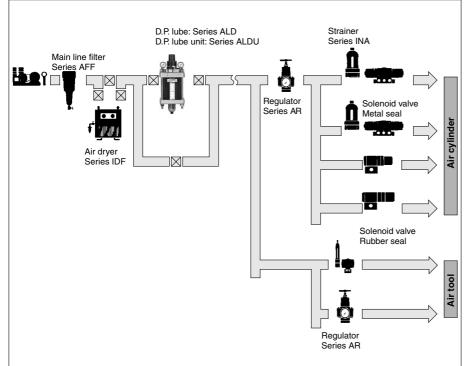


Circuit

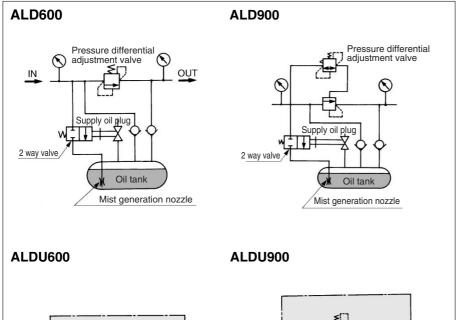

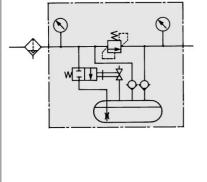


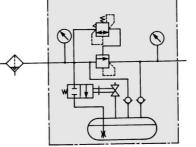

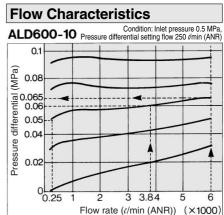


How to read the graph (Example)


With the flow rate set to 250 //min (ANR) and the pressure differential set to 0.05 MPa, by changing the flow rate to 3800 //min (ANR) and 6000 //min (ANR), the pressure differential will change from the initial 0.05 MPa to 0.06 MPa, and to 0.065 MPa.

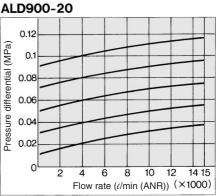

Pressure Differential and Mist Generation

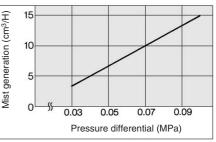

Min. Flow for Pressure Differential Setting

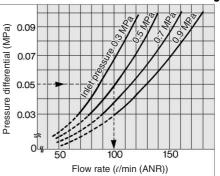

How to read the graph (Example) When the inlet pressure is 0.5 MPa, a flow rate that is greater than 102 d/min(ANR) will be necessary to set the pressure differential to 0.05 MPa. Below this flow rate, the pressure differential cannot be set to 0.05 MPa.



Construction

1 Seal

12 Seal


(13

(14)

(2 pcs.)

Filter element

Check valve assembly

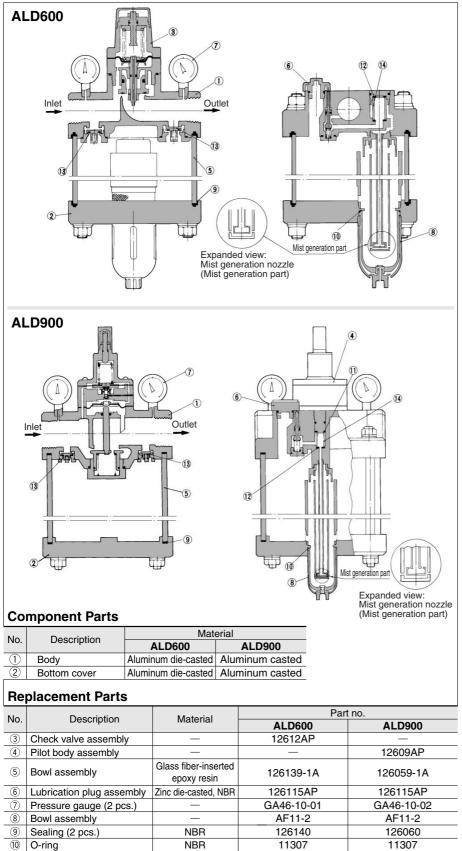

NBR

NBR

Bronze

A Precautions Be sure to read before handling. Refer to pages 14-21-3 to 14-21-4 for Safety Instructions and **Common Precautions. Caution on Design ∕**∧Warning 1. Epoxy resin containing glass fiber and polycarbonate is used in some parts of the D.P. Lube and the D.P. Lube Unit. These units cannot be used in an environment or in a location that is exposed to synthetic oil, thinner, acetone, alcohol, organic solvents such as ethylene chloride, chemicals such as sulfuric acid or nitric acid, cutting oil, kerosene, gasoline, or a threadlock agent, etc., because they will be damaged. Mounting/Adjustment ▲Caution 1. Provide about 30 cm of space above and below the D.P. Lube or the D.P. Lube Unit to facilitate their maintenance and

- Unit to facilitate their maintenance and inspection.2. When the line is stopped,do not adjust or set the differenital pressure, as it is a set the different of the line is stopped.
- could cause the differential adjustment valve to break.
- **3.** When setting the pressure differential, if there is a fluctuation in the operating flow rate, set the pressure differential at the lower flow rate range.

Piping

▲Warning

- 1. The drain pipe for the air filter in the D. P. Lube Unit must have a minimum pipe bore of ø10, and a maximum length of 5 m. Avoid using a riser pipe because it could cause the auto-drain to malfunction.
- 2. If installing an air tank, install it on the IN side of the D.P. Lube Unit. If it is installed on the OUT side, the micromist could be arrested by the air tank, which could lead to insufficient feeding of oil.

Maintenance

⚠Warning

1. Before removing the oil filler plug, loosen it two and a half turns to completely release the pressure inside the case. This will prevent the oil filler plug from flying out.

F.R.L. AV AU AF AR IR VEX AMR ITV IC VBA VE VY1 G **PPA** AL

126047 (2)

126127A

11294-70B

126046

126047

126022A


11294-70B

Series ALD600/900

D.P. Lube ALD600-□06 to 10, ALD900-□12 to 20

Related Products: Strainer

At the terminal of an air pressure line in which a D.P. Lube is used, install a strainer (filtration rate of 5 μ m) upstream with a metal seal solenoid valve, which is susceptible to dust.

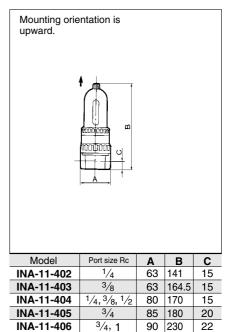

1

100 251

22

INA-11-407

Model	Port size	٨	-	•	5	F	Bracket dimension				
woder	Port size	A	В	С	U	E	F	G	Н	J	K
ALD600-□06 to 10	³ ⁄4, 1	175	175	87.5	460	135	345	32.5	95	14	57
ALD900-□12 to 20	1 ¹ /4, 1 ¹ /2, 2	250	250	125	613	209	419.2	0	120	14	49.6

T

Ĥ

✓ (Connection port center)

F (Bracket mounting dimensions)

Bracket (Option)

D.P. Lube Unit ALDU600-06 to 10, ALDU900-12 to 20

Float switch mounting position Mounting thread M12 Mounting thread M12																		
A B C C C C C C C C C C C C C C C C C C																		
Model	Port size	A	в	С	D	E	F	G	н	J	к	L	М	N	Р	Q	R	S
ALDU600-□06 ALDU600-□10	³ / ₄	470	430	20	480	150	90	145	460	345	135	43 10	67 77	283 296	175	87.5	30	62.5
ALDU900-□12 ALDU900-□14 ALDU900-□20	1 ¹ / ₄ 1 ¹ / ₂ 2	710	670	20	700	230	120	222	615 615 682	419.2	209	57 51 16	85 90 100	424 424 476	250	125	33.2	33.2