
# High Purity Fluoropolymer Fittings Hyper Fitting / Flare Type Series LQ3 Fitting Procedure

## **■ Insertion Tool**

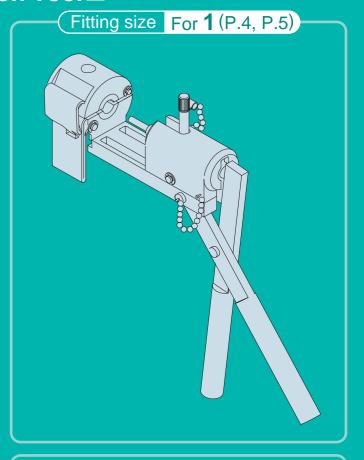



# Preparation Caution: Tubing 1. Wipe the tubing with alcohol to prevent slippage. 2. Cut the tubing perpendicularly with a commercially available dedicated tool. Perpendicular Note) An obliquely cut surface may cause insert bushing breakage, etc.

# **SMC** Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362 URL http://www.smcworld.com © 2006 SMC Corporation All Rights Reserved

D-DN


1st printing KX printing KX 120DN Printed in Japan.


Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.


This catalog is printed on recycled paper with concern for the global environment.





## Heat gun procedure

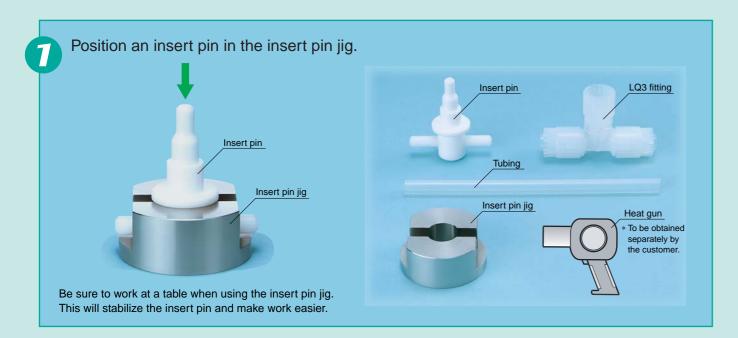

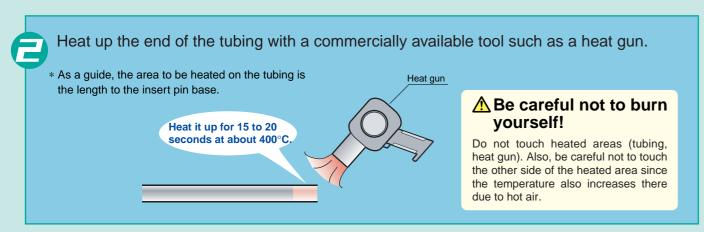

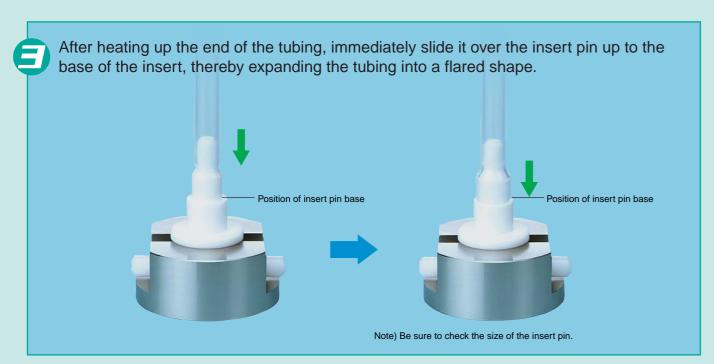

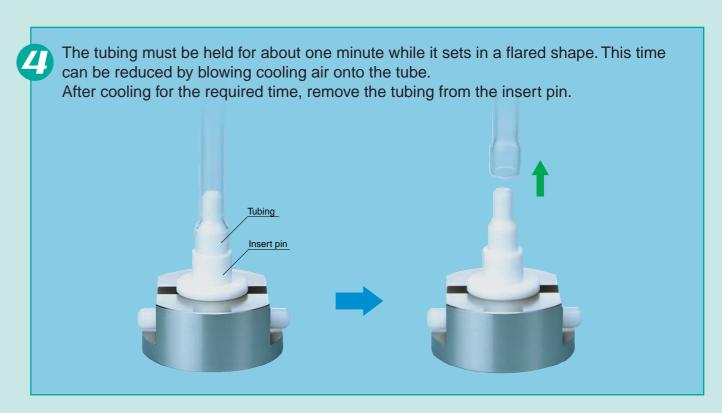


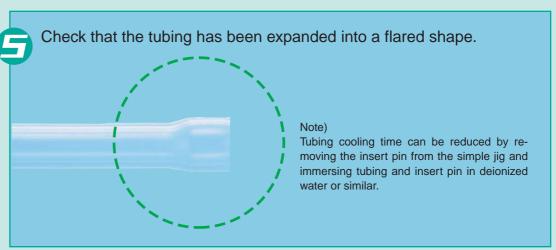


# Fitting size For 1

## **Heat gun procedure**

3

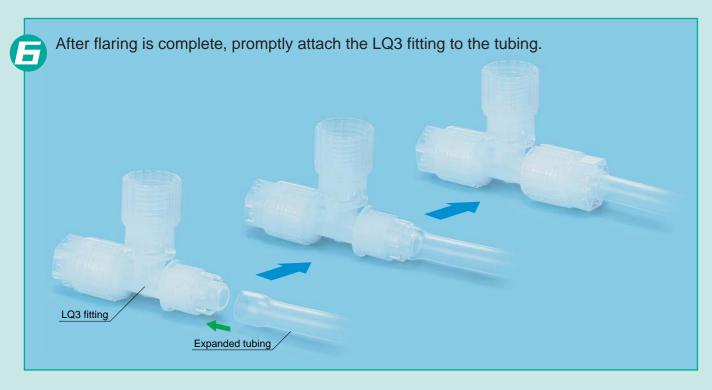


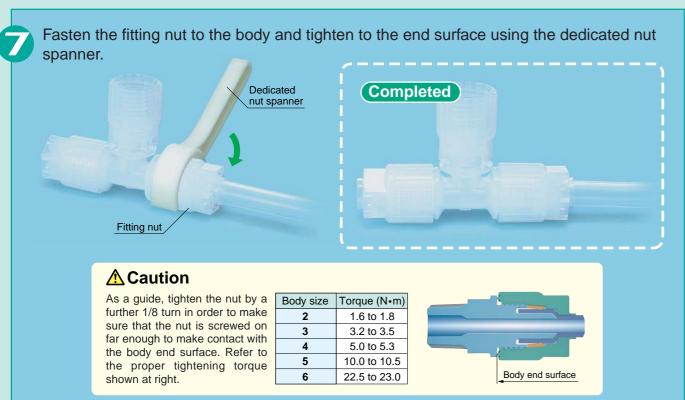



## Lever type tool procedure



**SMC** 

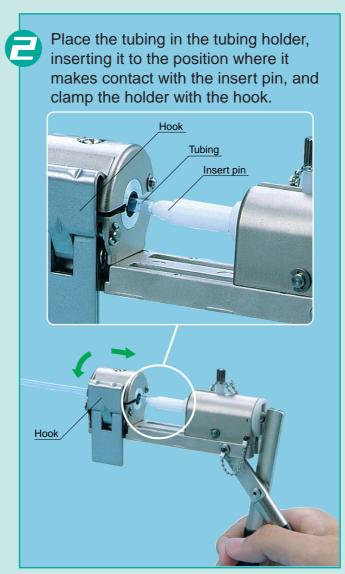


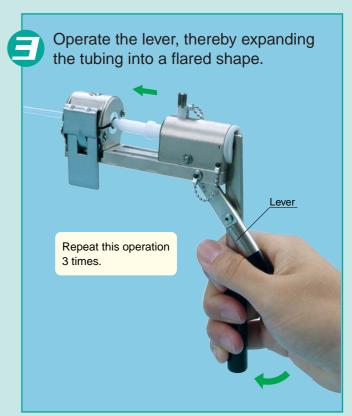


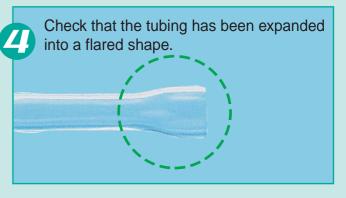

5


## Lever type tool procedure

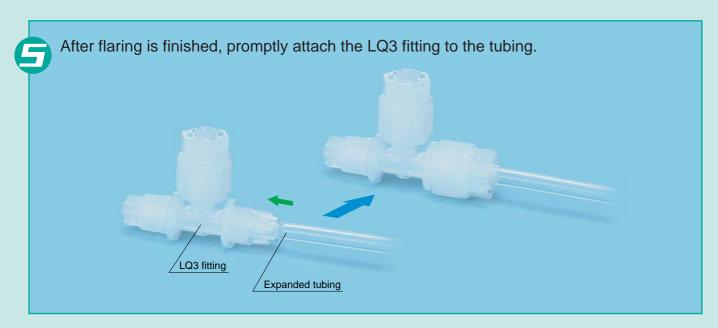

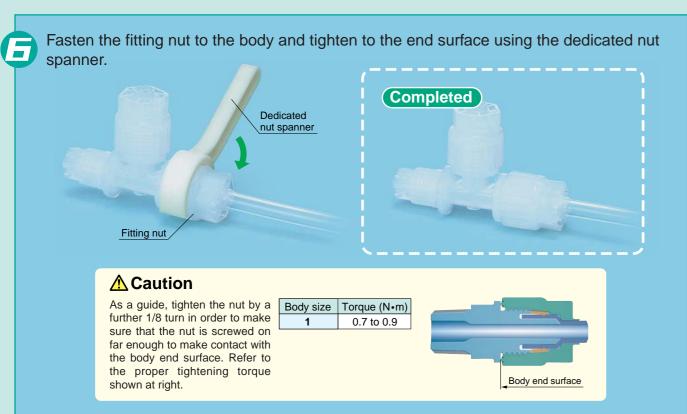



### **How to Order Insertion Tools**



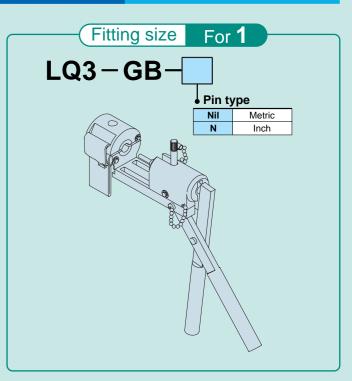


### **Dedicated Nut Spanner**

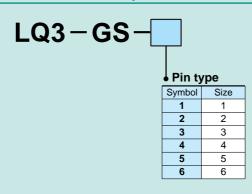



### **Replacement Parts**

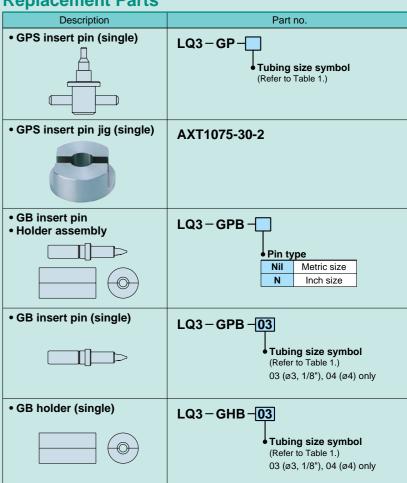

**Table 1 Tubing Size Symbol** 

**SMC** 

	Tubing O.D.													
	Metric size								Inch size					
	ø3	ø4	ø6	ø8	ø10	ø12	ø19	ø25	1/8"	1/4"	3/8"	1/2"	3/4"	1"
Symbol	03	04	06	08	10	12	19	25	03	07	11	13	19	25
Fitting type	G	В	GPS						GB	GPS				