
## Basic type / Direct mount type

## Series CY3B/CY3R

ø6, ø10, ø15, ø20, ø25, ø32, ø40, ø50, ø63

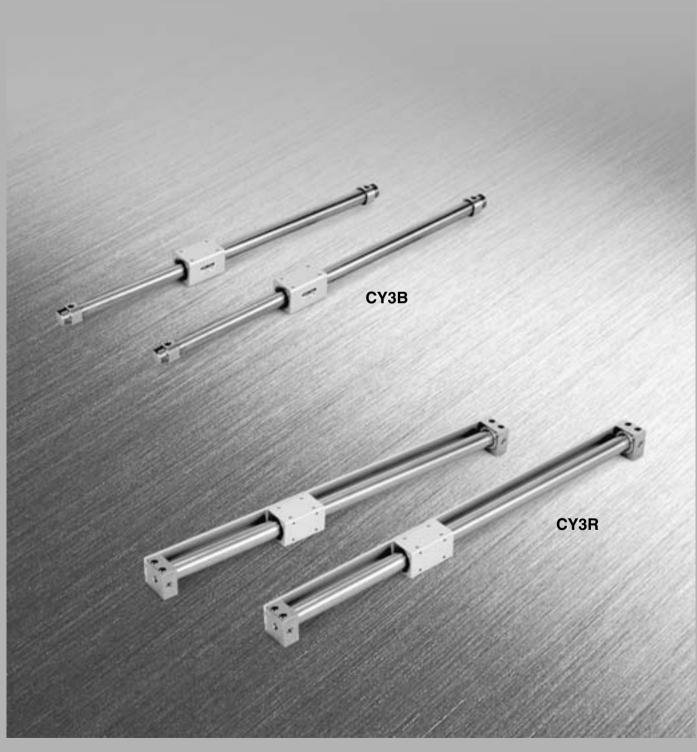

CY3B CY3R

CY1L

CY1H CY1F

CYP

D-□

-**X**□

Individual -X 
Technical

1165

## Upgraded version of space saving magnetically rodless cylinder!

## **Improved durability**

#### Improved bearing performance

A 70% longer wear ring length achieving an improvement in bearing performance compared to the CY1B.

#### Improved lubrication by using a lubretainer

A special resin lubretainer is installed on the dust seal to achieve ideal lubrication on the external surface of the cylinder tube.

## **Reduction of sliding resistance**

Switch rail

Switch mounting

bracket

#### ■ Minimum operating pressure reduced by 30%

By using a lubretainer, the minimum operating pressure is reduced by 30%.

(CY3B40 compared with CY1B40)

Watchmaker's

Auto switch


Mounting screw

M2.5 x 0.45 x 4 e


(precision) screwdriver

## Direct mount type Series CY3R



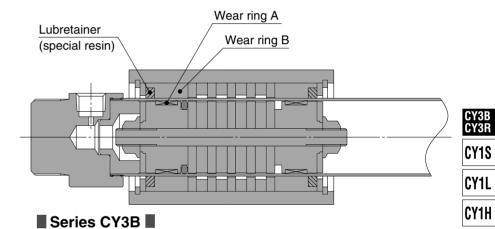

#### **Series Variations**

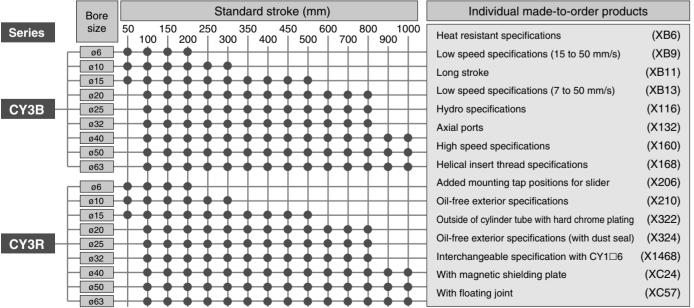

Note) The 
mark indicates the available combination of bore size and standard stroke.

1166

Availability of made to order products varies with the series and the bore size. For more information, please refer to pages 1395 to 1565.

#### Small auto switches are mountable.

Small auto switches can be mounted on the current auto switch mounting groove of the CY3R25 to 63. So, they can be mounted to all of the cylinder sizes in the CY3R series, making inventory control of the product easy.

#### Lightweight

The body weight has been reduced by approximately 10% by eliminating unnecessary body weight and by reducing the outer diameter of the cylinder tube. (Compared with previous ø50 and ø60 models)

D- 🗆

CY1F

CYP

-X□ Technical data






1167



## Series CY3B/CY3R Model Selection 1

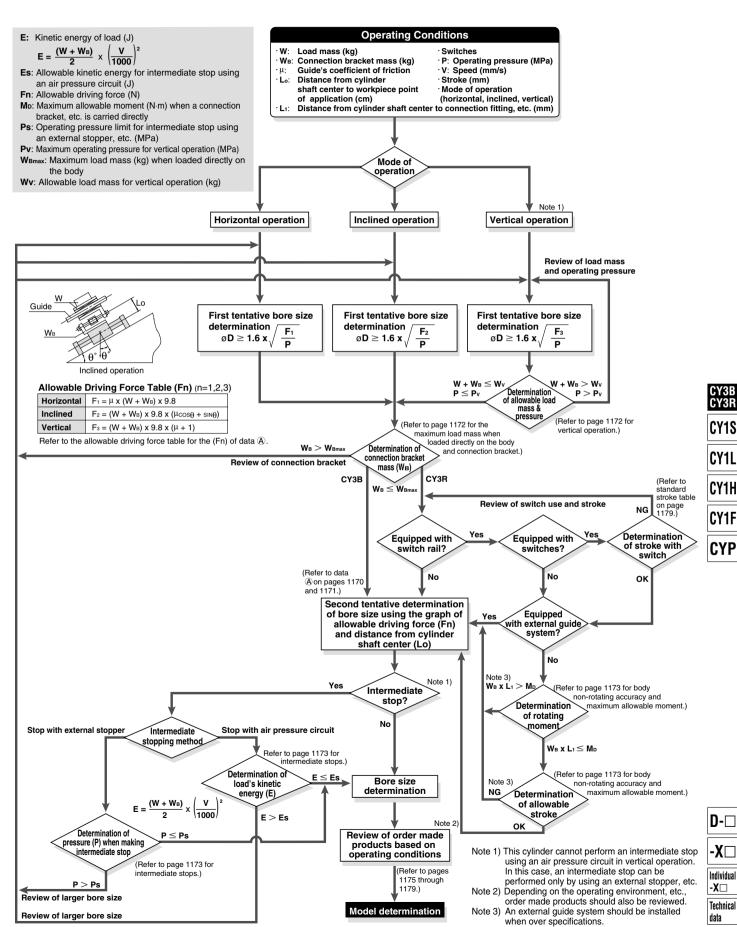


## Series CY3B/CY3R **Model Selection 2**

#### **Precautions on Design 1**

#### **Selection Procedure**

#### Selection procedure

- 1. Find the drive resisting force **Fn** (N) when moving the load horizontally.
- 2. Find the distance Lo (cm) from the point of the load where driving force is applied, to the center of the cylinder shaft.
- 3. Select the bore size from Lo and Fn, based on data (A).

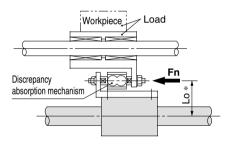


#### Selection example


Given a load drive resisting force of **Fn** = 100 (N) and a distance from the cylinder shaft center to the load application point of Lo = 8 cm, find the intersection point by extending upward from the horizontal axis of data (A) where the distance from the shaft center is 8 cm, and then extending to the side, find the allowable driving force on the vertical axis.


Models suitable in satisfying the requirement of 100 (N) are CY3□32 or CY3□40.


\* The Lo point from the cylinder shaft center is the moment working point between the cylinder and the load section.


#### <Data (A): Distance from cylinder shaft center —— Allowable driving capacity>

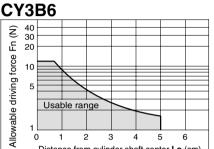


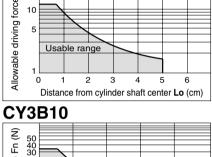


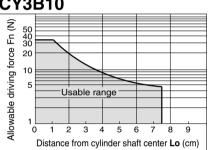


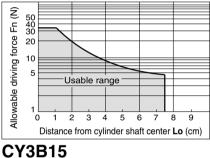


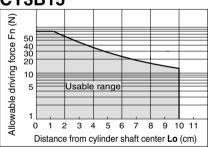


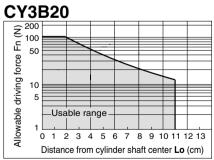


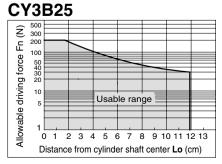

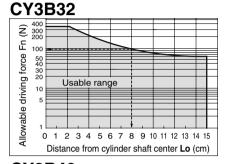

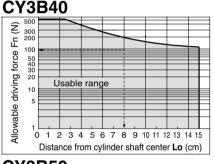

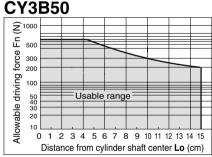

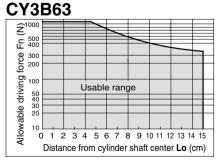




## Magnetically Coupled Rodless Cylinder Series CY3B/CY3R


#### **Precautions on Design 1**

#### <Data f A: Distance from cylinder shaft center —— Allowable driving capacity>




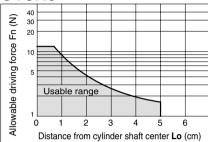


#### **CY3R32**

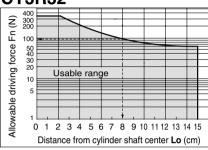


#### **CY3R10**

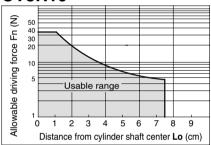


#### **CY3R40**

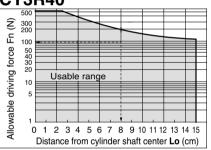


#### **CY3R15**

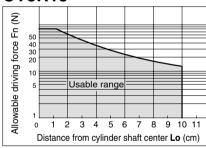


#### **CY3R50**

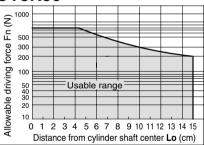


#### **CY3R20**

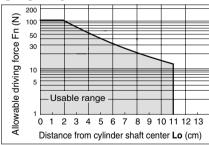

#### **CY3R63**

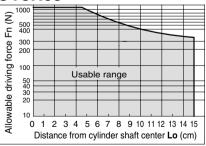

#### **CY3R25**

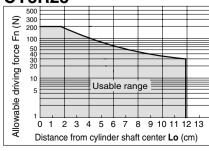



CY1S

CY1L

CY1H

CY1F

**CYP** 

-X□ Individual -X□

Technical data




## Series CY3B/CY3R

## **Model Selection 3**

#### **Precautions on Design 2**

#### **Cylinder Dead Weight Deflection**

When the cylinder is mounted horizontally, deflection appears due to its own weight as shown in the data, and the longer the stroke is, the greater the amount of variation in the shaft center. Therefore, a connection method should be considered which can assimilate this deflection.

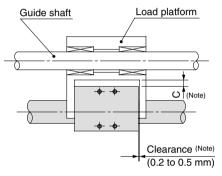

The above clearance amount is a reference value.


Note 1) According to the dead weight deflection in the figure on the right, provide clearance so that the cylinder does not touch the mounting surface or the load, etc., and is able to operate smoothly within the minimum operating pressure range for a full stroke. For more information, refer to instruction manual.

Note 2) In case of the CY3R, install a shim, etc. to eliminate clearance between the body and the switch rail. For more information, refer to the CY3R instruction manual.

Note 3) The amount of deflection differs from the CY1B/CY1R. Adjust the clearance value by referring to the dead weight deflection as shown in the table on the right.

When CY1B/CY1R are replaced with CY3B/CY3R, install a cylinder after confirming a full stroke and clearance are allowed.

# CY3B CY3R CY3R

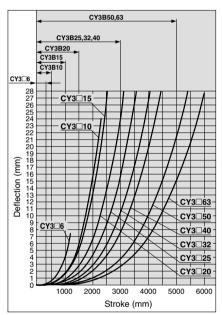


\* The above deflection data represent values at the time when the external sliding part moves to the

#### Vertical Operation

It is recommended that the load is guided by a ball type bearing (linear guide, etc.). If a slide bearing is used, sliding resistance increases due to the load mass and moment, which may cause malfunctions.

When the cylinder is mounted vertically or sidelong, a slider may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or mid-stroke, use an external stopper to secure accurate positioning.

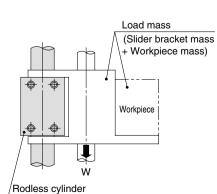

Bore size (mm)	Model	Allowable load mass (Wv) (kg)	Max. operating pressure (Pv) (MPa)
6	CY3□6	1.0	0.55
10	CY3□10	2.7	0.55
15	CY3□15	7.0	0.65
20	CY3□20	11.0	0.65
25	CY3□25	18.5	0.65
32	CY3□32	30.0	0.65
40	CY3□40	47.0	0.65
50	CY3□50	75.0	0.65
63	CY3□63	115.0	0.65

\* Use caution, as there is a danger of breaking the magnetic coupling if operated above the maximum operating pressure.

## Maximum Mass of Connection Bracket to the Body

Series CY3B is guided by an external axis (such as a linear guide) without directly mounting the load. When designing a metal bracket to connect the load, make sure that its weight will not exceed the value in the table below. Basically, guide the CY3R direct mounting type also with an external axis. (For connection methods, refer to the Instruction Manual.)

#### Max. Connection Bracket Mass


Model	Max. connection bracket mass (WBmax) (kg)
CY3□6	0.2
CY3□10	0.4
CY3□15	1.0
CY3□20	1.1
CY3□25	1.2
CY3□32	1.5
CY3□40	2.0
CY3□50	2.5
CY3□63	3.0

Consult with SMC in case a bracket with mass exceeding the above value is to be mounted.

## <CY3R> Maximum Load Mass when Loaded Directly on Body

When the load is applied directly to the body, it should be no greater than the maximum values shown in the table below.

Model	Max. load weight (WBmax) (kg)
CY3R6	0.2
CY3R10	0.4
CY3R15	1.0
CY3R20	1.1
CY3R25	1.2
CY3R32	1.5
CY3R40	2.0
CY3R50	2.5
CY3R63	3.0

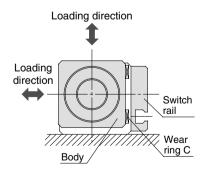



## Magnetically Coupled Rodless Cylinder Series CY3B/CY3R

#### **Precautions on Design 3**

#### **Intermediate Stop**

#### (1) Intermediate stopping of load with an external stopper, etc.

When stopping a load in mid-stroke using an external stopper, etc., operate within the operating pressure limits shown in the table below. Use caution, as operation at a pressure exceeding these limits can result in breaking of the magnetic coupling.

Bore size (mm)	Model	Operating pressure limit for intermediate stop (Ps) (MPa)
6	CY3□6	0.55
10	CY3□10	0.55
15	CY3□15	0.65
20	CY3□20	0.65
25	CY3□25	0.65
32	CY3□32	0.65
40	CY3□40	0.65
50	CY3□50	0.65
63	CY3□63	0.65

#### (2) Intermediate stopping of load with an air pressure circuit

When performing an intermediate stop of a load using an air pressure circuit, operate at or below the kinetic energy shown in the table below. Use caution, as operation when exceeding the allowable value can result in breaking of the magnetic coupling.


(Reference values)

Bore size (mm)	Model	Allowable kinetic energy for intermediate stop (Es) (J)
6	CY3□6	0.007
10	CY3□10	0.03
15	CY3□15	0.13
20	CY3□20	0.24
25	CY3□25	0.45
32	CY3□32	0.88
40	CY3□40	1.53
50	CY3□50	3.12
63	CY3□63	5.07

#### **Stroke End Stopping Method**

When stopping a load having a large inertial force at the stroke end, tilting of the body and damage to the bearings and cylinder tube may occur. (Refer to the left hand drawing below.)

As shown in the right hand drawing below, a shock absorber should be used together with the stopper, and thrust should also be transmitted from the center of the body so that tilting will not occur.

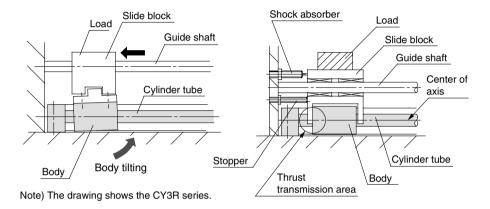

#### <CY3R>

## **Body Non-rotating Accuracy and Maximum Allowable Moment (with Switch Rail)**

(Reference values)

CY1S

CY1L


CY1H

CY1F

**CYP** 

Reference values for non-rotating accuracy and maximum allowable moment at stroke end are indicated below.

Bore size (mm)	Non-rotating accuracy (°)	Max. allowable moment (M₀) (N⋅m)	Note 2) Allowable stroke (mm)
6	7.3	0.02	100
10	6.0	0.05	100
15	4.5	0.15	200
20	3.7	0.20	300
25	3.7	0.25	300
32	3.1	0.40	400
40	2.8	0.62	400
50	2.4	1.00	500
63	2.2	1.37	500

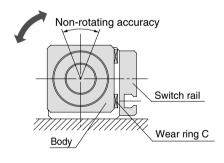

Note 1) Avoid operations where rotational torque (moment) is applied. In such a case, the use of an external guide is recommended.

Note 2) The above reference values will be satisfied within the allowable stroke ranges, but caution is necessary, because as the stroke becomes longer, the inclination (rotation angle) within the stroke can be expected to increase.

Note 3) When a load is applied directly to the body, the loaded weight should be no greater than the allowable load mass on page 1172.




## Magnetically Coupled Rodless Cylinder/ Basic Type

## Series CY3B

ø6, ø10, ø15, ø20, ø25, ø32, ø40, ø50, ø63

#### **How to Order**

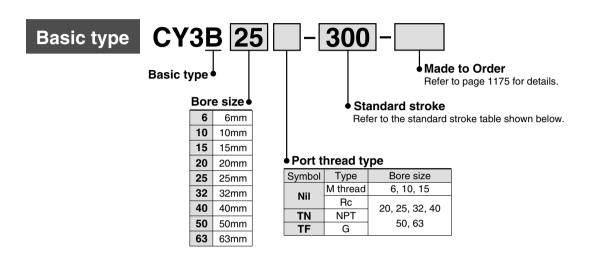

#### **Standard Stroke**

Bore size (mm)	Standard stroke (mm)	Maximum available stroke (mm)
6	50, 100, 150, 200	300
10	50, 100, 150, 200, 250, 300	500
15	50, 100, 150, 200, 250, 300, 350, 400, 450, 500	1000
20		1500
25	100, 150, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800	0000
32	700, 000	3000
40		3000
50	100, 150, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000	5000
63	7.50, 550, 550, 1500	3000

Note 1) Long stroke specification (XB11) applies to the strokes exceeding 2000 mm. (Refer to page 1405.)

Note 2) The longer the stroke, the larger the amount of deflection in a cylinder tube. Pay attention to the mounting bracket and clearance value.


Note 3) Intermediate stroke is available by the 1 mm interval.



## Magnetically Coupled Rodless Cylinder Basic Type Series CY3B

#### **Specifications**



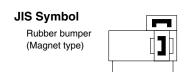



#### **Made to Order** (Refer to pages 1395 to 1565 for details.)

Symbol	Specifications
-XB6	Head resistant cylinder (-10 to 150°C)
-XB9	Low-speed cylinder (15 to 50mm/s)
-XB11	Long stroke type
-XB13	Low-speed cylinder (7 to 50mm/s)
-XC24	With magnetic shielding plate
-XC57	With floating joint
-X116	Hydro specifications
-X132	Axial ports
-X160	High speed specifications
-X168	Helical insert thread specifications
-X206	Added mounting tap positions for slider
-X210	Non-lubricated exterior specifications
-X322	Outside of cylinder tube with hard chrome plating
-X324	Non-lubricated exterior specifications (with dust seal)
-X1468	Interchangeable specification with CY1 ☐6


Bore size (mm)	6	10	15	20	25	32	40	50	63
Fluid					Air				
Proof pressure				1.	.05 MP	'a			
Max. operating pressure				C	).7 MPa	a			
Min. operating pressure	0.16	0.16	0.16	0.16	0.15	0.14	0.12	0.12	0.12
Ambient and fluid temperature	−10 to 60°C (No freezing)								
Piston speed	50 to 500 mm/s								
Cushion	Rubber bumper								
Lubrication	Not required (Non-lube)								
Stroke length tolerance (mm)	0 to 250 st: <sup>+1.0</sup> <sub>0</sub> , 251 to 1000 st: <sup>+1.4</sup> <sub>0</sub> , 1001 st to: <sup>+1.8</sup> <sub>0</sub>								
Mounting orientation	Horizontal, Inclined, Vertical Note)								
Mounting nut (2 pcs.)	Standard equipment (accessory)								
Magnet holding force (N)	19.6 53.9 137 231 363 588 922 1471 2256							2256	

Note) When vertically mounting, it is impossible to perform an intermediate stop by means of a


#### **Theoretical Cylinder Thrust**

When calculating the actual thr-⚠ Caution ust, design should consider the minimum actuating pressure.


#### ø6, ø10

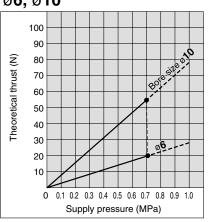

#### Ø15, Ø20, Ø25, Ø32, Ø40

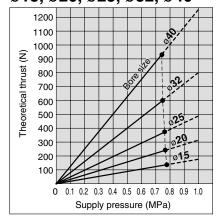

ø**50**, ø**63** 

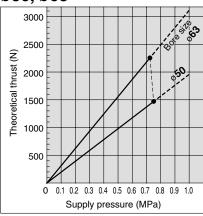

#### Mass

									Unit: kg
Bore size (mm)	6	10	15	20	25	32	40	50	63
Basic mass (at 0 st)	0.052	0.08	0.275	0.351	0.672	1.287	2.07	3.2	5.3
Additional mass per 50 mm of stroke	0.004	0.014	0.015	0.02	0.023	0.033	0.04	0.077	0.096

Calculation method/Example: CY3B32-500

Basic mass......1.287 kg Additional mass ...... 0.033/50 st Cylinder stroke . . . . . . . . . . . . . . . . 500 st

 $1.287 + 0.033 \times 500 \div 50 = 1.617 \text{ kg}$ 

D-□ -X□

CY1S

CY1L

CY1H

CY1F

CYP

Individual




#### Series CY3B


#### Construction


## Basic type CY3B6



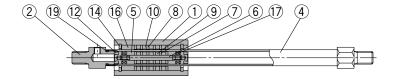



#### CY3B10, 15

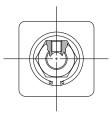


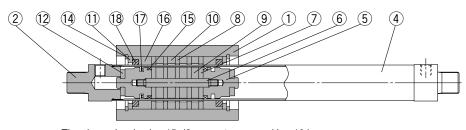


#### CY3B20 to 40

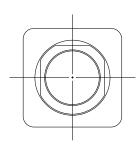


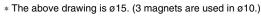

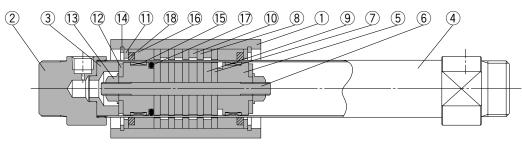

#### CY3B50, 63

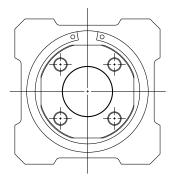

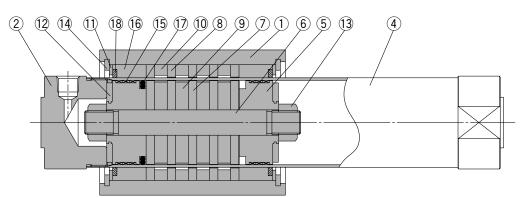

#### **Component Parts**

No.	Description	М	aterial		Note
1	Body	Alum	Aluminum alloy		anodized
2	Head cover	ø6, ø10	Brass		_
	nead cover	ø15 to ø63	Aluminum alloy		
3	End collar	Alum	inum alloy	ø20 to	ø40 only
4	Cylinder tube	Stain	less steel		
5	Piston	ø6	Brass	ø6	Electroless Ni plated
5	PISIOII	ø10 to ø63	Aluminum alloy	ø10 to ø63	Chromated
6	Shaft	Stain	less steel		
7	Piston side yoke	Rolled steel		Zinc chromated	
8	External slider side yoke	Rolled steel		Zinc chromated	
9	Magnet A	_			
10	Magnet B		_		
11	Spacer	Alum	inum alloy	ø6: not available	
12	Bumper	Ureth	ane rubber		
13	Piston nut	Carl	oon steel	ø6 to ø15: not available	
14	C type retaining ring for hole	Carbon tool steel		Phosph	nate coated
15	Wear ring A	Special resin			
16	Wear ring B	Special resin			
17	Piston seal	NBR			
18	Lubretainer	Special resin		ø6: not available	
19	Cylinder tube gasket		NBR	ø6, ø10 only	

#### Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
6	CY3B6-PS	Set of nos. above 15, 16, 17, 19
10	CY3B10-PS	Set of nos. above 15, 16, 17, 18, 19
15	CY3B15-PS	
20	CY3B20-PS	
25	CY3B25-PS	Set of nos. above
32	CY3B32-PS	
40	CY3B40-PS	15, 16, 17, 18
50	CY3B50-PS	
63	CY3B63-PS	

- Note 1) Seal kits are sets consisting of numbers 15 through 19. Order using the kit number corresponding to each bore size.
- Note 2) Adhesive glue is applied to the thread fixed section of the head cover and cylinder tube. Contact SMC if the head cover removal is difficult.
- \* Seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø63: 10 g). Order with the following part number when only the grease pack is

needed.

Grease pack part number for ø6, ø10: GR-F-005 (5 g) For external sliding sections

GR-S-010 (10 g) For tubing


Grease pack part number for ø15 to ø63: GR-S-010 (10 g)


## Magnetically Coupled Rodless Cylinder Basic Type Series CY3B


#### **Dimensions**

#### **Basic type**

#### CY3B6 to 63

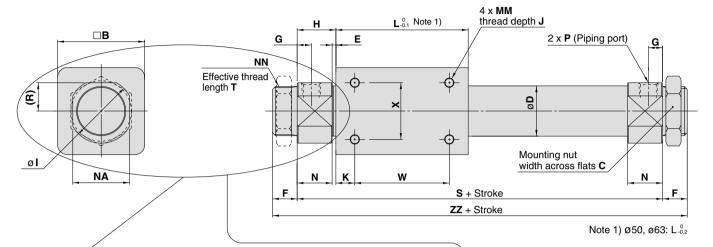

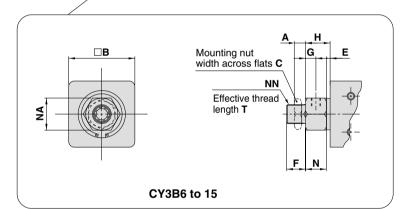

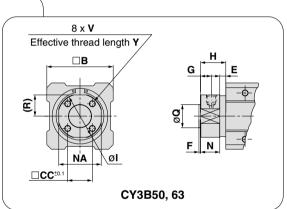

G H E	
-	CY3B CY3R
<b>Q</b>	CY1S
F N H	CY1L
-0.00	CY1H

	CYT	<b>-</b>
١.		

CYP


																						(111111)
Model	Α	В	С	CC	D	Е	F	G	Н	ı	J	K	L	MM	N	NA	NN	Q	R	S	Т	V
CY3B6	4	17	8*	_	7.6	4	8*	5	13.5*	_	4.5	5	35	M3 x 0.5	9.5*	10*	M6 x 1*	_	_	62*	6.5	_
CY3B10	4	25	14	_	12	1.5	9	5	12.5	_	4.5	4	38	M3 x 0.5	11	14	M10 x 1	_	_	63	7.5	_
CY3B15	4	35	14	_	16.6*	2	10	5.5	13	_	6	11	57	M4 x 0.7	11	17	M10 x 1	_	_	83	8	_
CY3B20	8	36	26	_	21.6*	2*	13	7.5*	20	28	6	8	66	M4 x 0.7	18*	24	M20 x 1.5	_	12*	106	10	_
CY3B25	8	46	32	_	26.4*	2*	13	7.5*	20.5	34	8	10	70	M5 x 0.8	18.5*	30	M26 x 1.5	_	15*	111	10	_
CY3B32	8	60	32	_	33.6*		16	8*	22	40	8	15	80	M6 x 1	20*	36	M26 x 1.5	_	18*	124	13	_
CY3B40	10	70	41	_	41.6*	3*	16	11	29	50	10	16	92	M6 x 1	26*	46	M32 x 2		23*	150	13	_
CY3B50	_	86	_	32	52.4*	8	2	14	33	58*	12	25	110	M8 x 1.25	25	55	_	30 -0.007	27.5*	176	_	M8 x 1.25
CY3B63	_	100	_	38	65.4*	8	2	14	33	72*	12	26	122	M8 x 1.25	25	69	_	$32^{-0.007}_{-0.043}$	34.5*	188	_	M10 x 1.5

Madalal	w	х	Υ	ZZ	F	P (Piping port	t)
Model	VV	^	1		Nil	TN*	TF*
CY3B6	25	10	_	78*	M3 x 0.5*	_	_
CY3B10	30	16	_	81	M5 x 0.8	_	_
CY3B15	35	19	_	103	M5 x 0.8	_	_
CY3B20	50	25	_	132	Rc 1/8	NPT 1/8	G 1/8
CY3B25	50	30	_	137	Rc 1/8	NPT 1/8	G 1/8
CY3B32	50	40	_	156	Rc 1/8	NPT 1/8	G 1/8
CY3B40	60	40	_	182	Rc 1/4	NPT 1/4	G 1/4
CY3B50	60	60	16	180	Rc 1/4	NPT 1/4	G 1/4
CY3B63	70	70	16	192	Rc 1/4	NPT 1/4	G 1/4

Note 2) The astrisk denotes the dimensions which are different from the CY1B series.

Note 3) Mounting nuts can be screwed on only for the effective thread length of the head cover (T dimension). When mounting a cylinder, consider the thickness of flange, etc.

#### Mounting Nut/Included in the package (2 pcs).

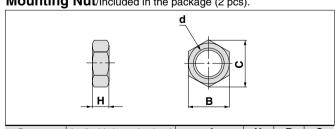

Part no.	Applicable bore size (mm)	d	Н	В	С	
SNJ-006B	6	M6 x 1.0	4	8	9.2	
SNJ-016B	10, 15	M10 x 1.0	4	14	16.2	
SN-020B	20	M20 x 1.5	8	26	30	
SN-032B	25, 32	M26 x 1.5	8	32	37	
SN-040B	40	M32 x 2.0	10	41	47.3	

Note) Mounting nuts are not available for ø50 and ø63.



-X□ Technical




#### Magnetically Coupled Rodless Cylinder/ Direct Mount Type

## Series CY3R

ø6, ø10, ø15, ø20, ø25, ø32, ø40, ø50, ø63

#### **How to Order**

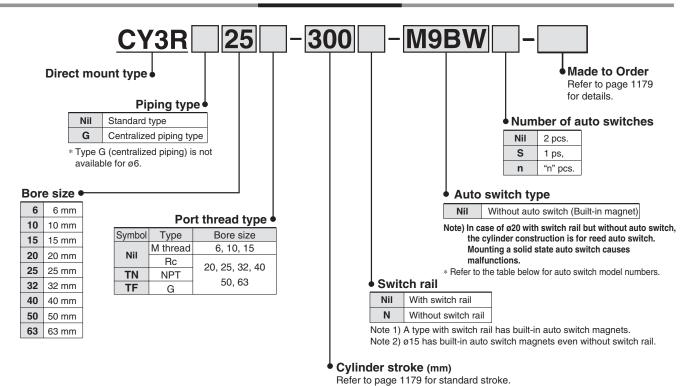

Applicable Auto Switches/Refer to pages 1263 to 1371 for further information on auto switches.

				VA/inim as		_oad voltag		Auto switc	h model	Lead	wire I	ength	(m)	Due wined			
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	ı	DC	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3	5 (Z)	Pre-wired connector	Applica	ble load	
			드	3-wire (NPN)		5 V 40 V		M9NV	M9N	•	•	•	0	0	IC		
				3-wire (PNP)	5 V, 12 V			M9PV	M9P	•	•	•	0	0	circuit		
o l			Vaa	2-wire		12 V		M9BV	M9B	•	•	•	0	0	_		
Solid state switch	Diama attain diami		Yes	3-wire (NPN)	24 V	5 V, 12 V			M9NWV	M9NW	•	•	•	0	0	IC	Relay,
d s	Diagnostic indication (2-color indication)	Grommet		3-wire (PNP)		24 V	_	M9PWV	M9PW	•	•		0	0	circuit	PLC	
io s	(2-color indication)			2-wire		12 V		M9BWV	M9BW	•	•	•	0	0	_	I LO	
S	Water resistant			3-wire (NPN)		5 V, 12 V		M9NAV **		0	0	•	0	0	IC		
	(2-color indication)			3-wire (PNP)		5 V, 12 V		M9PAV **		0	0	•	0	0	circuit		
	(2 dolor indication)			2-wire		12 V		M9BAV **	M9BA **	0	0	•	0	0	_		
_					3-wire	_	5 V		A96V	A96					_	IC	
दंड		Grommet	Yes	(NPN equivalent)	24 V	J V		ASOV	ASO						circuit		
Reed switch		GIOIIIIIEL		2-wire		12 V	100 V	A93V	A93	•	_	•	_	_	_	Relay,	
0,	6		No	Z-WIIG	27 V	12 V	100 V or less	A90V	A90	•		•	-	-	IC circuit	PLC	


<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.


- \* Lead wire length symbols: 0.5 m...... Nil (Example) M9NW
  - 1 m...... M (Example) M9NWM
  - 3 m..... L (Example) M9NWL
  - 5 m..... Z (Example) M9NWZ
- \* Solid state auto switches marked "O" are produced upon receipt of order.
- \* Other than the applicable auto switches listed in "How to Order", the other auto switches can be mounted. For detailed specifications, refer to page 1185.
- \* With pre-wired connector is also available in solid state auto switches. For specifications, refer to pages 1328 to 1329.
- \* The auto switch is shipped together, but not assembled.



## Magnetically Coupled Rodless Cylinder Direct Mount Type Series CY3R


#### **Specifications**

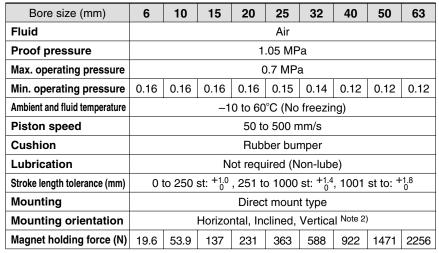

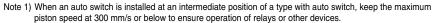

Note 2) When vertically mounting, it is impossible to perform an intermediate stop by means of a pneumatic circuit.



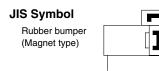

#### Made to Order

#### Made to Order (Refer to pages 1395 to 1565 for details.)

Symbol	Specifications					
-X116	Hydro specifications					
-X160	High speed specifications					
-X322	Outside of cylinder tube with hard chrome plating					
-X1468	Interchangeable specification with CY1□6					
-XC57	With floating joint					

#### **Standard Stroke**

Bore size (mm)	Standard stroke (mm)	Max. stroke without switch (mm)	Max. stroke with switch (mm)		
6	50, 100, 150, 200	300	300		
10	50, 100, 150, 200, 250, 300	500	500		
15	50, 100, 150, 200, 250, 300 350, 400, 450, 500	1000	750		
20		1500	1000		
25	100, 150, 200, 250, 300, 350 400, 450, 500, 600, 700, 800	1500	1200		
32	100, 100, 000, 000, 700, 000				
40	100, 150, 200, 250, 300, 350	2000	1500		
50	400, 450, 500, 600, 700, 800	2000	1500		
63	900, 1000				


Note 1) The longer the stroke, the larger the amount of deflection in a cylinder tube. Pay attention to the mounting bracket and clearance value.


Note 2) Intermediate stroke is available by the 1 mm interval.


#### **Theoretical Cylinder Thrust**

**⚠** Caution

When calculating the actual thrust, design should consider the minimum actuating pressure.

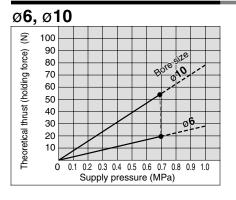

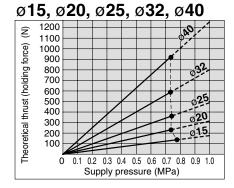

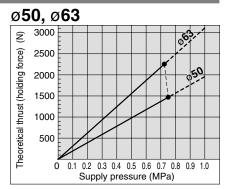

Mass Unit: kg

Bore size (mm)			10	15	20	25	32	40	50	63
Decis mass (at 0 at)	With switch rail	0.086	0.111	0.272	0.421	0.622	1.217	1.98	3.54	5.38
Basic mass (at 0 st)	Without switch rail	0.069	0.08	0.225	0.351	0.542	1.097	1.82	3.25	5.03
Additional mass per 50 mm	With switch rail	0.016	0.034	0.040	0.051	0.056	0.076	0.093	0.159	0.188
of stroke	Without switch rail	0.004	0.014	0.015	0.020	0.023	0.033	0.040	0.077	0.096

Calculation method/Example: CY3R25-500 (with switch rail) Basic mass...0.622 (kg), Additional mass...0.056 (kg/50 st), Cylinder stroke...500 (st)  $0.622 + 0.056 \times 500 \div 50 = 1.182$  (kg)



data

CY1S

CY1L


CY1H

CY1F

CYP

#### Series CY3R

#### Construction

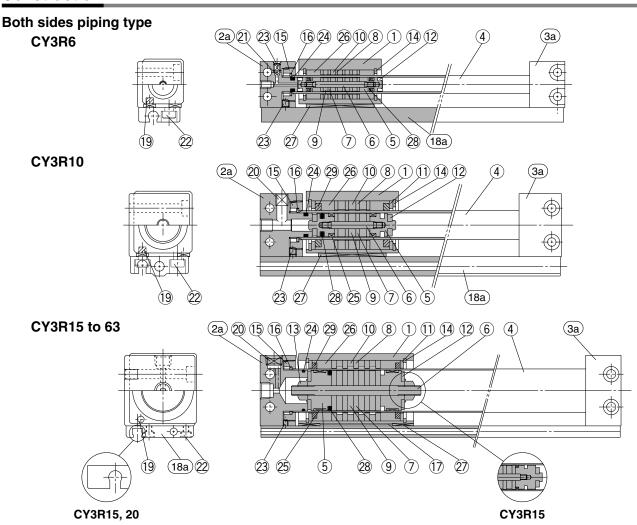

#### **Component Parts**

	Jonioni i arto					
No.	Description	Mat	terial	1	Note	
1	Body	Alumin	um alloy	Hard a	anodized	
2a	End cover A	Alumin	um alloy			
2b	End cover C	Alumin	um alloy			
За	End cover B	Alumin	um alloy			
3b	End cover D	Alumin	um alloy			
4	Cylinder tube	Stainle	ss steel			
5	Piston	ø6	Brass	ø6	Electroless nickel plated	
	riston	ø10 to ø63	Aluminum alloy	ø10 to ø63	Chromate	
6	Shaft	Stainle	ss steel			
7	Piston side yoke	Rolled s	teel plate	Zinc cl	hromated	
8	External slider side yoke	Rolled s	teel plate	Zinc cl	hromated	
9	Magnet A	-	_			
10	Magnet B	-	_			
11	Spacer	Alumin	um alloy	ø6: not	t available	
12	Bumper	Urethan	ne rubber			
13	Piston nut	Carbo	n steel	Zinc chromate (ø6 to ø15: not available)		
14	Type C retaining ring for hole	Carbon	tool steel	Phosphate coated		
15	Attachment ring	Alumin	um alloy	Chr	romate	
16	Type C retaining ring for shaft	Hard st	teel wire			
17	Magnetic shielding plate	Rolled s	teel plate	Chromated (ø6	, ø10: not available)	
18a	Switch rail (both sides piping)	Alumin	um alloy	White	anodized	
18b	Switch rail (centralized piping)	Alumin	um alloy	White	anodized	
19	Magnet	-	_			
_20	Hexagon socket head plug	Chromi	um steel	Nicke	el plated	
21	Steel balls	Chromi	um steel	ø40	Hexagon socket head plug	
				ø20, ø50, ø63		
22	Hexagon socket head screw		um steel	Nickel plated		
23	Hexagon socket head set screw	Chromi	um steel	Nicke	el plated	

No.	Description	Material	Note
24 Note 2)	Cylinder tube Gasket	NBR	
25 Note 2)	Wear ring A	Special resin	ø6: not available
26 Note 2)	Wear ring B	Special resin	
27 Note 2)	Wear ring C	Special resin	
28 Note 2)	Piston seal	NBR	
29 Note 2)	Lubretainer	Special resin	ø6: not available
<b>30</b> Note 2)	Switch rail gasket	NBR	Both sides piping type: None

#### Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
6	CY3R6-PS	Set of nos. above ②, ②, ②, ②
10	CY3R10-PS	
15	CY3R15-PS	
20	CY3R20-PS	
25	CY3R25-PS	Set of nos. above
32	CY3R32-PS	24, 25, 26, 27, 28, 29, 30
40	CY3R40-PS	
50	CY3R50-PS	
63	CY3R63-PS	

Note1) Seal kits are the same for both the both sides piping type and the

Note 1) Seal kits are the same for both the both sides piping type and the centralized piping type.

Note2) Seal kits are sets consisting of numbers 24 through 30. Order using the kit number corresponding to each bore size.

\* Seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø63: 10 g). Order with the following part number when only the grease pack is needed.

Grease pack part number for ø6, ø10: GR-F-005 (5 g) For external sliding sections
GR-S-010 (10 g) For tubing

interior Grease pack part number for ø15 to ø63: GR-S-010 (10 g)





#### **Magnetically Coupled Rodless Cylinder** Direct Mount Type Series CY3R


#### Construction


#### Centralized piping type

#### **CY3RG10**

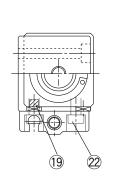

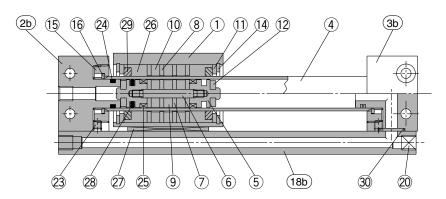

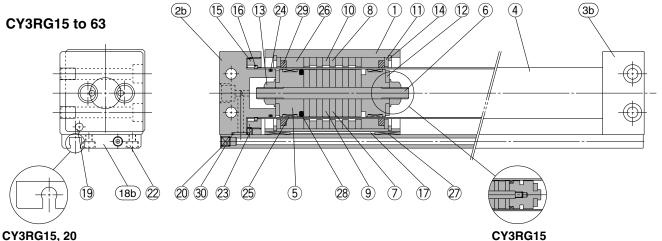

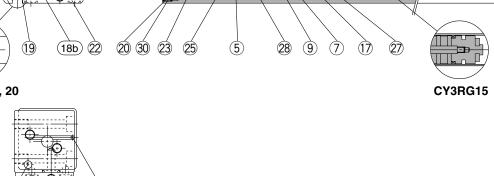

CY1S

CY1L


CY1H

CY1F

**CYP** 

#### **Switch Rail Accessory**

(19)

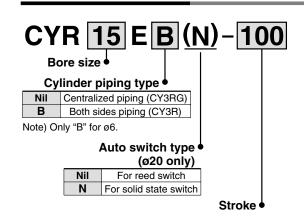

**CY3RG15** 

#### **Switch Rail Accessory Kit**

E	Bore size	Kit	no.	Contents
	(mm)	Both sides piping	Centralized piping	Contents
	6	CYR6EB-□	_	Numbers (18a), (18b), (19, (2), (27) above
	10	CYR10EB-□	CYR10E-□	Numbers (18a), (18b), (19, 20, 22, 27) above
	15	CYR15EB-□	CYR15E-□	Numbers 17, 18a, 18b, 20, 22, 27 above Note 2)
20	For reed switch	CYR20EB-□	CYR20E-□	
20	For solid state switch	CYR20EBN-□	CYR20EN-□	
	25	CYR25EB-□	CYR25E-□	Numbers
	32	CYR32EB-□	CYR32E-□	(7), (18a), (18b), (20), (22), (27) above
	40	CYR40EB-□	CYR40E-□	
	50	CYR50EB-	CYR50E-□	
	63	CYR63EB-□	CYR63E-□	

Note 1)  $\square$  indicates the stroke.

Note 2) A magnet is already built in for ø15.

Note 3) (18a) is attached on both sides piping.

Note 4) (18b) and (20) are attached on centralized piping.




Individual -X□ Technical

#### Series CY3R

#### **Dimensions**

#### Both sides piping type: Ø6 to Ø63

Note) This figure shows types with switch rail (Nil).

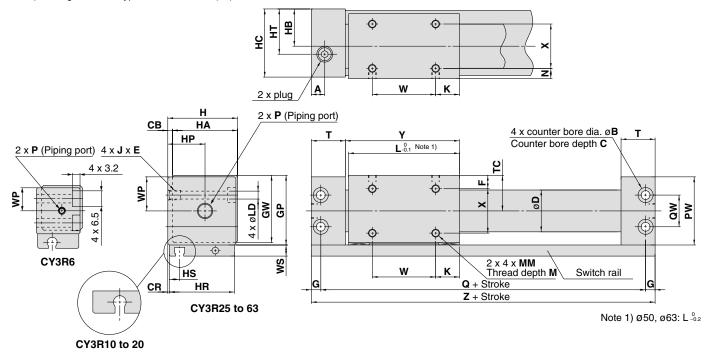

																				(mm)
Model	Α	В	С	СВ	CR	D	F	G	GP	GW	Н	HA	НВ	НС	HP	HR	HS	HT	JxE	K
CY3R6	7*	-*	-*	2	0.5	7.6	5.5	3*	20	18.5	19	17	10.5	18	10.5*	17	6	10.5*	M4 x 0.7 x 6	7
CY3R10	9	6.5	3.2	2	0.5	12	6.5	4	27	25.5	26	24	14	25	14	24	5	14	M4 x 0.7 x 6	9
CY3R15	10.5	8	4.2	2	0.5	16.6*	8	5	33	31.5	32	30	17	31	17	30	8.5	17	M5 x 0.8 x 7	14
CY3R20	9	9.5	5.2	3	1	21.6*	9	6	39	37.5	39	36	21	38	24	36	7.5	24	M6 x 1 x 8	11
CY3R25	8.5	9.5	5.2	3	1	26.4*	8.5	6	44	42.5	44	41	23.5	43	23.5	41	6.5	23.5	M6 x 1 x 8	15
CY3R32	10.5	11	6.5	3	1.5	33.6*	10.5	7	55	53.5	55	52	29	54	29	51	7	29	M8 x 1.25 x 10	13
CY3R40	10	11	6.5	5	2	41.6*	13	7	65	63.5	67	62	36	66	36	62	8	36	M8 x 1.25 x 10	15
CY3R50	14	14	8.2	5	2	52.4*	17	8.5	83	81.5	85	80	45	84	45	80	9	45	M10 x 1.5 x 15	25
CY3R63	15	14	8.2	5	3	65.4*	18	8.5	95	93.5	97	92	51	96	51	90	9.5	51	M10 x 1.5 x 15	24

Model	L	LD	M	ММ	N	PW	Q	QW	Т	TC	W	WP	WS	Х	Υ	Z
CY3R6	34	3.5	3.5	M3 x 0.5	3.5	19	60*	10	14.5*	10.5	20	9.5	6	10	35.5	66*
CY3R10	38	3.5	4	M3 x 0.5	4.5	26	68	14	17.5	14	20	13	8	15	39.5	76
CY3R15	53	4.3	5	M4 x 0.7	6	32	84	18	19	17	25	16	7	18	54.5	94
CY3R20	62	5.4	5	M4 x 0.7	7	38	95	17	20.5	20	40	19	7	22	64	107
CY3R25	70	5.4	6	M5 x 0.8	6.5	43	105	20	21.5	22.5	40	21.5	7	28	72	117
CY3R32	76	7	7	M6 x 1	8.5	54	116	26	24	28	50	27	7	35	79	130
CY3R40	90	7	8	M6 x 1	11	64	134	34	26	33	60	32	7	40	93	148
CY3R50	110	8.6	10	M8 x 1.25	15	82	159	48	30	42	60	41	10	50	113	176
CY3R63	118	8.6	10	M8 x 1.25	16	94	171	60	32	48	70	47	10	60	121	188

	F	(Piping port	:)
Model	Nil	TN*	TF*
CY3R6	M3 x 0.5*	_	_
CY3R10	M5 x 0.8	_	_
CY3R15	M5 x 0.8	_	_
CY3R20	Rc 1/8	NPT 1/8	G 1/8
CY3R25	Rc 1/8	NPT 1/8	G 1/8
CY3R32	Rc 1/8	NPT 1/8	G 1/8
CY3R40	Rc 1/4	NPT 1/4	G 1/4
CY3R50	Rc 1/4	NPT 1/4	G 1/4
CY3R63	Rc 1/4	NPT 1/4	G 1/4


Note 2) The astrisk denotes the dimensions which are different from the CY1R series.



#### **Magnetically Coupled Rodless Cylinder** Direct Mount Type Series CY3R

#### **Dimensions**

#### Centralized piping type: ø10 to ø63

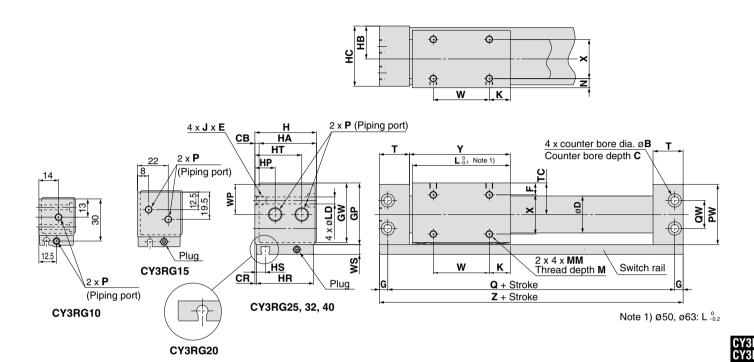

																				(mm)
Model	В	С	СВ	CR	D	F	G	GP	GW	Н	HA	НВ	НС	HP	HR	HS	HT	JxE	K	L
CY3RG10	6.5	3.2	2	0.5	12	6.5	4	27	25.5	26	24	14	25		24	5		M4 x 0.7 x 6	9	38
CY3RG15	8	4.2	2	0.5	16.6*	8	5	33	31.5	32	30	17	31		30	8.5	_	M5 x 0.8 x 7	14	53
CY3RG20	9.5	5.2	3	1	21.6*	9	6	39	37.5	39	36	21	38	11	36	7.5	28	M6 x 1 x 8	11	62
CY3RG25	9.5	5.2	3	1	26.4*	8.5	6	44	42.5	44	41	23.5	43	14.5	41	6.5	33.5	M6 x 1 x 8	15	70
CY3RG32	11	6.5	3	1.5	33.6*	10.5	7	55	53.5	55	52	29	54	20	51	7	41	M8 x 1.25 x 10	13	76
CY3RG40	11	6.5	5	2	41.6*	13	7	65	63.5	67	62	36	66	25	62	8	50	M8 x 1.25 x 10	15	90
CY3RG50	14	8.2	5	2	52.4*	17	8.5	83	81.5	85	80	45	84	32	80	9	56	M10 x 1.5 x 15	25	110
CY3RG63	14	8.2	5	3	65.4*	18	8.5	95	93.5	97	92	51	96	35	90	9.5	63.5	M10 x 1.5 x 15	24	118

Model	LD	M	MM	N	PW	Q	QW	Т	TC	W	WP	ws	Х	Υ	Z
CY3RG10	3.5	4	M3 x 0.5	4.5	26	68	14	17.5	14	20	13	8	15	39.5	76
CY3RG15	4.3	5	M4 x 0.7	6	32	84	18	19	17	25	16	7	18	54.5	94
CY3RG20	5.4	5	M4 x 0.7	7	38	95	17	20.5	20	40	19	7	22	64	107
CY3RG25	5.4	6	M5 x 0.8	6.5	43	105	20	21.5	22.5	40	21.5	7	28	72	117
CY3RG32	7	7	M6 x 1	8.5	54	116	26	24	28	50	27	7	35	79	130
CY3RG40	7	8	M6 x 1	11	64	134	34	26	33	60	32	7	40	93	148
CY3RG50	8.6	10	M8 x 1.25	15	82	159	48	30	42	60	41	10	50	113	176
CY3RG63	8.6	10	M8 x 1.25	16	94	171	60	32	48	70	47	10	60	121	188

Madal	F	P (Piping port	)		
Model	Nil	TN*	TF*		
CY3RG10	M5 x 0.8	_	_		
CY3RG15	M5 x 0.8	_	_		
CY3RG20	Rc 1/8	NPT 1/8	G 1/8		
CY3RG25	Rc 1/8	NPT 1/8	G 1/8		
CY3RG32	Rc 1/8	NPT 1/8	G 1/8		
CY3RG40	Rc 1/4	NPT 1/4	G 1/4		
CY3RG50	Rc 1/4	NPT 1/4	G 1/4		
CY3RG63	Rc 1/4	NPT 1/4	G 1/4		

Note 2) The astrisk denotes the dimensions which are different from the CY1RG series.



D-□ -X□ Individual

CY1S

CY1L


CY1H

CY1F

CYP

#### Series CY3B/CY3R

#### **Auto Switch Proper Mounting Position for Stroke End Detection**

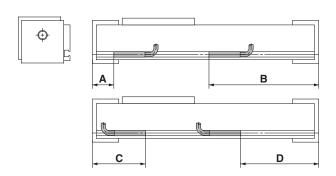

(Reference dimension)

## Auto Switch Proper Mounting Position $\emptyset 6$ to $\emptyset 20$

(mm)

Auto switch model		4		В		С	D		
Bore size (mm)	<b>D-A</b> 9□	D-M9□ D-M9□W D-M9□AL	<b>D-A</b> 9□	D-M9 D-M9 W D-M9 AL	D-A9□	D-M9□ D-M9□W D-M9□AL	<b>D-A</b> 9□	D-M9□ D-M9□W D-M9□AL	
6	26	30	46	42	46	42	26	30	
10	28	32	48	44	48	44	_	32	
15	17.5	21.5	76.5	72.5	_	_	56.5	60.5	
20	19.5 23.5		87.5 83.5		39.5 35.5		67.5	71.5	

Note 1) Auto switches cannot be installed in Area C in the case of ø15.

Note 2) D-A9  $\square$  type cannot be mounted on the section D of ø10.

Note 3) The above values are a guideline of the auto switch mounting position when detected at the stroke end. Adjust the auto switch after confirming the operating conditions in the actual setting.

Note 4) D-Z7□ and D-Y□ types cannot be mounted.

Ø**25 to** Ø**63** (mm)

Auto switch		Α			В			С		D			
Bore size (mm)	<b>D-A9</b> □	D-M9 D-M9 W D-M9 AL	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	D-A9□	D-M9 D-M9 D-M9 D-M9	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W		D-M9 D-M9 D-M9 AL	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	<b>D-A9</b> □	D-M9□ D-M9□W D-M9□AL	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	
25	19	23	18	98	94	99	42	38	43	75	79	74	
32	22.5	26.5	21.5	107.5	103.5	108.5	45.5	41.5	46.5	84.5	88.5	83.5	
40	24.5	28.5	23.5	123.5	119.5	124.5	47.5	43.5	48.5	100.5	104.5	99.5	
50	28.5	32.5	27.5	147.5	143.5	148.5	51.5	47.5	52.5	124.5	128.5	123.5	
63	30.5	34.5	29.5	157.5	153.5	158.5	53.5	49.5	54.5	134.5	138.5	133.5	

Note 1) 50 mm is the minimum stroke available with 2 auto switches mounted.

Note 2) Figures in the table above are used as a reference when mounting the auto switches for stroke end detection. In the case of actually setting the auto switches, adjust them after confirming their operation.

Note 3) Auto switch brackets are required when ordering D-A9□/M9□/M9□AL types and cylinders separately. (Refer to the auto switch mounting bracket: part no. on page 1185.)

## Magnetically Coupled Rodless Cylinder Series CY3B/CY3R

#### **Auto Switch Operation Range**


									(mm)				
		Bore size (mm)											
Auto switch model	6	10	15	20	25	32	40	50	63				
D-A9□	8	11	8	6	6	7	9	8	8				
D-M9□													
D-M9□W	4.5	6.5	6.5	4	5	5.5	5.5	6.5	7				
D-M9□AL													
D-Z7□/Z80	_	_	_	_	9	9	11	9	10				
D-Y59\(\to\)/Y7P/Y7\(\to\)W	_	_	_	_	5	5	6	6	6				

- \* The auto switches cannot be mounted in some cases.
- $\ast$  Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately  $\pm30\%$  dispersion). It may vary substantially depending on an ambient environment.

## Auto Switch Mounting Bracket/Part No.

Auto switch model	Bore size (mm)
Auto Switch model	ø <b>25 to</b> ø <b>63</b>
D-A9□ D-M9□ D-M9□W D-M9□AL	BMG2-012

D-A9 M9 M9 W/M9 AL

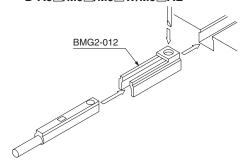

Other than the applicable auto switches listed in "How to Order", the following auto switches can be mounted. For detailed specifications, refer to pages 1263 to 1371.

	, 1 0			
Туре	Model	Electrical entry	Features	Applicable bore size
Dood outs suitab	D-Z73, Z76	Grommet (In-line)	_	
Reed auto switch	D-Z80	Grommer (m-ine)	Without indicator light	
	D-Y59A, Y59B, Y7P		_	ø25 to ø63
Solid state auto switch	D-Y7NW, Y7PW, Y7BW	Grommet (In-line)	Diagnostic indication (2-color display)	

- \* With pre-wired connector is also available in solid state auto switches. For specifications, refer to pages 1328 and 1329.
- \* Normally closed (NC = b contact), solid state switch (D-F9G/F9H/Y7G/Y7H type) are also available. For details, refer to pages 1290 and 1292.
- Applicable bore sizes are ø25 to ø63.

CY3B CY3R

CY1L

CY1H CY1F

CYP



Individual
-X
Technical





## Series CY3B/CY3R Specific Product Precautions 1

Be sure to read before handling. Refer to front matters 54 and 55 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

#### Handling

#### **⚠** Warning

1. Pay attention to the space between the head cover and the body.

Take sufficient care to avoid getting your hands or fingers caught when the cylinder is operated.

2. Do not apply a load to a cylinder which is greater than the allowable value stated in the Model Selection.

Applying an improper load may cause malfunctions.

- When the cylinder is used in a place where water or cutting oil may splash it or the lubrication on its sliding parts could be deteriorate, please consult with SMC.
- 4. When applying grease to the cylinder, use the grease that has already been applied to the product. Contact SMC for available grease packs.

#### Mounting

#### **⚠** Caution

1. Take care to avoid nicks or other damage on the outside surface of the cylinder tube.

This can lead to damage of the wear ring and lubretainer, which in turn can cause malfunction.

2. Take care regarding rotation of the external slider.

Rotation should be controlled by connecting it to another shaft (linear guide, etc.).

3. Do not operate with the magnetic coupling out of position.

In case the magnetic coupling is out of position, push the external slider back into the correct position by hand at the end of the stroke (or correct the piston slider with air pressure).

- 4. The cylinder is mounted with bolts through the mounting holes in the end covers. Be sure they are tightened securely. (CY3R)
- If gaps occur between the mounting surface and the end covers when mounting with bolts, perform shim adjustment using spacers, etc. so that there is no unreasonable stress. (CY3R)
- 6. Be sure that both end covers are secured to the mounting surface before operating the cylinder.


Avoid operation with the external slider secured to the surface.

#### Mounting

#### **⚠** Caution

7. Do not apply a lateral load to the external slider.

When a load is mounted directly to the cylinder, variations in the alignment of each shaft center cannot be assimilated, which results in the generation of a lateral load that can cause malfunction. (Figure 1) The cylinder should be operated using a connection method which allows for assimilation of shaft alignment variations and deflection due to the cylinder's own mass. A drawing of a recommended mounting is shown in Figure 2.

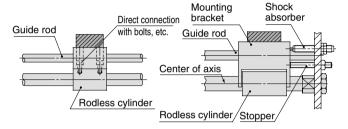

Variations in the load and cylinder shaft alignment cannot be assimilated, resulting in malfunction.

Shaft alignment variations are assimilated by providing clearance for the mounting bracket and cylinder. Moreover, the mounting bracket is extended above the cylinder shaft center, so that the cylinder is not subjected to moment.

Figure 1. Incorrect mounting
Note) The drawing shows the
CY3B series.

Figure 2. Recommended mounting

8. Use caution regarding the allowable load mass when operating in a vertical direction.

The allowable load mass when operating in a vertical direction (reference values on page 1172) is determined by the model selection method, however, if a load greater than the allowable value is applied, the magnetic coupling may break and there is a possibility of dropping the load. When using this type of application, contact SMC regarding the operating conditions (pressure, load, speed, stroke, frequency, etc.).

Careful alignment is necessary when connecting to a load having an external guide mechanism.

As the stroke becomes longer, variations in the center axis become larger. Consider using a connection method (floating mechamism) that is able to absorb these variations. Furthermore, use the special floating brackets (XC57) which have been provided for the CY3B and CY3R series (page 1483).





## Series CY3B/CY3R Specific Product Precautions 2

Be sure to read before handling. Refer to front matters 54 and 55 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

#### **Disassembly & Maintenance**

#### ⚠ Warning

1. Use caution as the attractive power of the magnets is very strong.


When removing the external slider and piston slider from the cylinder tube for maintenance, etc., handle with caution, since the magnets installed in each slider have very strong attractive power.

#### **⚠** Caution

1. When reattaching the head covers after disassembly, confirm that they are tightened securely. (CY3B)

When disassembling, hold the wrench flat section of one head cover with a vise, and remove the other cover using a spanner or adjustable angle wrench on its wrench flat section. When retightening, first coat with Locktight (No. 542 red), and retighten 3 to 5° past the original position prior to removal.

2. Special tools are necessary for disassembly. (CY3R)

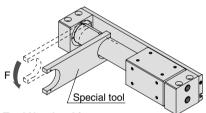

Special Tool Number List

Part no.	Applicable bore size (mm)
CYRZ-V	6, 10, 15, 20
CYRZ-W	25, 32, 40
CYRZ-X	50
CYRZ-Y	63

3. Use caution when taking off the external slider, as the piston slider will be directly attracted to it.

When removing the external slider or piston slider from the cylinder tube, first force the sliders out of their magnetically coupled positions and then remove them individually while there is no longer any holding force. If they are removed when still magnetically coupled, they will be directly attracted to one another and will not come apart.

4. Do not disassemble the magnetic components (piston slider, external slider).

This can cause a loss of holding force and malfunction.


5. When disassembling to replace the seals and wear ring, refer to the separate disassembly instructions.

#### **Disassembly & Maintenance**

#### **⚠** Caution

Note the direction of the external slider and piston slider.

Since the external slider and piston slider are directional for  $\emptyset 6$  and  $\emptyset 10$ , refer to the figures below when performing disassembly or maintenance. Put the external slider and piston slider together, and insert the piston slider into the cylinder tube so that they will have the correct positional relationship as shown in Figure 3. If they align as shown in Figure 4, insert the piston slider after turning it around  $180^\circ$ . If the direction is not correct, it will be impossible to obtain the specified holding force.

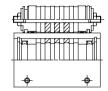

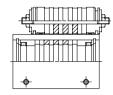


Figure 3. Correct position

Figure 4. Incorrect position

For ø6 and ø10



CY1L

CY1H

CY1F

CYP



Individual
-X 
Technical

