## 5 Port Solenoid Valve





Series VF3000

Reduced power consumption:


O 55 W [With power saving circuit]

O 55 W [standard]

(conventional: 2.0 W) \* With DC light

Power consumption is reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 40 ms at 24 VDC.) Refer to electrical power waveform as shown below.

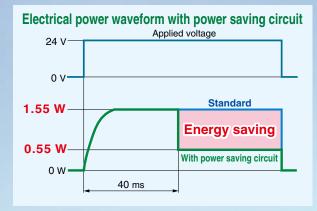

## **Built-in full-wave rectifier (AC)**


Noise reduction

Noise is considerably reduced by changing it to DC mode with a full-wave rectifier.

Reduced apparent powerConventional: 5.6 va → 1.55 va

## **Built-in strainer in the pilot valve**

Unexpected troubles due to foreign matter can be prevented. Note) Be sure to mount an air filter on the inlet side.

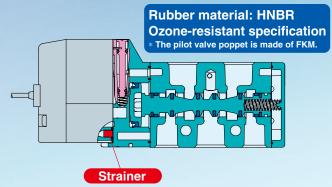



Series VF1000/3000/5000



# **Model Selection by Operating Conditions** 1



## **Single Unit**

	Series	Sonic conductance C [dm³/(s·bar)]	Type of actuation	Port size	Voltage	Electrical entry	Light/Surge voltage suppressor	Manual override										
	VF1000	0.76	2-position single  VF1000  (B)2 4(A)  (EB)3 15(EA)  VF3000  VF5000  (A)4 2(B)  (EA)5 1 3(EB)  2-position double	M5 x 0.8 1/8							.8			Grommet  L-type plug connector	voltage suppressor			
Body ported	VF3000	4.0	VF1000  (B)2 4(A)  (EB)3 1 5(EA)  VF3000  VF5000  (A)4 2(B)  (EA)5 1 3(EB)  3-position closed center  (A)4 2(B)	1/8 1/4		M-type plug connector	DC	Non-locking push type	Pag									
	VF5000	8.8	(EA)5 1 3(EB)  3-position exhaust center (A)4 2(B) (EA)5 1 3(EB)  (EA)5 1 3(EB) (EA)5 1 3(EB)	1/4 3/8	12 VDC 24 VDC 24 VAC 100 VAC 200 VAC 110 VAC 220 VAC 240 VAC	DIN terminal	■ With surge voltage suppressor ■ With light/surge voltage suppressor ■ With surge voltage suppressor (Non-polar) ■ With light/surge voltage suppressor (Non-polar) AC	Push-turn locking slotted type										
ounted	VF3000	3.1	2-position single  (A)4 2(B)  (EA)5 1 3(EB)  (EA)5 1 3(EB)  (EA)5 1 3(EB)  3-position closed center  (A)4 2(B)  (EA)5 1 3(EB)  (EA)5 1 3(EB)	1/4 3/8		DIN (EN1753 01-803) terminal	■ With light/surge voltage suppressor	Push-turn locking lever type										
Base mounted	VF5000	9.4	(EA)5 1 3(EB)  3-position pressure center (A)4 2(B) (EA)5 1 3(EB) (EA)5 1 3(EB)	1/4 3/8 1/2		Conduit terminal			Page									












# **Model Selection by Operating Conditions 2**




## **Manifold**

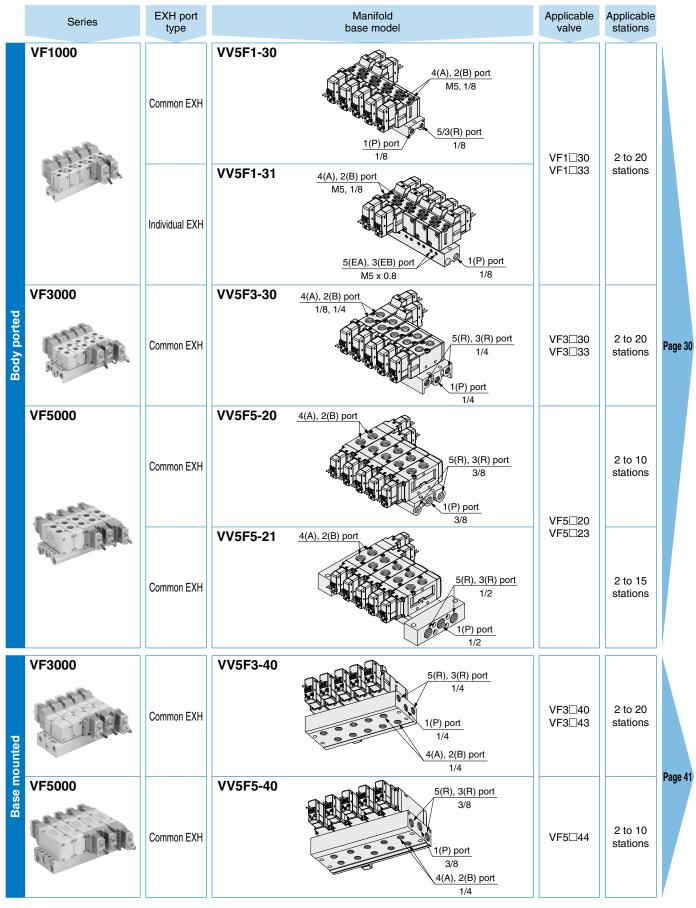

# **Cylinder Speed Chart** 1


Use as a guide for selection. Please check the actual conditions with SMC Model Selection Program.

**Body Ported** 

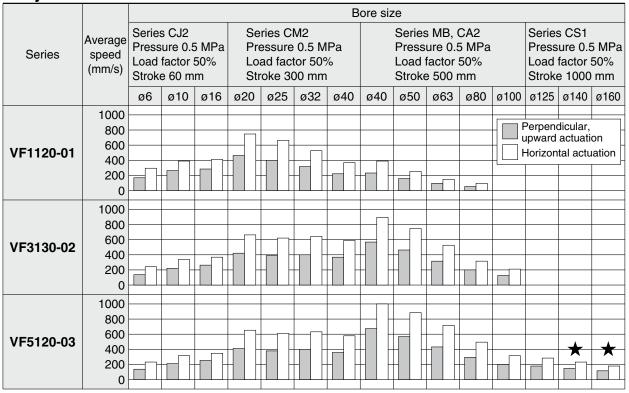

<sup>\*</sup> With ★: when using steel piping

#### **Base Mounted**

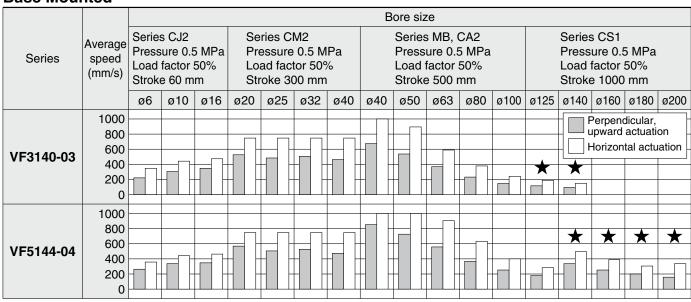

<sup>\*</sup> With ★: when using steel piping

# **Cylinder Speed Chart 2**

Use as a guide for selection. Please check the actual conditions with SMC **Conditions** Model Selection Program.

## **Body Ported**

Body ported		Series CJ2	Series CM2	Series MB, CA2	Series CS1
	Tubing x Length	T0604 x 1 m	T0806	_	
VF1120-01	Speed controller	AS3002F-06	AS300	_	
	Silencer		AN101-01	_	
	Tubing x Length	T0604 x 1 m	T1075	_	
VF3130-02	Speed controller	AS3002F-06 AS4002F-10		_	
	Silencer		AN110-01		_
	Tubing x Length T0604 x 1 m		T1075 x 1 m	T1209	) x 1 m
VF5120-03	Speed controller AS3002F-06		AS4002F-10 AS40		)2F-12
	Silencer		AN30-03	AN302-03	

## **Body Ported [when using SGP (Steel Piping)]**

E	Series CS1			
	Tubing x Length	SGP10A x 1 m		
VF5120-03	Speed controller	AS420-03		
	Silencer	AN30-03		

#### **Base Mounted**

Base mounted		Series CJ2 Series CM2		Series MB, CA2	Series CS1			
	Tubing x Length	T0604 x 1 m T1075 x 1 m		T1209 x 1 m	_			
VF3140-03	Speed controller	AS3002F-06 AS4002F-10		AS4002F-12	_			
	Silencer		AN30-03		_			
	Tubing x Length	T0604 x 1 m	T1075 x 1 m	T1209	x 1 m			
VF5144-04	Speed controller	AS3002F-06 AS4002F-10			AS4002F-12			
	Silencer	AN40-04						

## **Base Mounted [when using SGP (Steel Piping)]**

Ва	Series CS1	
	Tubing x Length	SGP10A x 1 m
VF3140-03	Speed controller	AS420-03
	Silencer	AN30-03
	Tubing x Length	SGP15A x 1 m
VF5144-04	Speed controller	AS420-04
	Silencer	AN40-04



## **Pilot Operated 5 Port Solenoid Valve**


# Series VF1000/3000/5000 Single Unit

**Body Ported** 

**How to Order Valve** 

Note) Only DIN and conduit terminal types are available with AC mode. Refer to the electrical entry for details



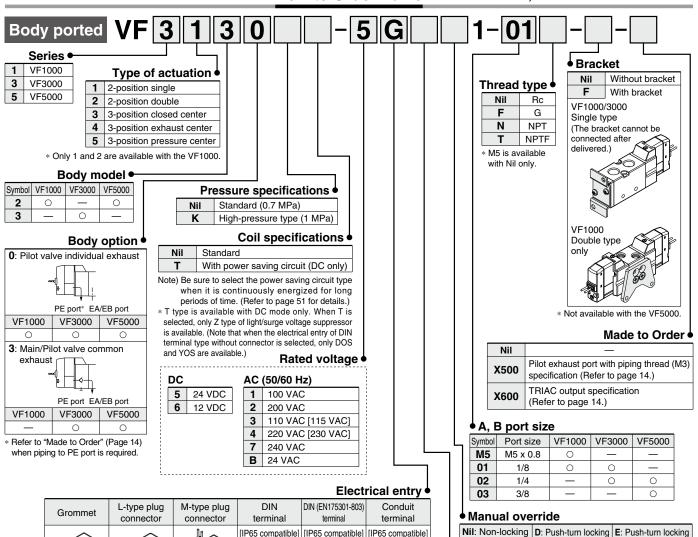

## Light/Surge voltage suppressor

Symbol	Light/Surge voltage suppressor	DC	AC
Nil	Without light/surge voltage suppressor	0	0
S	With surge voltage suppressor	0	Note)
Z	With light/surge voltage suppressor	0	0
R	With surge voltage suppressor (Non-polar)	0	_
U	With light/surge voltage suppressor (Non-polar)	0	

slotted type

lever type

Note) S type is not available with AC mode, since a rectifier prevents surge voltage generation.

\* In the DIN terminal type, since a light is installed in the connector, DOZ, DOU, YOZ, YOU are not available.

## Caution

push type

When using the surge voltage suppressor type, residual voltage will remain. Refer to page 51

#### G: Lead wire length 300 mm H: Lead wire length 600 mm Without light/ surge voltage suppressor

G: Lead wire

H: Lead wire length 600 mm

length 300 mm

LO: Without connector

Without lead wire

LN:

L: With lead wire

(length 300 mm)

MO.

Without connector

MN:


M: With lead wire

(length 300 mm)

Without lead wire





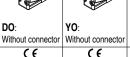

D: With connector Y: With connector

\* LN and MN types are with 2 sockets.

\* Refer to page 49 when different length of lead wire for L/M-type plug connector is required.

\* Refer to page 50 for details on the DIN (EN175301-803) terminal.

Note 1) When using IP65, select the main/pilot valve common exhaust type. (Except VF1000) Note 2) With the same specifications as the DC type, all electrical entries for the 24 VAC type are CE marking compliant.



CE DC



### **Specifications**

	Мо	odel	VF1000 VF3000 VF5000			
Fluid				Air		
Operating	Standard	2-position single/3-position		0.15 to 0.7		
pressure		2-position double		0.1 to 0.7		
range	High- pressure	2-position single/3-position		0.15 to 1.0		
(MPa)	type	2-position double		0.1 to 1.0		
Ambient ar	nd fluid te	mperature (°C)	-10	to 50 (No freezi	ng)	
Max. opera	ting	2-position single/double	10	10	5	
frequency	(Hz)	3-position	1	3	3	
Manual ove	erride		Non-locking push type Push-turn locking slotted type Push-turn locking lever type			
Pilot exhau	st type		Individual exhaust, Main/Pilot valve common exhaust (Except VF1000)			
Lubrication	1		Not required			
Mounting orientation			Unrestricted			
Impact/Vib	Impact/Vibration resistance (m/s²) Note)			300/50		
Enclosure			Dustproof (IP65* for D, Y, T)			

Note) Impact resistance:

No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at

the right angles to the main valve and armature. (Values at the initial period) 

\* Based on IEC 60529. When using IP65, select the main/pilot valve common exhaust type.

## **Made to Order** (Refer to page 14 for details.)

Symbol	Specification
X500	Pilot exhaust port with piping thread (M3) specification
X600	TRIAC output specification

## **Solenoid Specifications**

Electrical entry	,		Grommet (G), (H) L-type plug connector (L) M-type plug connector (M)	DIN terminal (D) DIN (EN175301-803) terminal (Y) Conduit terminal (T)		
			G, H, L, M	D, Y, T		
Coil rated		DC	24,	12		
voltage (V)	voltage (V) AC (50/60		24, 100, 110,	200, 220, 240		
Allowable voltage fluctuation			±10% of rat	ed voltage*		
Power con-	DC	Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)		
sumption (W)	ЪС	With power saving circuit	0.55 (With light only)	0.75 (With light only)		
		24 V	1.5 (With light: 1.55)	1.5 (With light: 1.75)		
		100 V				
Apparent	AC	110 V [115 V]				
power (VA)*	AC	200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)		
		220 V [230 V]				
		240 V				
Surge voltage	supp	ressor	Diode (Non-polar type: Varistor)			
Indicator light			LED (Neon light is used for AC mode of D, Y, T.)			

- \* It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.
- \* Allowable voltage fluctuation is –15% to +5% of the rated voltage for 115 VAC or 230 VAC.

  \* Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range. 24 VDC: -7% to +10% 12 VDC: -4% to +10%

## **Response Time**

			_			Response time (ms	s) (at 0.5 MPa)	
Series	Type of actuation		Pressure	Operating pressure	Without light/surge	With light/surge v	AC	
			specifications	range (MPa)	voltage suppressor	S, Z type	R, U type	AC
		Single	Standard	0.15 to 0.7	20	45	23	45
VF1000	2-position	Double	Stariuaru	0.1 to 0.7	12	12	12	12
VF1000	2-position	Single	High-pressure	0.15 to 1.0	23	48	26	48
		Double	type	0.1 to 1.0	15	15	15	15
	2-position	Single		0.15 to 0.7	20	45	23	45
		Double	Standard	0.1 to 0.7	12	12	12	12
VF3000	3-position			0.15 to 0.7	30	55	33	55
VF3000	2-position	Single		0.15 to 1.0	23	48	26	48
		Double	High-pressure	0.1 to 1.0	15	15	15	15
	3-position		type	0.15 to 1.0	33	58	36	58
	2-position	Single		0.15 to 0.7	30	55	33	55
	2-position	Double	Standard	0.1 to 0.7	15	15	15	15
VF5000	3-pc	sition		0.15 to 0.7	50	75	53	75
VI-3000	2-position	Single		0.15 to 1.0	33	58	36	58
	2-position	Double	High-pressure	0.1 to 1.0	18	18	18	18
	3-position		type	0.15 to 1.0	53	78	56	78

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)



## Flow-rate Characteristics/Weight


			Port	size	Flow-rate characteristics Note 1)					Maight (a) Note 2)			
Maharana da I	_		1.4.0		1 →	4/2 (P →	A/B)	4/2 → 5/	/3 (A/B	EA/EB)	vveight	Weight (g) Note 2)	
Valve model	Type of actuation		1, 4, 2 (P, A, B)	5, 3 (EA, EB)	C [dm³/ (s·bar)]	b	Cv	C [dm³/ (s·bar)]	b	Cv	Grommet	DIN terminal	
VE1=00 ME	2-	Single	ME	x 0.8	0.49	0.40	0.13	0.52	0.35	0.13	140	176	
VF1□20-M5	position	Double	IVIO.	X U.O	0.49	0.40	0.13	0.52	0.35	0.13	200	272	
VE4=00.04	2-	Single	1/8	M5 x 0.8	0.76	0.22	0.17	0.53	0.28	0.13	136	172	
VF1□20-01	position	Double	1/8	IVIS X U.8	0.76	0.22	0.17	0.53	0.28	0.13	196	268	
	2-	Single			3.0	0.38	0.78	2.8	0.30	0.67	182	218	
	position	Double			3.0	0.38	0.78	2.8	0.30	0.67	243	315	
		Closed center			2.4	0.31	0.64	1.8	0.37	0.46	260	332	
VF3□30-01	3- position	Exhaust center	1	/8	2.6	0.37	0.70	3.0 [2.5]	0.32 [0.28]	0.76 [0.62]	260	332	
	pooluon	Pressure center			3.0 [1.4]	0.42 [0.44]	0.83 [0.39]	2.4	0.27	0.59	260	332	
	2- position	Single			4.0	0.36	1.0	3.1	0.32	0.75	178	214	
		Double			4.0	0.36	1.0	3.1	0.32	0.75	239	311	
		Closed center			2.4	0.45	0.68	1.9	0.37	0.47	256	328	
VF3□30-02	3- position	Exhaust center	1/4	1/8	3.0	0.42	0.82	3.1 [2.7]	0.36 [0.29]	0.79 [0.66]	256	328	
	pooluon	Pressure center			5.5 [1.4]	0.37 [0.50]	1.4 [0.40]	2.6	0.32	0.64	256	328	
	2-	Single		•	7.1	0.46	1.9	7.7	0.51	2.2	313	349	
	position	Double			7.1	0.46	1.9	7.7	0.51	2.2	368	440	
		Closed center			6.7	0.46	1.8	6.6	0.41	1.8	406	478	
VF5□20-02	3- position	Exhaust center	1	/4	7.1	0.42	1.9	8.0 [7.4]	0.45 [0.47]	2.2 [2.1]	406	478	
	position	Pressure center			6.8 [2.7]	0.51 [0.50]	2.0 [0.78]	5.7	0.37	1.4	406	478	
	2-	Single			8.8	0.44	2.4	10.0	0.49	2.9	299	335	
	position	Double			8.8	0.44	2.4	10.0	0.49	2.9	354	426	
		Closed center			7.5	0.43	2.0	7.5	0.38	1.9	391	463	
VF5□20-03	3- position	Exhaust center	3	/8	8.3	0.40	2.2	10.0 [8.7]	0.48 [0.46]	3.0 [2.4]	391	463	
	55511	Pressure center			9.2 [3.0]	0.50 [0.49]	2.6 [0.85]	6.1	0.35	1.6	391	463	

Note 1) [ ]: Normal position Note 2) Values without bracket




## **Construction: Body Ported**

# 2-position single Symbol 2-position single VF1000 (EB)3 1 5(EA) (EB)3 1 5(EA) (EA)5 1 3(EB) (EA)5 1 3(EB) (EB)6 1 3(EB)

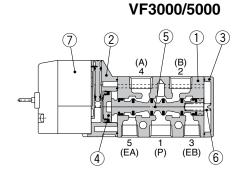

#### 2-position double

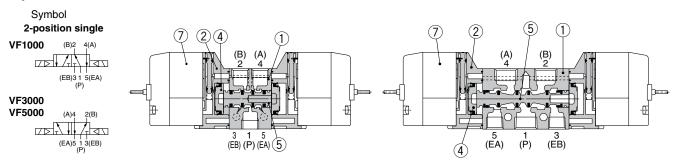

#### 3-position closed center/exhaust center/pressure center


Symbol

#### 3-position closed center



#### 3-position exhaust center



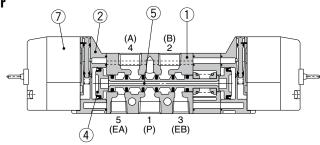

(Drawing shows a closed center type.)

## 3-position pressure center



#### **Component Parts**

No.	Description	Material	Note				
1	Body	Aluminum die-casted					
2	Adapter plate	Resin	Gray				
3	End plate	Resin (VF313□-F VF1120-F: Aluminum die-casted )	White				
4	Piston	Resin					
5	Spool valve	Aluminum, HNBR					
6	Spring	Stainless steel					

#### **Replacement Parts**

No. Description		Part no.	Note
7	Pilot valve assembly	Refer to "How to Order Pilot Valve Assembly" on page 5.	Built-in strainer

#### **Bracket Assembly Part No.**


<b>_</b>	
Description	Part no.
Bracket (for VF1000 double)	DXT144-8-1A (With 2 mounting screws)



## How to Order Pilot Valve Assembly (With a gasket and two mounting screws)



When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

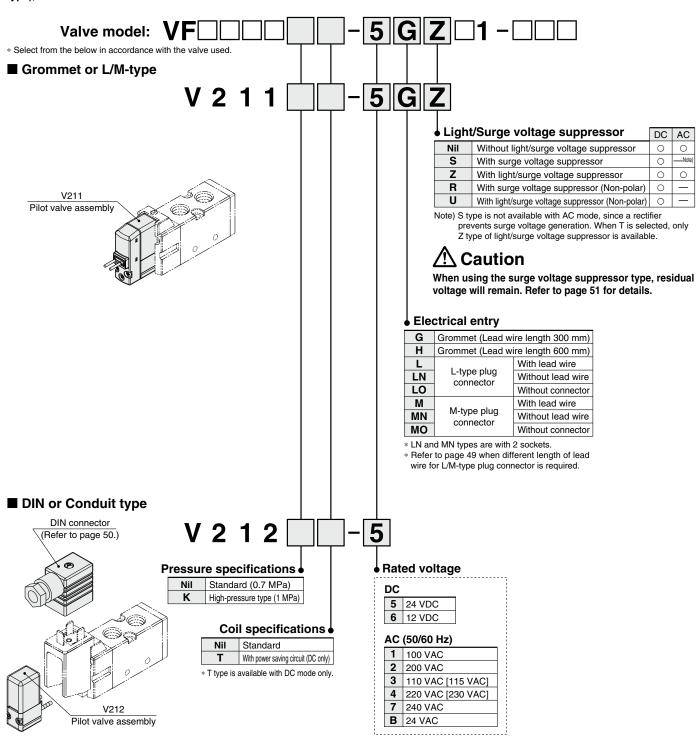

## **⚠** Caution


For V212 (DIN or Conduit type), the coil specifications and voltage (including light/surge voltage suppressor) cannot be changed by replacing the pilot valve assembly.




5

### **Dimensions: Series VF1000/Body Ported**

#### 2-position single

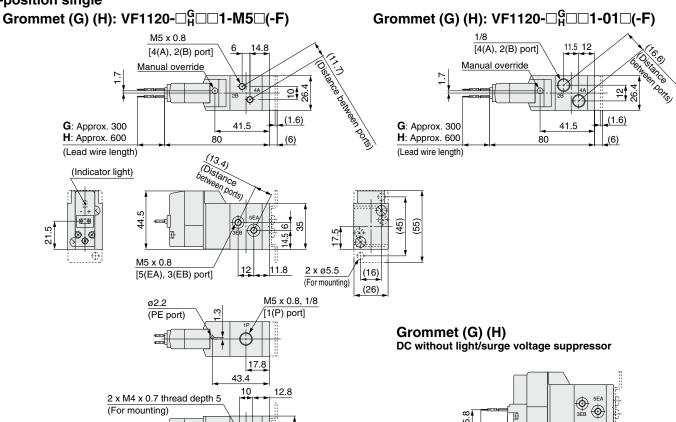

12.5

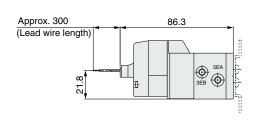

Unless otherwise indicated, dimensions are the same as Grommet (G).


## L-type plug connector (L): VF1120- $\square$ L $\square$ 1- $^{M5}_{01}\square$ (-F) DIN terminal (D) (Y): VF1120- $\square^D_Y\square$ 1- $^{M5}_{01}\square$ (-F)

81.2


**G**: Approx. 300

**H**: Approx. 600


(Lead wire length)

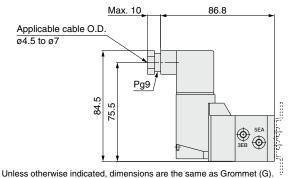

## M-type plug connector (M): VF1120- $\square$ M $\square$ 1- $^{M5}_{01}\square$ (-F) Conduit terminal (T): VF1120- $\square$ T $\square$ 1- $^{M5}_{01}\square$ (-F)

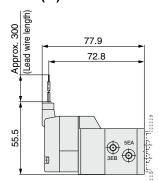

Unless otherwise indicated, dimensions are the same as Grommet (G).

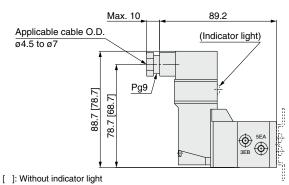




### **Dimensions: Series VF1000/Body Ported**

#### 2-position double




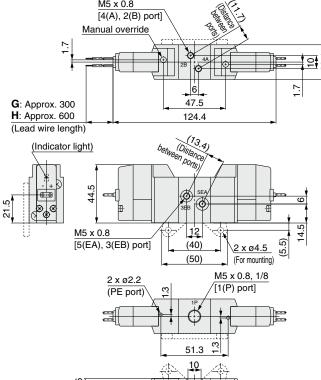

# G: Approx. 300 H: Approx. 600 Grommet (G) (H): VF1220 G: Approx. 300 H: Approx. 600 G: VF1220 G: Approx. 300 H: Approx. 600

(Lead wire length)


## Grommet (G) (H) DC without light/surge voltage suppressor

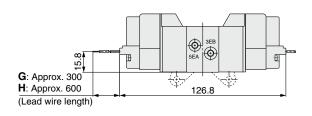


## L-type plug connector (L): VF1220-□L□□1-<sup>M5</sup>□

 $/2 \times M4 \times 0.7$  thread depth 5


(For mounting bracket)

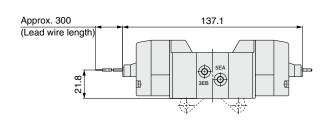


Unless otherwise indicated, dimensions are the same as Grommet (G).

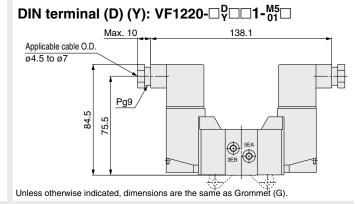

## M-type plug connector (M): VF1220-□M□□1-M5□

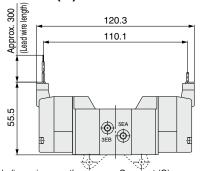

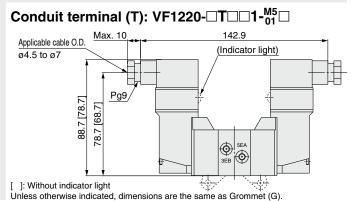





### **Dimensions: Series VF3000/Body Ported**

#### 2-position single

Grommet (G) (H): VF3130- $\Box_{H}^{G}\Box\Box$ 1- $\frac{01}{02}\Box$  (-F)

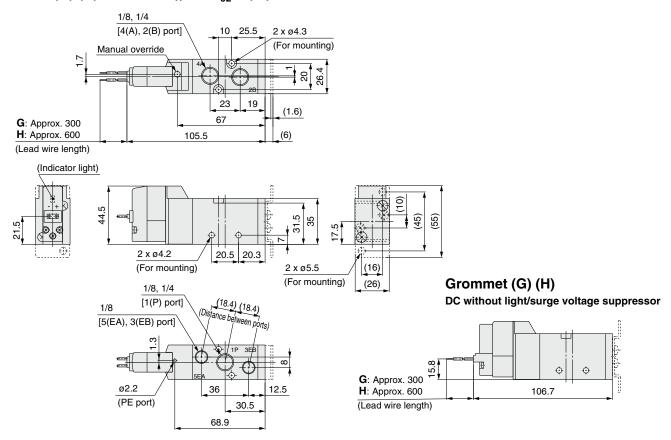


## L-type plug connector (L): VF3130-\(\subseteq\)L\(\subseteq\)1-\(\frac{01}{02}\subsete\) (-F)

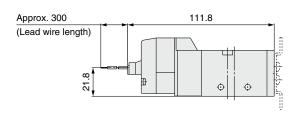


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF3130- $\square_Y^D\square\square$ 1- $^{01}_{02}\square$ (-F)

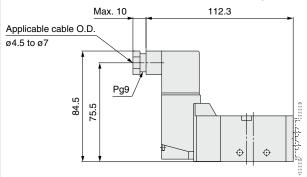


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M): VF3130- $\square$ M $\square$ 1- $^{01}_{02}\square$ (-F)

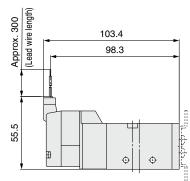

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF3130-□T□□1-<sup>01</sup><sub>02</sub>□ (-F)

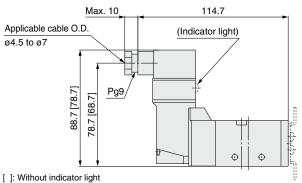






### **Dimensions: Series VF3000/Body Ported**

#### 2-position double


Grommet (G) (H): VF3230-□<sup>G</sup><sub>H</sub>□□1-<sup>01</sup><sub>02</sub>□

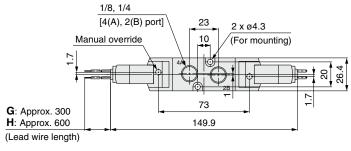

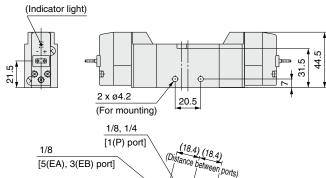


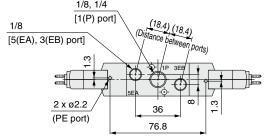

## Grommet (G) (H) DC without light/surge voltage suppressor

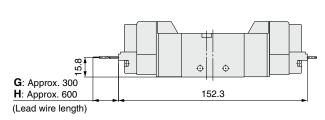


## L-type plug connector (L): VF3230-\(\subseteq\)L\(\subseteq\)1-\(\frac{01}{02}\)

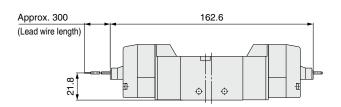


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF3230- $\square_Y^D\square 1_{02}^{01}\square$

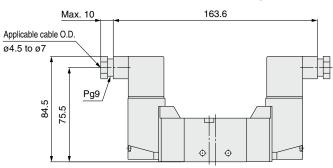


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF3230-□M□□1-0101□□1-010□1-010□1-010□1

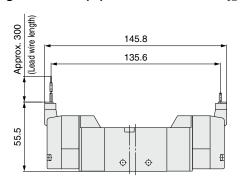

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF3230-□T□□1-<sup>01</sup><sub>02</sub>□

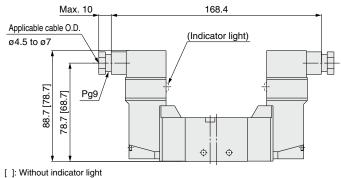





## **Dimensions: Series VF3000/Body Ported**

#### 3-position closed center/exhaust center/pressure center

Grommet (G) (H): VF3 $\frac{3}{4}$ 30- $\square_{H}^{G}\square\square$ 1- $\frac{01}{02}\square$ 

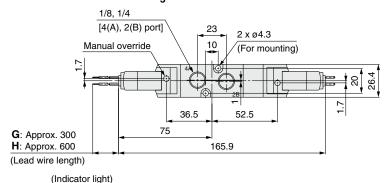

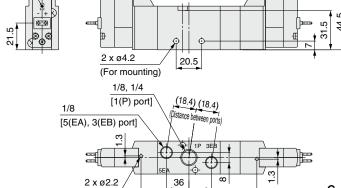


38.4

54.4


## Grommet (G) (H)

DC without light/surge voltage suppressor

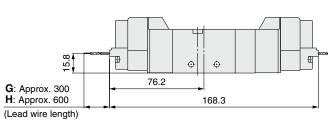


## L-type plug connector (L): VF3 $\frac{3}{5}$ 30- $\square$ L $\square$ 1- $\frac{01}{02}$ $\square$

(PE port)

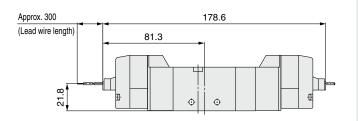


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF3 $_5^3$ 30- $\Box_Y^D\Box\Box$ 1- $_{02}^{01}\Box$

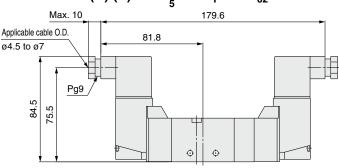


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF3 $_{5}^{3}$ 30- $\square$ M $\square$ 1- $_{02}^{01}$ $\square$

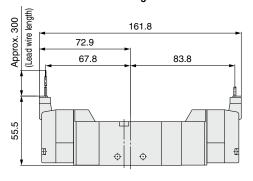

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF3 $\frac{3}{5}$ 30- $\Box$ T $\Box$ D1- $\frac{01}{02}$

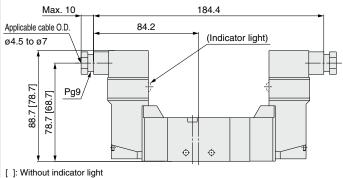






### **Dimensions: Series VF5000/Body Ported**

#### 2-position single

Grommet (G) (H): VF5120- $\Box_{H}^{G}\Box\Box$ 1- $_{03}^{02}\Box$ 

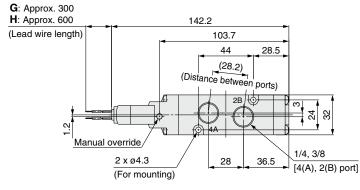


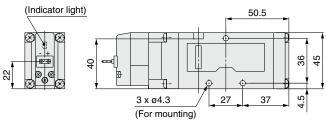

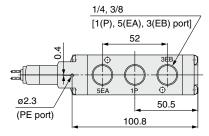


#### Grommet (G) (H)

DC without light/surge voltage suppressor

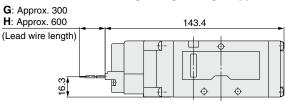


## L-type plug connector (L): VF5120-\(\subseteq\) L\(\subseteq\) 1-\(\frac{02}{03}\)

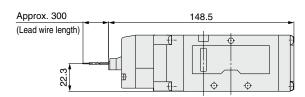


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF5120- $\square_Y^D\square$ 1- $^{02}_{03}\square$

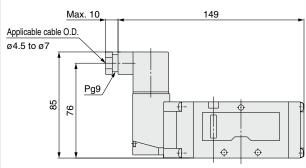


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF5120-□M□□1-<sup>02</sup>□

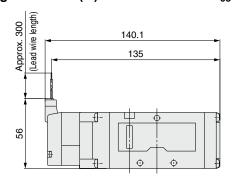

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF5120-□T□□1-020□

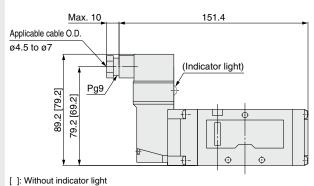





### **Dimensions: Series VF5000/Body Ported**

#### 2-position double


Grommet (G) (H): VF5220- $\Box_{H}^{G}\Box\Box$ 1- $_{03}^{02}\Box$ 

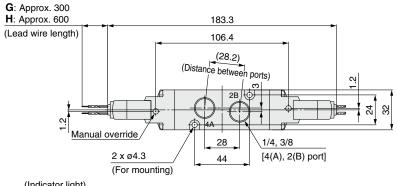

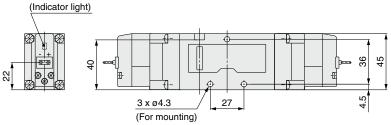


## Grommet (G) (H)

DC without light/surge voltage suppressor

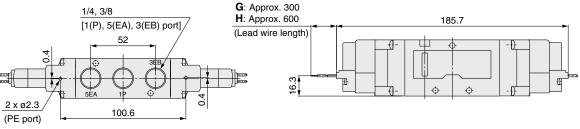


## L-type plug connector (L): VF5220-□L□□1-<sup>02</sup><sub>03</sub>□

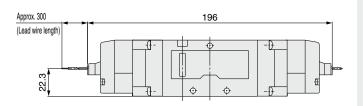


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF5220- $\square_Y^D\square\square1$ - $^{02}_{03}\square$

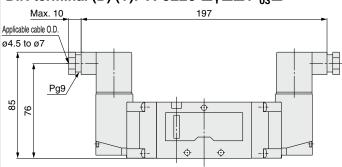


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF5220-□M□□1-<sup>02</sup><sub>03</sub>□

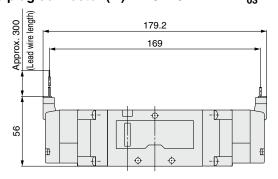

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF5220-□T□□1-<sup>02</sup>□

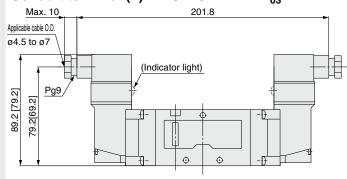


[ ]: Without indicator light Unless otherwise indicated, dimensions are the same as Grommet (G).




## **Dimensions: Series VF5000/Body Ported**

#### 3-position closed center/exhaust center/pressure center



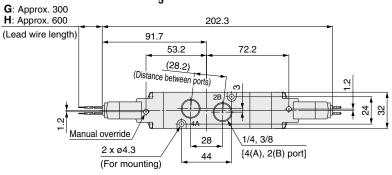


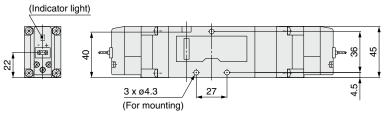

1/4, 3/8


[1(P), 5(EA), 3(EB) port]/

69.3

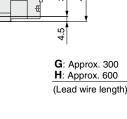

### Grommet (G) (H)


DC without light/surge voltage suppressor

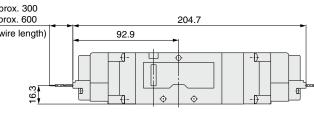

## L-type plug connector (L): VF5 $\frac{3}{5}$ 20- $\square$ L $\square$ 1- $\frac{02}{03}$


 $2 \times \emptyset 2.3$ 

(PE port)

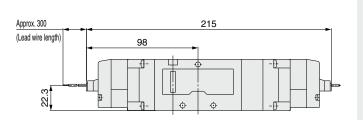


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF5 $\frac{3}{4}$ 20- $\Box^{D}_{Y}\Box\Box$ 1- $\frac{02}{03}\Box$

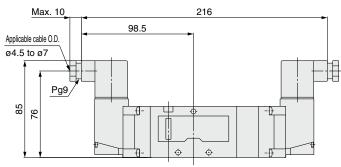


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF5<sup>3</sup>/<sub>5</sub>20-□M□□1-<sup>02</sup><sub>03</sub>□

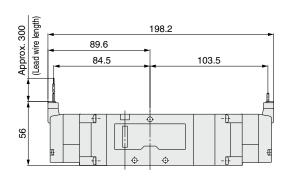

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF5<sup>3</sup>/<sub>5</sub>20-□T□□1-<sup>02</sup><sub>03</sub>□

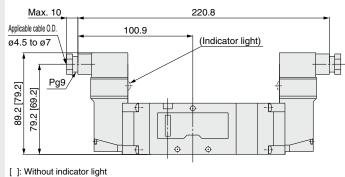



## **Made to Order**







## Body Ported Pilot Exhaust Port with Piping Thread (M3) Specification

In this specification, piping to the pilot exhaust port (PE port) is available when the valve is used in an environment where the exhaust from the pilot valve is not allowable, or intrusion of ambient dust should be prevented.

Combination with low wattage specification is not possible.

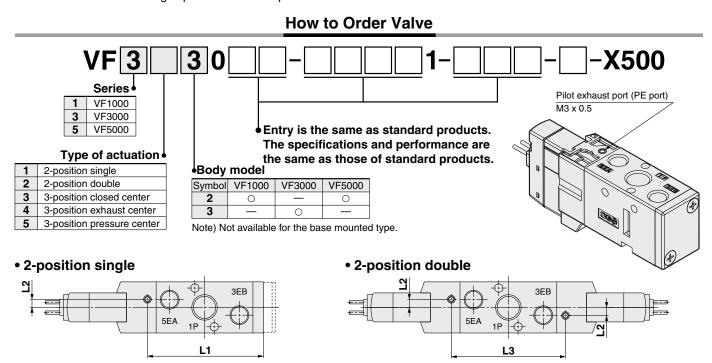


#### 3-position closed center/exhaust center/pressure center

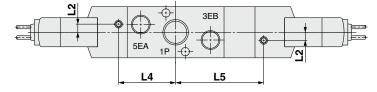

Se	ries	L1	L2	L3	L4	L5
VF1	1000	34.5	4.2	33.4	_	_
VF3	3000	60	4.2	59	29.5	45.5
VF	5000	95	3.45	89	44.5	63.5

## 2 TRIAC Output Specification

For AC type valve, use this specification when the pilot valve is not recovered even though valve power supply is turned OFF at the equipment using output unit with large leakage voltage over 8% of the rated voltage (TRIAC output such as PLC or SSR, etc.). Combination with low wattage specification is not possible.

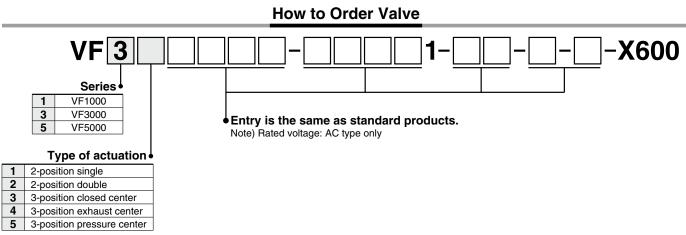

## **Pilot Operated 5 Port Solenoid Valve**

# Series VF3000/5000 Single Unit

**Base Mounted** 

PE port


VF5000

VF3000

**How to Order Valve** 

Note) Only DIN and conduit terminal types are available with AC mode. Refer to the electrical entry for details



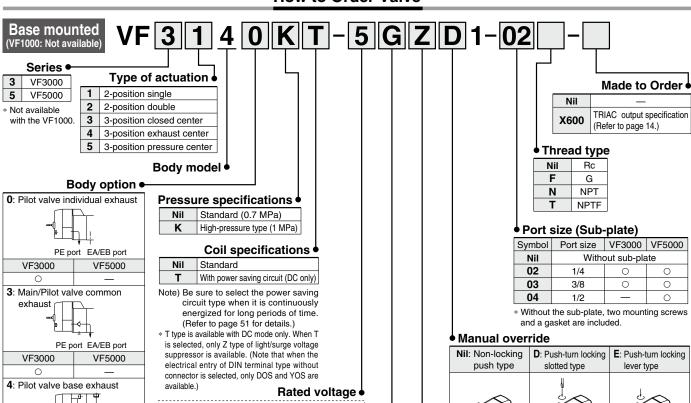

#### Flectrical entry

					Electi	ricai entry •
	Grommet	L-type plug connector	M-type plug connector	DIN terminal	DIN (EN175301-803) terminal	Conduit terminal
				[IP65 compatible]	[IP65 compatible]	[IP65 compatible]
	G: Lead wire length 300 mm H: Lead wire length 600 mm	L: With lead wire (length 300 mm)	M: With lead wire (length 300 mm)	D: With connector	Y: With connector	T: Conduit terminal
	G: Lead wire	LN: Without lead wire	MN: Without lead wire			
	length 300 mm  H: Lead wire length 600 mm DC Without light/					
	surge voltage suppressor	LO: Without connector	MO: Without connector	<b>DO</b> : Without connector	<b>YO</b> : Without connector	
CE DC	( €	(€	(€	(€	(€	(€
compliant AC Note 2)		_		(€	(€	(€

AC (50/60 Hz)

100 VAC

200 VAC

240 VAC

24 VAC

110 VAC [115 VAC] 220 VAC [230 VAC]

1

2

4

В

DC

5 24 VDC

6 12 VDC

Light/Surge voltage suppressor

	<u> </u>		
Symbol	Light/Surge voltage suppressor	DC	AC
Nil	Without light/surge voltage suppressor	0	0
S	With surge voltage suppressor	0	Note)
Z	With light/surge voltage suppressor	0	0
R	With surge voltage suppressor (Non-polar)	0	_
U	With light/surge voltage suppressor (Non-polar)	0	

Note) S type is not available with AC mode, since a rectifier prevents surge voltage generation.

\* In the DIN terminal type, since a light is installed in the connector, DOZ, DOU, YOZ, YOU are not available.

## <u>∕!\</u> Caution

When using the surge voltage suppressor type, residual voltage will remain. Refer to page 51 for details.

- \* LN and MN types are with 2 sockets.
- \* Refer to page 49 when different length of lead wire for L/M-type plug connector is required.
- Refer to page 50 for details on the DIN (EN175301-803) terminal. Note 1) When using IP65, select the main/pilot valve common exhaust type or pilot valve base exhaust type.
- Note 2) With the same specifications as the DC type, all electrical entries for the 24 VAC type are CE marking compliant.







Symbol	Specification
X600	TRIAC output specification

## **Specifications**

	N	Model	VF3000	VF5000			
Fluid			Air				
Operating	Standard	2-position single/3-position	0.151	to 0.7			
pressure	Stariuaru	2-position double	0.1 to 0.7				
range	High- pressure	2-position single/3-position	0.151	to 1.0			
(MPa)	type	2-position double	0.1 to	o 1.0			
Ambient a	nd fluid te	emperature (°C)	-10 to 50 (N	No freezing)			
Max. opera		2-position single/double	10	5			
frequency	(Hz)	3-position	3	3			
			Non-locking push type				
Manual ov	erride		Push-turn locking slotted type				
			Push-turn locking lever type				
Pilot exhau	ust type		Individual exhaust, Main/ Pilot valve common exhaust	Pilot valve base exhaust			
Lubricatio	n		Not required				
Mounting orientation			Unrestricted				
Impact/Vibration resistance (m/s²) Note)			300/50				
Enclosure			Dustproof (IP65* for D, Y, T)				

Note) Impact resistance:

No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was

performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

 $* \ \text{Based on IEC 60529}. \ \text{When using IP65, select the main/pilot valve common exhaust type or pilot valve base exhaust type.} \\$ 

## **Solenoid Specifications**

			Grommet (G), (H)	DIN terminal (D)	
			L-type plug connector (L)	DIN (EN175301-803) terminal (Y)	
Electrical entry	/		M-type plug connector (M)	Conduit terminal (T)	
			G, H, L, M	D, Y, T	
Coil rated		DC	24,	12	
voltage (V)		AC (50/60 Hz)	24, 100, 110,	200, 220, 240	
Allowable voltage fluctuation			±10% of rated voltage*		
Power con-	DC	Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)	
sumption (W)		With power saving circuit	0.55 (With light only)	0.75 (With light only)	
		24 V	1.5 (With light: 1.55)	1.5 (With light: 1.75)	
		100 V			
Apparent		110 V [115 V]			
power (VA)*	AC	200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)	
		220 V [230 V]			
		240 V			
Surge voltage	sup	pressor	Diode (Non-polar type: Varistor)		
Indicator light			LED (Neon light is used for AC mode of D, Y, T.)		

- \* It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.
- \* Allowable voltage fluctuation is –15% to +5% of the rated voltage for 115 VAC or 230 VAC.

## **Response Time**

	Type of actuation		D	0 "	Response time (ms) (at 0.5 MPa)				
Series			Pressure specifications	Operating pressure	Without light/surge	Without light/surge   With light/surge voltage su		AC	
			opcomodions	range (MPa)	voltage suppressor	S, Z type	R, U type	AC	
		Single	Standard	0.15 to 0.7	20	45	23	45	
VF1000	2-position	Double	Statiuatu	0.1 to 0.7	12	12	12	12	
VI 1000	2-005111011	Single	High-pressure	0.15 to 1.0	23	48	26	48	
		Double	type	0.1 to 1.0	15	15	15	15	
	2-position	Single		0.15 to 0.7	20	45	23	45	
	2-position	Double	Standard	0.1 to 0.7	12	12	12	12	
VF3000	3-position			0.15 to 0.7	30	55	33	55	
VI-3000	2-position	Single	Lliede encessine	0.15 to 1.0	23	48	26	48	
		Double	High-pressure type	0.1 to 1.0	15	15	15	15	
	3-position		,,,,,	0.15 to 1.0	33	58	36	58	
	2-position	Single		0.15 to 0.7	30	55	33	55	
	2-position	Double	Standard	0.1 to 0.7	15	15	15	15	
VF5000	3-pc	osition		0.15 to 0.7	50	75	53	75	
VI-3000	2-position	Single		0.15 to 1.0	33	58	36	58	
	z-position	Double	High-pressure	0.1 to 1.0	18	18	18	18	
	3-position		type	0.15 to 1.0	53	78	56	78	

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)



<sup>\*</sup> Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range. 24 VDC: -7% to +10% 12 VDC: -4% to +10%

## Series VF3000/5000

## Flow-rate Characteristics/Weight

	Flow-rate characteristics Note 1)							( ) N-+- 0\			
	_			1 →	1 → 4/2 (P → A/B)		$4/2 \rightarrow 5/3 \text{ (A/B} \rightarrow \text{EA/EB)}$			Weight (g) Note 2)	
Valve model	Type of actuation		Port size	C [dm³/ (s·bar)]	b	Cv	C [dm³/ (s·bar)]	b	Cv	Grommet	DIN terminal
	2-	Single		2.8	0.14	0.64	2.5	0.18	0.57	344 (192)	380 (228)
	position	Double		2.8	0.14	0.64	2.5	0.18	0.57	405 (252)	477 (324)
		Closed center		2.1	0.22	0.49	1.6	0.26	0.41	422 (270)	494 (342)
VF3□40-02	3- position	Exhaust center	1/4	2.3	0.21	0.53	2.8 [2.1]	0.23 [0.26]	0.66 [0.50]	422 (270)	494 (342)
		Pressure center		2.9 [1.1]	0.16 [0.45]	0.67 [0.32]	2.1	0.23	0.49	422 (270)	494 (342)
	2-	Single		3.1	0.24	0.76	2.6	0.23	0.62	327 (192)	363 (228)
	position	Double		3.1	0.24	0.76	2.6	0.23	0.62	388 (252)	460 (324)
		Closed center		2.2	0.33	0.57	1.6	0.34	0.40	405 (270)	477 (342)
VF3□40-03	3- position	Exhaust center	3/8	2.6	0.27	0.61	2.8 [2.3]	0.30 [0.28]	0.68 [0.55]	405 (270)	477 (342)
		Pressure center		3.4 [1.3]	0.29 [0.48]	0.80 [0.38]	2.2	0.31	0.52	405 (270)	477 (342)
	2- position	Single	1/4	7.3	0.49	2.1	7.3	0.50	2.0	486 (297)	522 (333)
		Double		7.3	0.49	2.1	7.3	0.50	2.0	541 (352)	613 (424)
	3- position	Closed center		6.6	0.35	1.7	6.3	0.31	1.6	578 (390)	650 (462)
VF5□44-02		Exhaust center		7.4	0.33	1.9	8.1 [7.4]	0.35 [0.34]	2.1 [1.9]	578 (390)	650 (462)
		Pressure center		8.0 [2.9]	0.35 [0.48]	2.1 [0.85]	5.6	0.31	1.5	578 (390)	650 (462)
	2-	Single		8.4	0.34	2.2	8.9	0.29	2.3	473 (297)	509 (333)
	position	Double		8.4	0.34	2.2	8.9	0.29	2.3	529 (352)	601 (424)
		Closed center		7.3	0.34	2.0	7.1	0.28	1.8	566 (390)	638 (462)
VF5□44-03	3- position	Exhaust center	3/8	8.1	0.27	2.0	14.0 [8.3]	0.26 [0.31]	3.4 [2.2]	566 (390)	638 (462)
	position	Pressure center		8.1 [2.5]	0.33 [0.48]	2.0 [0.74]	5.7	0.31	1.4	566 (390)	638 (462)
	2-	Single		9.4	0.43	2.7	12.0	0.32	3.0	545 (297)	581 (333)
	position	Double		9.4	0.43	2.7	12.0	0.32	3.0	600 (352)	672 (424)
		Closed center		7.1	0.41	2.1	7.4	0.32	2.0	638 (390)	710 (462)
VF5□44-04	3- position	Exhaust center	1/2	8.6	0.39	2.4	13.0 [8.9]	0.21 [0.40]	3.1 [2.5]	638 (390)	710 (462)
	ρυσιαυπ	Pressure center		11.0 [2.6]	0.18 [0.47]	2.6 [0.78]	6.1	0.35	1.6	638 (390)	710 (462)

Note 1) [ ]: Normal position Note 2) ( ): Values without sub-plate




#### **Construction: Base Mounted**

#### VF3000/5000


Symbol **2-position single** 



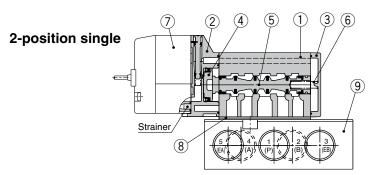

## Symbol 2-position double




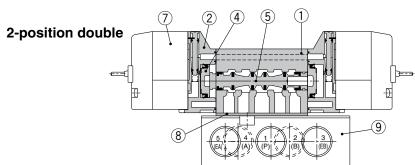

#### Symbol 3-position closed center




#### 3-position exhaust center

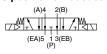

#### 3-position pressure center



### 3-position closed center/exhaust center/pressure center

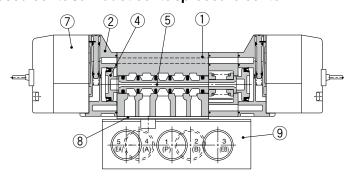


(Drawing shows a closed center type.)

#### **Component Parts**

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Adapter plate	Resin	Gray
3	End plate	Resin	White
4	Piston	Resin	
5	Spool valve	Aluminum, HNBR	
6	Spring	Stainless steel	

#### Sub-plate part no.

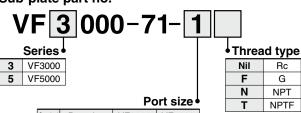

Symbol	Port size	VF3000	VF5000
1	1/4	0	0
2	3/8	0	0
3	1/2	_	C

#### **Replacement Parts**

No.	Description	Par	Nista	
	Description	VF3000	VF5000	Note
7	Pilot valve assembly	Refer to "How to Order Pilot Valve Assembly" on page 19.		Built-in strainer
8	Gasket	DXT031-30-11 DXT156-9-8		HNBR
9	Sub-plate	1/4: VF3000-71-1□ 3/8: VF3000-71-2□	1/4: VF5000-71-1□ 3/8: VF5000-71-2□ 1/2: VF5000-71-3□	Aluminum die-casted
_	Round head combination screw (1 pc.)	DXT031-44-1 (M4 x 39.5, With spring washer)	_	For mounting valve
_	Hexagon socket head cap screw (1 pc.)	_	AXT620-32-1 (M4 x 48, With spring washer)	For mounting valve



M4: 1.4 N·m




## Series VF3000/5000

### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)



When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

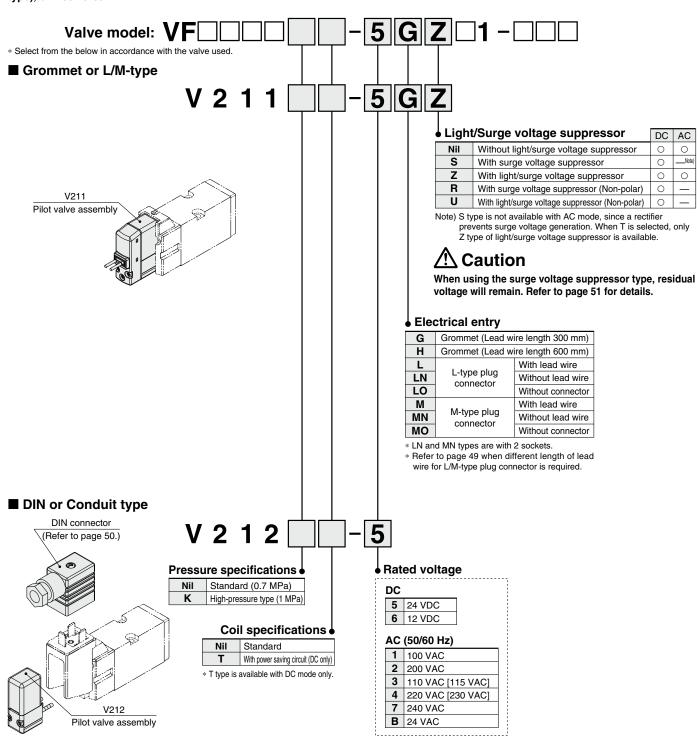

## **⚠** Caution

For V212 (DIN or Conduit type), the coil specifications and voltage (including light/surge voltage suppressor) cannot be changed by replacing the pilot valve assembly.







#### **Dimensions: Series VF3000/Base Mounted**

#### 2-position single

Grommet (G) (H): VF3140- $\Box_{H}^{G}\Box\Box$ 1- $_{03}^{02}\Box$ 

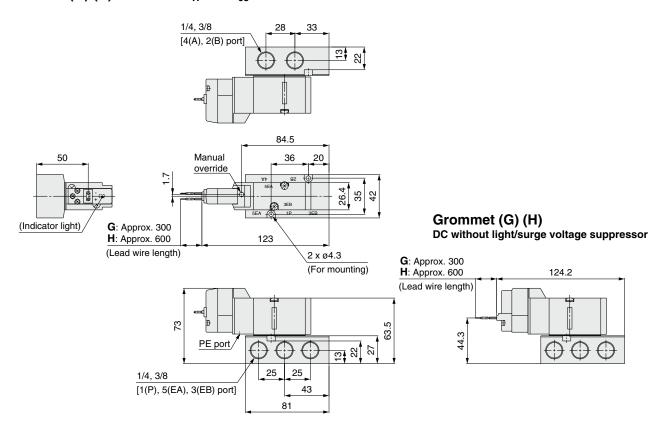

## L-type plug connector (L): VF3140-\(\sum \L \subseteq 1-\frac{02}{03} \subseteq \)

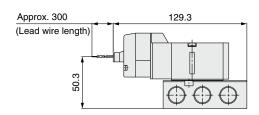


Unless otherwise indicated, dimensions are the same as Grommet (G).

## 


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF3140-□M□□1-02□

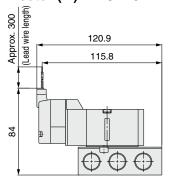

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF3140-□T□□1-020□

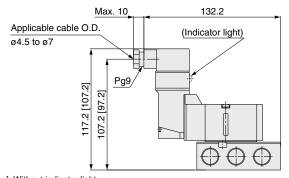

[ ]: Without indicator light Unless otherwise indicated, dimensions are the same as Grommet (G).




## Series VF3000/5000


## **Dimensions: Series VF3000/Base Mounted**

#### 2-position double

Grommet (G) (H): VF3240-□<sup>G</sup><sub>H</sub>□□1-<sup>02</sup><sub>03</sub>□

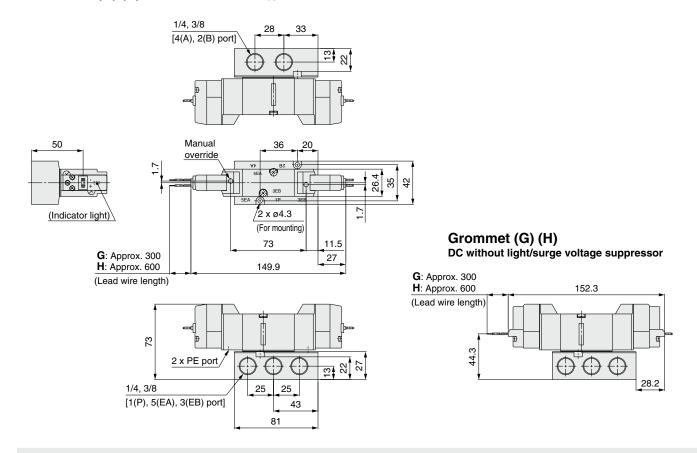


## L-type plug connector (L): VF3240- $\square$ L $\square$ 1- $^{02}_{03}\square$

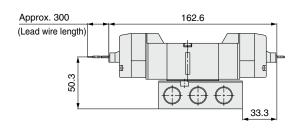


Unless otherwise indicated, dimensions are the same as Grommet (G).

## DIN terminal (D) (Y): VF3240- $\square_Y^D\square\square 1$ - $^{02}_{03}\square$

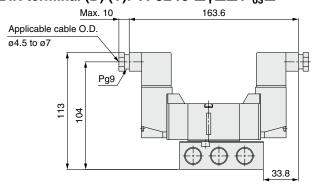


Unless otherwise indicated, dimensions are the same as Grommet (G).

## M-type plug connector (M): VF3240-□M□□1-<sup>02</sup>□

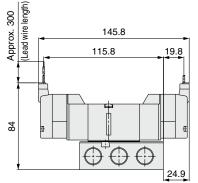

Unless otherwise indicated, dimensions are the same as Grommet (G).


## Conduit terminal (T): VF3240-□T□□1-020□

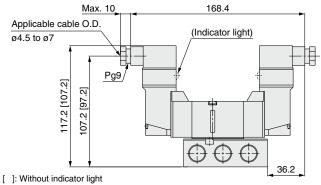


## **Dimensions: Series VF3000/Base Mounted**

#### 3-position closed center/exhaust center/pressure center

Grommet (G) (H): VF3 $\frac{3}{5}$ 40- $\Box$ H $\Box$ 1- $\frac{02}{03}$ 

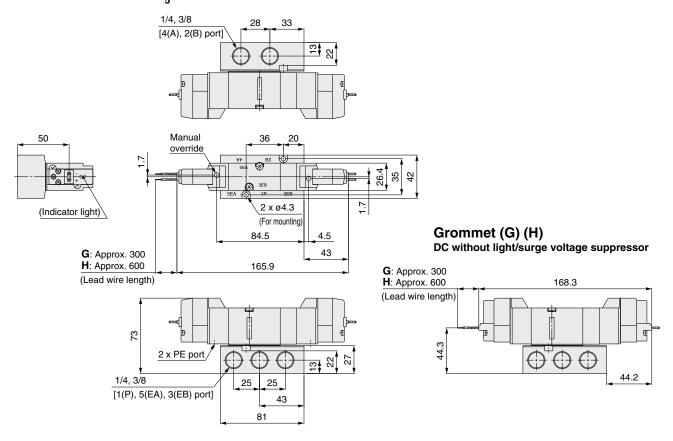


## L-type plug connector (L): VF3 $\frac{3}{5}$ 40- $\square$ L $\square$ 1- $\frac{02}{03}$ $\square$

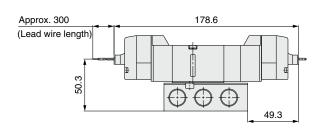


Unless otherwise indicated, dimensions are the same as Grommet (G).

# DIN terminal (D) (Y): VF3 $\frac{3}{5}$ 40- $\Box_{Y}^{D}\Box\Box$ 1- $\frac{02}{03}\Box$

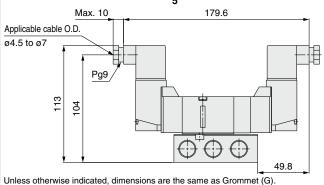


## M-type plug connector (M): VF3 $\frac{3}{5}$ 40- $\square$ M $\square$ 1- $\frac{02}{03}$ $\square$

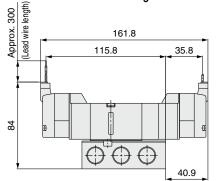

Unless otherwise indicated, dimensions are the same as Grommet (G).

## Conduit terminal (T): VF3<sup>3</sup>/<sub>5</sub>40-□T□□1-<sup>02</sup><sub>03</sub>□

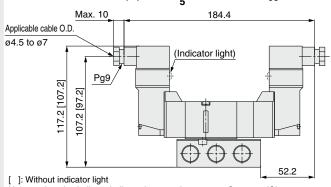




## Series VF3000/5000


## **Dimensions: Series VF5000/Base Mounted**

#### 2-position single

Grommet (G) (H): VF5144-\(\text{G}\) \(\text{G}\) \(\text{O}\) \(\text{1}\)

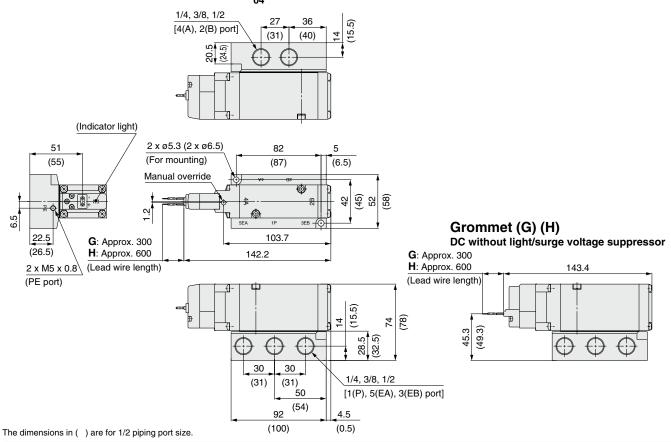

## L-type plug connector (L): VF5144-\(\sime\)L\(\sime\)1-\(\frac{02}{04}\)

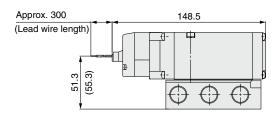


Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in (  $\,$  ) are for 1/2 piping port size.

## 


Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in (  $\,$  ) are for 1/2 piping port size.

## M-type plug connector (M): VF5144-□M□□1-03□03□

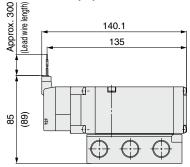

Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in ( ) are for 1/2 piping port size.

## Conduit terminal (T): VF5144-□T□□1-02 □

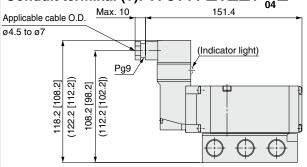

Unless otherwise indicated, dimensions are the same as Grommet (G).


[ ]: Without indicator light

The dimensions in ( ) are for 1/2 piping port size.


### **Dimensions: Series VF5000/Base Mounted**

#### 2-position double

Grommet (G) (H): VF5244-□<sup>G</sup><sub>H</sub>□□1-<sup>02</sup><sub>03</sub>□

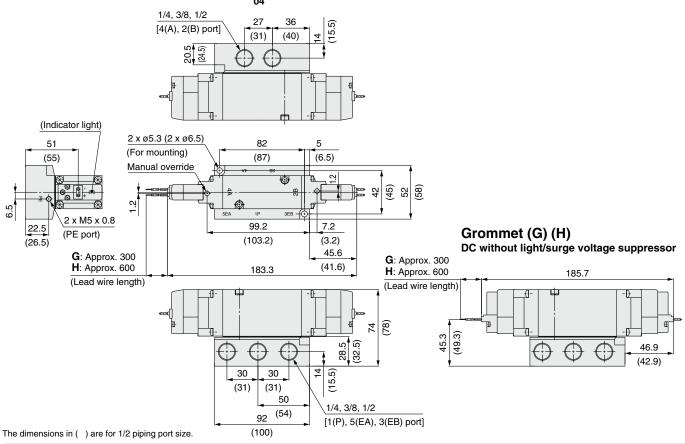

## L-type plug connector (L): VF5244-□L□□1- $\frac{02}{03}$ □

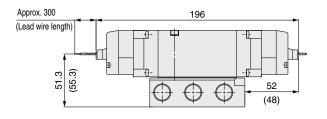


Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in ( ) are for 1/2 piping port size.

## DIN terminal (D) (Y): VF5244-□<sup>D</sup><sub>Y</sub>□□1-<sup>02</sup>/<sub>93</sub>□ Applicable cable O.D. ø4.5 to ø7 Pg9 (118) 105 (109) 52.5 (48.5)

Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in ( ) are for 1/2 piping port size.

## M-type plug connector (M): VF5244-□M□□

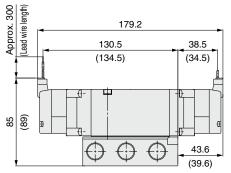

Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in ( ) are for 1/2 piping port size.

#### Conduit terminal (T): VF5244-□T 201.8 Applicable cable O.D. ø4.5 to ø7 (Indicator light) Pg9 (122.2 [112.2]) 118.2 [108.2] (112.2 [102.2]) 108.2 [98.2] 54.9 (50.9)

Unless otherwise indicated, dimensions are the same as Grommet (G).

[ ]: Without indicator light
The dimensions in ( ) are for 1/2 piping port size.




## Series VF3000/5000


## **Dimensions: Series VF5000/Base Mounted**

#### 3-position closed center/exhaust center/pressure center

Grommet (G) (H): VF5<sup>3</sup>/<sub>5</sub>444-□<sup>G</sup><sub>H</sub>□□1-<sup>02</sup><sub>04</sub>□

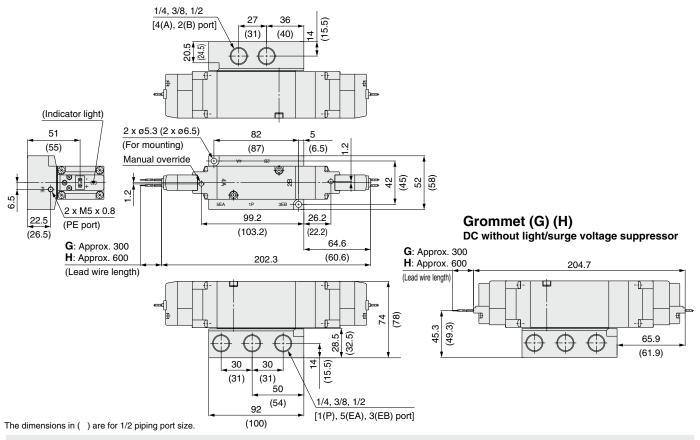

## L-type plug connector (L): VF5 $\frac{3}{4}$ 44- $\square$ L $\square$ 1- $\frac{02}{03}$ $\square$

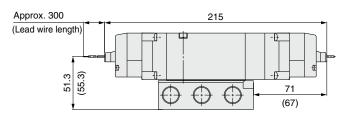


Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in (  $\,$  ) are for 1/2 piping port size.

# DIN terminal (D) (Y): VF5 \( \frac{3}{4} 44 - \propto \frac{1}{9} \propto 1 - \frac{02}{03} \propto 4.5 to \( \phi 7 \) Pg9 Pg9 71.5 (67.5)


Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in (  $\,$  ) are for 1/2 piping port size.

## M-type plug connector (M): VF5 $\frac{3}{5}$ 44- $\square$ M $\square$ 1- $\frac{02}{03}$ $\square$

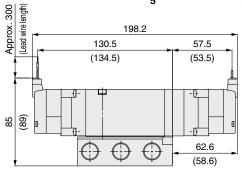

Unless otherwise indicated, dimensions are the same as Grommet (G). The dimensions in (  $\,$  ) are for 1/2 piping port size.

## Conduit terminal (T): VF5 $\frac{3}{5}$ 444- $\Box$ T $\Box$ 1- $\frac{02}{5}$

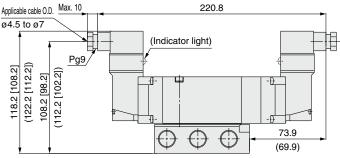

Unless otherwise indicated, dimensions are the same as Grommet (G).

[ ]: Without indicator light


The dimensions in ( ) are for 1/2 piping port size.

## Low Wattage Specification

# Series VF1000/3000 ( € Single Unit

**Body Ported Base Mounted** 

#### **How to Order Valve**

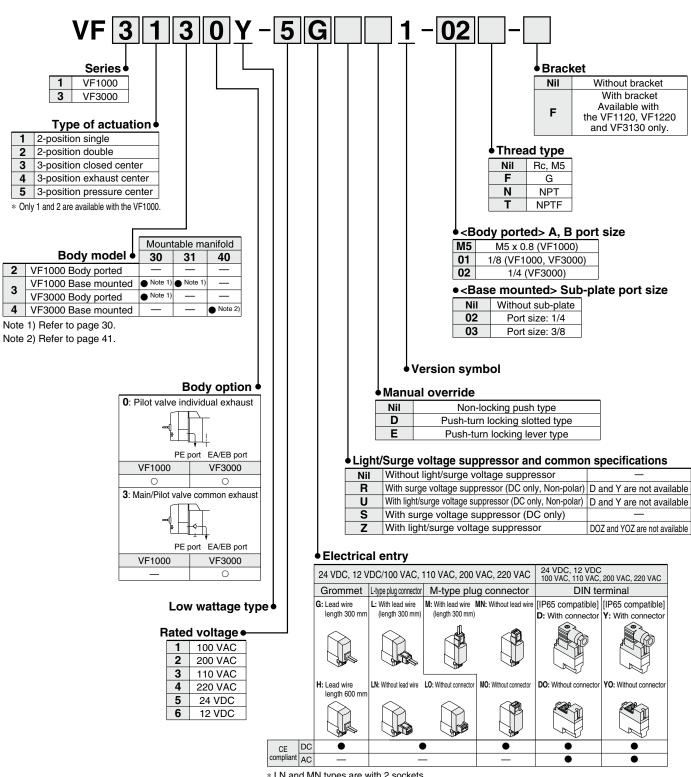

<sup>\*</sup> LN and MN types are with 2 sockets.

<sup>\*</sup> When using IP65, select the main/pilot valve common exhaust type, (Except VF1000)



<sup>\*</sup> Y type DIN terminal complies with EN-175301-803C (former DIN 43650C). Refer to page 50

## Series VF1000/3000



## **Specifications**

del	VF1000	VF3000	
	Air		
2-position single/3-position	0.15 to 0.7		
2-position double	0.1 to 0.7		
nperature (°C)	-10 to 50 (No freezing)		
2-position single/double	5	5	
3-position	3	3	
	Non-locking push type		
	Push-turn locking slotted type		
	Push-turn locking lever type		
	Main/Pilot valve common exhaust		
	Not required		
	Unrestricted		
stance (m/s²) Note)	150/30		
	Dustproof (IP65* for DIN terminal)		
	2-position single/3-position 2-position double nperature (°C) 2-position single/double 3-position	A 2-position single/3-position 0.15 (2-position double 0.1 to perature (°C) -10 to 50 (N 2-position single/double 5 (Push-turn locking Push-turn locking Pus	

\* Based on IEC 60529. Note) Impact resistance:

No malfunction occurred when it is tested in the axial direction and at the right angles to

the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

## **Solenoid Specifications**

Electrical entry			Grommet (G), (H) L-type plug connector (L) M-type plug connector (M)	DIN terminal (D), (Y)	
			G, H, L, M	D, Y	
Coil rated voltage (V)		DC	24, 12		
		AC (50/60 Hz)	100, 110, 200, 220		
Allowable voltage fluctuation		uctuation	±10% of rated voltage*		
Power consumption (W)	DC	Standard	0.35 (With light: 0.4 (With light of DIN terminal: 0.45))		
	AC	100 V	0.78 (With light: 0.81)	0.78 (With light: 0.87)	
Apparent		110 V [115 V]	0.86 (With light: 0.89) [0.94 (With light: 0.97)]	0.86 (With light: 0.97) [0.94 (With light: 1.07)]	
power (VA)*	AC	200 V	1.18 (With light: 1.22)	1.15 (With light: 1.30)	
		220 V [230 V]	1.30 (With light: 1.34) [1.42 (With light: 1.46)]	1.27 (With light: 1.46) [1.39 (With light: 1.60)]	
Surge voltage suppressor		essor	Diode (DIN terminal, Non-polar type: Varistor)		
Indicator light			LED (Neon light is used for AC mode of DIN terminal.)		

24 VDC: -7% to +10% 12 VDC: -4% to +10%

## **Response Time**

		Response time (ms) (at 0.5 MPa)			
Series		Without light/surge	With light/surge voltage suppressor		4.0
		voltage suppressor	S, Z type	R, U type	AC
VF1000	2-position single	45	55	45	45
VF1000	2-position double	12	12	12	12
	2-position single	55	63	55	50
VF3000	2-position double	14	14	14	16
	3-position	100	100	90	90




<sup>\*</sup> It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.


\* Allowable voltage fluctuation is –15% to +5% of the rated voltage for 115 VAC or 230 VAC.


\* Since voltage drops due to the internal circuit in S and Z types, the allowable voltage fluctuation should be within the following range.


## Low Wattage Specification Body Ported/Base Mounted/Single Unit Series VF1000/3000

## **Dimensions**

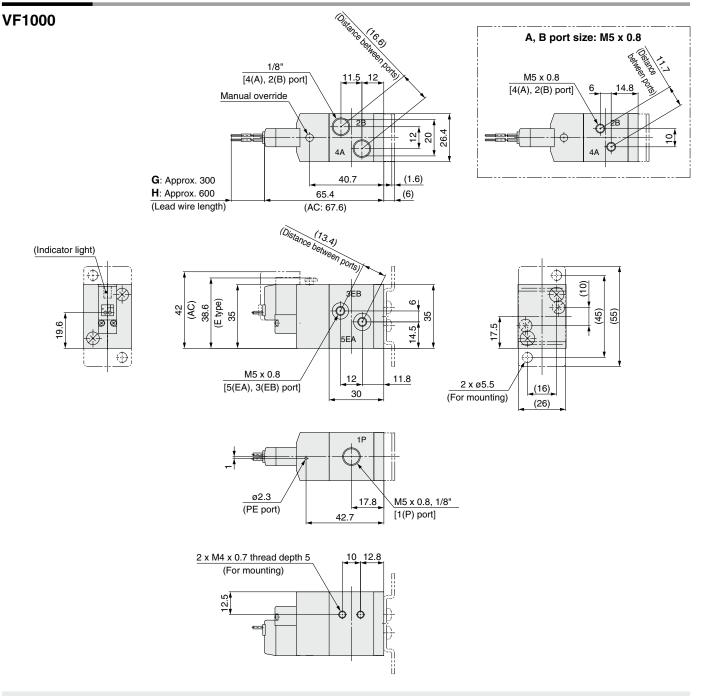

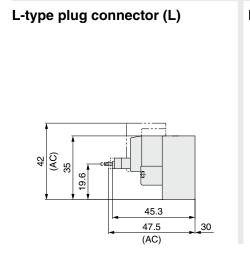

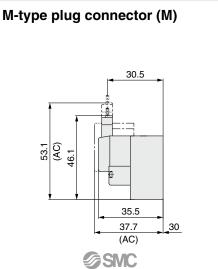


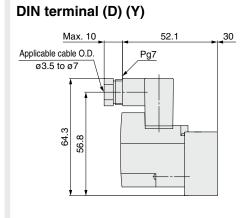


## Series VF1000/3000

#### **Dimensions**

#### VF3000

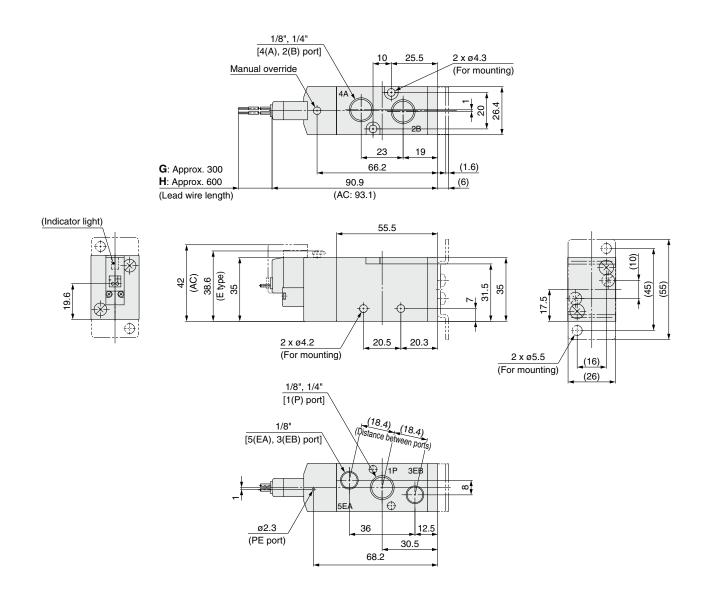

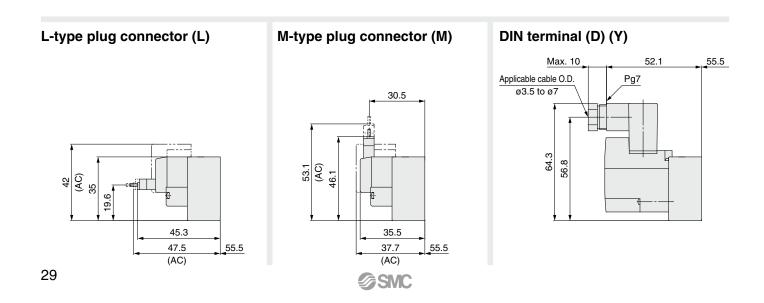

## **Pilot Operated 5 Port Solenoid Valve**

# Series VF1000/3000/5000 **Manifold**

**Body Ported** 

**How to Order Manifold** 




Note) Only DIN and conduit terminal types are available with AC mode. Refer to the electrical entry for details.

#### Individual exhaust (VF1000 only) Common exhaust VV5F1-31-04 Series • Thread type Thread type VF1000 **Stations** 2 stations Rc VF3000 00F 02 2 stations G OOF G 5 VF5000 Manifold model 00N NPT 20 stations 00N NPT VF1000 VF3000 VF5000 **NPTF** Symbol P, R port size 20 stations 00T 00T **NPTF** 1/8 \* Up to 10 stations 30 Manifold model for VV5F5-20, and 1/4 up to 15 stations for P, R port size EA, EB port size 20 3/8 0 31 21 1/2 0

#### **How to Order Valve**

Note) When placing an order for body ported valve as a single unit, mounting screws for manifold and gasket are not attached. Order them separately, if necessary. (Refer to page 32 for details.)

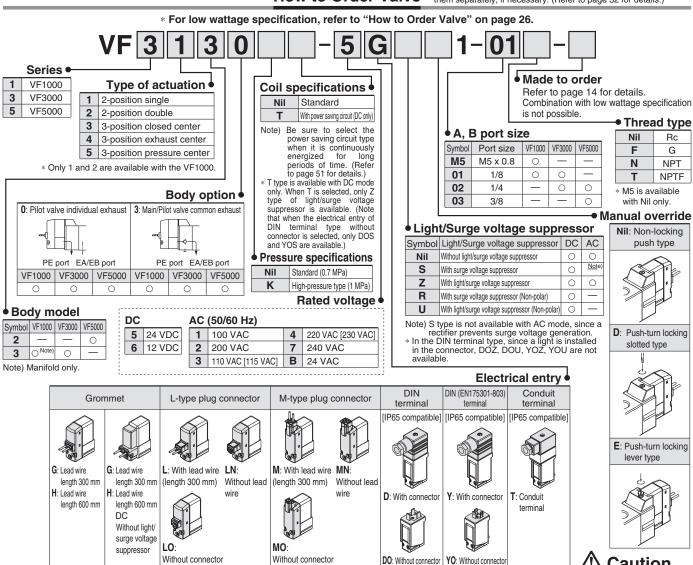

- \* LN and MN types are with 2 sockets. \* Refer to page 49 when different length of lead wire for L/M-type plug connector is required.
- \* Refer to page 50 for details on the DIN (EN175301-803) terminal.

CE DC

compliant ACNot

Note 1) When using IP65, select the main/pilot valve common exhaust type.


Note 2) With the same specifications as the DC type, all electrical entries for the 24 VAC type are CE marking compliant.



When using the surge voltage suppressor type, residual voltage will remain. Refer to page 51 for details.


<sup>\*</sup> The A and B ports are made on the top.


### **Manifold Specifications**

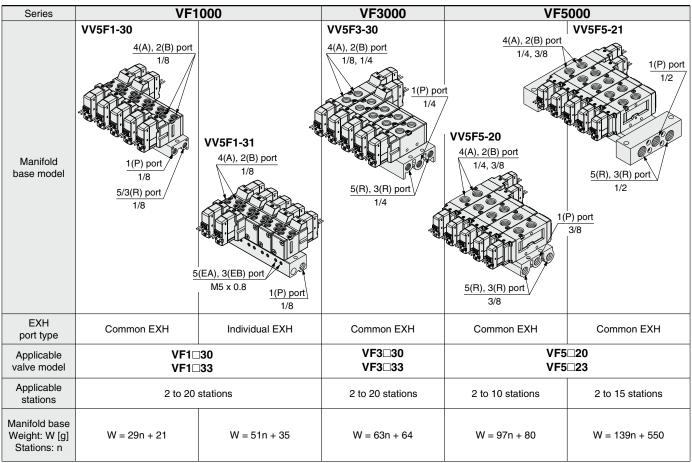

Note) Supply pressure to 1(P) ports and exhaust pressure from R ports on both sides for 10 stations or more (5 stations or more for the VF5000).

## **How to Order Manifold Assembly**

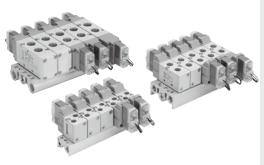

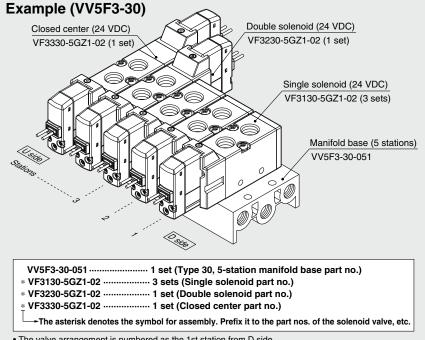


- The valve arrangement is numbered as the 1st station from D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.




#### **Manifold Options**

# ■ For body ported Blanking plate assembly

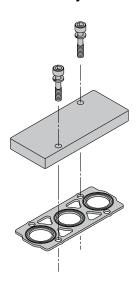

Series	Blanking plate assembly part no.
VF1000	DXT144-13-3A
VF3000	DXT031-38-5A
VF5000	VF5000-70-1A

#### ■ Individual EXH spacer assembly

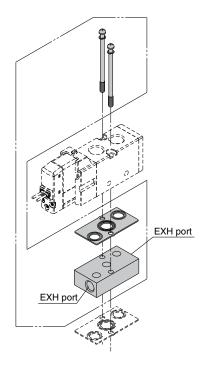


# VF 3 000-75-1 A

Symbol	Series	Port size		
3	VF3000	1/8		
5	VF5000	1/4		

◆Thread type								
Rc								
G								
NPT								
NPTF								

#### ■ Mounting screw, gasket part no.

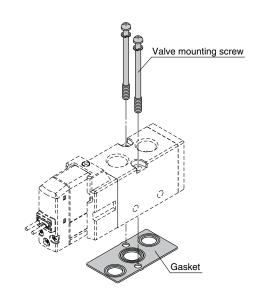

Series	Valve mounting screw (1 pc.)	Gasket
VF1000	Round head combination screw DXT031-44-1	DXT144-12-2
VF3000	(M4 x 39.5, With spring washer)	DXT155-25-7
VF5000	Hexagon socket head cap screw AXT620-32-1 (M4 x 48, With spring washer)	DXT156-9-6

# ⚠ Caution

**Tightening Torque for Mounting Screw** 

M4: 1.4 N·m

# **⚠** Warning

When mounting a valve or spacer on the manifold base or sub-plate, etc., the mounting orientation is already decided. If mounted in a wrong direction, the equipment to be connected may result in a malfunction. Refer to the dimensions for mounting.




# Series VF1000/3000/5000

#### **Dimensions: Series VF1000**


# Type 30/VV5F1-30-□□1-□: Common exhaust Grommet (G) (H)

1/8 [4(A), 2(B) port] 2 x ø5.5 L<sub>1</sub> (For mounting) L2 M5 x 0.8 [4(A), 2(B) port] М5 23.8 17.5 24. [1(P), 5/3(R) port] Manual PE port override (Pitch) **G**: Approx. 300 **H**: Approx. 600 (Lead wire length) 23.5 P = 27.5


Grommet (G) (H)
DC without light/
surge voltage suppressor

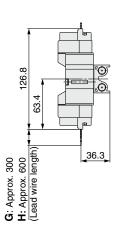

(Station n) ----- (Station 1)

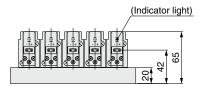

#### L-type plug connector (L)

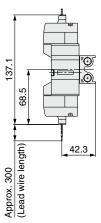


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### L: Dimensions

n	2	3	4	5	6	7	8	9	10	11	12	13	14
L <sub>1</sub>	74.5	102	129.5	157	184.5	212	239.5	267	294.5	322	349.5	377	404.5
L2	64.5	92	119.5	147	174.5	202	229.5	257	284.5	312	339.5	367	394.5


L n	15	16	17	18	19	20
L <sub>1</sub>	432	459.5	487	514.5	542	569.5
L2	422	449.5	477	504.5	532	559.5

#### M-type plug connector (M)

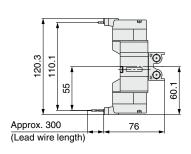

Unless otherwise indicated, dimensions are the same as Grommet (G).


#### DIN terminal (D) (Y)

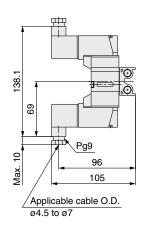


n: Stations

Unless otherwise indicated, dimensions are the same as Grommet (G).


#### Conduit terminal (T)

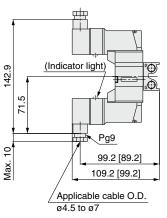


# Type 31/VV5F1-31-□□3-□: Individual exhaust Grommet (G) (H)

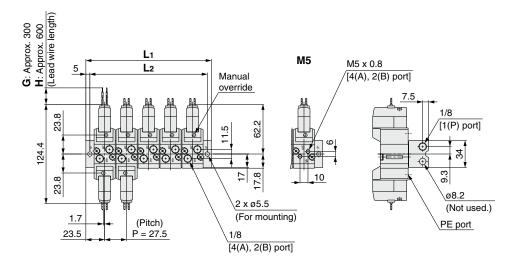

Grommet (G) (H)
DC without light/
surge voltage suppressor

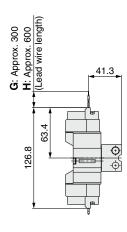

(Station 1) ---- (Station n)

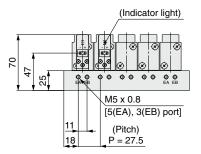


#### L: Dimensions

L. D	n: Station													
<u> </u>	2	3	4	5	6	7	8	9	10	11	12	13	14	
L <sub>1</sub>	74.5	102	129.5	157	184.5	212	239.5	267	294.5	322	349.5	377	404.5	
L2	64.5	92	119.5	147	174.5	202	229.5	257	284.5	312	339.5	367	394.5	


L	15	16	17	18	19	20
L <sub>1</sub>	432	459.5	487	514.5	542	569.5
L <sub>2</sub>	422	449.5	477	504.5	532	559.5

#### L-type plug connector (L)

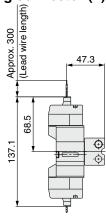


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

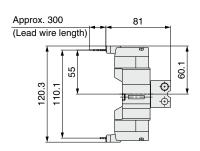


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

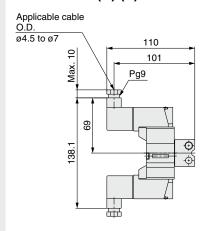

Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

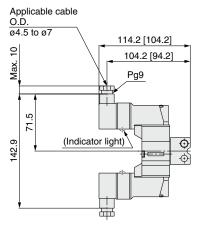





# Series VF1000/3000/5000


#### **Dimensions: Series VF3000**


# Type 30/VV5F3-30-□□1-□: Common exhaust Grommet (G) (H)

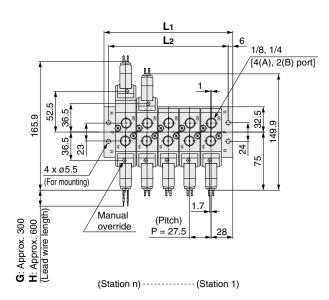

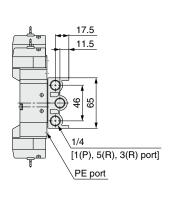


Grommet (G) (H)
DC without light/
surge voltage suppressor

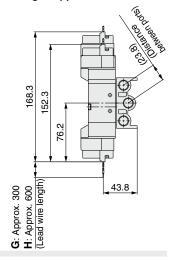

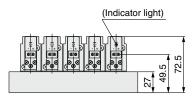

### L-type plug connector (L)

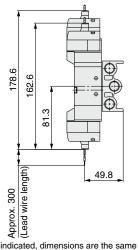


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### L: Dimensions

													Stations
<u>_</u>	2	3	4	5	6	7	8	9	10	11	12	13	14
L <sub>1</sub>	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5
L2	71.5	99	126.5	154	181.5	209	236.5	264	291.5	319	346.5	374	401.5


L	15	16	17	18	19	20
L <sub>1</sub>	441	468.5	496	523.5	551	578.5
L <sub>2</sub>	429	456.5	484	511.5	539	566.5

#### M-type plug connector (M)

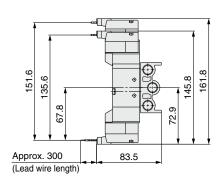


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

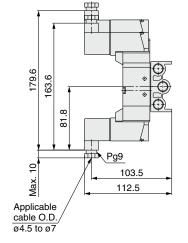


Unless otherwise indicated, dimensions are the same as Grommet (G).


#### Conduit terminal (T)

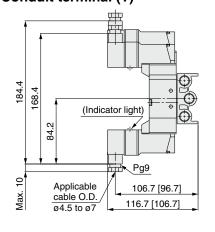



# Type 30/VV5F3-30-□□1-□: When the individual EXH spacer (VF3000-75-1A) is mounted. Grommet (G) (H)

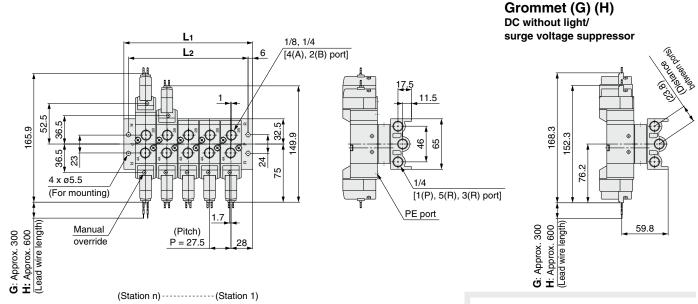

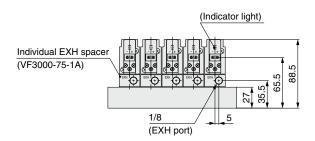


#### L: Dimensions

E. Billielisielis												Stations	
L_n	2	3	4	5	6	7	8	9	10	11	12	13	14
L <sub>1</sub>	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5
L2	71.5	99	126.5	154	181.5	209	236.5	264	291.5	319	346.5	374	401.5


L n	15	16	17	18	19	20
L <sub>1</sub>	441	468.5	496	523.5	551	578.5
L <sub>2</sub>	429	456.5	484	511.5	539	566.5

#### L-type plug connector (L)

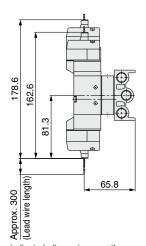


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

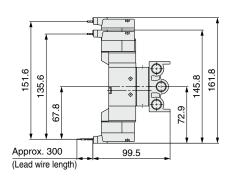


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

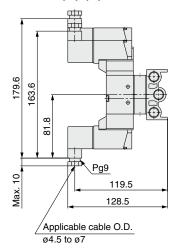

Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

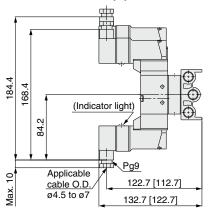




# Series VF1000/3000/5000


#### **Dimensions: Series VF5000**

# Type 20/VV5F5-20-□□1-□: Common exhaust Grommet (G)

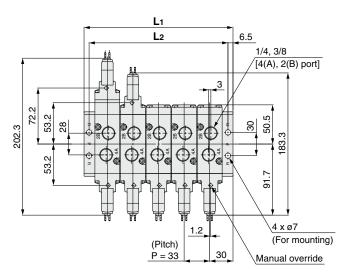


3/8
[1(P), 5(R), 3(R) port]
PE port


Grommet (G) (H)
DC without light/
surge voltage suppressor

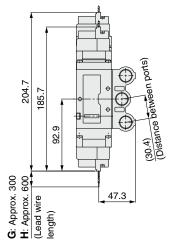

(Station n)-----(Station 1)

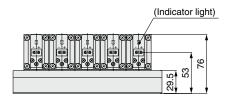

#### L-type plug connector (L)

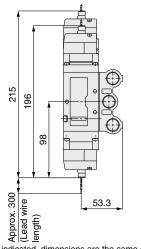


◄ □ □
Unless otherwise indicated, dimensions are the same as Grommet (G).

#### L: Dimensions


n: Statio											
<u> </u>	2	3	4	5	6	7	8	9	10		
L <sub>1</sub>	93	126	159	192	225	258	291	324	357		
L2	80	113	146	179	212	245	278	311	344		

#### M-type plug connector (M)

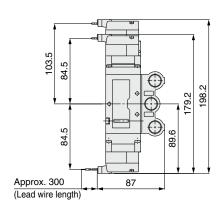


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

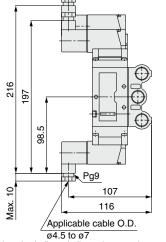

Unless otherwise indicated, dimensions are the same as Grommet (G).


#### Conduit terminal (T)

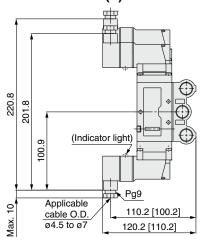



Grommet (G) (H)

#### **Dimensions: Series VF5000**

#### Type 20/VV5F5-20-□□1-□: When the individual EXH spacer (VF5000-75-1A) is mounted. **Grommet (G)**

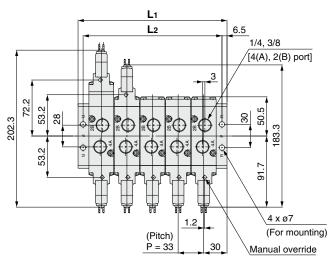


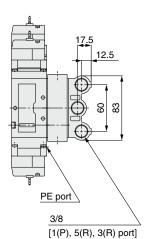

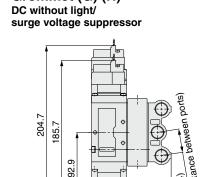

n. Stations

(Station n) ----- (Station 1)

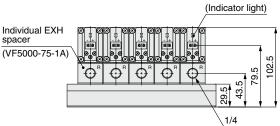

# EXH port


#### L: Dimensions

n 2 3 4 5 6 7	8 9 10
L1 93 126 159 192 225 258	8 291 324 357
<b>L</b> <sub>2</sub> 80 113 146 179 212 245	5 278 311 344

#### L-type plug connector (L)


300

**G**: Approx. 3 **H**: Approx. 6

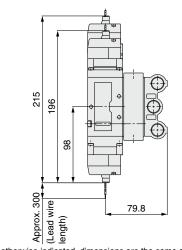


Unless otherwise indicated, dimensions are the same as

#### M-type plug connector (M)

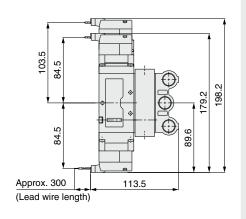


#### Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

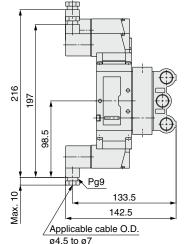

Unless otherwise indicated, dimensions are the same as Grommet (G).

#### **Conduit terminal (T)**

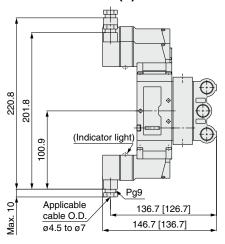


]: Without indicator light Unless otherwise indicated, dimensions are the same as Grommet (G).




# Series VF1000/3000/5000


#### **Dimensions: Series VF5000**

# Type 21/VV5F5-21-□□1-□: Common exhaust Grommet (G)

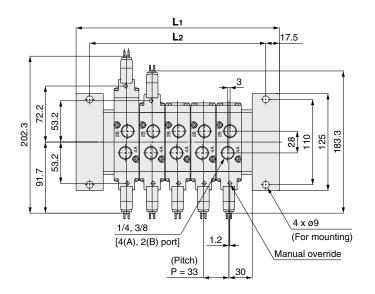


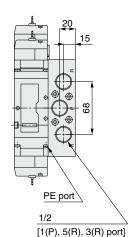


Grommet (G) (H)
DC without light/
surge voltage suppressor

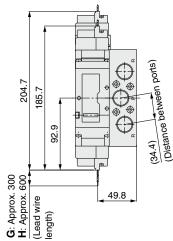



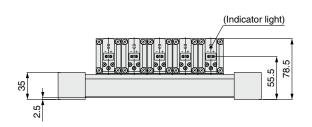

### L-type plug connector (L)

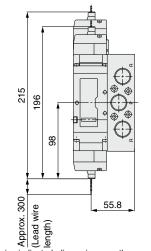


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### L: Dimensions


L. D	L. Difficitions n: Stations												tations	
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L <sub>1</sub>	163	196	229	262	295	328	361	394	427	460	493	526	559	592
L <sub>2</sub>	128	161	194	227	260	293	326	359	392	425	458	491	524	557

#### M-type plug connector (M)

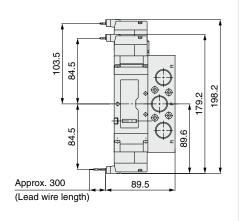


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

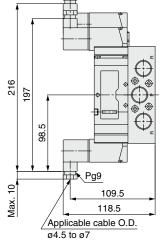



Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

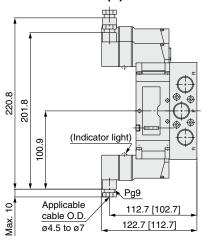

# Type 21/VV5F5-21-□□1-□: When the individual EXH spacer (VF5000-75-1A) is mounted. Grommet (G)

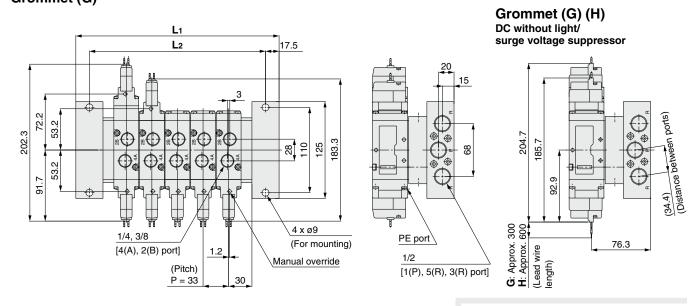

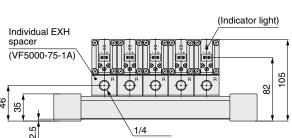


(Station n) ---- (Station 1)

# 1/4 EXH port


L: D	L: Dimensions n: Station												tations	
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L <sub>1</sub>	163	196	229	262	295	328	361	394	427	460	493	526	559	592
L2	128	161	194	227	260	293	326	359	392	425	458	491	524	557

# L-type plug connector (L)

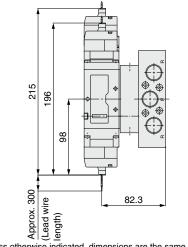


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

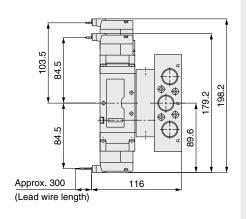


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

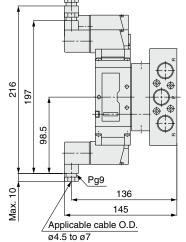

Ø4.5 to Ø7
Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

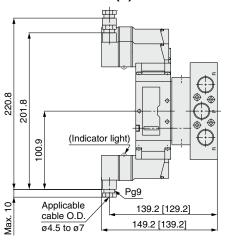



# **Pilot Operated 5 Port Solenoid Valve**

# Series VF3000/5000 **Manifold**

**Base Mounted** 

**How to Order Manifold** 



Note) Only DIN and conduit terminal types are available with AC mode. Refer to the electrical entry for details.

VV5F3-40-052-02F Common exhaust

Symbol	Series	P, R port size	A, B port size
3	VF3000	1/4	1/4
5	VF5000	3/8	1/4

<sup>\*</sup> The A and B ports are made on the bottom.


02	2 stations
:	:
20	20 stations

\* Up to 10 stations for VV5F5.

◆ Threa	ad type
Nil	Rc
F	G
N	NPT
Т	NIDTE

#### How to Order Valve (With a gasket and two mounting screws)

\* For low wattage specification, refer to "How to Order Valve" on page 26.

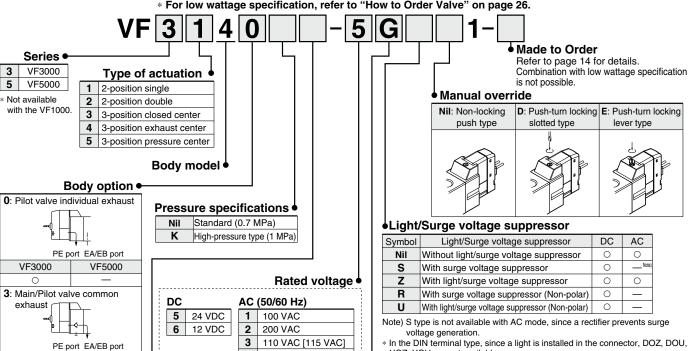

DC	AC (50/60 Hz)						
5	24 VDC	1	100 VAC				
6	12 VDC	2	200 VAC				
		3	110 VAC [115 VAC]				
		4	220 VAC [230 VAC]				
		7	240 VAC				
		В	24 VAC				

\* In the DIN terminal type, since a light is installed in the connector, DOZ, DOU, YOZ YOU are not available.

### Caution

When using the surge voltage suppressor type, residual

				oitage will	remaın. Ke	ter to page 5	1 for details.	
							——•Elec	trical entry
Gron	nmet	L-type plug cor	nector	M-type plug	connector	DIN terminal	DIN (EN175301-803) terminal	Conduit terminal
$\overline{}$			$\overline{}$	11 ~	^^	[IP65 compatible]	[IP65 compatible]	[IP65 compatible]

#### Coil specifications Standard With power saving circuit (DC only)

VF5000

VF5000

VF3000

VF3000


4: Pilot valve base exhaust

PE port

Note) Be sure to select the power saving circuit type when it is continuously energized for long periods of time.

(Refer to page 51 for details.) \* T type is available with DC mode only. When T is selected, only Z type of light/surge voltage suppressor is available. (Note that when the electrical entry of DIN terminal type without CE DC connector is selected, only

DOS and YOS are available.) compliant ACNote

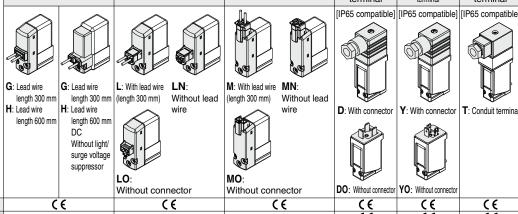

- \* LN and MN types are with 2 sockets. \* Refer to page 49 when different length of lead wire for L/M-type plug connector is required.
- \* Refer to page 50 for details on the DIN (EN175301-803) terminal.

Note 1) When using IP65, select the main/pilot valve common exhaust or pilot valve base exhaust type.

Note 2) With the same specifications as the DC type, all electrical entries for the 24 VAC type are CE marking compliant.





#### **Manifold Specifications**

Series	Manifold base model	EXH port type	Applicable valve model	Applicable stations	Manifold base Weight: W [g] Stations: n
VF3000	VV5F3-40  5(R), 3(R) port 1/4  1(P) port 1/4  4(A), 2(B) port 1/4	Common EXH	VF3□40 VF3□43	2 to 20 stations	W = 110n + 116
VF5000	VV5F5-40  PE port M5 x 0.8  5(R), 3(R) port 3/8  4(A), 2(B) port 1/4	Common EXH	VF5□44	2 to 10 stations	W = 161n + 128

Note) Supply pressure to 1(P) ports and exhaust pressure from R ports on both sides for 10 stations or more (5 stations or more for the VF5000).

#### **How to Order Manifold Assembly**

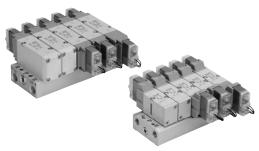

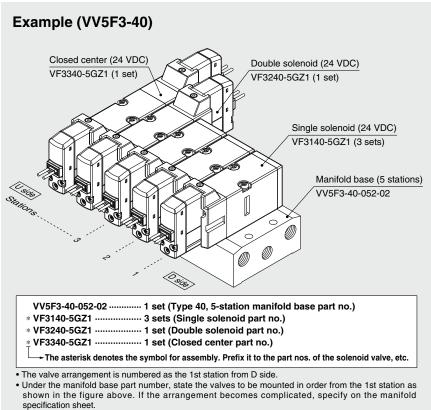




# Series VF3000/5000


#### **Manifold Options**

■ For base mounted Blanking plate assembly

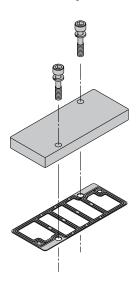

Series	Blanking plate assembly part no.
VF3000	DXT031-38-5A
VF5000	VF5000-70-2A

#### ■ Individual EXH spacer assembly

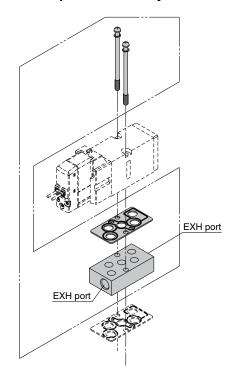


VF3000-75-2A

-361163									
Symbol	Series	Port size							
3	VF3000	1/8							
5	VF5000	1/4							

Thread type

Nil Rc
F G
N NPT
T NPTF

#### ■ Mounting screw, gasket part no.

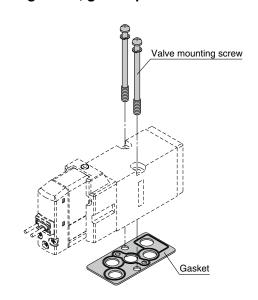

Series	Valve mounting screw (1 pc.)	Gasket
VF3000	Round head combination screw DXT031-44-1 (M4 x 39.5, With spring washer)	DXT031-30-11
VF5000	Hexagon socket head cap screw AXT620-32-1 (M4 x 48, With spring washer)	DXT156-9-8




**Tightening Torque for Mounting Screw** 

M4: 1.4 N·m


# **Marning**


When mounting a valve or spacer on the manifold base or sub-plate, etc., the mounting orientation is already decided. If mounted in a wrong direction, the equipment to be connected may result in a malfunction. Refer to the dimensions for mounting.

#### Type 40/VV5F3-40-□□2-02□: Common exhaust

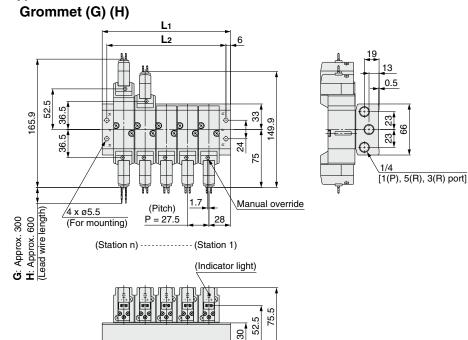

# Grommet (G) (H) DC without light/ surge voltage suppressor

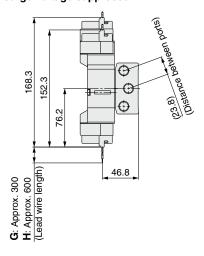

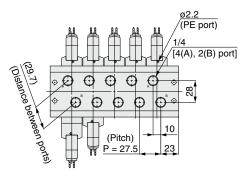


#### L: Dimensions

L. D	n: Stations												
/ /_	2	3	4	5	6	7	8	9	10	11	12	13	14
L <sub>1</sub>	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5
L2	71.5	99	126.5	154	181.5	209	236.5	264	291.5	319	346.5	374	401.5


L_n	15	16	17	18	19	20
L <sub>1</sub>	441	468.5	496	523.5	551	578.5
L <sub>2</sub>	429	456.5	484	511.5	539	566.5

#### L-type plug connector (L)

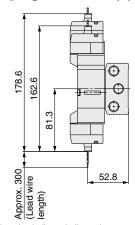


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

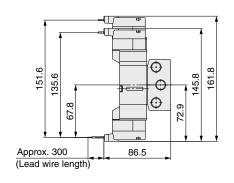


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

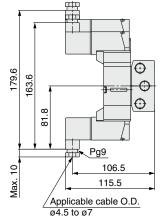

Unless otherwise indicated, dimensions are the same as  ${\sf Grommet}$  (G).

#### Conduit terminal (T)

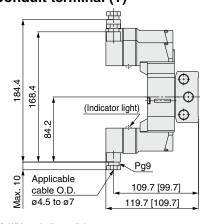





# Series VF3000/5000

#### **Dimensions: Series VF3000**

Type 40/VV5F3-40- $\square \square$ 2-02 $\square$ : When the individual EXH spacer (VF3000-75-2A) is mounted.

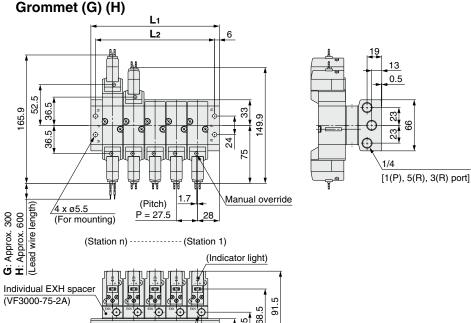

Grommet (G) (H)
DC without light/
surge voltage suppressor

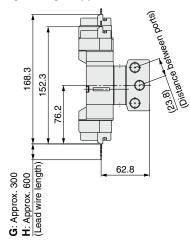

	<u>.</u>
88 88 68 68 68 68 68 68 68 68 68 68 68 6	ļ
1/8	_
(EXH port) ø2.2	
(PE port) /1/4	_
[4(A), 2(B) port	]
88	


(Pitch)

= 27.5

L: Dimensions n: Stations 2 6 8 9 10 12 13 14 5 L<sub>1</sub> 276 303.5 331 358.5 83.5 111 138.5 166 193.5 221 248.5 386 413.5 71.5 99 126.5 154 181.5 209 236.5 264 291.5 319 346.5 374 401.5


L	15	16	17	18	19	20
L <sub>1</sub>	441	468.5	496	523.5	551	578.5
I٥	429	456.5	484	511 5	539	566.5

#### L-type plug connector (L)

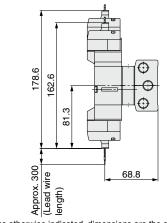


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

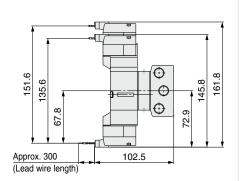


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

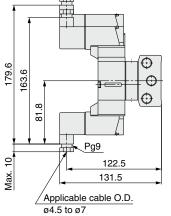


Unless otherwise indicated, dimensions are the same as Grommet (G).


#### **Conduit terminal (T)**

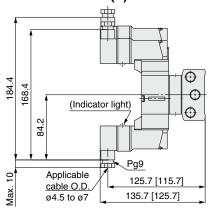


#### Type 40/VV5F5-40-□□2-02□: Common exhaust **Grommet (G)**

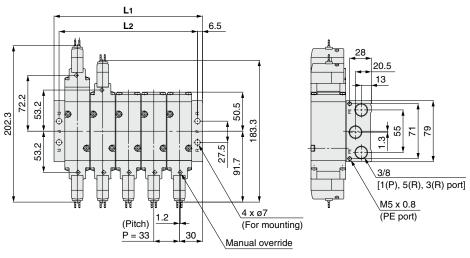


#### Grommet (G) (H) DC without light/ surge voltage suppressor

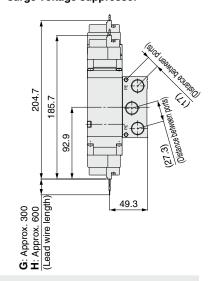


#### (Station n) ----- (Station 1)

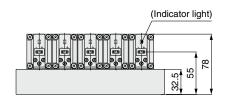

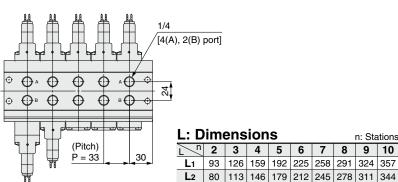


#### L: Dimensions n: Stations n 2 3 4 5 6 7 8 9 10 93 | 126 | 159 | 192 | 225 | 258 | 291 | 324 | 357

#### L-type plug connector (L)

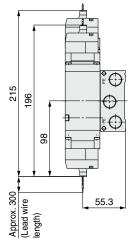


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

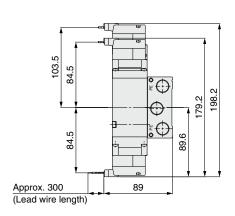


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

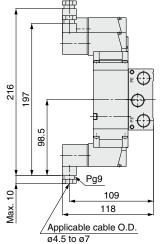

Ø4.5 to Ø7
Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

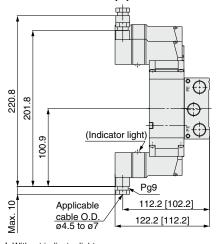




# Series VF3000/5000

#### **Dimensions: Series VF5000**

### Type 40/VV5F5-40-□□2-02□: When the individual EXH spacer (VF5000-75-2A) is mounted.

Grommet (G)

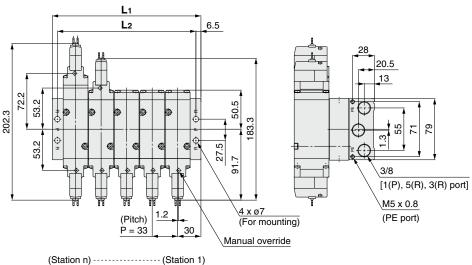

Grommet (G) (H)
DC without light/
surge voltage suppress or

18.57

19.29

19.29

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20

19.20


19.20

19.20

19.20


19.2

## 

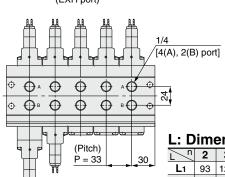


L: D	L: Dimensions n: Stations											
_ L	2	3	4	5	6	7	8	9	10			
L <sub>1</sub>	93	126	159	192	225	258	291	324	357			
L2	80	113	146	179	212	245	278	311	344			

#### L-type plug connector (L)

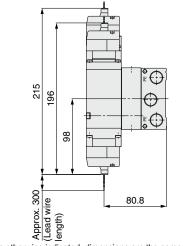


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### M-type plug connector (M)

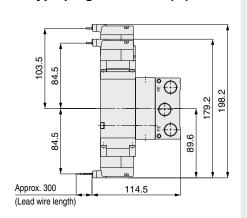


Unless otherwise indicated, dimensions are the same as Grommet (G).

#### DIN terminal (D) (Y)

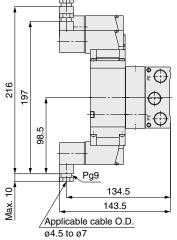

Unless otherwise indicated, dimensions are the same as Grommet (G).

#### Conduit terminal (T)

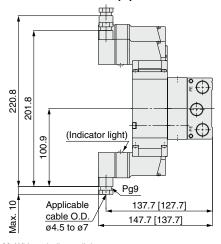





Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### **Manual Override**

# **⚠** Warning


Regardless of an electric signal for the solenoid valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.


#### ■ Non-locking push type

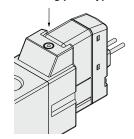

Push down on the manual override with a small screwdriver until it stops. Release the screwdriver and the manual override will return.


#### ■ Push-turn locking slotted type

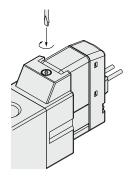


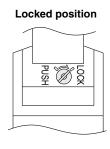

Push down on the manual override with a small flat head screwdriver until it stops. Turn it clockwise by  $90^{\circ}$  to lock it. Turn it counterclockwise to release it.

#### ■ Push-turn locking lever type

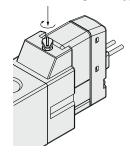

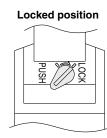

After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking push type

# **⚠** Caution

When locking the manual override on the push-turn locking type (D or E type), be sure to push it down before turning.

Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.


Do not apply excessive torque when turning the locking type manual override.  $(0.1 \text{ N} \cdot \text{m})$ 

#### How to Use L/M-Type Plug Connector

## **A** Caution


#### 1. Connector attachment/detachment

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

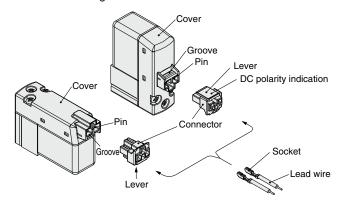

#### 2. Crimping lead wire and socket connection

Not necessary if ordering the lead wire pre-connected model. Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area. (Please contact SMC for details on the crimping tool.)

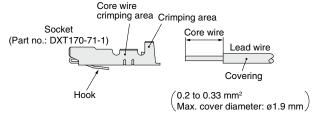


#### 3. Socket with lead wire attachment/detachment

#### Attachment

Insert the sockets into the square holes of the connector (with +, - indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then, confirm that they are locked by pulling lightly on the lead wires.

#### Detachment

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

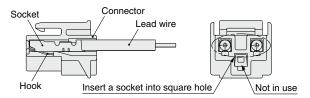





# Series VF

# **Specific Product Precautions 2**

2500 mm

3000 mm

5000 mm

30

Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### **Plug Connector Lead Wire Length**

### **∧** Caution

Plug connector lead wires have a standard length of 300 mm, however, the following lengths are also available.

aliable.				
How to	Order Connector As	sembly	1	
DC	: V200-30-4A-	$\Box$		
100 VAC	: V200-30-1A-	$\Rightarrow$		
200 VAC	: V200-30-2A-	$\Rightarrow$		
Other AC volta	ges : V200-30-3A-	$\Rightarrow$		
Without lead w (With a connector an	ire: <b>V200-30-A</b> and 2 sockets)			
		Lead	wire lengt	th
		Nil	300 mm	
		6	600 mm	
		10	1000 mm	
		15	1500 mm	
		20	2000 mm	

#### **How to Order**

Specify the connector assembly part number together with the part number for the plug connector type solenoid valve without connector.

(Example) Lead wire length: 2000 mm

DC	AC
VF3130-5LO1-02	VF3130-1LO1-02
V200-30-4A-20	V200-30-1A-20

#### **How to Use DIN Terminal Connector**


The DIN terminal with an IP65 (enclosure) is protected against dust and water, however, it must not be used in water.

# **⚠** Caution

#### Connection

- Loosen the set screw and pull the connector out of the solenoid valve terminal block.
- 2) After removing the set screw, insert a flat head screwdriver, etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- Loosen the terminal screws on the terminal block, insert the core of the lead wire into the terminal, and attach securely with the terminal screws.
  - In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires corresponding to the polarity (+ or -) that is printed on the terminal block.
- 4) Secure the cord by fastening the ground nut.
  In the case of connecting wires, select cabtire cords carefully because if those out of the specified range (ø4.5 to ø7) are used, it will not be able to satisfy IP65 (enclosure).
  Tighten the ground nut and set screw within the specified range

Tighten the ground nut and set screw within the specified range of torque.

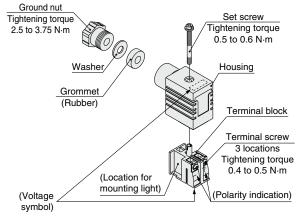

\* Refer to page 50 for the DIN connector part no.

#### Changing the entry direction

After separating the terminal block and housing, the cord entry direction can be changed by attaching the housing in the opposite direction.

\* Make sure not to damage elements, etc., with the lead wires of the cord.

#### **Precautions**

Plug in and pull out the connector vertically without tilting to one side.

#### Applicable cable

Cable O.D.: ø4.5 to ø7

(Reference) 0.5  $\mbox{mm}^2$  to 1.5  $\mbox{mm}^2,$  2-core or 3-core, equivalent to

JIS C 3306

#### Applicable crimped terminal

O terminal: R1.25-4M that is specified in JIS C 2805 Y terminal: 1.25-3L, which is released by JST Mfg. Co., Ltd. Stick terminal: Size 1.5 or shorter







Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### **DIN (EN175301-803) Terminal**


Y type DIN terminal corresponds to the DIN connector with terminal pitch 10 mm, which complies with EN175301-803B. Since the terminal pitch is different from the D type DIN connector, these two types are not interchangeable.

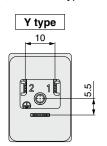

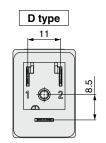

#### **How to Order DIN Connector**

### **∧** Caution

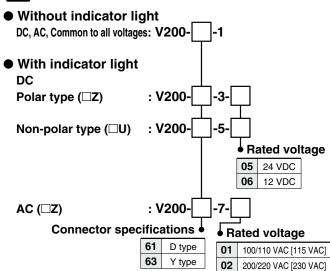


Note) For 24 VAC, the part no. is V200-61-5-B.

240 VAC

07

#### Circuit diagram with light (Built-in connector)

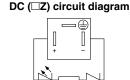


LED R D
LED: Light emitting diode
D: Protective diode
R: Resistor

AC (□Z) circuit diagram



NL: Neon light, R: Resistor

#### DC (□U) circuit diagram

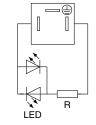

LED: Light emitting diode R: Resistor

Note) The 24 VAC specification is the same as those in the DC (□U) circuit diagram.

#### **How to Use Conduit Terminal**

# **∧** Caution


#### Connection

- Loosen the set screw and remove the terminal block cover from the terminal block.
- 2) Loosen the terminal screws on the terminal block, insert the core of the lead wire or crimped terminal into the terminal, and attach securely with the terminal screws.

  In addition, when using the DC mode type with a surge voltage suppressor
  - In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires to terminal 1 and 2 corresponding to the polarity (+ or –) as shown on the right figure.
- 3) Secure the cord by fastening the ground nut.

In the case of connecting wires, select cabtire cords carefully because if those out of the specified range (ø4.5 to ø7) are used, it will not be able to satisfy IP65 (enclosure).

Tighten the ground nut and set screw within the specified range of torque.

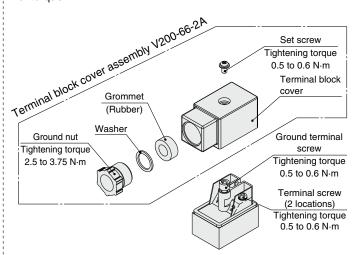

#### Applicable cable

Cable O.D.: ø4.5 to ø7

(Reference) 0.5 mm² to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306

#### Applicable crimped terminal

O terminal: Equivalent to R1.25-3 that is specified in JIS C 2805 Y terminal: Equivalent to 1.25-3, which is released by JST Mfg.

\* Use O terminal when a ground terminal is used.





Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### Light/Surge Voltage Suppressor


### **⚠** Caution

<DC>


#### ■ Polar type

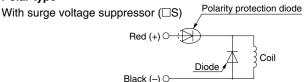

● Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□Z)

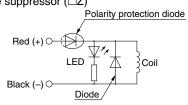


DIN or Conduit terminal

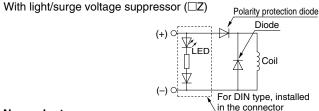


#### ■ Non-polar type


With surge voltage suppressor (□R)

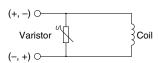

● Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□U)

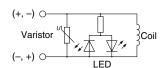

DIN or Conduit terminal

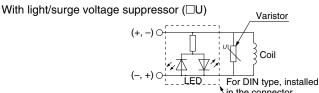


- Please connect correctly the lead wires to + (positive) and (negative) indications on the connector. (For non-polar type, the lead wires can be connected to either one.)
- When the valve with polarity protection diode is used, the voltage will drop by approx. 1 V. Therefore, pay attention to the allowable voltage fluctuation (For details, refer to the solenoid specifications of each type of valve).
- Solenoids, whose lead wires have been pre-wired: + (positive) side red and – (negative) side black.


#### ■ With power saving circuit

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 40 ms at 24 VDC.) Refer to the electrical power waveform as shown below.

#### <Electrical power waveform of energy saving type>

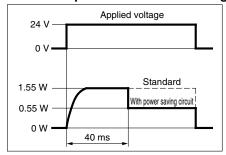

 Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

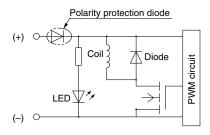


#### <AC>

# S type is not available, since a rectifier prevents surge voltage generation.

 ● Grommet or L/M-type plug connector With light/surge voltage suppressor (□Z)

Note) LED for 24 VAC.

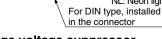

#### Residual voltage of the surge voltage suppressor

Note) If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the specifications on pages 2 and 16.

#### **Residual Voltage**

Curao voltago cuparoccor	D	AC	
Surge voltage suppressor	24 V	12 V	AC
S, Z	Appro	Approx. 1 V	
R, U	Approx. 47 V	Approx. 32 V	_

#### **Continuous Duty**

For applications such as mounting a valve on a control panel, incorporate measure to limit the heat radiation so that it is within the operating temperature range. Furthermore, do not touch it while it is being energized or right after it is energized.





Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### **One-touch Fittings Precautions**

# **⚠** Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the VF series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

#### Applicable Fittings: Series KQ2H, KQ2S

Series	Model	Dining part	Down sine			Appli	pplicable tubing O.D.						
Series	Model	Piping port	Port size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16			
	VF1□20-□□1-M5	4(A), 2(B)	M5										
		5(EA), 3(EB)	M5										
	VF1□20-□□1-01	4(A), 2(B)	1/8										
		5(EA), 3(EB)	M5										
VF1000	VF1□3□-□□1-M5	4(A), 2(B)	M5										
	VF1□3□-□□1-01	4(A), 2(B)	1/8										
	Type 30 manifold base	1(P), 5/3(R)	1/8										
	Type 31 manifold base	1(P)	1/8										
		5(EA), 3(EB)	M5										

Series	Model	Dining port	Port size			Applic	cable tubing	O.D.		
Series	iviodei	Piping port	1 OIT SIZE	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16
	VF3□3□-□□1-01	4(A), 2(B)	1/8							
	VF3U3U-UU1-U1	1(P), 5(EA), 3(EB)	1/8							
	VF3□3□-□□1-02	4(A), 2(B)	1/4							
		1(P), 5(EA), 3(EB)	P: 1/4, EA, EB: 1/8							
	VF3□4□-□□1-02	4(A), 2(B)	1/4							
VF3000		1(P), 5(EA), 3(EB)	1/4			I				
	VF3□4□-□□1-03	4(A), 2(B)	3/8							
	VF3U4U-UU1-U3	1(P), 5(EA), 3(EB)	3/8							
	Type 30 manifold base	1(P), 5(R), 3(R)	1/4							
	Type 40 manifold base	4(A), 2(B)	1/4							
	Type 40 manifold base	1(P), 5(R), 3(R)	1/4							

Ocalica	Madal	Distance	Doub sine			Applio	cable tubing	g O.D.		
Series	Model	Piping port	Port size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16
	VF5□2□-□□1-02	4(A), 2(B)	1/4							
	VF3U2U-UU1-U2	1(P), 5(EA), 3(EB)	1/4							
	VF5□2□-□□1-03	4(A), 2(B)	3/8							
	VI 3020-001-03	1(P), 5(EA), 3(EB)	3/8							
	VF5□44-□□1-02	4(A), 2(B)	1/4							
		1(P), 5(EA), 3(EB)	1/4							
VF5000	VF5□44-□□1-03	4(A), 2(B)	3/8							
VF3000	VF3U44-UU1-U3	1(P), 5(EA), 3(EB)	3/8							
	VF5□44-□□1-04	4(A), 2(B)	1/2							
	VF3U44-UU1-U4	1(P), 5(EA), 3(EB)	1/2							
	Type 20 manifold base	1(P), 5(R), 3(R)	3/8							
	Type 21 manifold base	1(P), 5(R), 3(R)	1/2							
	Type 40 manifold base	4(A), 2(B)	1/4							
	Type 40 manifold base	1(P), 5(R), 3(R)	3/8					I		





# Low Wattage Specification (*VF1000/3000*) Specific Product Precautions 6

Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### **Manual Override**

# <u> M</u> Warning


#### 1. Non-locking push type [Standard]

Press in the direction of the arrow.



#### 2. Push-turn locking slotted type [D type]

After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking push type.

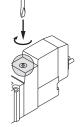



#### **△**Caution


When operating the D type, use a watchmakers' screwdriver and turn lightly.

[Torque: Less than 0.1 N·m]

#### 3. Push-turn locking lever type [E type]

After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking push type.



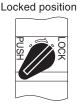

#### **∧**Caution

When locking the manual override with the push-turn locking type (D or E type), be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

#### Solenoid Valve for 200/220 VAC Specification

# **Marning**


AC specification solenoid valves with grommet or L/M-type plug connector have a built-in rectifier circuit in the pilot section to operate the DC coil. With 200/220VAC specification pilot valves, this built-in rectifier generates heat when energized. The surface may become hot depending on the energized condition; therefore, do not touch the solenoid valves.

#### How to Use L/M-Type Plug Connector

### **⚠** Caution

#### 1. Connector attachment/detachment


- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

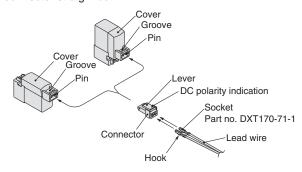

#### 2. Crimping lead wire and socket connection

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area.

(Please contact SMC for the dedicated crimping tools.)

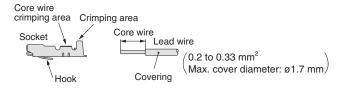


#### 3. Socket with lead wire attachment/detachment

#### Attachment

Insert the sockets into the square holes of the connector (with +, - indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then, confirm that they are locked by pulling lightly on the lead wires.

#### Detachment

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

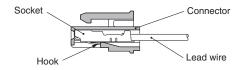





# Low Wattage Specification (*VF1000/3000*) Specific Product Precautions 7

Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

#### Light/Surge Voltage Suppressor


### **⚠** Caution

#### 1. L/M-type plug connector

<DC>

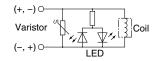


<AC>

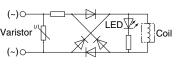


#### 2. DIN terminal

<DC>

With surge voltage suppressor (DS, DOS, YS, YOS)

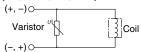


With light/surge voltage suppressor (DZ, YZ)

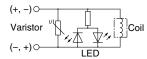

<AC>

With indicator light (DZ, YZ)

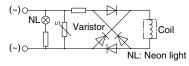

Note) If a varistor surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, pay attention to the surge voltage protection on the controller side.

#### **How to Use DIN Terminal**

# 1. ISO#: Conforming to EN-175301-803C (former DIN 43650C) (Distance between pins: 8 mm)

The DIN terminal type with an IP65 (enclosure) is protected against dust and water, however, it must not be used in water.

#### 2. Connection

- 1) Loosen the set screw and pull the connector out of the solenoid valve terminal block.
- 2) After removing the set screw, insert a flat head screwdriver, etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- 3) Loosen the terminal screws (slotted head screw) on the terminal block, insert the core of the lead wire into the terminal according to wiring connection, and attach securely with the terminal screws.
- 4) Tighten the ground nut to secure the wire.

#### 3. Changing the entry direction

After separating the terminal block and housing, the cord entry direction can be changed by attaching the housing in a different direction (four directions at  $90^{\circ}$  intervals).

\* Make sure not to damage a light, etc., with the lead wires of the cord.

#### **How to Use DIN Terminal**


#### 4. Precautions

Plug in and pull out the connector vertically without tilting to one side.

#### 5. Applicable cable

Cable O.D: ø3.5 to ø7

(Reference) 0.5 mm<sup>2</sup>, 2-core or 3-core, equivalent to JIS C 3306

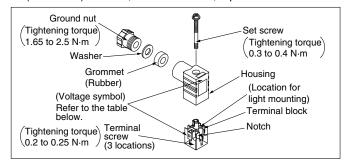

#### **DIN Connector Part No.**

# **⚠** Caution

#### DIN terminal (D)

Without indicator light	SY100-61-1	
With indicator light	1	
Rated voltage	Voltage symbol	Part no.
24 VDC	24 V	SY100-61-3-05
12 VDC	12 V	SY100-61-3-06
100 VAC	100 V	SY100-61-2-01
200 VAC	200 V	SY100-61-2-02
110 VAC	110 V	SY100-61-2-03
220 VAC	220 V	SY100-61-2-04


# DIN terminal (Y) Without indicator light

Rated voltage	Voltage symbol	Part no.
Common to all voltages	None	SY100-82-1

#### With indicator light

Rated voltage	Voltage symbol	Part no.
24 VDC	24 V	SY100-82-3-05
12 VDC	12 V	SY100-82-3-06
100 VAC	100 V	SY100-82-2-01
200 VAC	200 V	SY100-82-2-02
110 VAC (115VAC)	110 V	SY100-82-2-03
220 VAC (230 VAC)	220 V	SY100-82-2-04

#### Circuit diagram with light

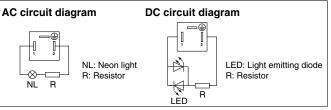



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of \*\* Warning: risk which, if not avoided, could result in death or serious injury.

**⚠** Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

#### **⚠** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

#### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Revision history	
Edition B * Addition of rated voltage 24 VAC to Series VF1000/3000/5000	oz
Edition C * Addition of low wattage specification to Series VF1000/3000	QX

▲ Safety Instructions | Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

# **SMC** Corporation

Akihabara UDX 15F

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN

Phone: 03-5207-8249 Fax: 03-5298-5362

http://www.smcworld.com

© 2012 SMC Corporation All Rights Reserved