

Compact 5-Port Solenoid Valve

JSY1000/3000/5000 Series

Plug-in







Size reduction has been made possible thanks to a flow increase.

This allows for space saving, weight reduction, and a large flow rate.



*1 JSY3000 only

*2 The cylinder speed is 300 mm/s.

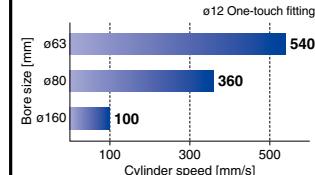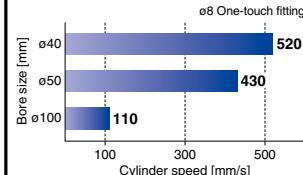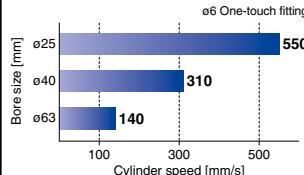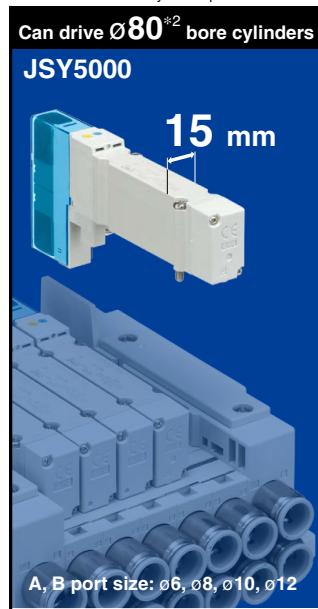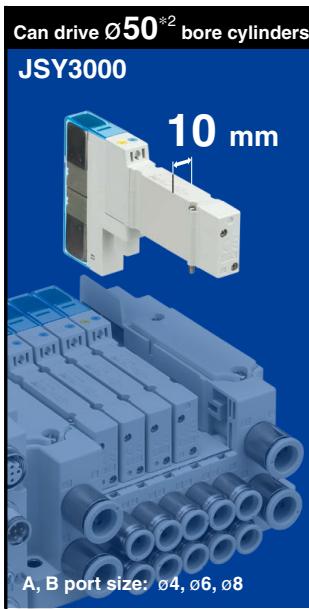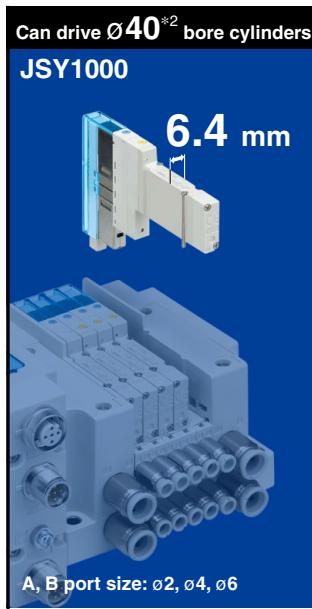


Refer to pages 30 to 33 for detailed conditions regarding the above cylinder speeds.

New


- Flame-retardant One-touch fittings for valve manifolds [p. 156-1](#)
- Plug-in sub-plate type [IP67 compliant] [p. 155-3](#)




Spacer Type Ejector can be mounted [p. 161-2](#)

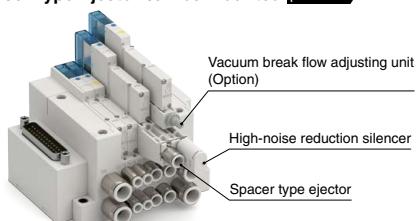

Series Map

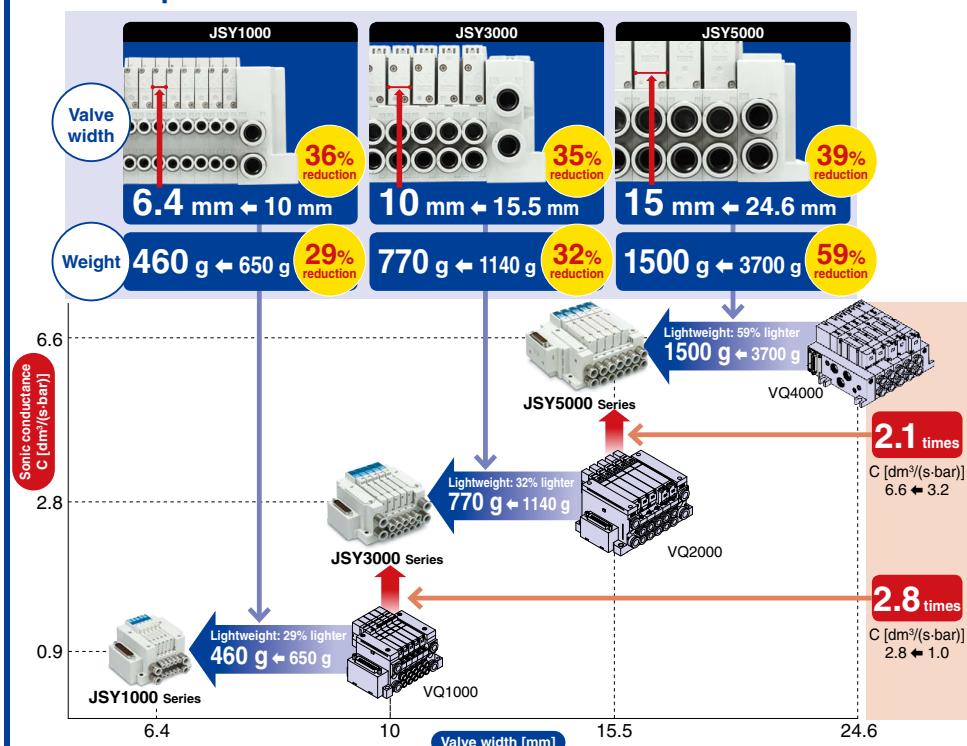

Wiring

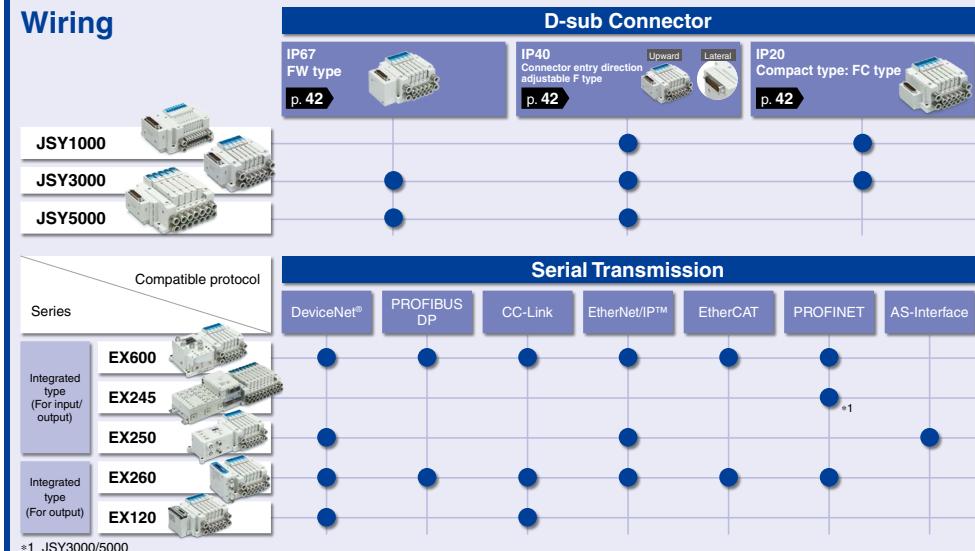

Compatible with wireless systems p. 84

■ Noise resistance

- Uses the 2.4 GHz ISM frequency band
- Frequency hopping: Every 2 ms/5 ms

■ Communication cables not required

- Reduced wiring work, space, and cost
- Minimized disconnection risk

■ High-speed connection


- From the remote power supply ON to start of communication:
Min. 250 ms

■ Communication response


- Wireless communication signal
Response time: **2 ms/5 ms**

Application Examples


For tool changing

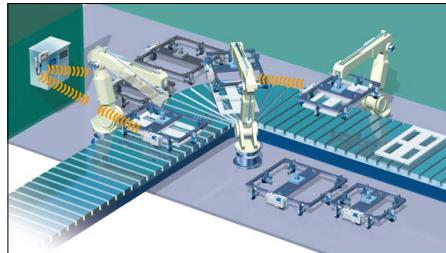

For spot welding

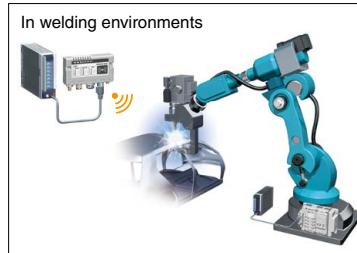

For rotary tables

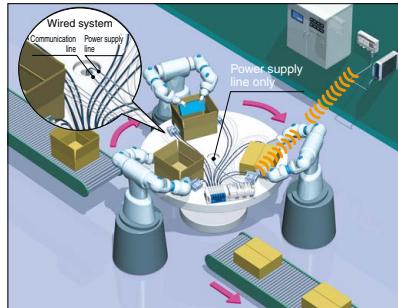

The EX260 and EX600 series support safety communication.

■ This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.

The safety communication protocol is a communication protocol that transmits safety-related data by network communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

■ Using the safety communication protocol

Refer to the EX260 and EX600 series catalogs.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.


For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.



Ejector can be mounted on a compact-size JSY1000 p. 161-1

The devices have been integrated into one for applications in which an actuator and vacuum suction are used together.

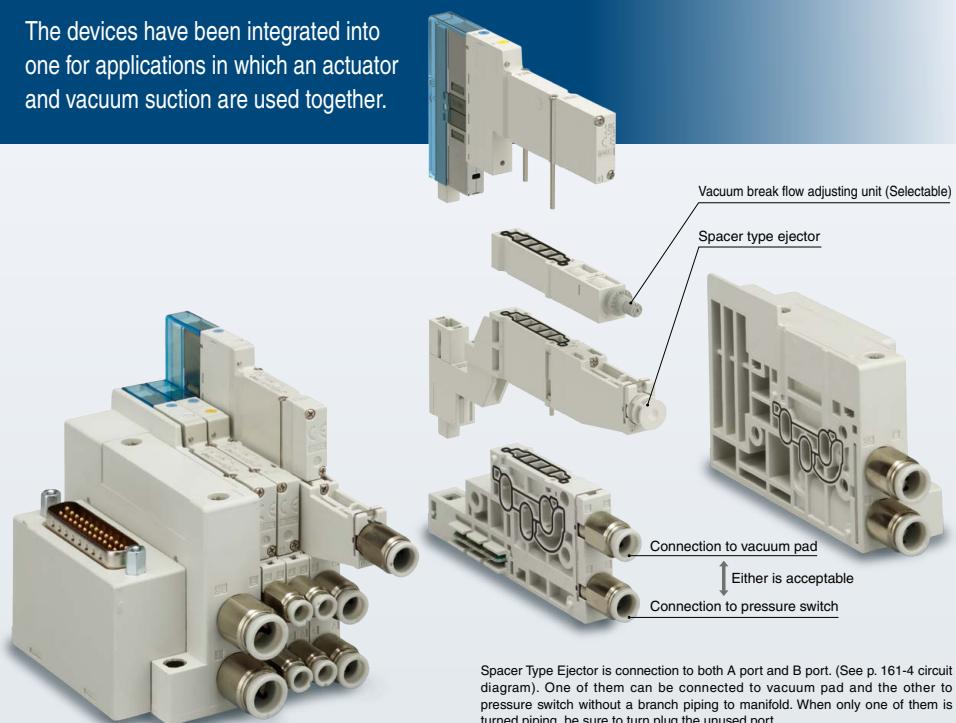

Spacer Type Ejector is connection to both A port and B port. (See p. 161-4 circuit diagram). One of them can be connected to vacuum pad and the other to pressure switch without a branch piping to manifold. When only one of them is turned piping, be sure to turn plug the unused port.

Application Examples

Material handling




Small robot

Air gripper + Vacuum pad, etc.



Pick and place


Slide table + Vacuum pad, etc.

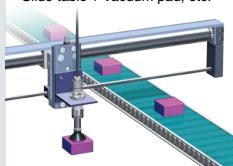

Small box making process

Cartoner


Cylinder + Vacuum pad, etc.

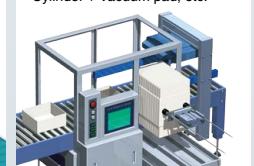

Separate fieldbus-compatible manifold JSY1000-E types are available to built-in pressure sensor and enable energy-saving control of ejector.

Click here for details.

Valve manifold integrated with ejector system
JSY1000-E

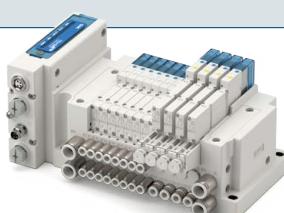

Series Variations


Valve series	Sonic conductance C [dm ³ /(s·bar)] 4/2→5/3 (A/B→EA/EB)	Rated voltage	Port size								1(P), 3/5(E) port	
			4(A), 2(B) port									
			ø2	ø4	ø6	ø8	ø10	ø12	1/8	1/4		
5-port	4(A), 2(B) port											
Plugin connector connecting base	JSY1000	ø4 ø6	0.87 0.91	24 VDC	●	●						ø8
							●					
Plugin sub-plate	JSY3000	ø8	2.77	24 VDC	●	●	●					ø10
							●	●	●			
Plug-in sub-plate	JSY5000	ø12	6.59	24 VDC				●	●	●		ø12
								●				
Plug-in sub-plate	JSY3000	1/8	2.3	24 VDC						●		1/8
Plug-in sub-plate	JSY5000	1/4	6.3	24 VDC							●	1/4

● Standard ○ Option ▲ Made to Order


Manifold Options

■ Individual SUP spacer

When the same manifold is to be used for different pressures, an individual SUP spacer can be used to act as a supply port for different pressures.

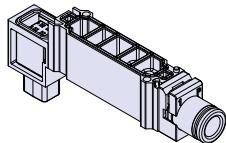


p. 153

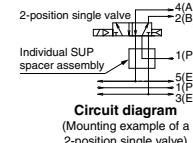


■ Individual EXH spacer

When valve exhaust affects other stations due to the circuit configuration, this spacer can be used for individual valve exhaust.

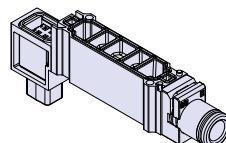


p. 153

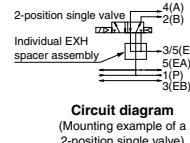


■ Spacer Type Ejector for JSY1000

Used for vacuum suction applications.

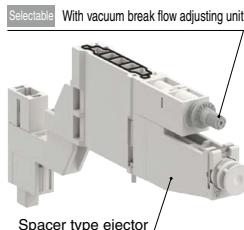

p. 161-1

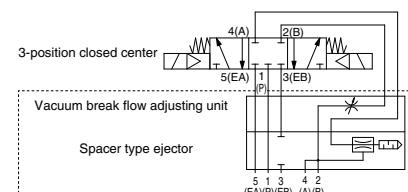


* The valves in the above circuit diagram are examples.

Circuit diagram

■ Blanking plate

Used when valve additions are expected or for maintenance

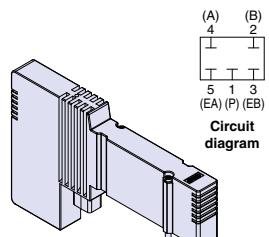

p. 153

Pitch width [mm]	Wiring		Manifold options										Valve options			
	Common specifications		Blanking plate	Individual SUP spacer	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve		SUP/EXH blocking disk	Label for blocking disk	Silencer (One-touch fitting connection type)	Built-in silencer	Vacuum/Low-pressure specification		Different pressures	Reverse pressure	Mixed fitting sizes
	Positive common	Negative common				—	—					External pilot	Individual SUP	External pilot	—	—
6.5	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
9	●	●	○	○	○	○	○	○	○	○	●	▲	○	●	●	—
11.5	—	—	—	—	—	—	—	—	—	—	—	—	—	—	●	●
16	—	●	●	—	—	—	—	—	—	—	—	▲	—	—	—	●

*1 Refer to "Manifold Specifications" on pages 38 and 39 for details on IP67.

Manifold Options

SUP/EXH blocking disk

(For the connector type manifold, Type 10)

[SUP blocking disk]

Inserting an SUP blocking disk in the pressure supply passage of a manifold valve can allow for the use of 2 different pressures (high and low) in 1 manifold.

[EXH blocking disk]



Inserting an EXH blocking disk in the exhaust passage of a manifold valve can separate the exhaust from the valve so it does not affect the other valves. It can also be used in positive pressure and vacuum pressure mixed manifolds. (2 pieces are required to block both the EA and EB sides of the EXH.)

p. 154



Labels for blocking disks

These labels can be used to indicate and confirm where on the manifold the SUP/EXH blocking disk assemblies were inserted. (3 labels of each)

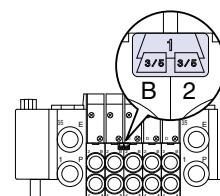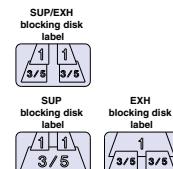


p. 154

Made to Order


Flame-retardant One-touch fittings for valve manifolds

p. 156-1

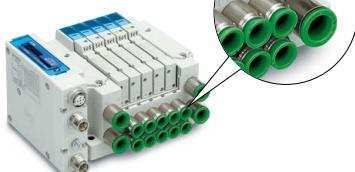

Tube Releasing Tool

This tool can be used to remove tubes from ports A and B. p. 151

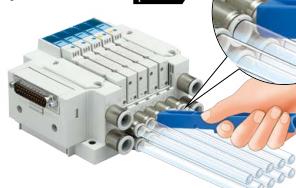

Vacuum Unit ZK2 Combination Manifold p. 140

JSY3000 valves and ZK2 ejectors can be connected to the same manifold. This allows for a **compact body** and **reduced wiring/wiring labor**.

Fieldbus compatible

The centralized electrical wiring can be connected to the fieldbus system.

For Input/Output

EX600 DeviceNet®, PROFIBUS DP, CC-Link, EtherNet/IP™, EtherCAT®, PROFINET, CIP Safety

EX245 PROFINET

EX250 DeviceNet®, PROFIBUS DP, EtherNet/IP™
AS-Interface

For Output

EX260 DeviceNet®, PROFIBUS DP, CC-Link, EtherNet/IP™, EtherCAT, PROFINET, Ethernet POWERLINK, IO-Link, PROFIsafe, CC-Link IE TSN, Safety over EtherCAT

EX120 DeviceNet®, CC-Link, CompoNet®

Various selectable wiring methods

D-sub connector

- Compact type: FC type (IP20)
- Connector entry direction adjustable: F type (IP40)
- FW type (IP67)

Terminal block box

- Spring type: TC type
- T type

Flat ribbon cable


- Compact type: PC/PGC/PHC type
- Connector entry direction adjustable: P/G/P/H type

Lead wire

Compact wireless remote

Integrated manifold

Centralized electrical wiring for
ejectors and valves (Reduced
wiring)

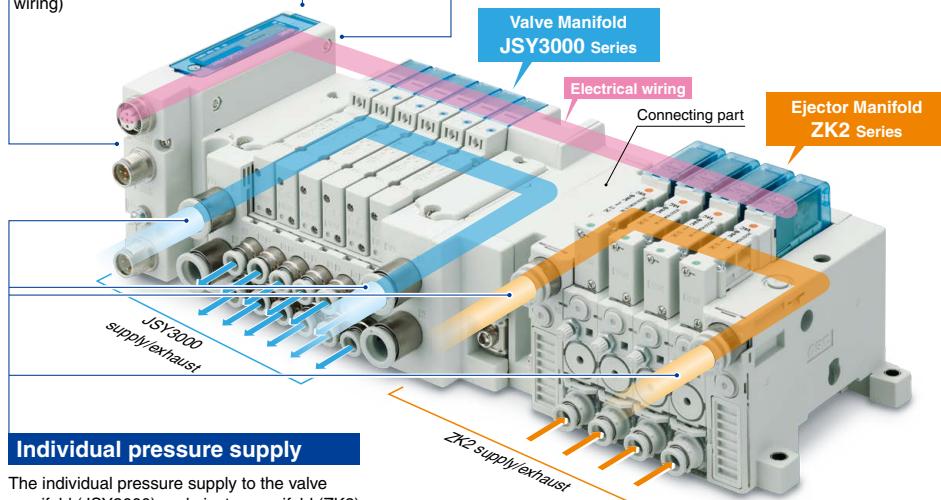

Individual pressure supply

The individual pressure supply to the valve manifold (JSY3000) and ejector manifold (ZK2) prevents the reduction of vacuum pressure due to pressure interference.

Specifications

Max. number of outputs: 32 (Valve + Ejector)

Valve stations: 2 to 24 stations (Max. number of outputs: 30,
Depends on whether single or double)

Ejector stations: 1 to 8 stations (Max. number of outputs: 16)

Centralized wiring and piping directions

Wiring and piping for valves and ejectors can be arranged in the same direction. (Wiring method: Terminal block box and lead wire or EX250 and EX260)

CONTENTS

Optimum Actuation Size Chart of Air Cylinder	p. 30
Valve Specifications	p. 34
Response Time	p. 35
Valve Weight	p. 35
Valve Construction	p. 36
Valve Replacement Parts: Pilot Valve	p. 37

Plug-in Connector Connecting Base	
Manifold Specifications	p. 38
Manifold Weight	p. 38
Manifold Flow Rate Characteristics	p. 38
ZK2 Combination Manifold Weight	p. 39
Connector Wiring Layout	p. 40



D-sub Connector, Flat Ribbon Cable [IP20/40/67]

How to Order	p. 42
Dimensions	
D-sub Connector (IP40/Connector Entry Direction Adjustable): F	p. 44
D-sub Connector (IP67): FW	p. 48
D-sub Connector (IP20/Compact Type): FC	p. 50
Flat Ribbon Cable	
(IP40/Connector Entry Direction Adjustable): P/PG/PH	p. 53
Flat Ribbon Cable (IP20/Compact Type): PC/PGC/PHC	p. 57

Electrical Wiring Specifications: D-sub Connector Cable	p. 60
Electrical Wiring Specifications: Flat Ribbon Cable Connector	p. 61

Spring Type Terminal Block Box, Terminal Block Box

How to Order	p. 64
Dimensions	
Spring Type Terminal Block Box: TC	p. 66
Terminal Block Box: T	p. 70
Connection/Electrical Wiring Specifications	p. 74

Lead Wire

How to Order	p. 76
Dimensions	p. 78
Electrical Wiring Specifications	p. 82

Compact Wireless Remote

How to Order	p. 83-1
Dimensions	p. 83-3

EX600 Integrated Type (For Input/Output)

Serial Transmission System	
How to Order	p. 84
Dimensions	p. 86

EX245 Integrated Type (For Input/Output)

Serial Transmission System	
How to Order	p. 94
Dimensions	p. 96

EX250 Integrated Type (For Input/Output)

Serial Transmission System	
How to Order	p. 98
Dimensions	p. 100

EX260 Integrated Type (For Output)

Serial Transmission System	
How to Order	p. 104
Dimensions	p. 108

EX120 Integrated Type (For Output)

Serial Transmission System

How to Order	p. 112
Dimensions	p. 114

Type 10/Side Ported: Common Dimensions

(External Pilot, Built-in Silencer/Mixed Size, Straight Port Type)	p. 118
--	--------

Manifold Exploded View [By Wiring]

D-sub Connector/Flat Ribbon Cable	
(IP40/Connector Entry Direction Adjustable)	p. 123
D-sub Connector (IP67)	p. 124
D-sub Connector/Flat Ribbon Cable (IP20/Compact Type)	p. 125
Spring Type Terminal Block Box	p. 126
Terminal Block Box	p. 127
Lead Wire	p. 128
Compact Wireless Remote	p. 128-1
EX600	p. 129
EX245	p. 131
EX250	p. 133
EX260	p. 134
EX120	p. 135

Manifold Exploded View [Common Parts]

Type 10: How to Increase Connector Type Manifolds	p. 136
For the JJ5SY1-10, JJ5SY3-10, JJ5SY5-10/	p. 136
Manifold Parts Nos.	p. 137

Vacuum Unit ZK2 Combination Manifold

How to Order	p. 140
Dimensions	p. 144

ZK2 Combination Manifold Exploded View

For the JJ5SY3-10-M (ZZK2□A)	p. 147
Manifold Parts Nos.	p. 148

ZK2□A Vacuum Ejector Manifold Exploded View

How to Increase Manifold Stations	p. 149
-----------------------------------	--------

One-touch Fittings, Plug, Clip, Port Plate,

Tube Releasing Tool	p. 151
---------------------	--------

Manifold Options

	p. 152
--	--------

Plug-in Sub-plate Specifications (M12 Connector)


How to Order	p. 155-3
Dimensions	p. 155-6

Made to Order

Specific Product Precautions	p. 157
------------------------------	--------

Optimum Actuation Size Chart of Air Cylinder


For JSY1000, A, B port: $\varnothing 4$

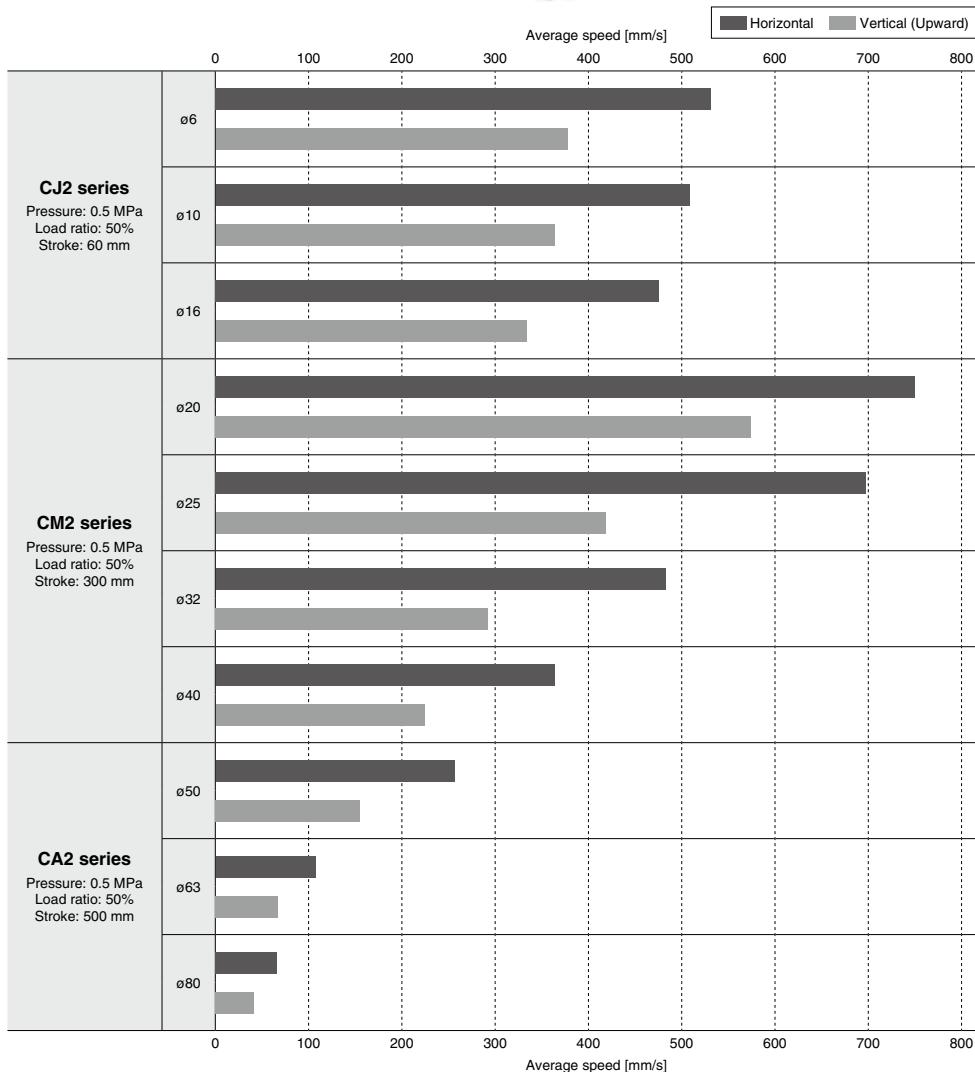

- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * Formula for load ratio: Load ratio = $((Load\ mass \times 9.8) / Theoretical\ output) \times 100\%$
- * Cylinder for horizontal use are based on the coefficient of rolling friction 0.1.
- * Operating piston speed is different depending on the applicable cylinder. Refer to the cylinder catalog for details.

Optimum Actuation Size Chart of Air Cylinder


For JSY1000, A, B port: $\phi 6$

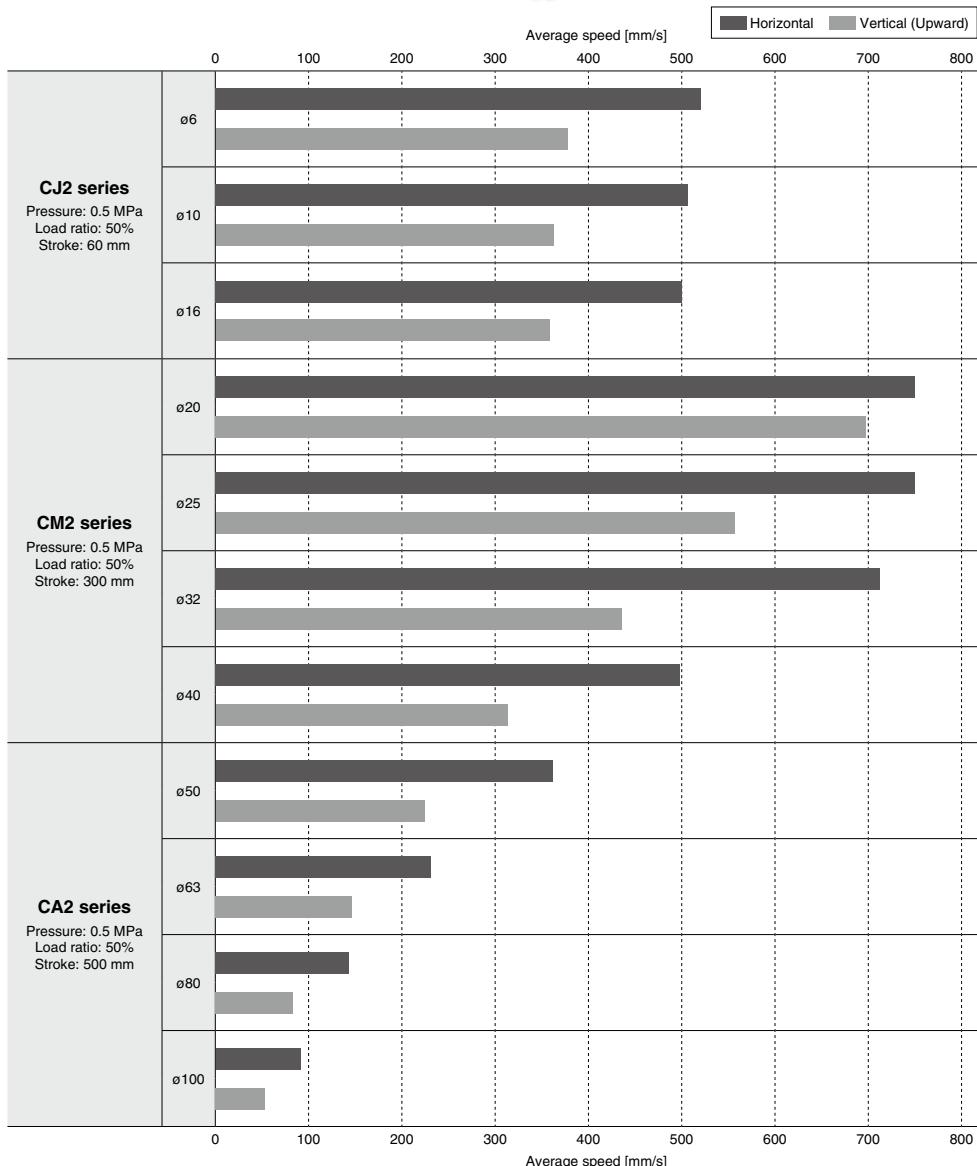

- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * Formula for load ratio: Load ratio = $((Load\ mass \times 9.8) / Theoretical\ output) \times 100\%$
- * Cylinder for horizontal use are based on the coefficient of rolling friction 0.1.
- * Operating piston speed is different depending on the applicable cylinder. Refer to the cylinder catalog for details.

Optimum Actuation Size Chart of Air Cylinder

For JSY3000, A, B port: $\varnothing 8$

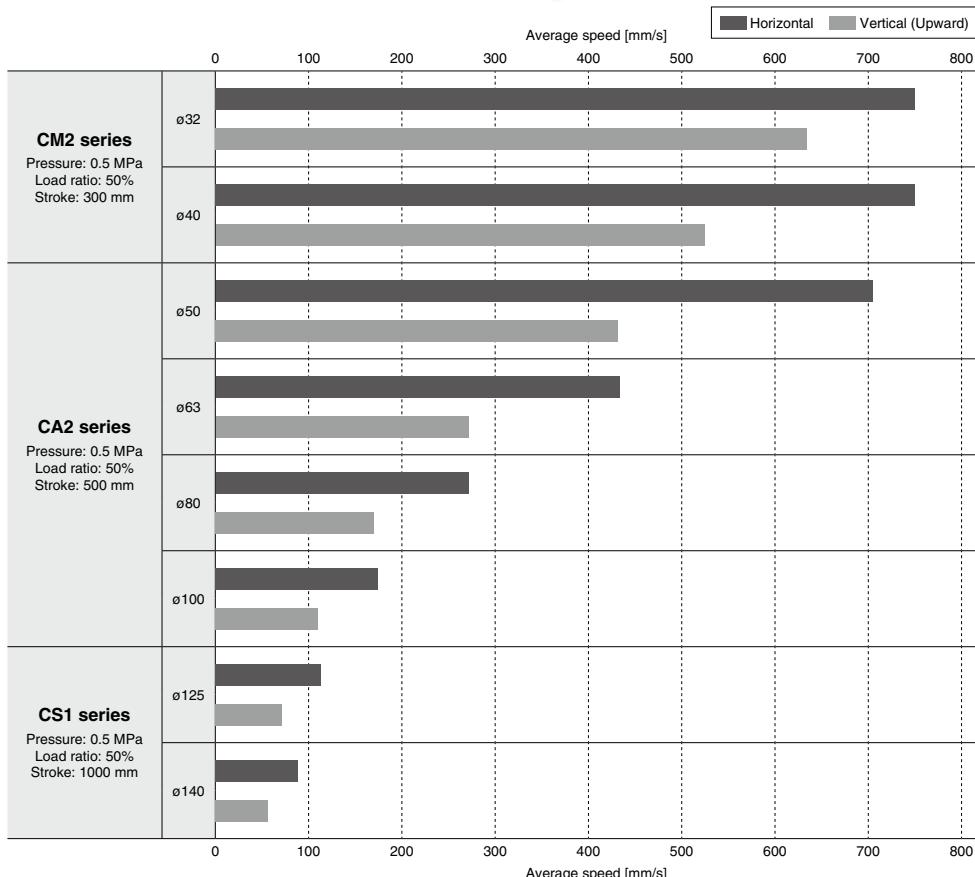


- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * Formula for load ratio: Load ratio = $((\text{Load mass} \times 9.8) / \text{Theoretical output}) \times 100\%$
- * Cylinder for horizontal use are based on the coefficient of rolling friction 0.1.
- * Operating piston speed is different depending on the applicable cylinder. Refer to the cylinder catalog for details.

Optimum Actuation Size Chart of Air Cylinder

For JSY5000, A, B port: $\varnothing 12$



Horizontal Vertical (Upward)

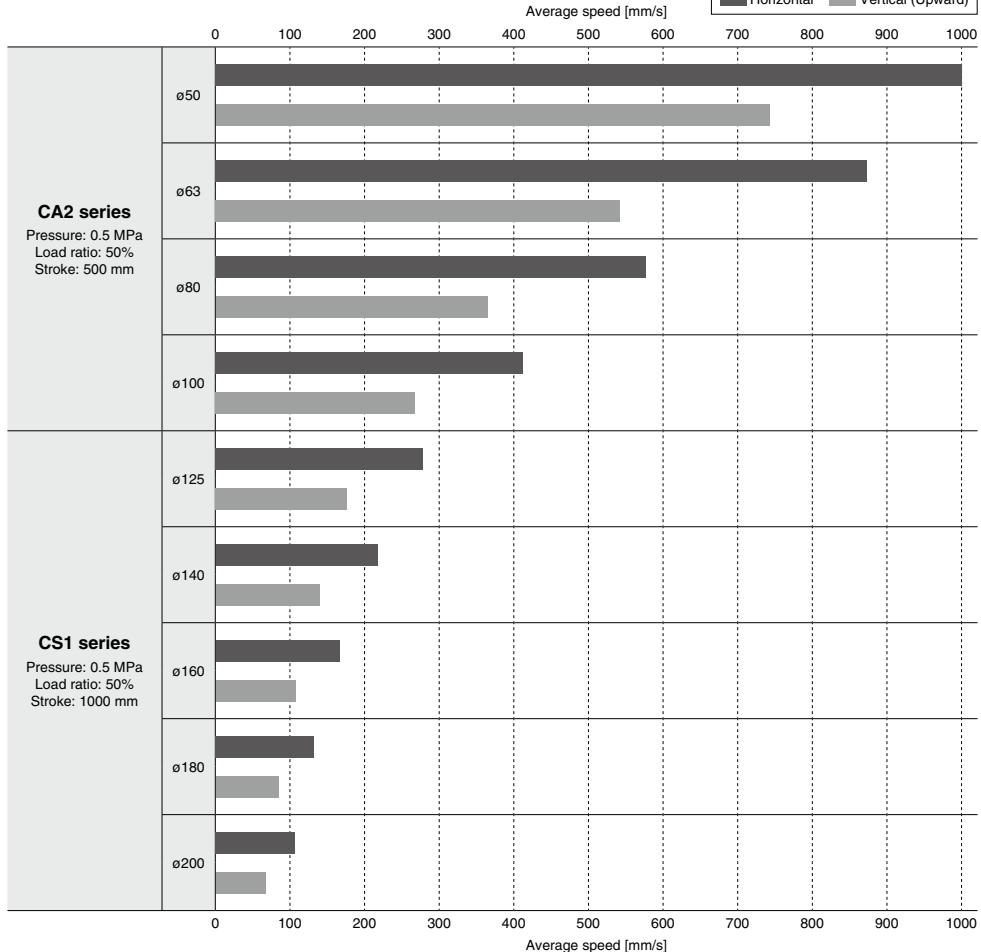

- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * Formula for load ratio: Load ratio = $((\text{Load mass} \times 9.8) / \text{Theoretical output}) \times 100\%$
- * Cylinder for horizontal use are based on the coefficient of rolling friction 0.1.
- * Operating piston speed is different depending on the applicable cylinder. Refer to the cylinder catalog for details.

JSY1000/3000/5000 Series

Valve Specifications

Valve Specifications

Valve type	Rubber seal				
Fluid	Air				
Internal pilot operating pressure range [MPa]	2-position single	0.15 to 0.7			
	2-position double	0.1 to 0.7			
	3-position	0.2 to 0.7			
	4-position dual 3-port valve	0.15 to 0.7			
External pilot (Made to Order) operating pressure range [MPa]	Operating pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.5)			
	Pilot pressure range	2-position single/double	0.25 to 0.7		
		4-position dual 3-port valve ^{*1}	Operating pressure + 0.2 or more (Min. 0.25) to 0.7		
	3-position	0.25 to 0.7			
Ambient and fluid temperatures [°C]					
Max. operating frequency [Hz]	JSY1000/3000	2-position single/double	5		
		4-position dual 3-port valve	3		
		3-position	3		
	JSY5000	2-position single/double	5		
		4-position dual 3-port valve	3		
		3-position	3		
Manual override					
Pilot exhaust type	Internal pilot		Non-locking push type		
	External pilot (Made to Order)		Push-turn locking slotted type		
			Push-turn locking lever type ^{*2}		
Lubrication					
Mounting orientation ^{*3}					
Impact/Vibration resistance ^{*3} [m/s ²]					
Enclosure					
Coil rated voltage [DC]					
Allowable voltage fluctuation [V]					
Power consumption [W]	Standard	JSY3000/5000	0.4		
	With power-saving circuit	JSY1000	0.2 ^{*4} [Inrush 0.5, Holding 0.2]		
	With power-saving circuit	JSY3000/5000	0.1 ^{*5} [Inrush 0.4, Holding 0.1]		
Surge voltage suppressor					
Indicator light					

*1 Only the JSY3000 can be selected for the 4-position dual 3-port valve external pilot specification.

*2 Not available for the JSY1000 series

*3 Impact resistance: No malfunction occurred when tested in the axial direction and at a right angle to the main valve and armature in both an energized and a de-energized state, once in each condition. (Value in the initial state)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz in the axial direction and at a right angle to the main valve and armature in both an energized and a de-energized state, once in each condition. (Value in the initial state)

Refer to page 160 for details on securing the DIN rail mounting type manifold.

*4 The JSY1000 series is only available as the power-saving type. Standard type (without power-saving circuit) cannot be selected.

*5 For details, refer to page 158.

Response Time

Series	Model	Type of actuation	Response time [ms] ¹	
			With light/surge voltage suppressor	
			Z type	U type
JSY1000	JSY1100	2-position single	15	—
	JSY1200	2-position double	7	
	JSY13/4/500	3-position	16	
	JSY1A/B/C00	4-position dual 3-port valve	19	
JSY3000	JSY3100	2-position single	27	18
	JSY3200	2-position double	13	12
	JSY33/4/500	3-position	27	24
	JSY3A/B/C00	4-position dual 3-port valve	23	23
JSY5000	JSY5100	2-position single	35	25
	JSY5200	2-position double	19	17
	JSY53/4/500	3-position	41	37
	JSY5A/B/C00	4-position dual 3-port valve	37	37

*1 Based on dynamic performance test, JIS B 8419-2010 (Coil temperature: 20°C, at rated voltage)

Valve Weight**JSY1000 Series**

Valve model	Type of actuation	Weight [g]
JSY1□00	2-position	Single 24
		Double 27
		Closed center
	3-position	Exhaust center 30
		Pressure center
4-position	Dual 3-port valve	27

JSY5000 Series

Valve model	Type of actuation	Weight [g]
JSY5□00	2-position	Single 91
		Double 100
		Closed center
	3-position	Exhaust center 110
		Pressure center
4-position	Dual 3-port valve	96

JSY3000 Series



Valve model	Type of actuation	Weight [g]
JSY3□00	2-position	Single 54
		Double 63
		Closed center
	3-position	Exhaust center 67
		Pressure center
4-position	Dual 3-port valve	63

JSY1000/3000/5000 Series



Valve Construction

Rubber Seal





2-position single

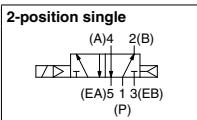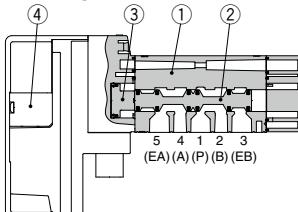





2-position double

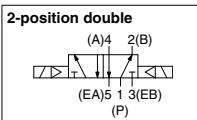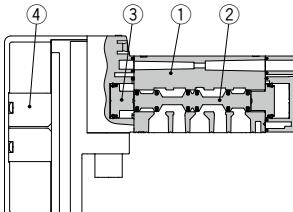

3-position closed center/exhaust center/pressure center

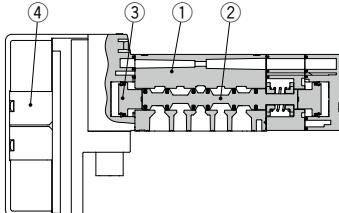

4-position dual 3-port valve

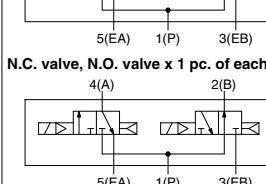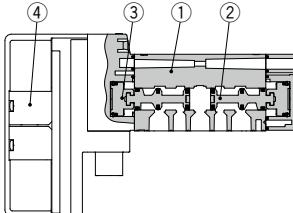

Component Parts

No.	Description	Material
1	Body	Aluminum die-casted
2	Spool valve (4-position solenoid valve:) Aluminum/HNBR	Resin/HNBR
3	Piston	Resin
4	Pilot valve assembly	—

Valve Replacement Parts: Pilot Valve

How to Order Pilot Valves (With a gasket and two mounting screws)^{*3}V112  - 5 A

Coil type	
NII	Standard
T	With power-saving circuit

Rated voltage	
5	24 VDC



Caution

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- When selecting the standard coil type, it is not possible to change to the power-saving circuit type.
- Replacement pilot valve for the JSY3000/5000

How to replace pilot valves**Pilot cover**

Series	Part no.
JSY3000	SY30V-25AS
JSY5000	SY50V-25A

* Pilot cover x 1 + B tight flat head screw x 1

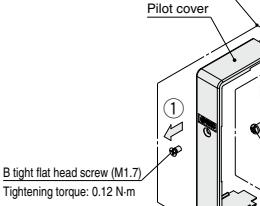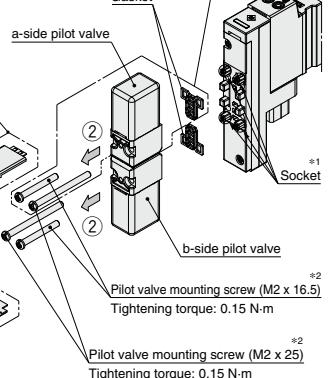**Pilot valve assembly**

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow ②.

* Assemble by following the removal procedure in reverse.

*1 Ensure the gasket is mounted, and take care not to bend the socket.

*2 Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.

*3 The pilot valve of the JSY1000 cannot be removed. This is irreplaceable.

JSY1000/3000/5000 Series Type 10

Plug-in Connector Connecting Base

Manifold Specifications

Model	D-sub connector			Flat ribbon cable						
	F type	FW type ^{*1}	FC type ^{*2}	P type	PG type	PH type	PC type ^{*2}	PGC type ^{*2}	PHC type ^{*2}	
Manifold type	Plug-in connector connecting base									
SUP/EXH port type	Common SUP/EXH (Common for the 3/5 port)									
Valve stations	2 to 24 stations			2 to 18 stations	2 to 8 stations	2 to 24 stations	2 to 18 stations	2 to 8 stations		
Applicable connector	D-sub connector conforming to MIL-C-24308 (Refer to page 60.)	Dedicated connector (Refer to page 60.)	D-sub connector conforming to MIL-C-24308 (Refer to page 60.)	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type	
Internal wiring	Positive common, Negative common									
Port size	1(P), 3/5(E) port	JSY1000	ø8 One-touch fitting							
		JSY3000	ø10 One-touch fitting							
Enclosure (Based on IEC 60529)	4(A), 2(B) port	JSY5000	ø12 One-touch fitting							
		JSY1000	ø2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting							
		JSY3000	ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting							
		JSY5000	ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting							
		JSY1000	IP40	IP20	IP40	IP20				
		JSY3000				IP20				
		JSY5000				—				

*1 The FW type is not available for the JSY1000. Protection class for the JSY1000 is IP20 or IP40.

*2 The FC, PC, PGC, and PHC types are not available for the JSY5000.

Manifold Weight

Model		① Per station	② Wiring								
			D-sub connector			Flat ribbon cable					
F type	FW type ^{*2}	FC type ^{*3}	P type	PG type	PH type	PC type ^{*3}	PGC type ^{*3}	PHC type ^{*3}			
JSY1000	for ø4	21.3	308	—	233	306	304	298	233	231	225
	for ø6	26.9	319	—	244	317	315	309	244	242	236
JSY3000 for ø8		42.7	332	330	287	330	328	322	257	255	249
JSY5000 for ø12		104	509	507	—	507	505	499	—	—	—

Formula for manifold weight^{*1}

$$W = ① \times n1 + ② \quad (n1: \text{stations})$$

JSY3000 series, D-sub connector, F type, 5 stations: $(42.7 \times 5) + 332 = 545.5 \text{ (g)}$

Manifold Flow Rate Characteristics

Model	Port size		Valve flow rate characteristics			
	1, 3/5 (P, E)	4, 2 (A, B)	1 → 4/2 (P → A/B)		4/2 → 3/5 (A/B → E)	
		C [dm ³ /(s-bar)]	b	C [dm ³ /(s-bar)]	b	
JJSY1-10 (Side ported)	C8	C4	0.63	0.46	0.87	0.47
		C6	0.96	0.30	0.91	0.48
JJSY3-10 (Side ported)	C10	C8	2.23	0.30	2.77	0.27
JJSY5-10 (Side ported)	C12	C12	6.40	0.22	6.59	0.22

* Calculation of effective area S and sonic conductance C: $S = 5.0 \times C$

* Values measured in accordance with ISO 6358:1989, JIS B 8390:2000



Terminal block box		Lead wire	Compact wireless remote	Serial wiring													
T type	TC type	L type	SW□	S6□ type (EX600)	SA□ type (EX245)	S□ type (EX250)	S□ type (EX260)	S3□ type (EX120)									
Plug-in connector connecting base																	
Common SUP/EXH (Common for the 3/5 port)																	
2 to 20 stations	2 to 24 stations							2 to 16 stations									
—																	
Positive common, Negative common				Negative common			Positive common, Negative common										
ø8 One-touch fitting																	
ø10 One-touch fitting																	
ø12 One-touch fitting																	
ø2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting																	
ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting																	
ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting																	
IP40																	
IP67				IP67 (I/O unit: partially IP40)		IP65	IP67	IP67 D-sub communication connector: IP40									
IP20																	

Unit: g

② Wiring											
Terminal block box		Lead wire			SW□ (Compact wireless remote)		Serial wiring				
T type	TC type	L type (0.6 m)	L type (1.5 m)	L type (3 m)	Without wireless adapter	With wireless adapter	S6□ type (EX600) ^④	SA□ type (EX245) ^④	S□ type (EX250) ^④	S□ type (EX260)	S3□ type (EX120)
680	471	404	514	698	338	428	829	—	520	448	367
689	480	413	523	707	397	437	838	—	529	457	367
709	500	433	543	727	417	457	858	935	549	477	391
914	705	638	748	932	622	662	1063	1100	754	682	568

*1 Weight: "W" is the value for the internal pilot specification, the max. fitting size, and the manifold only. The valve weight is not included. To obtain the weight with valves attached, add the valve weight given on page 35 for the appropriate number of stations.

*2 The FW type is not available for the JSY1000.

*3 The FC, PC, PGC, and PHC types are not available for the JSY5000.

*4 The serial unit weight is included, but the I/O unit weight is not included. Add the weight of the I/O unit for calculation.

ZK2 Combination Manifold Weight

Single Unit

Single unit model	Weight [g]
ZK2 (1 station for manifold, Without pressure sensor/switch)	99

Pressure Sensor/Pressure Switch for Vacuum

Pressure sensor/Pressure switch for vacuum model	Weight [g]
ZK2-PS□-A (Excludes the cable portion weight)	5
ZK2-ZS□-A (Excludes the lead wire with connector weight)	14

Formula for ZK2 combination manifold weight

$$Wz = ① \times n1 + ② + 3 \times n2 + ③ \quad (n1: JSY3000 \text{ stations}, n2: ZK2 \text{ stations})$$

JSY3000 P, E port entry	③
D side	158
U side	275
B side	292


The weight "Wz" is the value for the internal pilot specification, the max. fitting size, and the manifold only. To obtain the weight with valves and ejectors mounted, add the valve weight and the weight of the ejector, pressure sensor, and pressure switch for vacuum above, respectively, for the appropriate number of stations.

JSY1000/3000/5000 Series


Connector Wiring Layout

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring) (Manifold specification sheet is not necessary.)

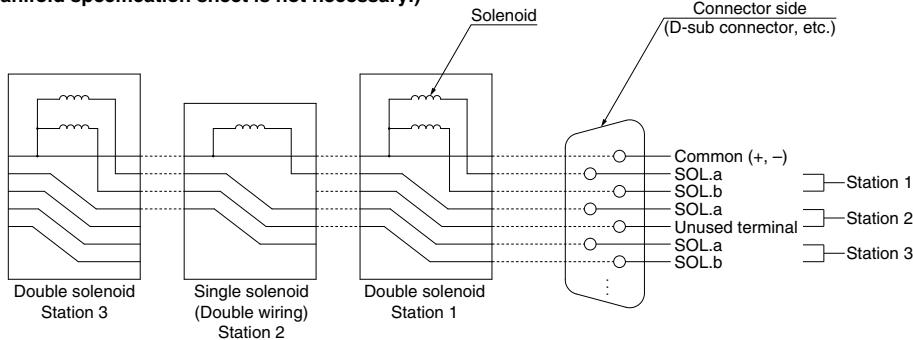

■ Single/double wiring are mixed. (Manifold specification sheet is necessary.)

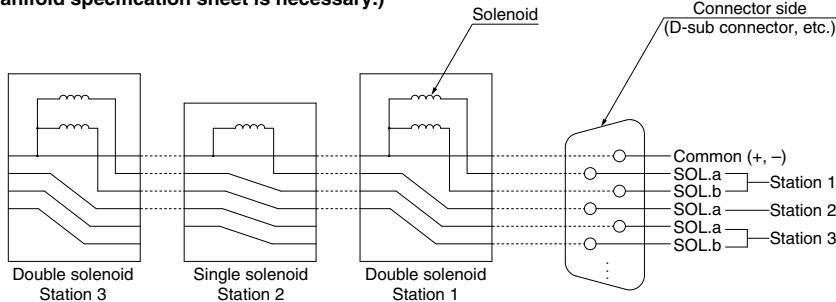

* These diagrams are for the purpose of explanation, and differ from the actual connector wiring.

Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable

Type 10
Side Ported

JSY1000/3000/5000 Series



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

JJ5SY **3** - **10** **F** **1** - **05** **D** - **C6**

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

Made to Order

Made to Order

(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)

Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

④ Connector entry direction

1: Upward	2: Lateral

* The connector entry direction for connector types "FW," "FC," and "P□C" cannot be rotated. If it is necessary to change, order connector block assembly and SUP/EXH block assembly (pages 124 and 125) separately.

⑥ P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)


⑦ SUP/EXH block assembly

NII	Internal pilot
S	Internal pilot, Built-in silencer

* The 3/5(E) port is plugged for the built-in silencer type.
* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑧ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM ^①	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)	ø8	ø10	ø12	



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

⑨ Mounting and Option

Symbol	Mounting
NII	Direct mounting
D□	DIN rail mounting

DIN Rail Option

NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown on the left.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

③ Connector type

F: D-sub connector Connector entry direction adjustable		FW: D-sub connector ^① <IP40> (25 pins)		FC: D-sub connector ^② Compact <IP20> (25 pins)
P: Flat ribbon cable Connector entry direction adjustable		PG: Flat ribbon cable <IP40> (26 pins)		PH: Flat ribbon cable <IP40> (10 pins)
PC: Flat ribbon cable ^② Compact type		PGC: Flat ribbon cable ^② Compact type		PHC: Flat ribbon cable ^② Compact <IP20> (10 pins)

*1 FW is not available for the JSY1000.

*2 Compact type is not available for the JSY5000.

⑤ Valve stations

F/FW/FC: D-sub connector (25 pins)

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring ^①
12	12 stations	
02	2 stations	Specified layout ^② (Up to 24 solenoids available)
⋮	⋮	
24	24 stations	

PG/PGC: Flat ribbon cable (20 pins)


Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring ^①
09	9 stations	
02	2 stations	Specified layout ^② (Up to 18 solenoids available)
⋮	⋮	
18	18 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

* This also includes the number of blanking plates.

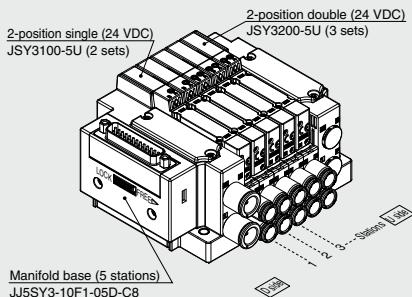How to Order Manifold Assembly**Example (JJ5SY3-10F1-□)**

JJ5SY3-10F1-05D-C8 ... 1 set (Type 10 5-station manifold base part no.)
 * JSY3100-5U 2 sets (2-position single part no.)
 * JSY3200-5U 3 sets (2-position double part no.)
 The asterisk denotes the symbol for the assembly.
 Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot**How to Order Valves (With mounting screw)**

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□** **-5** **□** **□**

1 2 3 4 5

**Made to Order**

(Refer to page 156 for details.)

Specification

External pilot

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A	4-position	N.C./N.C.
B	dual 3-port	N.O./N.O.
C		N.C./N.O.

3 Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

4 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY1000	JSY3000	JSY5000
U			Non-polar	—	●	●
Z	●	●	Polar Positive common	●	●	●
NZ			Polar Negative common	●	●	●

* When the non-polar common specification type is selected, take measures to prevent surge voltage. For details, refer to page 159.

* Only "Z" and "NZ" types are available with a power saving circuit.

5 Manual override


Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.

**Caution**

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.


JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10F₂¹- Stations U_D-C₄²(D)



Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

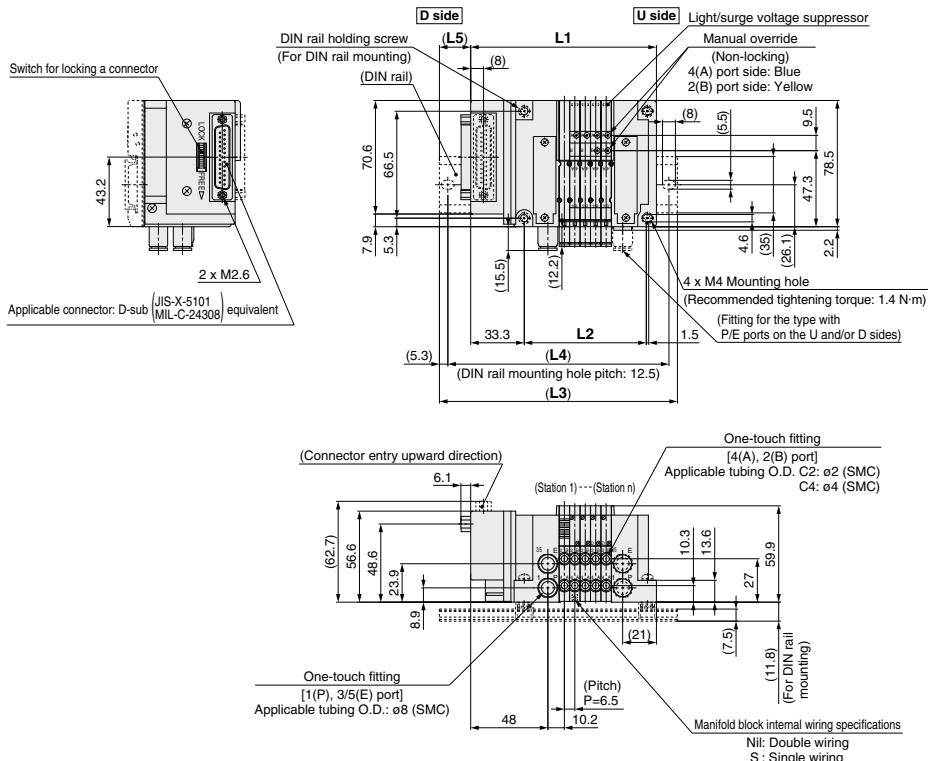

* These figures show the "JJ5SY1-10F2-05D-C4."

- * Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

- * When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations



L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		96	102.5	109	115.5	122	128.5	135	141.5	148	154.5	161	167.5	174	180.5	187
L2		56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3		135.5	135.5	148	148	160.5	160.5	173	173	185.5	185.5	198	198	210.5	210.5	223
L4		125	125	137.5	137.5	150	150	162.5	162.5	175	175	187.5	187.5	200	200	212.5
L5		23	19.5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21

L	n	17	18	19	20	21	22	23	24
L1		193.5	200	206.5	213	219.5	226	232.5	239
L2		153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3		223	235.5	248	248	260.5	260.5	273	273
L4		212.5	225	237.5	237.5	250	250	262.5	262.5
L5		19	21	24	20.5	22.5	20.5	22.5	20

Dimensions: JSY1000 Series

JJ5SY1-10F2-[Stations] B-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)
D-sub Connector (IP40/Connector Entry Direction Adjustable)

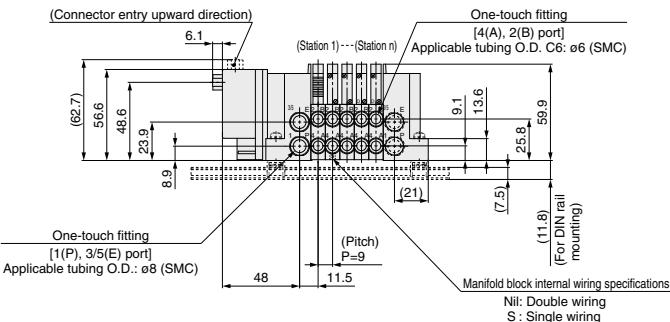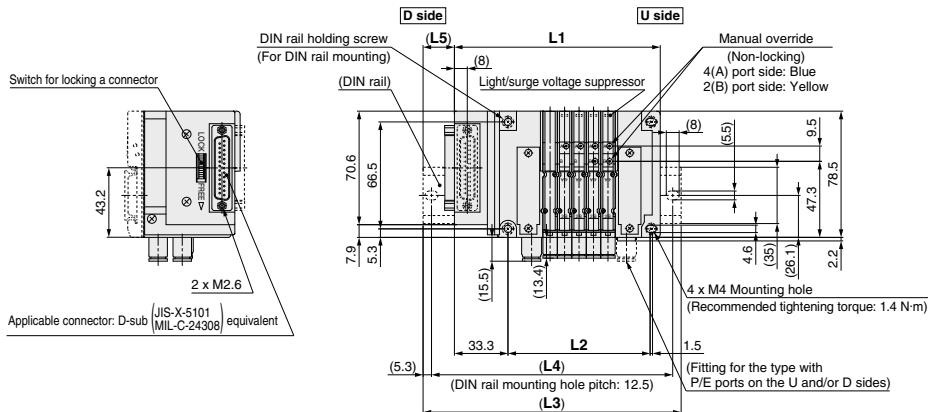

* These figures show the "JJ5SY1-10F2-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	101	110	119	128	137	146	155	164	173	182	191	200	209	218	227
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	135.5	148	160.5	160.5	173	185.5	185.5	198	210.5	223	223	235.5	248	248	260.5
L4	125	137.5	150	150	162.5	175	175	187.5	200	212.5	212.5	225	237.5	237.5	250
L5	20.5	22	24	19.5	21	23	18.5	20	22	23.5	19	21	22.5	18	20

L \ n	17	18	19	20	21	22	23	24
L1	236	245	254	263	272	281	290	299
L2	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	273	285.5	285.5	298	310.5	310.5	323	335.5
L4	262.5	275	275	287.5	300	300	312.5	325
L5	21.5	23.5	19	20.5	22.5	18	19.5	21.5


JSY1000/3000/5000 Series

Dimensions: JSY3000 Series


JJ5SY3-10F₂-[Stations] ^U_B C4 C8 (D)

Type 10/Side Ported

D-sub Connector (IP40/Connector Entry Direction Adjustable)

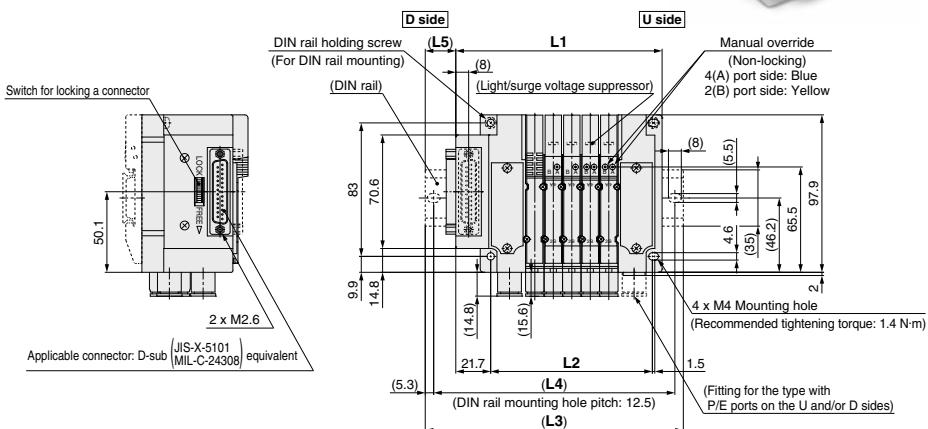

Manifold block internal wiring specifications

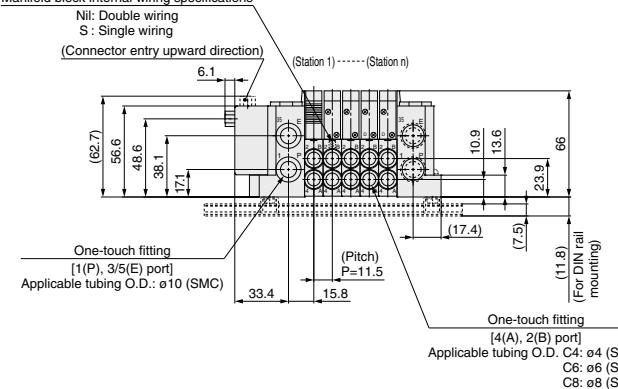

* These figures show the "JJ5SY3-10F2-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions


n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	93.8	105.3	116.8	128.3	139.8	151.3	162.8	174.3	185.8	197.3	208.8	220.3	231.8	243.3	254.8
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	273	285.5
L4	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	262.5	275
L5	17.5	18	18.5	19	19.5	20	20.5	21	21.5	22	22.5	23	23.5	18	18.5

L \ n	17	18	19	20	21	22	23	24
L1	266.3	277.8	289.3	300.8	312.3	323.8	335.3	346.8
L2	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	298	310.5	323	335.5	348	360.5	373	385.5
L4	287.5	300	312.5	325	337.5	350	362.5	375
L5	19	19.5	20	20.5	21	21.5	22	22.5

Dimensions: JSY5000 Series

JJ5SY5-10F2¹ Stations **U** **C6**
B **C8**
C10 **(D)**
C12

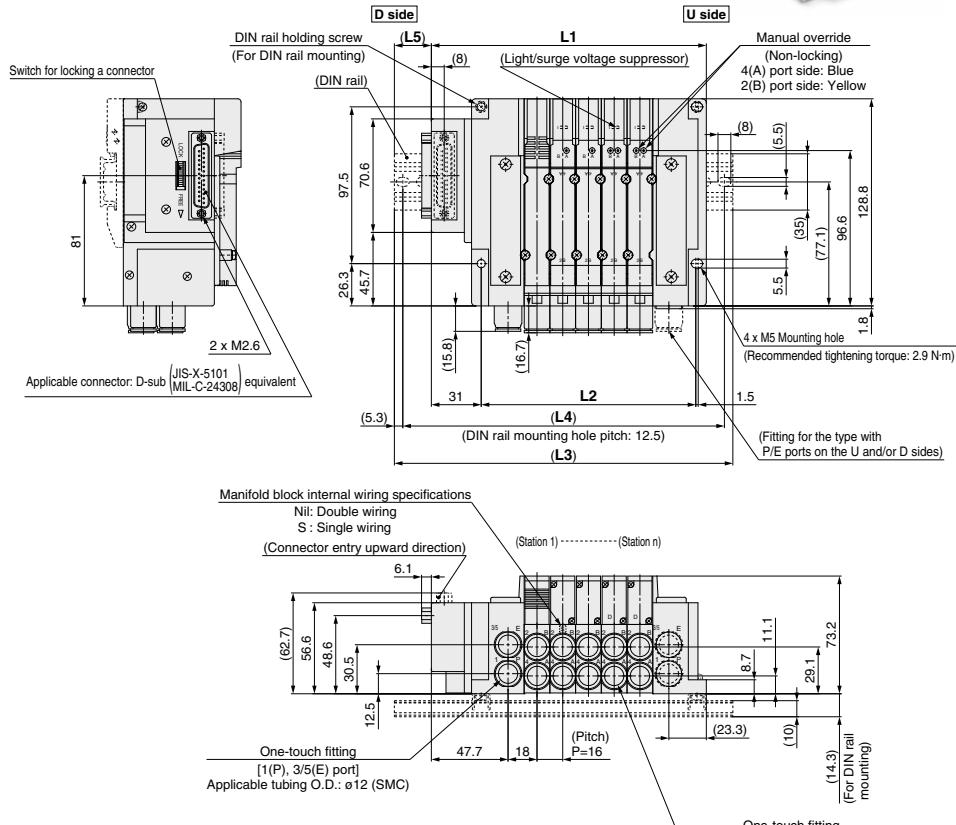

* These figures show the "JJ5SY5-10F2-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	123	139	155	171	187	203	219	235	251	267	283	299	315	331	347	
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5	
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	
L5	22	20	18.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	

L	n	17	18	19	20	21	22	23	24
L1	363	379	395	411	427	443	459	475	
L2	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5	
L3	398	410.5	435.5	448	460.5	473	498	510.5	
L4	387.5	400	425	437.5	450	462.5	487.5	500	
L5	20.5	19	23.5	21.5	20	18	22.5	21	



JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10FW¹- Stations ^U_B ^{C4}_{C8} (D)

Type 10/Side Ported

D-sub Connector (IP67)

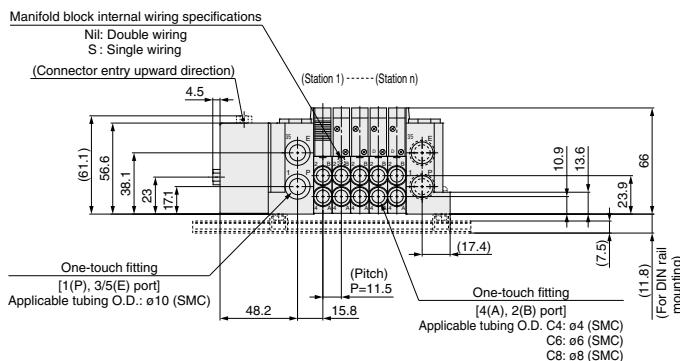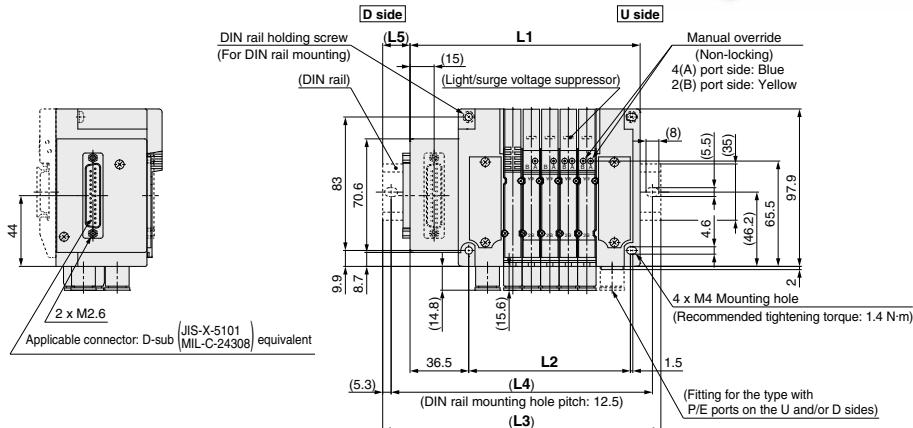

* These figures show the "JJ5SY3-10FW2-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	108.6	120.1	131.6	143.1	154.6	166.1	177.6	189.1	200.6	212.1	223.6	235.1	246.6	258.1	269.6
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	148	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	298
L4	137.5	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	287.5
L5	22	16	16.5	17	17.5	18	18.5	19	19.5	20	20.5	21	21.5	22	16.5


L / n	17	18	19	20	21	22	23	24
L1	281.1	292.6	304.1	315.6	327.1	338.6	350.1	361.6
L2	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	310.5	323	335.5	348	360.5	373	385.5	398
L4	300	312.5	325	337.5	350	362.5	375	387.5
L5	17	17.5	18	18.5	19	19.5	20	20.5

Dimensions: JSY5000 Series

JJ5SY5-10FW₂¹- Stations

Type 10/Side Ported

D-sub Connector (IP67)

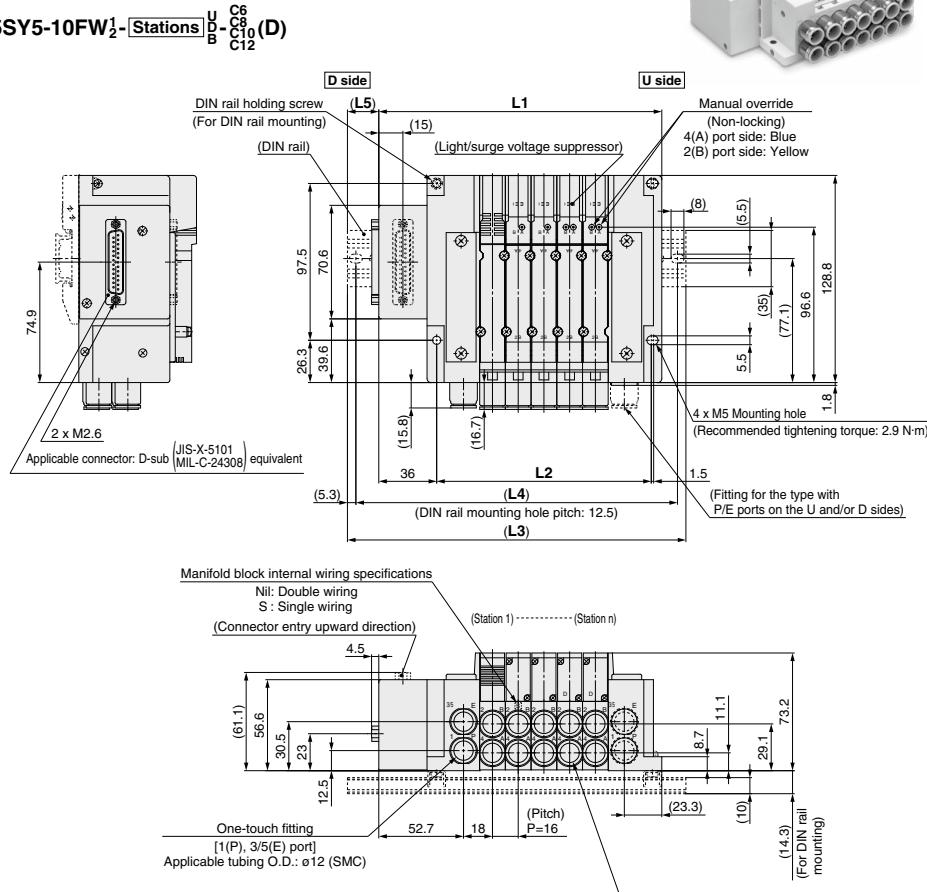

* These figures show the "J15SY5-10FW2-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		128	144	160	176	192	208	224	240	256	272	288	304	320	336	352
L2		85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3		160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5
L4		150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375
L5		18.5	17	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19

L	n	17	18	19	20	21	22	23	24
L1		368	384	400	416	432	448	464	480
L2		325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L3		398	423	435.5	448	460.5	485.5	498	510.5
L4		387.5	412.5	425	437.5	450	475	487.5	500
L5		17.5	22	20	18.5	16.5	21	19.5	17.5


JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10FC₂¹- Stations UD_B-C₂⁴(D)

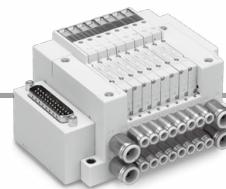

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

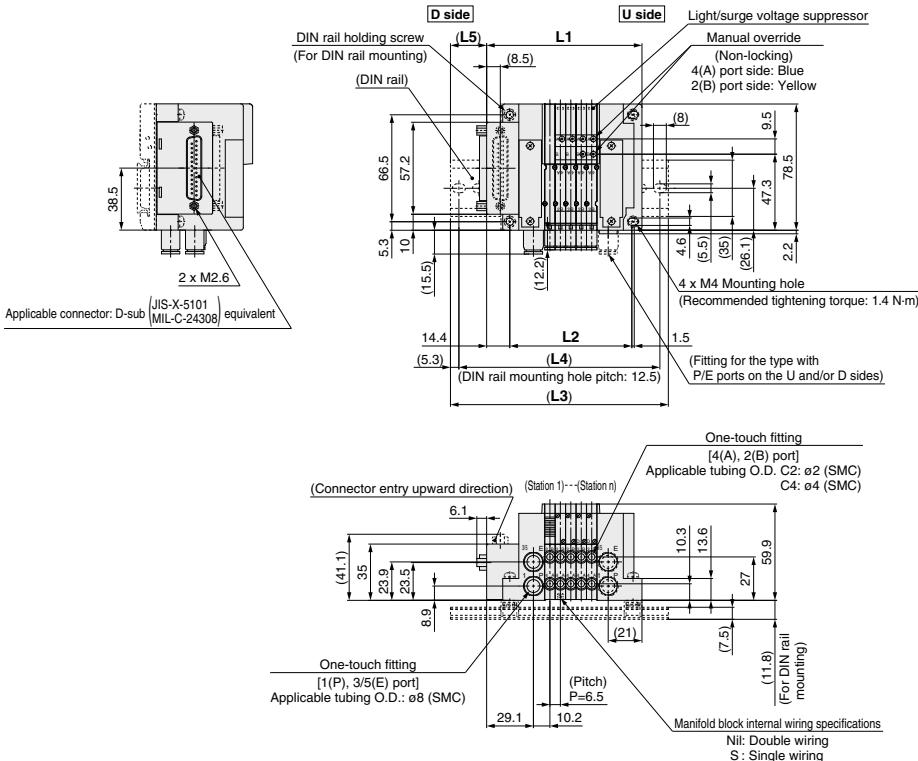

* These figures show the "JJ5SY1-10FC2-05D-C4."

- * Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

- * When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		77.1	83.6	90.1	96.6	103.1	109.6	116.1	122.6	129.1	135.6	142.1	148.6	155.1	161.6	168.1
L2		56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3		110.5	123	123	135.5	135.5	148	148	160.5	160.5	173	173	185.5	185.5	198	198
L4		100	112.5	112.5	125	125	137.5	137.5	137.5	150	150	162.5	162.5	175	175	187.5
L5		20	23	19.5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18


<u>L</u> \ <u>n</u>	17	18	19	20	21	22	23	24
L1	174.6	181.1	187.6	194.1	200.6	207.1	213.6	220.1
L2	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3	210.5	210.5	223	235.5	235.5	248	248	260.5
L4	200	200	212.5	225	225	237.5	237.5	250
L5	21	18	21	24	20.5	23.5	20.5	23.5

Dimensions: JSY1000 Series

JJ5SY1-10FC₂¹- Stations UD - C6(D)



Type 10/Side Ported (Applicable to ø6 fittings)
D-sub Connector (IP20/Compact Type)

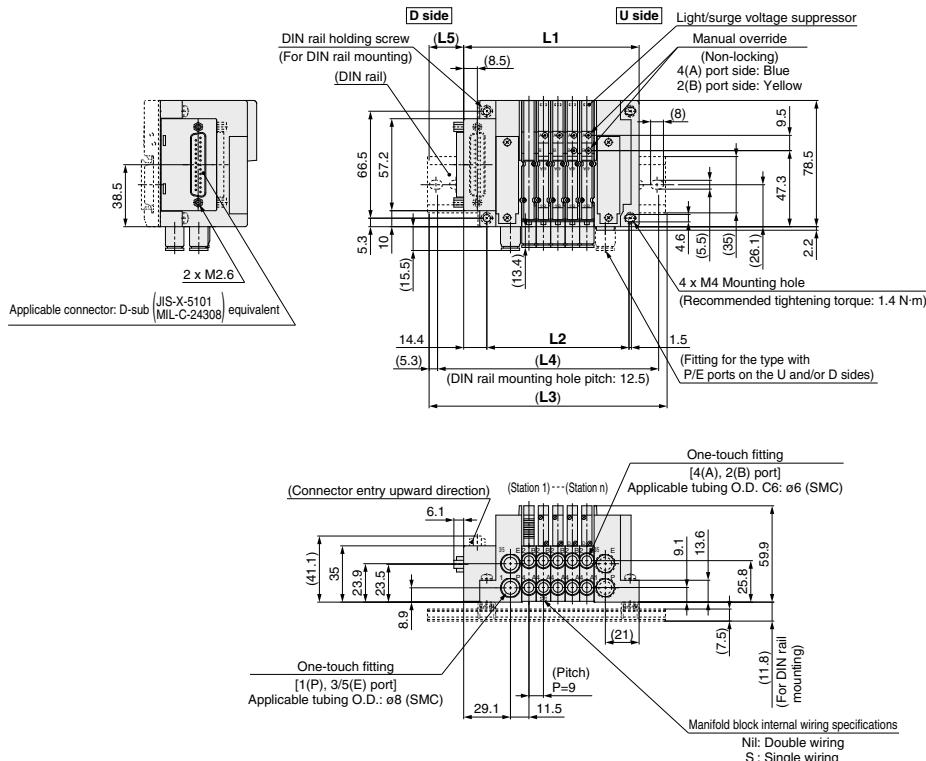

* These figures show the "JJ5SY1-10FC2-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		82.1	91.1	100.1	109.1	118.1	127.1	136.1	145.1	154.1	163.1	172.1	181.1	190.1	199.1	208.1
L2		61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3		123	123	135.5	148	148	160.5	173	185.5	185.5	198	210.5	210.5	223	235.5	248
L4		112.5	112.5	125	137.5	137.5	150	162.5	175	175	187.5	200	200	212.5	225	237.5
L5		23.5	19	21	22.5	18	20	21.5	23.5	19	20.5	22.5	18	19.5	21.5	23

L	n	17	18	19	20	21	22	23	24
L1		217.1	226.1	235.1	244.1	253.1	262.1	271.1	280.1
L2		196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3		248	260.5	273	285.5	285.5	298	310.5	310.5
L4		237.5	250	262.5	275	275	287.5	300	300
L5		18.5	20.5	22	24	19.5	21	23	18.5


JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10FC₂¹- Stations U C4
D C6 (D)
B C8



Type 10/Side Ported

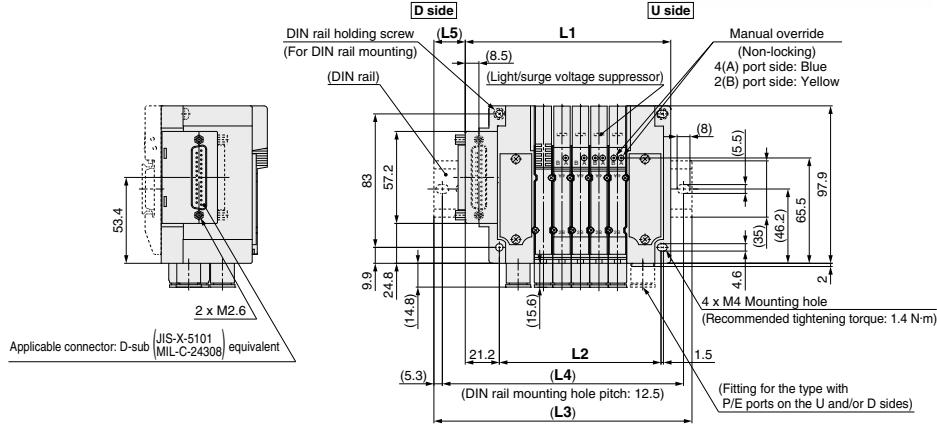


Manifold block internal wiring specifications

Nil: Double wiring

S: Single wiring

(Connector entry upward direction)

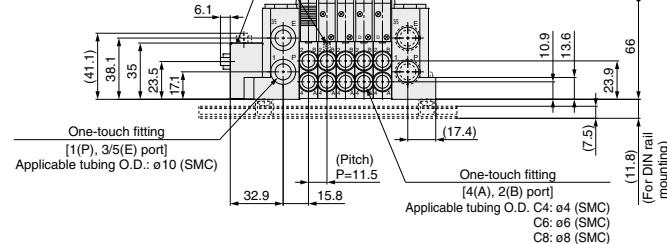

* These figures show the "JJ5SY3-10FC2-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations




L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		93.3	104.8	116.3	127.8	139.3	150.8	162.3	173.8	185.3	196.8	208.3	219.8	231.3	242.8	254.3
L2		66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3		123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	260.5	273	285.5
L4		112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	260	262.5	275
L5		18	18.5	19	19.5	20	20.5	21	21.5	22	22.5	23	23.5	17.5	18	18.5

<u>L</u> <u>n</u>	17	18	19	20	21	22	23	24
L1	265.8	277.3	288.8	300.3	311.8	323.3	334.8	346.3
L2	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	298	310.5	323	335.5	348	360.5	373	385.5
L4	287.5	300	312.5	325	337.5	350	362.5	375
L5	19	19.5	20	20.5	21	21.5	22	22.5

Dimensions: JSY1000 Series

JJ5SY1-10^P_{PG1-2} Stations^U_B C₂(D)

Type 10Side Ported (Applicable to ø2 and ø4 fittings)
Flat Ribbon Cable (P40/Connector Entry Direction Adjustable)

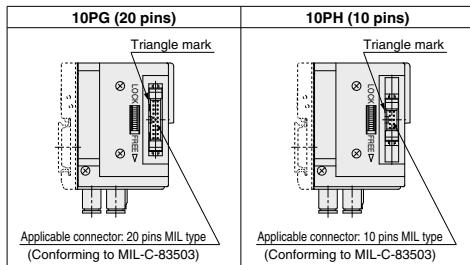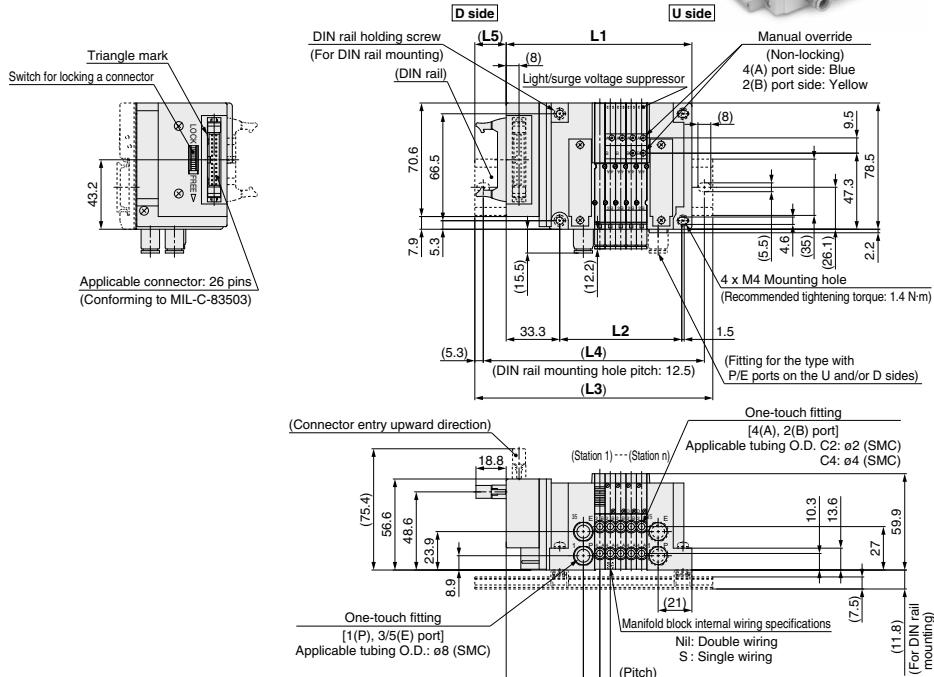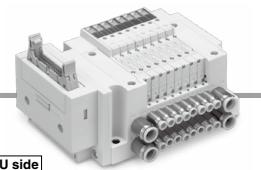

- * These figures show the "JJ5SY1-10P2-05D-C4."
- * Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.
- * Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.
- * When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96	102.5	109	115.5	122	128.5	135	141.5	148	154.5	161	167.5	174	180.5	187
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	135.5	135.5	148	148	160.5	160.5	173	173	185.5	185.5	198	198	210.5	210.5	223
L4	125	125	137.5	137.5	150	150	162.5	162.5	175	175	187.5	187.5	200	200	212.5
L5	23	19.5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21



L \ n	17	18	19	20	21	22	23	24
L1	193.5	200	206.5	213	219.5	226	232.5	239
L2	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3	223	235.5	248	248	260.5	260.5	273	273
L4	212.5	225	237.5	237.5	250	250	262.5	262.5
L5	18	21	24	20.5	23.5	20.5	23.5	20

JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10^P_{G1-2} [Stations]^U_B C6(D)

Type 10Side Ported (Applicable to ø6 fittings)
Flat Ribbon Cable (IP40/Connector Entry Direction Adjustable)

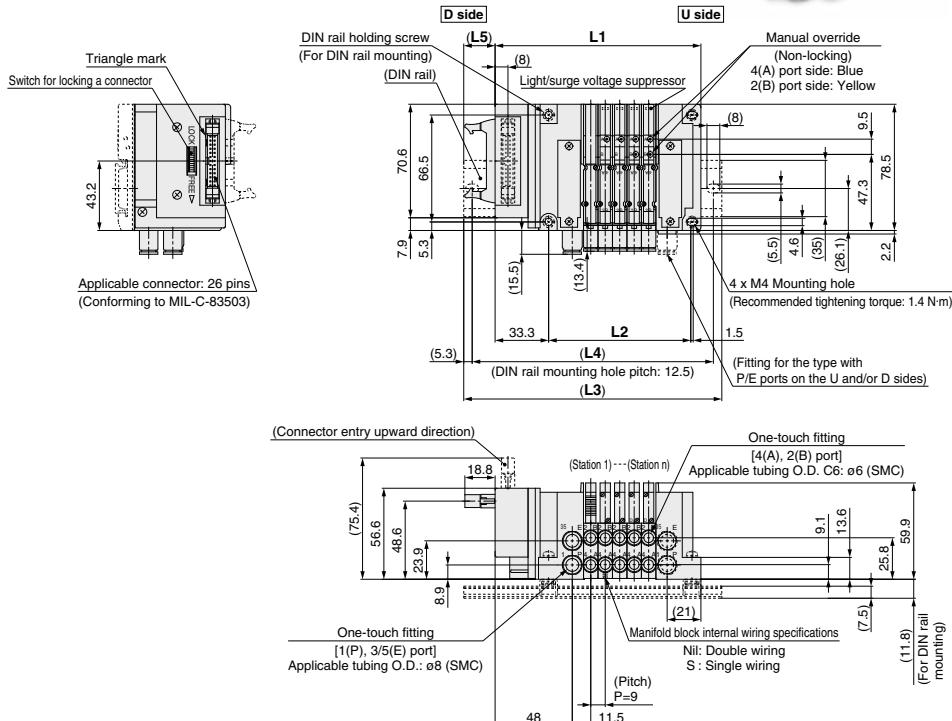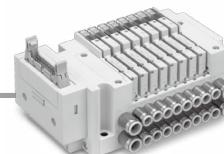

10PG (20 pins)	10PH (10 pins)
<p>Triangle mark</p> <p>Applicable connector: 20 pins MIL type (Conforming to MIL-C-83503)</p>	<p>Triangle mark</p> <p>Applicable connector: 10 pins MIL type (Conforming to MIL-C-83503)</p>

- * These figures show the "JJ5SY1-10P2-05D-C6."
- * Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.
- * Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.
- * When CM is selected for mixed A, B port size, refer to page 121 for dimensions.


L: Dimensions

n: Stations



	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	101	110	119	128	137	146	155	164	173	182	191	200	209	218	227	236	245	254	263	272	281	290	299
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	135.5	148	160.5	160.5	173	185.5	185.5	198	210.5	223	223	235.5	248	248	260.5	273	285.5	285.5	298	310.5	310.5	323	335.5
L4	125	137.5	150	150	162.5	175	175	187.5	200	212.5	212.5	225	237.5	237.5	250	262.5	275	275	287.5	300	300	312.5	325
L5	20.5	22	24	19.5	21	23	18.5	20	22	23.5	19	21	22.5	18	20	21.5	23.5	19	20.5	22.5	18	19.5	21.5

Dimensions: JSY3000 Series

JJ5SY3-10^P_{PG}1-₂ Stations^U_B C⁴_{C8}(D)

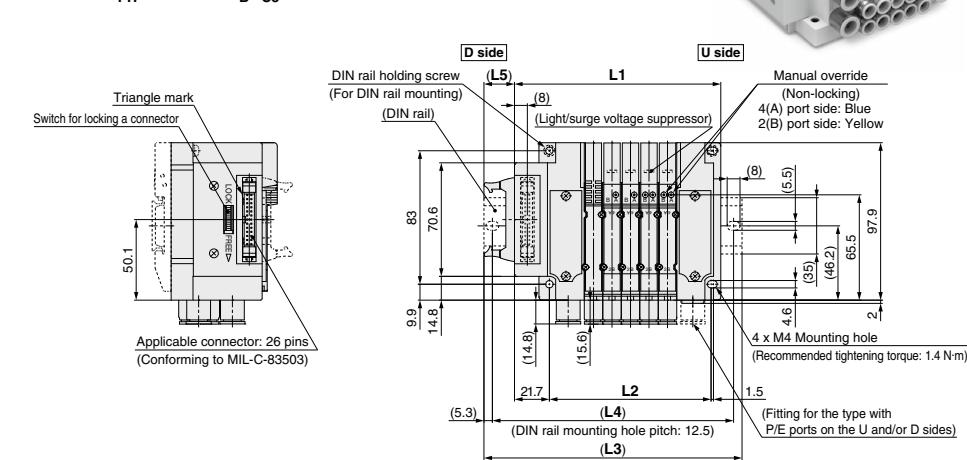

Manifold block internal wiring specifications

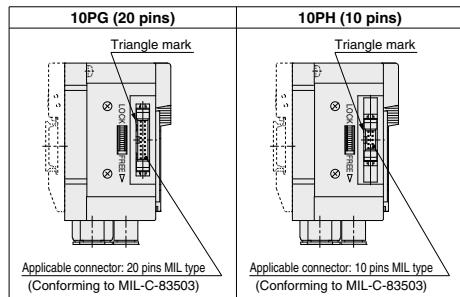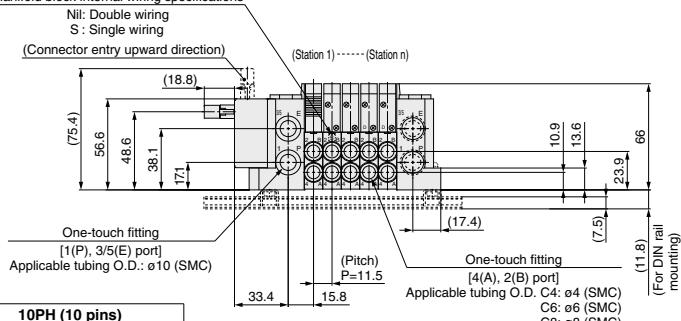

* These figures show the "JJ5SY3-10P2-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

* Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

L: Dimensions

n: Stations

$\frac{1}{n}$	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	93.8	105.3	116.8	128.3	139.8	151.3	162.8	174.3	185.8	197.3	208.8	220.3	231.8	243.3	254.8	266.3	277.8	289.3	300.8	312.3	323.8	335.3	346.8
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
L4	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	337.5	350	362.5	375
L5	17.5	18	18.5	19	19.5	20	20.5	21	21.5	22	22.5	23	23.5	18	18.5	19	19.5	20	20.5	21	21.5	22	22.5





JSY1000/3000/5000 Series

Dimensions: JSY5000 Series

JJ5SY5-10^{P₁G₂}-_{PH₂}- _{Stations_U}-_{C₆}-_{C₁₀}(D_{C₁₂})

Type 10/Side Ported

Flat Ribbon Cable (P40/Connector Entry Direction Adjustable)

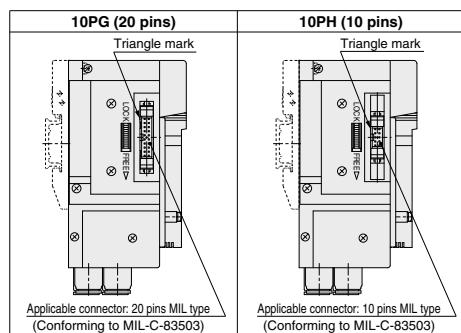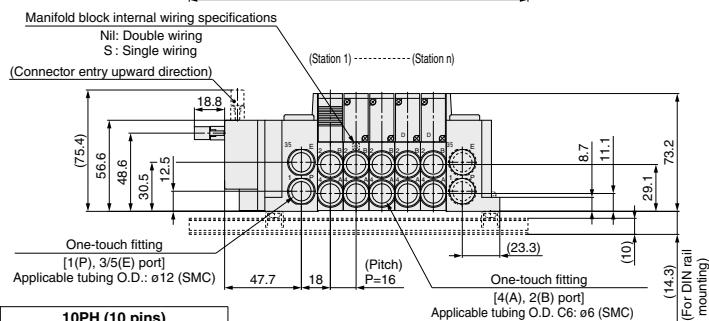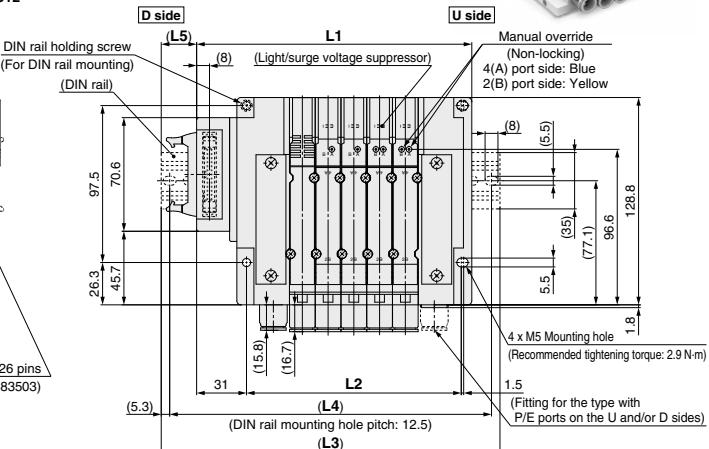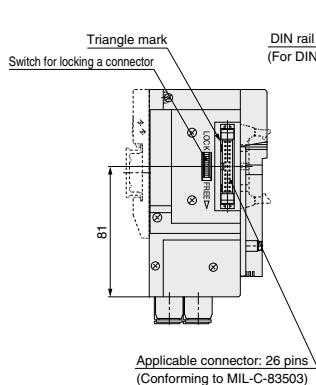

- * These figures show the "JJ5SY5-10P2-05D-C12."
- * Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.
- * Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

L: Dimensions




n: Stations

	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	123	139	155	171	187	203	219	235	251	267	283	299	315	331	347	363	379	395	411	427	443	459	475
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	22	20	18.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21

Dimensions: JSY1000 Series

JJ5SY1-10^{P_{PG}}_G^{C₁}-_{PH}^U_B^{C₄}(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)
Flat Ribbon Cable (IP20/Compact Type)

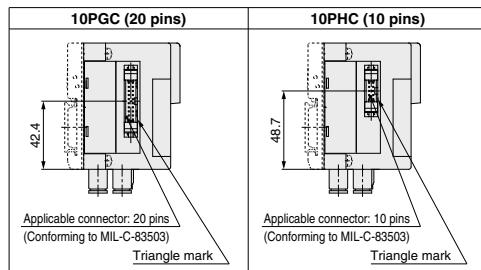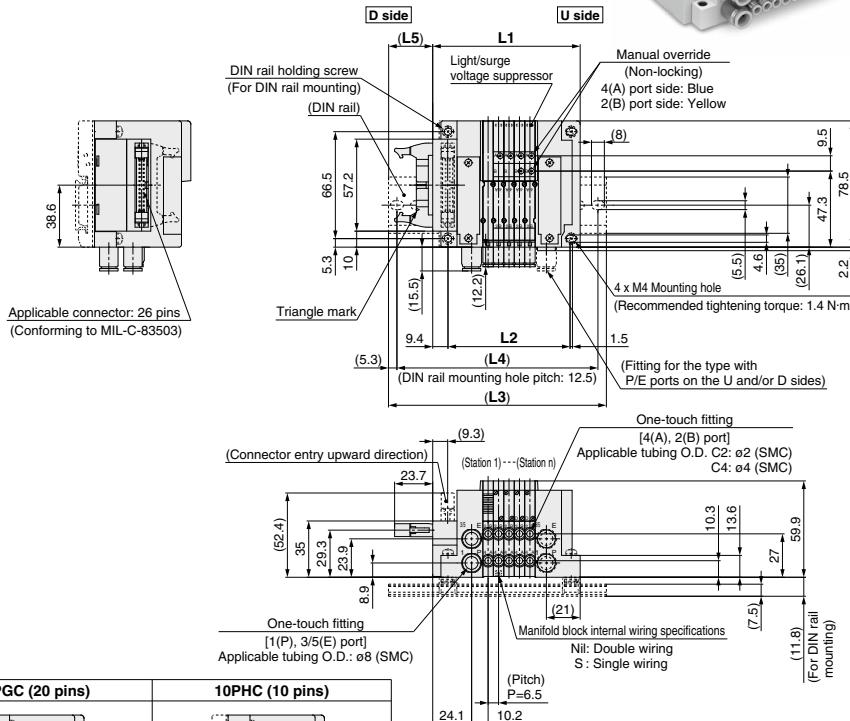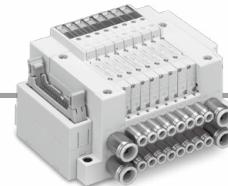

- * These figures show the "JJ5SY1-10PC2-05D-C4".
- * Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.
- * Only connectors are different for 10PGC and 10PHC. L1 to L5 dimensions are the same as 10PC type.
- * When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	72.1	78.6	85.1	91.6	98.1	104.6	111.1	117.6	124.1	130.6	137.1	143.6	150.1	156.6	163.1
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	110.5	123	123	135.5	135.5	148	148	160.5	160.5	173	173	185.5	185.5	198	198
L4	100	112.5	112.5	125	125	137.5	137.5	150	150	162.5	162.5	175	175	187.5	187.5
L5	25	28	24.5	27.5	24.5	27.5	24	27	24	27	23.5	26.5	23.5	26.5	23

L \ n	17	18	19	20	21	22	23	24
L1	169.6	176.1	182.6	189.1	195.6	202.1	208.6	215.1
L2	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3	210.5	210.5	223	235.5	235.5	248	248	260.5
L4	200	200	212.5	225	225	237.5	237.5	250
L5	26	23	26	29	25.5	28.5	25.5	28.5

JSY1000/3000/5000 Series


Dimensions: JSY1000 Series

JJ5SY1-10 P_{PG} C₂¹- Stations U_D - C6(D)
P_{PH}



Type 10/Side Ported (Applicable to 96 fittings)

Flat Ribbon Cable (IP20/Compact Type)

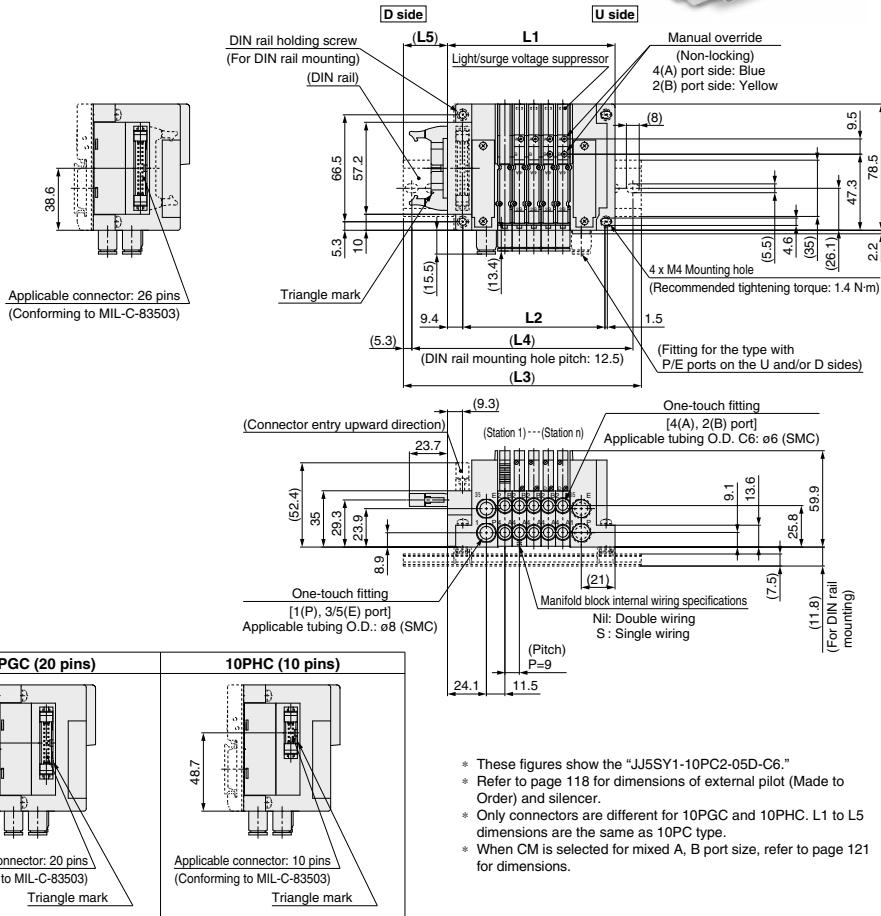

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		77.1	86.1	95.1	104.1	113.1	122.1	131.1	140.1	149.1	158.1	167.1	176.1	185.1	194.1	203.1
L2		61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3		123	123	135.5	148	148	160.5	173	185.5	185.5	198	210.5	210.5	223	235.5	248
L4		112.5	112.5	125	137.5	137.5	150	162.5	175	175	187.5	200	200	212.5	225	237.5
L5		28.5	24	26	27.5	23	25	26.5	28.5	24	25.5	27.5	23	24.5	26.5	28

L	n	17	18	19	20	21	22	23	24
L1		212.1	221.1	230.1	239.1	248.1	257.1	266.1	275.1
L2		196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3		248	260.5	273	285.5	285.5	298	310.5	310.5
L4		237.5	250	262.5	275	275	287.5	300	300
L5		23.5	25.5	27	29	24.5	26	28	23.5

- * These figures show the "JJ5SY1-10PC2-05D-C6."
- * Refer to page 118 for dimensions of external pilot (Made to Order).



Only connectors are different for 10POC and 10PHQ. L1 to L

- * Only connectors are different for 10PGC and 10PHC. L1 to L5 dimensions are the same as 10PC type.
- * When CM is selected for mixed A, B port size, refer to page 121.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

Dimensions: JSY3000 Series

JJ5SY3-10 ^P_{PG} C₂¹ - Stations ^U_D C₄⁶ (D) ^{PH}_B C₈

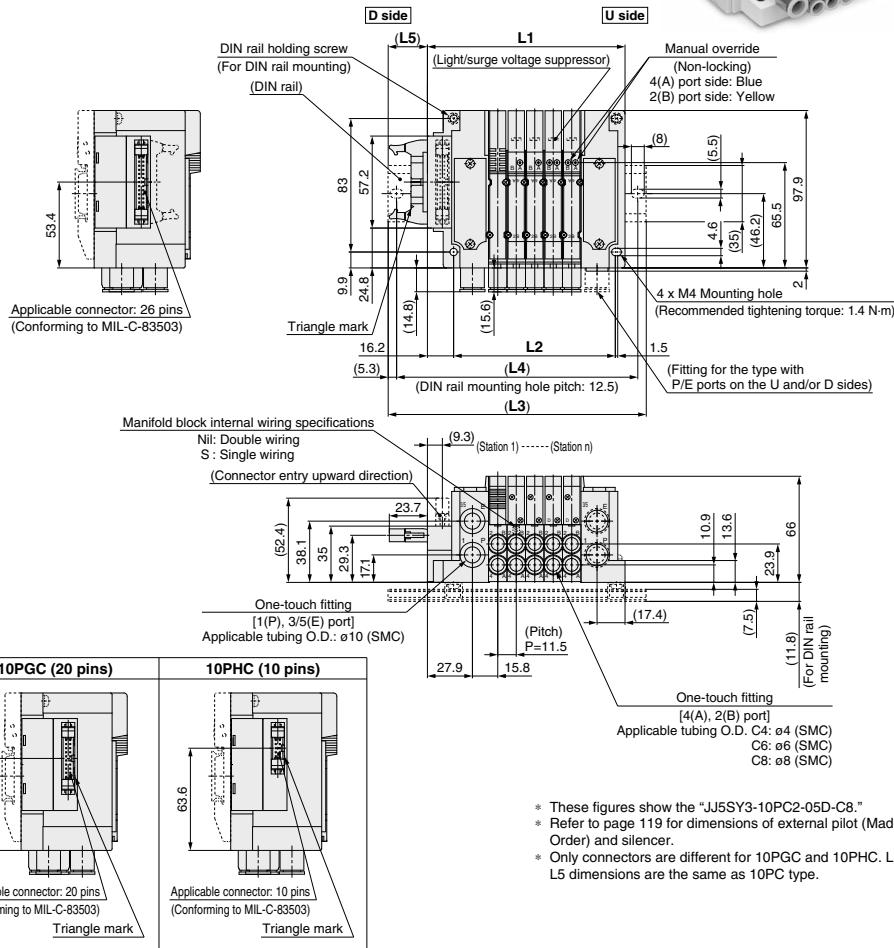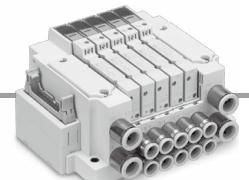

* These figures show the "JJ5SY3-10PC2-05D-C8."

- * Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

- * Only connectors are different for 10PGC and 10PHC. L1 to L5 dimensions are the same as 10PC type.

L: Dimensions

n: Stations


L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	88.3	99.8	111.3	122.8	134.3	145.8	157.3	168.8	180.3	191.8	203.3	214.8	226.3	237.8	249.3
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	273	285.5
L4	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	262.5	275
L5	23	23.5	24	24.5	25	25.5	26	26.5	27	27.5	28	28.5	29	23	23.5

<u>L</u>	<u>n</u>	17	18	19	20	21	22	23	24
L1		260.8	272.3	283.8	295.3	306.8	318.3	329.8	341.3
L2		238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3		298	310.5	323	335.5	348	360.5	373	385.5
L4		287.5	300	312.5	325	337.5	350	362.5	375
L5		24	24.5	25	25.5	26	26.5	27	27.5

JSY1000/3000/5000 Series

Electrical Wiring Specifications

D-sub connector



If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.


Connector terminal no.

	Terminal no.	Polarity
Station 1	SOL _a 1	(-)
	SOL _b 14	(+)
Station 2	SOL _a 2	(-)
	SOL _b 15	(+)
Station 3	SOL _a 3	(-)
	SOL _b 16	(+)
Station 4	SOL _a 4	(-)
	SOL _b 17	(+)
Station 5	SOL _a 5	(-)
	SOL _b 18	(+)
Station 6	SOL _a 6	(-)
	SOL _b 19	(+)
Station 7	SOL _a 7	(-)
	SOL _b 20	(+)
Station 8	SOL _a 8	(-)
	SOL _b 21	(+)
Station 9	SOL _a 9	(-)
	SOL _b 22	(+)
Station 10	SOL _a 10	(-)
	SOL _b 23	(+)
Station 11	SOL _a 11	(-)
	SOL _b 24	(+)
Station 12	SOL _a 12	(-)
	SOL _b 25	(+)
COM.	13	(+) (−) Positive common Negative common

* When using a valve with no polarity, either positive common or negative common can be used.

Specified Layout

(25 pins)




A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.


COM.

Connector Cable

015
AXT100-DS25-030 [IP20/40]
050

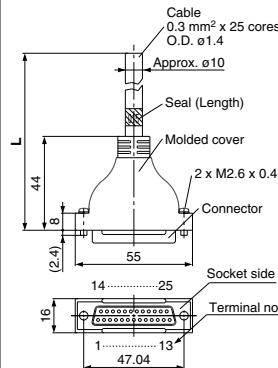

015
SY30M-DS25-030 [IP67]
050

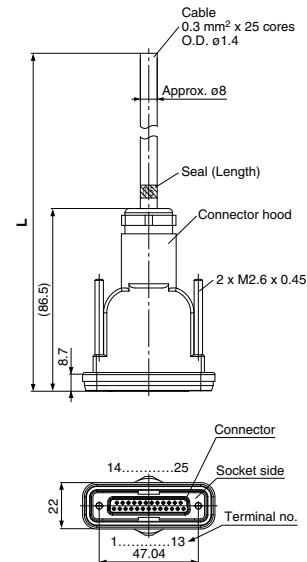

D-sub connector cable [IP20/40 compliant]

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	
3 m	AXT100-DS25-030	Cable 0.3 mm² x 25 cores
5 m	AXT100-DS25-050	

* When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.

* Cannot be used for movable wiring

* Lengths other than the above are also available.

D-sub connector cable [IP67 compliant]

Cable length (L)	Assembly part no.	Note
1.5 m	SY30M-DS25-015	
3 m	SY30M-DS25-030	Cable 0.3 mm² x 25 cores
5 m	SY30M-DS25-050	

* Be sure to use the connector cable in the table, to satisfy enclosure IP67.

* Cannot be used for movable wiring

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V. 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

* The minimum bending radius of the D-sub connector cable is 20 mm.

D-sub connector cable terminal numbers


Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Black	None	Brown	None	Red	None	Orange	None	Yellow	None	Pink	None	Blue	None	White	None	Black	None	White	None	Red	None	Black	None	White
Dot marking	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None

Connector Manufacturer's Example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

Electrical Wiring Specifications

Flat ribbon cable connector

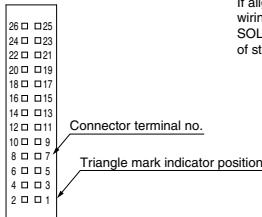

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

P, PC: Flat ribbon cable (26 pins)

<Double wiring>

		Terminal no.	Polarity
Station 1	SOL _a	1	(-)
	SOL _b	2	(+)
Station 2	SOL _a	3	(-)
	SOL _b	4	(+)
Station 3	SOL _a	5	(-)
	SOL _b	6	(+)
Station 4	SOL _a	7	(-)
	SOL _b	8	(+)
Station 5	SOL _a	9	(-)
	SOL _b	10	(+)
Station 6	SOL _a	11	(-)
	SOL _b	12	(+)
Station 7	SOL _a	13	(-)
	SOL _b	14	(+)
Station 8	SOL _a	15	(-)
	SOL _b	16	(+)
Station 9	SOL _a	17	(-)
	SOL _b	18	(+)
Station 10	SOL _a	19	(-)
	SOL _b	20	(+)
Station 11	SOL _a	21	(-)
	SOL _b	22	(+)
Station 12	SOL _a	23	(-)
	SOL _b	24	(+)
		25	(+)
		26	(+)
		Positive	Negative
		common	common

PG, PGC: Flat ribbon cable (20 pins)

<Double wiring>

		Terminal no.	Polarity
Station 1	SOL _a	1	(-)
	SOL _b	2	(+)
Station 2	SOL _a	3	(-)
	SOL _b	4	(+)
Station 3	SOL _a	5	(-)
	SOL _b	6	(+)
Station 4	SOL _a	7	(-)
	SOL _b	8	(+)
Station 5	SOL _a	9	(-)
	SOL _b	10	(+)
Station 6	SOL _a	11	(-)
	SOL _b	12	(+)
Station 7	SOL _a	13	(-)
	SOL _b	14	(+)
Station 8	SOL _a	15	(-)
	SOL _b	16	(+)
Station 9	SOL _a	17	(-)
	SOL _b	18	(+)
		19	(+)
		20	(-)
		Positive	Negative
		common	common

PH, PHC: Flat ribbon cable (10 pins)

<Double wiring>


		Terminal no.	Polarity
Station 1	SOL _a	1	(-)
	SOL _b	2	(+)
Station 2	SOL _a	3	(-)
	SOL _b	4	(+)
Station 3	SOL _a	5	(-)
	SOL _b	6	(+)
Station 4	SOL _a	7	(-)
	SOL _b	8	(+)
		9	(+)
		10	(-)
		Positive	Negative
		common	common

* When using a valve with no polarity, either positive common or negative common can be used.

JSY1000/3000/5000 Series

Flat Ribbon Cable Connector

10 1
AXT100-FC 20-2
26 3

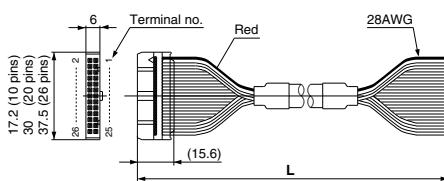

Flat ribbon cable connector

Cable length (L)	Assembly part no.		
	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

* When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.


* Cannot be used for movable wiring.

* Lengths other than the above are also available.


Connector Manufacturer's Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.


Specified Layout

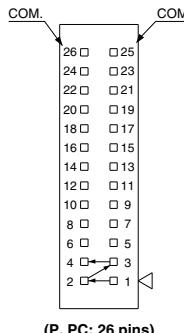

(P, PC: 26 pins)

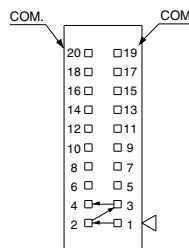

(PG, PGC: 20 pins)

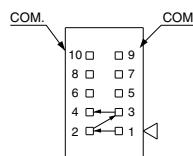

(PH, PHC: 10 pins)

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P and PC, 18 or less for PG and PGC, and 8 or less for PH and PHC. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

Plug-in Connector Connecting Base

Spring Type Terminal Block Box

Terminal Block Box

Type 10
Side Ported

JSY1000/3000/5000 Series



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

JJ5SY **3** - **10** **TC** - **05** **D** - **C6**
1 2 3 4 5 6 7 8



Made to Order

(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)

Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

③ Wiring

TC	Spring type terminal block box
T	Terminal block box

④ Valve stations

TC: Spring type terminal block box

T: Terminal block box

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2 (Up to 32 solenoids available)
⋮	⋮	
24	24 stations	

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2 (Up to 20 solenoids available)
⋮	⋮	
20	20 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.


The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

*3 This also includes the number of blanking plates.

⑦ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)		ø8	ø10	ø12



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

⑤ P, E port entry

U	U side (2 to 16 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

⑥ SUP/EXH block assembly

NII	Internal pilot
S	Internal pilot, Built-in silencer

* The 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑧ Mounting and Option


Symbol	Mounting
NII	Direct mounting
D	DIN rail mounting

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

DIN Rail Option

NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	Specify a length longer than that of the standard rail. For 24 stations

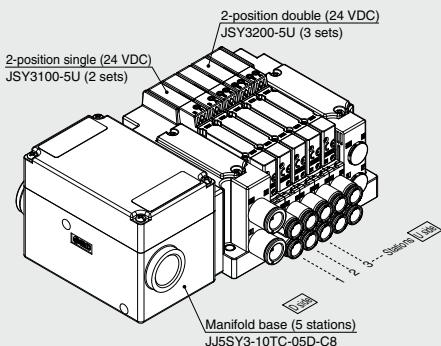How to Order Manifold Assembly**Example (JJ5SY3-10TC-□)**

JJ5SY3-10TC-05D-C8 ... 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U 2 sets (2-position single part no.)

* JSY3200-5U 3 sets (2-position double part no.)

The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot**How to Order Valves (With mounting screw)**

Refer to page 34 for valve specifications.

JSY **3** **1** **0** **0** **-5** **□** **□**

1 2 3 4 5

**Made to Order**

(Refer to page 156 for details.)

Specification
External pilot

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

3 Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

5 Manual override

Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●


* Push-turn locking lever type "E" is not available for the JSY1000.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 137 for base gasket and mounting screw part numbers.

Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.






JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10TC - Stations ^U_B-C₂(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

Spring Type Terminal Block Box

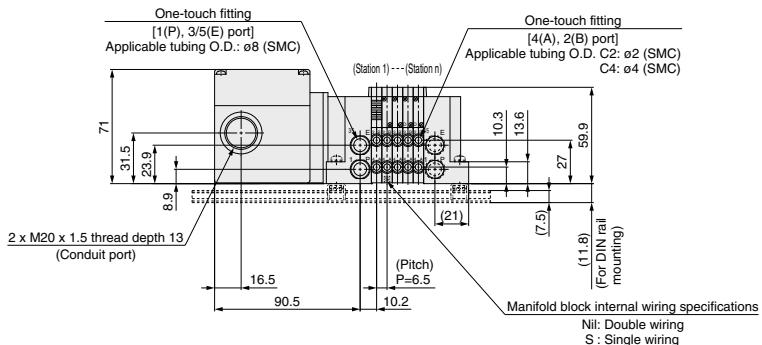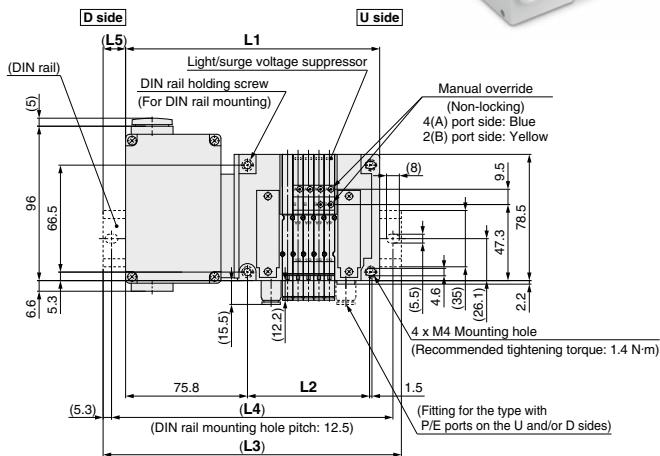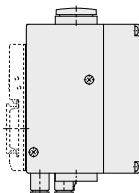

* These figures show the "JJ5SY1-10TC-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	138.5	145	151.5	158	164.5	171	177.5	184	190.5	197	203.5	210	216.5	223	229.5
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	173	173	185.5	185.5	198	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5
L4	162.5	162.5	175	175	187.5	187.5	200	200	212.5	212.5	225	225	237.5	237.5	250
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5





L / n	17	18	19	20	21	22	23	24
L1	236	242.5	249	255.5	262	268.5	275	281.5
L2	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3	260.5	273	273	285.5	285.5	298	310.5	310.5
L4	250	262.5	262.5	275	275	287.5	300	300
L5	12.5	15.5	12	15	12	15	18	14.5

Dimensions: JSY1000 Series

JJ5SY1-10TC-[Stations]^U_B-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)

Spring Type Terminal Block Box

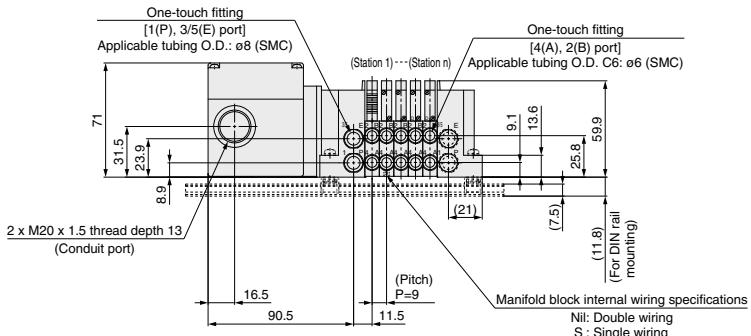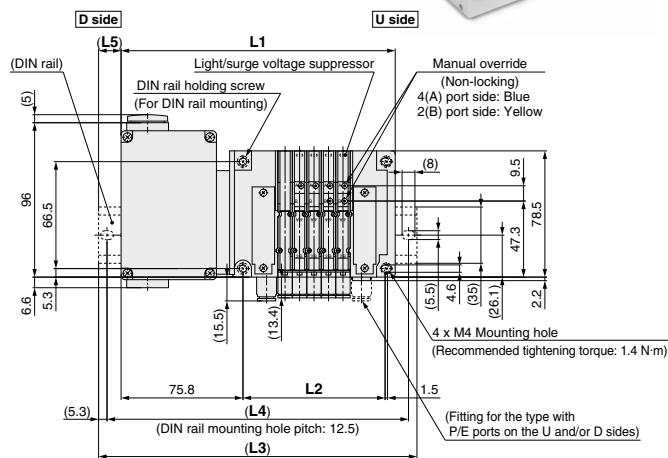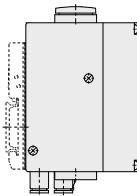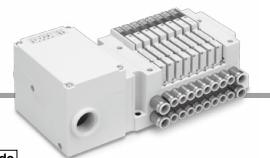

* These figures show the "JJ5SY1-10TC-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	143.5	152.5	161.5	170.5	179.5	188.5	197.5	206.5	215.5	224.5	233.5	242.5	251.5	260.5	269.5
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	173	185.5	185.5	198	210.5	223	223	235.5	248	248	260.5	273	285.5	285.5	298
L4	162.5	175	175	187.5	200	212.5	212.5	225	237.5	237.5	250	262.5	275	275	287.5
L5	15	16.5	12	14	15.5	17.5	13	14.5	16.5	12	13.5	15.5	17	12.5	14.5

L \ n	17	18	19	20	21	22	23	24
L1	278.5	287.5	296.5	305.5	314.5	323.5	332.5	341.5
L2	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	310.5	323	323	335.5	348	348	360.5	373
L4	300	312.5	312.5	325	337.5	337.5	350	362.5
L5	16	18	13.5	15	17	12.5	14	16




JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10TC - Stations ^U_B C_{C8}⁴ (D)

Type 10/Side Ported

Spring Type Terminal Block Box

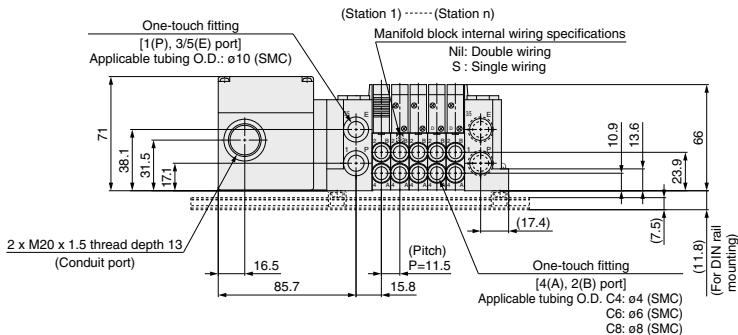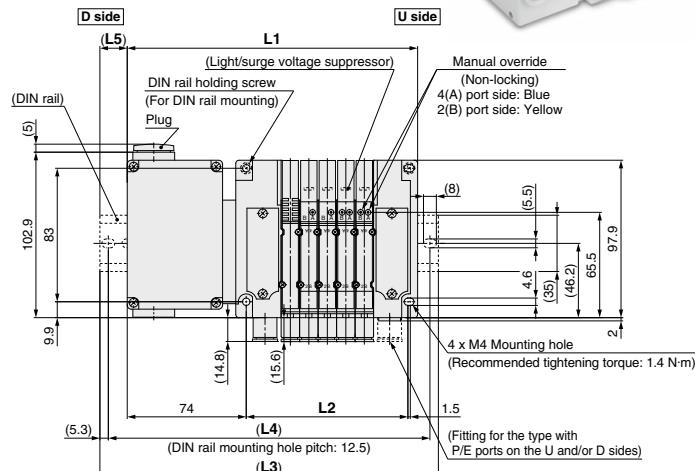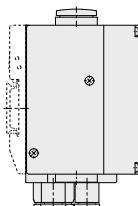

* These figures show the "JJ5SY3-10TC-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	146.1	157.6	169.1	180.6	192.1	203.6	215.1	226.6	238.1	249.6	261.1	272.6	284.1	295.6	307.1
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	173	185.5	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5
L4	162.5	175	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325
L5	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13	13.5	14





L \ n	17	18	19	20	21	22	23	24
L1	318.6	330.1	341.6	353.1	364.6	376.1	387.6	399.1
L2	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	348	360.5	373	385.5	398	410.5	423	423
L4	337.5	350	362.5	375	387.5	400	412.5	412.5
L5	14.5	15	15.5	16	16.5	17	17.5	12

Dimensions: JSY5000 Series

JJ5SY5-10TC-Stations_U^{C6}_B^{C8}_{C10}^(D)_{C12}

Type 10/Side Ported

Spring Type Terminal Block Box

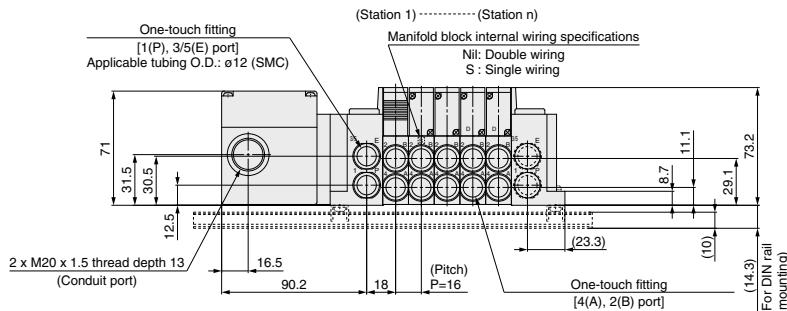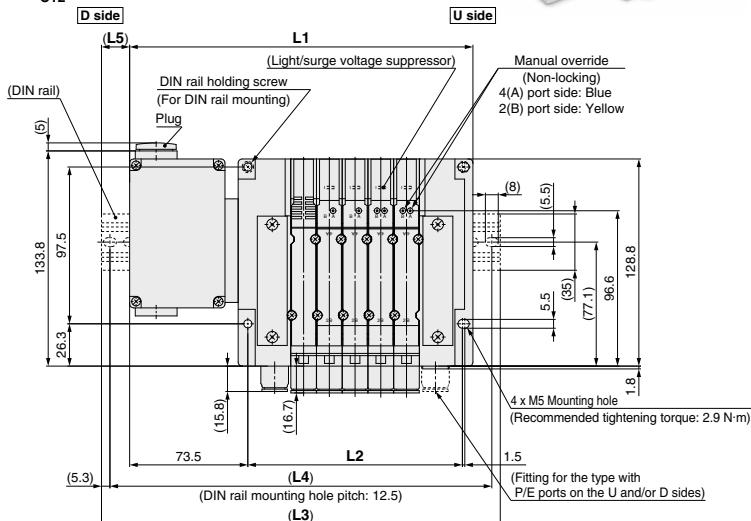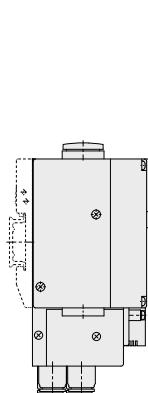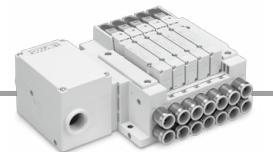

* These figures show the "JJ5SY5-10TC-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5	325.5	341.5	357.5	373.5	389.5
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423
L4	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5
L5	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17


L \ n	17	18	19	20	21	22	23	24
L1	405.5	421.5	437.5	453.5	469.5	485.5	501.5	517.5
L2	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L3	435.5	448	473	485.5	498	510.5	535.5	548
L4	425	437.5	462.5	475	487.5	500	525	537.5
L5	15	13.5	18	16	14.5	12.5	17	15.5

JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10T-Stations_B^U-C2(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)
Terminal Block Box

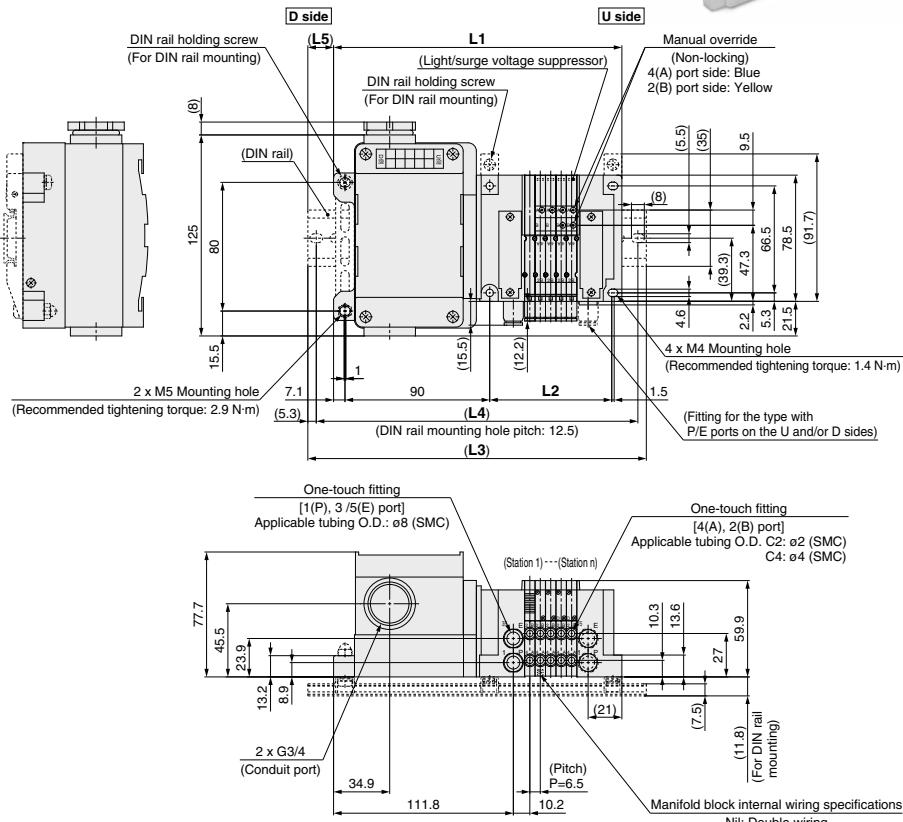

L: Dimensions

L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	159.8	166.3	172.8	179.3	185.8	192.3	198.8	205.3	211.8	218.3	224.8	231.3	237.8	244.3	250.8
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	185.5	198	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5	273	273	285.5
L4	175	187.5	187.5	200	200	212.5	212.5	225	225	237.5	237.5	250	262.5	262.5	275
L5	13	16	13	16	13	16	12	15	12	15	12	15	18	15	18

n: Stations

L / n	17	18	19	20
L1	257.3	263.8	270.3	276.8
L2	153.9	160.4	166.9	173.4
L3	285.5	298	298	310.5
L4	275	287.5	287.5	300
L5	14	17	14	17


Dimensions: JSY1000 series

Type 10/Side Ported (Applicable to ø6 fittings)

Terminal Block Box



JJ5SY1-10T- Stations U D B - C6(D)

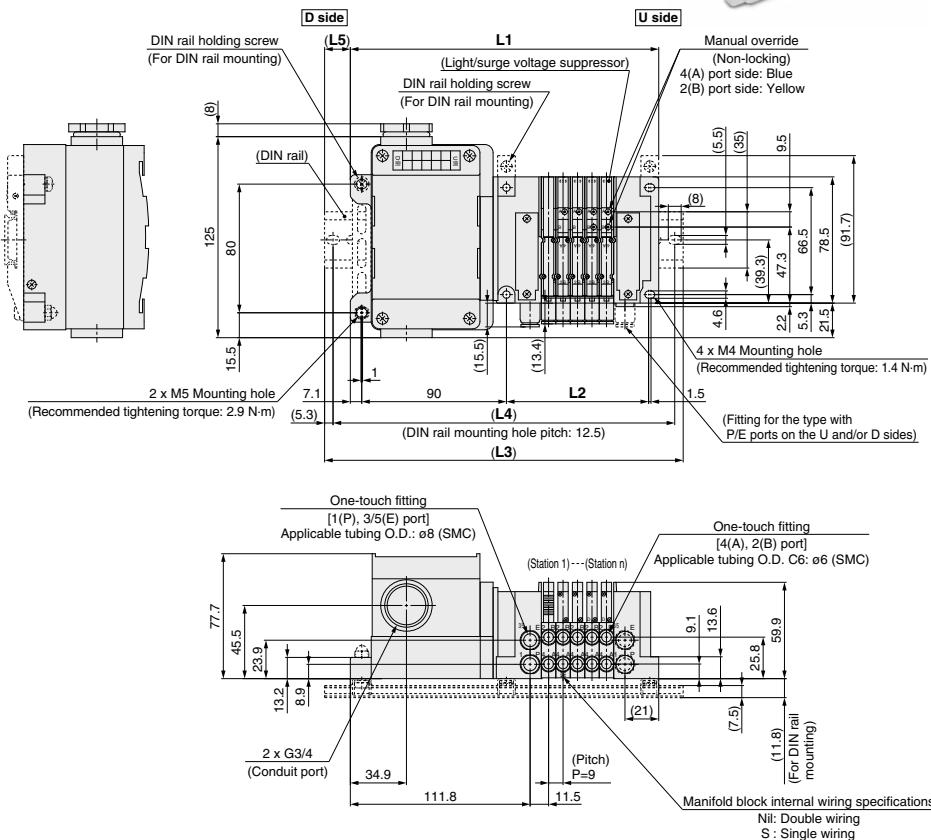

* These figures show the "JJ5SY1-10T-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		164.8	173.8	182.8	191.8	200.8	209.8	218.8	227.8	236.8	245.8	254.8	263.8	272.8	281.8	290.8
L2		61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3		198	198	210.5	223	235.5	235.5	248	260.5	260.5	273	285.5	298	298	310.5	323
L4		187.5	187.5	200	212.5	225	225	237.5	250	250	262.5	275	287.5	287.5	300	312.5
L5		17	12	14	16	18	13	15	17	12	14	16	17	13	15	16

<u>L</u>	<u>n</u>	17	18	19	20
L1		299.8	308.8	317.8	326.8
L2		196.4	205.4	214.4	223.4
L3		323	335.5	348	360.5
L4		312.5	325	337.5	350
L5		12	14	15	17



JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10T-Stations_U_D_{C4}_{C6}_(D)_B_{C8}_(D)

Type 10/Side Ported

Terminal Block Box

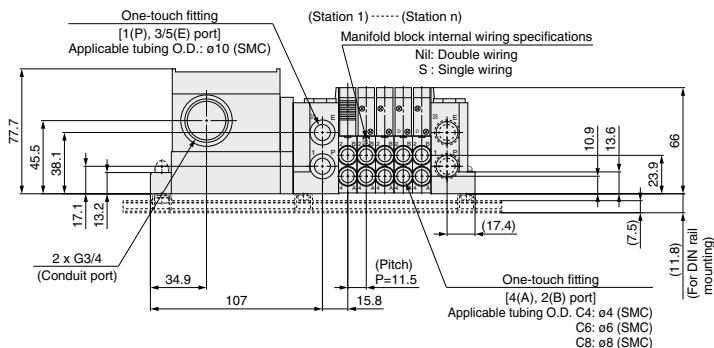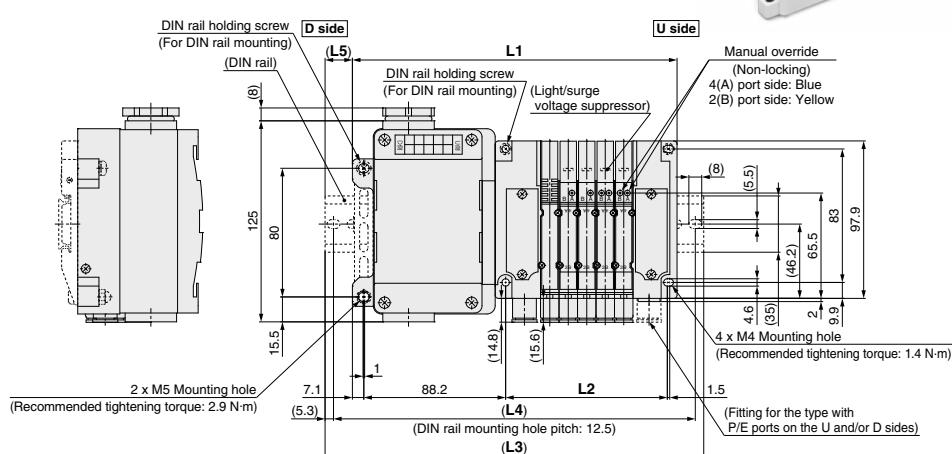

* These figures show the "JJ5SY3-10T-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	167.4	178.9	190.4	201.9	213.4	224.9	236.4	247.9	259.4	270.9	282.4	293.9	305.4	316.9	328.4
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5
L4	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	312.5	325	337.5	350
L5	16	16	17	17	18	12	12	13	13	14	14	15	15	16	16



L \ n	17	18	19	20
L1	339.9	351.4	362.9	374.4
L2	238.6	250.1	261.6	273.1
L3	373	385.5	398	398
L4	362.5	375	387.5	387.5
L5	17	17	18	12

Dimensions: JSY5000 Series

JJ5SY5-10T - Stations **U** **C6**
B **C8** **(D)**
C10 **C12**

Type 10/Side Ported

Terminal Block Box

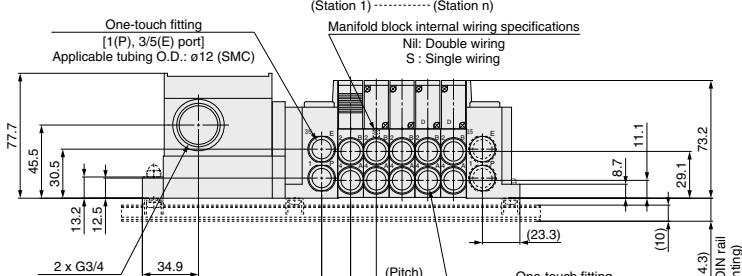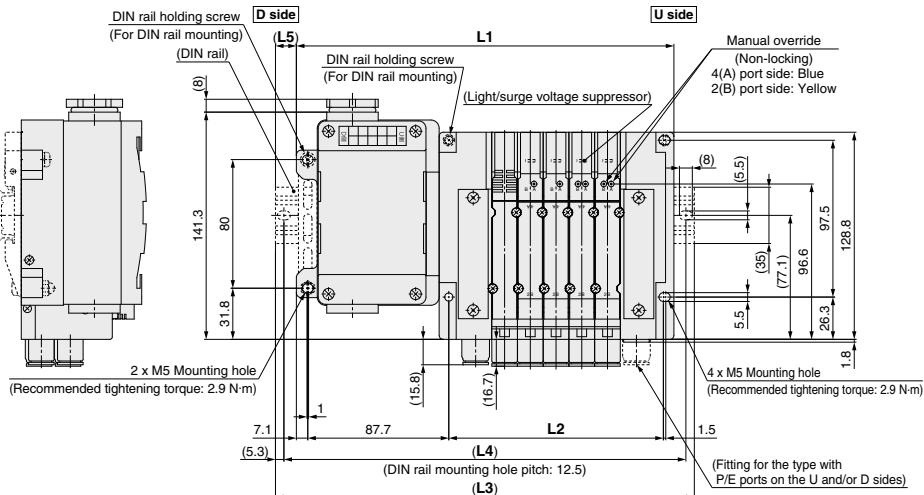

* These figures show the "JJ5SY5-10T-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations


L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	186.8	202.8	218.8	234.8	250.8	266.8	282.8	298.8	314.8	330.8	346.8	362.8	378.8	394.8	410.8
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5
L4	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5
L / n	17	18	19	20											
L1	426.8	442.8	458.8	474.8											
L2	325.5	341.5	357.5	373.5											
L3	460.5	473	485.5	498											
L4	450	462.5	475	487.5											
L5	17	15	13.5	11.5											

JSY1000/3000/5000 Series

Spring Type Terminal Block "TC" Connection

Step 1. Remove the terminal block cover.

Loosen the 4 mounting screws (M3) to remove the terminal block cover.

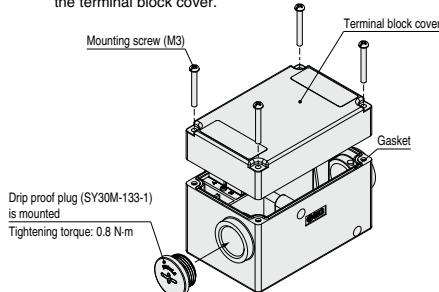

Step 3. Mount the terminal block cover.

Securely tighten the mounting screws (M3) to the torque shown below only after confirming that the gasket is installed correctly.


Proper tightening torque [N·m]

0.54 to 0.66

Step 2. The diagram below shows the terminal block wiring.


All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block. Be sure to connect the wire with the push button pressed down.

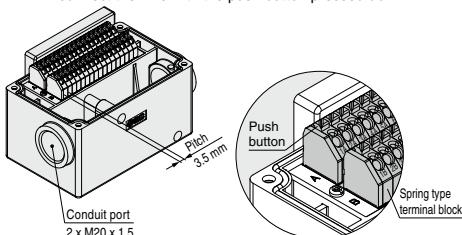

Electrical Wiring Specifications (IP67 compliant)

Standard wiring



If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

* When using a valve with no polarity, either positive common or negative common can be used.


Terminal no.	Polarity	
Station 1	SOL _a	1A (-) (+)
	SOL _b	1B (-) (+)
Station 2	SOL _a	2A (-) (+)
	SOL _b	2B (-) (+)
Station 3	SOL _a	3A (-) (+)
	SOL _b	3B (-) (+)
Station 4	SOL _a	4A (-) (+)
	SOL _b	4B (-) (+)
Station 5	SOL _a	5A (-) (+)
	SOL _b	5B (-) (+)
Station 6	SOL _a	6A (-) (+)
	SOL _b	6B (-) (+)
Station 7	SOL _a	7A (-) (+)
	SOL _b	7B (-) (+)
Station 8	SOL _a	8A (-) (+)
	SOL _b	8B (-) (+)
Station 9	SOL _a	9A (-) (+)
	SOL _b	9B (-) (+)
Station 10	SOL _a	10A (-) (+)
	SOL _b	10B (-) (+)
Station 11	SOL _a	11A (-) (+)
	SOL _b	11B (-) (+)
Station 12	SOL _a	12A (-) (+)
	SOL _b	12B (-) (+)
Station 13	SOL _a	13A (-) (+)
	SOL _b	13B (-) (+)
Station 14	SOL _a	14A (-) (+)
	SOL _b	14B (-) (+)
Station 15	SOL _a	15A (-) (+)
	SOL _b	15B (-) (+)
Station 16	SOL _a	16A (-) (+)
	SOL _b	16B (-) (+)
COM.		(+) (-)
COM.		(+) (-)

Positive common

Negative common

Specified Layout


A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

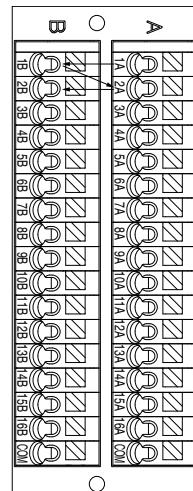

Terminal Block "T" Connection

Step 1. Remove the terminal block cover.


Loosen the 4 mounting screws (M4) to remove the terminal block cover.

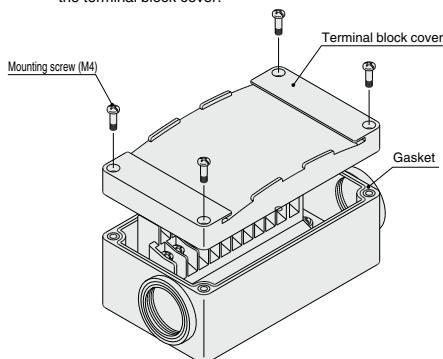

Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

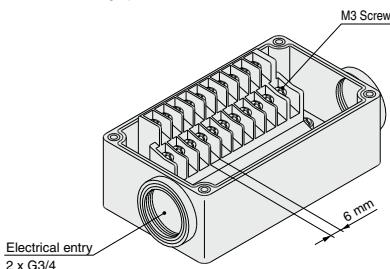


Step 3. Mount the terminal block cover.

Securely tighten the screws to the torque shown below only after confirming that the gasket is installed correctly.

Proper tightening torque [N·m]
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof plug assembly (for G3/4): AXT100-B06A

Electrical Wiring Specifications (IP67 compliant)



If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.


* When using a valve with no polarity, either positive common or negative common can be used.

Standard wiring

		Terminal no. Polarity	
Station 1	SOL _a	1A	(-)
	SOL _b	1B	(+)
Station 2	SOL _a	2A	(-)
	SOL _b	2B	(+)
Station 3	SOL _a	3A	(-)
	SOL _b	3B	(+)
Station 4	SOL _a	4A	(-)
	SOL _b	4B	(+)
Station 5	SOL _a	5A	(-)
	SOL _b	5B	(+)
Station 6	SOL _a	6A	(-)
	SOL _b	6B	(+)
Station 7	SOL _a	7A	(-)
	SOL _b	7B	(+)
Station 8	SOL _a	8A	(-)
	SOL _b	8B	(+)
Station 9	SOL _a	9A	(-)
	SOL _b	9B	(+)
Station 10	SOL _a	10A	(-)
	SOL _b	10B	(+)
		COM.	(+) (-)
		Positive common	Negative common

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

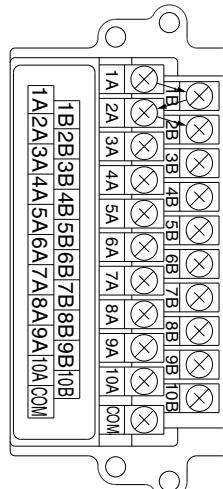

Plug-in Connector Connecting Base

Lead Wire

Type 10
Side Ported

JSY1000/3000/5000 Series



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

JJ5SY **3** - **10** **L1** **1** - **05** **U** - **C6**

1 2 3 4 5 6 7 8 9

Made to Order

Made to Order

(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)

Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type

10	Side ported
----	-------------

3 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

4 Lead wire length

1	0.6 m
2	1.5 m
3	3 m

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)


6 SUP/EXH block assembly

NII	Internal pilot
S	Internal pilot, Built-in silencer

- The 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

7 A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)	ø8	ø10	ø12	



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

8 Valve stations

L1□: 34 cores

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2 (Up to 32 solenoids available)
⋮	⋮	
24	24 stations	

L2□: 17 cores

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2 (Up to 16 solenoids available)
⋮	⋮	
16	16 stations	

L3□: 9 cores

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
04	4 stations	
02	2 stations	Specified layout*2 (Up to 8 solenoids available)
⋮	⋮	
08	8 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

*3 This also includes the number of blanking plates.

9 Mounting and Option

Symbol

NII	Mounting
D	DIN rail mounting

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.


DIN Rail Option

NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

Specify a length longer than that of the standard rail.

How to Order Manifold Assembly

Example (JJ5SY3-10L11-□)

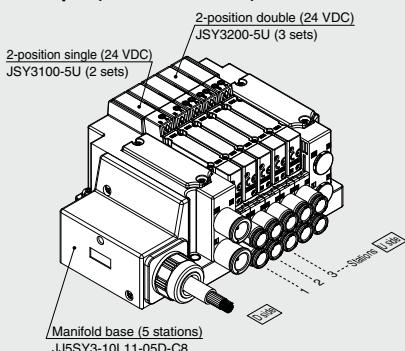

JJ5SY3-10L11-05D-C8.. 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U..... 2 sets (2-position single part no.)

* JSY3200-5U..... 3 sets (2-position double part no.)

→ The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **0** **0** **-5** **□** **□**

1 2 3 4 5



Made to Order

(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position	N.O./N.O.
C	dual 3-port	N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

④ Light/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification	JSY1000	JSY3000	JSY5000
U	●	●	Non-polar	—	●	●
			Polar	●	●	●
Z			Positive common	●	●	●
			Negative common	●	●	●
NZ						

* When the non-polar common specification type is selected, take measures to prevent surge voltage. For details, refer to page 159.

* Only "Z" and "NZ" types are available with a power saving circuit.

Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.



* Push-turn locking lever type "E" is not available for the JSY1000.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.





JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10L₃□ - Stations_B^U C₂(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

Lead Wire

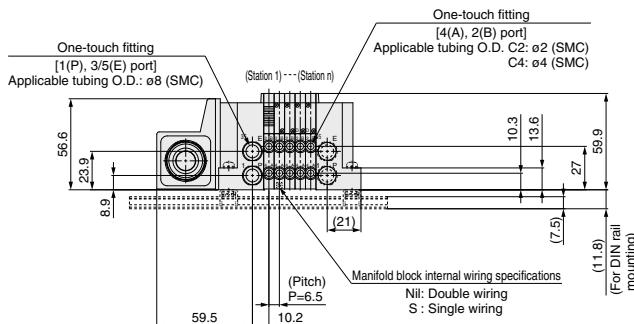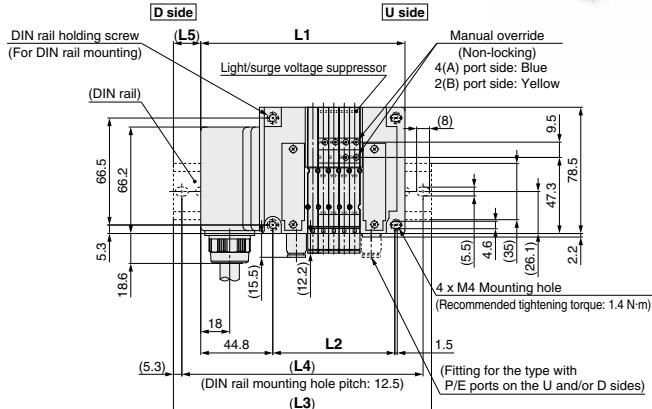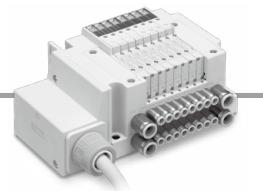

* These figures show the "JJ5SY1-10L1□-05D-C4".

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	107.5	114	120.5	127	133.5	140	146.5	153	159.5	166	172.5	179	185.5	192	198.5
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	135.5	148	148	160.5	160.5	173	173	185.5	185.5	198	198	210.5	210.5	223	223
L4	125	137.5	137.5	150	150	162.5	162.5	175	175	187.5	187.5	200	200	212.5	212.5
L5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5




L / n	17	18	19	20	21	22	23	24
L1	205	211.5	218	224.5	231	237.5	244	250.5
L2	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3	235.5	235.5	248	248	260.5	273	273	285.5
L4	225	225	237.5	237.5	250	262.5	262.5	275
L5	15.5	12	15	12	15	18	14.5	17.5

Dimensions: JSY1000 Series

JJ5SY1-10L₃¹□-Stations_B^U-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)

Lead Wire

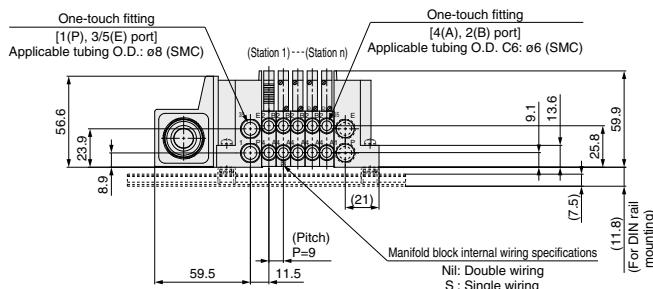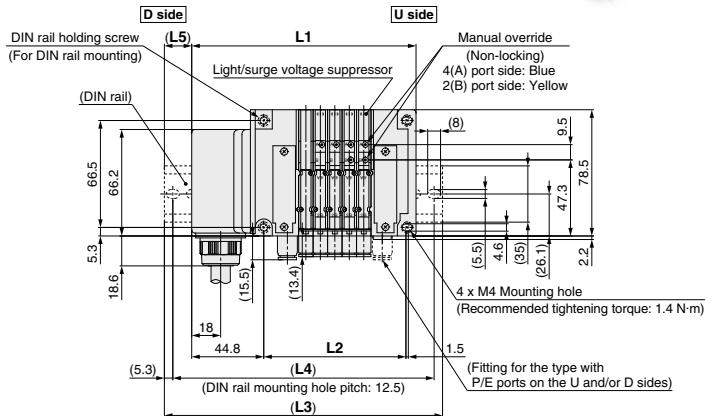

* These figures show the "JJ5SY1-10L1□-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	112.5	121.5	130.5	139.5	148.5	157.5	166.5	175.5	184.5	193.5	202.5	211.5	220.5	229.5	238.5
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	148	148	160.5	173	173	185.5	198	210.5	210.5	223	235.5	235.5	248	260.5	273
L4	137.5	137.5	150	162.5	162.5	175	187.5	200	200	212.5	225	225	237.5	250	262.5
L5	18	13.5	15	17	12.5	14	16	17.5	13	15	16.5	12	14	15.5	17.5

L \ n	17	18	19	20	21	22	23	24
L1	247.5	256.5	265.5	274.5	283.5	292.5	301.5	310.5
L2	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	273	285.5	298	298	310.5	323	335.5	335.5
L4	262.5	275	287.5	287.5	300	312.5	325	325
L5	13	14.5	16.5	12	13.5	15.5	17	12.5




JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10L₃□ - Stations_B^U_{C4}^D_{C8}(D)

Type 10/Side Ported

Lead Wire

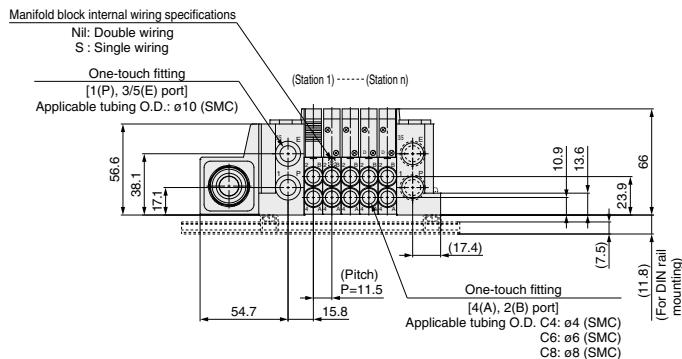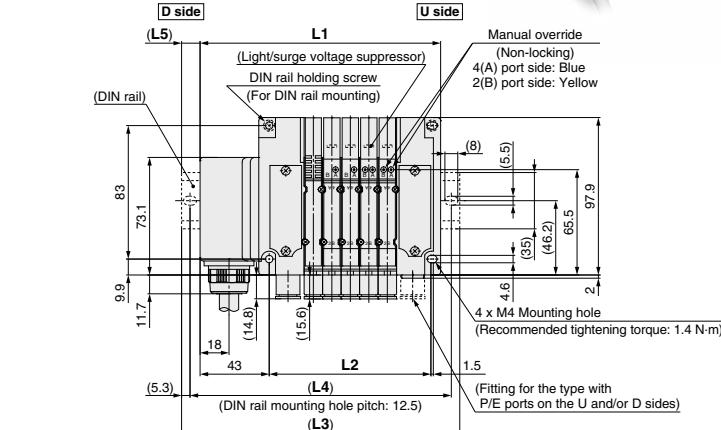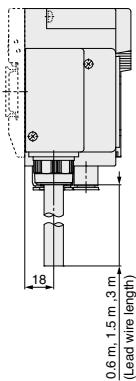

* These figures show the "JJ5SY3-10L1□-05D-C8."*

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	115.1	126.6	138.1	149.6	161.1	172.6	184.1	195.6	207.1	218.6	230.1	241.6	253.1	264.6	276.1
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5
L4	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300
L5	16.5	17	17.5	11.5	12	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17




L \ n	17	18	19	20	21	22	23	24
L1	287.6	299.1	310.6	322.1	333.6	345.1	356.6	368.1
L2	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1
L3	323	323	335.5	348	360.5	373	385.5	398
L4	312.5	312.5	325	337.5	350	362.5	375	387.5
L5	17.5	12	12.5	13	13.5	14	14.5	15

Dimensions: JSY5000 Series

JJ5SY5-10L₁₂₃ - Stations_U_B_{C6}_{C8}_{C10}_{C12}(D)

Type 10/Side Ported

Lead Wire

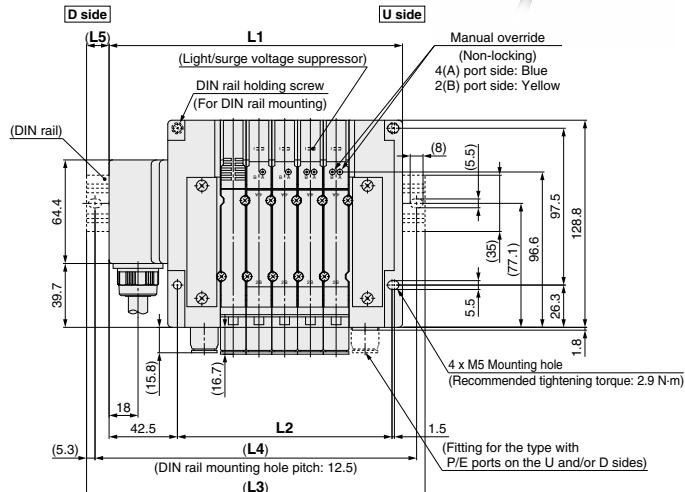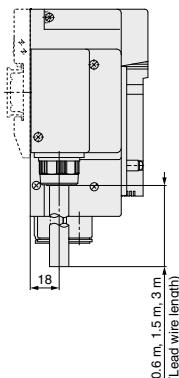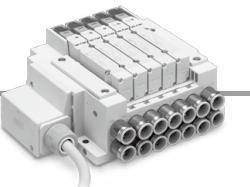


Manifold block internal wiring specifications

Nilt: Double wiring
S : Single wiring

One-touch fitting

[1(P), 3/5(E) port]

Applicable tubing O.D.: ø12 (SMC)

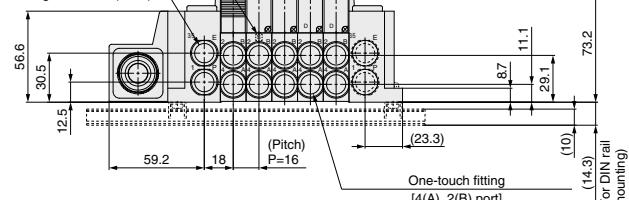

* These figures show the "JJ5SY5-10L1□-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L ₁	134.5	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5
L ₂	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L ₃	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398
L ₄	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L ₅	19.5	17.5	16	14	18.5	17	15	19.5	18	16	14.5	19	17	15.5	20

L \ n	17	18	19	20	21	22	23	24
L ₁	374.5	390.5	406.5	422.5	438.5	454.5	470.5	486.5
L ₂	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L ₃	410.5	423	435.5	460.5	473	485.5	510.5	523
L ₄	400	412.5	425	450	462.5	475	500	512.5
L ₅	18	16.5	14.5	19	17.5	15.5	20	18.5

JSY1000/3000/5000 Series

Electrical Wiring Specifications

Lead wire

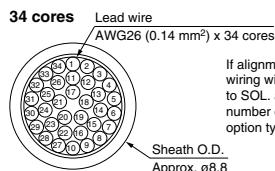

If alignment is not specified, the internal wiring will be double wiring (connected to SOL_a and SOL_b) regardless of number of stations, valve types, and option types.

Electrical characteristics

Item	Property
Conductor resistance $\Omega/\text{km}, 20^\circ\text{C}$	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance $\text{M}\Omega/\text{km}, 20^\circ\text{C}$	10 or more

* Cannot be used for movable wiring
The minimum bending radius of the cable is 55 mm.

Lead wire no. Polarity


Station	1	(-)	(+)
1	SOL _a	1	(-)
1	SOL _b	2	(-)
1	SOL _a	3	(+)
2	SOL _b	4	(-)
2	SOL _a	5	(-)
2	SOL _b	6	(+)
3	SOL _a	7	(-)
3	SOL _b	8	(-)
3	SOL _a	9	(+)
3	SOL _b	10	(-)
4	SOL _a	11	(-)
4	SOL _b	12	(+)
4	SOL _a	13	(-)
4	SOL _b	14	(+)
5	SOL _a	15	(-)
5	SOL _b	16	(-)
5	SOL _a	17	(-)
5	SOL _b	18	(+)
5	SOL _a	19	(+)
5	SOL _b	20	(-)
6	SOL _a	21	(-)
6	SOL _b	22	(-)
6	SOL _a	23	(-)
6	SOL _b	24	(+)
7	SOL _a	25	(-)
7	SOL _b	26	(+)
7	SOL _a	27	(-)
7	SOL _b	28	(+)
8	SOL _a	29	(-)
8	SOL _b	30	(+)
8	SOL _a	31	(+)
8	SOL _b	32	(-)
9	COM _a	33	(+)
9	COM _b	34	(+)

Positive common Negative common

* For negative common specification, a valve for negative common or a valve without polarity should be used.

Specified Layout


A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

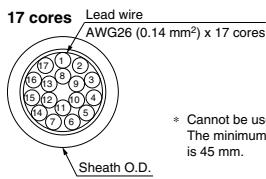Electrical Wiring Specifications**Lead wire**

* Cannot be used for movable wiring
The minimum bending radius of the cable
is 45 mm.

		Lead wire no.	Polarity
Station 1	SOL _a	1	(-)
	SOL _b	2	(+)
Station 2	SOL _a	3	(-)
	SOL _b	4	(+)
Station 3	SOL _a	5	(+)
	SOL _b	6	(+)
Station 4	SOL _a	7	(-)
	SOL _b	8	(+)
Station 5	SOL _a	9	(+)
	SOL _b	10	(+)
Station 6	SOL _a	11	(-)
	SOL _b	12	(+)
Station 7	SOL _a	13	(-)
	SOL _b	14	(+)
Station 8	SOL _a	15	(-)
	SOL _b	16	(+)
	COM	17	(+)

Positive common
Negative common

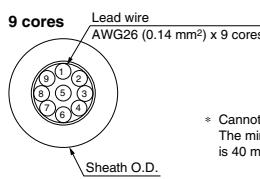

* Cannot be used for movable wiring
The minimum bending radius of the cable
is 40 mm.

		Lead wire no.	Polarity
Station 1	SOL _a	1	(-)
	SOL _b	2	(+)
Station 2	SOL _a	3	(-)
	SOL _b	4	(+)
Station 3	SOL _a	5	(-)
	SOL _b	6	(+)
Station 4	SOL _a	7	(-)
	SOL _b	8	(+)
	COM	9	(-)

Positive common
Negative common

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

Lead wire color	Printed mark (Both sides)	Type	Color
Orange	-	Red	
	Black		
Light gray	-	Red	
	Black		
White	-	Red	
	Black		
Yellow	-	Red	
	Black		
Pink	-	Red	
	Black		
Orange	--	Red	
	Black		
Light gray	--	Red	
	Black		
White	--	Red	
	Black		
Yellow	--	Red	
	Black		
Pink	--	Red	
	Black		

* For negative common specification, a valve for negative common or a valve without polarity should be used.

Plug-in Connector Connecting Base Compact Wireless Remote Series

Type 10
Side Ported


JSY1000/3000/5000 Series



*1 JSY3000 only

Internal Pilot

How to Order Manifolds



Made to Order

Made to Order

(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)

Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type

10	Side ported
----	-------------

4 Valve stations

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
16	16 stations	
02	2 stations	
⋮	⋮	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

* This also includes the number of blanking plates.

3 Compact wireless remote specifications

(Output polarity, with/without wireless adapter, number of outputs, selectable frequency, and applicable country)

Positive common (NPN)	Negative common (PNP)	Wireless adapter	Number of outputs	Number of selectable frequency channels	Applicable countries*1
0*1,*2					
W1	W1N	Without wireless adapter	32	—	—
W2	W2N	EXW1-A11E	32	Min. 5/ Max. 79	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
W3	W3N	EXW1-A11N	32	Min. 15/ Max. 79	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

*1 Confirm that the common specification of the built-in valve matches the output polarity of the selected compact wireless remote.

In addition, if the built-in valve has no polarity, either compact wireless remote output polarity type can be connected.

*2 "With DIN rail" cannot be selected for the type without a compact wireless remote.

*3 Select this according to the country of use.


* The applicable countries differ depending on the part number. Before purchasing, refer to the wireless system catalog.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

7 A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	●	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)		ø8	ø10	ø12



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

For details on the compact wireless remote, refer to the EXW1 series catalog or operation manual, and for part numbers of the built-in compact wireless remote, etc., refer to page 128-1. The operation manual can be downloaded from the SMC website.

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer

* The 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

8 Mounting and Option

Symbol	Mounting
Nil	Direct mounting
D	DIN rail mounting

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

* DIN rail mounting (D□) is not available for the product without the compact wireless remote (SO).


DIN Rail Option

Nil	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

* Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

How to Order Manifold Assembly

Example (JJ5SY3-10SW2-□)

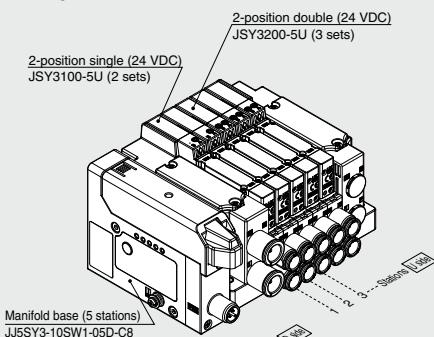

JJ5SY3-10SW2-05D-C8 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U 2 sets (2-position single part no.)

* JSY3200-5U 3 sets (2-position double part no.)

— The asterisk denotes the symbol for the assembly.
Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **0****0** **□** **-5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected. For details, refer to page 158.

⑤ Manual override


Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.



Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.





JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10SW□ - Stations_B^U C₂ (D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

Compact Wireless Remote

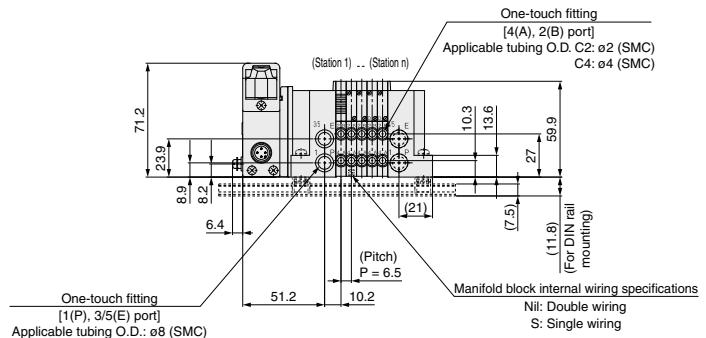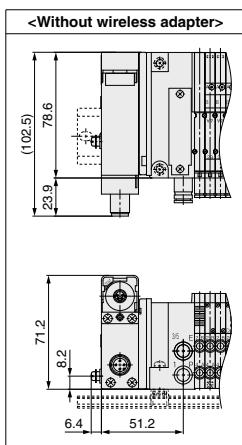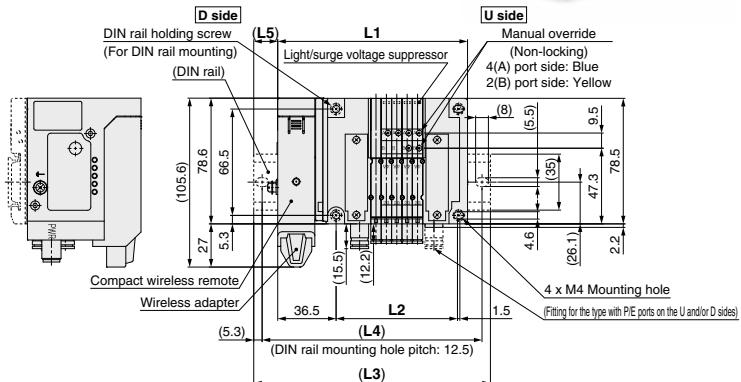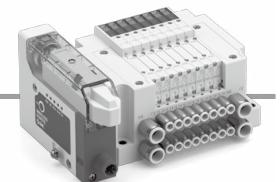

* These figures show the "JJ5SY1-10SW2-05D-C4."

* Refer to page 118 for dimensions of external pilot and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L ₁	99.2	105.7	112.2	118.7	125.2	131.7	138.2	144.7	151.2	157.7	164.2	170.7	177.2	183.7	190.2
L ₂	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L ₃	123	135.5	135.5	148	160.5	160.5	173	173	185.5	185.5	198	198	210.5	210.5	223
L ₄	112.5	125	125	137.5	150	150	162.5	162.5	175	175	187.5	187.5	200	200	212.5
L ₅	12	15	12	15	18	15	18	14	17	14	17	14	17	14	17




L \ n	17	18	19	20	21	22	23	24
L ₁	196.7	203.2	209.7	216.2	222.7	229.2	235.7	242.2
L ₂	153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L ₃	223	235.5	235.5	248	248	260.5	260.5	273
L ₄	212.5	225	225	237.5	237.5	250	250	262.5
L ₅	13	16	13	16	13	16	13	16

Dimensions: JSY1000 Series

JJ5SY1-10SW□ - Stations_B^U-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)

Compact Wireless Remote

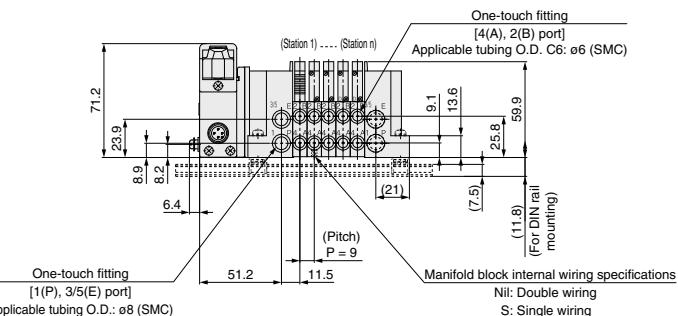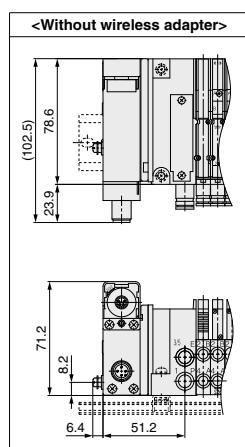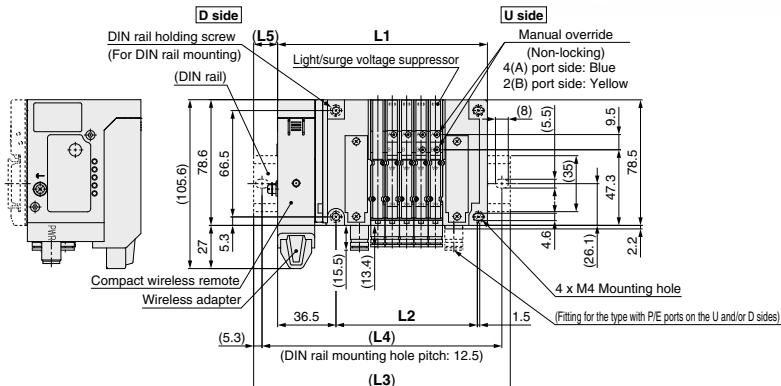

* These figures show the "JJ5SY1-10SW2-05D-C6."

* Refer to page 118 for dimensions of external pilot and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	104.2	113.2	122.2	131.2	140.2	149.2	158.2	167.2	176.2	185.2	194.2	203.2	212.2	221.2	230.2
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	135.5	148	148	160.5	173	173	185.5	198	210.5	210.5	223	235.5	235.5	248	260.5
L4	125	137.5	137.5	150	162.5	162.5	175	187.5	200	200	212.5	225	225	237.5	250
L5	16	18	13	15	17	12	14	16	17	13	15	16	12	14	15

L \ n	17	18	19	20	21	22	23	24
L1	239.2	248.2	257.2	266.2	275.2	248.2	293.2	302.2
L2	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	273	273	285.5	298	310.5	310.5	323	335.5
L4	262.5	262.5	275	287.5	300	300	312.5	325
L5	17	13	14	16	18	13	15	17

JSY1000/3000/5000 Series


Dimensions: JSY3000 series

JJ5SY3-10SW□ - Stations

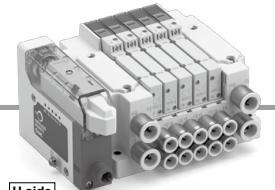


Type 10/Side Ported

Compact Wireless Remote

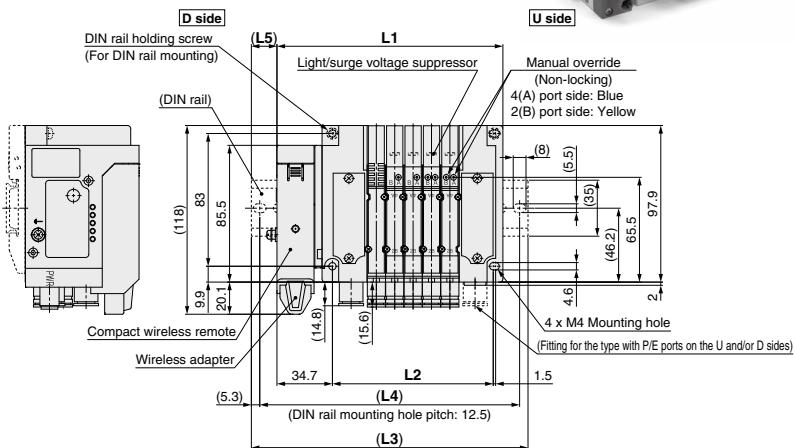


<Without wireless adapter>

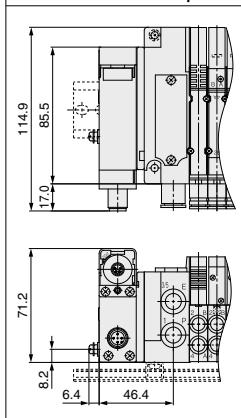

Manifold block internal wiring specifications

Nil: Double wiring
S: Single wiring

(Station 1) ----- (Station 2)

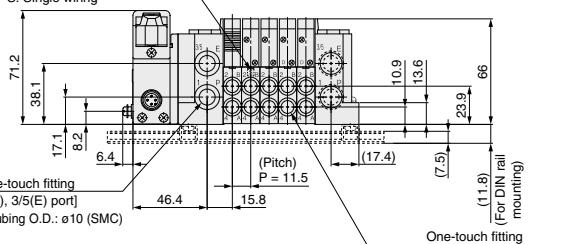

Applicable tubing O.D. C4: ø4 (SMC)

* These figures show the "JJ5SY3-10SW2-05D-C8."
Refer to page 116 for more information.

L: Dimensions

n: Stations

A. Dimensions																
L	0	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	106.8	118.3	129.8	141.3	152.8	164.3	175.8	187.3	198.8	210.3	221.8	233.3	244.8	256.3	267.8	
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1	
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5	298	
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275	287.5	
L5	15	15	16	16	17	17	18	12	12	13	13	14	14	15	15	

L	n	17	18	19	20	21	22	23	24
L1		279.3	290.8	302.3	313.8	325.3	336.8	348.3	359.8
L2		238.6	250.1	261.1	273.1	284.6	296.1	307.6	319.1
L3		310.5	323	335.5	348	360.5	360.5	373	385.5
L4		300	312.5	325	337.5	350	350	362.5	375
L5		16	16	17	17	18	12	13	13


Dimensions: JSY5000 Series

JJ5SY5-10SW□ - Stations ^U_B ^{C6}_{C10} ^{C8}_{C12} (D)



Type 10/Side Ported

Compact Wireless Remote

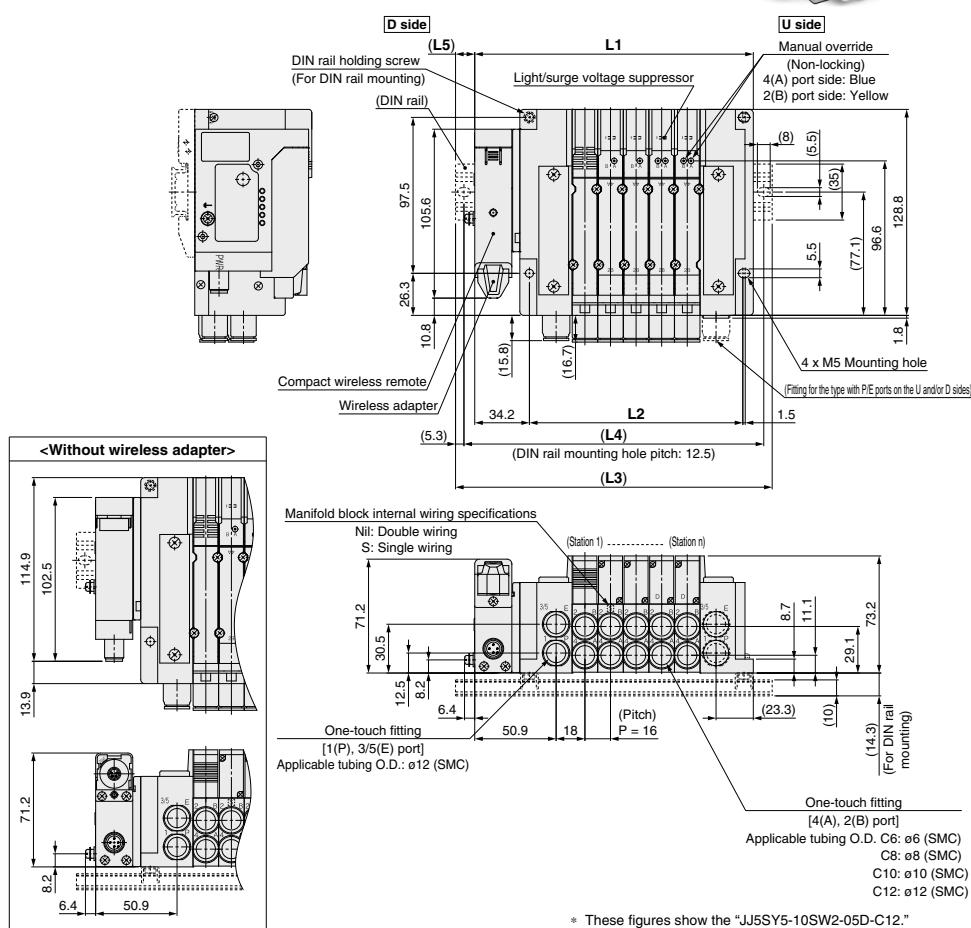

* These figures show the "JJ5SY5-10SW2-05D-C12."

* Refer to page 120 for dimensions of external pilot and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	126.2	142.2	158.2	174.2	190.2	206.2	222.2	238.2	254.2	270.2	286.2	302.2	318.2	334.2	350.2
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5
L4	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375
L5	17	16	14	12	17	15	13	18	16	14	12	17	15	13	18

L \ n	17	18	19	20	21	22	23	24
L1	366.2	382.2	398.2	414.2	430.2	446.2	462.2	478.2
L2	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L3	398	410.5	423	448	460.5	473	485.5	510.5
L4	387.5	400	412.5	437.5	450	462.5	475	500
L5	16	14	13	17	15	14	12	16

Plug-in Connector Connecting Base

EX600

CE UK CA

RoHS

c UL US
*1 JSY3000 only

Type 10
Side Ported

JSY1000/3000/5000 Series

Internal Pilot

How to Order Manifolds

JJ5SY **3** - 10 S6 **Q** **2** **2** - **05** **U** - **C6**

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

③ SI unit

0	Without SI unit
Q	DeviceNet®
N	PROFIBUS DP
V	CC-Link
EB	EtherNet/IP™ (IO-Link unit)
DA	EtherCAT (IO-Link unit)
FA	PROFINET (IO-Link unit)
FB	PROFINET (OPC UA, IO-Link unit) Only negative common
WS	Wireless remote*1

- *1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.
- *2 I/O unit cannot be mounted without SI unit.
- *3 Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series on page 129.


⑦ P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer
U side (2 to 10 stations)	U	C
D side (2 to 10 stations)	D	E
Both sides (2 to 24 stations)	B	F

- * The 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- * The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑧ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
	P, E port size (One-touch fittings)	ø8	ø10	ø12



- *1 Indicate the sizes on the manifold specification sheet in the case of "CM."
- *2 The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

Made to Order

Made to Order
(Refer to page 156 for details.)

Specification
External pilot (SUP/EXH block assembly) Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

⑥ Valve stations

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
16	16 stations	
02	2 stations	
⋮	⋮	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of blanking plates.

⑨ Mounting and Option

Symbol	Mounting
Nill	Direct mounting
D□	DIN rail mounting

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)
- * Refer to page 160 for details on securing the DIN rail mounting type manifold.

DIN Rail Option


Nill	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

- * If the DIN rail must be mounted without an SI unit, select D0. Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the [Web Catalog](#) and the Operation Manual. For the part numbers of the SI units to be mounted, refer to pages 129 and 130. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website.

How to Order Manifold Assembly

Example (JJ5SY3-10S6□-□)

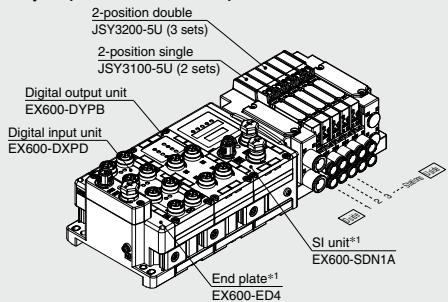

JJ5SY3-10S6Q72-05D-C8 .. 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U 2 sets (2-position single part no.)

* JSY3200-5U 3 sets (2-position double part no.)

* EX600-DXPB 1 set I/O unit part number (Station 1)

* EX600-DYPB 1 set I/O unit part number (Station 2)

→ The asterisk denotes the symbol for the assembly.
Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted, then the I/O units in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

*1 Do not enter the SI unit part number and the end plate part number together.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□** **-5** **□** **□**

1 2 3 4 5



Made to Order

(Refer to page 156 for details.)

Specification

External pilot

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A	4-position	N.C./N.C.
B	dual 3-port	N.O./N.O.
C		N.C./N.O.

3 Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

4 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY1000	JSY3000	JSY5000
U			Non-polar	—	●	●
Z	●	●	Polar Positive common	●	●	●
NZ			Polar Negative common	●	●	●

* Only "Z" and "NZ" types are available with a power saving circuit.

5 Manual override

Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.


* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.

Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.



Plug-in Connector Connecting Base

EX600

Safety Communication Protocol (CIP Safety)

Type 10
Side Ported

JSY1000/3000/5000 Series

Using the safety communication protocol

Refer to the [Web Catalog](#) for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side. Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole. The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC. In addition, refer to "Safety Instructions" for precautions on model selection.



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

JJ5SY **3** - 10 S6 EP - **05** **U** - **C6**

1 2 3 4 5 6 7

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

③ Safety communication fieldbus (Output polarity, Protocol, Number of outputs), Safety I/O unit stations, I/O unit stations, End plate power supply connector

Safety communication fieldbus			Safety I/O unit stations	I/O unit stations	End plate power supply connector
Symbol (Output polarity)	Protocol	Number of outputs			
Positive common (NPN) —*1	Negative common (PNP) EP	Protocol CIP Safety	32*2	1	0 to 9 7/8 inch

*1 Positive common (NPN) type is not applicable.

*2 Only the 32 outputs type is available.

* Manifold + valve plate part number

* The EX600 devices are shipped together with the product. Refer to page 130-1 for details on the mounting method.

* When selecting a safety communication fieldbus system, refer to the EX600 series catalog, and specify the part number when ordering.

In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.

* If your order includes a safety fieldbus module, it will be shipped with the product. Refer to the attached operation manual for details on the mounting method.

⑤ P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer
U side (2 to 10 stations)	U	C
D side (2 to 10 stations)	D	E
Both sides (2 to 24 stations)	B	F


* The 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑥ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)	ø8	ø10	ø12	



⑦ Mounting and Option


Symbol	Mounting
NII	Direct mounting
D0	DIN rail mounting (Without DIN rail)

*1 Order the DIN rail separately, referring to dimension L3. (Refer to page 152 for DIN rail product numbers and lengths.)

* Refer to page 160 for the fixation of DIN rail mounting type manifold.

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the EX600 series catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to pages 129 and 130. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website.

*1 Indicate the sizes on the manifold specification sheet in the case of "CM." * The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

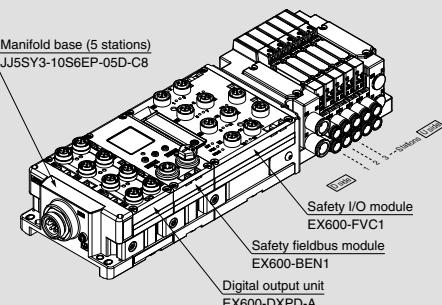How to Order Manifold Assembly: EX600 (Safety Communication Protocol)**Example (JJ5SY3-10S6EP)**

JJ5SY3-10S6EP-05D-C8

- * JSY3100-5U . . . 2 sets (2-position single part no.)
- * JSY3300-5U . . . 3 sets (3-position closed center part no.)
- * EX600-ED3 . . . End plate part no.
- * EX600-DXPD-A . . . I/O unit part no. (Station 1)
- * EX600-BEN1 . . . Fieldbus module part no.
- * EX600-FVC1 . . . Safety I/O module part no.
- * EX600-ZMV4 . . . Valve plate part no.

→ * The asterisk denotes the symbol for the assembly.
* Prefix it to the part numbers of the valve, etc.

· Indicate the part numbers of valves and optional parts to be mounted in order, starting from station 1 (D side).

· Indicate the part numbers for the end plate, I/O unit (1st station from the D side), fieldbus module, and safety I/O module in that order.

* The manifold part number above does not include an end plate, I/O unit, fieldbus module, or safety I/O module. However, they can be shipped with the product if they are ordered together. For details on the compatible EX600 models, refer to the EX600 series safety communication fieldbus system catalog. In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.

[Validated product examples]

Please contact SMC for further details as supported variations are continually being added.

Internal Pilot**How to Order Valves (With mounting screw)**

JSY **3** **1** **00** **□** - **5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A	4-position	N.C./N.C.
B		N.O./N.O.
C	dual 3-port	N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
N	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

④ Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY1000	JSY3000	JSY5000
U	●	●	Non-polar	—	●	●
NZ	●	●	Polar Negative common	●	●	●

* Only "NZ" type is available with a power saving circuit.

⚠ Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 137 for base gasket and mounting screw part numbers.


JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10S6□□ - Stations U_B-C₂(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

EX600 (M12 Connector)

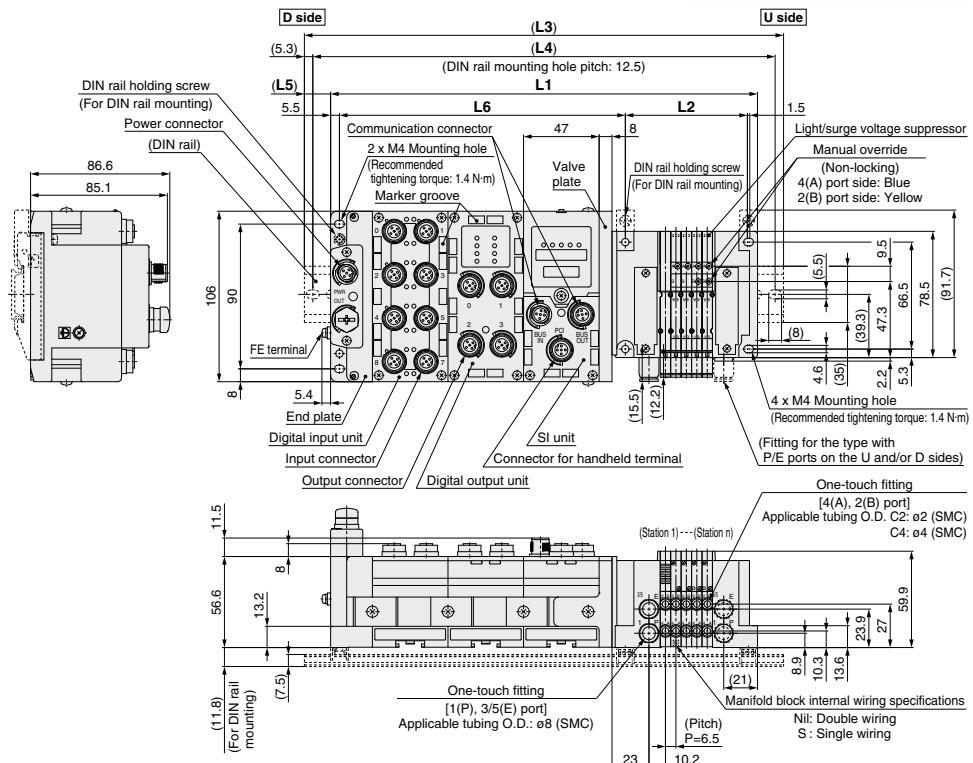

$$L1 = 6.5 \times n1 + 139 + 47 \times n2$$

$$L2 = 6.5 \times n1 + 43.4$$

$$L4 = L3 - 10.5$$

$$L5 = (L3 - L1) / 2$$

$$L6 = 47 \times n2 + 83.8$$

n1: Valve stations

n2: I/O unit stations

* These figures show the "JJ5SY1-10S6Q22-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.



L3: DIN Rail Overall Length

Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
0	185.5	185.5	198	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5	260.5	273	273	285.5	298	298	310.5	310.5	323	323	
1	223	235.5	235.5	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	
2	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	385.5	385.5	398	398	410.5	410.5	423	
3	323	323	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	448	448	460.5	460.5	473	
4	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5	448	448	460.5	473	473	485.5	498	498	510.5	510.5	523	
5	410.5	423	435.5	435.5	448	448	460.5	460.5	473	473	485.5	485.5	498	498	510.5	510.5	523	523	535.5	548	548	560.5	560.5	573
6	460.5	473	473	485.5	485.5	498	498	510.5	510.5	523	523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	585.5	598	598	610.5
7	510.5	523	523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	585.5	598	598	610.5	610.5	623	623	635.5	635.5	648	648	660.5
8	560.5	560.5	573	573	585.5	585.5	598	598	610.5	610.5	623	623	635.5	648	648	660.5	660.5	673	673	685.5	685.5	698	698	710.5
9	610.5	610.5	623	623	635.5	635.5	648	648	660.5	660.5	673	673	685.5	685.5	698	698	710.5	710.5	723	723	735.5	735.5	748	

Dimensions: JSY1000 Series

JJ5SY1-10S6□□-Stations□□-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)
EX600 (M12 Connector)

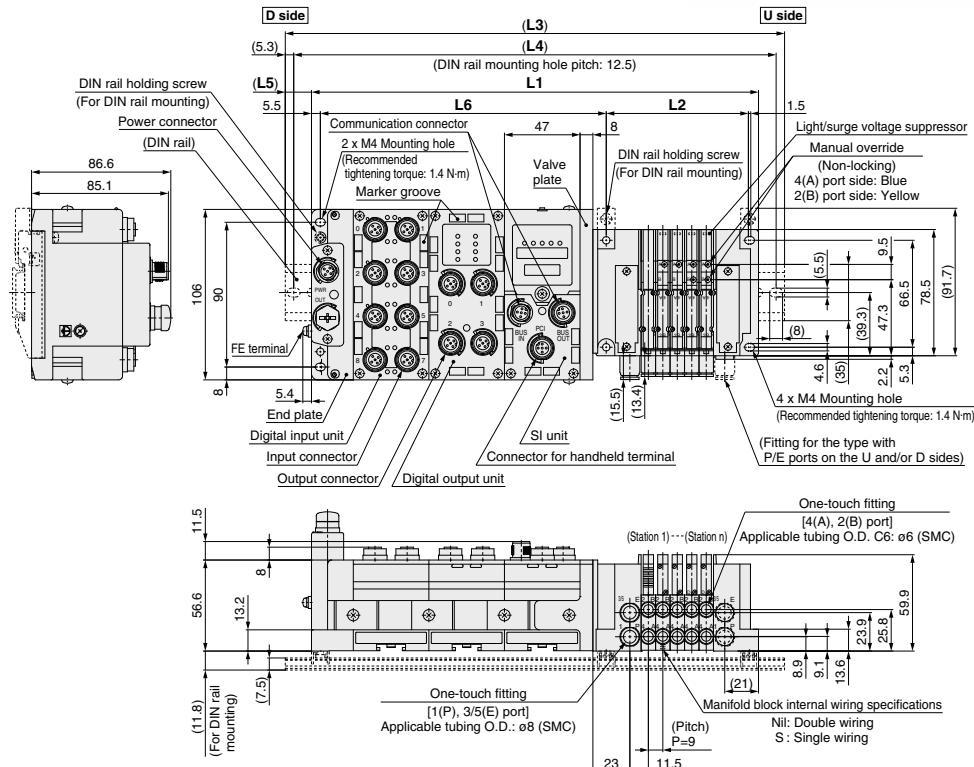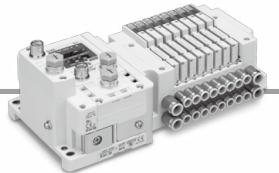

$L_1 = 9 \times n_1 + 139 + 47 \times n_2$
 $L_2 = 9 \times n_1 + 43.4$
 $L_4 = L_3 - 10.5$
 $L_5 = (L_3 - L_1) / 2$
 $L_6 = 47 \times n_2 + 83.8$

n1: Valve stations
n2: I/O unit stations

* These figures show the "JJ5SY1-10S6Q22-05D-C6".

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L3: DIN Rail Overall Length


Valve stations (n1) I/O unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24			
0	185.5	198	210.5	210.5	223	235.5	235.5	248	260.5	273	273	285.5	298	298	310.5	323	335.5	335.5	348	360.5	373	373	385.5	398		
1	235.5	248	248	260.5	273	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	410.5	423	435.5	448	448		
2	265.5	285.5	298	310.5	310.5	323	335.5	348	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	448	460.5	473	473	473	473	
3	323	335.5	348	360.5	360.5	373	385.5	385.5	398	410.5	423	423	435.5	448	448	460.5	473	485.5	485.5	498	510.5	510.5	523	523	523	
4	373	385.5	398	398	410.5	423	423	435.5	448	460.5	460.5	473	485.5	485.5	498	510.5	523	523	535.5	548	560.5	560.5	573	585.5	598	
5	423	435.5	435.5	448	460.5	460.5	473	485.5	498	498	510.5	523	535.5	535.5	548	560.5	560.5	573	585.5	598	610.5	623	635.5	648	660.5	
6	473	473	485.5	498	510.5	510.5	523	535.5	535.5	548	560.5	573	573	585.5	598	598	610.5	623	635.5	648	660.5	660.5	660.5	673	673	
7	510.5	523	535.5	548	548	560.5	573	573	585.5	598	610.5	610.5	623	635.5	635.5	648	660.5	673	673	685.5	698	710.5	710.5	710.5	710.5	710.5
8	560.5	573	585.5	585.5	598	610.5	610.5	623	635.5	648	648	660.5	673	685.5	685.5	698	710.5	710.5	723	735.5	748	748	760.5	773	785.5	
9	610.5	623	623	635.5	648	660.5	673	685.5	698	710.5	723	723	735.5	748	748	760.5	773	785.5	798	810.5	810.5	810.5	810.5	810.5	810.5	

JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10S6□□□-Stations_B^U-C₄(D)

Type 10/Side Ported (Applicable to Φ2 and Φ4 fittings)
EX600 (7/8 Inch Connector)

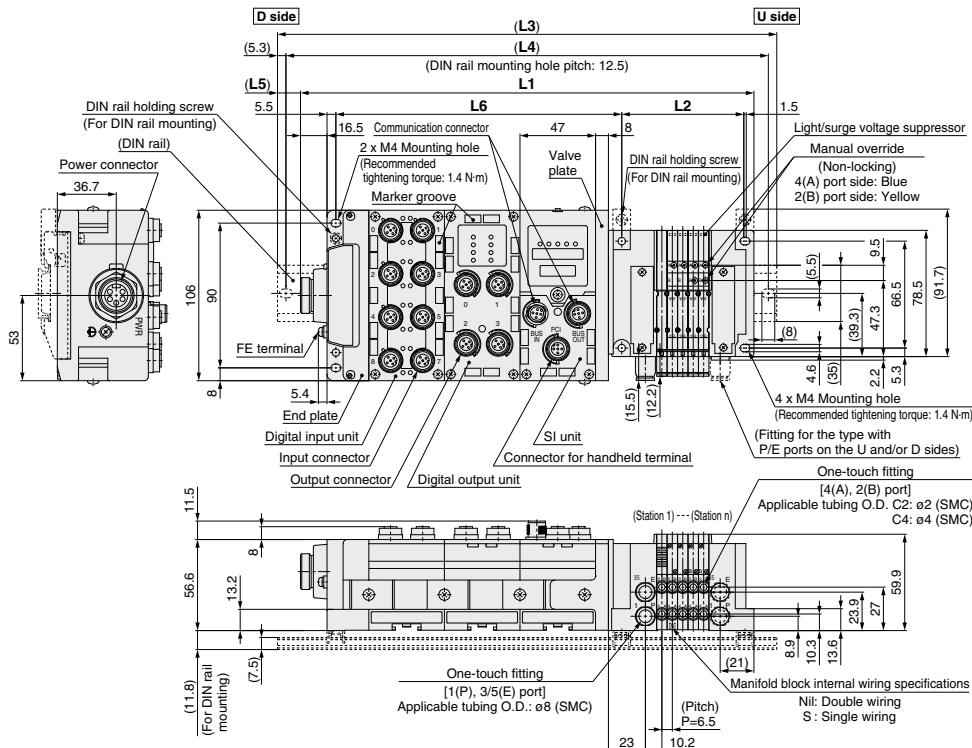

$L_1 = 6.5 \times n_1 + 155.5 + 47 \times n_2$
 $L_2 = 6.5 \times n_1 + 43.4$
 $L_4 = L_3 - 10.5$
 $L_5 = (L_3 - L_1) / 2$
 $L_6 = 47 \times n_2 + 83.8$

n_1 : Valve stations
 n_2 : I/O unit stations

* These figures show the "JJ5SY1-10S6Q32-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L3: DIN Rail Overall Length


Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
I/O unit stations (n2)	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	335.5	335.5	335.5	
0	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	335.5	
1	248	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	385.5	
2	298	298	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5
3	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	423	423	435.5	435.5	448	448	460.5	460.5	473	473	485.5	485.5
4	385.5	398	398	410.5	410.5	423	423	435.5	435.5	448	448	460.5	460.5	473	473	485.5	485.5	498	498	510.5	510.5	523	523	
5	435.5	448.5	448	448	460.5	460.5	473	473	485.5	485.5	498	510.5	510.5	523	523	535.5	535.5	548	548	560.5	560.5	573	573	
6	485.5	485.5	498	498	510.5	510.5	523	523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	585.5	598	598	610.5	610.5	623	623
7	523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	598	598	610.5	610.5	623	623	635.5	635.5	648	648	660.5	660.5	673	673
8	573	585.5	585.5	598	598	610.5	610.5	623	623	635.5	635.5	648	648	660.5	660.5	673	673	685.5	685.5	698	698	710.5	723	
9	623	623	635.5	635.5	648	648	660.5	660.5	673	685.5	685.5	698	698	710.5	710.5	723	723	735.5	735.5	748	748	760.5	760.5	

Dimensions: JSY1000 Series

Type 10/Side Ported (Applicable to ø6 fittings)



JJ5SY1-10S6 $\frac{3}{5}$ - Stations C6(D)

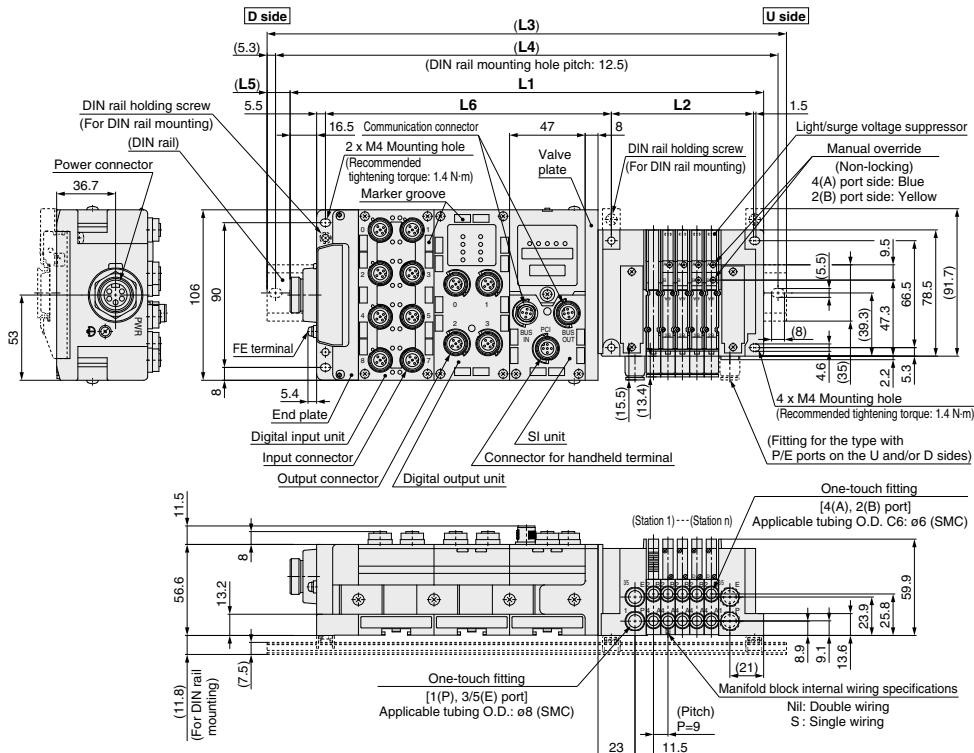

$$\begin{aligned}
 L1 &= 9 \times n1 + 155.5 + 47 \times n2 \\
 L2 &= 9 \times n1 + 43.4 \\
 L4 &= L3 - 10.5 \\
 L5 &= (L3 - L1) / 2 \\
 L6 &= 47 \times n2 + 83.8
 \end{aligned}$$

* These figures show the "JJ5SY1-10S6Q32-05D-C6

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

- * When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

n1: Valve stations
n2: I/O unit stations

L3: DIN Rail Overall Length

Valve stations (n ₁)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
I/O unit stations (n ₂)	0	198	210.5	223	235.5	235.5	248	260.5	260.5	273	285.5	298	298	310.5	323	323	335.5	348	360.5	360.5	373	385.5	398	398
1	248	260.5	273	273	285.5	298	298	310.5	323	335.5	335.5	348	360.5	373	373	385.5	398	398	410.5	423	435.5	435.5	448	
2	298	310.5	310.5	323	335.5	348	348	360.5	373	373	385.5	398	410.5	410.5	423	435.5	435.5	448	460.5	473	473	485.5	498	
3	348	348	360.5	373	385.5	385.5	398	410.5	410.5	423	435.5	448	448	460.5	473	473	485.5	498	510.5	510.5	523	535.5	548	
4	385.5	398	410.5	423	423	435.5	448	448	460.5	473	485.5	485.5	498	510.5	523	523	535.5	548	548	560.5	573	585.5	585.5	585
5	435.5	448	460.5	460.5	473	485.5	498	498	510.5	523	523	535.5	548	560.5	560.5	573	585.5	585.5	598	610.5	623	623	635.5	635.5
6	485.5	498	510.5	523	535.5	535.5	548	560.5	560.5	573	585.5	598	598	610.5	623	623	635.5	648	660.5	660.5	673	685.5	698	705.5
7	535.5	535.5	548	560.5	573	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	705.5	723	735.5			
8	573	585.5	598	610.5	610.5	623	635.5	648	648	650.5	673	673	685.5	698	710.5	710.5	723	735.5	735.5	748	760.5	773	773	773
9	623	635.5	648	648	660.5	673	685.5	685.5	698	710.5	710.5	723	735.5	748	748	760.5	773	773	785.5	798	810.5	810.5	823	


JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10S6□□□ - Stations U C4
D C8 (D)
B C8
9

Type 10/Side Ported

EX600 (M12 Connector)

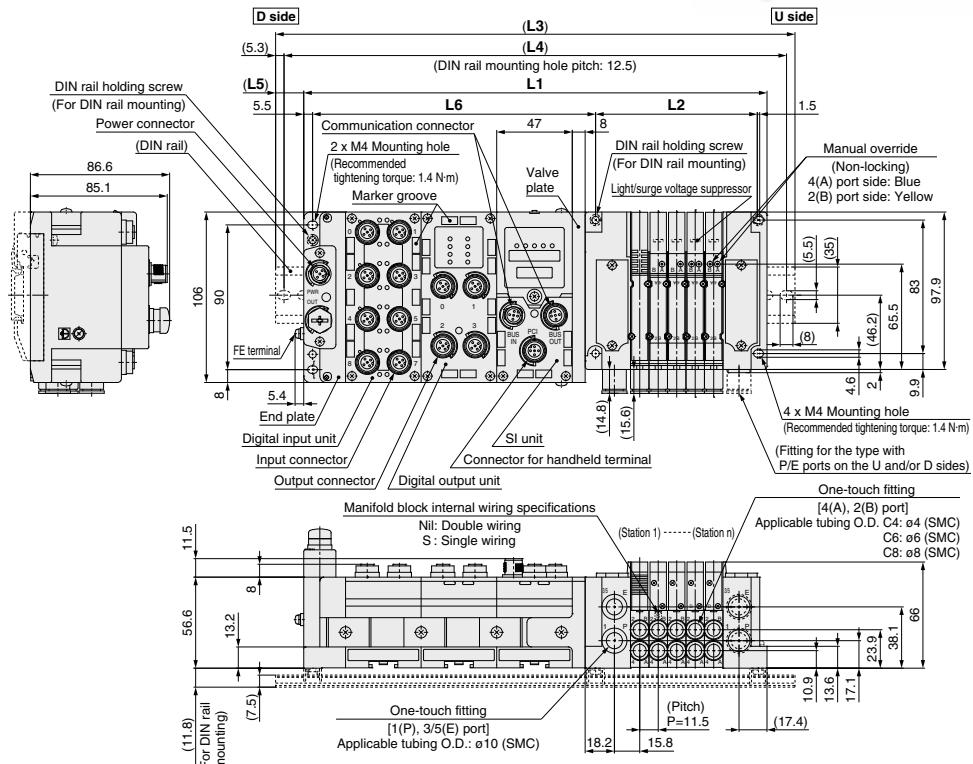

L1 = 11.5 x n1 + 136.6 + 47 x n2
 L2 = 11.5 x n1 + 43.1
 L4 = L3 - 10.5
 L5 = (L3 - L1) / 2
 L6 = 47 x n2 + 82

n1: Valve stations
n2: I/O unit stations

* These figures show the "JJ5SY3-10S6Q22-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L3: DIN Rail Overall Length


Valve stations (n1) I/O unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
0	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	435.5	448
1	235.5	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	460.5	473	485.5	
2	265.5	298	310.5	323	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	
3	335.5	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	560.5	573	585.5	
4	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	
5	423	435.5	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	
6	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	
7	523	535.5	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	748	760.5	773	
8	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	
9	610.5	623	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	848	860.5	

Dimensions: JSY3000 Series

JJ5SY3-10S6□³□ - Stations ^U_B ^{C4}_{C8}(D)

Type 10/Side Ported

EX600 (7/8 Inch Connector)

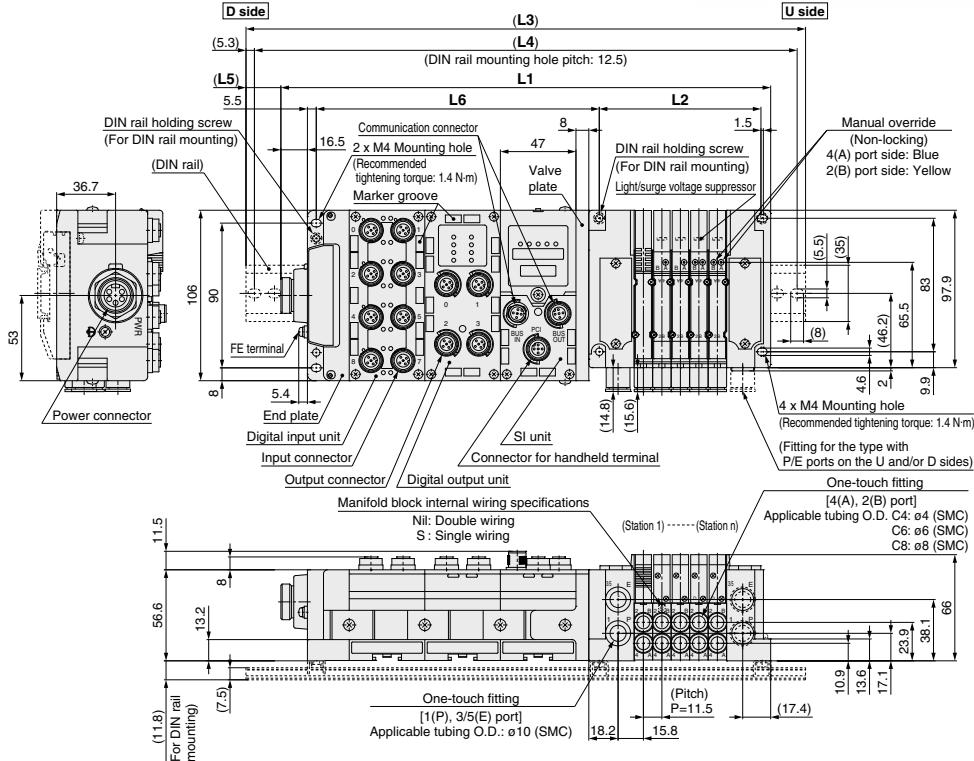

L1 = 11.5 x n1 + 153.1 + 47 x n2
 L2 = 11.5 x n1 + 43.1
 L4 = L3 - 10.5
 L5 = (L3 - L1) / 2
 L6 = 47 x n2 + 82

n1: Valve stations
n2: I/O unit stations

L3: DIN Rail Overall Length

Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24							
0	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	455.5	448	460.5	473	485.5	498	510.5	523			
1	273	285.5	298	308.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598			
2	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623				
3	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698		
4	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723			
5	460.5	473	485.5	498	505.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798		
6	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	
7	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898
8	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948
9	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5	998	

* These figures show the "JJ5SY3-10S6Q32-05D-C8".

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

JSY1000/3000/5000 Series


Dimensions: JSY5000 Series

Type 10/Side Ported

EX600 (M12 Connector)



JJ5SY5-10S6□□ - Stations U C6 C8 C10 (D) C12

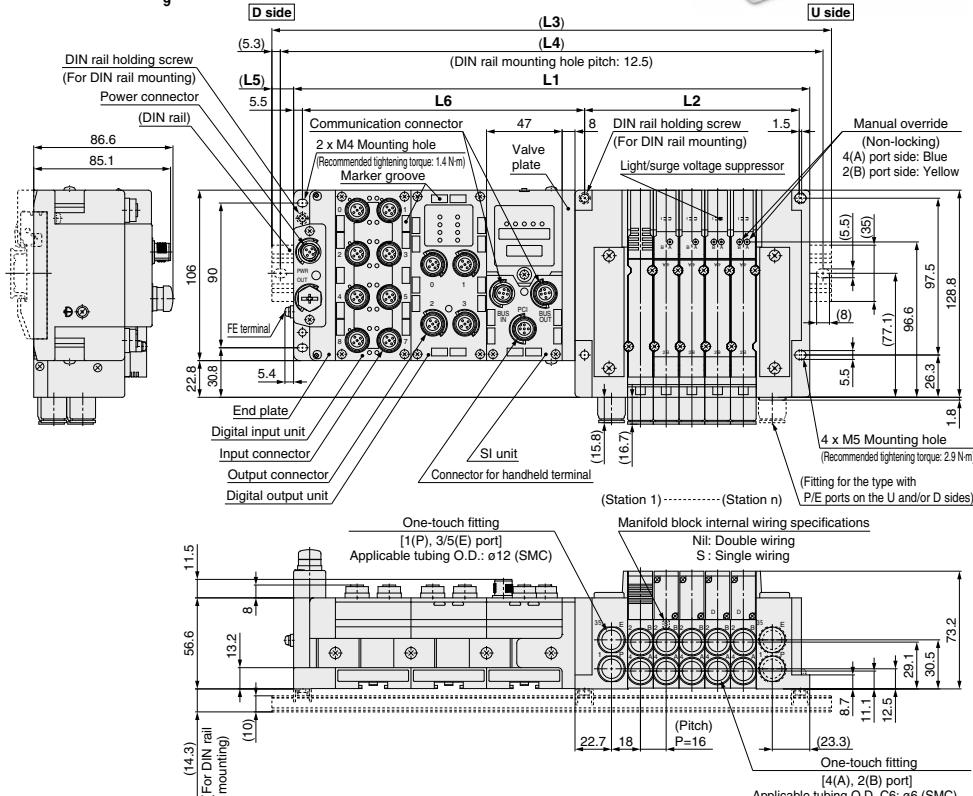

L1 = 16 x n1 + 147 + 47 x n2
L2 = 16 x n1 + 53.5
L4 = L3 - 10.5
L5 = (L3 - L1) / 2
L6 = 47 x n2 + 81.5

n1: Valve stations
n2: I/O unit stations

* These figures show the "JJ5SY5-10S6Q22-05D-C12".

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L3: DIN Rail Overall Length


Valve stations (n1) I/O unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5
1	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5
2	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	660.5
3	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
4	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698	710.5	735.5	748
5	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5	748	760.5	785.5	798
6	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823	848
7	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5
8	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5	910.5	923	935.5
9	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	795.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948	973	985.5

Dimensions: JSY5000 Series

JJ5SY5-10S6□ 3□ - Stations U C6
B C8 (D)
C10 C12

Type 10/Side Ported

EX600 (7/8 Inch Connector)

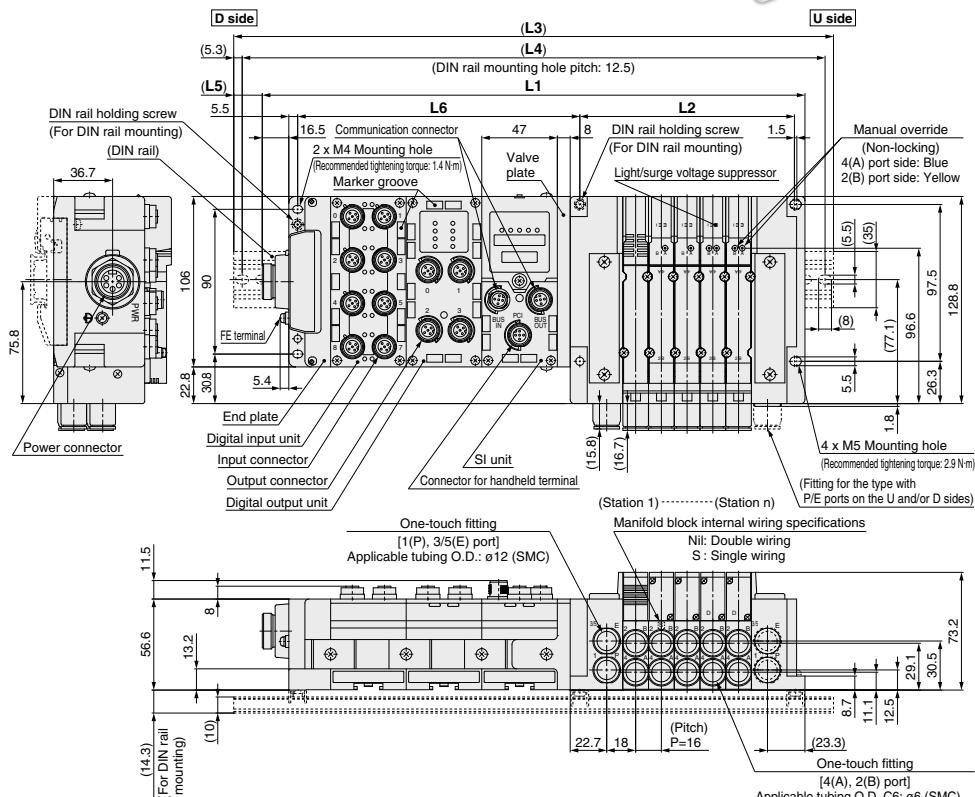

JSY1000/3000/5000 Series


Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

EX600 Safety Communication Protocol (7/8 Inch Connector)

Dimensions: JSY1000 Series



JJ5SY1-10S6EP- Stations UD-C2(D)

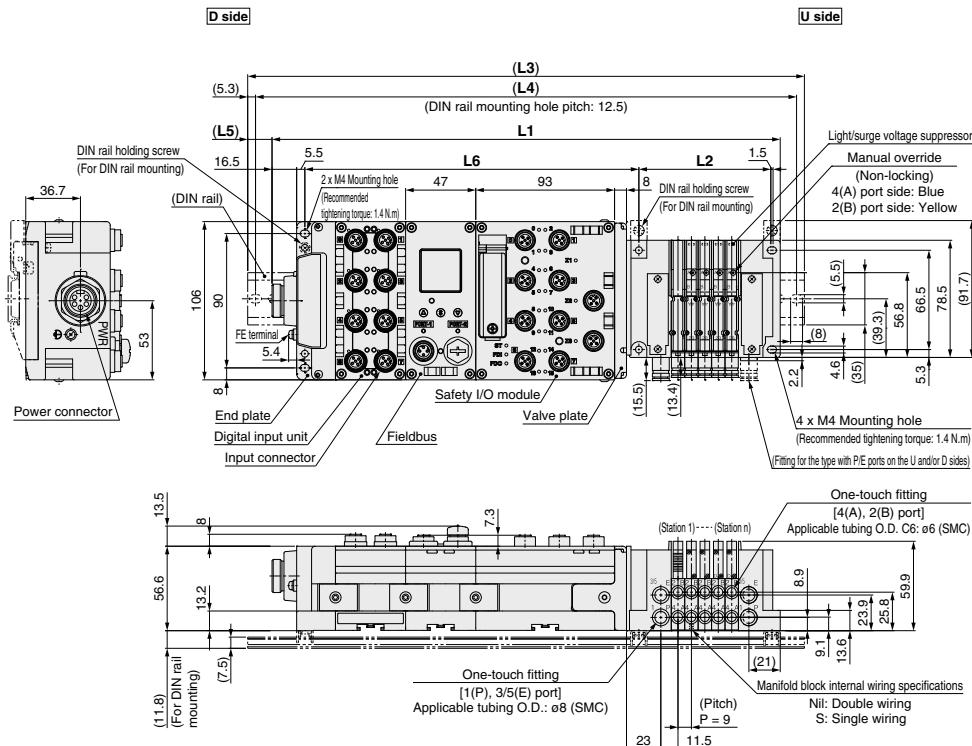

$$1.1 = 9 \times p1 + 155.5 + 47 \times p2 + 93 \times p3$$

$$L2 = 9 \times n1 \pm 43.4$$

$$14 = 13 - 1$$

$$L_4 = L_3 - 10.3$$

$$L_3 = (L_0 - L_1)/2$$

* These figures show the "L15SY1-10S6EP5-05D-C6".

- These figures show the 353511-1036EF3-03D-C8.
- Refer to page 118 for dimensions of external pilot and silencer.

- * When CM is selected for mixed A, B port size and C6 is included, refer to page 121 for dimensions.


1.3: DIN Rail Overall Length

Valve stations (n1)		E3. DIN Rail Overall Length																								
IU unit stations (n2)		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
0		285.5	298	298	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5	
1		335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	448	448	460.5	460.5	473	473	485.5	485.5		
2		385.5	385.5	398	410.5	410.5	423	423	435.5	435.5	448	448	460.5	460.5	473	473	485.5	485.5	498	498	510.5	510.5	523	523		
3		435.5	435.5	448	448	448	460.5	460.5	473	473	485.5	485.5	498	498	510.5	510.5	523	523	535.5	535.5	548	548	560.5	560.5		
4		473	485.5	498	498	510.5	510.5	523	523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	585.5	598	598	610.5	610.5	623	623	
5		523	535.5	535.5	548	548	560.5	560.5	573	573	585.5	585.5	598	598	610.5	623	623	635.5	635.5	648	648	660.5	660.5	673	673	
6		573	585.5	585.5	598	598	610.5	610.5	623	623	635.5	635.5	648	648	660.5	660.5	673	673	685.5	685.5	698	698	710.5	710.5		
7		623	635.5	635.5	648	648	660.5	660.5	673	673	685.5	685.5	698	698	710.5	710.5	723	735.5	735.5	748	748	760.5	760.5	760.5	760.5	
8		673	673	685.5	685.5	698	698	710.5	710.5	723	723	735.5	735.5	748	748	760.5	760.5	773	773	785.5	785.5	798	798	810.5	810.5	
9		710.5	723	723	735.5	735.5	748	748	760.5	760.5	773	773	785.5	785.5	798	798	810.5	810.5	823	823	825.5	825.5	840	840	860.5	860.5

Dimensions: JSY1000 Series

JJ5SY1-10S6EP-**Stations**_B^U-C6(D)

Type 10/Side Ported (Applicable to ø6 fittings)
EX600 Safety Communication Protocol (7/8 Inch Connector)

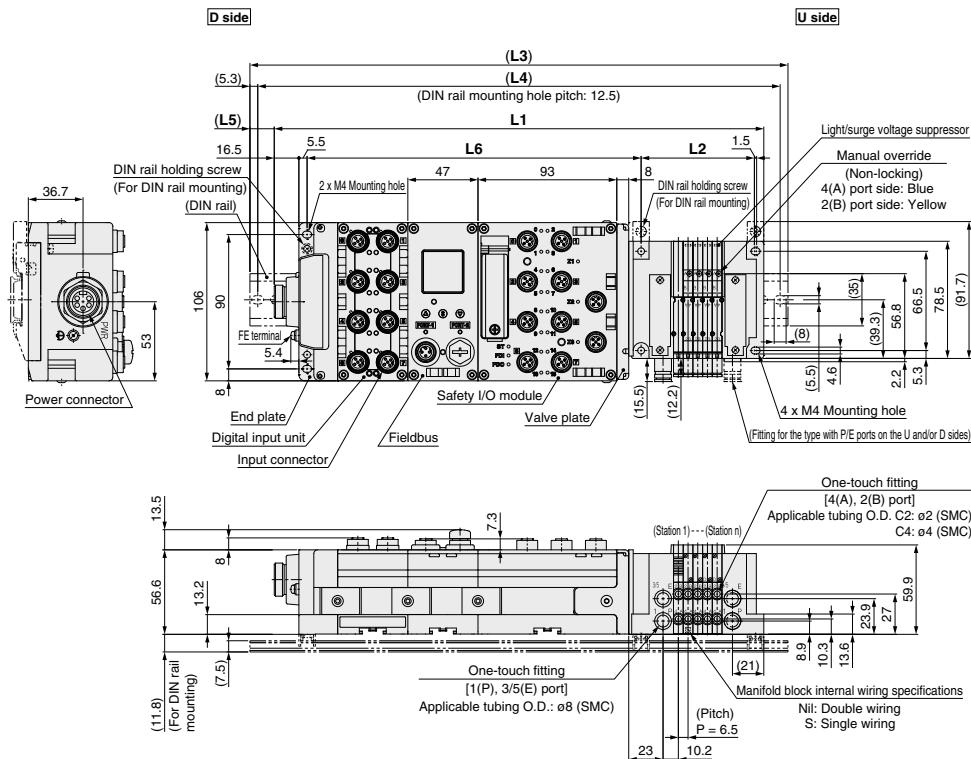

$L1 = 6.5 \times n1 + 155.5 + 47 \times n2 + 93 \times n3$
 $L2 = 6.5 \times n1 + 43.4$
 $L4 = L3 - 10.5$
 $L5 = (L3 - L1)/2$
 $L6 = 47 \times n2 + 93 \times n3 + 83.8$

$n1$: Valve stations
 $n2$: I/O unit stations
 $n3$: Number of safety I/O module

L3: DIN Rail Overall Length

Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O unit stations (n2)	0	298	310.5	310.5	323	335.5	335.5	348	360.5	373	373	385.5	398	398	410.5	423	435.5	448	460.5	473	473	485.5	498
1	348	348	360.5	373	373	385.5	398	410.5	410.5	423	435.5	448	448	460.5	473	473	485.5	498	510.5	510.5	523	535.5	535.5
2	365.5	398	410.5	423	423	435.5	448	448	460.5	473	485.5	485.5	498	510.5	510.5	523	535.5	548	548	560.5	573	573	585.5
3	435.5	448	460.5	460.5	473	485.5	485.5	498	510.5	523	523	535.5	548	548	560.5	573	585.5	598	610.5	623	623	635.5	635.5
4	485.5	498	498	510.5	523	523	535.5	548	560.5	560.5	573	585.5	598	598	610.5	623	623	635.5	648	660.5	673	685.5	685.5
5	535.5	585.5	548	560.5	573	573	585.5	598	598	610.5	623	635.5	635.5	648	660.5	660.5	673	685.5	698	710.5	723	723	723
6	573	585.5	598	610.5	610.5	623	635.5	635.5	648	660.5	673	673	685.5	698	698	710.5	723	735.5	748	760.5	773	773	773
7	623	635.5	648	648	660.5	673	673	685.5	698	710.5	710.5	723	735.5	748	748	760.5	773	773	785.5	798	810.5	810.5	823
8	673	685.5	685.5	698	710.5	723	723	735.5	748	748	760.5	773	785.5	785.5	798	810.5	823	835.5	848	860.5	873	885.5	885.5
9	723	723	735.5	748	760.5	760.5	773	785.5	785.5	798	810.5	823	823	835.5	848	848	860.5	873	885.5	898	910.5	923	923

* These figures show the "JJ5SY1-10S6EP5-05D-C4."

* Refer to page 118 for dimensions of external pilot and silencer.

* When CM is selected for mixed A, B port size and C6 is included, refer to page 121 for dimensions.


JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10S6EP-_{n1} Stations _{n2} C4
B C6(D)

Type 10/Side Ported

EX600 Safety Communication Protocol (7/8 Inch Connector)

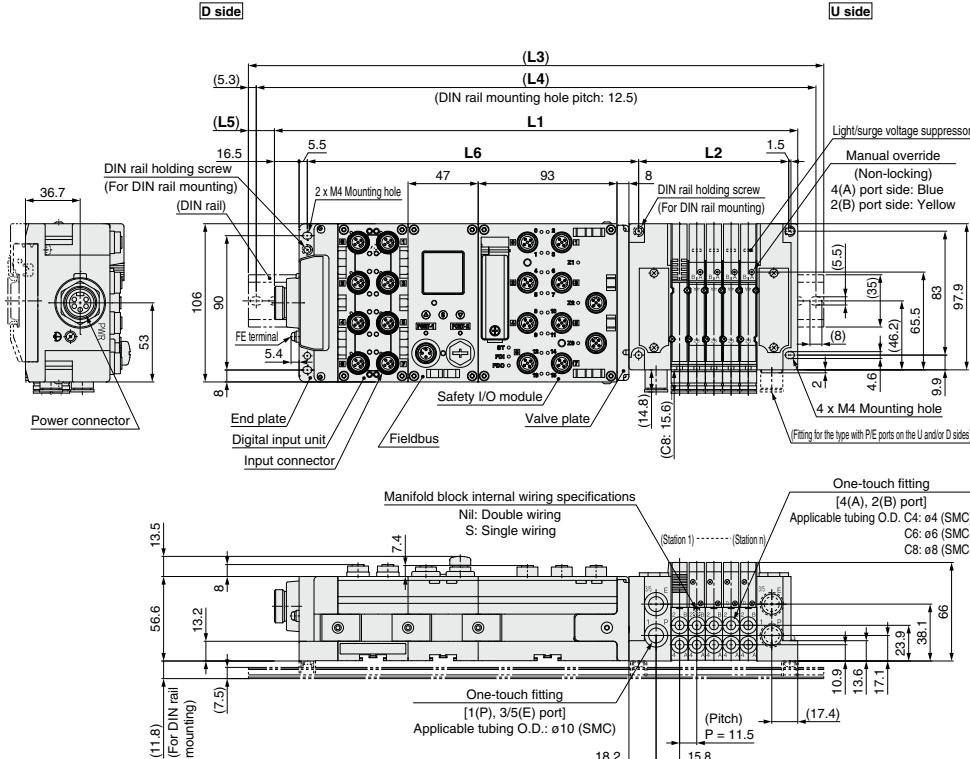

L1 = 11.5 x n1 + 153.1 + 47 x n2 + 93 x n3

L2 = 11.5 x n1 + 43.1

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 93 x n3 + 82

* These figures show the "JJ5SY3-10S6EP5-05D-C8."

* Refer to page 119 for dimensions of external pilot and silencer.

n1: Valve stations

n2: I/O unit stations

n3: Number of safety I/O module

L3: DIN Rail Overall Length




Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O unit stations (n2)	0	298	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	553.5
0	298	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	553.5	
1	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	553.5	568	560.5	573	585.5	598	
2	398	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	
3	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	
4	485.5	498	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	755.5
5	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5
6	585.5	598	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	850.5
7	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898
8	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	950.5
9	723	735.5	748	760.5	773	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	

Dimensions: JSY5000 Series

JJ5SY5-10S6EP - Stations **U** **C6**
B **C8**
C10(D)
C12

Type 10/Side Ported

EX600 Safety Communication Protocol (7/8 Inch Connector)

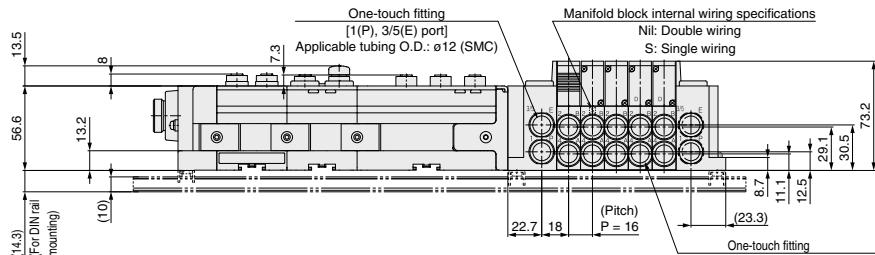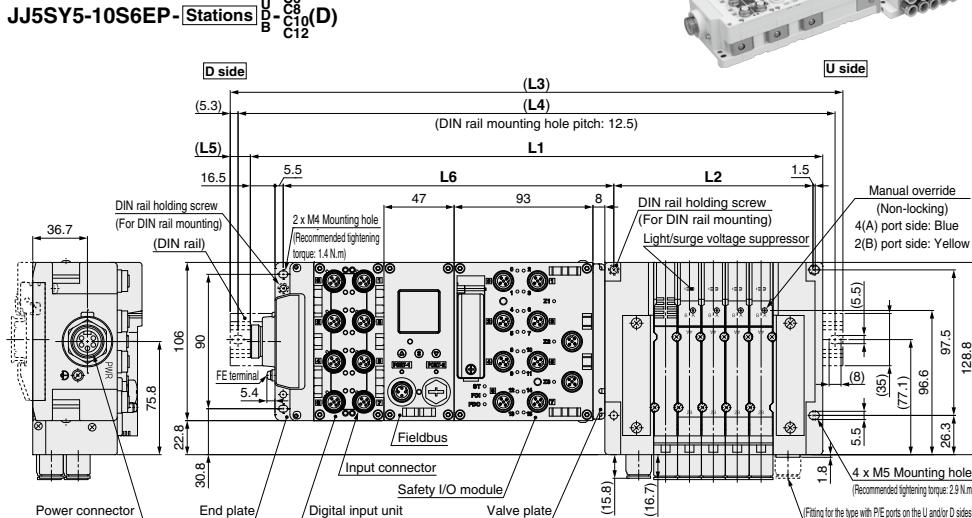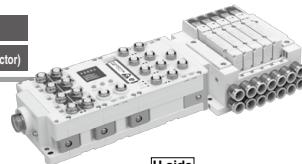

L1 = 16 x n1 + 163.5 + 47 x n2 + 93 x n3
 L2 = 16 x n1 + 53.5
 L4 = L3 - 10.5
 L5 = (L3 - 10.5)/2
 L6 = 47 x n2 + 93 x n3 + 81.5

* These figures show the "JJ5SY5-10S6EP5-05D-C12."

* Refer to page 120 for dimensions of external pilot and silencer.

n1: Valve stations

n2: I/O unit stations

n3: Number of safety I/O module

L3: DIN Rail Overall Length

Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O unit stations (n2)	0	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648
1	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698	723
2	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5	748	760.5
3	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5	748	760.5	773	798	810.5
4	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823	848	860.5
5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5	910.5
6	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948
7	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948	973	985.5	998
8	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898	923	935.5	948	960.5	985.5	998	1010.5	1035.5	1048
9	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898	923	935.5	948	960.5	985.5	998	1010.5	1023	1048	1060.5	1073	1098

Plug-in Connector Connecting Base

EX245

Type 10/
Side Ported

JSY3000/5000 Series



*1 JSY3000 only

How to Order Manifolds

JJ5SY **3** - 10 S **AAN** **05** **D** - **C6**

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

Only direct mounting is
selectable for the manifold.



Made to Order

(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)

Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

① Series

3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

③ SI unit

Symbol (Output polarity)	Protocol	Communication connector	Communication connector specifications
Negative common (PNP)			Without SI unit
0	PROFINET	Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.
AAN		Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.
ABN		M12: 2 pcs.	7/8 inch: 2 pcs.
ACN			

* The valve output polarity for the SI unit is negative common (PNP).

④ With or without I/O modules

NII	Without I/O module
Y	With I/O module

* When not selecting an SI unit, the symbol will be "nil."

⑤ Number of I/O modules

NII	Without I/O module
1	1 station
⋮	⋮
8	8 stations

* When not selecting an SI unit, the symbol will be "nil."

⑦ P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

⑧ SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer

- * The 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- * The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑨ A, B port size (Metric)


Symbol	A, B port	JSY3000	JSY5000	
Straight	ø4 One-touch fitting	●	—	
	ø6 One-touch fitting	●	●	
	ø8 One-touch fitting	●	●	
	ø10 One-touch fitting	—	●	
	ø12 One-touch fitting	—	●	
	Straight port, mixed sizes	●	●	
P, E port size (One-touch fittings)		ø10	ø12	

*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

For details on the EX245 Integrated Type (For Input/Output) Serial Transmission System, refer to the [Web Catalog](#) and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 131. Please download the Operation Manual via the SMC website.

How to Order Manifold Assembly

Example (JJ5SY3-10SAAN□-□)

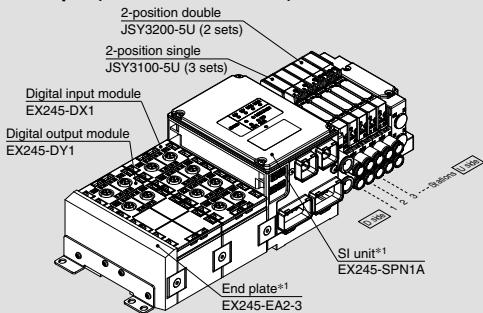

JJ5SY3-10SAANY2-05D-C6... 1 set (Type 10 5-station manifold base part no.)
 * JSY3100-5U 3 sets (2-position single part no.)
 * JSY3200-5U 2 sets (2-position double part no.)
 * EX245-DX1 1 set I/O module part number
 * EX245-DY1 1 set I/O module part number
 The asterisk denotes the symbol for the assembly.
 Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- The I/O module station arrangement is numbered starting from the SI unit side.
- Under the manifold part number, state the valves to be mounted, then the I/O modules in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

*1 Do not enter the SI unit part number and the end plate part number together.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□-5** **□** **□**

1 2 3 4 5



Made to Order

(Refer to page 156 for details.)

Specification

External pilot

1 Series

3	JSY3000
5	JSY5000

2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
A	4-position	N.C./N.C.
B		N.O./N.O.
C	dual 3-port	N.C./N.O.

3 Coil specifications

Symbol	Coil specifications	JSY3000	JSY5000
Nil	Standard	●	●
T	With power-saving circuit (Continuous duty type)	●	●

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

4 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY3000	JSY5000
U			Non-polar	●	●
NZ	●	●	Polar Negative common	●	●

* Only "NZ" type is available with a power saving circuit.

5 Manual override

Symbol/Specification	JSY3000	JSY5000
Nil: Non-locking push type	●	●
D: Push-turn locking slotted type	●	●
E: Push-turn locking lever type	●	●


Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.






JSY3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10SA□ - Stations ^U_B ^{C4}_{C6} ^{C8}

Type 10/Side Ported

EX245

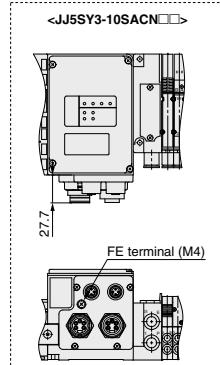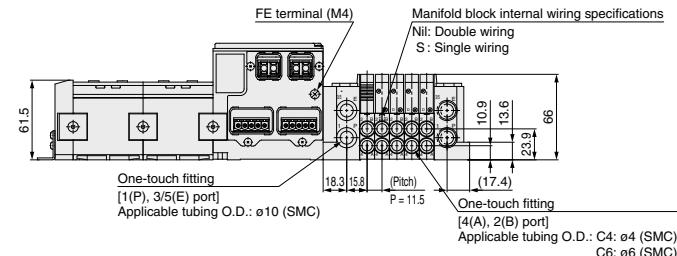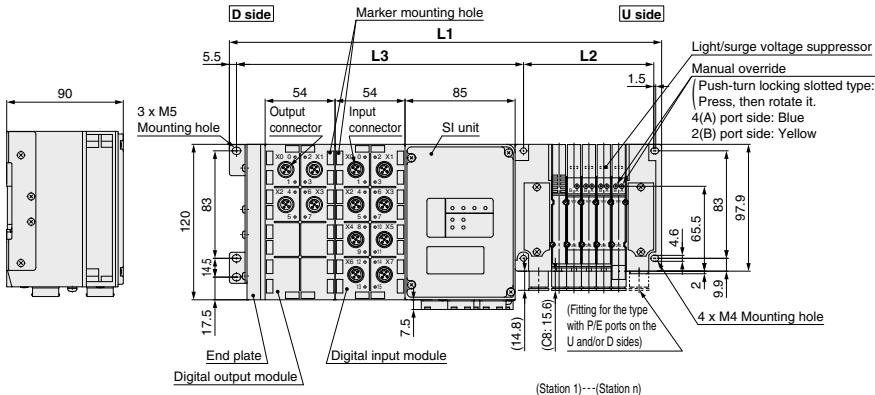

L1 = 11.5n1 + 168.2
L2 = 11.5n1 + 43.1
L3 = 54n2 + 113.6

* These figures show the "JJ5SY3-10SAANY2-05D-C8".

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

Dimensions

* The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module.

* n2 is the number of I/O module stations.




Valve stations n1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	191.2	202.7	214.2	225.7	237.2	248.7	260.2	271.7	283.2	294.7	306.2	317.7	329.2	340.7	352.2	363.7	375.2	386.7	398.2	409.7	421.2	432.7	444.2
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1	238.6	250.1	261.6	273.1	284.6	296.1	307.6	319.1

Dimensions: JSY5000 Series

Type 10/Side Ported

EX245


JJ5SY5-10SA□ - Stations U C6
B C8
C10 C12

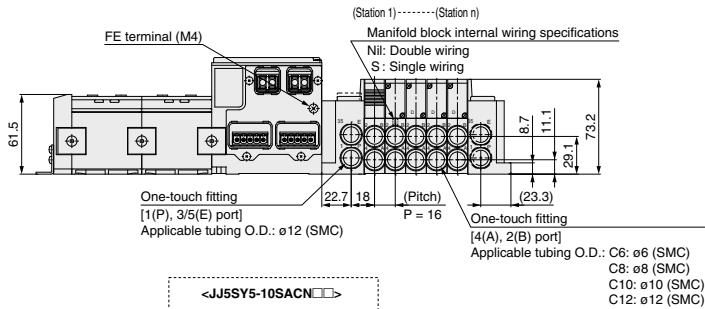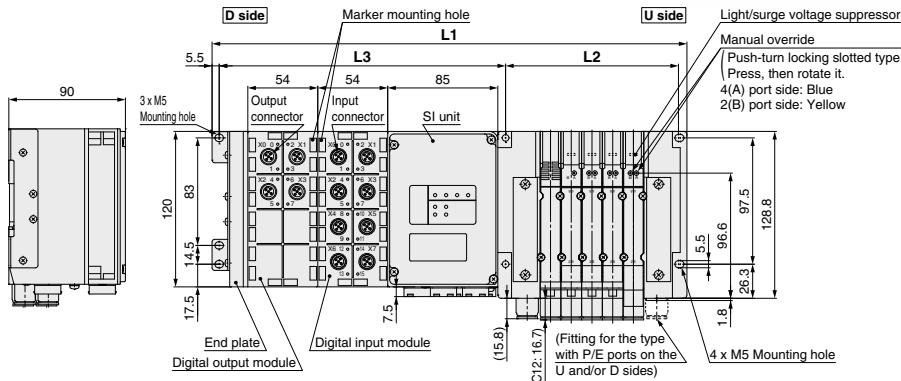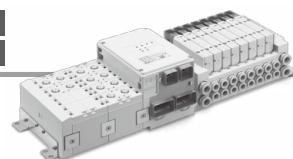

Manifold block internal wiring specifications
Nil: Double wiring
S: Single wiring

Applicable tubing O.D.: C6: ø6 (SMC)
C8: ø8 (SMC)
C10: ø10 (SMC)
C12: ø12 (SMC)

<JJ5SY5-10SACN□>

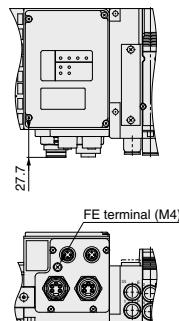

L1 = 16n1 + 178.6
L2 = 16n1 + 53.5
L3 = 54n2 + 113.1

* These figures show the "JJ5SY5-10SAANY2-05D-C12".
* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

Dimensions

* The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module.

* n2 is the number of I/O module stations.

Valve stations n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	210.6	226.6	242.6	258.6	274.6	290.6	306.6	322.6	338.6	354.6	370.6	386.6	402.6	418.6	434.6	450.6	466.6	482.6	498.6	514.6	530.6	546.6	562.6
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5

Plug-in Connector Connecting Base

EX250

Type 10
Side Ported

JSY1000/3000/5000 Series

The EX250 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

JJ5SY **3** - 10S **Q** **1** **A** - **05** **U** - **C6**

1 2 3 4 5 6 7 8 9

① Series

1	JSY1000
3	JSY3000
5	JSY5000

③ SI unit

0	Without SI unit
Q	DeviceNet™ (Negative common)
TA	AS-Interface 2 isolated common type
TB	8 in/8 out 4 in/4 out
TC	1 common type
TD	8 in/8 out 4 in/4 out
ZE	EtherNet/IP™ (Negative common)

- Ensure a match with the common specification of the valve to be used.
- Input block cannot be mounted without SI unit.
- The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

② Type

10	Side ported
----	-------------

④ Input block stations

Nil	None
1	1 station
:	:
8	8 stations

* When not selecting an SI unit, the symbol will be "nil." The maximum number of stations is limited for the AS-Interface applicable SI unit.

⑤ Input block type

	PNP sensor input	NPN sensor input
Without input block		
M12, 2 inputs	A	D
M12, 4 inputs	B	E
M8, 4 inputs	C	F

* When not selecting an SI unit, the symbol will be "nil."


⑦ P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer
U side (2 to 10 stations)	U	C
D side (2 to 10 stations)	D	E
Both sides (2 to 24 stations)	B	F

- The 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑧ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM ^①	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)	ø8	ø10	ø12	



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the [Web Catalog](#) and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 133. Please download the Operation Manual via the SMC website.

Made to Order

Made to Order
(Refer to page 156 for details.)

Specification
External pilot (SUP/EXH block assembly)
Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

⑥ Valve stations

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring ^{*1}
16	16 stations	
02	2 stations	
⋮	⋮	Specified layout ^{*2} (Up to 32 solenoids available)
24	24 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.

· 8 in/8 out specification: Max. 8 solenoids

· 4 in/4 out specification: Max. 4 solenoids

* This also includes the number of blanking plates.

* For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

⑨ Mounting and Option

Symbol	Mounting
Nil	Direct mounting
D□	DIN rail mounting

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

* DIN rail mounting (D□) is not available for the product without the SI unit (S0).


DIN Rail Option

Nil	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

* Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

How to Order Manifold Assembly

Example (JJ5SY3-10S□-□)

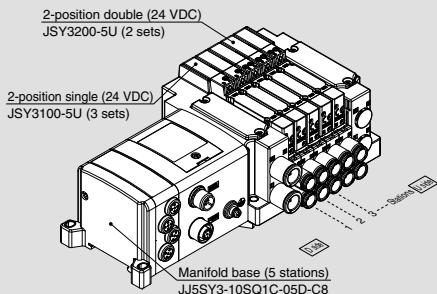

JJ5SY3-10SQ1C-05D-C8 ... 1 set (Type 10 5-station manifold base part no.)
 * JSY3100-5U 3 sets (2-position single part no.)
 * JSY3200-5U 2 sets (2-position double part no.)
 The asterisk denotes the symbol for the assembly.
 Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□** - **5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A	4-position	N.C./N.C.
B	dual 3-port	N.O./N.O.
C		N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
NiI	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.
For details, refer to page 158.

⑤ Manual override

Symbol/Specification	JSY1000	JSY3000	JSY5000
NiI: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.


* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.

⚠ Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.




JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10S□-Stations_B^U_{C4}(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)

EX250

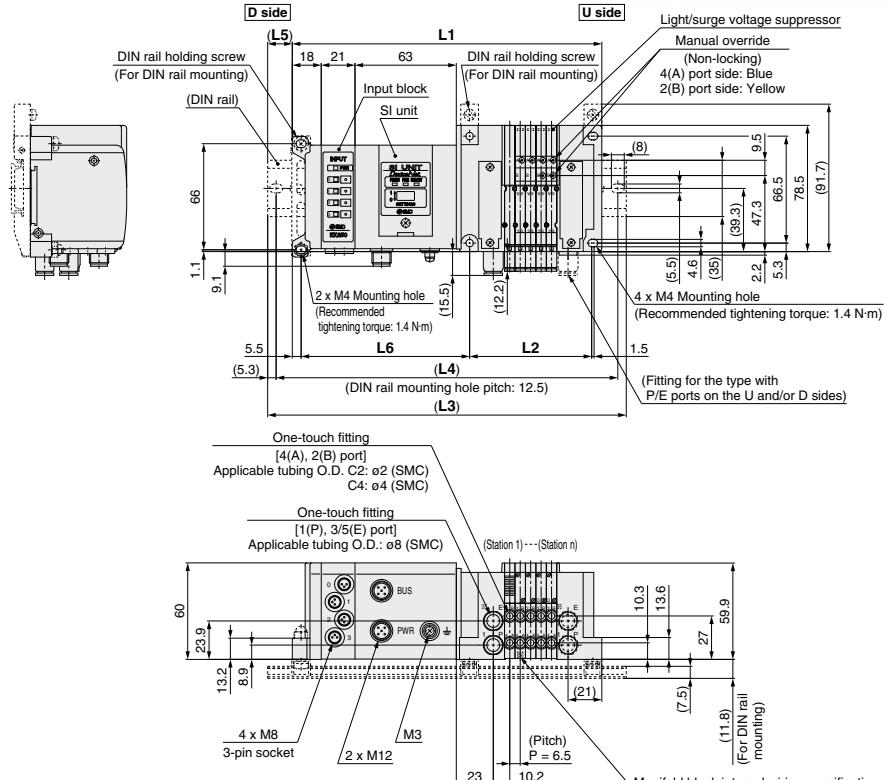

L1 = 6.5 x n1 + 139 + 21 x n2
 L2 = 6.5 x n1 + 43.4
 L4 = L3 - 10.5
 L5 = (L3 - L1) / 2
 L6 = 21 x n2 + 83.8

n1: Number of valve stations of the JSY1000

n2: Input block stations

* These figures show the "JJ5SY1-10SQ1A-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L3: DIN Rail Overall Length



Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
I/O unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
0	185.5	185.5	198	198	210.5	210.5	223	223	235.5	235.5	248	248	260.5	260.5	273	273	285.5	298	298	310.5	310.5	323	323	
1	198	210.5	210.5	223	223	235.5	235.5	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	335.5	348	348
2	223	235.5	235.5	248	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	
3	248	248	260.5	260.5	273	273	285.5	285.5	298	298	310.5	310.5	323	323	335.5	348	348	360.5	360.5	373	373	385.5	385.5	
4	260.5	273	273	285.5	285.5	298	301.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	398	398	410.5	410.5	435.5
5	285.5	298	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5
6	310.5	310.5	323	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	398	398	410.5	410.5	423	423	435.5	435.5	448	448	
7	323	335.5	335.5	348	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5	448	448	460.5	460.5	
8	348	360.5	360.5	373	373	385.5	385.5	398	398	410.5	410.5	423	423	435.5	435.5	448	448	460.5	460.5	473	485.5	485.5	498	

Dimensions: JSY1000 Series

JJ5SY1-10S□ - Stations ^{UD}_{DB} - C6(D)

Type 10/Side Ported (Applicable to 06 fittings)

EX250

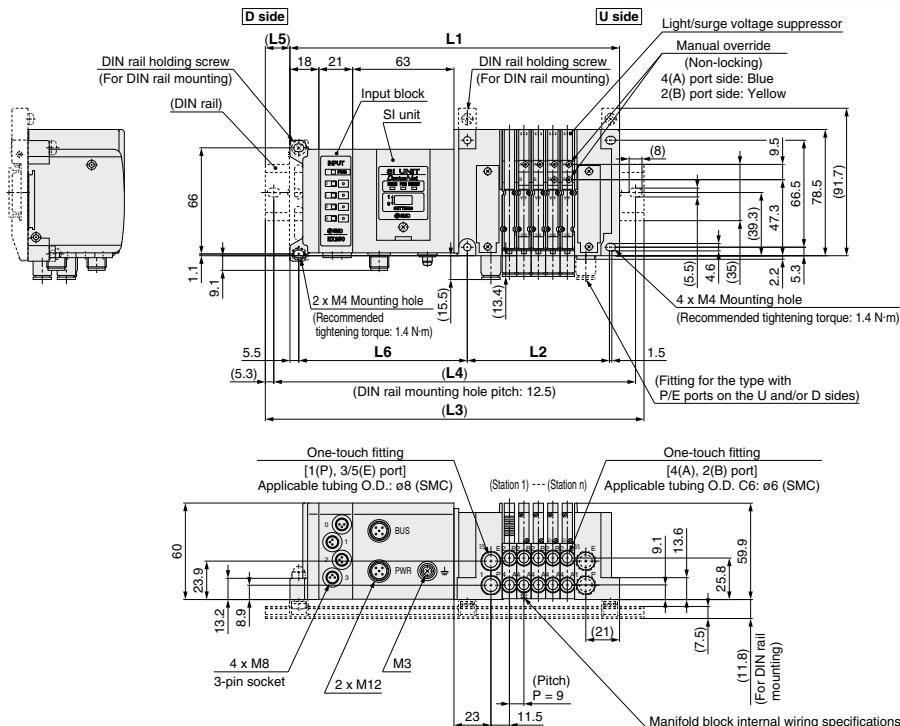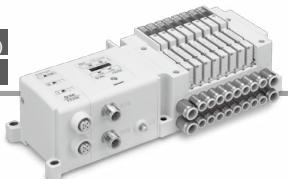

$$\begin{aligned}
 L1 &= 9 \times n1 + 139 + 21 \times n2 \\
 L2 &= 9 \times n1 + 43.4 \\
 L4 &= L3 - 10.5 \\
 L5 &= (L3 - L1) / 2 \\
 L6 &= 21 \times n2 + 83.8
 \end{aligned}$$

n1: Number of valve stations of the JSY1000

n2: Input block stations

* These figures show the "JJ5SY1-10SQ1A-05D-C6.

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

1.3: DIN Rail Overall Length

E3. Drill Run Overall Length																										
Valve stations (n1)	I/O unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
		0	185.5	198	210.5	210.5	223	235.5	235.5	248	260.5	273	273	285.5	298	298	310.5	323	335.5	335.5	348	360.5	360.5	373	385.5	
1	210.5	210.5	228	235.5	248	248	260.5	273	285.5	285.5	298	310.5	310.5	323	335.5	348	348	360.5	373	373	385.5	398	410.5	423	423	
2	223	235.5	248	260.5	260.5	273	285.5	285.5	298	310.5	323	323	335.5	348	360.5	360.5	373	385.5	385.5	398	410.5	423	423	423	423	
3	248	260.5	273	273	285.5	298	298	310.5	323	335.5	335.5	348	360.5	360.5	373	385.5	398	398	410.5	423	435.5	435.5	448			
4	273	285.5	285.5	298	310.5	310.5	323	335.5	348	348	360.5	373	373	385.5	398	410.5	410.5	423	435.5	448	448	460.5	473			
5	285.5	298	310.5	323	323	335.5	348	360.5	360.5	373	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	485.5	485.5		
6	310.5	323	335.5	335.5	348	360.5	360.5	373	385.5	398	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498	498	510.5				
7	335.5	348	360.5	360.5	373	373	385.5	398	410.5	423	435.5	435.5	448	460.5	473	473	485.5	498	510.5	510.5	523	535.5	548	548		
8	360.5	360.5	373	385.5	385.5	398	410.5	423	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	548				


JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10S□-Stations^U_B^{C4}_{C8}(D)

Type 10/Side Ported

EX250

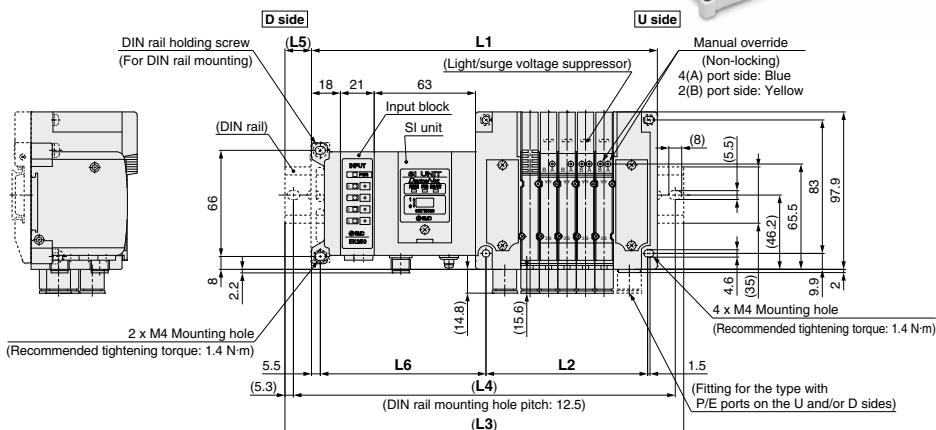

Manifold block internal wiring specifications

Ni: Double wiring


S : Single wiring

One-touch fitting

[1(P), 3/5(E) port]

Applicable tubing O.D.: ø10 (SMC)

(Station 1) ----- (Station n)

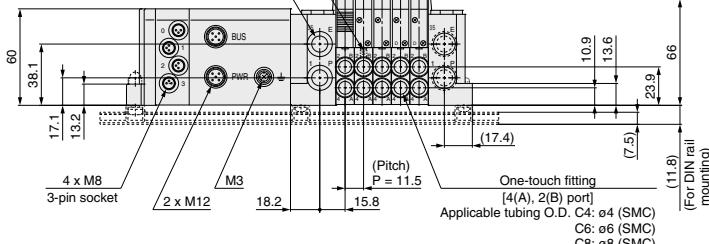

$L1 = 11.5 \times n1 + 136.6 + 21 \times n2$
 $L2 = 11.5 \times n1 + 43.1$
 $L4 = L3 - 10.5$
 $L5 = (L3 - L1) / 2$
 $L6 = 21 \times n2 + 82$

n1: Number of valve stations of the JSY3000

n2: Input block stations

* These figures show the "JJ5SY3-10SQ1A-05D-C8".

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L3: DIN Rail Overall Length

Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24			
I/O unit stations (n2)	0	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448		
1	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5		
2	235.5	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	
3	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	
4	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5
5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5
6	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	
7	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5			
8	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5					


Dimensions: JSY5000 Series

JJ5SY5-10S□ - Stations



Type 10/Side Ported


EX250

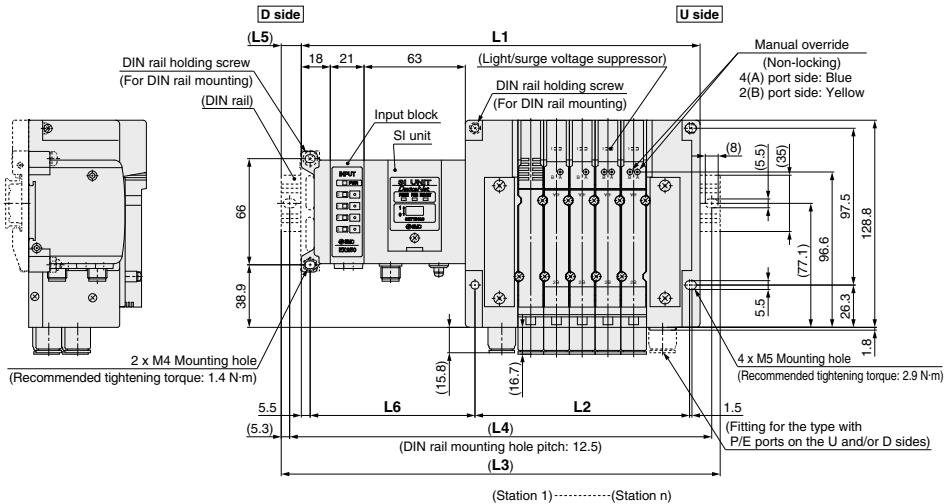

(Station 1)----- (Station n)

Manifold block internal wiring specifications

III: Double wire
S: Single wire

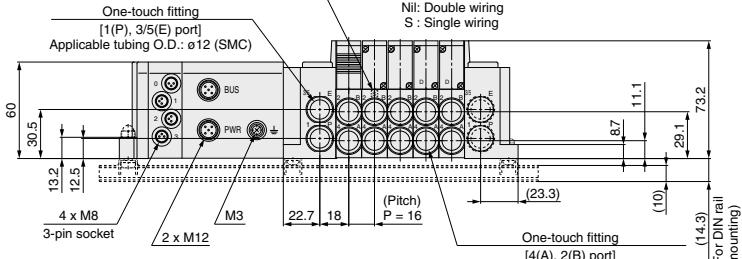

$$\begin{aligned}
 L1 &= 16 \times n1 + 147 + 21 \times n2 \\
 L2 &= 16 \times n1 + 53.5 \\
 L4 &= L3 - 10.5 \\
 L5 &= (L3 - L1) / 2 \\
 L6 &= 21 \times n2 + 81.5
 \end{aligned}$$

n1: Number of valve stations of the JSY5000

n2: Input block stations

* These figures show the "JJ5SY5-10SQ1A-05D-C12.

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L3: DIN Rail Overall Length

Valve stations (n ¹)		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
I/O unit stations (n ²)		0	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5
1	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5		
2	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598		
3	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573	585.5	610.5	623		
4	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648		
5	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5		
6	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	660.5	673	685.5		
7	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	685.5	710.5		
8	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	570.5	585.5	598	610.5	635.5	648	660.5	673	685.5	698	710.5	723	

Plug-in Connector Connecting Base

EX260

Type 10
Side Ported

JSY1000/3000/5000 Series


Refer to page 106 for details on manifolds that support safety communication.

Internal Pilot



*1 JSY3000 only

How to Order Manifolds



① Series

1	JSY1000
3	JSY3000
5	JSY5000

③ SI unit (Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Output polarity)	Protocol	Number of outputs	Communication connector
Positive common (NPN)	Negative common (PNP)		
QA	DeviceNet®	32	M12
QB	QBN	16	
NA	NAN	32	
NB	NBN	16	M12
NC	NCN	32	D-sub
ND	NDN	16	
VA	VAN	32	
VB	VBN	16	M12
DA	DAN	32	
DB	DBN	16	M12
FA	FAN	32	
FB	FBN	16	M12
EA	EAN	32	
EB	EBN	16	M12
—*2	GAN	32	
—*2	GBN	16	M12
—*2	KAN	32*4	M12
—*2	CAN	32*4	RJ45*3

*1 Without SI unit, the output polarity is decided by the SI unit used.

Ensure a match with the common specification of the valves to be used.

*2 Positive common (NPN) type is not available.


*3 The enclosure is IP40 when the communication connector is a D-sub connector or an RJ45 connector.

*4 Only the 32 outputs type is available.

* DIN rail cannot be mounted without SI unit.

⑦ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)	ø8	ø10	ø12	



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 134. Please download the Operation Manual via the SMC website.



Made to Order
(Refer to page 156 for details.)

Specification

External pilot (SUP/EXH block assembly)
Flame-retardant (Equivalent to UL-94 Standard V-0) fitting

④ Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
16	16 stations	
02	2 stations	
⋮	⋮	Specified layout*2
24	24 stations	(Up to 32 solenoids available)

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
08	8 stations	
02	2 stations	
⋮	⋮	Specified layout*2
16	16 stations	(Up to 16 solenoids available)

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

* This also includes the number of blanking plates.

* For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

⑧ Mounting and Option

Symbol	Mounting
NII	Direct mounting
D	DIN rail mounting

* Enter the number of stations inside when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

* DIN rail mounting (D) is not available for the product without the SI unit (S0).


DIN Rail Option

NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

* Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

How to Order Manifold Assembly

Example (JJ5SY3-10SNAN-□)

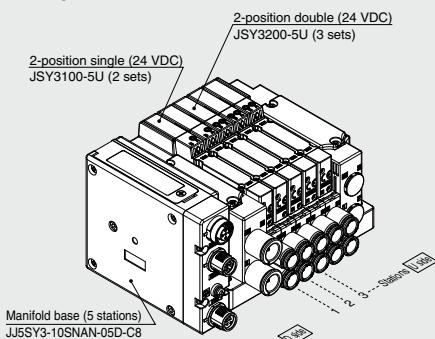

JJ5SY3-10SNAN-05D-C8 - 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U 2 sets (2-position single part no.)

* JSY3200-5U 3 sets (2-position double part no.)

— The asterisk denotes the symbol for the assembly.
Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **0****0** **□** **-5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected. For details, refer to page 158.

⑤ Manual override

Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.


* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.

⚠ Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.



Plug-in Connector Connecting Base

EX260

Safety Communication Protocol (PROFIsafe)

Type 10
Side Ported

JSY1000/3000/5000 Series

Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side. Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole. The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC. In addition, refer to "Safety Instructions" for precautions on model selection.



*1 JSY3000 only

Internal Pilot

How to Order Manifolds

Refer to page 104 for details on manifolds that support Fieldbus and Industrial Ethernet.

JJ5SY **3** - **10S** **FPN** - **05** **D** - **C6**

1 2 3 4 5 6 7 8

① Series

1	JSY1000
3	JSY3000
5	JSY5000

④ Valve stations

Symbol	Stations	Note
02	2 stations	
⋮	⋮	
16	16 stations	Double wiring ^{*1}
02	2 stations	Specified layout ^{*2} (Up to 32 solenoids available)
⋮	⋮	
24	24 stations	

*1 Double wiring: 2-position single, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 3-position and 4-position valves cannot be used where single wiring has been specified.)

* This also includes the number of blanking plates.

② Type

10	Side ported
----	-------------

⑤ P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)


⑥ SUP/EXH block assembly

NII	Internal pilot
S	Internal pilot, Built-in silencer

- * The 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- * The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

⑦ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000			JSY3000			JSY5000		
		ø2	ø4	ø6	ø8	ø10	ø12	ø8	ø10	ø12
C2		●								
C4		●	●							
C6			●	●				●		
C8				●	●			●		
C10					●	●		●		
C12					●	●		●		
CM ^{*1}	Straight	●						●		
	P, E port size (One-touch fittings)	ø8	ø10	ø12						



*1 Indicate the sizes on the manifold specification sheet in the case of "CM".

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

⑧ Mounting and Option

Symbol	Mounting
NII	Direct mounting
D	DIN rail mounting

- * Enter the number of stations inside when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)
- * Refer to page 160 for details on securing the DIN rail mounting type manifold.
- * DIN rail mounting (D) is not available for the product without the SI unit (S0).

DIN Rail Option

NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
24	For 24 stations

Specify a length longer than that of the standard rail.

* Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the **Operation Manual**. For the part numbers of the SI units to be mounted, refer to page 134. Please download the **Operation Manual** via the **SMC website**.

[Validated product examples]

Please contact SMC for further details as supported variations are continually being added.

Internal Pilot**How to Order Valves (With mounting screw)**

JSY **3** **1** **00** **□** **-5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

1 Series

1	JSY1000
3	JSY3000
5	JSY5000

2 Type of actuation

1	2-position	Single
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

3 Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

4 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY1000	JSY3000	JSY5000
U	●	●	Non-polar	—	●	●
NZ	●	●	Polar Negative common	●	●	●

* Only "NZ" type is available with a power saving circuit.

5 Manual override

Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●

Caution

If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 137 for base gasket and mounting screw part numbers.

JSY1000/3000/5000 Series


Dimensions: JSY1000 Series

JJ5SY1-10S□- Stations ^U_D - ^{C2}_{C4}(D)




Type 10/Side Ported (Applicable to #2 and #4 fittings)


EX260

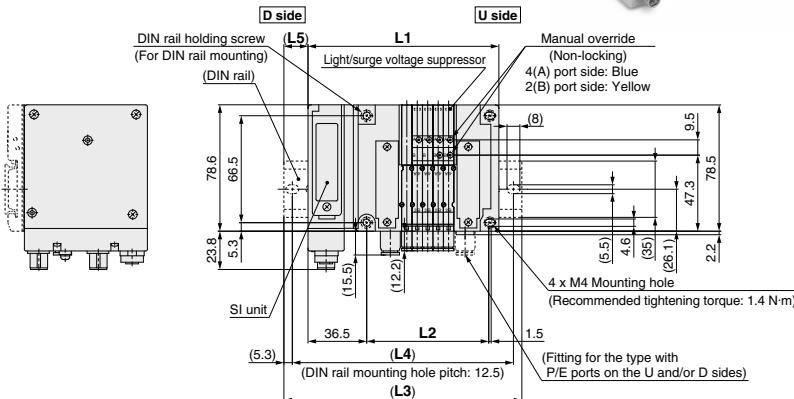

[Communication connector D-sub]

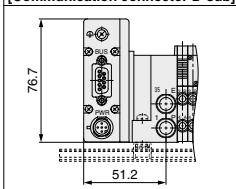

One-touch fitting
[1(P), 3/5(E) port]
Applicable tubing O.D. : $\phi 8$ (SMC)

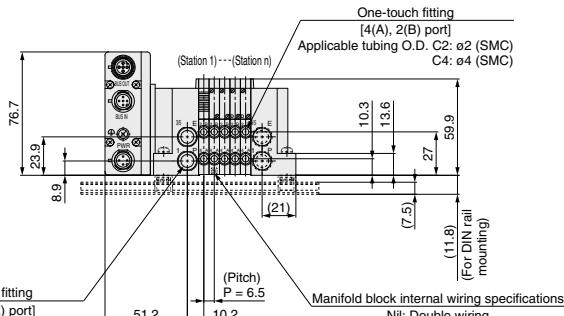

* These figures show the "JJ5SY1-10SQA-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

- * When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		99.2	105.7	112.2	118.7	125.2	131.7	138.2	144.7	151.2	157.7	164.2	170.7	177.2	183.7	190.2
L2		56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3		123	135.5	135.5	148	160.5	160.5	173	173	185.5	185.5	198	198	210.5	210.5	223
L4		112.5	125	125	137.5	150	150	162.5	162.5	175	175	187.5	187.5	200	200	212.5
L5		12	15	12	15	18	15	18	14	17	14	17	14	17	14	17





<u>L</u>	<u>n</u>	17	18	19	20	21	22	23	24
L1		196.7	203.2	209.7	216.2	222.7	229.2	235.7	242.2
L2		153.9	160.4	166.9	173.4	179.9	186.4	192.9	199.4
L3		223	235.5	235.5	248	248	260.5	260.5	273
L4		212.5	225	225	237.5	237.5	250	250	262.5
L5		18	19	19	19	19	19	19	19

Dimensions: JSY1000 Series

JJ5SY1-10S□-[Stations]_B-C6(D)

Type 10Side Ported (Applicable to ø6 fittings)

EX260

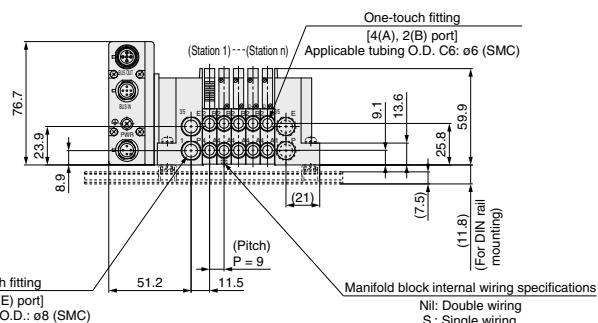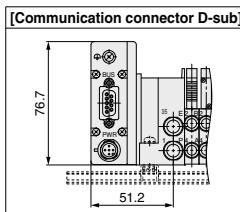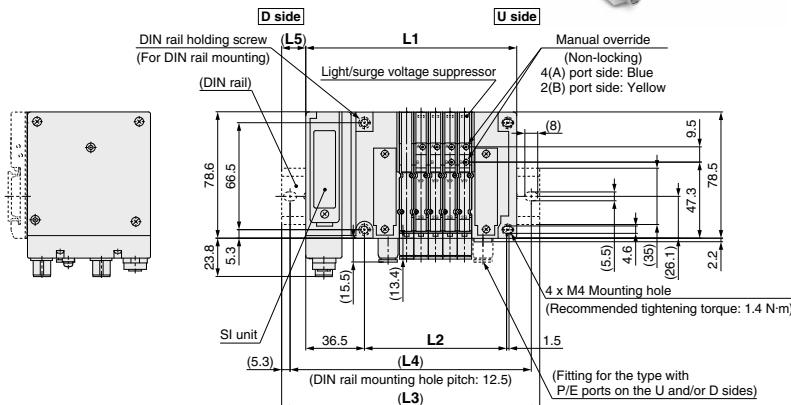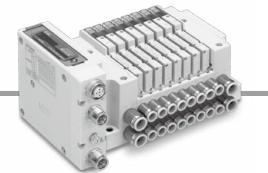

Ni: Double wiring
S: Single wiring

* These figures show the "JJ5SY1-10SQA-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	104.2	113.2	122.2	131.2	140.2	149.2	158.2	167.2	176.2	185.2	194.2	203.2	212.2	221.2	230.2
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	135.5	148	148	160.5	173	173	185.5	198	210.5	210.5	223	235.5	235.5	248	260.5
L4	125	137.5	137.5	150	162.5	162.5	175	187.5	200	200	212.5	225	225	237.5	250
L5	16	18	13	15	17	12	14	16	17	13	15	16	12	14	15

L \ n	17	18	19	20	21	22	23	24
L1	239.2	248.2	257.2	266.2	275.2	248.2	293.2	302.2
L2	196.4	205.4	214.4	223.4	232.4	241.4	250.4	259.4
L3	273	273	285.5	298	310.5	310.5	323	335.5
L4	262.5	262.5	275	287.5	300	300	312.5	325
L5	17	13	14	16	18	13	15	17

JSY1000/3000/5000 Series

Dimensions: JSY3000 Series


Dimensions: JSY3000 Series

JJ5SY3-10S□- Stations U C4
D C6 (D)
B C8



Type 10/Side Ported


EX260

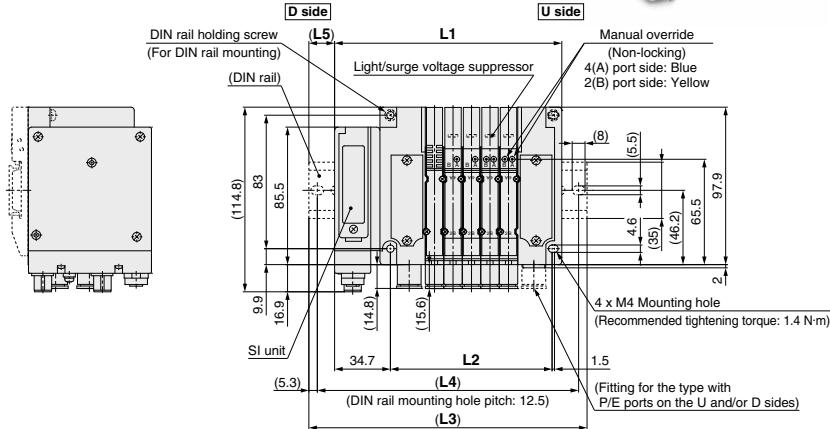

Manifold block internal wiring specifications

Nil: Double wiring
S: Single wiring

(Station 1)----- (Station m)

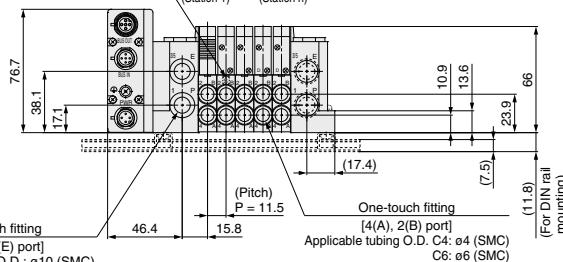

One-touch fitting
[1(P), 3/5(E) port]
able tubing O.D.: ø10 (SMC)

[4(A), 2(B) port]
Applicable tubing O.D. C4: ø4 (SMC)
C6: ø6 (SMC)
C8: ø8 (SMC)

* These figures show the "JJ5SY3-10SQA-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		106.8	118.3	129.8	141.3	152.8	164.3	175.8	187.3	198.8	210.3	221.8	233.3	244.8	256.3	267.8
L2		66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3		135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5	298
L4		125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275	287.5
L5		15	15	16	16	17	17	18	12	12	13	13	14	14	15	15





L	17	18	19	20	21	22	23	24
L1	279.3	290.8	302.3	313.8	325.3	336.8	348.3	359.8
L2	238.6	250.1	261.1	273.1	284.6	296.1	307.6	319.1
L3	310.5	323	335.5	348	360.5	360.5	373	385.5
L4	300	312.5	325	337.5	350	350	362.5	375
L5	16	16	17	17	18	12	13	13

Dimensions: JSY5000 Series

JJ5SY5-10S□-Stations U C6
B C8 (D)
C10 C12

Type 10/Side Ported

EX260

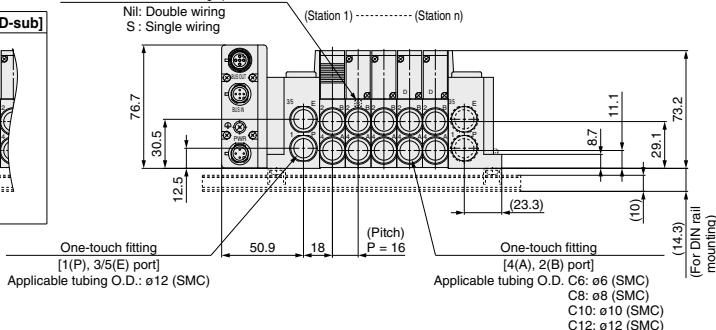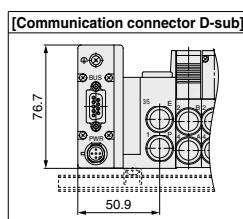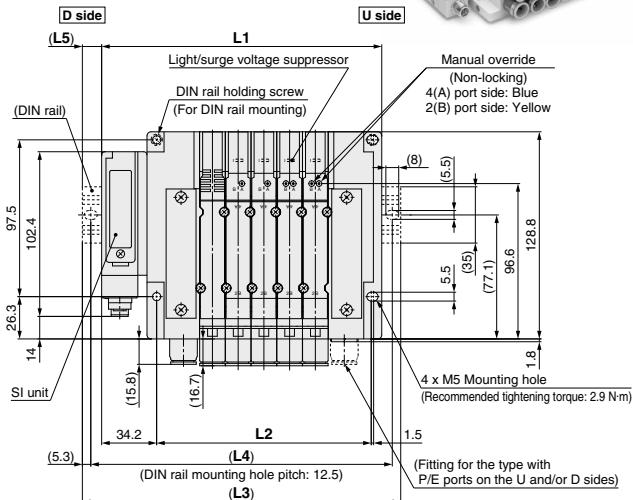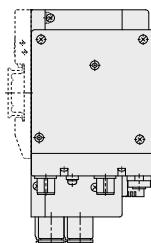

* These figures show the "JJ5SY5-10SQA-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L / n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	126.2	142.2	158.2	174.2	190.2	206.2	222.2	238.2	254.2	270.2	286.2	302.2	318.2	334.2	350.2
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5
L4	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375
L5	17	16	14	12	17	15	13	18	16	14	12	17	15	13	18

L / n	17	18	19	20	21	22	23	24
L1	366.2	382.2	398.2	414.2	430.2	446.2	462.2	478.2
L2	325.5	341.5	357.5	373.5	389.5	405.5	421.5	437.5
L3	398	410.5	423	448	460.5	473	485.5	510.5
L4	387.5	400	412.5	437.5	450	462.5	475	500
L5	16	14	13	17	15	14	12	16

Plug-in Connector Connecting Base

EX120


Type 10
Side Ported

JSY1000/3000/5000 Series



Internal Pilot

How to Order Manifolds



Made to Order

(Refer to page 156 for details.)

Specification	
External pilot (SUP/EXH block assembly)	
Flame-retardant (Equivalent to UL-94 Standard V-0) fitting	

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type

10	Side ported
----	-------------

③ SI unit

0	Without SI unit
Q	DeviceNet® (Positive common NPN)
V	CC-Link (Positive common NPN)
ZB*1	CompoNet® Positive common NPN
ZBN*1	Negative common PNP

*1 The communication connector (for the opposite side) is not provided. Please order it separately.

* Ensure a match with the common specification of the valve to be used.

⑤ P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

⑥ SUP/EXH block

NII	Internal pilot
S	Internal pilot, Built-in silencer

* The 3/5(E) port is plugged for the built-in silencer type.

* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

④ Valve stations

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1
08	8 stations	
02	2 stations	
⋮	⋮	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

The use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.


*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

* This also includes the number of blanking plates.

* Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

⑦ A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY1000	JSY3000	JSY5000
C2	ø2	●	—	—
C4	ø4	●	●	—
C6	ø6	●	●	●
C8	ø8	—	●	●
C10	ø10	—	—	●
C12	ø12	—	—	●
CM*1	Straight port, mixed sizes	●	●	●
P, E port size (One-touch fittings)		ø8	ø10	ø12



*1 Indicate the sizes on the manifold specification sheet in the case of "CM."

* The JSY1000 manifold pitch for C2 and C4 is 6.5 mm, and 9 mm for C6. When CM is selected, the manifold pitch is different depending on the selected fitting.

⑧ Mounting and Option

Symbol	Mounting
NII	Direct mounting
D	DIN rail mounting

* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" shown below.)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

DIN Rail Option


NII	DIN rail mounting (With DIN rail)
0	DIN rail mounting (Without DIN rail)
3	For 3 stations
⋮	⋮
16	For 16 stations

* If the DIN rail must be mounted without an SI unit, select D0. Refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 152 for the DIN rail part number.)

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the [Web Catalog](#) and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 135. Please download the Operation Manual via the [SMC website](#).

How to Order Manifold Assembly

Example (JJ5SY3-10S3V-□)

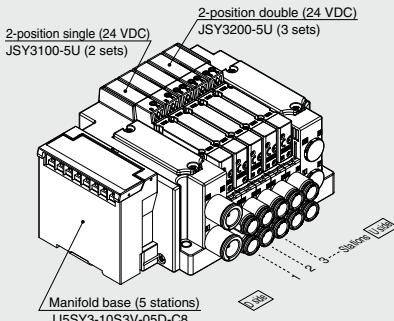

JJ5SY3-10S3V-05D-C8 .. 1 set (Type 10 5-station manifold base part no.)

* JSY3100-5U 2 sets (2-position single part no.)

* JSY3200-5U 3 sets (2-position double part no.)

— The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□** **-5** **□** **□**

1 2 3 4 5



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

① Series

1	JSY1000
3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY1000	JSY3000	JSY5000
Nil	Standard	—	●	●
T	With power-saving circuit (Continuous duty type)	●	●	●

* For the JSY1000 series, only the power-saving circuit specification is available.

* Be careful of the energizing time when the power-saving circuit is selected. For details, refer to page 158.

⑤ Manual override


Symbol/Specification	JSY1000	JSY3000	JSY5000
Nil: Non-locking push type	●	●	●
D: Push-turn locking slotted type	●	●	●
E: Push-turn locking lever type	—	●	●

* Push-turn locking lever type "E" is not available for the JSY1000.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.

Refer to page 137 for base gasket and mounting screw part numbers.



⚠ Caution




If the JSY3000/5000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

JSY1000/3000/5000 Series

Dimensions: JSY1000 Series

JJ5SY1-10S3□ - Stations ^U_B - C²(D)

Type 10/Side Ported (Applicable to ø2 and ø4 fittings)
EX120

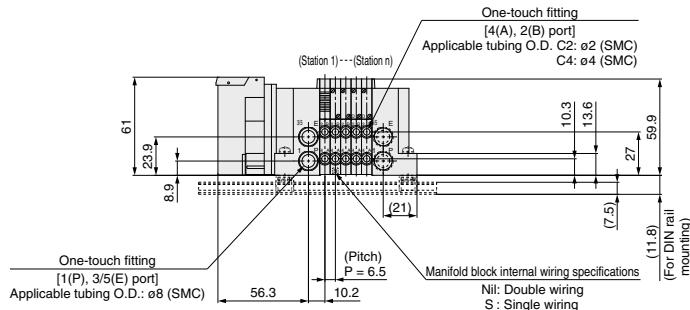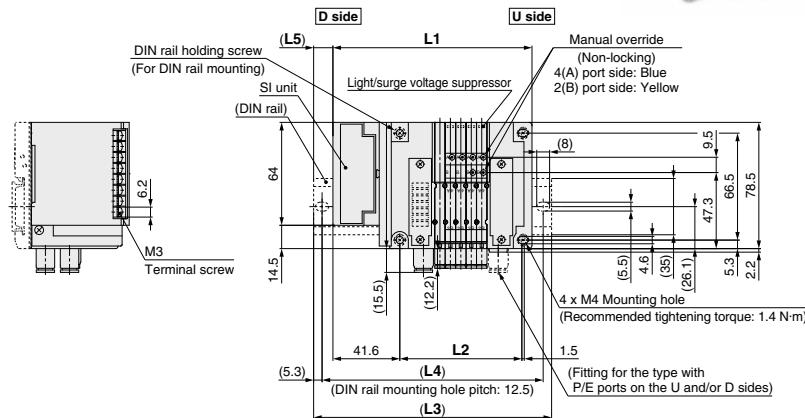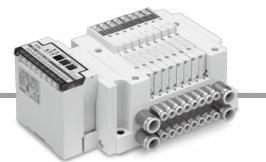

* These figures show the "JJ5SY1-10S3V-05D-C4."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size and C6 (9 mm pitch) is included, refer to page 121 for dimensions.

L: Dimensions




n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	104.3	110.8	117.3	123.8	130.3	136.8	143.3	149.8	156.3	162.8	169.3	175.8	182.3	188.8	195.3
L2	56.4	62.9	69.4	75.9	82.4	88.9	95.4	101.9	108.4	114.9	121.4	127.9	134.4	140.9	147.4
L3	135.5	135.5	148	148	160.5	160.5	173	173	185.5	198	198	210.5	210.5	223	223
L4	125	125	137.5	137.5	150	150	162.5	162.5	175	187.5	187.5	200	200	212.5	212.5
L5	16	12	15	12	15	12	15	12	15	18	14	17	14	17	14

Dimensions: JSY1000 Series

JJ5SY1-10S3□ - Stations ^U_B - C6(D)

Type 10Side Ported (Applicable to ø6 fittings)
EX120

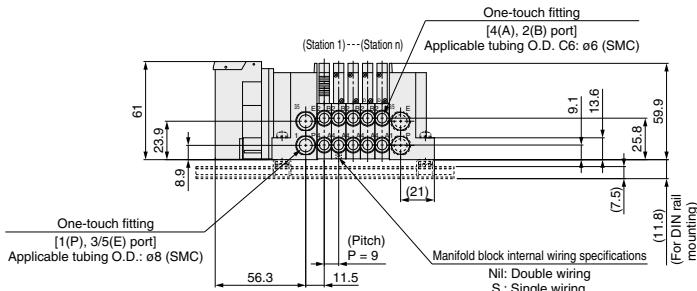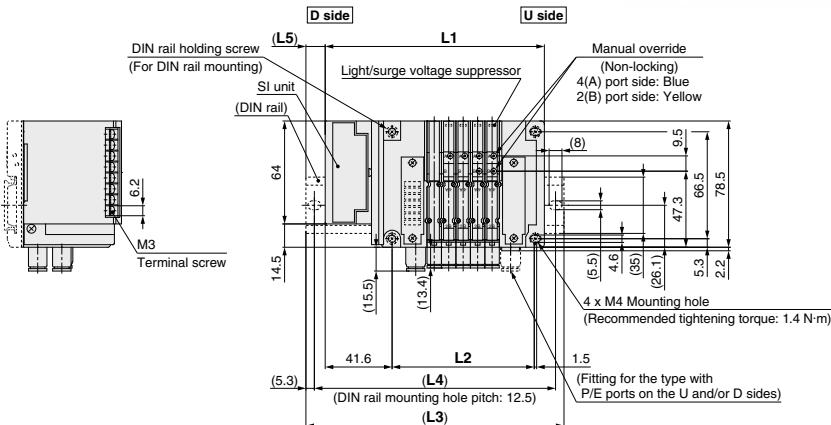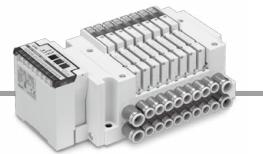

* These figures show the "JJ5SY1-10S3V-05D-C6."

* Refer to page 118 for dimensions of external pilot (Made to Order) and silencer.

* When CM is selected for mixed A, B port size, refer to page 121 for dimensions.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	109.3	118.3	127.3	136.3	145.3	154.3	163.3	172.3	181.3	190.3	199.3	208.3	217.3	226.3	235.3
L2	61.4	70.4	79.4	88.4	97.4	106.4	115.4	124.4	133.4	142.4	151.4	160.4	169.4	178.4	187.4
L3	135.5	148	160.5	160.5	173	185.5	198	198	210.5	223	223	235.5	248	260.5	260.5
L4	125	137.5	150	150	162.5	175	187.5	187.5	200	212.5	212.5	225	237.5	250	250
L5	13	15	17	12	14	16	17	13	15	16	12	14	15	17	13




JSY1000/3000/5000 Series

Dimensions: JSY3000 Series

JJ5SY3-10S3□ - Stations ^U_B C4 C6 (D) C8 (D)

Type 10/Side Ported

EX120

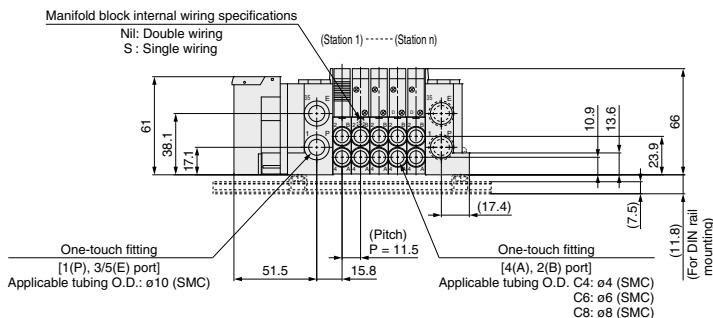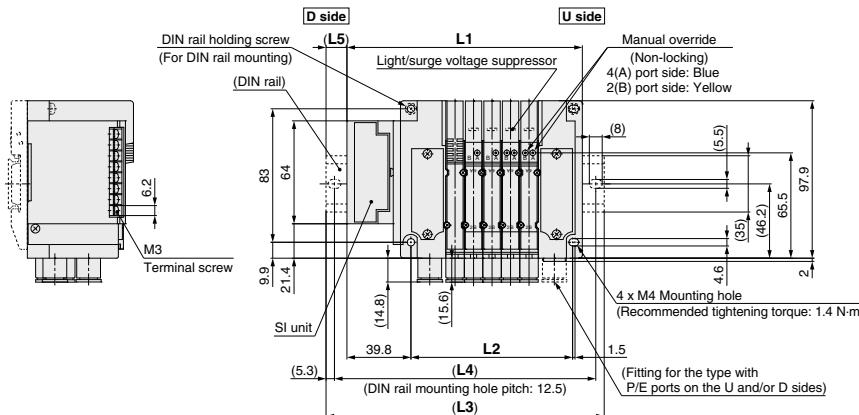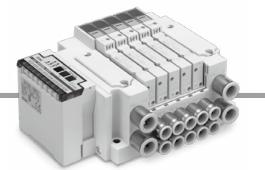

* These figures show the "JJ5SY3-10S3V-05D-C8."

* Refer to page 119 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations




L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	111.9	123.4	134.9	146.4	157.9	169.4	180.9	192.4	203.9	215.4	226.9	238.4	249.9	261.4	272.9
L2	66.1	77.6	89.1	100.6	112.1	123.6	135.1	146.6	158.1	169.6	181.1	192.6	204.1	215.6	227.1
L3	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	273	285.5	298
L4	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5
L5	12	12	13	13	14	14	15	15	16	16	17	17	12	12	13

Dimensions: JSY5000 Series

JJ5SY5-10S3□ - Stations ^U_B ^{C6}_{C8} ^{C10}_{C12} (D)

Type 10/Side Ported

EX120

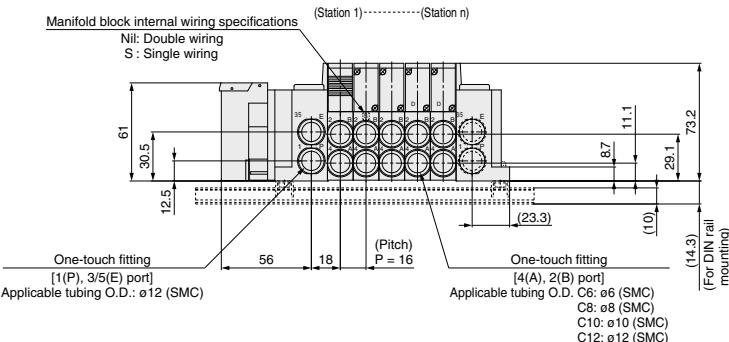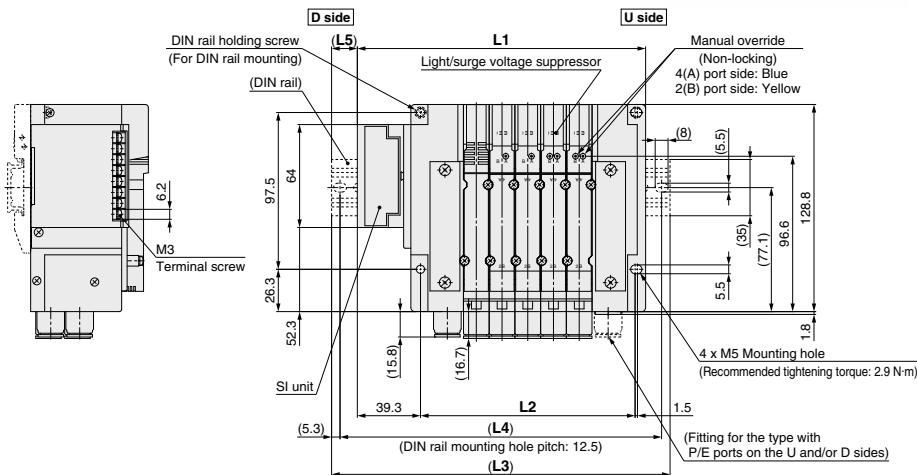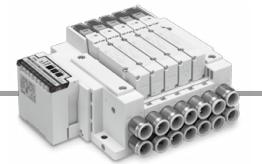

* These figures show the "JJ5SY5-10S3V-05D-C12."

* Refer to page 120 for dimensions of external pilot (Made to Order) and silencer.

L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131.3	147.3	163.3	179.3	195.3	211.3	227.3	243.3	259.3	275.3	291.3	307.3	323.3	339.3	355.3
L2	85.5	101.5	117.5	133.5	149.5	165.5	181.5	197.5	213.5	229.5	245.5	261.5	277.5	293.5	309.5
L3	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5
L4	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375
L5	15	13	17	16	14	12	17	15	13	18	16	14	12	17	15

JSY1000/3000/5000 Series

Common Dimensions

Dimensions: JSY1000 Series


JJ5SY1-10□ - Stations $\frac{U}{B}$ (S, R) - $\frac{C2}{C6}$ (D)

Type 10/Side Ported

External Pilot, Built-in Silencer



External pilot (Made to Order)

P, E port entry: D

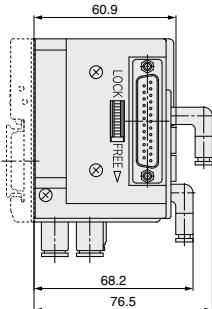

D side



U side

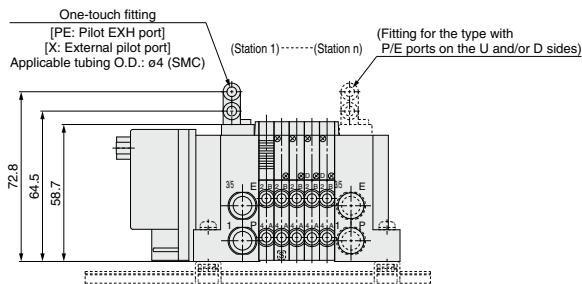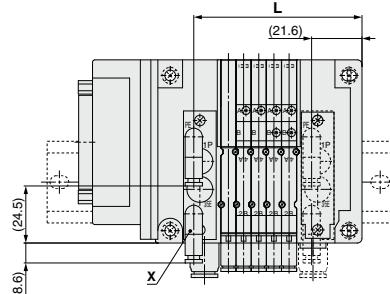

Built-in silencer

<Internal pilot>

P, E port entry: D

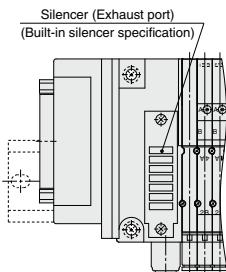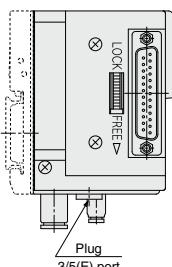

Calculation formula for L dimensions

$$L = 6.5 \times n1 + 9 \times n2 + 39.6$$

n1: Number of 6.5 mm pitch manifold block stations
(Applicable fitting: ø2, ø4)

n2: Number of 9 mm pitch manifold block stations
(Applicable fitting: ø6)

* These figures show the "JJ5SY1-10F2-05DR-C4."

Dimensions: JSY3000 Series


JJ5SY3-10□ - Stations $\frac{U}{B}$ (S, R) - $\frac{C4}{C8}$ (D)

External pilot (Made to Order)

P, E port entry: D

Type 10/Side Ported


External Pilot, Built-in Silencer

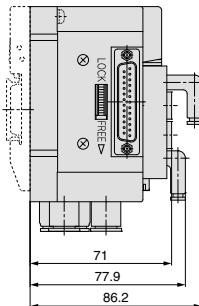

Calculation formula for L dimensions


$$L = 11.5 \times n + 33.4$$

n: Manifold stations

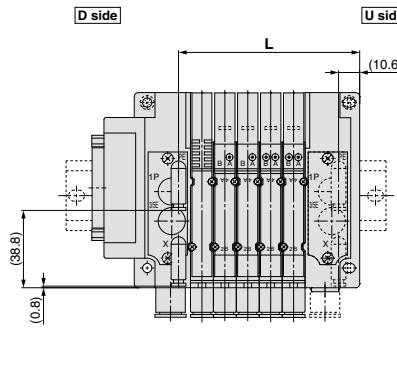

One-touch fitting
 [P: Pilot EXH port]
 [X: External pilot port]
 Applicable tubing O.D.: ø4 (SMC)

(Fitting for the type with
 P/E ports on the U and/or D sides)

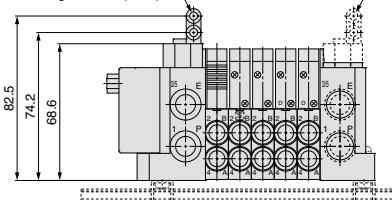

* These figures show the "JJ5SY3-10F2-05DR-C8."

Built-in silencer

<Internal pilot>

P, E port entry: D

Silencer (Exhaust port)

(Built-in silencer specification)

Plug
 3/5(E) port

JSY1000/3000/5000 Series

Dimensions: JSY5000 Series

JJ5SY5-10□ - Stations $\frac{U}{B}$ (S, R) - $\frac{C_6}{C_8}$ - $\frac{C_{10}}{C_{12}}$ (D)

External pilot (Made to Order)

P, E port entry: D

Type 10/Side Ported


External Pilot, Built-in Silencer

75.8

80.7
91.7

D side

U side

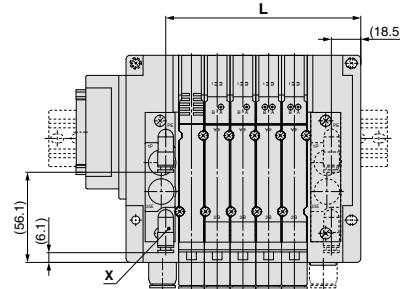

Calculation formula for L dimensions

$L = 16 \times n + 41.5$
n: Manifold stations

One-touch fitting


[PE: Pilot EX4 port]

[X: External pilot port]

Applicable tubing O.D.: ø6 (SMC)

(Fitting for the type with

P/E ports on the U and/or D sides)


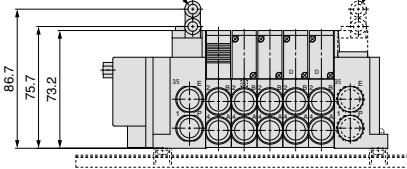


* These figures show the "JJ5SY5-10F2-05DR-C12."

Built-in silencer

<Internal pilot>

P, E port entry: D


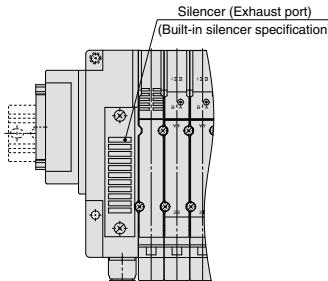
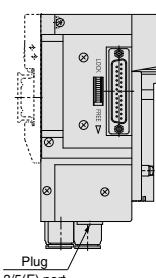


Dimensions: JSY1000 Series

JJ5SY1-10□ - Stations_B^U - CM

Type 10/Side Ported

Mixed Size, Straight Port Type

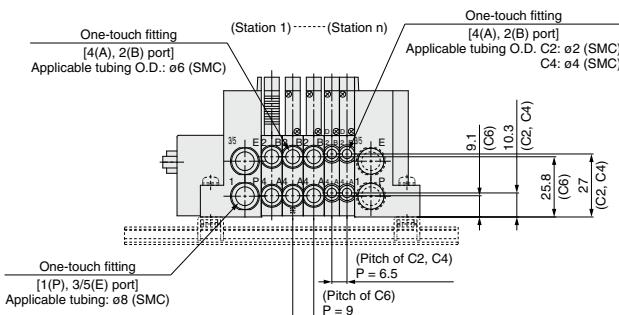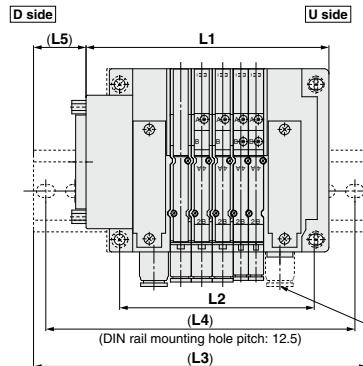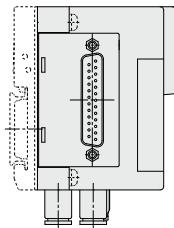

- * Refer to page 118 for dimensions of external pilot and built-in silencer.
- * Refer to pages 86 to 89, 100, and 101 for dimensions when L6, b, and d are used for the calculation formula.
- * Refer to pages below for dimensions that are not specified in each wiring specification.

D-sub connector (IP40/Connector entry direction adjustable)	: pp. 44, 45
D-sub connector (IP20/Compact type)	: pp. 50, 51
Flat ribbon cable (IP40/Connector entry direction adjustable)	: pp. 53, 54
Flat ribbon cable (IP20/Compact type)	: pp. 57, 58
Spring type terminal block box	: pp. 66, 67
Terminal block box	: pp. 70, 71
Lead wire	: pp. 78, 79
Compact wireless remote	: pp. 83-3, 83-4
EX600	: pp. 86 to 89
EX250	: pp. 100, 101
EX260	: pp. 108, 109
EX120	: pp. 114, 115

Calculation formula for dimensions

L1 = 6.5 x n1 + 9 x n2 + a + b x n3

L2 = 6.5 x n1 + 9 x n2 + 43.4

M = (L1 + c) / 12.5) + 1 Decimal fractions are truncated.

L3 = 12.5 x M + 23

L4 = L3 - 10.5

L5 = (L3 - L1 + c) / 2

L6 = b x n3 + d

n1: Number of 6.5 mm pitch manifold block stations (Applicable fittings: ø2, ø4)

n2: Number of 9 mm pitch manifold block stations (Applicable fittings: ø6)

n3: Number of I/O units or input block stations

	Coefficient	a	b	c	d
D-sub connector (IP20/Compact type)	64.1	—	6.1	—	
D-sub connector/Flat ribbon cable (IP40/Connector entry direction adjustable)	83	—	6.1	—	
Flat ribbon cable (IP20/Compact type)	59.1	—	11.2	—	
Spring type terminal block box	125.5	—	—	—	
Terminal block box	146.8	—	—	—	
Lead wire	94.5	—	—	—	
Compact wireless remote	86.2	—	—	—	
Serial transmission: EX600 (M12 connector)	139	47	—	—	83.8
Serial transmission: EX600 (7/8 inch connector)	155.5	47	—	—	83.8
Serial transmission: EX250	139	21	—	—	83.8
Serial transmission: EX260	86.2	—	—	—	
Serial transmission: EX120	91.3	—	—	—	


* FW [D-sub connector (IP67)] is not available for the JSY1000.

JSY1000/3000/5000 Series Type 10

Connector Connecting Base Manifold Exploded View

Manifold exploded view

p. 136

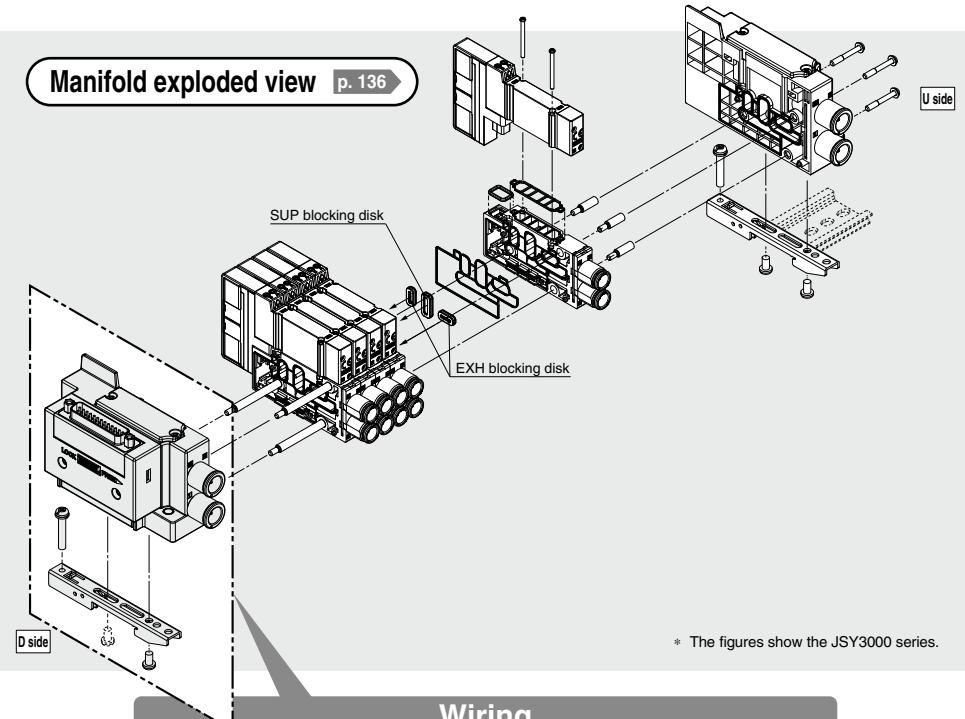

Wiring

D-sub Connector/Flat Ribbon Cable
(IP40/Connector Entry Direction
Adjustable)
p. 123




D-sub Connector (IP67)
(For JSY3000/5000)
p. 124



D-sub Connector/
Flat Ribbon Cable (IP20/Compact Type)
(For JSY1000/3000)
p. 125



Terminal Block Box
p. 126

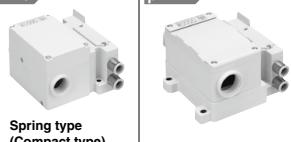

p. 127

Lead Wire
p. 128



Compact Wireless Remote
p. 128-1



EX600
p. 129



EX245 (For JSY3000/5000)
p. 131



EX250
p. 133



EX260
p. 134




EX120
p. 135




Wiring

D-sub Connector/Flat Ribbon Cable (IP40/Connector Entry Direction Adjustable)

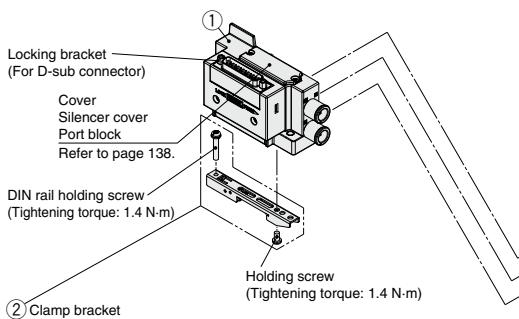

② Clamp bracket
Mounted only on the DIN rail mounting type
The holding screw of the clamp bracket is tightened at one point (for the JSY3000).
* The clamp bracket fixing method for the JSY1000 is different depending on wiring. Refer to page 161.

Manifold exploded view

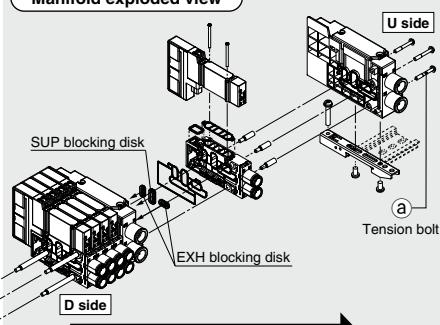

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M - 1P - **3** A **1** - **C10**

● Series

1	JSY1000
3	JSY3000
5	JSY5000

● Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

SUP/EXH block assembly

- 3 D-sub connector (25 pins)
- 4 Flat ribbon cable (26 pins)
- 5 Flat ribbon cable (20 pins)
- 6 Flat ribbon cable (10 pins)

Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

● P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00*1	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S"
Not available for "R" type

● Connector entry direction

1	Upward
2	Lateral

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY1000 JSY3000	JSY5000
ⓐ Tension bolt	None*1	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A


* The part number is for 1 piece.

JSY3000/5000 Series


Wiring

D-sub Connector (IP67)

(For JSY3000/5000)

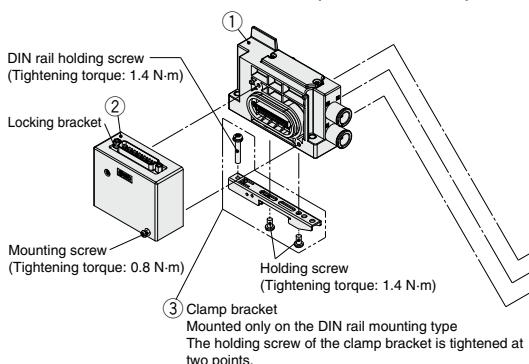

Manifold exploded view

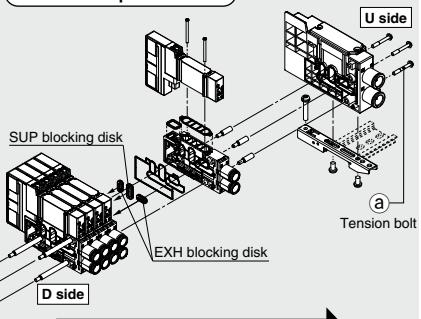

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** **1M** **– 1P** **– 1A** **C10**

• Series

3	JSY3000
5	JSY5000

• Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

• Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY3000	JSY5000
C10	ø10 One-touch fitting	●	—
C12	ø12 One-touch fitting	—	●
00 ^{*1}	Plug	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S"

Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY3000	JSY5000
④ Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② D-sub connector block <for IP67>

Part no.	Connector entry direction
SY30M-14-9A1	Upward
SY30M-14-9A2	Lateral

③ Clamp bracket


Series	Part no.
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

Wiring

D-sub Connector/Flat Ribbon Cable (IP20/Compact Type)

(For JSY1000/3000)

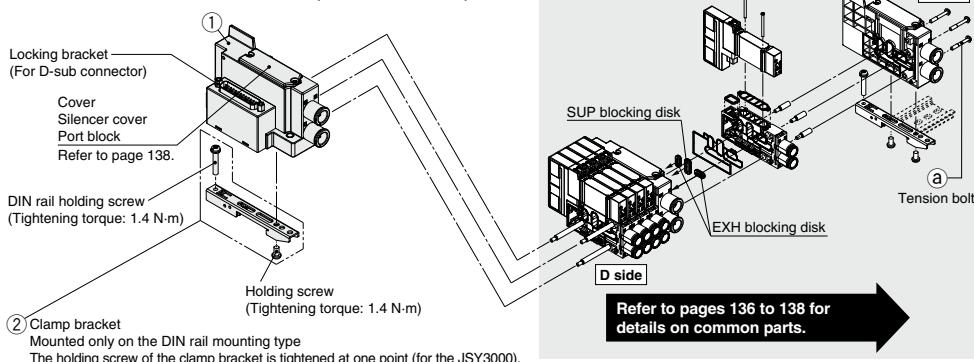

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M – **1**P – **9** A **1** – **C10**

● Series

1	JSY1000
3	JSY3000

● Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

● SUP/EXH block assembly

9	D-sub connector (25 pins)
10	Flat ribbon cable (26 pins)
11	Flat ribbon cable (20 pins)
12	Flat ribbon cable (10 pins)

● Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

● P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000
C8	ø8 One-touch fitting	●	—
C10	ø10 One-touch fitting	—	●
00*1	Plug	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".
Not available for "R" type

● Connector entry direction

1	Upward
2	Lateral

* The 3/5(E) port is plugged for the built-in silencer type.

② Clamp bracket


Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A

* The part number is for 1 piece.

JSY1000/3000/5000 Series

Wiring

Spring Type Terminal Block Box

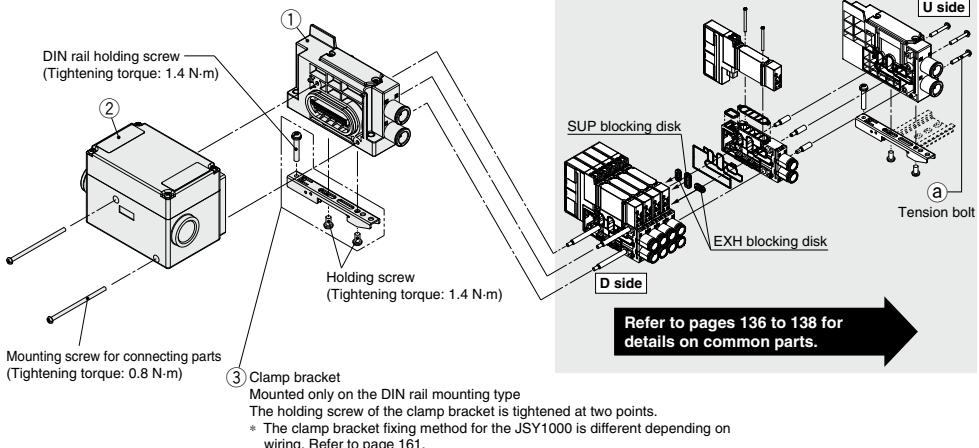

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** | **1M** – **1P** – **1A** | **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

• Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00^{*1}	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".
Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Symbol	Accessories	JSY1000 JSY3000	JSY5000
(a) Tension bolt	None ^{*1}	3 pcs.	

*1 Since the nuts are embedded in the SUP/EXH block

② Terminal block assembly

SY30M-130-1A


③ Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A


* The part number is for 1 piece.

Wiring

Terminal Block Box

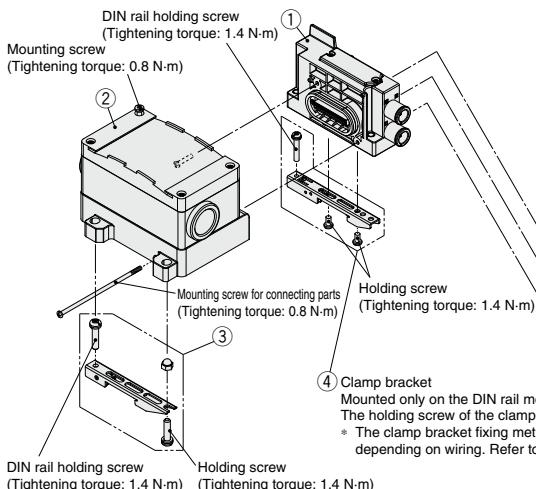

Manifold exploded view

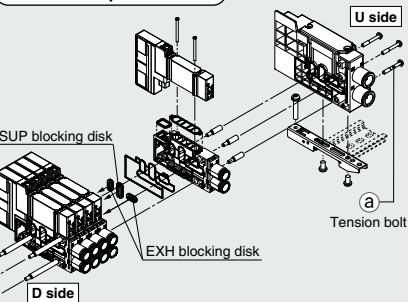

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M – 1P – 1A **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

Symbol	Mounting	JSY1000	JSY3000	JSY5000
Nil	Direct mounting	●	●	●
D00	DIN rail mounting (Without DIN rail)	●	—	—
D0	DIN rail mounting (With DIN rail)	—	●	●

• Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
D0*1	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".
Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY1000 JSY3000	JSY5000
④ Tension bolt	None*1	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② Terminal block box housing assembly

VVQC1000 – T0 – 1

③ Clamp bracket for terminal block box

SY30M – 15 – 4A


④ Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-2A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

JSY1000/3000/5000 Series

Wiring

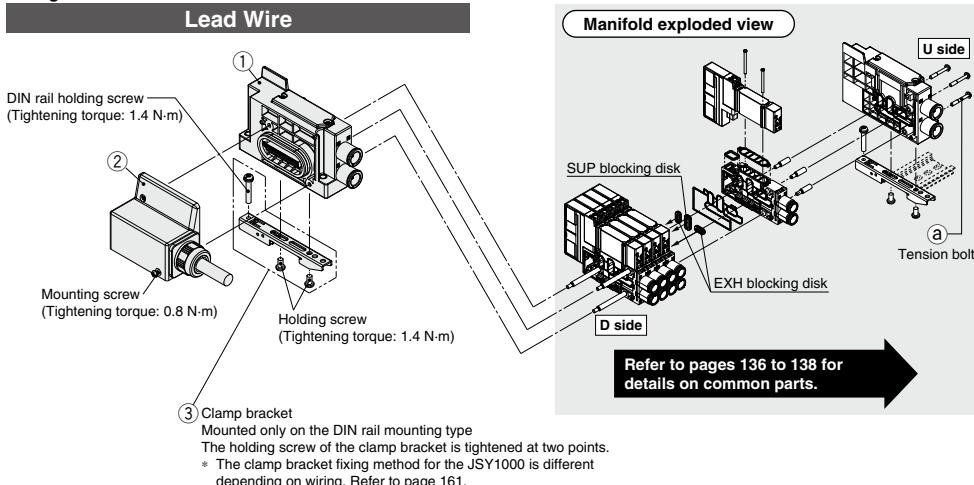

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** **1M** **– 1P** **– 1A** **□** **– C10** **□**

● Series

1	JSY1000
3	JSY3000
5	JSY5000

● Mounting

N0	Direct mounting
D0	DIN rail mounting (Without DIN rail)

● Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
N0	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

● P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00 ^{*1}	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "N0" or "S"
Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY1000 JSY3000	JSY5000
(a) Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② Lead wire connector block assembly

SY30M **– 14** **– 4A** **– 1** **– 1**

● Number of cores (Lead wire)

Symbol	Number of cores
1	34
2	17
3	9

● Lead wire length [m]

Symbol	Length
1	0.6
2	1.5
3	3

③ Clamp bracket



Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

JSY1000/3000/5000 Series

Wiring

Compact Wireless Remote

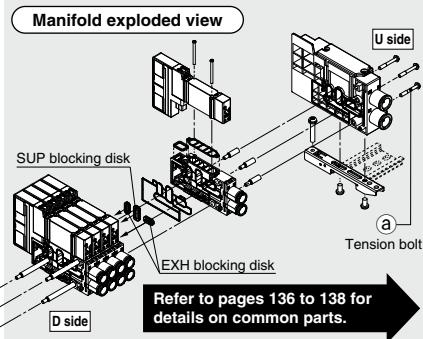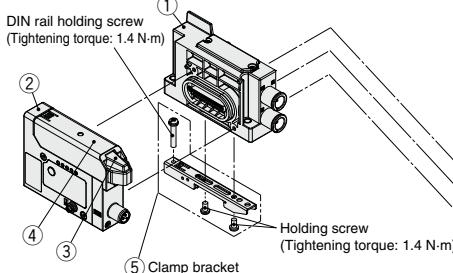

* The clamp bracket fixing method for the JSY1000 is different depending on wiring. Refer to page 161.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M - 1P - 1A - **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

SUP/EXH block assembly (D side)

accessories and the number of accessories

Accessories	JSY1000/3000	JSY5000
④ Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00 ^{*1}	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S"
Not available for "R" type

② Compact wireless remote part no.

EXW1 - R D Y **P** M5 C - **E**

• Type

Symbol	Type
D	Digital

• Type

Symbol	Type
Y	Output

• Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

• Option


Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

* If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately. Refer to the operation manual for mounting instructions.

* "E" and "N" are shipped with the wireless adapter assembled.

Corresponding Manifold Symbol Table

Compact wireless remote part no.	Manifold symbol
EXW1-RDYNM5C	W1
EXW1-RDYPM5C	W1N
EXW1-RDYNM5C-E	W2
EXW1-RDYPM5C-E	W2N
EXW1-RDYNM5C-N	W3
EXW1-RDYPM5C-N	W3N

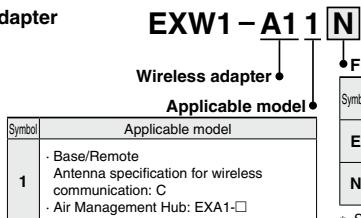Manifold Parts Nos.**③ Wireless adapter****• Frequency channel selection**

Symbol	Number of selectable frequency channels	Applicable countries
E	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
N	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

* Select this according to the country of use.

* Suitable for use only in countries where it is in accordance with the Radio Act and regulations of that country.

For details, refer to the wireless system catalog.

* A dedicated cable is required to connect the wireless base/remote and wireless adapter.

When using this product, order the wireless adapter cable separately.

An installation plate (EXW1-AB4) is included as an accessory.

④ Wireless adapter cover**EXW1-AB6**

For direct mounting of wireless adapter, a wireless adapter cover is required.


**⑤ Clamp bracket**

Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

Wiring

EX600

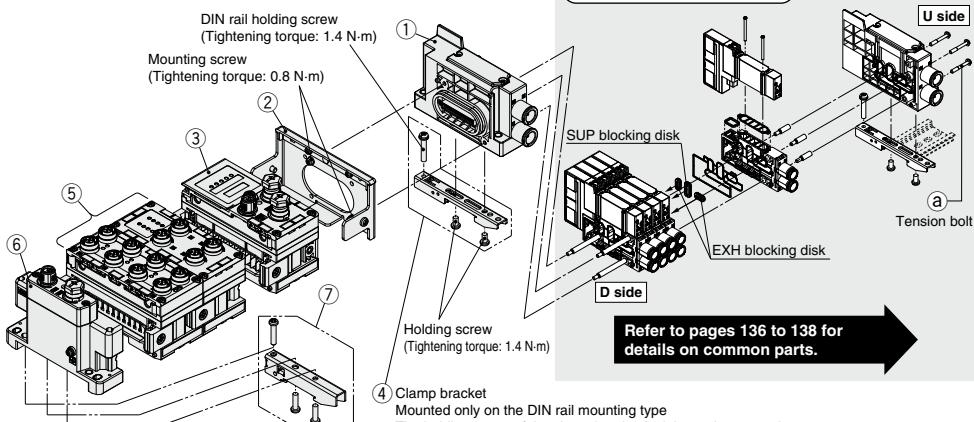

Manifold Parts Nos.

① SUP/EXH block assembly

JSY 3 1M - 1P - 1A - C10

● Series

1	JSY1000
3	JSY3000
5	JSY5000

Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

● Mounting

Symbol	Mounting	JSY1000			JSY3000		JSY5000	
		JSY1000	JSY3000	JSY5000	JSY1000	JSY3000	JSY5000	JSY5000
Nil	Direct mounting	●	●	●	—	—	—	—
D00	DIN rail mounting (Without DIN rail)	●	●	—	—	—	—	—
D0	DIN rail mounting (With DIN rail)	—	—	●	—	●	●	●

● P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000			JSY3000		JSY5000	
		JSY1000	JSY3000	JSY5000	JSY1000	JSY3000	JSY5000	JSY5000
C8	ø8 One-touch fitting	●	—	—	—	—	—	—
C10	ø10 One-touch fitting	—	●	—	—	—	—	—
C12	ø12 One-touch fitting	—	—	●	—	—	●	—
00 ^{*1}	Plug	●	●	●	—	—	—	—

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".

Not available for "R" type

SUP/EXH block assembly (D side)

accessories and the number of accessories

Accessories	JSY1000/3000	JSY5000
⑧ Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② Valve plate

EX600 - ZMV2

* With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

JSY1000/3000/5000 Series


Manifold Parts Nos.

③EX600 SI unit

EX600-S

Communication protocol

Symbol	Protocol	Output polarity
PR1A	PROFIBUS DP	PNP (Negative common)
PR2A		NPN (Positive common)
DN1A	DeviceNet®	PNP (Negative common)
DN2A		NPN (Positive common)
MJ1	CC-Link	PNP (Negative common)
MJ2		NPN (Positive common)
EN7	EtherNet/IP™ (IO-Link unit)	PNP (Negative common)
EN8		NPN (Positive common)
EC3	EtherCAT (IO-Link unit)	PNP (Negative common)
EC4		NPN (Positive common)
PN3	PROFINET (IO-Link unit)	PNP (Negative common)
PN4		NPN (Positive common)
PN31	PROFINET (OPC UA, IO-Link unit)	PNP (Negative common)

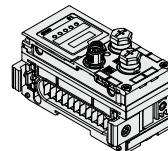

③EX600 SI unit (Wireless compatible)

EX600-W SV

1

Output type

Symbol	Description
1	PNP (Negative common)
2	NPN (Positive common)

Protocol

Symbol	SI unit type	Description
SV	Wireless remote module	— ^{*1}

*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

④Clamp bracket

Series	Part no.
For JSY1000	JSY11M-15P-2A
For JSY3000	SY30M-15-1A
For JSY5000	SY50M-15-1A

* The part number is for 1 piece.

JSY1000/3000/5000 Series

Manifold Parts Nos.

⑤ EX600 digital input unit


EX600-DX P B

Input type

Symbol	Description
P	PNP
N	NPN

Number of inputs, open-circuit detection, and connector

Symbol	Number of inputs	Open-circuit detection	Connector
B	8	No	M12 connector (5 pins) 4 pcs.
C	8	No	M8 connector (3 pins) 8 pcs.
C1	8	Yes	M8 connector (3 pins) 8 pcs.
D	16	No	M12 connector (5 pins) 8 pcs.
E	16	No	D-sub connector (25 pins)
F	16	No	Spring type terminal block (32 pins)

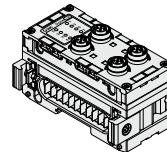

⑤ EX600 digital output unit


EX600-DY P B

Output type

Symbol	Description
P	PNP
N	NPN

Number of outputs and connector

Symbol	Number of outputs	Connector
B	8	M12 connector (5 pins) 4 pcs.
E	16	D-sub connector (25 pins)
F	16	Spring type terminal block (32 pins)

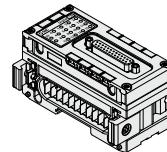

⑤ EX600 digital input/output unit


EX600-DM P E

Input/Output type

Symbol	Description
P	PNP
N	NPN

Number of inputs/outputs and connector

Symbol	Number of inputs	Number of outputs	Connector
E	8	8	D-sub connector (25 pins)
F	8	8	Spring type terminal block (32 pins)

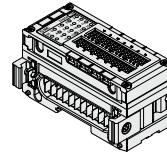

⑤ EX600 analog input/output unit


EX600-AX A

Analog input/output

Symbol	Description
AX	Analog input
AY	Analog output

Number of input channels and connector

Symbol	Number of input channels	Connector
A	2 channels	M12 connector (5 pins) 2 pcs.

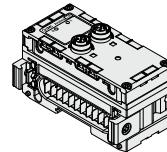


⑤ EX600 analog input/output unit

EX600-AM B

Analog input/output

Number of input/output channels and connector

Symbol	Number of input channels	Number of output channels	Connector
B	2 channels	2 channels	M12 connector (5 pins) 4 pcs.

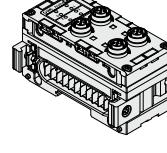

⑤ EX600 IO-Link unit

EX600-L A B 1

Port specification

Symbol	Description
A	Port class A
B	Port class B


Number of ports and connector

Symbol	Number of ports	Connector
B	4 ports	M12 connector (5 pins) 4 pcs.

Caution

The compatible SI unit models are as shown below.

- PROFINET compatible: EX600-SPN3/EX600-SPN4/EX600-SPN31
- EtherNetIP™ compatible: EX600-SEN7/EX600-SEN8
- EtherCAT compatible: EX600-SEC3/EX600-SEC4

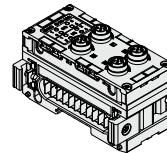

⑥ EX600 end plate


EX600-ED 2 -

Power connector

Symbol	Connector
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Mounting

Symbol	Description
N1	Without DIN rail mounting bracket
3	With DIN rail mounting bracket

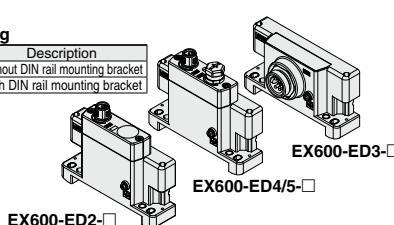

* The pin layout for the "4" and "5" pin connectors is different.

⑦ Clamp bracket for EX600

EX600-ZMA3


Enclosed parts

- Round head screw with washer (M4 x 20) 1 pc.
- P-tight screw (4 x 14) 2 pcs.



Wiring

EX600 Safety Communication Protocol

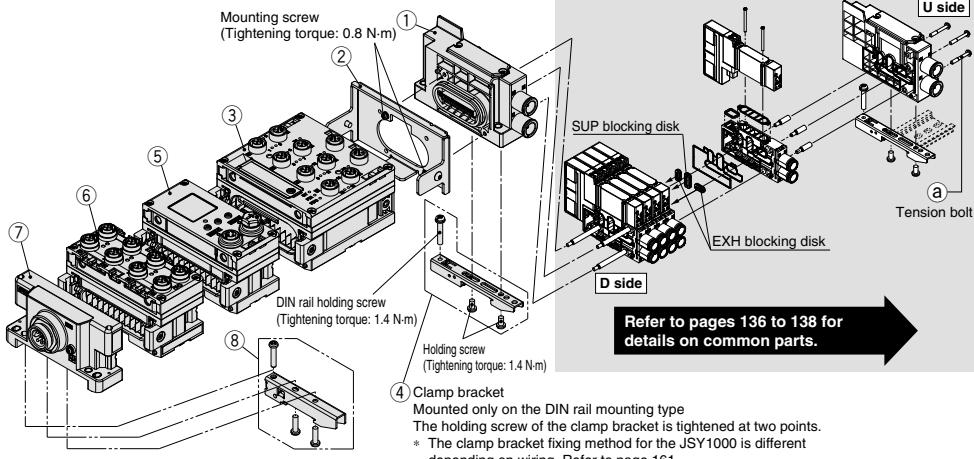

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M - 1P - 1A - **C10**

● Series

1	JSY1000
3	JSY3000
5	JSY5000

● Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

● Mounting

Symbol	Mounting	JSY1000	JSY3000	JSY5000
Nil	Direct mounting	●	●	●
D00	DIN rail mounting (Without DIN rail)	●	—	—
D0	DIN rail mounting (With DIN rail)	—	●	●

● P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00 ^{*1}	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S"
Not available for "R" type

SUP/EXH block assembly (D side)

accessories and the number of accessories

Accessories	JSY1000/3000	JSY5000
④ Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② Valve plate

EX600-ZMV4

* With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

JSY1000/3000/5000 Series


Manifold Parts Nos.

③ Safety I/O module

EX600-FVC1

Communication protocol, Output polarity, Number of outputs

Protocol	Output polarity	Number of outputs
CIP Safety™	PNP (Negative common)	32

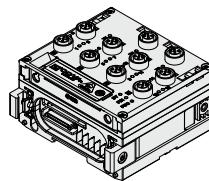

④ Clamp bracket assembly

Series	Part no.
JSY1000	JSY11M-15P-2A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A


* The part number is for 1 piece.

⑤ Fieldbus module

EX600-B EN 1

Protocol

Symbol	Protocol
EN	EtherNet/IP™

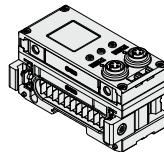

Manifold Parts Nos.


⑥ EX600 digital input unit

EX600-DX P [C] - A

Symbol	Description
P	PNP

Number of inputs, open-circuit detection, and connector

Symbol	Number of inputs	Open-circuit detection	Connector
C	8	No	M8 connector (3 pins) 8 pcs.
D	16	No	M12 connector (5 pins) 8 pcs.

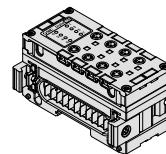


⑥ EX600 digital output unit

EX600-DY P [B] - A

Symbol	Description
P	PNP

Number of outputs and connector

Symbol	Number of outputs	Connector
B	8	M12 connector (5 pins) 8 pcs.

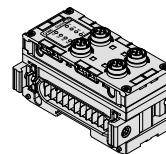

⑥ EX600 IO-Link unit


EX600-L [A] B 1 - A

Port specification

Symbol	Description
A	Port class A
B	Port class B

Number of ports and connector

Symbol	Number of ports	Connector
B	4 ports	M12 connector (5 pins) 4 pcs.

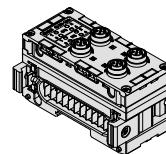

⑦ EX600 end plate

EX600-ED 3 - []

Power connector


Symbol	Connector
3	7/8 inch power supply connector



Mounting

Symbol	Description
Nil	With DIN rail mounting bracket
3	Clamp bracket for EX600

* The pin layout for the "4" and "5" pin connectors is different.

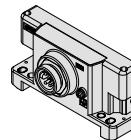

⑧ Clamp bracket for EX600

EX600-ZMA3

Enclosed parts

Round head screw with washer (M4 x 20) 1 pc.
P-tight screw (4 x 14) 2 pcs.


Caution

The compatible SI unit models are as shown below.

- PROFINET compatible: EX600-SPN3/
EX600-SPN4/EX600-SPN31
- EtherNet/IP™ compatible: EX600-SEN7/
EX600-SEN8
- EtherCAT compatible: EX600-SEC3/
EX600-SEC4

Wiring

EX245

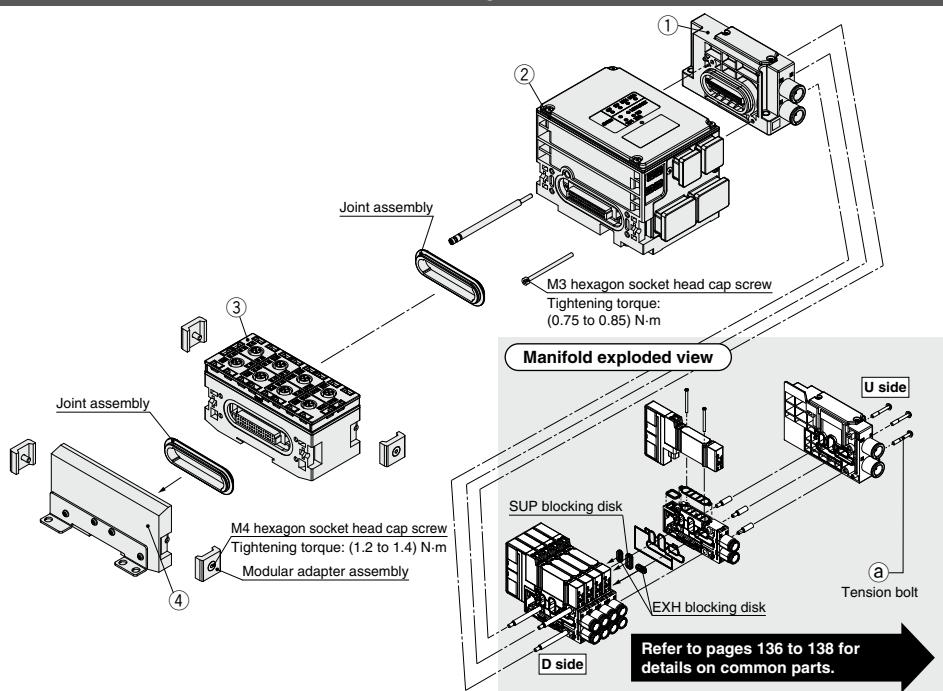

Manifold Parts Nos.

① SUP/EXH block assembly

JSY 3 | 1M - 1P - 1A - C10

• Series

3	JSY3000
5	JSY5000

Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY3000	JSY5000
C10	ø10 One-touch fitting	●	—
C12	ø12 One-touch fitting	—	●
00 ^{*1}	Plug	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S". Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY3000	JSY5000
④ Tension bolt	None ^{*1}	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

② EX245 SI unit

EX245 - S PN 1A

SI unit

PROFINET



• Connector type

Symbol	Communication connector	Power supply connector
1A	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.
2A	Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.
3A	M12 connector (4-pin, Socket, D-coded): 2 pcs.	7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.

EX245-SPN1A EX245-SPN2A EX245-SPN3A

JSY3000/5000 Series


Manifold Parts Nos.

③ EX245 digital input module

EX245 - DX1

- Digital input module specification

DX1	Digital input (16 inputs)
-----	---------------------------

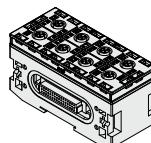


③ EX245 digital output module

EX245 - DY1

- Digital output module specification

DY1	Digital output (8 outputs)
-----	----------------------------

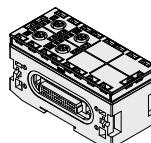


③ EX245 IO-Link module

EX245 - LA1

- Port specification

Symbol	Description
A	Port class A
B	Port class B

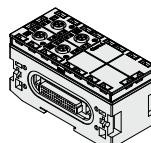

Caution


The only available SI unit part number is "EX245-SPNmA" (PROFINET compatible). Refer to page 131.

④ EX245 end plate

EX245 - EA2 - 3

- Bracket

3	For JSY
---	---------

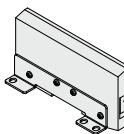


* Refer to page 94 for manifold valve part numbers.
Bracket 3 to 5 correspond to the mounting hole pitch of each manifold valve.


The EX250 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

Wiring

EX250

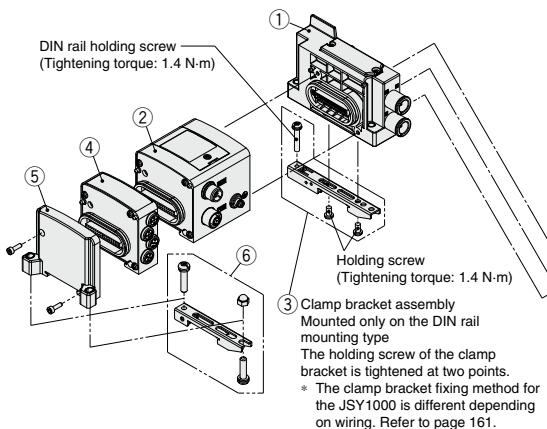

Manifold exploded view

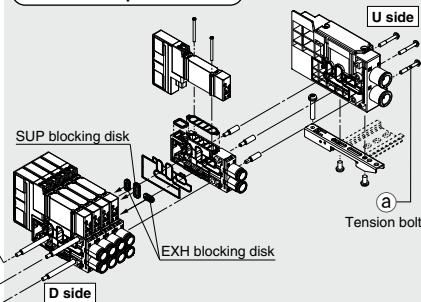

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M - 1P - 1A **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

Pilot, Silencer type

Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
NII	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• Mounting

Symbol	Mounting	Mounting		
		JSY1000	JSY3000	JSY5000
NII	Direct mounting	●	●	●
D00	DIN rail mounting (Without DIN rail)	●	—	—
D0	DIN rail mounting (With DIN rail)	—	●	●

• P, E port size (One-touch fittings)

Symbol	P, E port	Mounting		
		JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
Q0*1	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "NII" or "S".

Not available for "R" type

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY1000	JSY3000	JSY5000
② Tension bolt	None*1	3 pcs.	

*1 Since the nuts are embedded in the SUP/EXH block

② EX250 SI unit

EX250 - S **DN1**

• Communication protocol

DN1	DeviceNet® (Negative common)
AS3	AS-Interface (8 in/8 out, 2 isolated common type) (Negative common)
AS5	AS-Interface (4 in/4 out, 2 isolated common type) (Negative common)
AS7	AS-Interface (8 in/8 out, 1 common type) (Negative common)
AS9	AS-Interface (4 in/4 out, 1 common type) (Negative common)
EN1	EtherNet/IP™ (Negative common)

③ Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-2A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

④ Input block

EX250 - IE **1**

• Block type

1	M12 connector, 2 inputs
2	M12 connector, 4 inputs
3	M8 connector, 4 inputs

⑤ EX250 end plate assembly

EX250 - EA1

* With mounting screws (2 pcs. of M3 x 10)



⑥ Clamp bracket assembly for EX250

SY30M - 15 - 3A

* The part number is for 1 assembly.

JSY1000/3000/5000 Series

Wiring

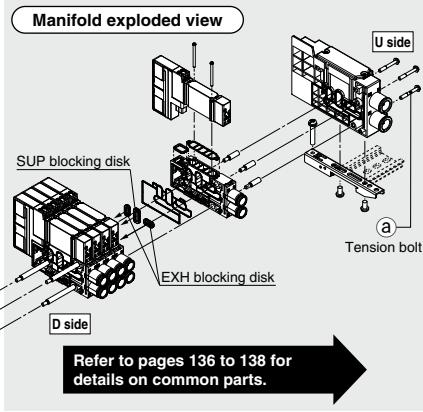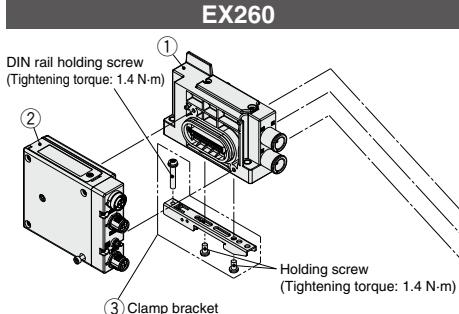

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3 1M - 1P - 1A** - **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00 ^{*1}	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".

Not available for "R" type

* The 3/5(E) port is plugged for the built-in silencer type.

② EX260 SI unit (Fieldbus and Industrial Ethernet)

EX260 - S PR1

• Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1	DeviceNet®	32	Source/PNP (Negative common)	M12	QAN	EC1	EtherCAT	32	Source/PNP (Negative common)	M12	DAN
DN2		32	Sink/NPN (Positive common)		QA	EC2		16	Sink/NPN (Positive common)		DA
DN3		16	Source/PNP (Negative common)		QBN	EC3		16	Source/PNP (Negative common)		DBN
DN4		16	Sink/NPN (Positive common)		QB	EC4		16	Sink/NPN (Positive common)		DB
PR1	PROFIBUS DP	32	Source/PNP (Negative common)	M12	NAN	PN1	PROFINET	32	Source/PNP (Negative common)	M12	FAN
PR2		32	Sink/NPN (Positive common)		NA	PN2		16	Sink/NPN (Positive common)		FA
PR3		16	Source/PNP (Negative common)		NBN	PN3		16	Source/PNP (Negative common)		FBN
PR4		16	Sink/NPN (Positive common)		NB	PN4		16	Sink/NPN (Positive common)		FB
PR5	PROFIBUS DP	32	Source/PNP (Negative common)	D-sub ^{*1}	NCN	EN1	EtherNet/IP™	32	Source/PNP (Negative common)	M12	EAN
PR6		32	Sink/NPN (Positive common)		NC	EN2		16	Sink/NPN (Positive common)		EA
PR7		16	Source/PNP (Negative common)		NDN	EN3		16	Source/PNP (Negative common)		EBN
PR8		16	Sink/NPN (Positive common)		ND	EN4		16	Sink/NPN (Positive common)		EB
MJ1	CC-Link	32	Source/PNP (Negative common)	M12	VAN	PL1	Ethernet	32	Source/PNP (Negative common)	M12	GAN
MJ2		32	Sink/NPN (Positive common)		VA	PL2		16	Source/PNP (Negative common)		GBN
MJ3		16	Source/PNP (Negative common)		VBN	IL1		32	Source/PNP (Negative common)		M12
MJ4		16	Sink/NPN (Positive common)		VB	CT1		32	Source/PNP (Negative common)		CAN

*1 The enclosure is IP40 when the communication connector is a D-sub connector or an RJ45 connector.

EX260 SI Unit (Safety Communication)

EX260 - F PS1

• Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
PS1	PROFIsafe	32	Source/PNP (Negative common)	M12	FPN
SE1	Safety over EtherCAT	32	Source/PNP (Negative common)	M12	DPN



③ Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

Wiring

EX120

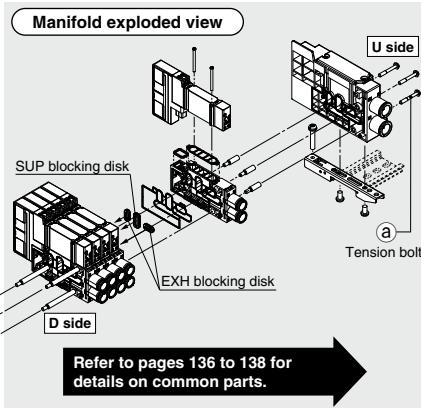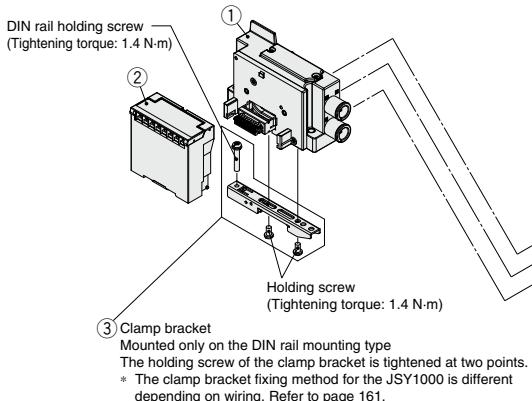

Refer to pages 136 to 138 for details on common parts.

Manifold Parts Nos.

① SUP/EXH block assembly

JSY **3** 1M – 1P – 14A – **C10**

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

NII	Direct mounting
D0	DIN rail mounting (Without DIN rail)

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00*1	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "NII" or "S"
 Not available for "R" type

* The 3/5(E) port is plugged for the built-in silencer type.

② EX120 SI unit

EX120 – S **DN1**

• Communication protocol

DN1	DeviceNet® (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet® NPN (Positive common)
CM3	CompoNet® PNP (Negative common)

③ Clamp bracket

Series	Part no.
JSY1000	JSY11M-15P-1A
JSY3000	SY30M-15-1A
JSY5000	SY50M-15-1A

* The part number is for 1 piece.

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	JSY1000/3000	JSY5000
④ Tension bolt	None*1	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

Manifold Exploded View [Common Parts]

Caution


Tightening torque for valve mounting screw

M1.4: 0.06 N·m (JSY1000)

M2: 0.16 N·m (JSY3000)

M3: 0.8 N·m (JSY5000)

* Refer to page 137 for order numbers.

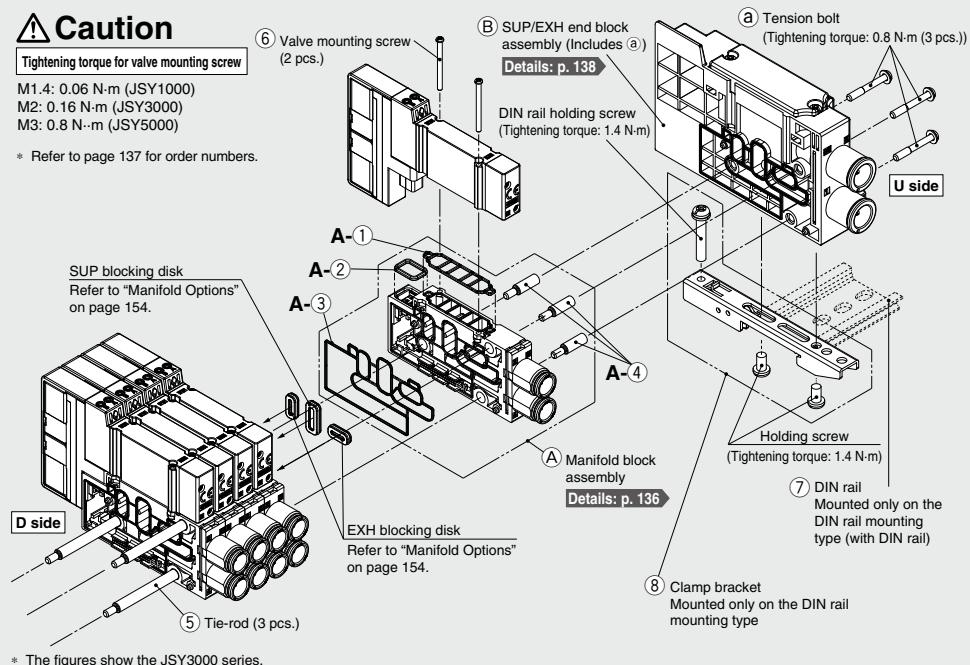

* The figures show the JSY3000 series.

Type 10: How to Increase Connector Type Manifolds

1 Loosen the U-side tension bolt **②**, and remove the **⑧ SUP/EXH end block assembly**.


<For JSY3000>

2 Screw in **④** tie-rods for additional stations to the **⑤** tie-rod of the manifold.

(Screw them in until there is no gap
(between the tie-rods.)

3 Connect the **Ⓐ** manifold block assembly and **Ⓑ** SUP/EXH end block assembly to be added, and tighten the tension bolt **②**.

Tightening torque for tension bolt **② (M3): 0.8 N·m**

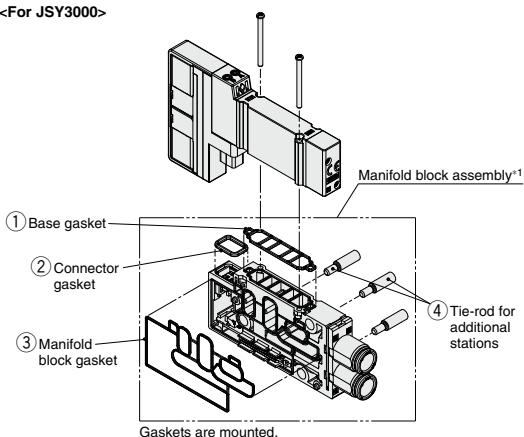

*1 Manifold block assembly

No.	Description	Quantity	Note
①②③	Gasket	1 pc. of each	For base, connector, and manifold block
④	Tie-rod for additional stations	3	

Refer to page 137 for ordering single unit.

* ② Connector gasket is not applicable to the JSY1000.

For the JJ5SY1-10, JJ5SY3-10, JJ5SY5-10

No.	Description	JSY1000		JSY3000	JSY5000	Note
		6.5 mm pitch	9 mm pitch			
A-①	Base gasket (for connector connecting base)	JSY11M-9P-1A		JSY31M-9P-1A	JSY51M-9P-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)
A-②	Connector gasket	—		SX3000-146-2		Supplied individually
A-③	Manifold block gasket	JSY11M-9P-2		JSY31M-9P-2	JSY51M-9P-2	Supplied individually
A-④	Tie-rod for additional stations ^{*1}	JSY11M-49P-1-1-A (6.5 mm pitch)	JSY11M-49P-2-1-A (9 mm pitch)	JSY31M-49P-1-1-A (11.5 mm pitch)	SV2000-55-2A-A (16 mm pitch)	3 pcs. supplied
⑤	Tie-rod	JSY11M-49P-1-□-A (6.5 mm pitch)	JSY11M-49P-2-□-A (9 mm pitch)	JSY31M-49P-1-□-A (11.5 mm pitch)	SV2000-55-1-□-A (16 mm pitch)	□: Manifold stations (2 to 24 stations) 3 pcs. supplied
⑥	Valve mounting screw	JSY11V-23-1A (M1.4 x 21.5)		JSY31V-23-1A (M2 x 25)	JSY51V-23-1A (M3 x 29)	Part numbers shown on the left are for 10 valves. (20 pcs.)
⑦	DIN rail	VZ1000-11-1-□		VZ1000-11-4-□		Refer to page 152.
⑧	Clamp bracket ^{*2} (for connector connecting base)	JSY11M-15P-1A (Refer to the table below.) ^{*2}	JSY11M-15P-2A (Refer to the table below.)	SY30M-15-1A	SY50M-15-1A	Supplied individually

*1 The manifold of the JSY1000/3000 (JJ5SY1-10/JJ5SY3-10) can be assembled by connecting the tie-rods for number of manifold stations. The manifold of the JSY5000 (JJ5SY5-10) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold. Tie-rod (SV2000-55-1-□-A) is necessary.

*2 Part number of the clamp bracket for the JSY1000 is different depending on the manifold wiring. Refer to the table below. Refer to page 161 for assembly.

Table. JSY1000 series clamp bracket

Wiring (JSY1000 series)	JSY11M-15P-1A	JSY11M-15P-2A
F D-sub connector	●	—
P□ Flat ribbon cable	●	—
TC Spring type terminal block box	●	—
T Terminal block box	—	●
L Lead wire	●	—
S6 EX600	—	●
S□ EX250	—	●
S□□ EX260	●	—
S3 EX120	●	—
SW Compact wireless remote	●	—

Manifold Parts Nos.

Ⓐ Manifold block assembly

JSY 3 1M - 2P - 1 D A - C8

● Series

1	JSY1000
3	JSY3000
5	JSY5000

Manifold pitch


1	JSY1000 (6.5 mm pitch) JSY3000 (11.5 mm pitch) JSY5000 (16 mm pitch)
2	JSY1000 (9 mm pitch)

Wiring type

S	Single wiring
D	Double wiring

A, B port size (One-touch fittings)

Symbol	A, B port	JSY1000				
		6.5 mm pitch	9 mm pitch	JSY3000	JSY5000	
C2	ø2 One-touch fitting	●	—	—	—	
C4	ø4 One-touch fitting	●	—	●	●	
C6	ø6 One-touch fitting	—	●	●	●	
C8	ø8 One-touch fitting	—	—	●	●	
C10	ø10 One-touch fitting	—	—	—	●	
C12	ø12 One-touch fitting	—	—	—	●	

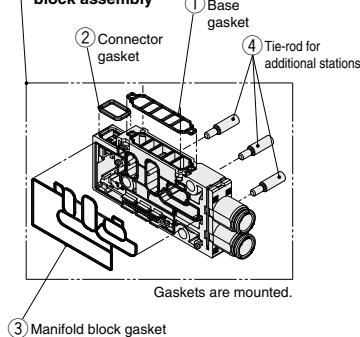Ⓐ Manifold (All parts inside —— are included.)
block assembly

③ Manifold block gasket

Manifold block assembly accessories and the number of accessories

Accessories	Quantity
① Base gasket	1 pc.
② Connector gasket ^{*1}	1 pc.
③ Manifold block gasket	1 pc.
④ Tie-rod for additional stations	3 pcs.

*1 Not applicable to the JSY1000 series

JSY1000/3000/5000 Series

Manifold Parts Nos.

⑧ SUP/EXH end block assembly

JSY 3 1M-3P-1A - C10

• Series

1	JSY1000
3	JSY3000
5	JSY5000

• Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)
D00 ^①	DIN rail mounting (With DIN rail)

^① Part number only for the JSY1000

Part number is different depending on the wiring. Refer to Table 1.

Table 1. JSY1000 series DIN rail mounting

Symbol	Wiring
D0	D-sub connector (F type)
	Flat ribbon cable (P□ type)
	Spring type terminal block box (TC type)
	Lead wire (L type) EX260 (S□□ type) EX120 (S3 type)
D00	Terminal block box (T type) EX600 (S6 type) EX250 (S□ type)

• Pilot, Silencer type


Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

* The 3/5(E) port is plugged for the built-in silencer type.

• P, E port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C8	ø8 One-touch fitting	●	—	—
C10	ø10 One-touch fitting	—	●	—
C12	ø12 One-touch fitting	—	—	●
00 ^①	Plug	●	●	●

*1 Can be selected when the pilot, silencer type symbol is "Nil" or "S".
Not available for "R" type

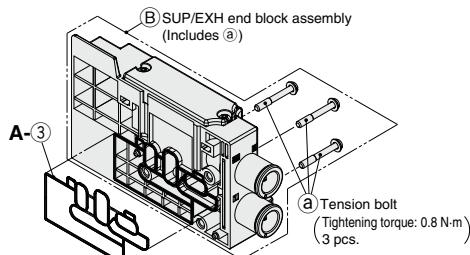

SUP/EXH end block assembly accessories and the number of accessories

Accessories	Quantity
(a) Tension bolt	3 pcs.
A-③ Manifold block gasket	1 pc.

* Gasket is mounted.

⑧ Clamp bracket

Series	For D0	Part no.
JSY1000	For D0	JSY11M-15P-1A
JSY3000	For D00	JSY11M-15P-2A
JSY5000		SY30M-15-1A
		SY50M-15-1A

* The part number is for 1 piece.

* Part number of the JSY1000 is different depending on the manifold wiring.

Refer to the Table 1. JSY1000 series DIN rail mounting for selecting a clamp bracket.


■ Cover, Silencer cover, Port block for SUP/EXH (end) block assembly



Cover
(Internal pilot)



Silencer cover
(Internal pilot, Built-in silencer)



Port block
(External pilot: Made to Order)

* Cover, silencer cover, and port block are included in the SUP/EXH (end) block assembly, but they need to be ordered for piping specification change.

* Mounting screws (2 pcs.) for SUP/EXH end block assembly are included.

Tightening torque for mounting screw

JSY1000 (M2.5): 0.32 N·m
JSY3000 (M3): 0.8 N·m
JSY5000 (M4): 1.4 N·m

JSY 3 1M-4P-1A

JSY 3 1M-5P-1A

JSY 3 1M-6P-1AR-00

Series

1	JSY1000
3	JSY3000
5	JSY5000

⚠ Caution

1. Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.

2. When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

Plug-in Connector Connecting Base




Vacuum Unit ZK2 Combination Manifold

RoHS

Type 10
Side Ported

JSY3000 Series

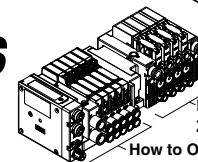

How to Order
ZK2 pp. 142, 143

How to Order
JSY3000 pp. 140, 141

Specify the valve manifold and mounted valve part numbers as well as the ejector manifold and mounted ejector part numbers for ordering. Refer to page 141 for an order example.

Internal Pilot

How to Order Manifolds

Valve Manifold

JJ5SY 3-10 SQ 1 A - 05 DS - C6 □ - M

1 2 3 4 5 6 7 8 9

Combination manifold

1 Series

3	JSY3000
---	---------

3 Connector type, Wiring, Number of cores, SI unit, Compact wireless remote

Symbol	Type	Page
F	D-sub connector (25 pins)	IP40
FW		IP67
FC		IP20
P		26 pins
PG	Flat ribbon cable	20 pins
PH		10 pins
PC	Flat ribbon cable	26 pins
PGC	Compact type	20 pins
PHC		10 pins
TC	Spring type terminal block box	EXW1
T	Terminal block box	64
L1		34 cores
L2	Lead wire	17 cores
L3		9 cores
SW1	Compact wireless remote	83-1
S6		EX600 84
S□		EX245 94
S□	Serial transmission	EX250 98
S□		EX260 104
S3□		EX120 112

* Refer to the pages shown in the table above for details.

2 Type

10	Side ported
----	-------------

4

Connector entry direction (F□/P□)

Symbol	Type
1	Upward
2	Downward

Lead wire length (L1/L2/L3)

Symbol	Type
1	0.6 m
2	1.5 m
3	3 m

SI unit output polarity, End plate type (S6□)

Refer to page 84.

With or without I/O modules (S□)

Refer to page 94.

Input block stations (S□)

Refer to page 98.

5 I/O unit stations (S6□)

Refer to page 84.

Number of I/O modules (S□)

Refer to page 94.

Input block type (S□)

Refer to page 98.

6 Valve stations

For 32 output points (TC/L1/S6□/S□)

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1

Symbol	Stations	Note
15	15 stations	
⋮	⋮	Specified layout*2 (Up to 30 solenoids available)

Symbol	Stations	Note
24	24 stations	
⋮	⋮	22 stations

For 20 output points (T)

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1

Symbol	Stations	Note
09	9 stations	
⋮	⋮	Specified layout*2 (Up to 18 solenoids available)

Symbol	Stations	Note
18	18 stations	
⋮	⋮	16 stations

For 16 output points (L2/S□/S3□)

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1

Symbol	Stations	Note
07	7 stations	
⋮	⋮	Specified layout*2 (Up to 14 solenoids available)

Symbol	Stations	Note
14	14 stations	
⋮	⋮	12 stations

For 8 output points (PH/PHC/L3)

Symbol	Stations	Note
02	2 stations	
⋮	⋮	Double wiring*1

Symbol	Stations	Note
03	3 stations	
⋮	⋮	Specified layout*2 (Up to 6 solenoids available)

Symbol	Stations	Note
06	6 stations	
⋮	⋮	4 stations

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. The use of a 2-position single solenoid will result in an unused control signal.

*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

* The total number of solenoids for the valve and ejector should not exceed the number of output points. (Number of ejector solenoids: 2 per station)

* This also includes the number of blanking plates.

* For models without an SI unit (S0), note the number of output points of the SI unit that will be mounted.

7 P, E port entry, SUP/EXH block assembly

Symbol	P, E port entry	SUP/EXH block assembly	Application
U	U side (2 to 10 stations)		
D	D side (2 to 10 stations)	Internal pilot	All
B	Both sides (2 to 24 stations)		
US	U side (2 to 10 stations)	Internal pilot, D-sub connector (F□), Terminal block box (TC, T), Flat ribbon cable (PC), Lead wire (L)	
DS	D side (2 to 10 stations)	Built-in silencer	EX260 (S□)/EXW1 (SW□)/EX245 (S□)/EX120 (S□)
BS	Both sides (2 to 24 stations)		
C	U side (2 to 10 stations)	Internal pilot, Built-in silencer	EX600 (S□)
E	D side (2 to 10 stations)	Built-in silencer	EX250 (S□)
F	Both sides (2 to 24 stations)		

* The 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

* The external pilot specification should be ordered as Made to Order. For details, refer to page 156.

8 A, B port size (Metric/One-touch fitting)

Symbol	A, B port	P, E port
C4	Straight ø4	
C6	Straight ø6	
C8	Straight ø8	ø10

*1 Indicate the sizes on the manifold specification sheet in the case of "CM".

9 Mounting

Symbol	Mounting
NII	Direct mounting
D	DIN rail mounting (With DIN rail)
D0	DIN rail mounting (Without DIN rail)

* Refer to page 160 for details on securing the DIN rail mounting type manifold.

Specify the valve manifold and mounted valve part numbers as well as the ejector manifold and mounted ejector part numbers for ordering. Refer to the bottom of this page for an order example.

Internal Pilot

How to Order Valves (With mounting screw)

Refer to page 34 for valve specifications.

JSY **3** **1** **00** **□** **5** **□** **□**

1 2 3 4 5

① Series

3	JSY3000
---	---------

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4		Exhaust center
5		Pressure center
A		N.C./N.C.
B		N.O./N.O.
C		N.C./N.O.

③ Coil specifications

Symbol	Coil specifications	JSY3000
Nil	Standard	●
T	With power-saving circuit (Continuous duty type)	●

* Be careful of the energizing time when the power-saving circuit is selected.

For details, refer to page 158.

④ Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	JSY3000
U	●		Non-polar	●
Z	●	●	Polar Positive common	●
NZ			Polar Negative common	●

* When the non-polar common specification type is selected, take measures to prevent surge voltage. For details, refer to page 159.

* Only "Z" and "NZ" types are available with a power saving circuit.



Made to Order
(Refer to page 156 for details.)

Specification
External pilot

⑤ Manual override

Symbol/Specification	JSY3000
Nil: Non-locking push type	●
D: Push-turn locking slotted type	●
E: Push-turn locking lever type	●

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.


Refer to page 137 for base gasket and mounting screw part numbers.

⚠ Caution

If the JSY3000 series is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

How to Order Manifold Assembly

Example (JJ5SY3-10SFA-□-M)

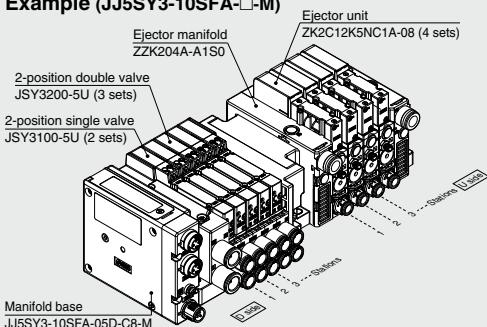


Refer to pages 121 and 122 for how to order ZK2 vacuum units.

JJ5SY3-10SFA-05D-C8-M	... 1 set (Type 10 5-station manifold base part no.)
* JSY3100-5U	... 2 sets (2-position single valve part no.)
* JSY3200-5U	... 3 sets (2-position double valve part no.)
* ZK204A-A1S0	... 1 set (Ejector manifold part no.)
* ZK2C12K5NC1A-08	... 4 sets (Ejector unit part no.)

→ The asterisk denotes the symbol for the assembly.
Prefix it to the part numbers of the ejector manifold, valve, etc.

- For the valve and ejector arrangement, the valves closest to the D side are considered the 1st stations, respectively.
- Under the manifold part number, state the valves, ejector manifold, and ejector units to be mounted in order starting with the 1st station as shown in the figure.
- Complex exhaust and individual port exhaust cannot be mixed in the ejector manifold.
- If the arrangement becomes too complicated, specify the details on a manifold specification sheet.



JSY3000 Series

Specify the valve manifold and mounted valve part numbers as well as the ejector manifold and mounted ejector part numbers for ordering. Refer to page 141 for an order example.

How to Order Manifolds

Ejector Manifold

* ZZK2 04 A - A 1 S0 -

Symbol for the assembly

1 2 3 4 5

1 Stations^{*1}



Symbol	Stations
01	1 station
02	2 stations
:	:
08	8 stations

*1 For adequate performance, the number of stations that can be operated simultaneously depends on the nozzle diameter. For details, refer to the ZK2□A series catalog.

2 System/Port

Symbol	System	Port
A	Ejector system	ø8 (Common PV)

3 Exhaust

Symbol	Exhaust	Selectable single unit number
1	Complex exhaust ^{*2}	ZK2C  Direct exhaust End plate exhaust
2	Individual exhaust	ZK2F, ZK2H  Individual port exhaust

*2 Combination of direct exhaust and end plate exhaust from each station

4 Supply valve and release valve wiring^{*3}

Symbol	Wiring	Selectable wiring for manifold (Refer to "How to Order Ejectors" on page 143.)
S0	Centralized wiring	C C1

*3 Individual wiring is specified for pressure switches for vacuum and sensors.

5 Option^{*4}

Symbol	Type	Selectable options for manifold (Refer to "How to Order Ejectors" on page 143.)					
		E	J	K	L	P	W
N	Without option	●	●	●	—	—	●
B	With DIN rail mounting bracket ^{*5}	●	●	●	—	—	●
D	With common release pressure supply (PD) port	●	●	●	—	○ ^{*6}	●
L	Manifold individual supply specification	●	●	●	—	○ ^{*6}	●




*4 When more than one option is selected, list the option symbols in alphabetical order. (Example :BD)

*5 Be sure to select the DIN rail mounting for the mounting method of the valve manifold.

*6 When option "D" is selected, select option "P" for the single unit for manifold. When option "L" is selected, select option "L" for the single unit for manifold. (○ must be selected.)

* For details, refer to "Optional Specifications/Functions/Applications" below.

Optional Specifications/Functions/Applications

Symbol	Type	Function/Application
E	Screwdriver operation type long lock nut	 - Used when the port position is close to the manifold's individual supply and needle adjustment is difficult
J	Vacuum break flow adjusting needle	 - Thicker than the standard hexagon type - More suitable for hand tightening - The round lock nut improves operability when the manifold or exhaust port type is used.
K	Screwdriver operation type	 - The slotted type allows for fine adjustment when the manifold or exhaust port type is used.
L	Manifold individual supply specification	 - For adjusting the manifold's supply pressure and the vacuum pressure reached by each ejector individually
P	With manifold common release pressure supply (PD) port	 - When selecting option "D" (with common release pressure supply (PD) port), a pressure which is different from the common PV can be supplied to the common PD.
W	With exhaust interference prevention valve	 - When ejectors are operated individually, exhausted air may flow backward from the V ports of ejectors that are turned off. The exhaust interference prevention valve prevents this backflow.

Specify the valve manifold and mounted valve part numbers as well as the ejector manifold and mounted ejector part numbers for ordering. Refer to page 141 for an order example.

For ejector specifications, refer to the **Web Catalog**.

How to Order Ejectors

ZK2□A Series

ZK2 **C 12 K5 A C A - 08 - □**

1 2 3 4 5 6 7 8

① Body/Exhaust type

Symbol	Body	Exhaust type
C	For Manifold	Complex exhaust ^{*1}
		Direct exhaust
		End plate exhaust
F	For Manifold	Individual port exhaust
		Individual port exhaust
H		High-noise reduction silencer exhaust
		High-noise reduction silencer exhaust

*1 Combination of direct exhaust and end plate exhaust from each station

⑤ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications	
			NPN	PNP
A			●	—
B			●	None (SI unit only)
C			—	●
D			—	None (SI unit only)
E		0 to -101	●	—
F		-100 to 100	●	None (SI unit only)
H			—	●
J			—	● None (SI unit only)
P	Pressure sensor	0 to -101	Analog output 1 to 5 V	
T		-100 to 100		
N	Without pressure switch for vacuum/pressure sensor			

*3 The unit selection function is not available in Japan due to the New Measurement Law. The unit for the type without the unit selection function is fixed as kPa.

⑦ Vacuum (V) port

Symbol	Vacuum (V) port
06	ø6
08	ø8

② Nominal nozzle size

Symbol	Nominal nozzle size
07	ø0.7
10	ø1.0
12	ø1.2
15	ø1.5

* Refer to the ZK2□A series catalog for the standard supply pressure per nozzle diameter.

③ Combination of supply valve and release valve

Symbol	Supply valve	Release valve	
	N.C.	Self-holding	N.C.
K	●	—	●
J	●	—	—
R	—	● ^{*2}	●

*2 Supply valve maintains vacuum by energization (20 ms or more). Stopping the vacuum turns on the release valve.

④ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC

⑥ Connector (Supply valve/Release valve/Pressure switch for vacuum)

Symbol	For supply valve/ release valve	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
	Centralized wiring specification (Plug-in)			
C	●		●	Cannot be selected when ③ is N
C1	●		None	Cannot be selected when ③ is P or T

⑧ Option^{*4} (For details on the Function/Application, refer to page 142.)

Symbol	Type	Note
Nil Without option		
E	Screwdriver operation type long lock nut	Screwdriver operation type long lock nut
J	Round lock nut	Lock nut
K	Vacuum break flow adjusting needle	Vacuum break flow adjusting needle
L	Manifold individual supply specification ^{*5}	Individual supply port
P	With manifold common release pressure supply (PD) port	
W	With exhaust interference prevention valve	Exhaust interference prevention valve

*4 When more than one option is selected, list the option symbols in alphabetical order. (Example -EL)

*5 When F or H is selected for ① and L is selected for the option, the space for adjusting the needle is reduced. Products which can be operated more easily can be specified by option E or K.


JSY3000 Series

Dimensions: JSY3000 Series


JJ5SY3-10□- Stations _B^U-M

For details on injectors, refer to the [Web Catalog](#).

* ZZK2 Stations A-A₂ S0-□

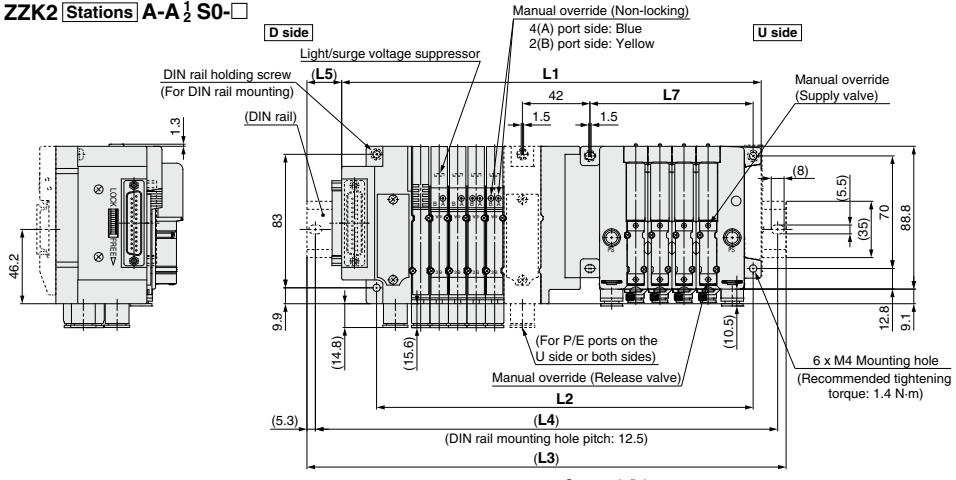

Manifold block internal wiring specifications

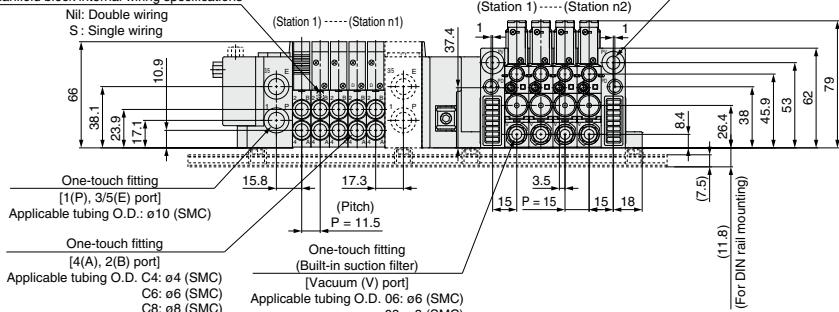

- * Refer to page 146 for dimensions of external pilot and built-in silencer.
- * Refer to pages 90, 91, and 102 for dimensions when L6 and b are used for the calculation formula.
- * Refer to the reference pages shown in the table to the right for dimensions that are not specified in each wiring specification.

Calculation formula for dimensions

$$\begin{aligned}
 L1 &= 11.5 \times n1 + 15 \times n2 + a + b \times n3 + e \\
 L2 &= 11.5 \times n1 + 15 \times n2 + e + 93.7 \\
 M &= (L1 + c)/12.5 + 1 \quad \text{Decimal fractions are truncated.} \\
 L3 &= 12.5 \times M + 23 \\
 L4 &= L3 - 10.5 \\
 L5 &= (L3 - L1 + c)/2 \\
 L6 &= b \times n3 + 82 \\
 L7 &= 15 \times n2 + 41.5
 \end{aligned}$$

n1: Number of valve stations of the JSY3000

n2: Number of injector stations of the ZK2A


n3: Number of I/O units or input block stations

	Coefficient			Reference page
	a	b	c	
D-sub connector (IP40/Connector entry direction adjustable)	120.4	—	6.1	46
D-sub connector (IP67)	135.2	—	4.5	48
D-sub connector (IP20/Compact type)	133.4	—	6.1	52
Flat ribbon cable (IP40/Connector entry direction adjustable)	120.4	—	6.1	55
Flat ribbon cable (IP20/Compact type)	114.9	—	11.2	59
Spring type terminal block box	172.7	—	—	68
Terminal block box	194	—	—	72
Lead wire	141.7	—	—	80
Compact wireless remote: EXW1	133.4	—	—	83-1
Serial transmission: EX600 (M12 connector)	186.2	47	—	90
Serial transmission: EX600 (7/8 inch connector)	202.7	47	—	91
Serial transmission: EX245	217.8	54	—	96
Serial transmission: EX250	186.2	21	—	102
Serial transmission: EX260	133.4	—	—	110
Serial transmission: EX120	138.5	—	—	116
Coefficient				e
D side entry	—			
U side/Both sides entry	23			


Dimensions

For details on ejectors, refer to the [Web Catalog](#).


With pressure sensor

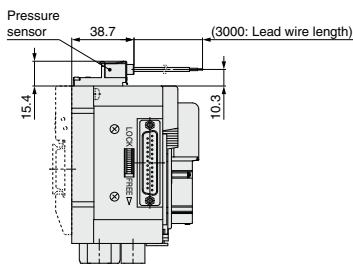


With pressure switch

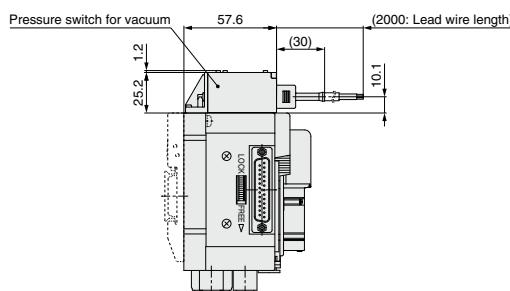


For port exhaust

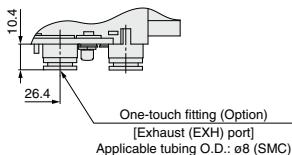


PS and PD port dimensions

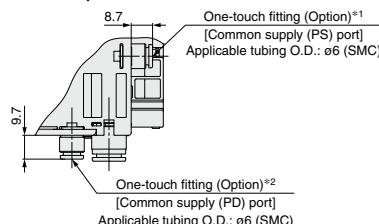

For the screwdriver operation type long lock nut

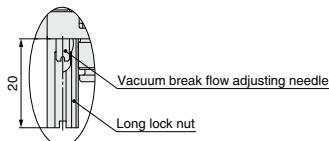

For high-noise reduction silencer exhaust

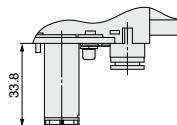

*1 The common pilot pressure supply (PS) port is only available when manifold option "L" (manifold individual supply specification) is selected.

*2 The common supply (PD) port is only available when manifold option "D" is selected.

JSY3000 Series

Type 10/Side Ported

External Pilot, Built-in Silencer

Vacuum Unit ZK2 Combination Manifold


Dimensions: JSY3000 Series

JJ5SY3-10□- Stations _B^U (S, R)-M

* ZZK2 Stations A-A₂ S0-□

D side

U side


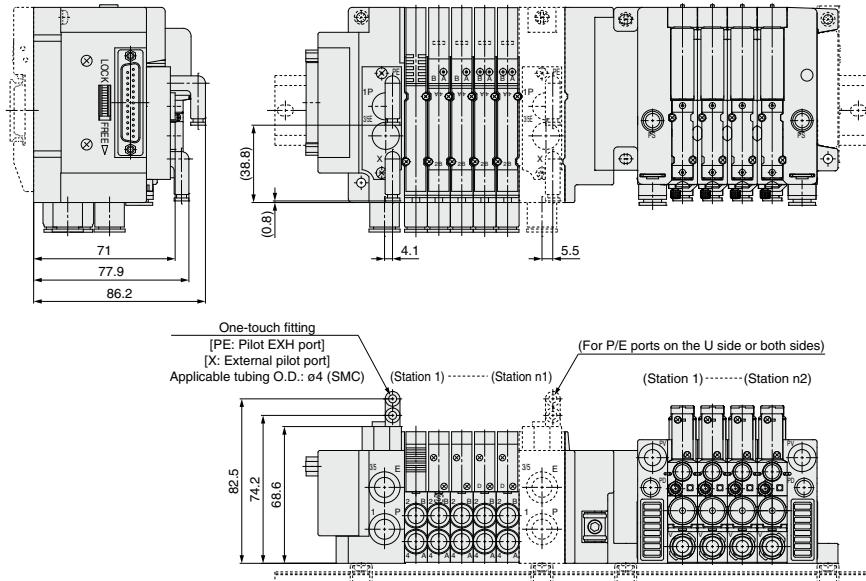


* These figures show the [JJ5SY3-10F2-05DR-C8-M]
[* ZZK204A-A1S0]

Built-in silencer <Internal pilot>

Silencer (Exhaust port)
(Built-in silencer specification)


(For P/E ports on the U side or both sides)

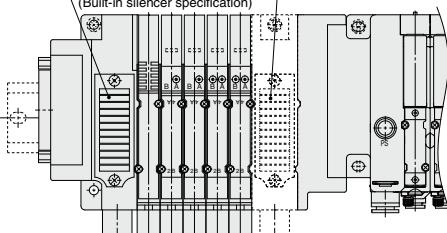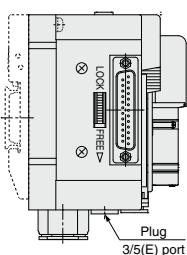

JSY3000 Series

ZK2 Combination Manifold Exploded View

Manifold Exploded View

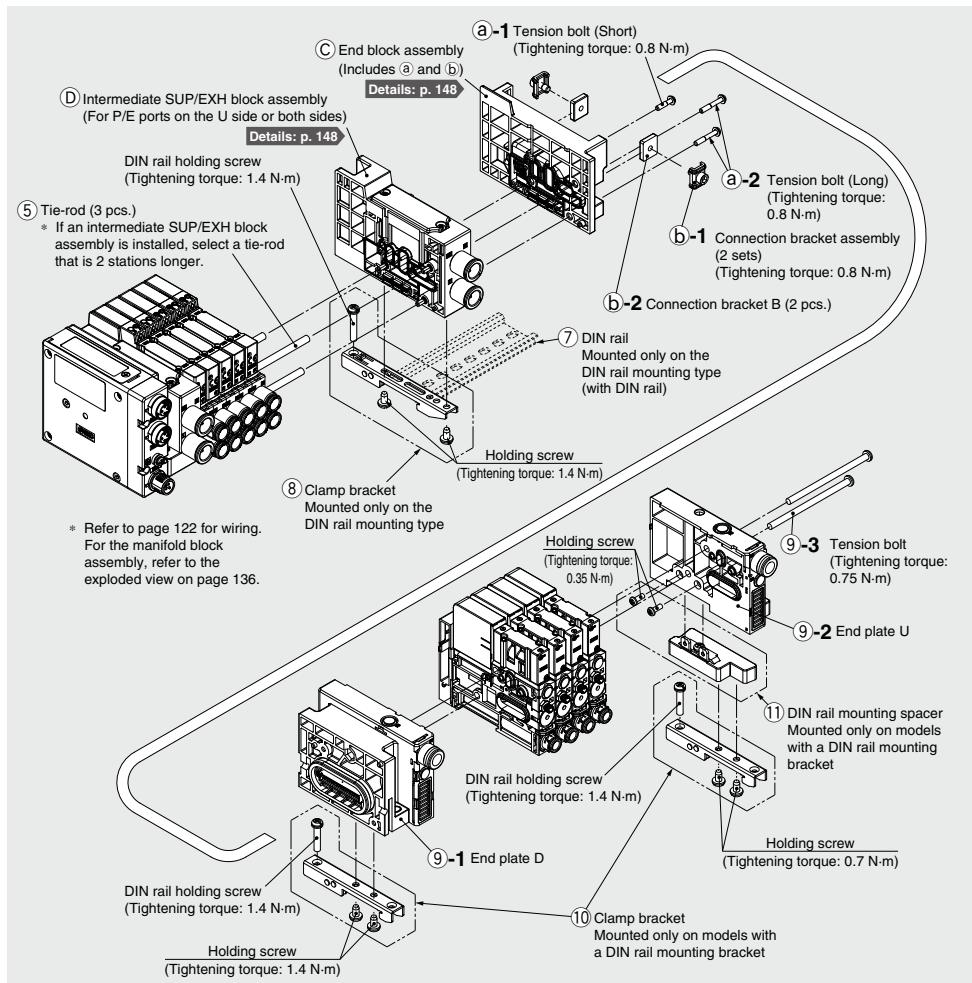

For the JJ5SY3-10-M (ZZK2□A)

⑨ Manifold end plate assembly

The assembly number includes end plate D, end plate U, and a tension bolt assembly.

ZZK2 S0--A

Refer to page 142 for the manifold part number.

Manifold end plate assembly


No.	Description	ZK2	Note
⑩	Clamp bracket	ZK2-DA5-A	2 pcs. per set
⑪	DIN rail mounting spacer	ZK2-EU3-A	

JSY3000 Series

Manifold Parts Nos.

④ End block assembly

JSY31M-3P-2A

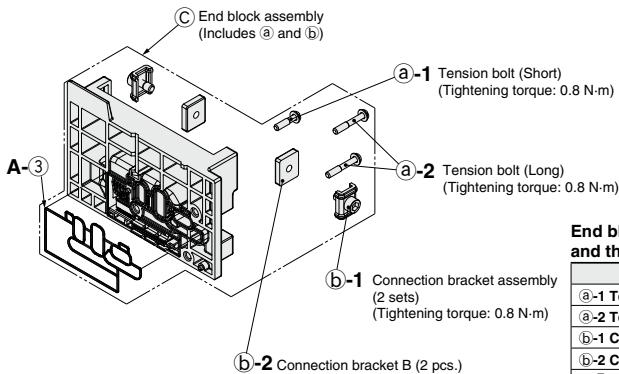

End block assembly accessories and the number of accessories

Accessories	Quantity
④-1 Tension bolt (Short)	1 pc.
④-2 Tension bolt (Long)	2 pcs.
④-3 Connection bracket assembly	2 sets
④-2 Connection bracket B	2 pcs.
④-3 Manifold block gasket	1 pc.

* Gasket is mounted.

⑤ Intermediate SUP/EXH block assembly

JSY31M-125P-1A [] -C10 []


Symbol	Pilot type		Built-in silencer
	Internal	External (Made to Order)	
Nil	●	—	—
S	●	—	●
R	—	●	—

Mounting

Nil	Direct mounting
D0	DIN rail mounting (Without DIN rail)

P, E port size (One-touch fitting)

Symbol	P, E port	JSY3000
C10	ø10 One-touch fitting	●

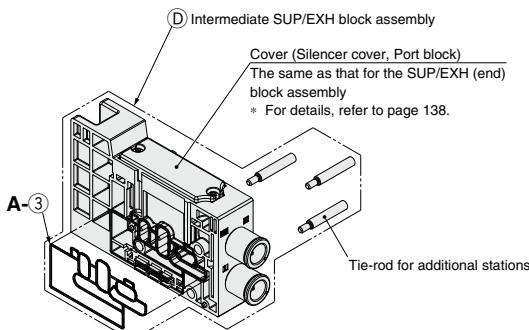

Intermediate SUP/EXH block assembly accessories and the number of accessories

Accessories	Quantity
Tie-rod for additional stations	3 pcs.
A-3 Manifold block gasket	1 pc.

* Gasket is mounted.

⑥ Clamp bracket

Series	Part no.
JSY3000	SY30M-15-1A

⚠ Caution

1. Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
2. When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

How to Increase Manifold Stations



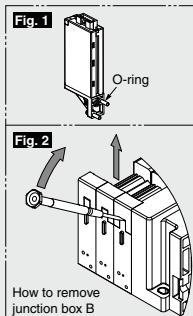


Fig. 1

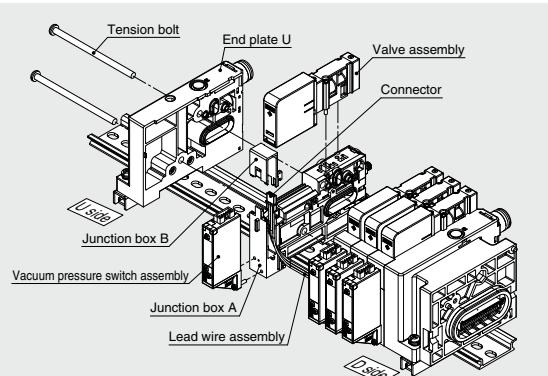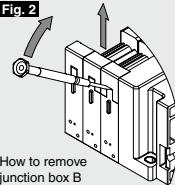

How to remove junction box B

Fig. 2


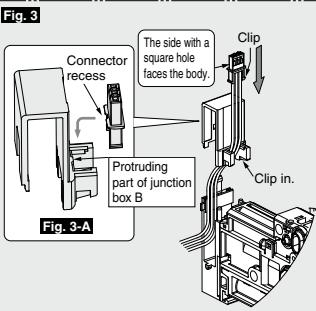


Fig. 3

Fig. 3-A

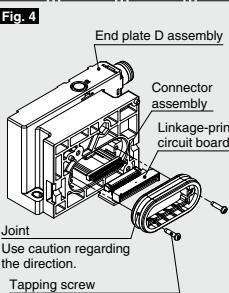

Joint

Use caution regarding the direction.

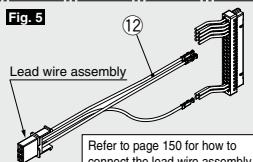
Tapping screw
(Tightening torque: 0.32 N·m)

Fig. 5

12

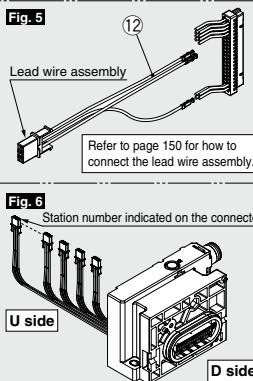


Fig. 6

Station number indicated on the connector

U side

D side

[To increase the number of stations from an odd number (1, 3, 5, 7) to an even number (2, 4, 6, 8)]
(Odd numbered stations have a vacant lead wire for one station, so additional orders are not required.)

- 1) Remove the tension bolt.
- 2) Remove end plate U.
- 3) Remove the valve assembly from the single unit for manifold to be added.
- 4) Remove the switch assembly if there is one. (Be careful not to drop the O-ring. Refer to **Fig. 1**.)
- 5) Remove junction box B (top) using a precision screwdriver. (Refer to **Fig. 2**.)
- 6) Mount the extra connector to junction box B. (Refer to **Fig. 3**.) (Engage the recess of the connector and the protruding part of junction box B. Refer to **Fig. 3-A**.)
- 7) Mount the single unit for manifold to be added to the end surface on the U side.
- 8) Mount end plate U with tension bolts of the appropriate length for the number of stations required. (Tightening torque: 0.75 N·m)
- 9) Mount junction box B to junction box A.
- 10) Mount the valve assembly. (Tightening torque: 0.15 N·m)
- 11) For products with a switch, mount the switch assembly. (Be careful not to drop the O-ring. Tightening torque: 0.08 to 0.10 N·m)

[To increase the number of stations from an even number to an odd number or to increase by 2 stations or more]

- 1) Remove the valve assemblies from all stations. (Remove from the single units to be added also.)
- 2) Remove the switch assemblies if there are any. (Be careful not to drop the O-rings. Refer to **Fig. 1**.)
- 3) Remove junction box B (top) from all stations using a precision screwdriver. (Refer to **Fig. 2**.) (Remove each junction box B from the D side.)
- 4) Remove all connectors mounted to each junction box B. (Be careful not to break the connector clips.)
- 5) Remove the tension bolts.
- 6) Remove the end plate D assembly.
- 7) Remove the linkage-printed circuit board, and then remove the connector assembly. (Refer to **Fig. 4**.)
- 8) Connect the lead wire assembly. (Refer to **Fig. 5**.)
- 9) Remount the connector assembly and linkage-printed circuit board. (Refer to **Fig. 4**.)
- 10) Remove end plate U. (Be careful not to drop the gasket.)
- 11) Mount the single units for manifold to be added to the end surface on the U side. (Do not let the gasket get caught.)
- 12) Mount end plates U and D with tension bolts of the appropriate length for the number of stations required. (Tightening torque: 0.75 N·m)
- 13) Mount the connectors for all stations to each junction box B. (Refer to **Fig. 3**.) (Engage the recess of the connector and the protruding part of junction box B. Refer to **Fig. 3-A**.)
- 14) Mount each junction box B to each junction box A. Push the wires down and mount each junction box B to each junction box A starting with the connector station numbers on the U side. (Refer to **Fig. 6**.) (Do not let the lead wire get caught.)
- 15) Mount the valve assemblies. (Tightening torque: 0.15 N·m)
- 16) For products with a switch, mount the switch assemblies. (Be careful not to drop the O-rings. Tightening torque: 0.08 to 0.10 N·m)

⑫ Lead wire assembly

ZK2 – CHS 04 – A

Applicable stations

03	For 3-station manifold
⋮	⋮
08	For 8-station manifold

How to Increase Manifold Stations: Vacuum Ejector Manifold for JSY3000


Connect the lead wire assembly to the positions shown in the diagram below.

Caution 1) After inserting each pin, confirm that the pin is locked by lightly pulling the lead wire.

2) Do not pull the lead wire forcefully when connecting. Also, take care that lead wires do not get caught between manifolds when mounting end plates U and D.

Wiring


Procedure) A station number is indicated on the connector of the lead wire assembly. Refer to the pin arrangement and insert the pins starting with black and then alternating between white and black from the top for the supply valves and the release valves. Also, starting from the bottom, insert the pins according to the corresponding station number for the common.

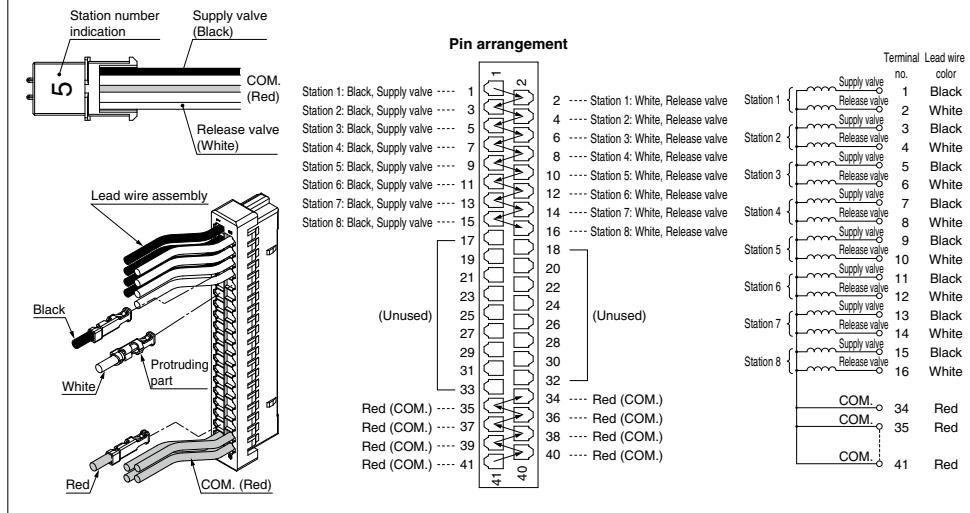

JSY1000/3000/5000 Series

One-touch Fittings, Plug, Clip, Port Plate, Tube Releasing Tool

Refer to "How to Replace One-touch Fittings" on page 160 for the replacement method.

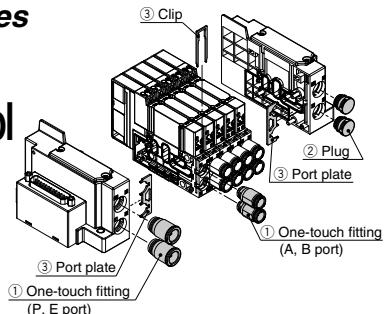

① One-touch Fittings

Port size	Series		JSY1000	JSY3000	JSY5000	Note
	6.5 mm pitch	9 mm pitch				
A, B port	ø2	KQSY10-C2	—	—	—	The part number is for 1 piece. (Sales unit: 10 pcs.)
	ø4	KQSY10-C4-X1336	—	KQSY30-C4	—	
	ø6	—	KQSY11-C6	KQSY30-C6	KQSY50-C6	
	ø8	—	—	KQSY30-C8	KQSY50-C8	
	ø10	—	—	—	KQSY50-C10	
	ø12	—	—	—	KQSY50-C12-X1336	
P, E port	ø8	KQSY30-C8	—	—	—	
	ø10	—	KQSY31-C10-X1336	—	—	
	ø12	—	—	—	KQSY50-C12-X1336	

* Refer to page 160 for assembling when a fitting is replaced.

② Plug

Series	JSY1000	JSY3000	JSY5000	Note
P, E port	JSY11M-62P-1A	JSY31M-62P-1A	JSY51M-62P-1A	The part number is for 1 piece.

* A, B port plug does not exist. Use the KQ2P series.

③ Clip, Port Plate

Series	JSY1000	JSY3000	JSY5000	Note
Piping port	For A, B port C2/C4 fittings	For A, B port C6 fittings		
A, B port (Clip)	SJ1000-CL-1	JSY31M-19P-1A	JSY51M-19P-1A	The part number is for 10 pieces.
P, E port (Port plate)	JSY11M-10P-1	JSY31M-10P-1	JSY51M-10P-1	The part number is for 1 piece.


* Refer to page 160 for assembling when a fitting is replaced.

■ Tube Releasing Tool (This tool can be used to remove tubes from ports A and B.)

Series	TG-0204	TG-0608	TG-1012
Applicable tubing O.D.	ø2/ø4	ø6/ø8	ø10/ø12



Tube removal procedure

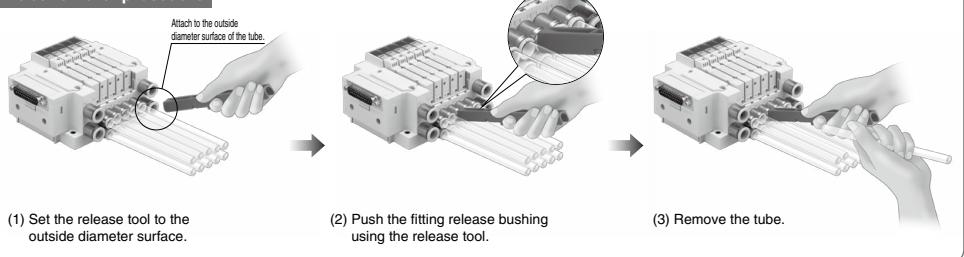


JSY1000/3000/5000 Series

Manifold Options

■ DIN rail dimensions/weight for the JSY1000/3000 **Plug-in** connector connecting base

VZ1000-11-1-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

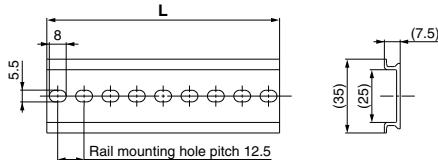


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

■ DIN rail dimensions/weight for the JSY5000 **Plug-in** connector connecting base

VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

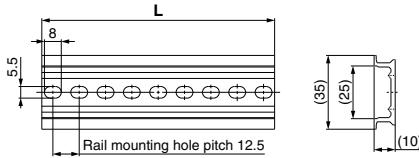

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	205.1	208.2	211.4	214.5	217.7	220.9	224	227.2	230.4	233.5	236.7	239.8	243	246.2	249.3				

Caution

Tightening torque for mounting screw
M1.4: 0.06 N·m (JSY1000)
M2: 0.16 N·m (JSY3000)
M3: 0.8 N·m (JSY5000)


Manifold Options

* Refer to page 155 for dimensions.

■ Blanking plate

[With two mounting screws]

Used when valve additions are expected or for maintenance

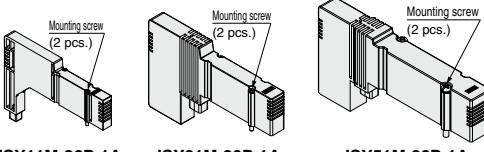

JSY11M-26P-1A


JSY31M-26P-1A

JSY51M-26P-1A

JSY [3] 1M - 26P - 1A

● Series

1	JSY1000
3	JSY3000
5	JSY5000




Circuit diagram

■ Individual SUP spacer

[With a connector gasket, a base gasket, and two mounting screws]

When the same manifold is to be used for different pressures, an individual SUP spacer assembly can be used to act as a supply port for different pressures.

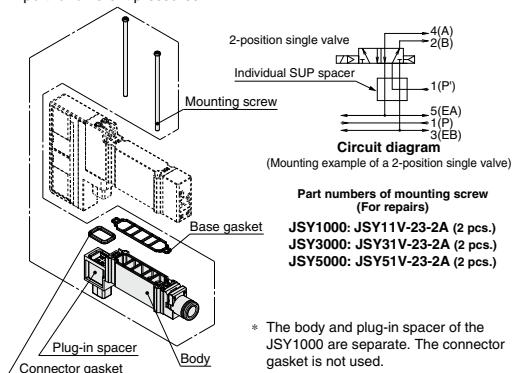Part numbers of mounting screw
(For repairs)JSY1000: JSY11V-23-2A (2 pcs.)
JSY3000: JSY31V-23-2A (2 pcs.)
JSY5000: JSY51V-23-2A (2 pcs.)

* The body and plug-in spacer of the JSY1000 are separate. The connector gasket is not used.

JSY [3] 1M - 38 P - 1A - [C6]

● Spacer type

38	Individual SUP spacer
39	Individual EXH spacer

● Series

1	JSY1000
3	JSY3000
5	JSY5000


Port size (One-touch fittings)

Symbol	P, E port	JSY1000	JSY3000	JSY5000
C4	ø4 One-touch fitting	●	—	—
C6	ø6 One-touch fitting	—	●	—
C8	ø8 One-touch fitting	—	—	●
C10	ø10 One-touch fitting	—	—	●
C12	ø12 One-touch fitting	—	—	●

■ Individual EXH spacer

[With a connector gasket, a base gasket, and two mounting screws]

When valve exhaust affects other stations due to the circuit configuration, this spacer can be used for individual valve exhaust.

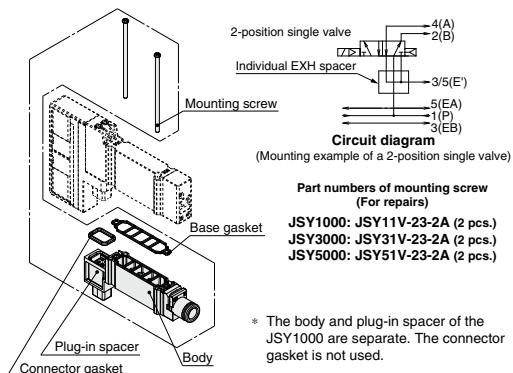Part numbers of mounting screw
(For repairs)JSY1000: JSY11V-23-2A (2 pcs.)
JSY3000: JSY31V-23-2A (2 pcs.)
JSY5000: JSY51V-23-2A (2 pcs.)

* The body and plug-in spacer of the JSY1000 are separate. The connector gasket is not used.

Refer to the operation manual for spacer combinations and mounting screws. (Other spacer combinations are not possible for the JSY1000 series.)

Please download the Operation Manual via the SMC website.

JSY1000/3000/5000 Series

Caution

Tightening torque for mounting screw
M1.4: 0.06 N·m (JSY1000)
M2: 0.16 N·m (JSY3000)


Manifold Options

* Refer to page 155-1 for dimensions.

■ SUP stop valve spacer with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws]
It is used to shut off the supply air to each valve.

- * Only compatible when the JSY1000 series 4(A), 2(B) ports are port size C6
- * This product is only for internal pilot specification manifolds, as the external pilot air cannot be shut off.
- * If the product is equipped with a 3-position closed center valve, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the 4(A), 2(B) piping port.

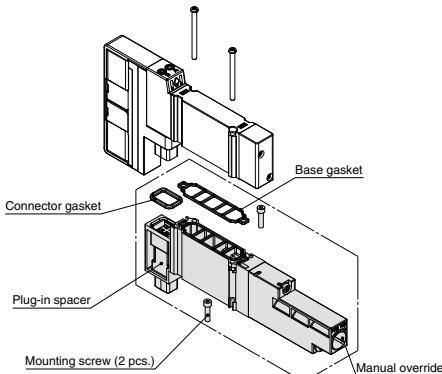

- * The body and plug-in spacer of the JSY1000 are separate. The connector gasket is not used.

Part numbers of mounting screw (For repairs)	
JSY1000: 22-SR1-A (10 pcs.)	
JSY3000: SY30M-56-1A (2 pcs.)	

[How to mount SUP stop valve spacer with residual pressure release valve]
Mount the plug-in spacer to the manifold block. (Only for the JSY1000 series)
Insert the SUP stop valve mounting screw from the side of the spacer, and mount it to the manifold block.

Tighten the SUP stop valve mounting screw to the specified tightening torque.
Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer with residual pressure release valve.

- * Be aware that the nut may come off. If the nut comes off, attach it to the spacer as shown in the drawing.
- * Tightening with a hexagon wrench is possible with the nut attached.

JSY 3 1M - 50P - 1A

• Series


1	JSY1000
3	JSY3000

Manual override	Push-turn locking slotted type
-----------------	--------------------------------

* If you want to lock the manual override, push it down until it stops, and then turn it 90° clockwise. Be careful to avoid turning it without pushing it all the way down as this may result in spacer damage, air leakage, or another form of malfunction.

To release the manual override, turn it counterclockwise. When turning the manual override, do not apply more torque than necessary. (0.1 N·m)

2-position single valve

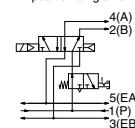

SUP stop valve spacer with residual pressure release valve
Circuit diagram

(Mounting example of a 2-position single valve)

Valve mounting screw (Refer to page 137.)

Hexagon wrench

Nominal wrench size JSY1000 series: 0.9
JSY3000 series: 1.3

SUP stop valve spacer with residual pressure release valve

Nut

JSY1000: Square nut JSY11M-57P-1A (20 pcs. included)
JSY3000: Plate type nut SY30M-57-1A (10 pcs. included)

SUP stop valve mounting screw

JSY1000 series: 22-SR1-A (10 pcs. included)
JSY3000 series: SY30M-56-1A (2 pcs. included)

Manifold block

Model	Port size		Flow rate characteristics							
	1, 3/5 (P, E)	4, 2 (A, B)	1 → 4(P → A)		1 → 2(P → B)		4 → 3/5(A → E)		2 → 3/5(B → E)	
			C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b
JSY11M-50P-1A	C8	C6	0.68	0.21	0.63	0.22	0.95	0.34	0.77	0.39
JSY31M-50P-1A	C10	C8	1.7	0.11	1.6	0.18	2.9	0.21	2.2	0.27

* Calculation of effective area S and sonic conductance C: $S = 5.0 \times C$

* The value is for manifold base with 5 stations and individually operated 2-position type.

* For connector connecting base (type 10) manifolds

Refer to the operation manual for spacer combinations and mounting screws. (Other spacer combinations are not possible for the JSY1000 series.)

Please download the Operation Manual via the SMC website.

JSY1000/3000/5000 Series

Manifold Options

■ SUP/EXH blocking disk

[SUP blocking disk]

Inserting an SUP blocking disk in the pressure supply passage of a manifold valve can allow for the use of 2 different pressures (high and low) in 1 manifold.

[EXH blocking disk]

Inserting an EXH blocking disk in the exhaust passage of a manifold valve can separate the exhaust from the valve so it does not affect the other valves. It can also be used in positive pressure and vacuum pressure mixed manifolds. (2 pieces are required to block both the EA and EB sides of the EXH.)




Series	SUP blocking disk	EXH blocking disk
JSY1000	JSY11M-40P-1A	JSY11M-40P-1A
JSY3000	JSY31M-40P-1A	JSY31M-40P-2A
JSY5000	JSY51M-40P-1A	JSY51M-40P-1A


■ Labels for blocking disks

These labels can be used to indicate and confirm where on the manifold the SUP/EXH blocking disk assemblies were inserted. (3 labels of each)


SUP/EXH
blocking disk label



SUP
blocking disk label




EXH
blocking disk label



Series	Part no.
JSY1000	
JSY3000	SJ3000-155-1A
JSY5000	




* If the blocking disk is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk is inserted will be labeled and shipped out.

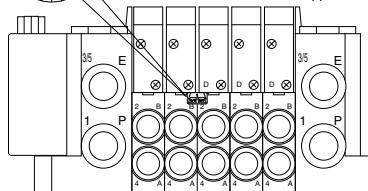

■ Silencer (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.

* Shipped together with the product


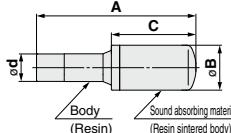


Series (ød)	Model	Effective area	A	B	C
For JSY1000 (ø8)	AN15-C08	20 mm ²	45	13	20
For JSY3000 (ø10)	AN20-C10	30 mm ²	57.5	16.5	30.5
For JSY5000 (ø12)	AN30-C12	41 mm ²	71.5	20	43.5



Dimensions: Manifold Options

■ Blanking plate



JSY1000 series

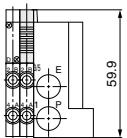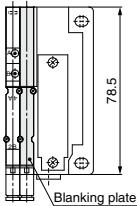

JSY3000 series

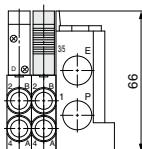
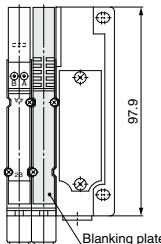


JSY5000 series

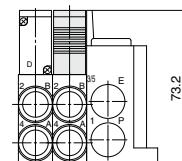
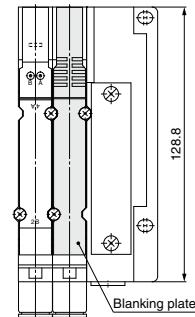


■ Individual SUP/EXH spacer



JSY1000 series

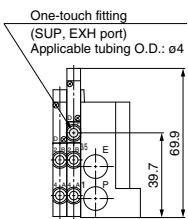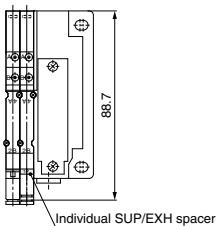

JSY3000 series

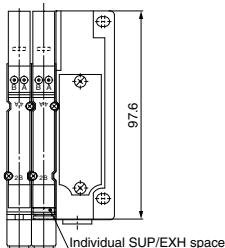

JSY5000 series

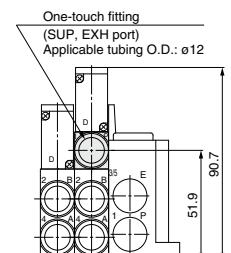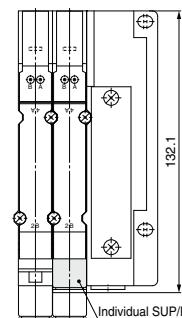



JSY1000/3000/5000 Series

Dimensions: Manifold Options



■ SUP stop valve spacer with residual pressure release valve

* Only compatible when the JSY1000 series 4(A), 2(B) ports are port size C6

JSY1000 series

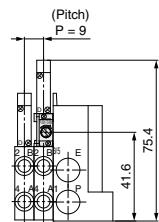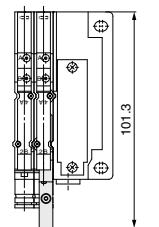

JSY3000 series

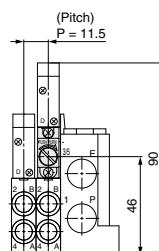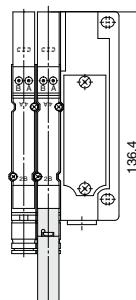


JSY3000/5000 Series

Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported)



RoHS

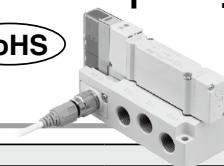

Plug-in Sub-plate Specifications

Manifold type		Plug-in sub-plate					
Piping direction	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port		Side ported			
	Bottom ported			Bottom ported			
SUP/EXH port type	SUP/EXH individual port [5(EA), 3(EB) individual]						
Applicable connector	M12 waterproof connector						
Internal wiring	Positive common, Negative common						
Port size	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port		JSY3000	1/8		
		Bottom ported		JSY5000	1/4		
Enclosure (Based on IEC60529)		IP67					
Weight: W [g] ^{*1}	JSY3000	Side ported		125			
		Bottom ported		133			
	JSY5000	Side ported		176			
		Bottom ported		208			

*1 The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 35, and to include the cable weight, add the connector cable weight on page 155-5.

* Refer to page 34 for valve specifications.

Plug-in Sub-plate Flow Rate Characteristics

Rubber Seal

Series	Fitting port size		Valve flow rate characteristics			
	1, 3/5 (P, E)	4, 2 (A, B)	1 → 4/2 (P → A/B)	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s-bar)]	b
JSY3000 (Side ported)	1/8	1/8	2.4	0.25	2.3	0.21
JSY5000 (Side ported)	1/4	1/4	6.9	0.21	6.3	0.11

How to Order

In the case of **Valve** + **Sub-plate** (Built-in valve type part no.)

JSY **3** **1** **00** **-5** **Z** **-W1** **-** **01**

1 2 3 4 5 6 7 8 9



Made to Order

(Refer to page 156 for details.)

Specification

External pilot

① Series

3	JSY3000
5	JSY5000

② Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A		N.C./N.C.
B	4-position dual 3-port	N.O./N.O.
C		N.C./N.O.

③ Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 158 for details.


④ Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
U	●		Non-polar
Z	●	●	Positive common
NZ	●		Negative common

* For the non-polar type, be careful of surge voltage intrusion. Refer to page 159 for details.

* Only "Z" and "NZ" types are available with a power saving circuit.

⑤ Manual override

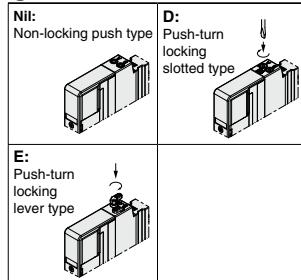

⑥ Wiring specifications (Sub-plate)

WO	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

* When ordering a product with M12 connector cable, the connector cable is included.

⑦ Port location (Sub-plate)

Nil	Side ported
B	Bottom ported

⑧ Port size (Sub-plate)

Symbol	Port size	Applicable series
01	1/8	JSY3000
02	1/4	JSY5000

⑨ Thread type (Sub-plate)

Nil	Rc
F	G
N	NPT

JSY3000/5000 Series

How to Order

In the case of Sub-plate (Sub-plate single unit part no.)

* Without valve

JSY **3** **1M-27P-1-W1-01**


1

2

3

4

5



* Base gasket is included.
* Valve mounting screws are not included.

① Series

3	JSY3000
5	JSY5000

③ Port location (Sub-plate)

Nil	Side ported
B	Bottom ported

⑤ Sub-plate thread type

Nil	Rc
F	G
N	NPT


② Wiring specifications

WO	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

* Refer to the table below for connector cable part numbers.

* When ordering a product with M12 connector cable, the connector cable is included.

Sub-plate Parts Nos.

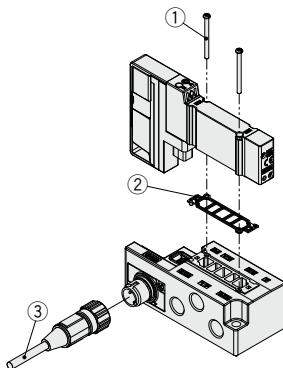

No.	Description	Part no.		Note
		JSY3000	JSY5000	
①	Valve mounting screw	JSY31V-23-1A (M2 x 25)	JSY51V-23-1A (M3 x 29)	Part numbers shown on the left are for 10 valves (20 pcs.).
②	Base gasket (for sub-plate)	JSY31M-11-1A	JSY51M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
③	M12 waterproof connector cable	ZS-37-L		Cable length: 300 mm Cable weight: Approx. 18 g
		ZS-37-M		Cable length: 500 mm Cable weight: Approx. 23 g
		ZS-37-N		Cable length: 1000 mm Cable weight: Approx. 36 g
		ZS-37-P		Cable length: 2000 mm Cable weight: Approx. 62 g
		ZS-37-C		Cable length: 5000 mm Cable weight: Approx. 140 g


⚠ Caution

Tightening torque

M2: 0.16 N·m (JSY3000)
M3: 0.8 N·m (JSY5000)

Dimensions: JSY3000 Series

JSY3□00□-□□□-W□-01□ (Side ported)

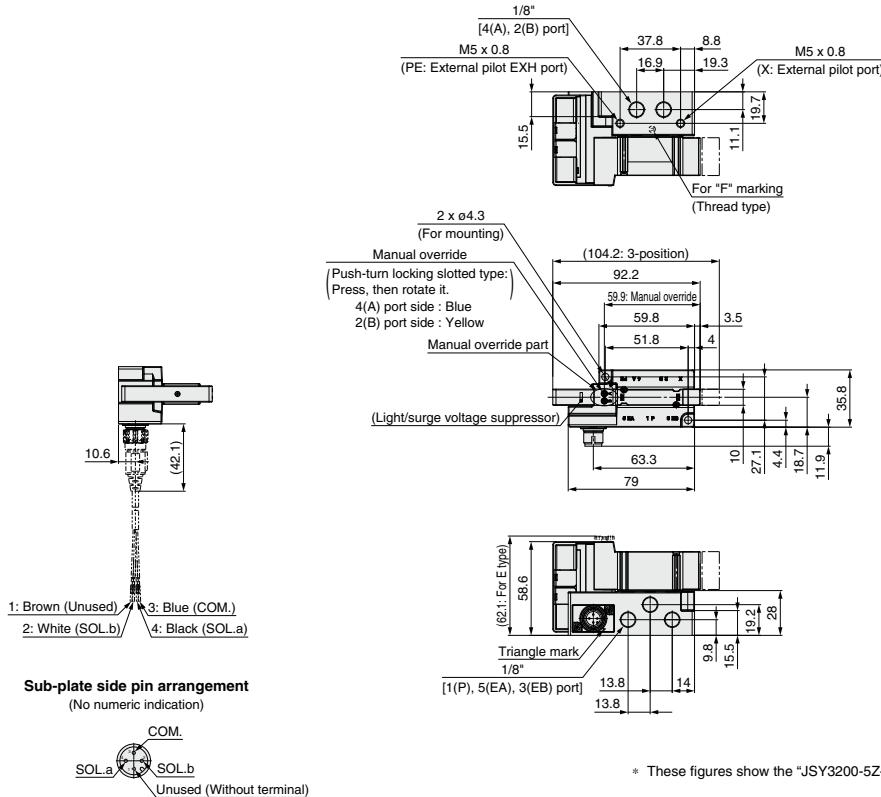

* These figures show the "JSY3200-5Z-WO-01F."


JSY3000/5000 Series

Dimensions: JSY3000 Series

**Plug-in
Single Unit/Sub-plate**

Bottom Ported


JSY3□00□-□□□-W□-B01□ (Bottom ported)

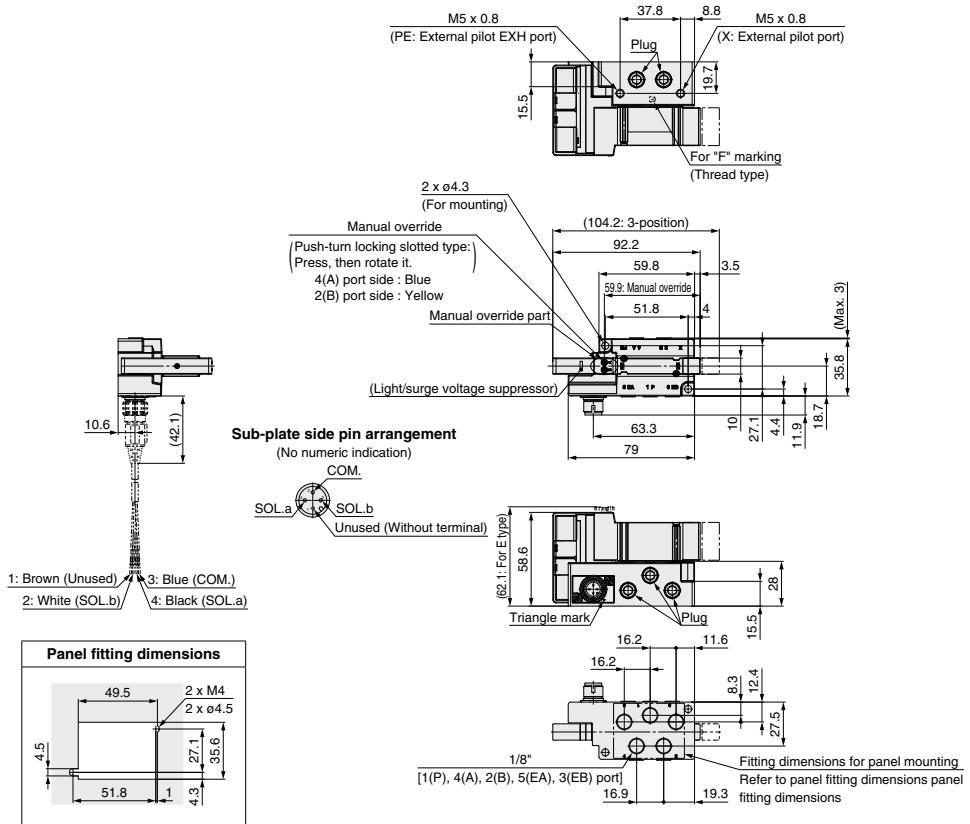

* These figures show the "JSY3200-5Z-WO-B01F."


Dimensions: JSY5000 Series

JSY5□00□-□□□-W□-02□ (Side ported)

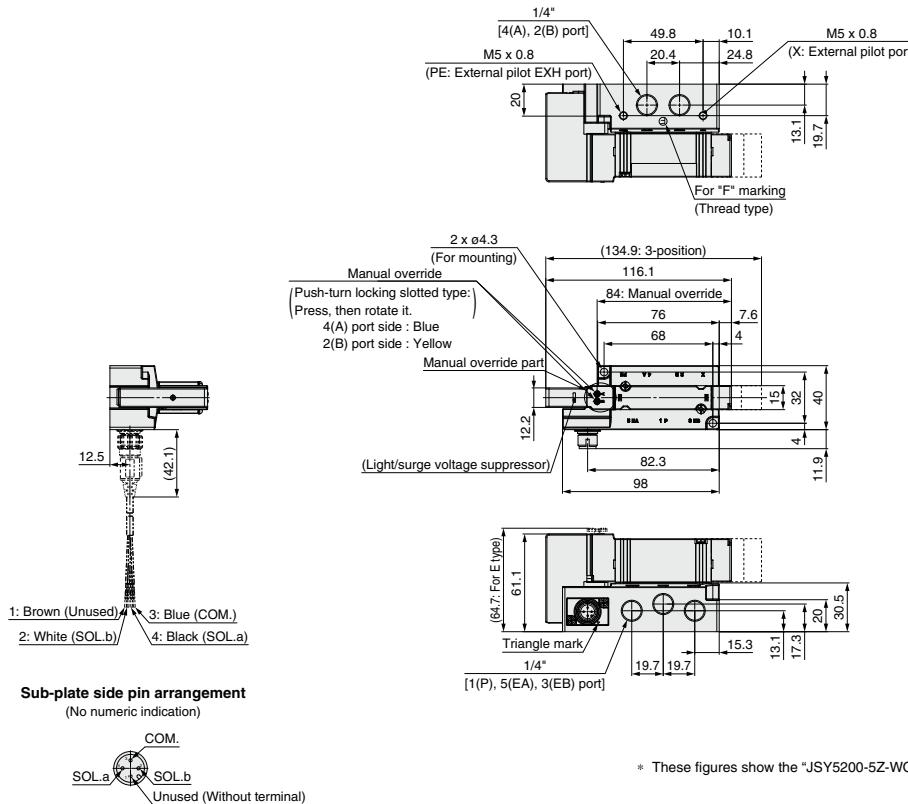

* These figures show the "JSY5200-5Z-WO-02F."

JSY5□00□-□□□-W□-B02□ (Bottom ported)

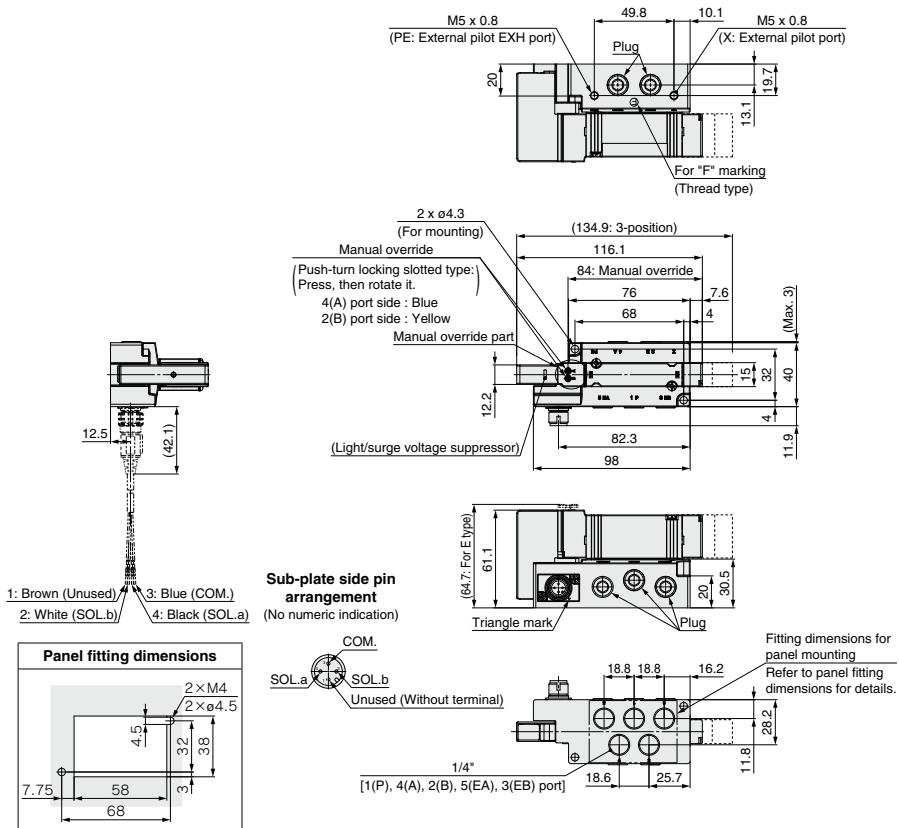

* These figures show the "JSY5200-5Z-WO-B02F."

Made to Order

Please contact SMC for detailed dimensions, specifications, and delivery times.



1 External pilot

How to Order Manifolds

Refer to the How to Order manifolds for each type.

For D-sub Connector/Flat Ribbon Cable/Lead Wire [pp. 42, 76, 140](#)

JJ5SY $\frac{1}{5}$ - 10 $\square\square$ - $\square\square$ R - $\square\square$

For Terminal Block Box [pp. 64, 140](#)

JJ5SY $\frac{1}{5}$ - 10 T_{TC} - $\square\square$ R - $\square\square$

For Compact
Wireless Remote/
EX260/EX245/EX120 [pp. 83-1, 104, 94, 112, 140](#)

JJ5SY $\frac{1}{5}$ - 10 S₃ \square - $\square\square$ R - $\square\square$

• SUP/EXH block assembly

R	External pilot
---	----------------

* The combination of external pilot type "R" and silencer type "S" is not available.

* Only the JSY3000/5000 can be selected for the EX245.

For EX600/EX250 [pp. 84, 98, 140](#)

JJ5SY $\frac{1}{5}$ - 10 S₆ $\square\square$ - \square G - $\square\square$

• P, E port entry, SUP/EXH block assembly

P, E port entry	External pilot
U side (2 to 10 stations)	G
D side (2 to 10 stations)	H
Both sides (2 to 24 stations)	J

How to Order Valves

JSY 1 \square 0 0 R T - $\square\square$

JSY $\frac{3}{5}$ \square 0 0 R \square - $\square\square$

• Coil type

• Pilot type

R	External pilot
---	----------------

* Only the JSY3000 can be selected for the 4-position dual 3-port valve external pilot specification.

* When pilot type "R" is selected, select the external pilot type "R" for the manifold SUP/EXH block assembly, and select either of "G/H/J" for the EX600/EX250 manifold.

In the case of Valve + Sub-plate Type (Built-in valve type part no.) [IP67 Compliant] [p. 155-3](#)

JSY $\frac{3}{5}$ \square 0 0 R \square - $\square\square$ - W \square - $\square\square$

• Coil type

• Pilot type

R	External pilot
---	----------------

* Only the JSY3000 can be selected for the 4-position dual 3-port valve external pilot specification.

2 Flame-retardant (Equivalent to UL-94 Standard V-0) Fitting <Only for the JSY3000/5000 internal pilot type>

* Excludes the external pilot type, ZK2 vacuum unit combination manifold, and each manifold option.
Only the One-touch fittings are flame-retardant (equivalent to UL-94 Standard V-0).

How to Order Manifolds

Refer to the How to Order manifolds for each type.

For D-sub Connector/Flat Ribbon Cable/Lead Wire [pp. 42, 76, 140](#)

JJ5SY 3/5 - 10 - -

For Terminal Block Box [pp. 64, 140](#)

JJ5SY 3/5 - 10 ^T _{TC} -

For Compact Wireless Remote/EX260/EX245/EX120 [pp. 83-1, 104, 94, 112, 140](#)

JJ5SY 3/5 - 10 ^S _{S3} -

For EX600/EX250 [pp. 84, 98, 140](#)

JJ5SY 3/5 - 10 ^{S6} _S - -

● A, B port size (Metric/One-touch fitting)

Symbol	A, B port	JSY3000	JSY5000
C4W	ø4 One-touch fitting	●	—
C6W	ø6 One-touch fitting	●	●
C8W	ø8 One-touch fitting	●	●
C10W	ø10 One-touch fitting	—	●
C12W	ø12 One-touch fitting	—	●
CMW*	Straight port, mixed sizes	●	●
P, E port size (One-touch fittings)		ø10	ø12

* Indicate the sizes on the manifold specification sheet in the case of "CMW".
Flame-retardant fittings and regular fittings cannot be mixed.

How to Order Manifold Parts

Refer to each "Manifold Parts Nos." page.

For SUP/EXH Block Assembly [pp. 123 to 129, 131, 133 to 135](#)

JSY 3/5 1M - 1P - A -

For SUP/EXH End Block Assembly [p. 138](#)

JSY 3/5 1M - 3P - 1A -

● Port size (One-touch fittings)

Symbol	A, B port	JSY3000	JSY5000
C10W	ø10 One-touch fitting	●	—
C12W	ø12 One-touch fitting	—	●

For Manifold Block Assembly [p. 137](#)

JSY 3/5 1M - 2P - A -

● Port size (One-touch fittings)

Symbol	A, B port	JSY3000	JSY5000
C4W	ø4 One-touch fitting	●	—
C6W	ø6 One-touch fitting	●	●
C8W	ø8 One-touch fitting	●	●
C10W	ø10 One-touch fitting	—	●
C12W	ø12 One-touch fitting	—	●

Flame-retardant (Equivalent to UL-94 Standard V-0) One-touch Fitting

Port size	Series	JSY3000	JSY5000
A, B port	ø4	KQSY30-C4W	—
	ø6	KQSY30-C6W	KQSY50-C6W
	ø8	KQSY30-C8W	KQSY50-C8W
	ø10	—	KQSY50-C10W
	ø12	—	KQSY50-C12W
P, E port	ø10	KQSY31-C10W	
	ø12	—	KQSY50-C12W

* Refer to page 160 for assembling when a fitting is replaced.

* The part number is for 1 piece. (Sales unit: 10 pcs.)



JSY1000/3000/5000 Series

Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Environment

⚠ Warning

1. Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
2. Products compliant with IP67 enclosures (based on IEC 60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming into direct contact with water or other liquids.

Valve Mounting

⚠ Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown on the right.

Series	Thread size	Tightening torque
JSY1000	M1.4	0.06 N·m
JSY3000	M2	0.16 N·m
JSY5000	M3	0.8 N·m


Manual Override

⚠ Warning

Manual override is used to switch the main valve without inputting an electrical signal for the valve. When manual operation is performed, the connected actuator will start operating, so be sure to confirm that it is safe to operate beforehand.

■ Non-locking push type


Push down on the manual override button until it stops.

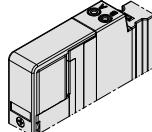

■ Push-turn locking slotted type [D type]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking push type.

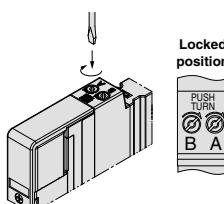


Manual Override

⚠ Warning

■ Push-turn locking lever type [E type] (Only for the JSY3000/5000)

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking push type.

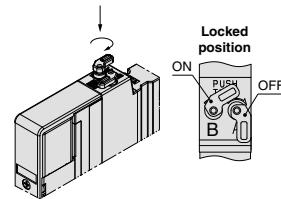

Carefully check the manual override projection amount.
Max. (at OFF): 3.7 mm



⚠ Caution

Do not apply excessive torque when turning the manual override. [0.1 N·m]

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

Used as a 3-Port Valve

⚠ Caution

■ In case of using a 5-port valve as a 3-port valve

The JSY1000/3000/5000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. Use them when a double solenoid type 3-port valve is required.

Plug position	B port N.C.	A port N.O.
Type of actuation	(A)4 2(B)	(A)4 2(B)
	(E)A5 1 3(EB) (P)	(E)A5 1 3(EB) (P)
Number of solenoids	(A)4 2(B)	(A)4 2(B)
	(E)A5 1 3(EB) (P)	(E)A5 1 3(EB) (P)



JSY1000/3000/5000 Series

Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.


Light/Surge Voltage Suppressor

⚠ Caution

■ Polar type (For JSY3000/5000)


Positive common

Single solenoid

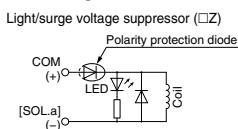


Negative common

Single solenoid

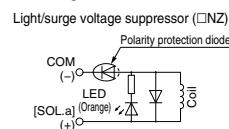


Positive common

Double solenoid, 3-position, 4-position

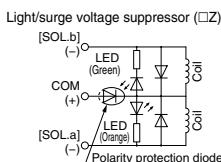

Negative common


Double solenoid, 3-position, 4-position

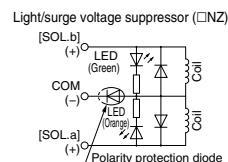


■ Non-polar type (For JSY3000/5000)

With light/surge voltage suppressor ($\square U$)

Single solenoid




Double solenoid

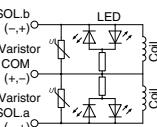


■ With power-saving circuit

Power consumption is decreased to approx. 1/2.5 to 1/4 of the amount consumed at startup by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

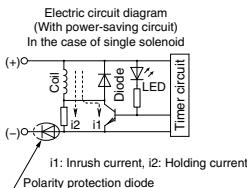

The circuit shown to the left reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

<Electrical power waveform with power-saving circuit>

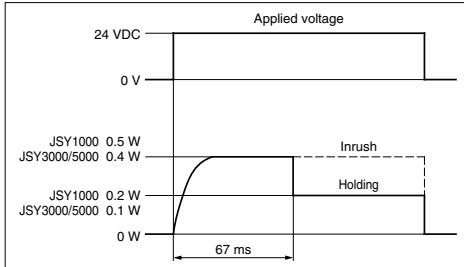

Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

Residual voltage of the surge voltage suppressor

If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 35.

Residual Voltage

Surge voltage suppressor	24 VDC
Z	Approx. 1 V
U	Approx. 47 V

Continuous Duty

⚠ Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for long periods of time, be sure to use a valve with power-saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater.

Energization of a 2-Position Double Solenoid Valve

⚠ Caution

To avoid operation failure, do not energize the A side and B side of 2-position double solenoid valve at the same time.



JSY1000/3000/5000 Series

Specific Product Precautions 3

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website

Countermeasure for Surge Voltage Intrusion

⚠ Caution

■ Surge voltage intrusion

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

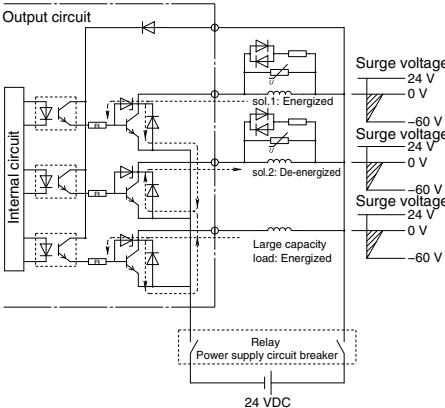


Figure 1. Surge intrusion circuit example
(NPN outlet example) (24 VDC)

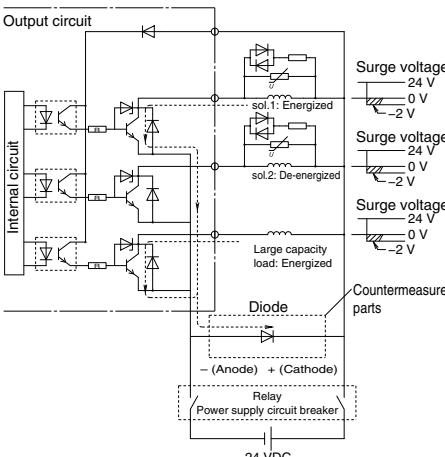


Figure 2. Surge intrusion countermeasure example
(NPN outlet example) (24 VDC)


Light Indication

⚠ Caution

When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energized, and it turns green when solenoid b is energized.


<JSY1000 series>

Light
A side: Orange
B side: Green

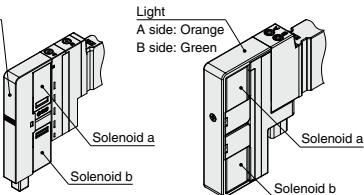

<JSY3000/5000 series>

Light
A side: Orange
B side: Green

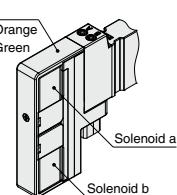


Changing Connector Entry Direction

⚠ Caution

Connector direction for electrical entry of D-sub connector and flat ribbon cable <IP40> can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire, etc., to break.

* Direction cannot be changed for D-sub connector <IP67> or compact type.

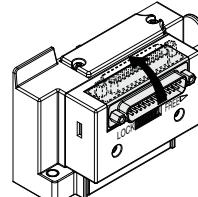

UL Approved Product

⚠ Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a  mark on the body.



JSY1000/3000/5000 Series Specific Product Precautions 4


Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Manifold Indication Symbol

⚠ Caution

The letter "S" is indicated on manifold blocks for the JSY series as shown below. This indication refers to the type of substrate (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3- or 4-position valves cannot be used for manifolds blocks with single wiring specification S.)

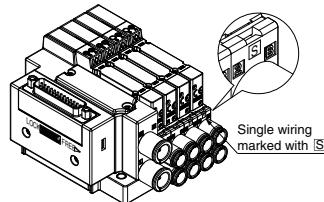

Substrate inside Manifolds

⚠ Caution

The substrate inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

Securing the DIN Rail Mounting Type Manifold

⚠ Caution

1. When the manifold is secured with bolts on a mounting surface, etc., it can be operated just by securing both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, secure the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations, and 6 locations for 21-24 stations.

2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.


How to Replace One-touch Fittings

⚠ Caution

By replacing One-touch fittings of manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports. When replacing the One-touch fittings, remove the clip or the plate before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

Use caution as it may cause air leakage if the clip and the plate are not inserted securely enough when they are switched. Refer to page 151 for part numbers of One-touch fittings.

■ Connector connecting base

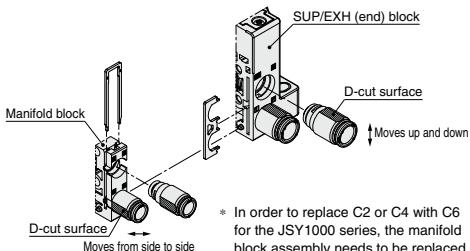

* In order to replace C2 or C4 with C6 for the JSY1000 series, the manifold block assembly needs to be replaced. Please select the manifold block assembly on page 137.

* Refer to page 151 for One-touch fitting, clip, and port plate part numbers.

<Assembly method>

· SUP/EXH (end) block

Fitting direction is specified when the fittings below are used. Assemble the fitting so that the D-cut surfaces of the fitting face up and down.

Fitting part no.: KQSY50-C12-X1336 (JSY5000)
KQSY50-C12W (JSY5000)

· Manifold block

Assemble the fitting so that the D-cut surfaces of the fitting face sideways.

Fitting part no.: KQSY10-C4-X1336 (JSY1000)
KQSY50-C12-X1336 (JSY5000)
KQSY50-C12W (JSY5000)



JSY1000/3000/5000 Series Specific Product Precautions 5

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Other Tube Brands

⚠ Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube	within ± 0.1 mm
2) Soft nylon tube	within ± 0.1 mm
3) Polyurethane tube	within $+0.15$ mm within -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

One-touch Fittings

⚠ Caution

■ Tube attachment/detachment for One-touch fittings

1) Tube attachment

1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, or 3. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

2) Tube detachment

Use the release tool when the removal of tube is difficult due to the tube size. Refer to page 151 for releasing tools.

1. Push in the release button sufficiently, pushing its collar equally around the circumference.
2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.


Fixing Method of JSY1000 Series Clamp Bracket

⚠ Caution

The clamp bracket fixing method for the JSY1000 series is different depending on wiring.

■ Wiring

<For D-sub connector/Flat ribbon cable/Spring type terminal block box/Lead wire/EX260/EX120>

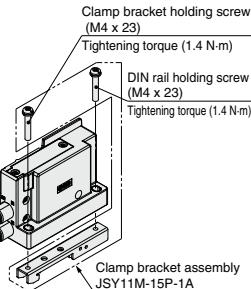


- * When the DIN rail is not accommodated in the clamp bracket, loosen the DIN rail holding screw once and insert the DIN rail.

<For Terminal block box/EX600/EX250>



- * If the tightening torque of the holding screws is too much, the SUP/EXH end block will be broken.

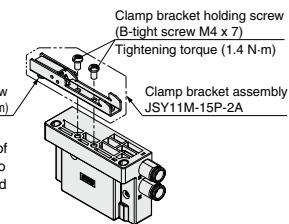

Installation

⚠ Caution


Even though the inlet pressure is within the operating pressure range, when the piping diameter is restricted due to size reduction of supply port (P), the flow will be insufficient. In this case, the valve does not switch completely and the cylinder may malfunction.

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
CompNet® is a registered trademark of ODVA, Inc.

EtherCAT® and Safety over EtherCAT® are registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

JSY1000 Series

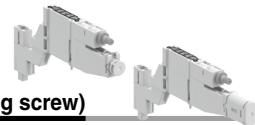

Manifold Option How to Order Spacer Type Ejector (With mounting screw)

Spacer Type Ejector

JSY11M-E P-**3**A-**07**S**C6**-**N**

1 2 3 4 5 6

① Optional specifications

E	Spacer type ejector
---	---------------------

② Body type

Symbol	Body type
1	Supply valve (N.C.)
2	Supply valve (N.O.)
3	Supply valve (N.C.)/Release valve (N.C.)

③ Nominal nozzle size

07	ø0.7
10	ø1.0

④ Achievable vacuum pressure

S	-90 kPa
---	---------

⑤ Exhaust type

Symbol	Exhaust type	Element
NII	Silencer	Without
H	High-noise reduction silencer	With
C6	ø6 One-touch fitting	—

⑥ Vacuum break flow adjusting unit

NII	Without
N	With (Only with body model "3" Release valve)

* Refer to "Ejector Specifications" on page 161-2 for the max. number of ejector stations that can operate simultaneously.

Spacer Type Ejector is connection to both A port and B port. (See p. 161-4 circuit diagram). One of them can be connected to vacuum pad and the other to pressure switch without a branch piping to manifold. When only one of them is turned piping, be sure to turn plug the unused port.

The following solenoid is recommended for mounting of spacer type ejector.

Ejector Supply Valve/Release Valve

JSY1000 Series

JSY 1 **3** 0 0 T-5 **Z**

1 2 3 4 5 6
Base mounted With power-saving circuit



① Series

1	JSY1000
---	---------

③ Pilot valve exhaust method

0	Pilot valve individual exhaust
---	--------------------------------

④ Rated voltage

5	24 VDC
---	--------

② Type of actuation

Symbol	Type of actuation	Applicable spacer type ejector body type symbol
1	2-position	Single
2		Double
3	3-position	Closed center 1, 2 3

Made to Order

Made to Order	Specifications
	External pilot

⑤ Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Z	●	●	Positive common
NZ			Negative common

* When SI unit is used

Select a valve from Z when the SI Unit output polarity is positive common.

Select a valve from NZ when the SI Unit output polarity is negative common.

⑥ Manual override

Nil:	Non-locking push type
D:	Push-turn locking slotted type

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the ejector, please order the base gasket separately if it is needed for maintenance. Refer to page 161-8 for base gasket and mounting screw part numbers.

JSY1000 Series

Spacer Type Ejector



Ejector Specifications^{*1, *2}

Model	Standard supply pressure [MPa]	Nominal nozzle size [mm]	Supply pressure range [MPa]	Achievable vacuum pressure [kPa]	Max. suction flow [L/min (ANR)]	Air consumption [L/min (ANR)]	Noise level ^{*3, *4} [dB (A)]	
				Type S	Type S		Silencer exhaust type	High-noise reduction silencer exhaust type
JSY11M-EP-□A-07S□	0.45	0.7	0.1 to 0.6	-90	11.5	27	68	58
JSY11M-EP-□A-10S□		1.0			21	52	80	65

*1 The values indicating characteristics are representative values and may vary depending on the atmospheric pressure (weather, altitude, etc.).

*2 Value at supply pressure.

*3 Actual values under SMC's measurement conditions (Not guaranteed values)

*4 This is a value obtained with a single ejector performing vacuum suction in the silencer air discharge system.

Max. Number of Manifold Stations that Can Operate Simultaneously [units]

Model	Max. number of manifold stations that can operate simultaneously [units] ^{*1, *2, *3}	
	U or D side Air supply to one side	U and D side Air supply to both sides
JSY11M-EP-□A-07S□	8	12
JSY11M-EP-□A-10S□	2	4

*1 Value at supply pressure.

*2 Actual values under SMC's measurement conditions (Not guaranteed values)

*3 This is the maximum number of stations that can simultaneously operate when vacuum is simultaneously generated by the ejectors only (excluding the solenoid valve for actuator).

When a solenoid valve for actuator and a spacer type ejector are mounted on the same manifold, simultaneously operating them may affect each other and degrade their performances.

As a countermeasure against this problem, by using a single SUP spacer (mountable only on the solenoid valve for actuator) and a SUP blocking disk, separate air supply to those components (refer to pages 153 and 154).

Weight

Spacer type Ejector model	Exhaust type	Vacuum break flow adjusting unit	Weight [g]
JSY11M-EP-□A-□S	Silencer exhaust	Without	16
JSY11M-EP-□A-□SC6	ø6 One-touch fitting		20
JSY11M-EP-□A-□SH	High-noise reduction silencer exhaust		18
JSY11M-EP-□A-□S-N	Silencer exhaust	With	23
JSY11M-EP-□A-□SC6-N	ø6 One-touch fitting		27
JSY11M-EP-□A-□SH-N	High-noise reduction silencer exhaust		25

Solenoid Valve (Supply Valve/Release Valve) Flow Rate Characteristics

Valve model	Port size		Valve flow rate characteristics		
	1, 3/5 (P, E)	4, 2 (A, B)	Passage	C [dm ³ (s-bar)]	b
JSY1100 JSY1200	C8	C6	1 → 4/2 (P → A/B)	0.96	0.30
			4/2 → 3/5 (A/B → E)	0.91	0.48
			1 → 4/2 (P → A/B)	0.64	0.37
			4/2 → 3/5 (A/B → E)	0.66	0.46

* Calculation of effective area S and sonic conductance C: S = 5.0 × C

* Values measured in accordance with ISO 6358:1989, JIS B 8390:2000


* Characteristics in solenoid valve JSY1000 series single unit.

Exhaust Characteristics/Flow Rate Characteristics


(Exhaust characteristics: Supply pressure 0.45 MPa)

JSY11M-EP-□A-07S□-□

Nominal Nozzle Size $\phi 0.7$ Specification: Exhaust Characteristics

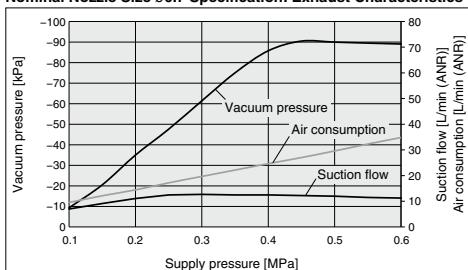


Nominal Nozzle Size $\phi 0.7$ Specification: Flow Rate Characteristics

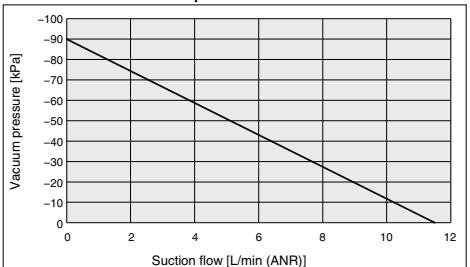


JSY11M-EP-□A-10S□-□

Nominal Nozzle Size $\phi 1.0$ Specification: Exhaust Characteristics

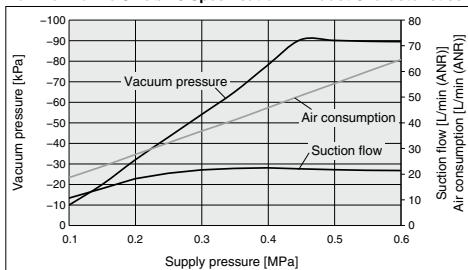


Nominal Nozzle Size $\phi 1.0$ Specification: Flow Rate Characteristics

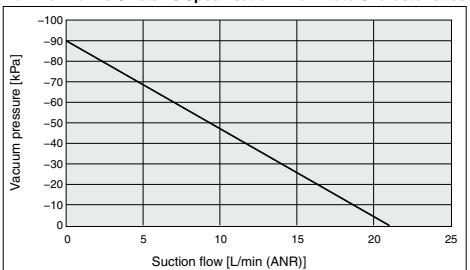


Release Flow Rate Characteristics

The graph when vacuum release flow adjusting needle is from fully closed to open in supply pressure 0.45 MPa.

Nominal Nozzle Size $\phi 0.7$ Specification

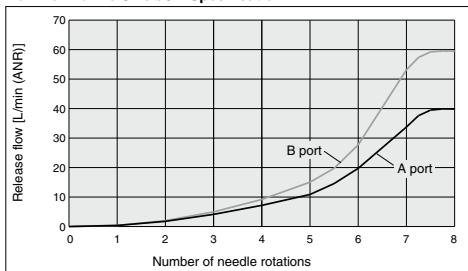


Nominal Nozzle Size $\phi 1.0$ Specification

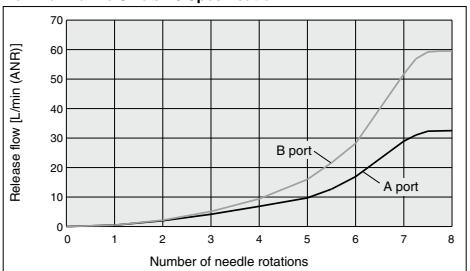

It is the vacuum release flow rate from one of the two vacuum port (A, B port). The other is turned plug.

Construction

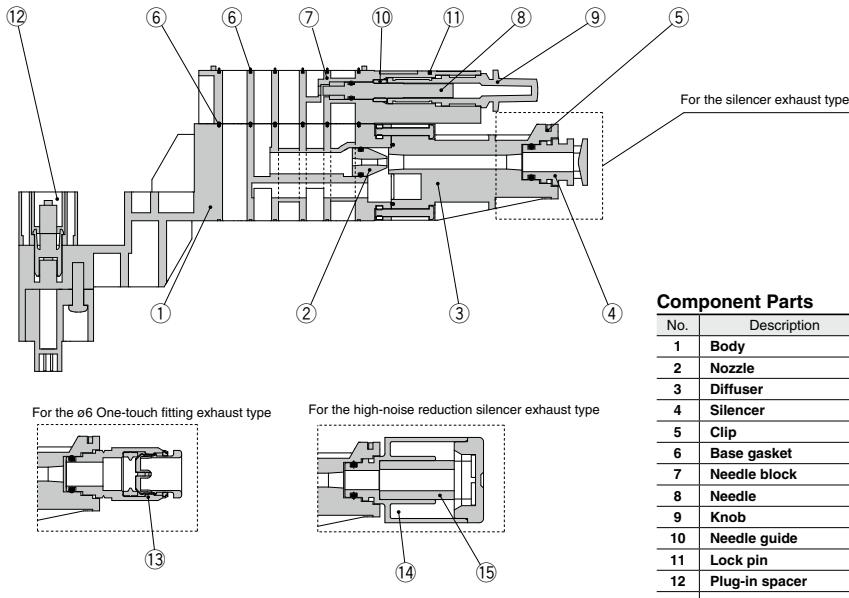


Component Parts

No.	Description	Material
1	Body	Resin
2	Nozzle	Resin
3	Diffuser	Resin
4	Silencer	Resin
5	Clip	Stainless steel
6	Base gasket	HNBR
7	Needle block	Resin
8	Needle	Resin
9	Knob	Resin
10	Needle guide	Brass
11	Lock pin	Stainless steel
12	Plug-in spacer	Resin
13	ø6 One-touch fitting	Stainless steel/Brass/Resin/NBR/HNBR
14	High-noise reduction silencer	Resin
15	Sound absorbing material	Resin
—	O-ring	NBR/HNBR


Circuit Diagrams

JSY11M-EP-1A-□S□

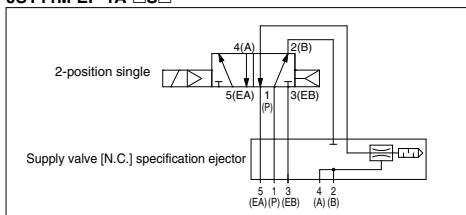


* The valves in the above circuit diagram are examples.

JSY11M-EP-2A-□S□

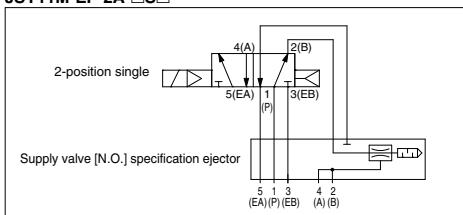


* The valves in the above circuit diagram are examples.

JSY11M-EP-3A-□S□

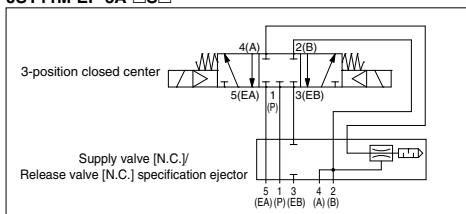

JSY11M-EP-3A-□S□-N

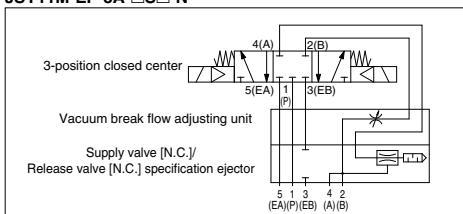


JSY1000 Series

How to Order Manifold Assembly (When mixed manifold block range 6.5 mm/9 mm is used)

Example (JJ5SY1-10F1-□-CM)

* Manifold model JJ5SY1-10□-□-C2/C4 cannot be equipped with spacer type ejector.

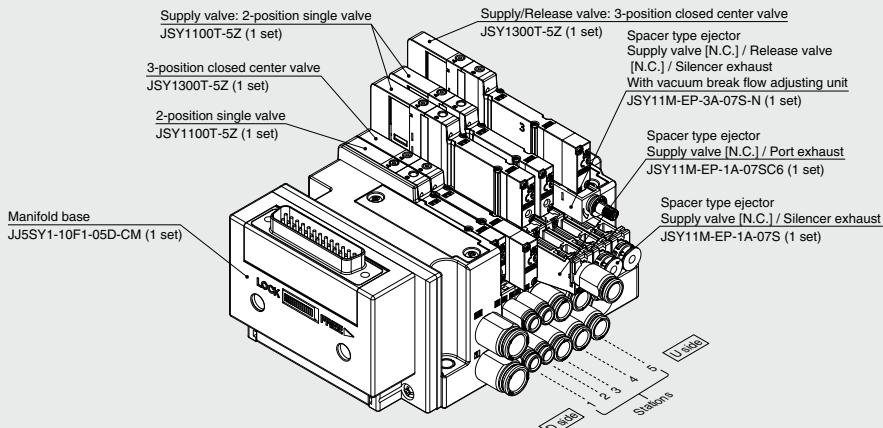

JJ5SY1-10F1-05D-CM 1 set (Type10 5stations manifold base product number/manifold block width mixed specifications)

- * JSY1100T-5Z 1 set (2-position single valve)
- * JSY1300T-5Z 1 set (3-position closed center)
- * JSY1100T-5Z 1 set (Supply valve: 2-position single valve)
- * JSY11M-EP-1A-07SC6 1 set (Spacer type ejector: Supply valve [N.C.]/Port exhaust)
- * JSY1100T-5Z 1 set (Supply valve: 2-position single valve)
- * JSY11M-EP-1A-07S 1 set (Spacer type ejector: Supply valve [N.C.]/Silencer exhaust)
- * JSY1300T-5Z 1 set (Supply/Release valve: 3-position closed center valve)
- * JSY11M-EP-3A-07S-N 1 set (Spacer type ejector: Supply valve [N.C.]/Release valve [N.C.]/Silencer exhaust: With vacuum break flow adjusting unit)

* Manifold specification sheet is required.

→ The asterisk denotes the symbol for the assembly.

* Prefix the product number of the mounted valve or spacer type ejector with “*.”

For the valve arrangement, the valves closest to the D side are considered the 1st stations respectively.

Below the manifold part number, write down the valves and spacer type ejectors to be mounted in order from the first station as shown in the figure.

Write down spacer type ejectors next to the valves they are to be combined with.

Spacer type ejector can only be mounted on 9 mm wide manifold block.


If the layout is complicated or you want to specify a desired layout, please specify it by means of the manifold specification sheet.

Example of Manifold Specification Sheet Entry

Valve model	Type of actuation	(J) JSY1000 series	D side	1	2	3	4	5	6	24	U side
				1	3						
		(K) Ejector				1	1	3			
		(L) Internal pilot					1	1	3		
		(N) Body type					1	1	3		
		(O) Nominal nozzle size					07	07	07		
		(P) Exhaust type						C6			
		(Q) Vacuum break flow adjusting unit							N		
Manifold option	Blanking plate	JSY11M-26P-1A									
	Individual SUP spacer	JSY11M-38P-1A-C4									
	- Omission -										
	(G) A, B port size	A, B port		C4	C4	C6	C6	C6			
		A port									
	Plug	B port							C		

Order procedure of the above order example indicates that vacuum port of spacer type ejector is either A or B port.
When only one vacuum port is desired, manifold specification sheet must be used to specify plug.

It shows the manifold specification sheet in which plug is specified on B port of the fifth station.

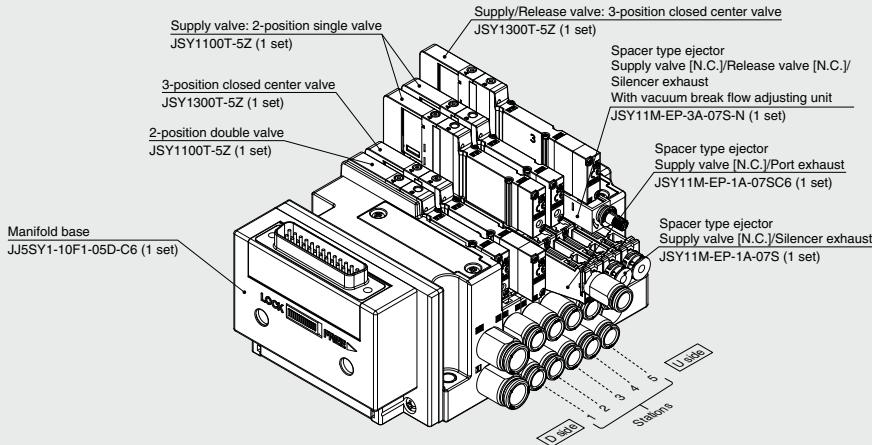How to Order Manifold Assembly (For manifold block Width 9 mm only)**Example (JJ5SY1-10F1-□-C6)**

JJ5SY1-10F1-05D-C6 1 set (Type10 5stations manifold base product number/manifold block wide 9 mm limited specifications)
 * JSY1100T-5Z 1 set (2-position single valve)
 * JSY1300T-5Z 1 set (3-position closed center valve)
 * JSY1100T-5Z 1 set (Supply valve: 2-position single valve)
 * JSY11M-EP-1A-07SC6 1 set (Spacer type ejector: Supply valve [N.C.]/Port exhaust)
 * JSY1100T-5Z 1 set (Supply valve: 2-position single valve)
 * JSY11M-EP-1A-07S 1 set (Spacer type ejector: Supply valve [N.C.]/Silencer exhaust)
 * JSY1300T-5Z 1 set (Supply/Release valve: 3-position closed center valve)
 * JSY11M-EP-3A-07S-N 1 set (Spacer type ejector: Supply valve [N.C.]/Release valve [N.C.]/Silencer exhaust: With vacuum break flow adjusting unit)


→ The asterisk denotes the symbol for the assembly.


* Prefix the product number of the mounted valve or spacer type ejector with “*.”

- For the valve arrangement, the valves closest to the D side are considered the 1st stations respectively.
- Below the manifold part number, write down the valves and spacer type ejectors to be mounted in order from the first station as shown in the figure.
- Write down spacer type ejectors next to the valves they are to be combined with.
- Spacer type ejector can only be mounted on 9 mm wide manifold block.
- If the layout is complicated or you want to specify a desired layout, please specify it by means of the manifold specification sheet.

JSY1000 Series

Dimensions: Spacer Type Ejector

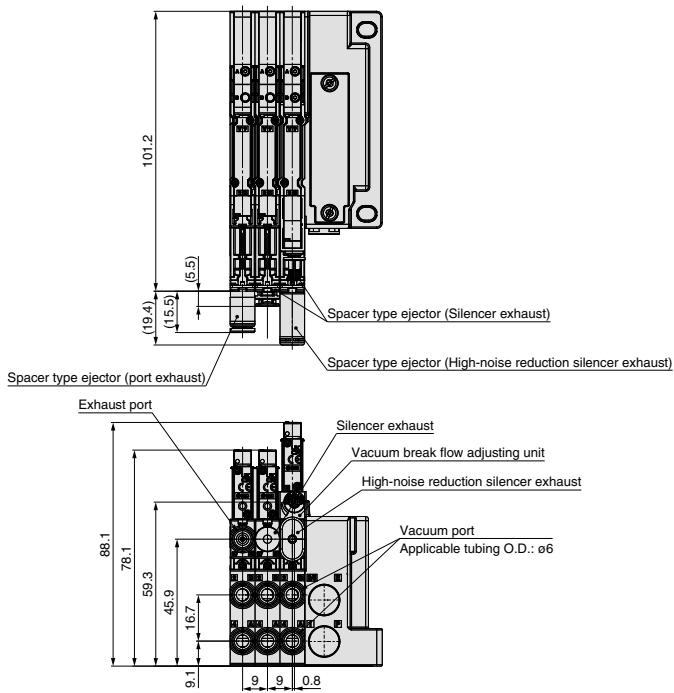

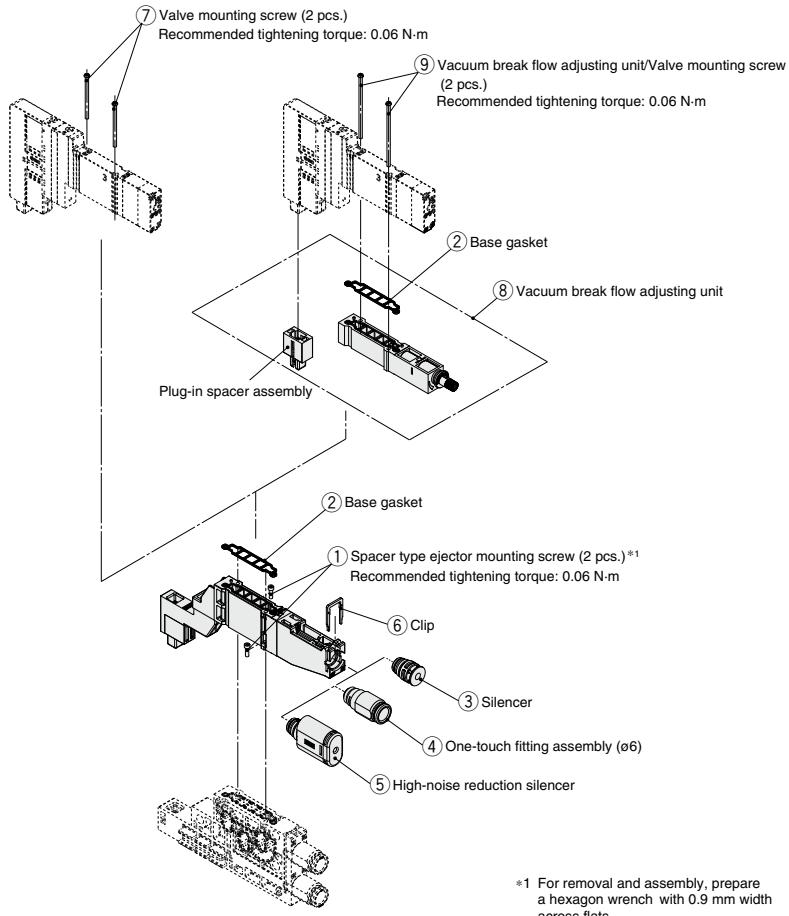Order parts for Spacer Type Ejector

No.	Description	Part no.	Note
①	Spacer type ejector mounting screw (M1.4 x 4.5)	Z2-SR1-A	10 pcs. (for 5 ejectors) Hexagon socket head cap screw (Hexagon width across flats: 0.9 mm)
②	Base gasket	JSY11M-9P-1A	10 pcs.
③	Silencer	Z2-SC1-A	The part number is for 1 piece.
④	One-touch fitting assembly (ø6)	KQSY11-C6	The part number is for 1 piece. (Sales unit: 10 pcs.)
⑤	High-noise reduction silencer	Z2-SC2-A	The part number is for 1 piece.
⑥	Clip	Z2-CL1-A	The part number is for 1 piece.
⑦	Valve mounting screw (M1.4 x 21.5)	JSY11V-23-1A	20 pcs. (for 10 valves)
⑧	Vacuum break flow adjusting unit	Z2-NU1-A	Plug-in spacer assembly, ⑨ mounting screw (2 pcs.) included
⑨	Valve/Unit mounting screw (M1.4 x 31.5)	JSY11V-23-2A	2 pcs. (1 unit).



JSY1000 Series

Spacer Type Ejector/Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve and vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Spacer Type Ejector

Design / Selection

⚠ Warning

1. Vacuum adsorption

At the time of vacuum adsorption, be sure to supply a constant supply of vacuum. Failure to do so may result in foreign matter sticking to the adsorption pad or air leakage, causing the workpiece to drop.

2. Ventilation

Provide ventilation when using a spacer type ejector in a confined area, such as in a closed control panel. For example, install a ventilation opening, etc., in order to prevent pressure from increasing inside of the confined area and to release the heat generated by the valve.

3. Mounting the suction filter

This product is not mounted with a suction filter. The vacuum ejector suctions surrounding dust and water droplets during suctioning of the workpiece. Therefore, it is necessary to avoid the entry of the dust and water droplets into the product. We recommend that you separately install a suction filter in the vacuum side piping. If water droplets or others could be suctioned, please consider installation of a drain separator for vacuum or the like.

4. Vacuum holding

Since valves are subject to air leakage, they cannot be used for applications such as holding vacuum in a pressure vessel. SMC can issue no guarantees regarding the maintenance of workpiece adsorption when using check valves. Take separate safety measures to prevent workpieces from dropping in the case of an electrical power outage, etc.

Exhaust / Exhaust Noise

⚠ Caution

1. Exhaust


The exhaust resistance should be as small as possible to obtain the full spacer type ejector performance. There should be no shield around the exhaust slit for silencer exhaust type.

Exhaust / Exhaust Noise

⚠ Caution

2. Exhaust noise

When spacer type ejector generates vacuum, noise can be heard from the exhaust port when the standard supply pressure is close to the pressure that generates peak vacuum pressure making vacuum pressure unstable. If the vacuum pressure range is adequate for adsorption, there should not be a problem. If the noise causes a problem or affects the setting of the SI Unit, change the supply pressure slightly to avoid the pressure range of the noise.

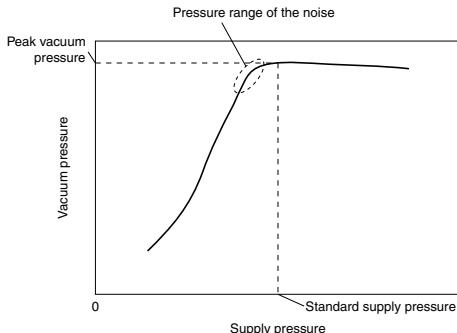

3. Exhaust air

If solid substances are sucked in through the vacuum (A, B) port, they will be discharged from the exhaust port at a high speed if the exhaust (EXH) port is opened. Therefore, do not look into the exhaust port or direct the exhaust port toward a person when the spacer type ejector is operating.

How to Mount the Product

⚠ Caution

- Do not drop, hit, or apply excessive impact to the product when handling it.
Even if the body looks undamaged, the internal components may be damaged, leading to a malfunction.

2. Load to the body

The product body is made of resin; therefore, do not apply load to the port after mounting. Prevent any kind of operation which generates moment as this may cause reduced performance or damage to the body.



JSY1000 Series

Spacer Type Ejector/Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve and vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Spacer Type Ejector

Piping

⚠ Caution

When piping to the product, be careful not to confuse the vacuum port (A, B port) with the exhaust port of the spacer type ejector. Otherwise this can result in damage or reduced performance. Apply compressed air after confirming that the piping is connected correctly.

If each exhaust piping for the port exhaust ejectors are connected and made into centralized piping, the exhausted air will flow back into the exhaust path which is not operating, and will then be exhausted from the vacuum port. Exhaust individually.

Air Consumption

⚠ Caution

When the spacer type ejector is generating vacuum, air is consumed. Therefore, if the air supply capacity is insufficient, the supply pressure may drop. As a guide for sufficient air supply capacity, we recommend that you secure a supply capacity three times or more the air consumption of the ejector.