

2/3 Port Mechanical Valve

New

RoHS

Directional
Control Valves

SY

EX600

VM

XT34

Lightweight

VM100 60 g* (Conventional model: 95 g)

VM200 90 g* (Conventional model: 111 g)


* Side ported, basic type

Mounting interchangeable with the conventional model

Available in vacuum applications (VM100)

−100 kPa to 1 MPa

(VM200: 0 to 1 MPa)

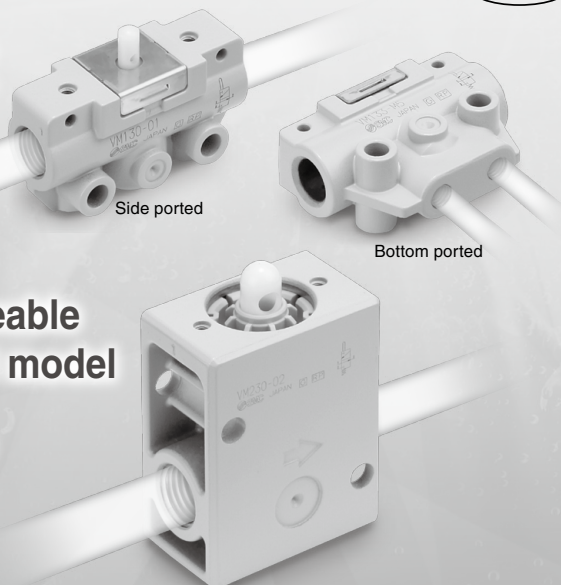


Mounting

Bracket mounting and bottom mounting are newly added.



Bracket mounting

Bottom mounting (Side ported only)

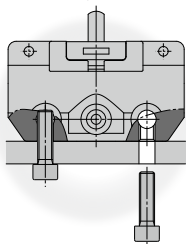

Side mounting



Panel mounting

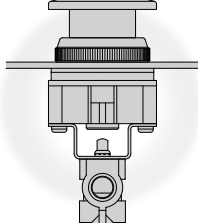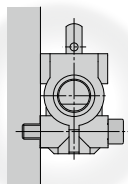

Piping direction

Side ported


Bottom ported (VM100 only)

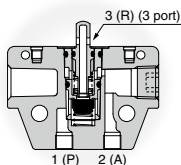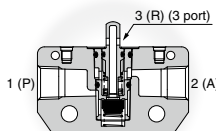

With miniature indicator*

Possible to check if air is output to the secondary port.

* VM100/Bottom ported only

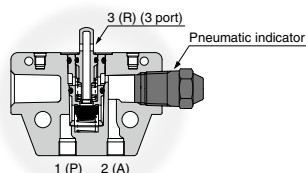

Series VM100/200




Series **VM100/200** Actuator Variations


* It is possible to change the actuator assembly and mount to basic type.

Mechanical Operation

Roller lever




One way roller lever

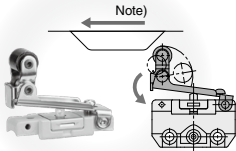


Note) If operated (by cam or dog) in the opposite direction, the valve will not be opened.


Straight plunger*

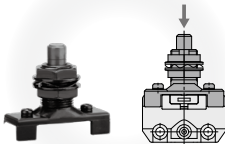

Roller plunger*

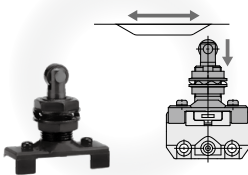


Cross roller plunger*

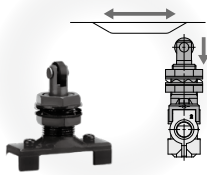


Manual Operation

Toggle lever*

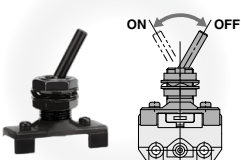


Push button (Mushroom)*

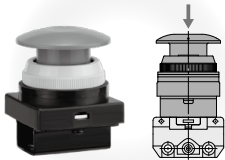


Color: Red, Black, Green, Yellow

Push button (Extended)*

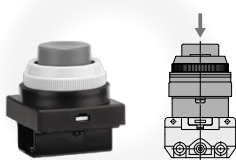

Color: Red, Black, Green, Yellow

Push button (Flush)*

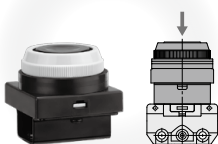

Color: Red, Black, Green, Yellow

Twist selector (2 position)*



Color: Red, Black, Green, Yellow

Key selector (2 position)




Twist selector (3 position)



Color: Red, Black, Green, Yellow

Foot pedal (VM200 only)








4 colors available for buttons



Push button (Flush) is provided with a set of 4 colors.

Mechanical Valve Variations

Model	Number of ports	Valve construction	Piping direction	Port size (Rc, NPT, G)	Page
VM1000 	2 port  (P)	3 port  (P)(R)	Poppet	Side ported Bottom ported	ø4 Hose nipple
VM100 	2 port  (P)	3 port  (P)(R)	Poppet	Side ported Bottom ported	1/8 M5 x 0.8
VM200 	2 port  (P)	3 port  (P)(R)	Poppet	Side ported	1/4
VM400 	3 port  (N.O.)(N.C.)		Balanced poppet	Side ported	1/8
VM800 	3 port  (N.O.)(N.C.)		Balanced poppet	Side ported	1/8
VZM400 	5 port  (EA)(P)(EB)		Metal spool	Side ported	1/8
VZM500 	5 port  (R1)(P)(R2)		Rubber spool	Side ported	1/8
VFM200 	5 port  (EA)(P)(EB)		Metal spool	Side ported	1/4
VFM300 	5 port  (E2)(S)(E1)		Rubber spool	Side ported	1/4

Best Pneumatics 1.2

Best Pneumatics 1.2


Directional Control Valves

SY

EX600

VM

XT34

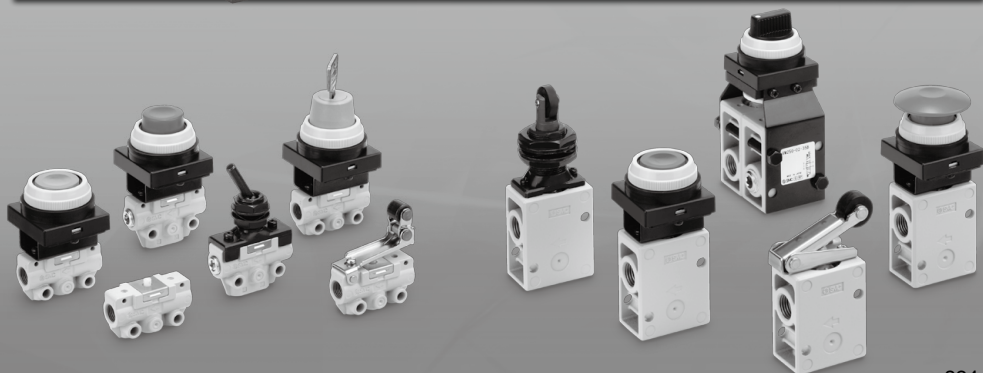

2/3 Port Mechanical Valve Series VM100

RoHS

- Compact size
- Piping options:
Side ported, Bottom ported
- Possible to choose mounting method with side ported:
Side mounting, bottom mounting using screws, or mounting with special bracket
- A variety of actuator types



Specifications

Piping	Side ported		Bottom ported	
Fluid	Air/Inert gas			
Operating pressure range	-100 kPa to 1 MPa			
Ambient and fluid temperature	-5 to 60°C (No freezing)			
Flow-rate characteristics	1 (P) ⇒ 2 (A)	2 (A) ⇒ 3 (R)	1 (P) ⇒ 2 (A)	2 (A) ⇒ 3 (R)
C [dm³/(s·bar)]	0.6	0.5	0.5	0.45
b	0.2	0.15	0.2	0.15
Cv	0.11	0.1	0.11	0.1
Lubrication ^{Note 1)}	Not required			
Port size	1/8 (Rc, NPT, G)		M5	
Weight (Basic)	60 g		67 g	
Bracket part number ^{Note 2)}	VM1-B		—	

Note 1) Use turbine oil Class 1 ISO VG32, if lubricated.

Note 2) The bracket can only be used for side mounting of side ported type.

Model

	Piping direction		Side ported				Bottom ported		Actuator	
	Body option		Standard		With bottom mounting thread		—		Actuator part number	Additional weight for actuator
	Number of ports		2 port	3 port	2 port	3 port	2 port	3 port		
Mechanical operation	Basic		VM120-01-00A	VM130-01-00A	VM120U-01-00A	VM130U-01-00A	VM122-M5-00A	VM132-M5-00A	—	—
	Roller lever	Polycetal roller	VM121-01-00A	VM131-01-00A	VM121U-01-00A	VM131U-01-00A	VM123-M5-00A	VM133-M5-00A	—	—
		Hard steel roller	VM121-01-01A	VM131-01-01A	VM121U-01-01A	VM131U-01-01A	VM123-M5-01A	VM133-M5-01A	—	11 g
	One way roller lever	Polycetal roller	VM121-01-01SA	VM131-01-01SA	VM121U-01-01SA	VM131U-01-01SA	VM123-M5-01SA	VM133-M5-01SA	—	16 g
		Hard steel roller	VM121-01-02A	VM131-01-02A	VM121U-01-02A	VM131U-01-02A	VM123-M5-02A	VM133-M5-02A	—	15 g
	Straight plunger	Polycetal roller	VM121-01-02SA	VM131-01-02SA	VM121U-01-02SA	VM131U-01-02SA	VM123-M5-02SA	VM133-M5-02SA	—	20 g
		Hard steel roller	VM121-01-05A	VM130-01-05A	VM120U-01-05A	VM130U-01-05A	VM122-M5-05A	VM132-M5-05A	VM-05B	43 g
	Roller plunger	Polycetal roller	VM120-01-06A	VM130-01-06A	VM120U-01-06A	VM130U-01-06A	VM122-M5-06A	VM132-M5-06A	VM-06B	43 g
		Hard steel roller	VM120-01-06SA	VM130-01-06SA	VM120U-01-06SA	VM130U-01-06SA	VM122-M5-06SA	VM132-M5-06SA	VM-06BS	45 g
	Cross roller plunger	Polycetal roller	VM120-01-07A	VM130-01-07A	VM120U-01-07A	VM130U-01-07A	VM122-M5-07A	VM132-M5-07A	VM-07B	43 g
		Hard steel roller	VM120-01-07SA	VM130-01-07SA	VM120U-01-07SA	VM130U-01-07SA	VM122-M5-07SA	VM132-M5-07SA	VM-07BS	45 g
Manual operation	Toggle lever		VM120-01-08A	VM130-01-08A	VM120U-01-08A	VM130U-01-08A	VM122-M5-08A	VM132-M5-08A	VM-08B	41 g
	Push button (Mushroom)	Red	VM120-01-30RA	VM130-01-30RA	VM120U-01-30RA	VM130U-01-30RA	VM122-M5-30RA	VM132-M5-30RA	VM-30AR	58 g
		Black	VM120-01-30BA	VM130-01-30BA	VM120U-01-30BA	VM130U-01-30BA	VM122-M5-30BA	VM132-M5-30BA	VM-30AB	
		Green	VM120-01-30GA	VM130-01-30GA	VM120U-01-30GA	VM130U-01-30GA	VM122-M5-30GA	VM132-M5-30GA	VM-30AG	
		Yellow	VM120-01-30YA	VM130-01-30YA	VM120U-01-30YA	VM130U-01-30YA	VM122-M5-30YA	VM132-M5-30YA	VM-30AY	
	Push button (Extended)	Red	VM120-01-32RA	VM130-01-32RA	VM120U-01-32RA	VM130U-01-32RA	VM122-M5-32RA	VM132-M5-32RA	VM-32AR	52 g
		Black	VM120-01-32BA	VM130-01-32BA	VM120U-01-32BA	VM130U-01-32BA	VM122-M5-32BA	VM132-M5-32BA	VM-32AB	
		Green	VM120-01-32GA	VM130-01-32GA	VM120U-01-32GA	VM130U-01-32GA	VM122-M5-32GA	VM132-M5-32GA	VM-32AG	
		Yellow	VM120-01-32YA	VM130-01-32YA	VM120U-01-32YA	VM130U-01-32YA	VM122-M5-32YA	VM132-M5-32YA	VM-32AY	
	Push button (Flush)	With a set of red, black, green, yellow	VM120-01-33A	VM130-01-33A	VM120U-01-33A	VM130U-01-33A	VM122-M5-33A	VM132-M5-33A	VM-33A	50 g
	Twist selector (2 position)	Red	VM120-01-34RA	VM130-01-34RA	VM120U-01-34RA	VM130U-01-34RA	VM122-M5-34RA	VM132-M5-34RA	VM-34AR	56 g
		Black	VM120-01-34BA	VM130-01-34BA	VM120U-01-34BA	VM130U-01-34BA	VM122-M5-34BA	VM132-M5-34BA	VM-34AB	
		Green	VM120-01-34GA	VM130-01-34GA	VM120U-01-34GA	VM130U-01-34GA	VM122-M5-34GA	VM132-M5-34GA	VM-34AG	
		Yellow	VM120-01-34YA	VM130-01-34YA	VM120U-01-34YA	VM130U-01-34YA	VM122-M5-34YA	VM132-M5-34YA	VM-34AY	
	Key selector (2 position)		VM120-01-36A	VM130-01-36A	VM120U-01-36A	VM130U-01-36A	VM122-M5-36A	VM132-M5-36A	VM-36A	78 g
	Twist selector (3 position)		3 port	5 port	3 port	5 port	3 port	5 port	—	111 g (Add to 2 basic units.)
		Red	VM131-01-35RA	VM151-01-35RA	VM131U-01-35RA	VM151U-01-35RA	VM133-M5-35RA	VM153-M5-35RA		
		Black	VM131-01-35BA	VM151-01-35BA	VM131U-01-35BA	VM151U-01-35BA	VM133-M5-35BA	VM153-M5-35BA		
		Green	VM131-01-35GA	VM151-01-35GA	VM131U-01-35GA	VM151U-01-35GA	VM133-M5-35GA	VM153-M5-35GA		
		Yellow	VM131-01-35YA	VM151-01-35YA	VM131U-01-35YA	VM151U-01-35YA	VM133-M5-35YA	VM153-M5-35YA		

Note 1) It is possible to change the actuator assembly and mount to basic type when an actuator part number is specified in the column.

Note 2) For push button (mushroom), push button (flush), push button (extended) and individual fastening ring, refer to page 349.

Note 3) The handle of the selector (2 position and 3 position) cannot be removed or replaced alone.

Note 4) Color of plunger: Gray (2 port), White (3 port)

How to Order

VM1 3 1 - 01 - 01 A - -

Number of ports

2	2 port
3	3 port
5	5 port (Twist selector 3 position only)

Piping direction and the height of plunger

0	Side ported	Long
1		Short
2	Bottom ported	Long
3		Short

Body option

NII	Side mounting
U	With bottom mounting thread

Note) U: Applicable only to side ported type

Port size

01	R1/8	
N01	NPT1/8	Side ported only
F01	G1/8	
M5	M5 x 0.8	Bottom ported only

Actuator type*

Actuator type	Side ported		Bottom ported	
	Long	Short	Long	Short
00	Basic	○	○	○
01	Roller lever	×	○	×
02	One way roller lever	×	○	×
05	Straight plunger	○	×	○
06	Roller plunger	○	×	×
07	Cross roller plunger	○	×	×
08	Toggle lever	○	×	×
30	Push button (Mushroom)	○	×	×
32	Push button (Extended)	○	×	×
33	Push button (Flush)	○	×	×
34	Twist selector (2 position)	○	×	×
36	Key selector (2 position)	○	×	×
35	Twist selector (3 position)	×	○	×

Combination possible: ○ Combination impossible: ×

Made to Order (Pages 345, 346)

X207	Alternate type, Mushroom push button
X219	Push-lock turn-reset type, Mushroom push button

Note) Applicable only to push button (mushroom)

Bracket option

NII	None
B	With bracket

Note) Applicable only to side ported, side mounting type.
However, not applicable to twist selector (3 position).
Bracket is shipped together, but not assembled.

Suffix for indicator

NII	None
Z	With miniature indicator

Note) Applicable only to bottom ported type

Suffix for actuator*



S	Hard steel roller
R	Red
B	Black
G	Green
Y	Yellow

Color of push button, selector



* Refer to the table on page 325 for combinations of actuator type and suffix.

Construction

Side ported

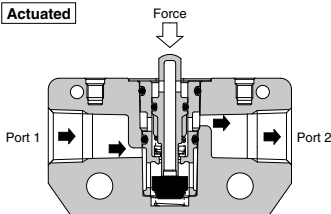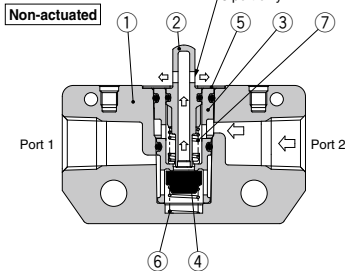

Bottom ported

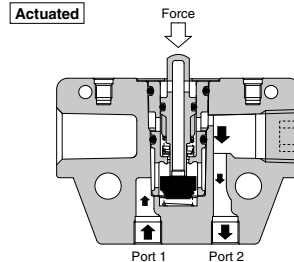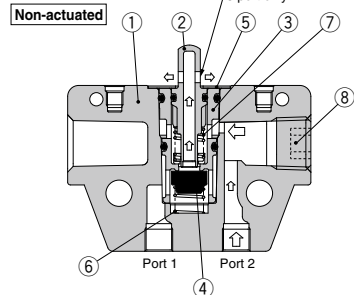

Component Parts

No.	Description	Material	Note
1	Valve	ZDC	White coated
2	Plunger	Polyacetal	2 port Gray 3 port White
3	Valve sheet	PBT	
4	Valve	NBR	


No.	Description	Material	Note
5	Plunger retainer	Stainless steel	
6	Spring	Stainless steel	
7	Spring	Spring steel	
8	Hexagon socket head taper plug	Rolled steel	

Series VM100

Series VM100/Side Ported

Basic


VM120-01-00A
VM130-01-00A
VM121-01-00A
VM131-01-00A

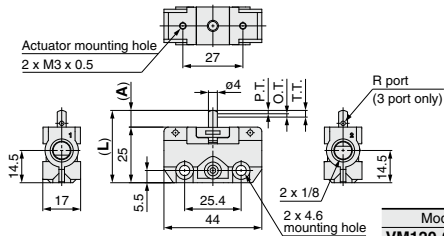


Model	L	A
VM120-01-00A	32.5	7.5
VM130-01-00A	32.5	7.5
VM121-01-00A	28.5	3.5
VM131-01-00A	28.5	3.5

Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	26 N
P.T.	1.5 mm
O.T.	1.5 mm
T.T.	3 mm


Roller lever

VM121-01-01A
VM131-01-01A
VM121-01-01SA
VM131-01-01SA

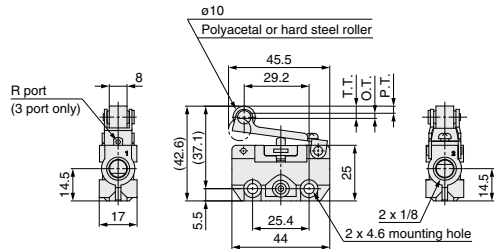


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm


One way roller lever

VM121-01-02A
VM131-01-02A
VM121-01-02SA
VM131-01-02SA

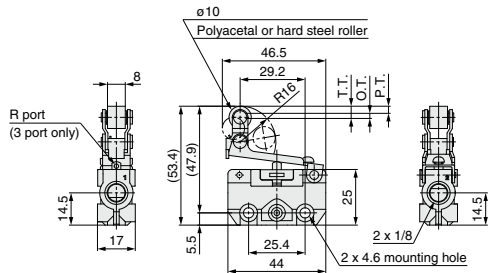


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm


Straight plunger

VM120-01-05A
VM130-01-05A

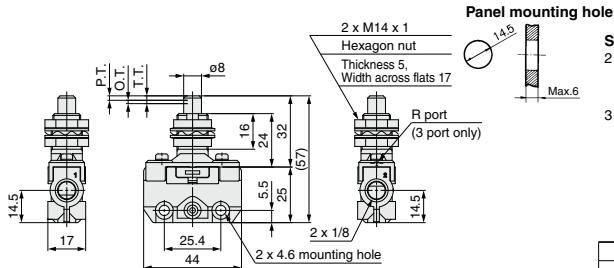


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm

Series VM100/Side Ported


Roller plunger

VM120-01-06A
VM130-01-06A
VM120-01-06SA
VM130-01-06SA

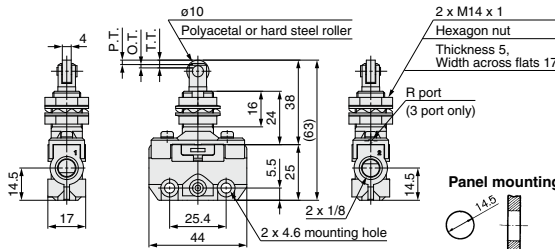


Symbol


2 port



3 port



Panel mounting hole




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm


Cross roller plunger

VM120-01-07A
VM130-01-07A
VM120-01-07SA
VM130-01-07SA

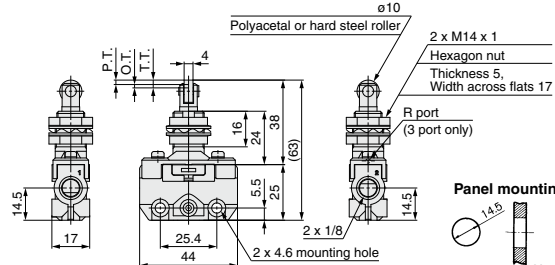


Symbol


2 port



3 port



Panel mounting hole




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm


Toggle lever

VM120-01-08A
VM130-01-08A

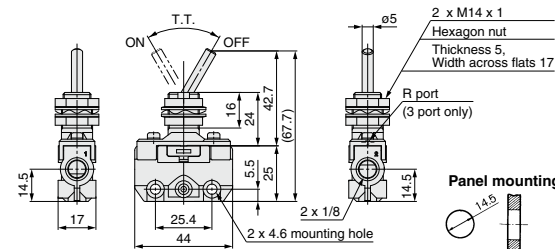


Symbol


2 port



3 port



Panel mounting hole




* 0.5 MPa supply

F.O.F.*	13 N
T.T.	60°


Push button (Mushroom)

VM120-01-30 (R, B, G, Y) A
VM130-01-30 (R, B, G, Y) A

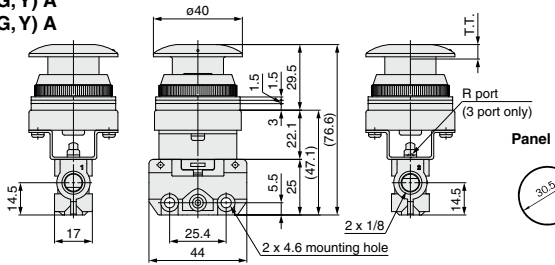


Symbol

2 port



3 port



Panel mounting hole




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Series VM100

Series VM100/Side Ported


Push button (Extended)
VM120-01-32 (R, B, G, Y) A
VM130-01-32 (R, B, G, Y) A

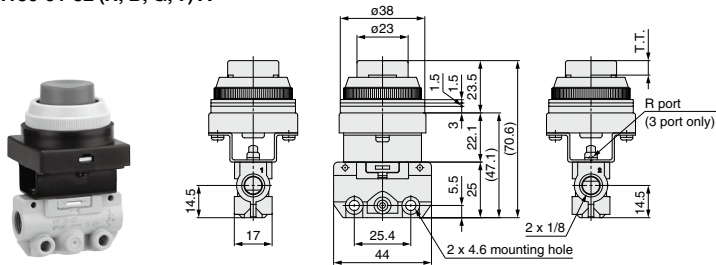


Panel mounting hole



Symbol
2 port




3 port




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Push button (Flush)
VM120-01-33A
VM130-01-33A

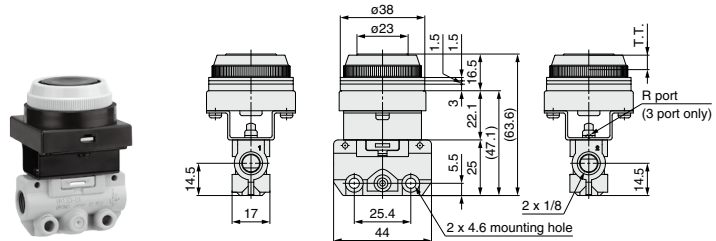


Panel mounting hole



Symbol
2 port




3 port




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Twist selector (2 position)
VM120-01-34 (R, B, G, Y) A
VM130-01-34 (R, B, G, Y) A

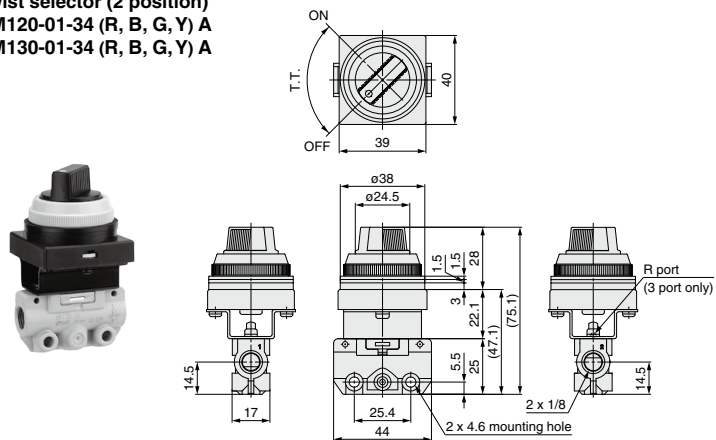


Panel mounting hole



Symbol
2 port



3 port



* 0.5 MPa supply


F.O.F.*	15 N
T.T.	90°

Series VM100/Side Ported


Key selector (2 position)

VM120-01-36A

VM130-01-36A

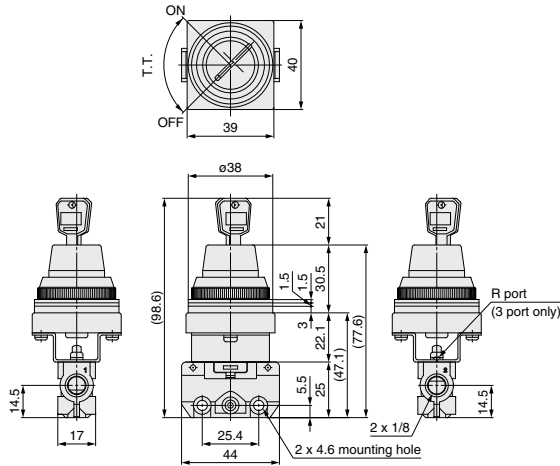


Panel mounting hole




Symbol

2 port



3 port



Key can be removed at the "on" and "off" positions.
One spare key is included.


* 0.5 MPa supply

F.O.F.*	15 N
T.T.	90°


Twist selector (3 position)

VM131-01-35 (R, B, G, Y) A

VM151-01-35 (R, B, G, Y) A

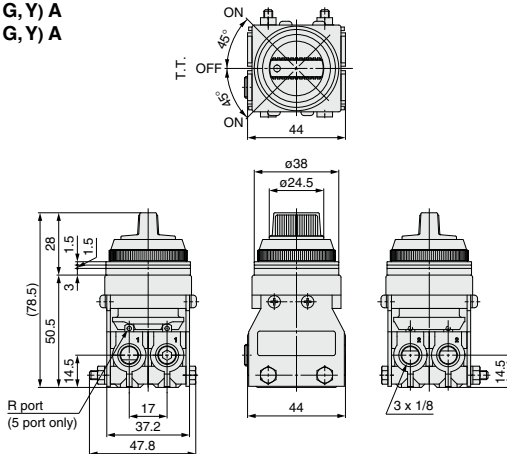


Panel mounting hole




Symbol

2 port



3 port



* 0.5 MPa supply


F.O.F.*	20 N
T.T.	45°

Series VM100

Series VM100/Side Ported

With bracket

- VM120-01-□A-B
- VM130-01-□A-B
- VM121-01-□A-B
- VM131-01-□A-B

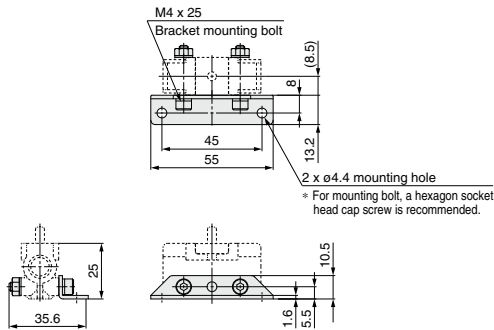


VM1-B


Component parts	Q'ty
Bracket	1
Hexagon socket head cap screw M4 x 25	2
Hexagon nut M4	2

With bottom mounting thread

- VM120U-01-□A
- VM130U-01-□A
- VM121U-01-□A
- VM131U-01-□A

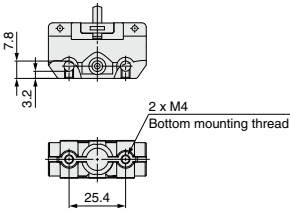


- VM131U-01-35□A
- VM151U-01-35□A

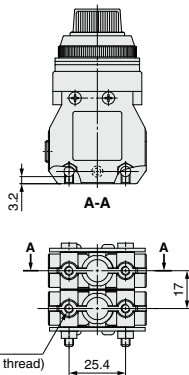

Series VM100/Bottom Ported


Basic

VM122-M5-00A
VM132-M5-00A
VM123-M5-00A
VM133-M5-00A

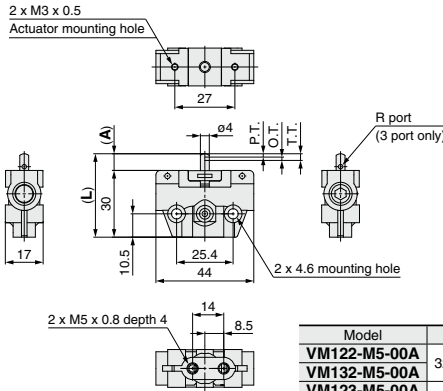


Symbol


2 port



3 port




With miniature indicator




Roller lever

VM123-M5-01A
VM133-M5-01A
VM123-M5-01SA
VM133-M5-01SA

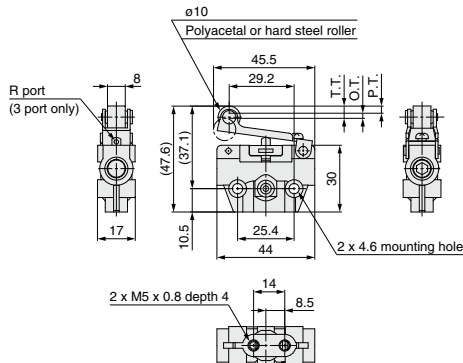


Symbol

2 port




3 port



* 0.5 MPa supply	
F.O.F.*	26 N
P.T.	1.5 mm
O.T.	1.5 mm
T.T.	3 mm


One way roller lever

VM123-M5-02A
VM133-M5-02A
VM123-M5-02SA
VM133-M5-02SA

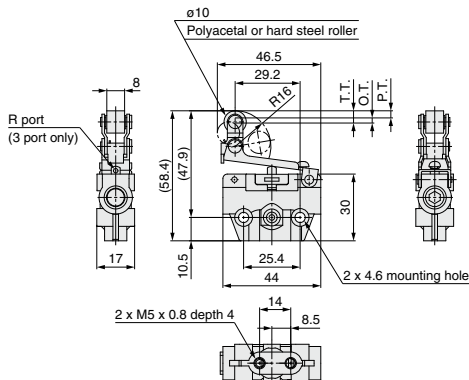


Symbol

2 port




3 port




* 0.5 MPa supply	
F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm

Series VM100/Bottom Ported


Toggle lever
VM122-M5-08A
VM132-M5-08A

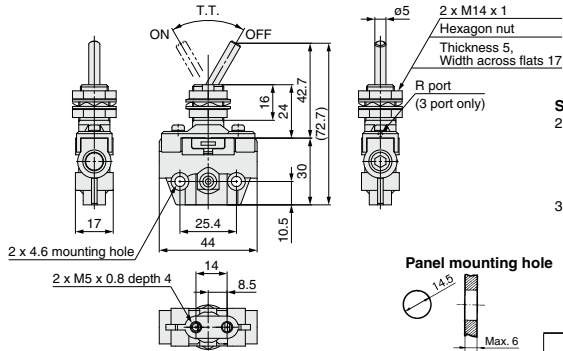

Push button (Mushroom)
VM122-M5-30 (R, B, G, Y) A
VM132-M5-30 (R, B, G, Y) A

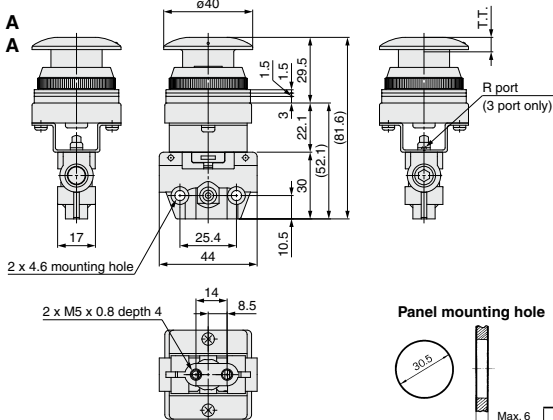


Push button (Extended)
VM122-M5-32 (R, B, G, Y) A
VM132-M5-32 (R, B, G, Y) A

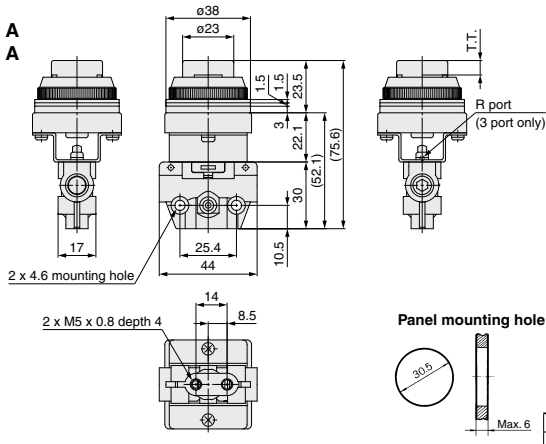


Series VM100

Series VM100/Bottom Ported


Push button (Flush)
VM122-M5-33A
VM132-M5-33A

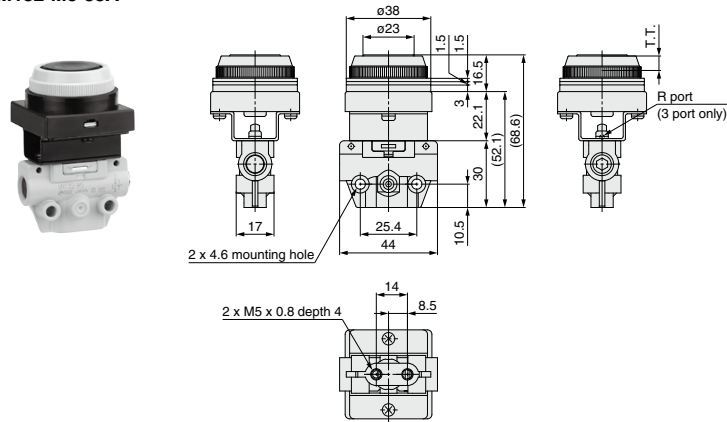


Panel mounting hole



Symbol



3 port




* 0.5 MPa supply


F.O.F.*	27 N
T.T.	6.5 mm

Twist selector (2 position)
VM122-M5-34 (R, B, G, Y) A
VM132-M5-34 (R, B, G, Y) A


Panel mounting hole



Symbol



3 port



* 0.5 MPa supply



F.O.F.*	15 N
T.T.	90°

Series VM100/Bottom Ported

Key selector (2 position)


VM122-M5-36A

VM132-M5-36A

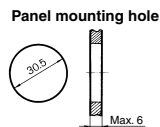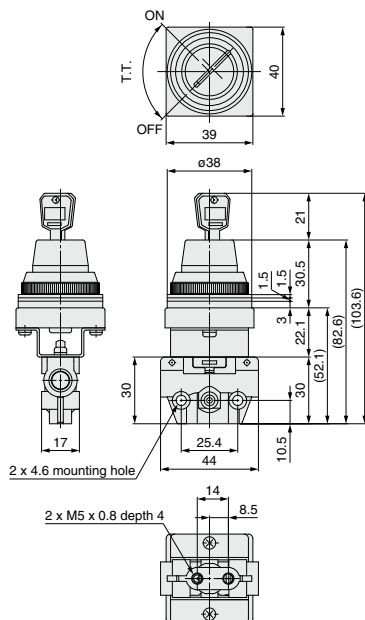


R port
(3 port only)

Symbol
2 port



3 port





Key can be removed at the "on" and "off" positions.
One spare key is included.

F.O.F.*	15 N
T.T.	90°


Twist selector (3 position)

VM133-M5-35 (R, B, G, Y) A


VM153-M5-35 (R, B, G, Y) A

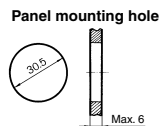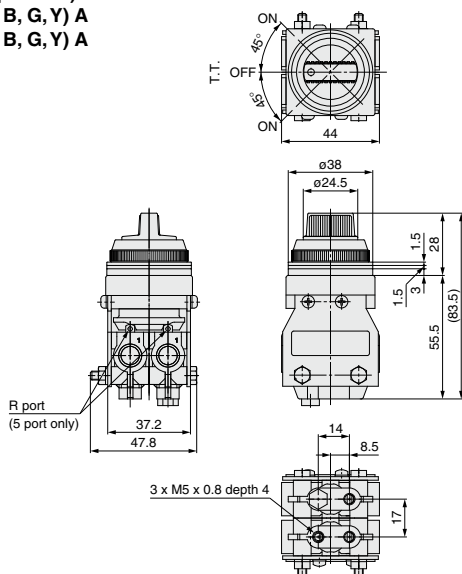

Symbol
2 port



3 port



* 0.5 MPa supply

F.O.F.*	20 N
T.T.	45°

INDEX

2/3 Port Mechanical Valve Series VM200

RoHS

- Large flow capacity
- Possible to choose mounting method:
Side mounting, bottom mounting using screws, or mounting with special bracket
- A variety of actuator types



Specifications

Fluid	Air/Inert gas	
Operating pressure range	0 to 1 MPa	
Ambient and fluid temperature	-5 to 60°C (No freezing)	
Flow-rate characteristics	1 (P) ⇒ 2 (A)	2 (A) ⇒ 3 (R)
C [dm ³ /(s·bar)]	4	3.5
b	0.4	0.1
Cv	0.87	0.69
Lubrication ^{Note 1)}	Not required	
Port size	1/4	
Weight (Basic)	90 g	
Bracket part number ^{Note 2)}	VM2-B	

Note 1) Use turbine oil Class 1 ISO VG32, if lubricated.

Note 2) The bracket can only be used for side mounting.

Model

Piping direction			Side ported				Actuator		
Body option			Standard		With bottom mounting thread		Actuator part number	Additional weight for actuator	
Number of ports			2 port	3 port	2 port	3 port			
Mechanical operation	Basic		VM220-02-00A	VM230-02-00A	VM220U-02-00A	VM230U-02-00A	—	—	
	Roller lever	Polyacetal roller	VM220-02-01A	VM230-02-01A	VM220U-02-01A	VM230U-02-01A	VM-01A	50 g	
		Hard steel roller	VM220-02-01SA	VM230-02-01SA	VM220U-02-01SA	VM230U-02-01SA	VM-01AS	60 g	
	One way roller lever	Polyacetal roller	VM220-02-02A	VM230-02-02A	VM220U-02-02A	VM230U-02-02A	VM-02A	60 g	
		Hard steel roller	VM220-02-02SA	VM230-02-02SA	VM220U-02-02SA	VM230U-02-02SA	VM-02AS	70 g	
	Straight plunger		VM220-02-05A	VM230-02-05A	VM220U-02-05A	VM230U-02-05A	VM-05A	130 g	
	Roller plunger	Polyacetal roller	VM220-02-06A	VM230-02-06A	VM220U-02-06A	VM230U-02-06A	VM-06A	120 g	
		Hard steel roller	VM220-02-06SA	VM230-02-06SA	VM220U-02-06SA	VM230U-02-06SA	VM-06AS	130 g	
	Cross roller plunger	Polyacetal roller	VM220-02-07A	VM230-02-07A	VM220U-02-07A	VM230U-02-07A	VM-07A	120 g	
		Hard steel roller	VM220-02-07SA	VM230-02-07SA	VM220U-02-07SA	VM230U-02-07SA	VM-07AS	130 g	
Manual operation	Toggle lever		VM220-02-08A	VM230-02-08A	VM220U-02-08A	VM230U-02-08A	VM-08A	110 g	
	Push button (Mushroom)	Red	VM220-02-30RA	VM230-02-30RA	VM220U-02-30RA	VM230U-02-30RA	VM-30AR	58 g	
		Black	VM220-02-30BA	VM230-02-30BA	VM220U-02-30BA	VM230U-02-30BA	VM-30AB		
		Green	VM220-02-30GA	VM230-02-30GA	VM220U-02-30GA	VM230U-02-30GA	VM-30AG		
		Yellow	VM220-02-30YA	VM230-02-30YA	VM220U-02-30YA	VM230U-02-30YA	VM-30AY		
	Push button (Extended)	Red	VM220-02-32RA	VM230-02-32RA	VM220U-02-32RA	VM230U-02-32RA	VM-32AR	52 g	
		Black	VM220-02-32BA	VM230-02-32BA	VM220U-02-32BA	VM230U-02-32BA	VM-32AB		
		Green	VM220-02-32GA	VM230-02-32GA	VM220U-02-32GA	VM230U-02-32GA	VM-32AG		
		Yellow	VM220-02-32YA	VM230-02-32YA	VM220U-02-32YA	VM230U-02-32YA	VM-32AY		
	Push button (Flush)		With a set of red, black, green, yellow	VM220-02-33A	VM230-02-33A	VM220U-02-33A	VM230U-02-33A	VM-33A	50 g
	Twist selector (2 position)	Red	VM220-02-34RA	VM230-02-34RA	VM220U-02-34RA	VM230U-02-34RA	VM-34AR	56 g	
		Black	VM220-02-34BA	VM230-02-34BA	VM220U-02-34BA	VM230U-02-34BA	VM-34AB		
		Green	VM220-02-34GA	VM230-02-34GA	VM220U-02-34GA	VM230U-02-34GA	VM-34AG		
		Yellow	VM220-02-34YA	VM230-02-34YA	VM220U-02-34YA	VM230U-02-34YA	VM-34AY		
Key selector (2 position)		VM220-02-36A	VM230-02-36A	VM220U-02-36A	VM230U-02-36A	VM-36A	78 g		
Twist selector (3 position)	3 port		5 port		3 port		5 port		
	Red	VM230-02-35RA	VM250-02-35RA	VM230U-02-35RA	VM250U-02-35RA	—	230 g (Add to 2 basic units.)		
	Black	VM230-02-35BA	VM250-02-35BA	VM230U-02-35BA	VM250U-02-35BA				
	Green	VM230-02-35GA	VM250-02-35GA	VM230U-02-35GA	VM250U-02-35GA				
	Yellow	VM230-02-35YA	VM250-02-35YA	VM230U-02-35YA	VM250U-02-35YA				
Foot pedal		VM220-02-40A	VM230-02-40A	—	—	—	340 g		

Note 1) It is possible to change the actuator assembly and mount to basic type when an actuator part number is specified in the column.

Note 2) For push button (mushroom), push button (flush), push button (extended) and individual fastening ring, refer to page 349.

Note 3) The handle of the selector (2 position and 3 position) cannot be removed or replaced alone.

Note 4) Color of plunger: Gray (2 port), White (3 port)

How to Order

VM2 3 0 - 02 - 01 S A - B -

Number of ports

2	2 port
3	3 port
5	5 port (Twist selector 3 position only)

Body option

Nil	Side mounting
U	With bottom mounting thread

Port size

02	R1/4
N02	NPT1/4
F02	G1/4

Actuator type*

00	Basic
01	Roller lever
02	One way roller lever
05	Straight plunger
06	Roller plunger
07	Cross roller plunger
08	Toggle lever
30	Push button (Mushroom)
32	Push button (Flush)
33	Push button (Extended)
34	Twist selector (2 position)
36	Key selector (2 position)
35	Twist selector (3 position)
40	Foot pedal

Made to Order (Pages 345, 346)

X207	Alternate type, Mushroom push button
X219	Push-lock turn-reset type, Mushroom push button

(Note) Applicable only to push button (mushroom)

Bracket option

Nil	None
B	With bracket

(Note) Applicable only to side mounting type.
However, not applicable to twist selector (3 position) and foot pedal.
Bracket is shipped together, but not assembled.

Suffix for actuator*


S	Hard steel roller
R	Red
B	Black
G	Green
Y	Yellow

Color of
push button,
selector


* Refer to the table on page 337
for combinations of actuator
type and suffix.

Construction

Non-actuated

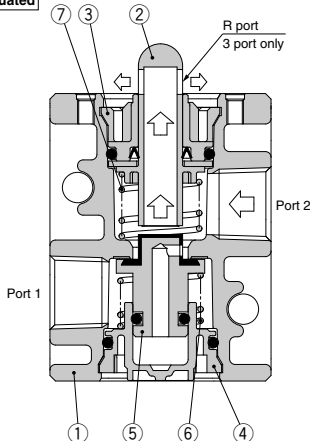

Actuated

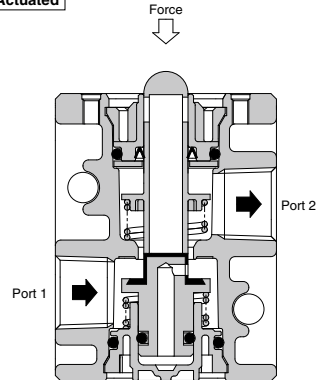


Component Parts

No.	Description	Material	Note
1	Valve	ADC	White coated
2	Plunger	Polyacetal	2 port Gray 3 port White
3	Plunger retainer	PBT	
4	Cover	PBT	
5	Inner valve	NBR, Brass	
6	Spring	Stainless steel	
7	Spring	Spring steel	


Series VM200

Series VM200


Basic
VM220-02-00A
VM230-02-00A

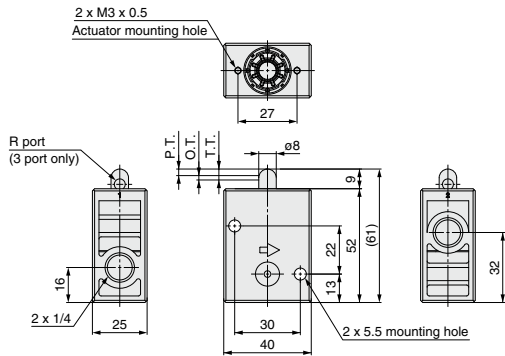

Symbol
2 port




3 port




* 0.5 MPa supply

F.O.F.*	52 N
P.T.	3 mm
O.T.	2 mm
T.T.	5 mm


Roller lever
VM220-02-01A
VM230-02-01A
VM220-02-01SA
VM230-02-01SA

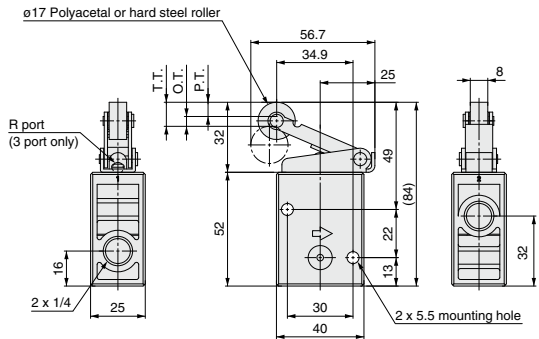

Symbol
2 port




3 port




* 0.5 MPa supply

F.O.F.*	24 N
P.T.	6.5 mm
O.T.	4.5 mm
T.T.	11 mm


One way roller lever
VM220-02-02A
VM230-02-02A
VM220-02-02SA
VM230-02-02SA

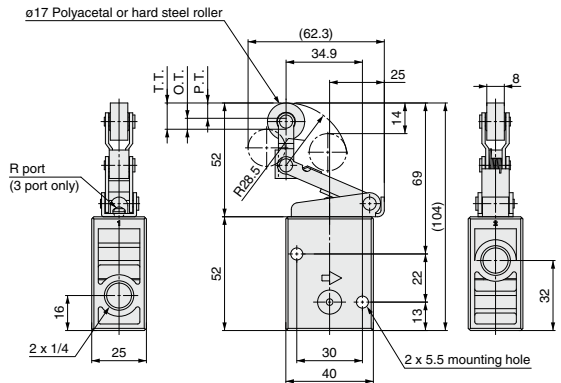

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	22 N
P.T.	7 mm
O.T.	5 mm
T.T.	12 mm

Series VM200


Straight plunger VM220-02-05A VM230-02-05A

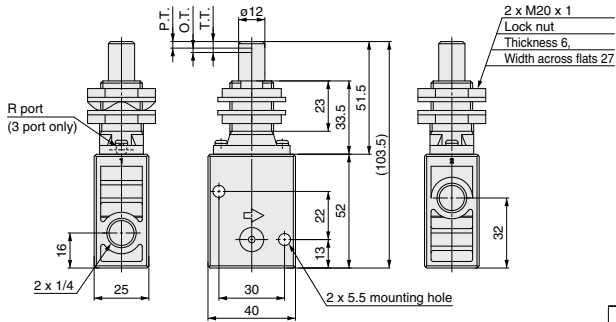


Panel mounting hole



Symbol 2 port




3 port




* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm


Roller plunger VM220-02-06A VM230-02-06A VM220-02-06SA VM230-02-06SA

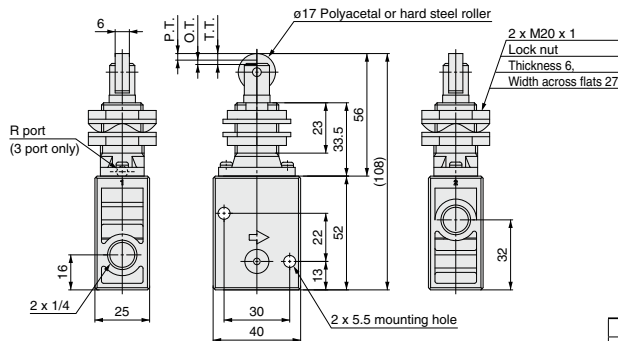


Panel mounting hole



Symbol 2 port




3 port




* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm


Cross roller plunger VM220-02-07A VM230-02-07A VM220-02-07SA VM230-02-07SA

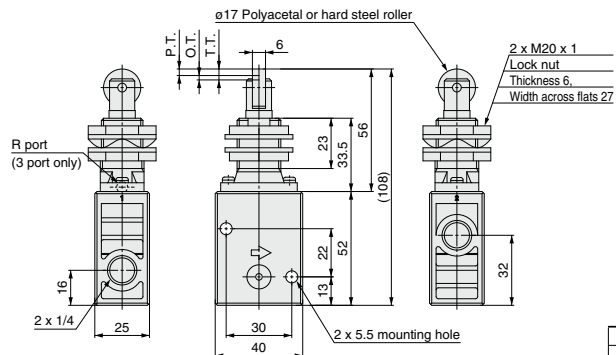


Panel mounting hole



Symbol 2 port



3 port




* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm


Series VM200

Series VM200




Toggle lever
VM220-02-08A
VM230-02-08A

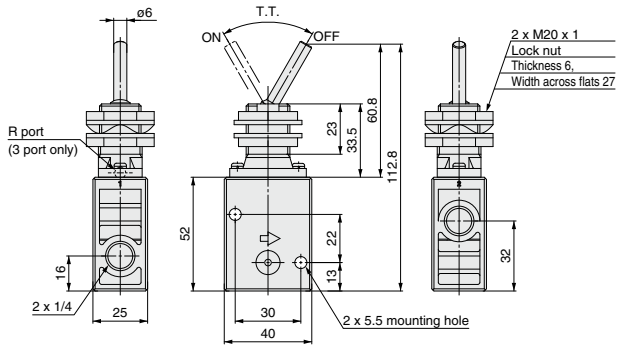

Panel mounting hole




Symbol




* 0.5 MPa supply

F.O.F.*	12 N
T.T.	60°





Push button (Mushroom)
VM220-02-30 (R, B, G, Y) A
VM230-02-30 (R, B, G, Y) A

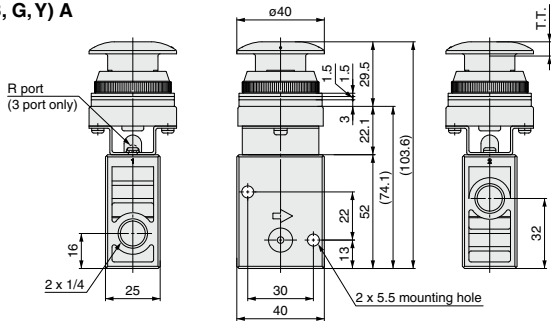

Panel mounting hole




Symbol




* 0.5 MPa supply

F.O.F.*	52 N
T.T.	6.5 mm





Push button (Extended)
VM220-02-32 (R, B, G, Y) A
VM230-02-32 (R, B, G, Y) A

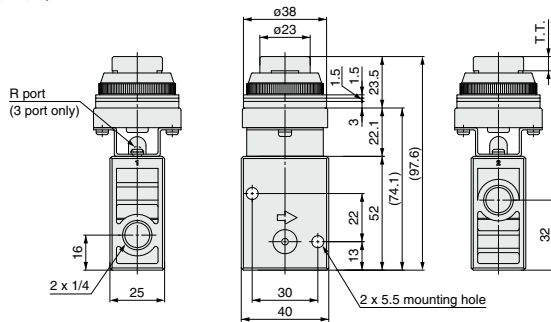

Panel mounting hole



Symbol



* 0.5 MPa supply


F.O.F.*	52 N
T.T.	6.5 mm

Series VM200


Push button (Flush)

VM220-02-33A

VM230-02-33A

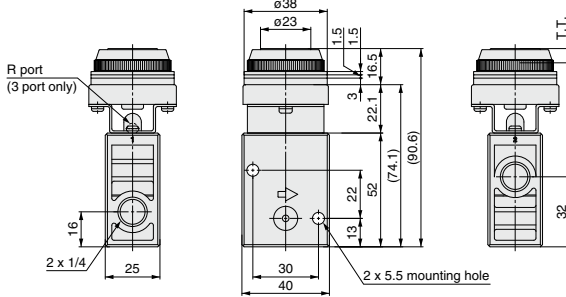


Panel mounting hole




Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	52 N
T.T.	6.5 mm


Twist selector (2 position)

VM220-02-34 (R, B, G, Y) A

VM230-02-34 (R, B, G, Y) A

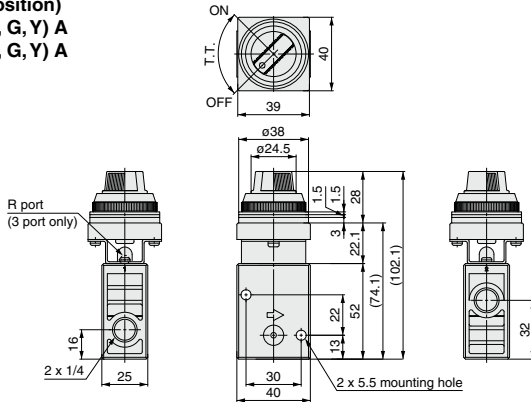


Panel mounting hole




Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	32 N
T.T.	90°


Key selector (2 position)

VM220-02-36A

VM230-02-36A

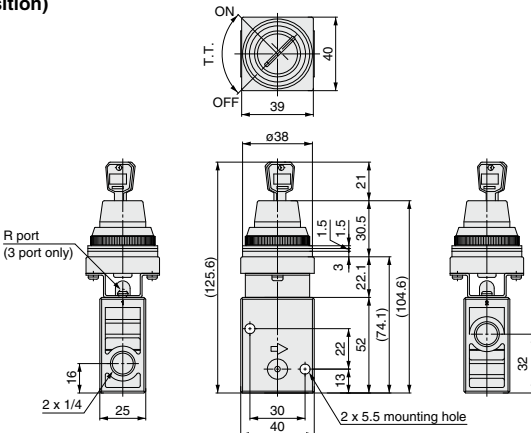


Panel mounting hole




Symbol

2 port



3 port



* 0.5 MPa supply


F.O.F.*	32 N
T.T.	90°

Key can be removed at the "on" and "off" positions.
One spare key is included.


Series VM200

Series VM200

Twist selector (3 position)
VM230-02-35 (R, B, G, Y) A
VM250-02-35 (R, B, G, Y) A

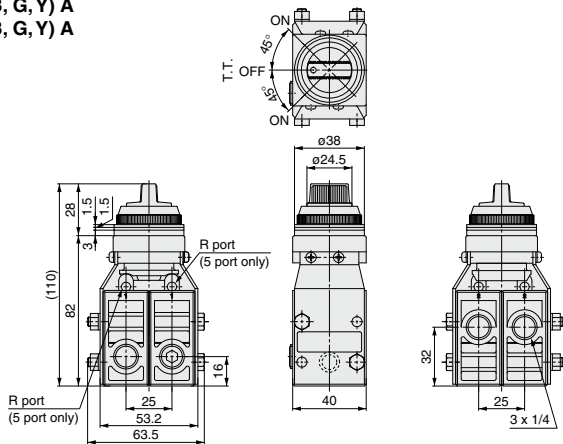


Panel mounting hole




Symbol

3 port




5 port



* 0.5 MPa supply


F.O.F.*	40 N
T.T.	45°

Foot pedal
VM220-02-40A
VM230-02-40A

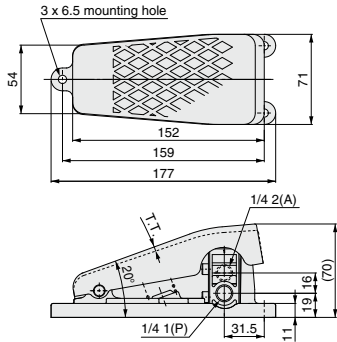


Symbol

2 port



3 port



* 0.5 MPa supply


F.O.F.*	65 N
T.T.	1.2°

Series VM200

With bracket

VM220-02-□A-B

VM230-02-□A-B

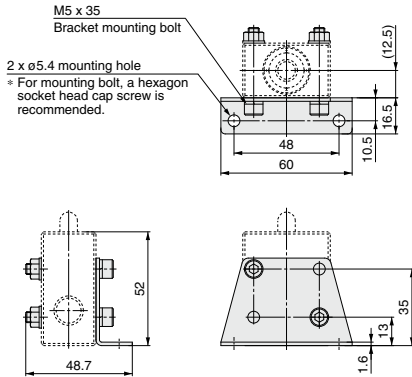


VM2-B

Component parts	Q'ty
Bracket	1
Hexagon socket head cap screw M5 x 35	2
Hexagon nut M5	2

With bottom mounting thread


VM220U-02-□A

VM230U-02-□A

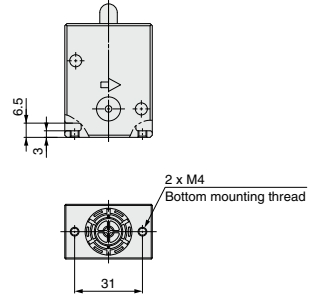

VM230U-02-35□A

VM250U-02-35□A

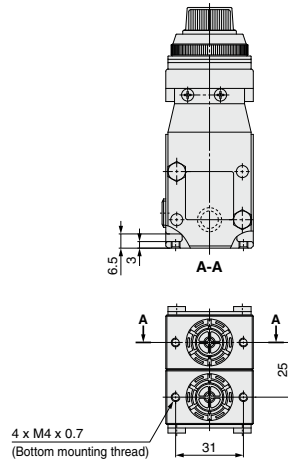

Series VM100/200

Made to Order

Please contact SMC for detailed specifications, dimensions and delivery.



1 Alternate type, Mushroom push button


Symbol

-X207


Alternate type: When pressing the push button, the valve actuates and its status is self-retained even after your hand has been released. Pressing the button again will restore the valve to its previous status.

VM120-01-30 (R, B, G, Y) A-X207

VM130-01-30 (R, B, G, Y) A-X207

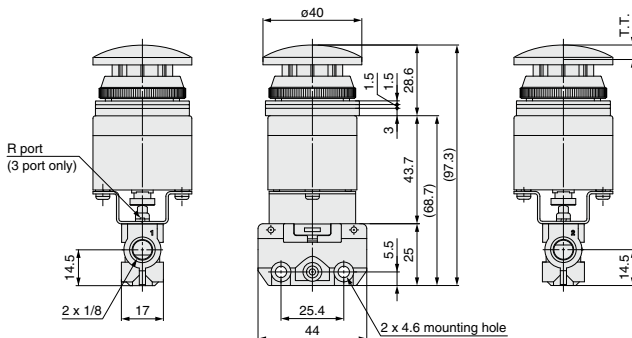


Panel mounting hole




Symbol

2 port



3 port




* 0.5 MPa supply


F.O.F.*	27 N
T.T.	6.7 mm

VM220-02-30 (R, B, G, Y) A-X207

VM230-02-30 (R, B, G, Y) A-X207

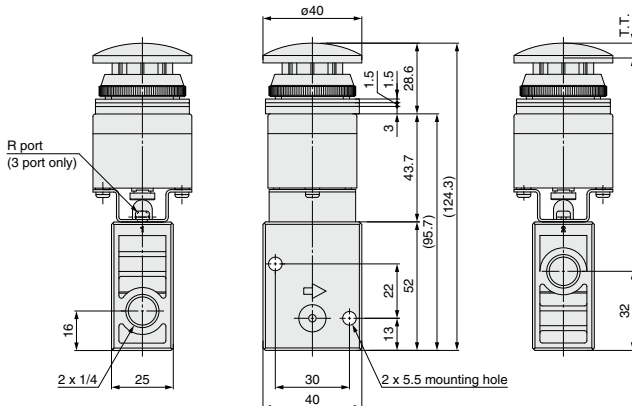


Panel mounting hole




Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
T.T.	6.7 mm

Symbol


-X219

2 Push-lock turn-reset type, Mushroom push button


Push-lock turn-reset type: When pressing the push button, it is locked in this status. Turning the button clockwise will reset it.

VM120-01-30 (R, B, G, Y) A-X219


VM130-01-30 (R, B, G, Y) A-X219

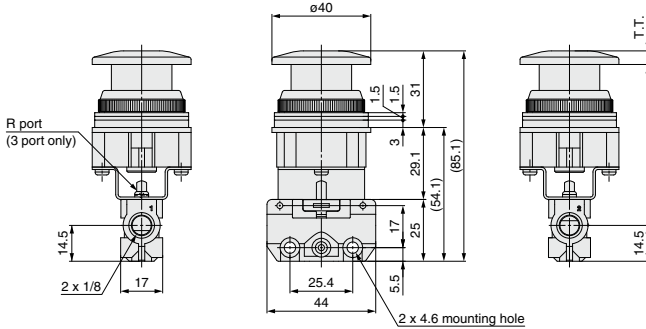


Panel mounting hole



Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	27 N
T.T.	5.8 mm

VM220-02-30 (R, B, G, Y) A-X219


VM230-02-30 (R, B, G, Y) A-X219

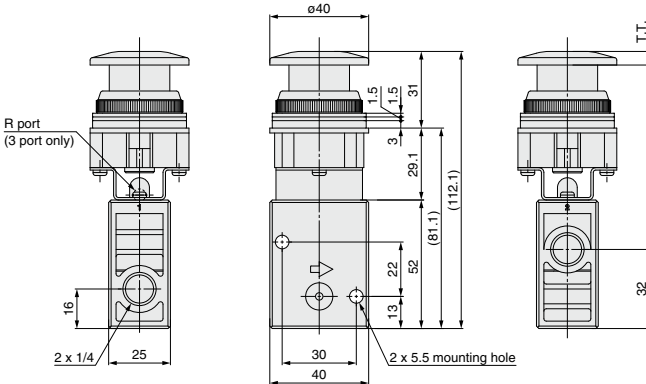


Panel mounting hole



Symbol
2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
T.T.	5.8 mm




Series VM100/200 Specific Product Precautions 1

Be sure to read before handling.

Refer to page 1574 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Definition of Symbol

The abbreviations F.O.F. / P.T. / O.T. / T.T. shown in this catalog are detailed below.

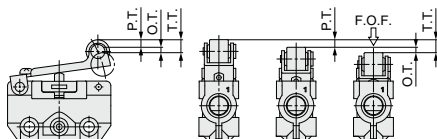

- **F.O.F. <Full Operating Force>**
Required force to total travel position
- **P.T. <Pre-travel>**
From free position to initial valve operating position
- **O.T. <Over Travel>**
From initial valve operating position to total travel position
- **T.T. <Total Travel>**
From free position to total travel position

Design

Warning

1. **This product cannot be used for applications in which the pressure must be sealed.**

Since the VM100 and VM200 are poppet type valves, fluid flows backward when the pressure on port 2 (A) rises.

Since the valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum).

2. **Not suitable for use as an emergency shutoff valve**

This mechanical valve is not designed for safety applications such as an emergency shutoff valve. If the valves are used for the mentioned applications, additional safety measures should be adopted.

Mounting

Warning

1. **When installing the mechanical operation type mechanical valves, adjust the position so that the valves do not operate over the operating limit range.**

Operating over the limit could damage the mechanical valve or actuator, and lead to equipment malfunction.

Mounting

Warning


2. **P.T. depends on pressure or differences between the individual product specifications. In order to ensure that the valve opens, keep the operating stroke value for the mechanical operation type within the range specified by the following formula.**

Operating stroke = (P.T. + 0.5 x O.T.) to (P.T. + O.T. - 0.1)

Operating Stroke Range

Series	Actuator type	Operating stroke (mm)
VM100	Basic	2.2 to 2.9
	Roller lever	4.3 to 5.4
	One way roller lever	4.3 to 5.4
	Straight plunger	2.7 to 3.4
	Roller plunger	2.7 to 3.4
	Cross roller plunger	2.7 to 3.4
VM200	Basic	4 to 4.9
	Roller lever	8.7 to 10.9
	One way roller lever	9.5 to 11.9
	Straight plunger	4.5 to 5.4
	Roller plunger	4.5 to 5.4
	Cross roller plunger	4.5 to 5.4

For straight and roller plunger types, there is a groove indicating P.T. and T.T. for stroke adjustment.

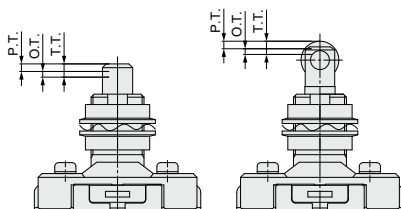

3. **Do not make any alterations to the valve body, such as enlarging the body mounting holes.**

As doing so could lead to unexpected abnormal conditions such as air leakage.

Operation

Warning

1. **Operate the manual operation type mechanical valves (such as push button, twist selector and toggle lever types) with your finger.**

The use of equipment such as a cylinder, cam or hammer, can result in the actuator and the valve being damaged.

Do not operate over the operation limit. If excessive operation force is applied over total travel position, actuator part can get deformed and lead to equipment malfunction.



Series VM100/200 Specific Product Precautions 2

Be sure to read before handling.

Refer to page 1574 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Operation

⚠ Warning

- When operating the mechanical operation type mechanical valves, select the angle and the maximum speed limit of cam and dog so that valves do not operate over the following maximum values.


If operated over the maximum values, impact force from cam and dog will be applied to the actuator, leading to damage of the actuator or the valve itself.

Cam and Dog

Series	Actuator type	Angle limit of cam and dog	Max. speed limit of cam and dog (m/s)
VM100	Roller lever	30°	0.7
		45°	0.3
	One way roller lever	30°	0.7
		45°	0.3
	Straight plunger	—	0.2
	Roller plunger	30°	0.3
VM200	Roller lever	30°	0.7
		45°	0.3
	One way roller lever	30°	0.7
		45°	0.3
	Straight plunger	—	0.2
	Roller plunger	30°	0.3
	Cross roller plunger	30°	0.3


[Not acceptable]

Over 45° (Abrupt angle)




[Acceptable]

45° or less




[Not acceptable]

Max. travel

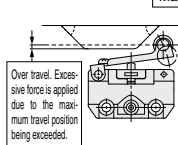

[Acceptable]

Max. travel

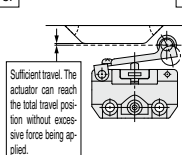

Cam and Dog Material

Roller material	Cam and dog material	Surface finish of cam and dog
Polycetal	Steel	6.3 z or less
Hard steel	Steel, Resin	25 z or less

⚠ Caution

- If the operating condition is maintained for long periods of time, it may take some time for the valve to restart due to the adherence of the seals and there might be a delay for recovery.

Air Supply

⚠ Warning

- Operable fluid is either air or inert gas only.

It cannot be used for corrosive gas and fluid.

⚠ Caution

- Grease is used for the inside of the valves.
Grease may enter into the outlet port of the valve.
- When using vacuum pressure for the VM100, supply vacuum pressure to P port.

Operating Environment

⚠ Warning

- Do not operate it in an area in which fluids such as oil, coolant, or water splash on it or dust comes in contact with it.

Because it does not have a waterproof or dustproof construction, fluids or dust could enter the valve, leading to malfunction. Therefore, take measures such as providing a protective cover to prevent direct exposure.

- Do not expose the product to direct sunlight for an extended period of time.

Maintenance

⚠ Warning

- Perform inspections on a regular basis as necessary, such as at the beginning of an operation, to make sure that the mechanical valve operates properly.

- Do not disassemble, modify or repair the product.

This may lead to malfunction of equipment, injury and equipment damage. Please contact SMC for repairs and maintenance of the product.



Series VM100/200 Specific Product Precautions 3

Be sure to read before handling.

Refer to page 1574 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.


How to Change the Buttons

Caution

Replace the button in the following manner to change color of the button.

1. Push button (Flush type)


- Installation — Of the four colors, red, green, black, and yellow, select and align the protruding portion of the button with the recessed portion of the body and push in.
- Removal — Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.

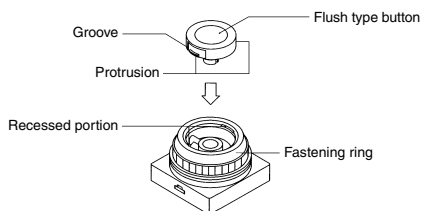

2. Push button (Mushroom and Extended types)


At the time of shipment, only 1 button of the color that you specified is attached to the body.

	Mushroom type	Extended type
Installation	Align the protruding portion of the button with the recessed portion of the body and push in. (Use the mark on the button as a reference to align the protruding part.)	Align the protruding portion of the button with the recessed portion of the body and push in.
Removal	Placing your finger under the collar of the button on the side of the mark, tilt it upward.	Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.

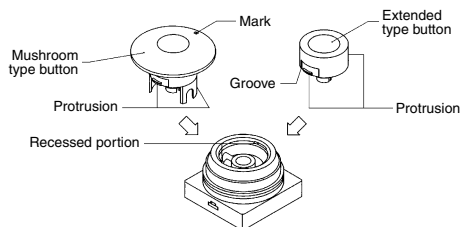


How to remove a mushroom type button

How to remove at panel mount

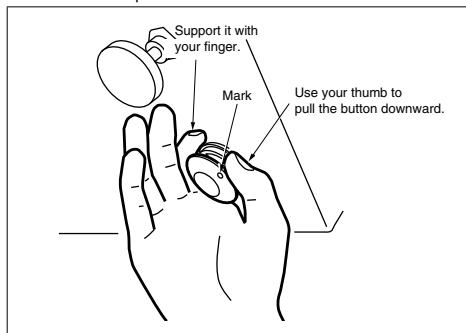

Removing the valve as a unit

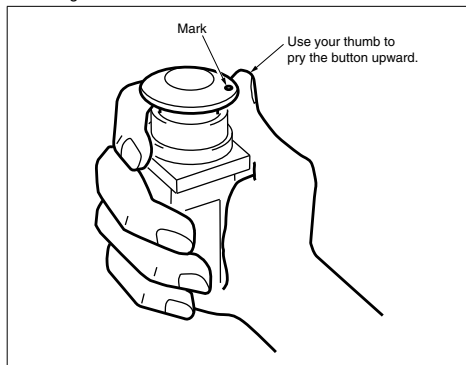

Replacement Parts

1. Use the part numbers listed below to order individual mushroom, extended, or flush type buttons.

Color	Mushroom type button	Extended type button
Red	3402186R	3402187R
Black	3402186B	3402187B
Green	3402186G	3402187G
Yellow	3402186Y	3402187Y

Color	Flush type button
Red	3402188R
Black	3402188B
Green	3402188G
Yellow	3402188Y

2. Use the part number below to order individual fastening ring.
Fastening ring: 3402184



Series VM100/200 Specific Product Precautions 4


Be sure to read before handling.

Refer to page 1574 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Series VM-X219 How to Mount Panel

[Task 1] Removing the push button and fastening ring


Remove them from the body turning them counterclockwise in the order of the push button and fastening ring.

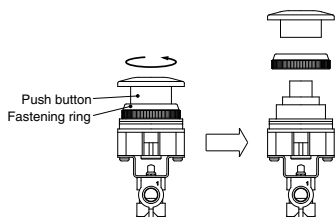

[Task 2] Mounting the valve to the panel

Insert the valve to the panel and fix it with a fastening ring.

Remove three spacers attached to the valve depending on the panel thickness.

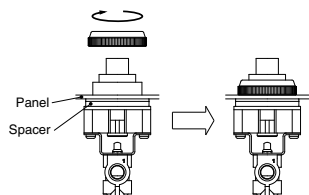

[Task 3] Mounting the push button

Tighten the push button clockwise by hand and further tighten it until load is applied.

Note) When the push button is not tightened enough, the valve may not output correctly after operating the push button. In other cases, the valve outputs temporarily, but when it is in the holding state, the valve may stop outputting. In this situation, tighten the push button again.

