


Compact Proportional Solenoid Valve

Series PVQ



Repeatability: **3%** or less
 Hysteresis: **10%** or less

Fluid	Flow rate control range ^{Note)}	Series
Air, Inert gas	0 to 6 l/min	PVQ10
	0 to 100 l/min	PVQ30

Note) Varies depending on the model.

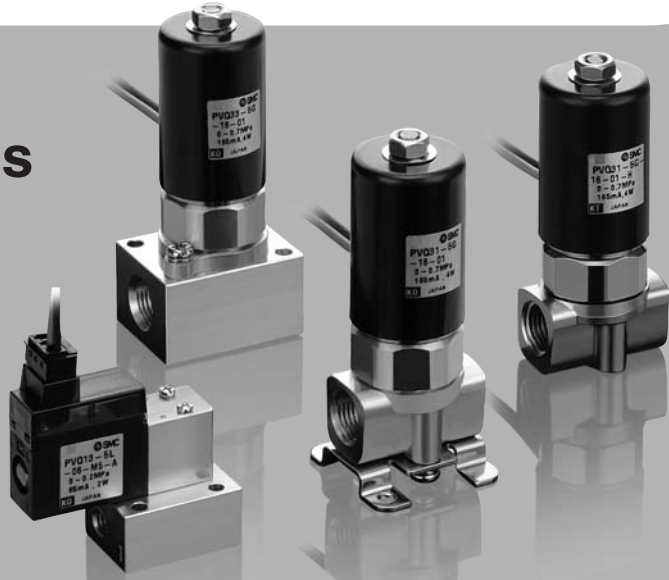

Control the flow rate smoothly according to the current

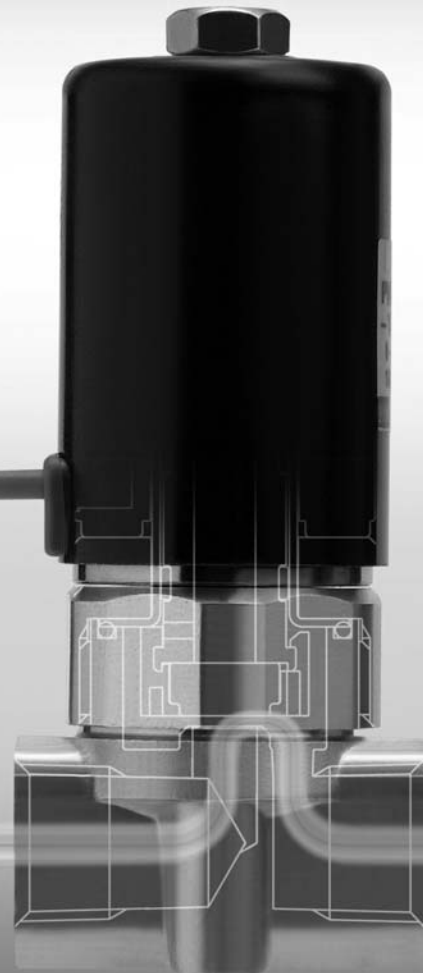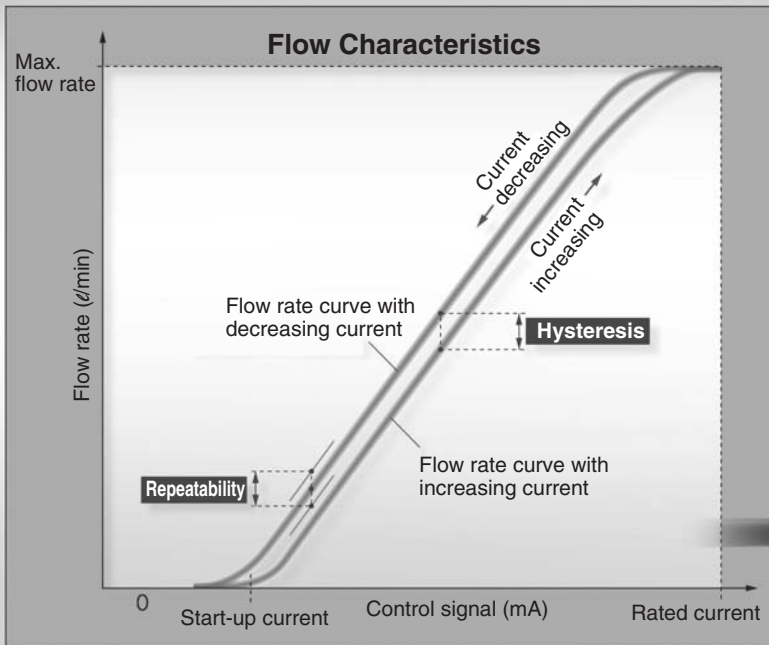

ARJ

AR425
to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP

VER

VEA

VY2

VBA
VBAT

AP100

- **Service life: Lasts 25 million cycles.** (PVQ30)
(SMC in-house life test conditions)

Specially coated sliding surface realized 25 million cycles within set operating range

- **Body material: Equivalent to C37 or Stainless Steel 304** (PVQ30)

Seal material: FKM (PVQ10, PVQ30)

- **Valve returns to closed position when power supply is turned off.**


- **Leakage amount: 5 cm³/min or less at OFF**

- **Can be used with vacuum.** (Minimum operating pressure 0.1 Pa-abs)

- **Operation noise during opening/closing of the valve reduced**

PVQ10	ON	30 dB or less	PVQ30	ON	43 dB or less
	OFF	32 dB or less		OFF	50 dB or less

* Background noise: 20 to 25 dB * Background noise: 20 to 25 dB

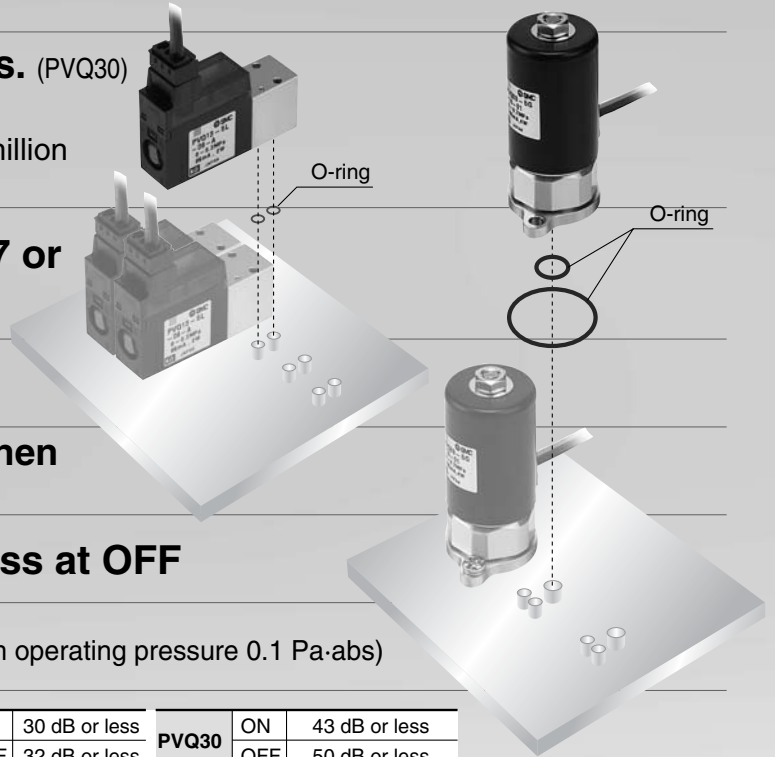


- **Can be mounted on manifolds**

When continuously energizing adjacent valves at the same time, ambient temperature rises since the coil generates heat. Implement measures to exhaust excess heat so that the temperature remains within the range of the table on the right.

Table: Coil outer surface temperature range

Model	Coil outer surface temperature
PVQ10	90°C or less
PVQ30	100°C or less


* Ambient temperature: 50°C at the valve proximal section (approx. 1 mm) when the maximum current is applied

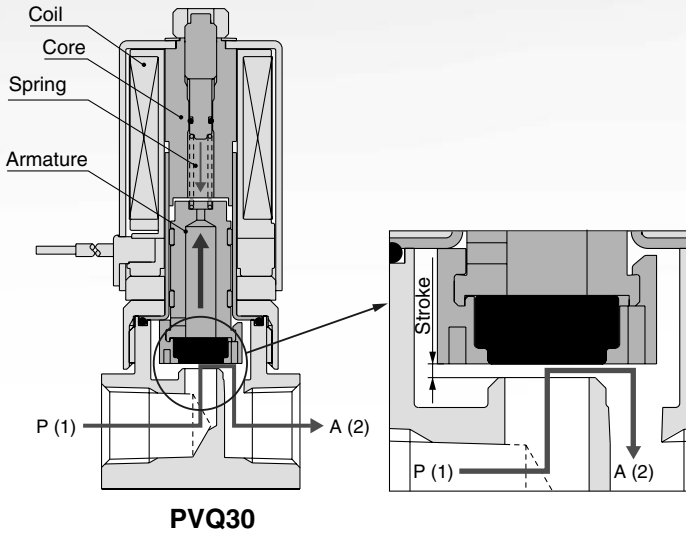

Working Principle


The armature is attracted to the core by electromagnetic force as the coil is energized. When the applied current varies, the attraction force also varies proportionally to it. The flow rate is controlled by the movement (stroke) of the armature, depending on the balance between this attraction force and the spring load.

Note) Sliding resistance at this point is the hysteresis of the flow.

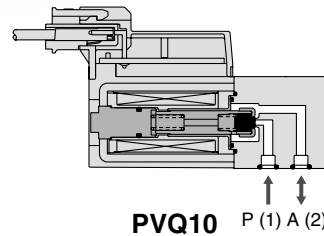


Proportional Solenoid Valve

Flow rate can be controlled smoothly with one proportional solenoid valve by current control.

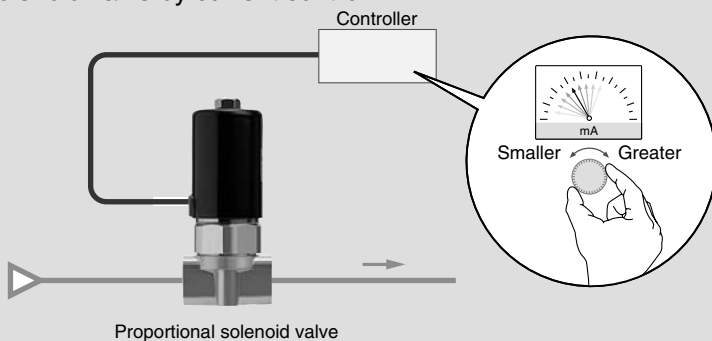

Conventional (2 port valve)



One 2-port valve is required for each flow rate.

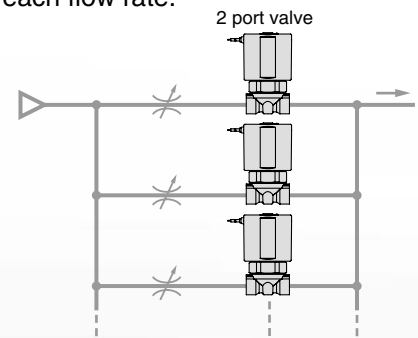



Applications

Air-blow



- Blow-off of debris or water.
- Work transportation

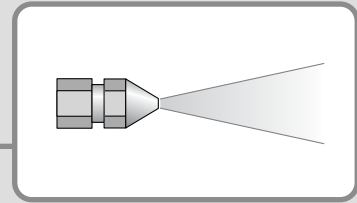

Spin control of handpiece

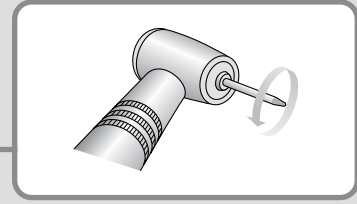


Blood pressure gauge

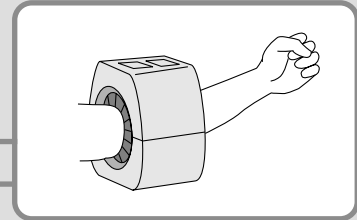

Vacuum chamber supply flow control

Smooth air supply/exhaust is possible by reducing the initial air supply. Prevents dust being stirred up inside the chamber.

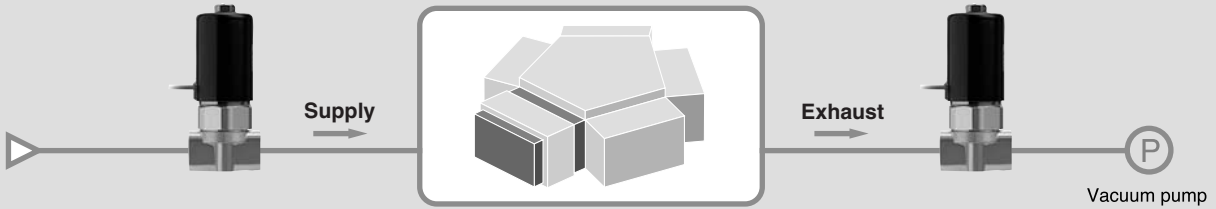

ARJ

AR425 to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP


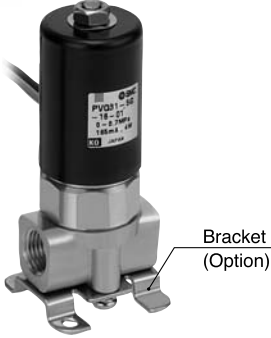

VER

VEA

VY2

VBA
VBAT

AP100

Model	PVQ13				PVQ31		PVQ33	
Piping type	Base mounted				Body ported		Base mounted	
								
Valve construction	Direct operated poppet				Direct operated poppet			
Valve type	N.C.				N.C.			
Orifice size (mm)	0.3	0.4	0.6	0.8	1.6	2.3	4	
Max. operating pressure (MPa)	0.7	0.45	0.2	0.1	0.7	0.35	0.12	
Flow rate (ℓ/min)	0 to 5	0 to 6		0 to 5	0 to 100		0 to 75	
Applied current (Power supply)	0 to 85 mA (24 VDC) 0 to 170 mA (12 VDC)				0 to 165 mA (24 VDC) 0 to 330 mA (12 VDC)			
Port size	M5				1/8			

Series PVQ Model Selection

$\Delta P = (P_1 - P_2)$ MPa
 ΔP : Pressure differential
 P_1 : Inlet pressure
 P_2 : Outlet pressure

<To use orifice $\phi 1.6$ (See PVQ30: Chart 1)>

Condition 1. $P_1 = 0.7$ MPa, $P_2 = 0$ MPa (Atmospheric pressure)

Refer to curve A when ΔP is 0.7 MPa.

- Ex) At increasing current, the flow rate when 140 mA current is applied is 85 ℓ /min. (See ①.)
 If current decreases at this point, the flow rate may not change by 135 mA due to hysteresis. (See ②.)
 The flow rate at increasing current and decreasing current are not the same due to hysteresis. (① 85 ℓ /min., ③ 93 ℓ /min.)

Condition 2. $P_1 = 0.7$ MPa, $P_2 = 0.2$ MPa

Refer to curve B when ΔP is 0.5 MPa.


- Ex) At increasing current, the flow rate when 150 mA current is applied is 65 ℓ /min. (See ④.)
 If the outlet pressure P_2 increases by 0.15 MPa, ΔP decreases by 0.15 MPa and becomes 0.35 MPa (See curve C), and the flow rate when the same current is applied is 40 ℓ /min. (See ⑤.)

- The flow rate decreases due to change (increase) in outlet pressure, even if the inlet pressure and current value are the same.

Condition 3. In a vacuum

- For vacuum specifications, the operating pressure range is from 0.1 Pa-abs to max. operating pressure differential.
- A(2) port is applicable with vacuum pressure.

<Chart 1> PVQ30 ($\phi 1.6$)

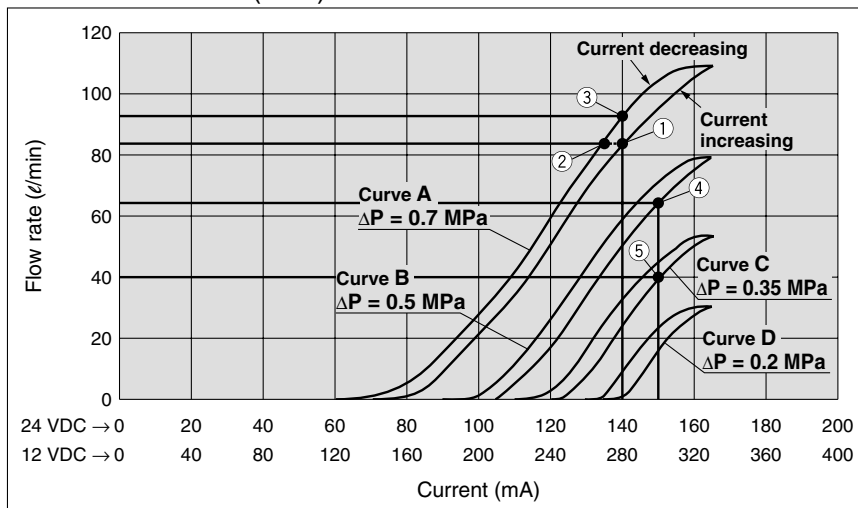

● Q. Required flow rate = 0 to 75 ℓ/min.

P_1 = No conditions, P_2 = 0 MPa (Atmospheric pressure)


In this case, all orifice sizes of PVQ30 series satisfy the required flow rate. (Flow rate when rated current is applied)
 The table below shows the pressure differentials to satisfy the required flow rate. In the flow rate characteristic charts, a pressure differential over the flow rate indicated by the dashed line (75 ℓ/min.) up to the max. operating pressure differential will satisfy the required flow rate.

Table. Pressure differential to satisfy required flow rate = 0 to 75 ℓ/min.


	ø1.6	ø2.3	ø4.0
Pressure differential (ΔP)	0.5 to 0.7 MPa	0.25 to 0.35 MPa	0.12 MPa

$\Delta P = (P_1 - P_2)$ MPa
 ΔP : Pressure differential
 P_1 : Inlet pressure
 P_2 : Outlet pressure


PVQ30 (ø1.6)

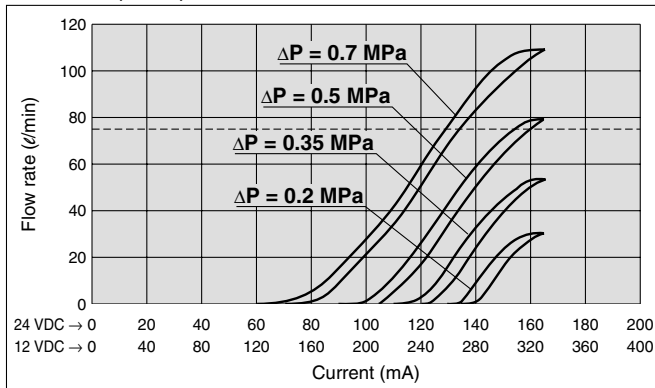

PVQ30 (ø2.3)

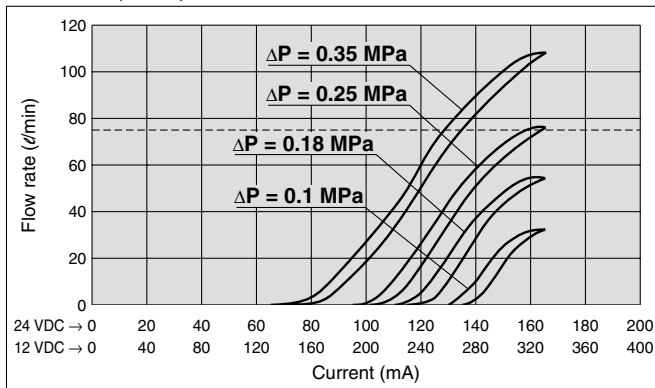

PVQ30 (ø4.0)

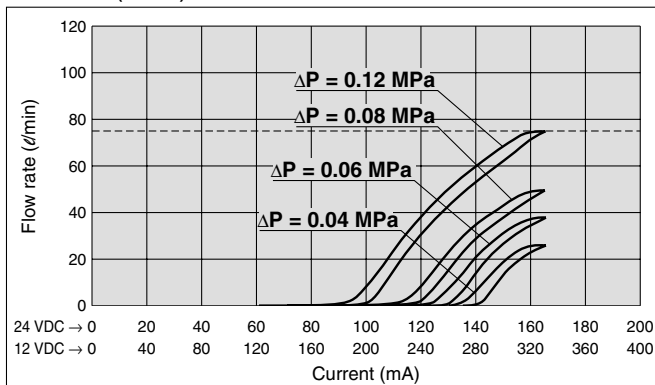

● Note

- 1) Follow the same procedure for selecting PVQ10 series.
- 2) Flow rate depends on individual differences between valves and piping conditions. Refer to flow characteristic chart to select the model with adequate margin for required flow rate.

- ARJ
- AR425 to 935
- AMR
- ARM
- ARP
- IR
- IRV
- VEX1□
- SRH
- SRP
- SRF
- ARX20
- VCHR
- ITV
- IC
- PVQ**
- VEF VEP
- VER
- VEA
- VY2
- VBA VBAT
- AP100

Compact Proportional Solenoid Valve Series *PVQ10*

How to Order

Base mounted

PVQ 13 - 5 L - 03 - M5 - A



Valve type
13 N.C.

Voltage
5 24 VDC
6 12 VDC

Electrical entry

L	L plug connector	
M	M plug connector	

With / Without lead wire

Nil	With lead wire
O	Without lead wire

Body / Seal material

Symbol	Body	Seal
A	C36	FKM

Port size

Nil	Without sub-plate (with mounting screw M1.7 x 17L, 2 pcs.)	
M5	With sub-plate M5 x 0.8	

Orifice size

Symbol	Orifice dia.	Max. operating pressure
03	0.3 mmø	0.7 MPa
04	0.4 mmø	0.45 MPa
06	0.6 mmø	0.2 MPa
08	0.8 mmø	0.1 MPa

Specifications

Standard specifications	Valve construction	Direct operated poppet	
	Fluid	Air, Inert gas	
	Seal material	FKM	
	Body material	C36	
	Fluid temperature	0 to +50°C	
	Ambient temperature ^{Note 1)}	0 to +50°C	
	Action	N.C. (Normally closed)	
	Mounting orientation	Unrestricted	
	Port size	M5	
	Coil specifications	Power supply	24 VDC
Coil current		0 to 85 mA	0 to 170 mA
Power consumption		0 to 2 W	
Coil insulation		Class B	

Characteristic specifications	Orifice diameter (mmø)	0.3	0.4	0.6	0.8
	Max. operating pressure differential (MPa) ^{Note 2)}	0.7	0.45	0.2	0.1
	Max. operating pressure (MPa)	1 MPa			
	Min. operating pressure (MPa) (Vacuum) ^{Note 3)}	0 (0.1 Pa.abs)			
	Flow rate (l/min) (at max. operating pressure differential)	0 to 5	0 to 6	0 to 5	
	Hysteresis (at max. operating pressure differential)	10% or less			
	Repeatability (at max. operating pressure differential)	3% or less			
Start-up current (at max. operating pressure differential)	50% or less				

Note 1) Ambient temperature is for the valve proximal section (approx. 1 mm).


When the valve is continuously energized at an ambient temperature of 50°C (when applying maximum current), the coil outer surface reaches 90°C. The temperature changes depending on the operating conditions, and the coil outer surface temperature must be kept at 90°C or lower.

Note 2) Maximum operating pressure differential indicates pressure differential (difference between inlet and outlet pressure) which can be allowed for operation with the valve closed or open. If the pressure differential exceeds the max. operating pressure differential of orifice, the valve may leak.


Note 3) For vacuum application, max. operating pressure range is 0.1 Pa-abs to max. operating pressure differential. A(2) port is applicable for vacuum pressure.

Flow Characteristics


PVQ10 (ø0.3)

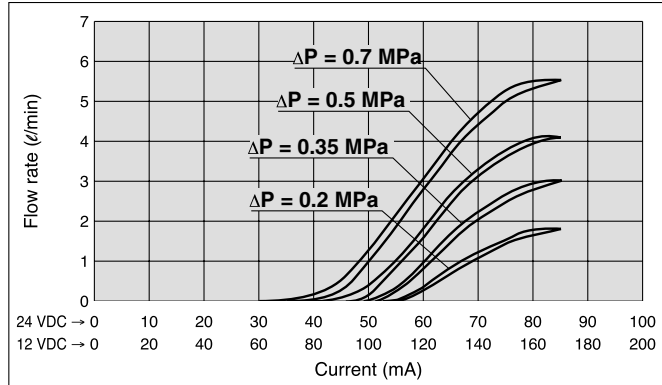


PVQ10 (ø0.4)

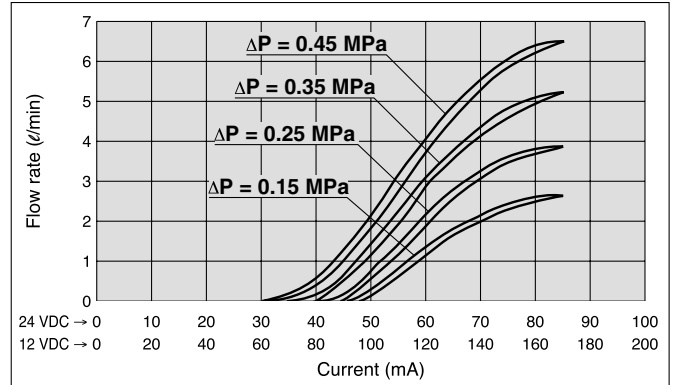

PVQ10 (ø0.6)

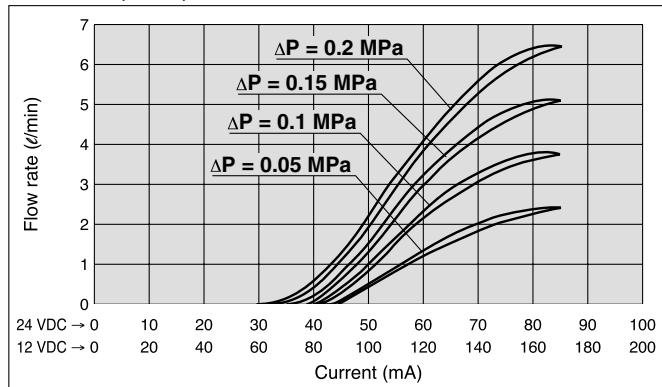


PVQ10 (ø0.8)

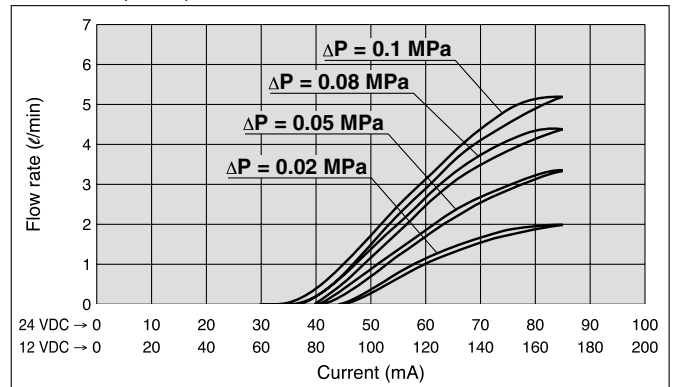

Note) Flow rate varies depending on model differences and piping conditions.
Select the model that fully satisfies the necessary flow rate based on the flow characteristics graphs.

Construction

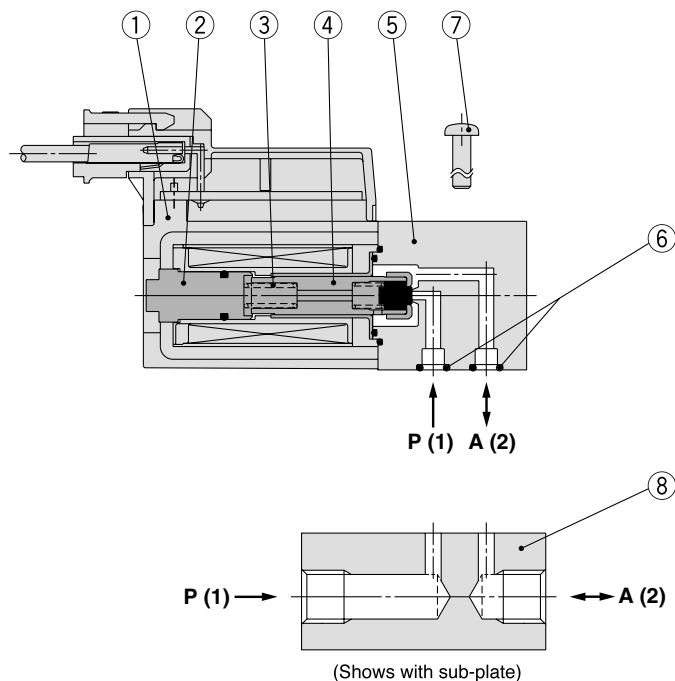

Component Parts

No.	Description	Material	Note
1	Solenoid coil assembly	—	
2	Core	Stainless steel	
3	Return spring	Stainless steel	
4	Armature assembly	Stainless steel, Aluminum, FKM	
5	Body	C36	
6	O-ring	FKM	
7	Round head combination screw	Steel	M1.7 x 0.35 x 17L, 2 pcs.
8	Sub-plate	C36	Part no: PVQ10-15-M5

ARJ

AR425
to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP

VER

VEA

VY2



VBA
VBAT

AP100



Series PVQ10

Dimensions

L plug connector PVQ13-□L-□-M5

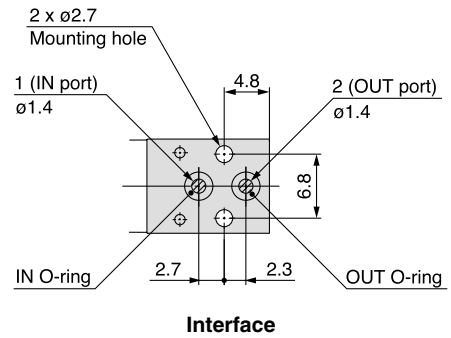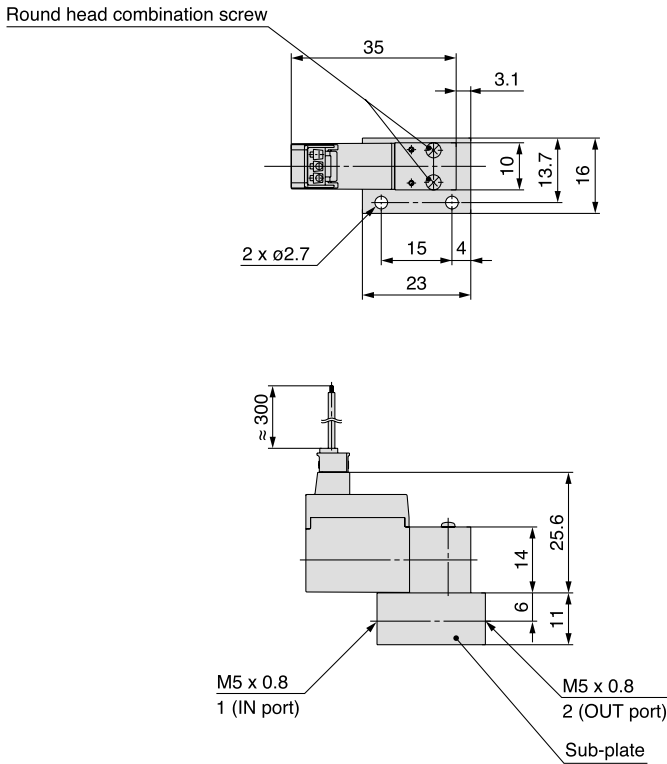

M plug connector PVQ13-□M-□-M5

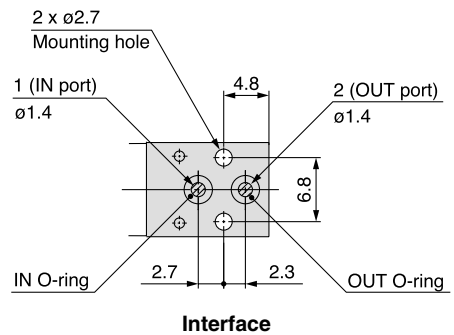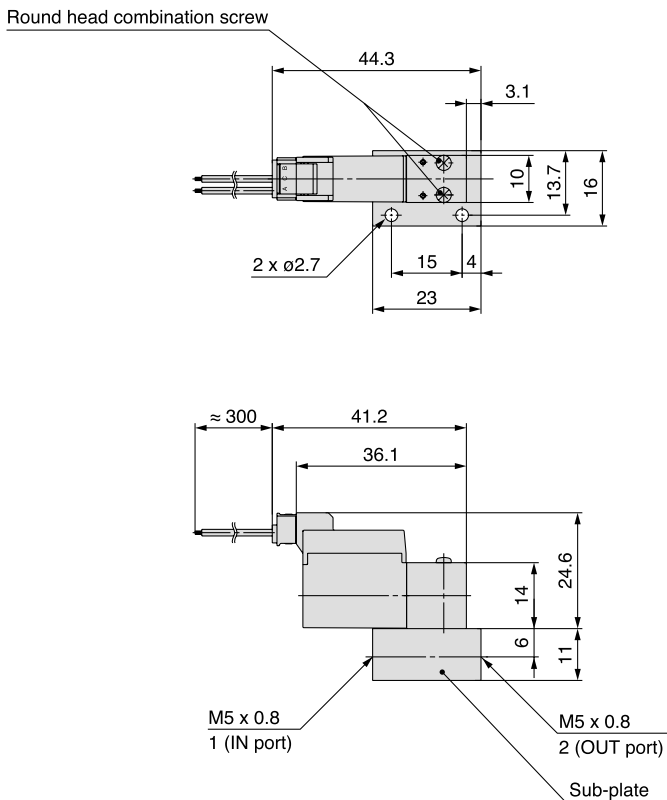

Compact Proportional Solenoid Valve Series PVQ30



How to Order

Body ported

Base mounted



Valve type
31 N.C.

Port size
01 1/8 (6A)

PVQ 31 - 5 G - 16 - 01 - [] - [] - []

Valve type
33 N.C.

Port size
01 1/8 (6A)

PVQ 33 - 5 G - 16 - 01 - [] - [] - []

Option

Nil	None
F	Foot bracket

* Bracket is not mounted but is provided at the time of shipment.

Body / (Sub-plate) Seal material

Symbol	Body	Seal
Nil	C37	FKM
H	Stainless steel	

Voltage

5	24 VDC
6	12 VDC

Electrical entry: Grommet



Thread type (with sub-plate)

Nil	Rc
F	G
N	NPT
T	NPTF

Orifice size

Symbol	Orifice dia.	Max. operating pressure
16	1.6 mm \emptyset	0.7 MPa
23	2.3 mm \emptyset	0.35 MPa
40	4 mm \emptyset	0.12 MPa

Port size

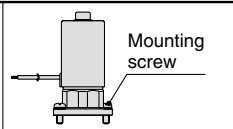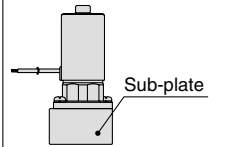Nil	Without sub-plate (with mounting screw M3 x 8L, 2 pcs.)	
01	With sub-plate 1/8 (6A)	

Specifications

Standard specifications	Valve construction	Direct operated poppet	
	Fluid	Air, Inert gas	
	Seal material	FKM	
	Body material	C37 (Standard), Stainless steel	
	Fluid temperature	0 to +50°C	
	Ambient temperature ^{Note 1)}	0 to +50°C	
	Action	N.C. (Normally closed)	
	Mounting orientation	Unrestricted	
	Enclosure	IP40	
	Port size	Rc 1/8	
Coil specifications	Power supply	24 VDC	12 VDC
	Coil current	0 to 165 mA	0 to 330 mA
	Power consumption	0 to 4 W	
	Coil insulation	Class B	

Characteristic specifications	Orifice diameter (mm \emptyset)	1.6	2.3	4.0
	Max. operating pressure differential (MPa) ^{Note 2)}	0.7	0.35	0.12
	Max. operating pressure (MPa)	1 MPa		
	Min. operating pressure (MPa) (Vacuum) ^{Note 3)}	0 (0.1 Pa.abs)		
	Flow rate (l/min) (at max. operating pressure differential)	0 to 100	0 to 75	
	Hysteresis (at max. operating pressure differential)	10% or less	13% or less	
	Repeatability (at max. operating pressure differential)	3% or less		
	Start-up current (at max. operating pressure differential)	50% or less	65% or less	

Note 1) Ambient temperature is for the valve proximal section (approx. 1 mm).

When the valve is continuously energized at an ambient temperature of 50°C (when applying maximum current), the coil outer surface reaches 100°C. The temperature changes depending on the operating conditions, and the coil outer surface temperature must be kept at 100°C or lower.

Note 2) Maximum operating pressure differential indicates pressure differential (difference between inlet and outlet pressure) which can be allowed for operation with the valve closed or open. If the pressure differential exceeds the max. operating pressure differential of orifice, the valve may leak.

Note 3) For vacuum application, max. operating pressure range is 0.1 Pa.abs to max. operating pressure differential. A(2) port is applicable for vacuum pressure.

ARJ

AR425
to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP

VER

VEA

VY2

VBA
VBAT


AP100

Series PVQ30


Flow Characteristics

Air


PVQ30 (ø1.6)

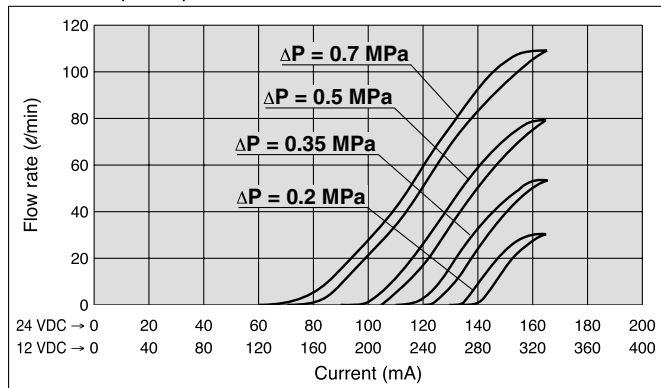

PVQ30 (ø2.3)

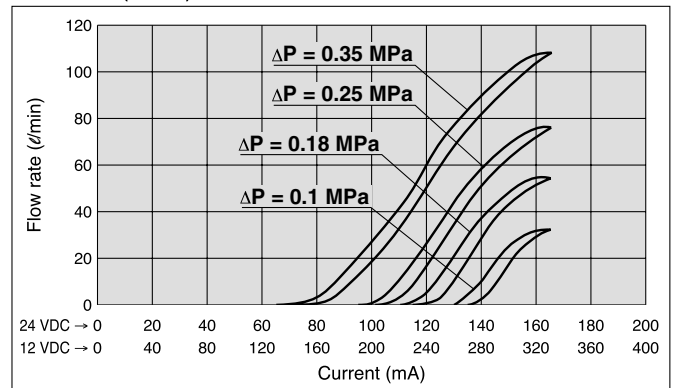


PVQ30 (ø4.0)

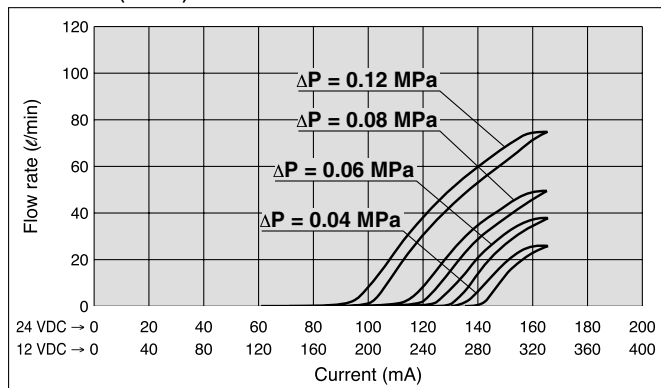

Note) Flow rate varies depending on model differences and piping conditions.
Select the model that fully satisfies the necessary flow rate based on the flow characteristics graphs.

Construction

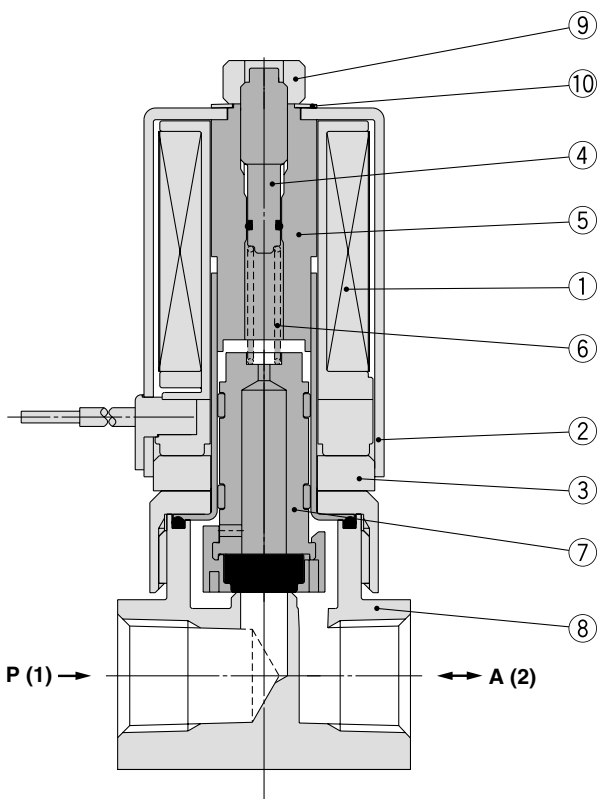

Component Parts

No.	Description	Material	Note
1	Solenoid coil assembly	—	
2	Coil cover	SPCE	
3	Magnetic plate	SUY	
4	Adjusting screw	Stainless steel	
5	Tube assembly	Stainless steel	
6	Return spring	Stainless steel	
7	Armature assembly	Stainless steel, PPS, PTFE, FKM	
8	Body	C37 or Stainless steel	
9	Nut	Steel	
10	Wave washer	Stainless steel	
11	Round head combination screw	Copper	Base mounted only M3 x 0.5 x 8L, 2 pcs. Part no.: PVQ30-15□-01□
12	Sub-plate	C36 or Stainless steel	
13	O-ring	FKM	
14	O-ring	FKM	

Option (Body ported only)

• Bracket assembly: VDW20-15A-1

Sub-plate Part No.


PVQ30-15 □ -01 □

• Material • Thread type


C	C36
S	Stainless steel

Dimensions

PVQ31

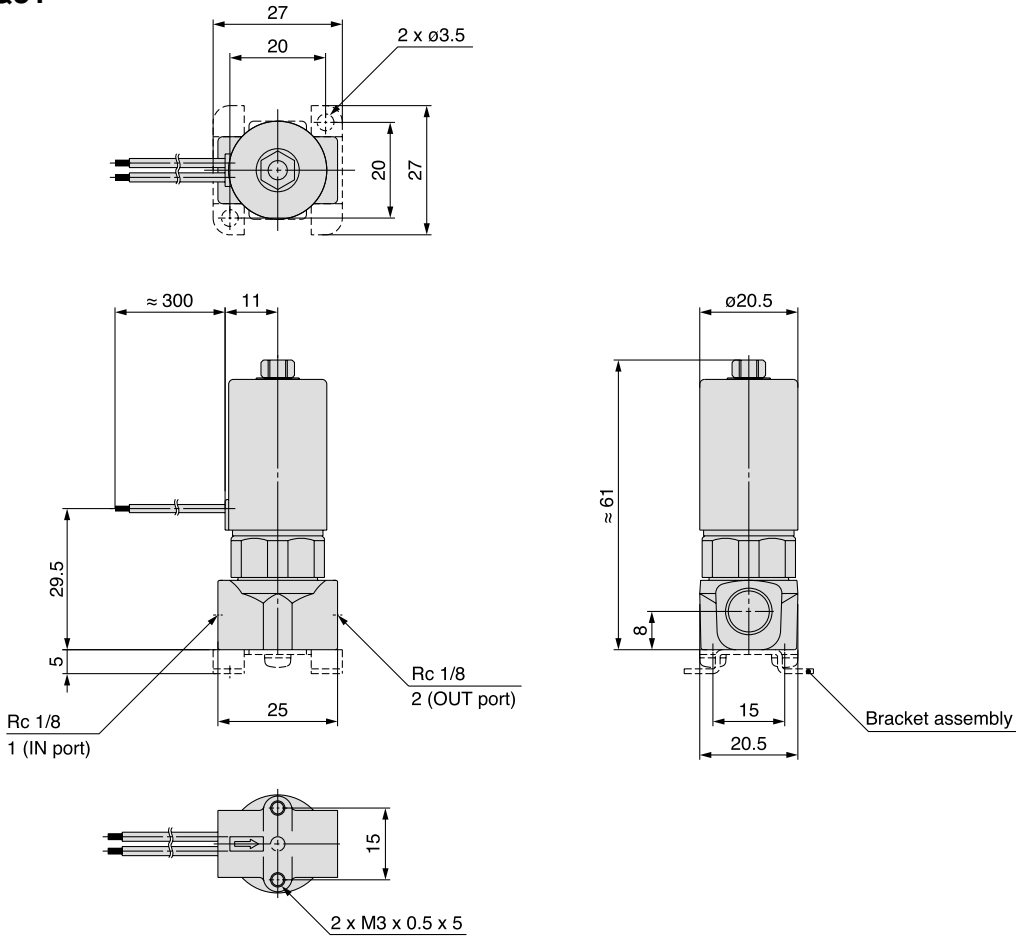

PVQ33

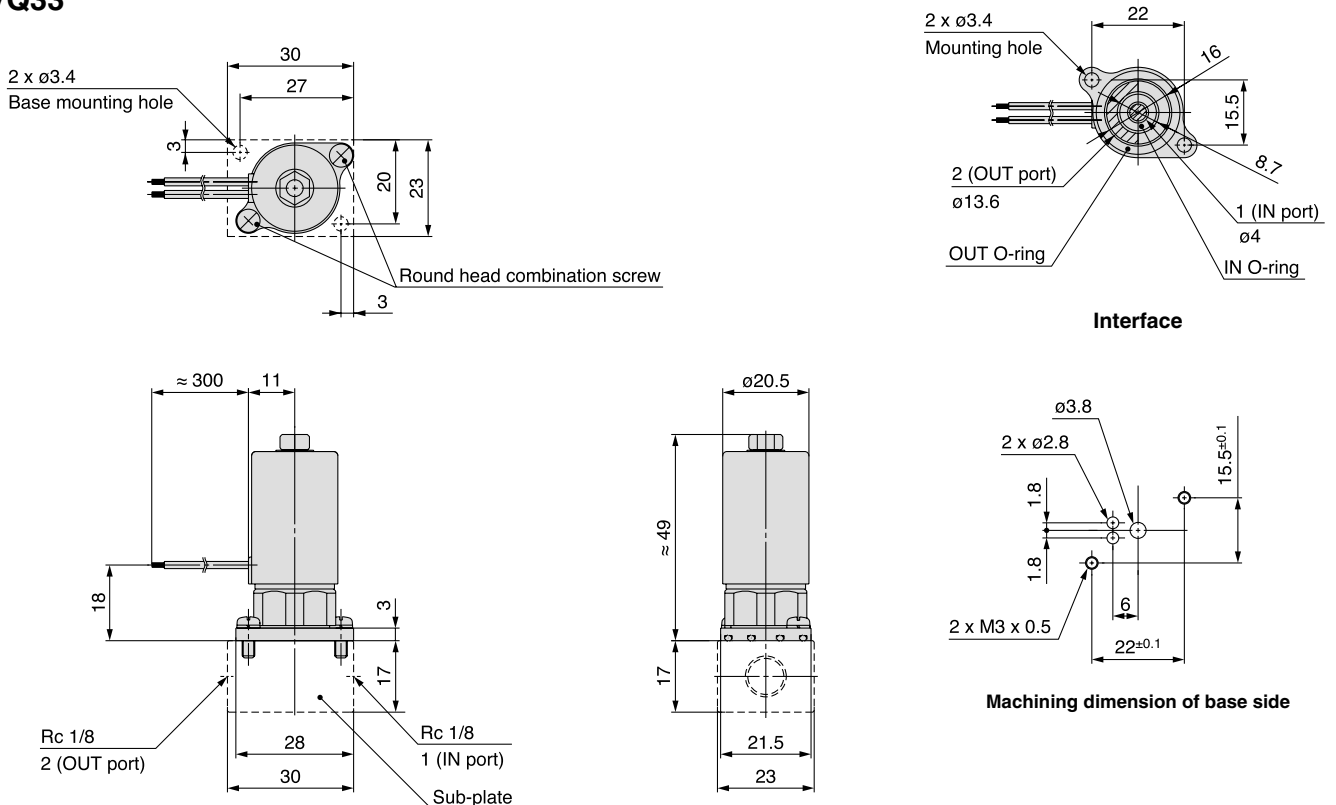

ARJ

AR425
to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP

VER

VEA

VY2

VBA
VBAT

AP100

Glossary

■ Proportional control

Control the fluid proportionally according to input signal (current).

■ Max. operating pressure differential

Indicates max. pressure differential (difference between inlet and outlet pressure) which is allowed for operation with the valve closed or open.

■ Max. operating pressure

This indicates the limit of pressure that can be applied to the inlet. (The pressure differential of the proportional valve must be no more than the maximum operating pressure differential.)

■ Orifice diameter

Diameter of the hole for sealing the valve body of the proportional valve. This does not indicate the effective cross section.

■ Hysteresis

Greatest flow rate difference between current increase and current decrease (with the same current).
(Percentage divided by max. flow rate)

■ Repeatability

Deviation of output flow rate when the same current is applied.
(Percentage divided by max. flow rate)

■ Start-up current

Current at which the flow rate is actually output while increasing current from zero.
(Percentage divided by rated current)



Series PVQ Specific Product Precautions

Be sure to read before handling.
Refer to front matters 42 and 43 for Safety Precautions.

Power Source Selection

⚠ Caution

This product makes proportional control possible with constant current.

If controlled with voltage, the output flow rate cannot be kept constant due to current fluctuation. Use stable DC power source of sufficient capacity without much ripple.

Handling

⚠ Caution

1. This product is adjusted to the respective specifications at SMC factory before delivery.

Do not disassemble the product or remove parts as it could cause breakdown of the product.

2. Flow rate is controlled by balancing the valve body.

Do not expose the product to external vibration and impact as it changes the flow rate.

Vibration may occur depending on the piping conditions or control methods.

Pressure Difference

⚠ Caution

Leakage from the valve may be caused if the pressure difference is larger than the maximum operating pressure differential of the respective models.

Flow Rate

⚠ Caution

Flow rate varies depending on model differences and piping conditions.

Select the model that fully satisfies the necessary flow rate based on the flow characteristics graphs.

Operation in Vacuum

⚠ Caution

When the product is used in vacuum, apply vacuum pressure to A (2) port.

The pressure at P(1) port should be larger than the pressure at A(2) port.

Valve Mounting

⚠ Caution

When mounting a valve to the sub-plate, tighten the screw securely with the tightening torque shown in the table below after checking the installation condition of the O-ring on the interface side.

Proper Tightening Torque (N·m)

PVQ10 (Base mounted)	PVQ30 (Base mounted)
0.15 to 0.22	0.8 to 1.0

Continuous Energization

⚠ Warning

Do not touch the valve directly with hands. The coil can be hot depending on the ambient temperature or energizing time.

Install a protective cover over the valve if it can be touched directly with hands.

ARJ

AR425
to 935

AMR

ARM

ARP

IR

IRV

VEX1□

SRH

SRP

SRF

ARX20

VCHR

ITV

IC

PVQ

VEF
VEP

VER

VEA

VY2

VBA
VBAT

AP100