# 5 Port Solenoid Valve

Thanks to the flow increase, valve size can be reduced!

SY EX600

VM

**XT34** 




Saves energy and space

Plug-in Type

ø4, ø6, ø8 fittings are connectable.

SY5000

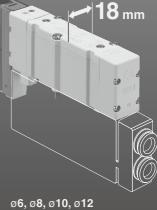

fittings are connectable.



Possible to drive cylinders Up to Ø 5

Page 30


SY3000/5000

(ø80 at 100 mm/s)

Plug-in Sub-plate newly added!

300 mm/s ø50 Valve size ø63 DOWN Possible to drive cylinders

Up to Ø 63 (ø125 at 100 mm/s)

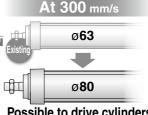

Possible to drive cylinders

Up to Ø (ø160 at 100 mm/s)

\* Values based on comparison with the existing SMC model. For details, refer to page 15. Power consumption



\* Refer to page 8.

W(With power saving circuit) -35 W (Standard)

Rubber seal (Service life: 70 million cycles) Metal seal (Service life: 200 million cycles) \* According to SMC life test conditions


New The SY7000 newly added Plug-in Sub-plate

- With residual pressure release valve
   With safety slide locking manual override
- D-sub connector [IP67] manifold
   PC wiring (with power supply terminal) manifold

Series SY3000/5000/7000




### 5 Port Solenoid Valve

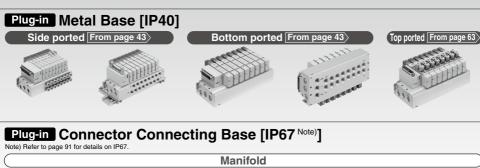






- IP67 enclosure in standard specifications
- M12 waterproof connector type ensuring easy attaching/detaching and wiring
- Applicable to the side, top and bottom ported. (4A, 2B port)

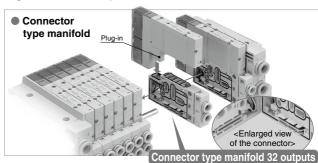

### Wiring

# D-sub connector Flat ribbon cable PC wiring Terminal block box Lead wire Circular connector Serial transmission


#### Serial Transmission Variations

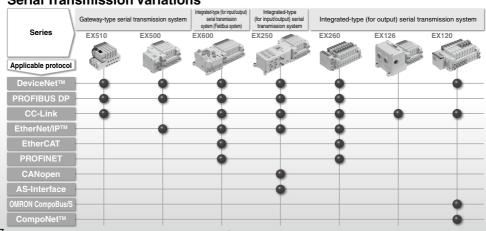

# Power saving

### Power consumption

Standard

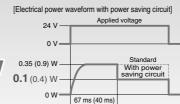

### Power consumption is reduced by power

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform as shown on the left.

The value in ( ) are for the quick response and high pressure types.

# saving circuit.

EX600 VM XT34


SY

Directional Control Valves

# ace saving/Improved

Panel fitting


### Wiring, piping and operation are integrated on one side. Multiple layer type is available as an From page 240 option. This saves space in the lateral direction. Wiring Can be operated from the top. SUP stop valve space with residual pressure release valve

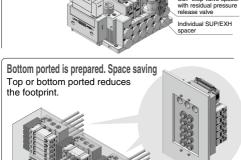

Installation


### 4-position dual 3-port valve available (Only rubber seal type)

Two 3-port valves built into one body

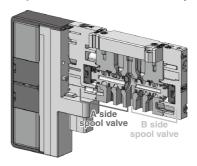

- 3-port valves on the A and B sides can operate independently.
- When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve.
- 4-position dual 3-port valve with back pressure check valve is available.
- Combination examples

Series	A side	B side
SY□A <sub>3</sub> 0	N.C. valve	N.C. valve
SY□B <sub>3</sub> 0	N.O. valve	N.O. valve
SY□C <sub>3</sub> 0	N.C. valve	N.O. valve

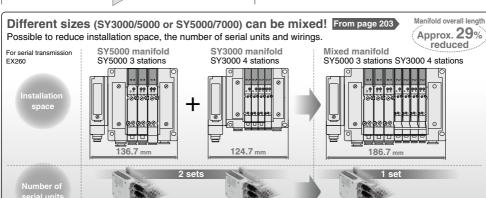



### 5 Port Solenoid Valve

# Improved safety

### Back pressure check valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.\*

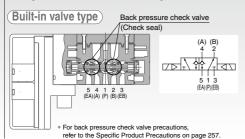

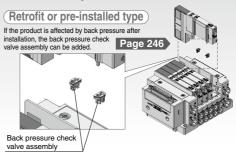

New With residual pressure release valve (Only SY5000)



### (IP67 compliant)

### For residual pressure release of the 3-position closed center valve

- ·The pressure of the 4 (A) and 2 (B) ports is also exhausted automatically at the same when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualized using the indicator (red). ·Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed center valve.









SUP stop valve spacer (With residual pressure release valve) Page 241

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.



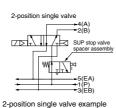


Double check spacer (With residual pressure release valve) Page 241 Long time of intermediate stop and position holding are possible.

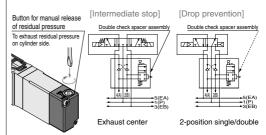

### With slide locking manual override

ON/OFF operation and locking can be performed with the manual slide.

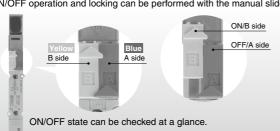



# Improved safety


# New With safety slide locking manual override SY3000/5000/7000-X13 Page 28

Double action manual override prevents incorrect operation!

#### Double action operation

Before operation

The slide manual overrides cannot be turned ON with the safety slide cover. (OFF status: Locked)

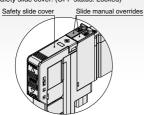

#### Operation 1

Operates the safety slide cover upward. (Unlocked)




EX600

VM

**XT34** 

### Operation 2

The slide manual overrides can be operated.

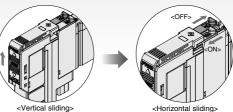

SY7000-X13

<Vertical sliding>


\* The safety slide cover cannot be locked when the slide manual override is turned ON.

#### Visual check

Red lines in three directions can be checked whether the safety slide cover is unlocked (FREE).




Safety slide covers can be checked from their raised and lowered positions.

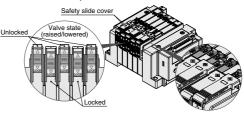


# Piping options

### To mount the piping on top

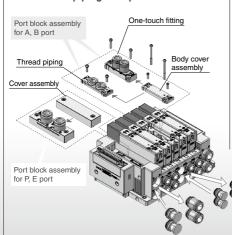


Refer to page 261 for how to change piping types.

### To mount the piping on the side

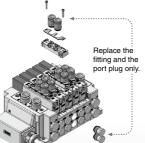

Mixed mounting of top ported and side ported is possible.

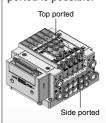

It is possible to detect the output of 4(A) and 2(B) port with a pressure switch by mounting the top ported valve onto the side ported or bottom ported manifold. (Pressure switch etc., needs to be ordered separately.)



INDEX

10

# **5 Port Solenoid Valve**

### Variations

	ariations	<u>′</u>																										
																	Com	mon				_		fold				
		Valve	H					Co	nne	_				:	:		specif	ication		_	_	ase valve	se valve					
		Series	L	0		×		ō		36	eria	u ur	ans	1111	SSI	on	_	ے	e	ace	Sace	aure rele	ure relea					
	Variations		읂	aplo	5	×	e	ect	ctor								omr	E E	plat	IP SI	E S	al pres	al press					
	variations	5 ports	5 ports		P-sub conn Flat ribbon PC wirin		Lead wir	Circular conr	M12 conne	EX510	EX200	EX600	EX250	EX260	EX126	EX120		Negative con	Blanking	Individual SL	Individual EX	SUP stop valve spacer with resid	Double check spacer with residu					
9		SY3□3□																										
ă 5	From page 32	SY5□3□	_	-	_		_	_	0	_	_	_	_	_	-	_	0	0	_	_	_	0	0					
5	M12 connector	SY7□3□																										
ţe d	Type	SY3□0□																										
ğ	50□ From	SY5□0□	0	0	0	_	_	_	_	•	_	_	_	_	_	_	0	0	0	0	0	0	0					
Sig	page 43	SY7□0□	P.43	P.43	P.43					P.71																		
0	SY3□0□																											
E E	51□ From	SY5□0□	0	•	0		_	_	_	0	-	_	_	-	-	_	0	0	0	0	0	0	0					
Batte	page 43	SY7□0□	P.43	P.43	-   -	-   -	-   -	-   -	3 P.43					P.71														
ē	Type	SY3□3□																										
ğ	52□ From	SY5□3□	•	0	0	_	_	_	_	0	_	_	_	_	_	_	0	•	0	0	0	0	_					
ᇋ	page 63	SY7□3□	P.63	P.63	P.63					P.81																		
	Type	SY3□0□																										
	0 10□ From	SY5□0□	1 -	-				0	_	_	0	_		l			0	0	0	0	0	0	0					
	page 95	SY7□0□	P.95	P.95	P.95	P.113	P.123	P.133			P.143	P.151	P.163	P.171	P.179	P.187												
lanifold	Type 11 From	SY5□0□	1		_			•		_	•						•	•	0	0	0	0	0					
Z	page 95 SY7	SY7□0□	P.95	P.95	P.95	P.113	P.123	P.133			P.143	P.151	P.163	P.171	P.179	P.187												
- 1 100	SY3□3□																											
	SY5□3□	-	_	_	_	_	0	_	_	_		_	_	_	_	_	0	0	0	0	0	-						
	page 107	SY7□3□	P.107	P.107	P.107	_	P.129	P.139			P.149			P.177	P.185	P.193												
	Top ported   Bottom ported   Side ported	Patrod working to the page 43  M12 connector  Patrod working to the page 43  Type 50  From page 43  Type 51  Type 52  From page 43	Valve   Series	Valve   Series   Variations   Valve   Series   Variations   Valve   Series   Variations   Valve   Series   Valve   Valve	Valve   Series   Valve   V	Valve   Series   Series   Valve   Series   Series   Valve   Series   Seri	Valve   Series   Valve   Valv	Valve   Series   Valve   Valv	Valve   Series   Valve   Valve	Valve   Series   Valve   Valve   Series   Valve   Valve	Valve   Series   Serie	Valve Series	Valve   Series   Valve   Valve	Valve   Series   Valve   Valve	Valve Series   Valv	Valve Series   Valve Series   Variations   Valve Series   Variations   Valve Series   Variations   Variatio	Variations   Valve Series   Valve	Valve   Series   Valve   Valve	Variations	Valve Series   Valv								

Standard ○ Option ▲ Made-to-Order (Refer to page 28.)

SY

EX600

VM XT34

Opti	ons	s (P	age	es 2	240	to 2	248)										A, E	3 Pc	ort S	Size								,	Valv	ve C	pti	ons		
	'n	sembly	sembly	disk	disk	installed type)		ction type)										On	ie-t	ouc	h fi	ttin	gs				unting	unting	turbine oil)	ification	es	е	S	
	gulate	ock as	ock as	king	king	y (Manifold	fitting	g conne	ite)	late					C2	C3 (N1)	C (N	:4  3)	C (N	6 (7)	C (N	:8  9)	C.	10 11)	C	12	ed mo	ed mo	signated	re spec	ssur	essur	g size	1P67
	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug (White)	Name plate	M5	1/8	1/4	3/8	Straight piping	Straight piping	Straight piping	Elbow piping Note 1)	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67								
												•	_																					
	0	_	_	-	_	_	-	_	_	_	_	_	•		_	_	-	_	_	_	_	-	_	_	_	_	-	-	▲	External Pillot	_	External	_	•
												_	_	•																Pilot		Pilot		Ш
												•	_		•	•	•				_		_		_									
	0	_	_	-	_	_	-	_	0	_	_	•	0	_	_	_	•	-	0	-	0	-		_		_	-	-	•	External Pilot	O Individual SUP	External Pilot		-
													•				_		0		•		•							FIIUL	301	FIIUL		Н
	$\overline{}$											0			•	•	0		0		_		_		_						_			
	0			_	_		_		0	_		•	•	_	_	_	•		•	_	•	_	•		•		_	_	•	_	O Individual SUP	_	•	
											•				0	•	_ _		0															$\vdash$
	0			_	_		L		0			0	-	_			0	_	0	_	•	_	_	_	_	_	_	_		•	0	•	•	
	Ĭ												•			_	Ľ		0		0		•		•				_	External Pillot	Individual SUP	External Pilot		
															•	•	•	•	0	•	_	_												П
	0	0	0	0	0	0	0	0	0	0	_	_	_	_			•	•	•	•	•	•	_	_	_	_	P.203	_	•		0		•	Note 2)
							_								_	_	_	_	•	•	•	•	•	0	•		_	P.207		External Pillot	Individual SUP	External Pilot		
																					•						•							
	0	0	0	0	0	0	-	0	0	0	_	_	_	_	_	-		_	)	_		-		_		_	P.203		•	External	O Individual	External		Note 2)
																	_				•		•				_	P.207		Pilot	SUP	Pilot		Ш
												_	_			•	•				_							_						Note 2)
	0	0	0	0	0	0	-	0	0	_	_	•		-	_	_	•	-	•	-	•	-		-		-	P.215		•	External Pillot	O Individual SUP	External Pilot		
																	_		•		•	ndino			•		_	P.215						

Note 1) Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details. Note 2) Refer to Manifold Specifications on page 91 for details on IP67.

One-touch fittings

Straight piping







# INDEX

Manifold Variations Page 11	Valve Replacement PartsPage 25
Optimum Actuation Size Chart of Air Cylinder Page 15	With Residual Pressure Release Valve Page 27
Valve Specifications	Made-to-Order for ValvePage 28
Valve ConstructionPage 21	



Plug-in Sub-plate Page 30



M12 connector



Plug-in Sub-plate Specifications (M12 Connector)------Page 31 Sub-plate Parts No. Page 33





Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported

Type 52/ Top ported



Flat ribbon cable





Plug-in Metal Base Page 41

D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40]





	=
Type 51/Bottom Ported ·····	Page 43
Type 52/Top Ported ·····	Page 63
Viring Specifications	Page 68
X510 Gateway-type Serial Transmission System [IP20]	

Type 50/Side Ported Ported Page 71 Type 51/Bottom Ported ·····Page 71 Type 52/Top Ported ------Page 81

Manifold Exploded View [Exploded View, Manifold Parts No.] ......Page 87

Specific Product Precautions.....


VM

**XT34** 

vpe 12/

Top ported

### Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

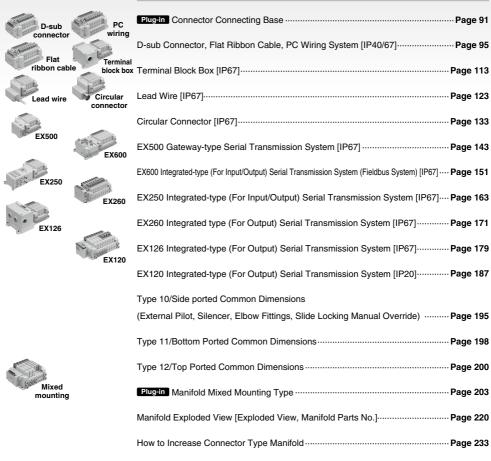

INDEX



One-touch Fittings, Plug Assembly/Part No. Page 238

Manifold Options [ Plug-in Metal Base, Plug-in Connector Connecting Base] Page 239

# Optimum Actuation Size Chart of Air Cylinder

Applicable	Main valve	Series		App	olicable cyl	inder		
cylinder speed	seal type	Series	ø <b>6</b>	ø <b>10</b>	ø <b>16</b>	ø <b>20</b>	ø <b>25</b>	
		SY3000						
	Rubber seal	SY5000						
100 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
300 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
500 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						

[Common conditions]

• Pressure: 0.5 MPa

Piping length: 1 mLoad ratio: 50%


• Stroke: 200 mm

Connector type manifold (for side and bottom ported type)

\* Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.



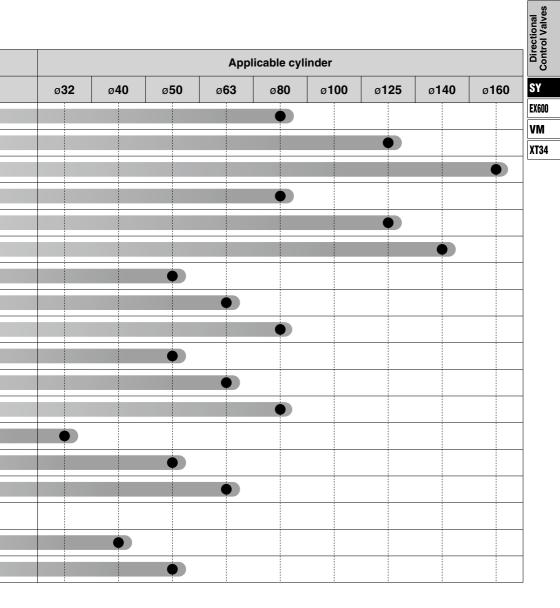

## Series SY3000/5000/7000 **Valve Specifications**

### Valve Specifications

V	/alve type		Rubber seal	Metal seal			
Fluid			A	ir			
	2-position	single	0.15 to 0.7				
Internal pilot operating pressure range	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
(MPa)	3-position		0.2 to 0.7				
( 4)	4-position	dual 3-port valve	0.15 to 0.7	_			
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)			
External pilot		2-position single					
operating pressure range	Pilot pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
(MPa)	range	3-position					
	· ugo	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	-			
Ambient and fluid tempera	ature (°C)		-10 to 50 (N	No freezing)			
	SY3000	2-position single/double	5	20 Note 1)			
	SY5000	4-position dual 3-port valve	3				
Max. operating frequency		3-position	3	10 Note 1)			
(Hz)		2-position single/double	5	10 Note 1)			
	SY7000	4-position dual 3-port valve	3	_			
		3-position	3	10 Note 1)			
			Non-locking				
Manual override				ng slotted type			
manual override			Push-turn lock	0 71			
			Slide locking type				
Pilot exhaust type	Internal pi		Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust			
	External p	ilot		vidual exhaust			
Lubrication			Not re	quired			
Mounting orientation Note 2)	)		Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.			
Impact/Vibration resistance	e Note 2) (m/s	3 <sup>2</sup> )	150	/30			
Enclosure			IP67 (Based o	n IEC60529)*			
Coil rated voltage (DC)			24,	12 V			
Allowable voltage fluctuat	ion (V)		±10% of rated	voltage Note 3)			
	Standard		0.35 (With indi	cator light: 0.4)			
Power consumption (W)	High pressur	re type, Quick response type	0.9 (With indica	ator light: 0.95)			
Power consumption (w)	With power	er saving circuit	Standard: 0.1 Note 4) (With indicator li High pressure type: 0.4 Note 4) (With indicator li	ght only) [Inrush 0.35, Holding 0.1], cator light only) [Inrush 0.9, Holding 0.4]			
Surge voltage suppressor			Diode (Varistor fo	. , ,			
Indicator light			LE	:D			

<sup>\*</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 256). Note 1) Use below 5 Hz for with the power saving circuit.

de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period) Refer to page 261 for the fixation of DIN rail mounting type manifold.

Note 3) Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.  $S/Z \ type \begin{cases} 24 \ VDC: -7\% \ to +10\% \\ 12 \ VDC: -4\% \ to +10\% \end{cases} \ T \ type \begin{cases} 24 \ VDC: -8\% \ to +10\% \\ 12 \ VDC: -6\% \ to +10\% \end{cases}$ 

Note 4) For details, refer to page 258.



Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and

### Valve Specifications Series SY3000/5000/7000

Sontrol Valves

### **Response Time**

						Response	time (ms)		
					Standard		Quick	response ty	ре
Series	Seal type	Model	Type of actuation	ype of actuation   Without light/   With light   voltage sup			Without light/ surge voltage	With light voltage si	
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type
	Rubber seal	SY31□0	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Metal seal	SY31□1	z-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Rubber seal	SY32□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY3000	Metal seal	SY32□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY33/4/5□0	2 position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less
	Rubber seal	SY51□0	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Metal seal	SY51□1		24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Rubber seal	SY52□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY5000	Metal seal	SY52□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY53/4/5□0	3-position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less
	Rubber seal	SY71□0	2-position single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less
	Metal seal	SY71□1	z-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less
	Rubber seal	SY72□0	O position double	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less
	Rubber seal	SY73/4/5□0	3-position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less
	Metal seal	SY73/4/5□1	о-рознин	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less

SY

EX600 VM

s XT34



### Valve Weight

### Series SY3000

Valve model	Seal type	Тур	oe of actuation	Weight g
		2-position	Single	74
		z-position	Double	83
SY3□00	Rubber seal		Closed center	
31300	nubbei seai	3-position	Exhaust center	87
			Pressure center	
		4-position	Dual 3-port valve	83

	Seal	_		Port size	Weight	
Valve model	type	I yp	e of actuation	4, 2 (A, B)	g	
			Single		74	
		2-position	Double	1	83	
SY3□30-M5			Closed center	1		
ST3U3U-IVIS		3-position	Exhaust center	M5 x 0.8	87	
		· .	Pressure center	1		
		4-position	Dual 3-port valve	1	83	
	1		Single		82	
		2-position	Double	C2	91	
SY3□30-C2			Closed center			
313U3U-U2		3-position	Exhaust center	ø2 One-touch	95	
		· .	Pressure center	fitting		
		4-position Dual 3-port valve				
		0	Single		85	
	Rubber	2-position	Double	C3	94	
SY3□30-C3			Closed center	ø3.2 One-touch		
313U3U-U3	seal	3-position	Exhaust center	fitting	98	
			Pressure center	illung		
		4-position	Dual 3-port valve		94	
		2-position	Single		77	
		z-position	Double	C4	86	
SY3□30-C4			Closed center	ø4 One-touch		
313030-04		3-position	Exhaust center	fitting	90	
			Pressure center	illing		
		4-position	Dual 3-port valve		86	
		2-position	Single		80	
		z-position	Double	C6	89	
SY3□30-C6			Closed center	ø6 One-touch		
		3-position	Exhaust center		93	
			Pressure center			
		4-position	Dual 3-port valve		89	

Valve model	Seal type	Typ	Weight g	
		2-position	Single	76
	2-position Double		Double	86
SY3□01	Metal seal		Closed center	
		3-position	Exhaust center	90
			Pressure center	

	Seal	_		Port size	Weight
Valve model	type	l iype	of actuation	4, 2 (A, B)	g
		0:4:	Single		76
		2-position	Double	1	86
SY3□31-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		90
			Pressure center		
		2-position	2 position Single		84
		2-position	Double	C2	94
SY3□31-C2			Closed center	ø2 One-touch	
		3-position	Exhaust center	fitting	98
			Pressure center		
		2-position	Single		87
	Metal	2 position	Double	C3	97
SY3□31-C3	seal		Closed center	ø3.2 One-touch	
	oou.	3-position	Exhaust center	fitting	101
			Pressure center		
		2-position	Single		79
		2 position	Double	C4	89
SY3□31-C4			Closed center	ø4 One-touch	
		3-position	Exhaust center	fitting	93
			Pressure center		
		2-position	Single		82
		_ position	Double	C6	92
SY3□31-C6		l	Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	96
			Pressure center		

### Series SY5000

Valve model	Seal type	Type of actuation		Weight g
	Rubber seal	2-position	Single	82
		z-position	Double	90
SY5□00		3-position	Closed center	
			Exhaust center	100
			Pressure center	
		4-position	Dual 3-port valve	90

Valve model	Seal	Turn	a of actuation	Port size	Weight
valve model	type	Type of actuation		4, 2 (A, B)	g
		2-position	Single		102
		z-position	Double		110
CVE - 20-01	SY5□30-01		Closed center	1/8	
313030-01		3-position	Exhaust center	1/6	120
			Pressure center		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		z-position	Double	C4 ø4 One-touch fitting	123
SY5□30-C4			Closed center		
313030-04		3-position	Exhaust center		133
			Pressure center		
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		2 position	Double	C6	118
SY5□30-C6			Closed center	ø6 One-touch	128
313030-00		3-position	Exhaust center		
			Pressure center	illing	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		z-position	Double	C8	107
SY5□30-C8	0-C8		Closed center	ø8 One-touch	
313-30-00		3-position	Exhaust center	fitting	117
			Pressure center		
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Weight g
		2-position	Single	91
	2-1	2-position	Double	101
SY5□01	Metal seal	3-position	Closed center	
			Exhaust center	111
			Pressure center	

Valve model	Seal	Type of actuation		Port size	Weight
vaive model	type			4, 2 (A, B)	g
		2-position	Single		111
	⊒31-01	2-position	Double		121
SY5□31-01			Closed center	1/8	
		3-position	Exhaust center		131
			Pressure center		
		2-position	Single		124
		2-position	Double	C4	134
SY5□31-C4		3-position	Closed center	ø4 One-touch	
			Exhaust center	fitting	144
	Metal		Pressure center		
	seal	2-position	Single		120
		z-position	Double	C6 ø6 One-touch	130
SY5□31-C6			Closed center		
		3-position	Exhaust center	fitting	140
			Pressure center		
		2-position	Single		108
SY5□31-C8		2-position	Double	C8	118
			Closed center	ø8 One-touch	
		3-position	Exhaust center	fitting	128
			Pressure center		



### Valve Specifications Series SY3000/5000/7000

### **Valve Weight**

### Series SY7000

Valve model	Seal type	Тур	e of actuation	Weight g
		2-position	Single	110
	SY7□00 Rubber seal	2-position	Double	118
SY7□00		3-position	Closed center	
317 🗆 00	nubbei seai		Exhaust center	133
			Pressure center	
		4-position	Dual 3-port valve	114

	Seal			Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	g
			Single	,, = (-,, =/	125
		2-position	Double	1	133
SY7 30-02			Closed center	1/4	
SY7 - 30-02		3-position	Exhaust center	1/4	147
			Pressure center		
		4-position	Dual 3-port valve		129
		2-position	Single		163
		z-position	Double	C6	171
SY7□30-C6			Closed center	ø6 One-touch	
317 - 30-00		3-position	Exhaust center	fitting	186
			Pressure center	litting	
		4-position	Dual 3-port valve		167
	Rubber	2-position	Single	C8 ø8 One-touch	151
			Double		159
SY7□30-C8			Closed center		
317 - 30-00	seal	3-position	Exhaust center	fitting	174
			Pressure center	litting	
		4-position	Dual 3-port valve		155
		2-position	Single		136
		2 position	Double	C10	144
SY7 30-C10			Closed center	ø10 One-touch	
317-30-010		3-position	Exhaust center	fitting	159
			Pressure center	l mung	
		4-position	Dual 3-port valve		140
		2-position	Single		146
		2 position	Double	C12	154
SY7 30-C12			Closed center	ø12 One-touch	
517 _ 30-01Z		3-position	Exhaust center	fitting	169
			Pressure center	] mung	
		4-position	Dual 3-port valve		150

Valve model	Seal type	Typ	Type of actuation	
		2-position	Single	122
	Metal seal	2-position	Double	133
SY7□01		3-position	Closed center	150
			Exhaust center	
			Pressure center	

V-1 1-1	Seal			Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	g
		0:4:	Single		136
		2-position	Double	1	148
SY7□31-02			Closed center	1/4	
		3-position	Exhaust center		164
			Pressure center		
		2-position	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	202
			Pressure center		
		2-position	Single		162
	Metal	2 position	Double	C8	174
SY7□31-C8	seal		Closed center	ø8 One-touch	
	ooui	3-position	Exhaust center	fitting	190
			Pressure center		
		2-position	Single		148
		2 position	Double	C10	159
SY7□31-C10			Closed center	ø10 One-touch	
		3-position	Exhaust center	fitting	176
			Pressure center		
		2-position	Single		157
		_ position	Double	C12	169
SY7□31-C12			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	185
			Pressure center		

Ontrol Valves


EX600


VM XT34


## **Valve Construction**

### **Rubber Seal**


# 2-position single

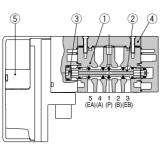


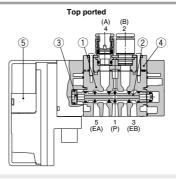

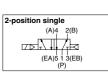


### 2-position double

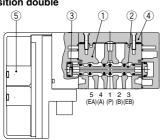


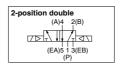

### 3-position closed center/exhaust center/pressure center

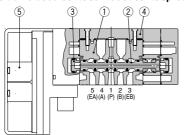



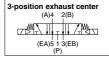

3-position pressure center
(A)4 2(B)
(EA)5 1 3(EB)


#### **Component Parts**


No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted	
2	Spool valve	Special resin/HNBR ( 3-position valve: Aluminum/HNBR	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported
5	Pilot valve assembly	_	Refer to page 26.

### Valve Construction Series SY3000/5000/7000


#### **Rubber Seal**


#### 4-position dual 3-port valve

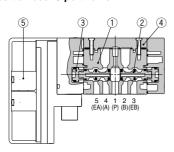

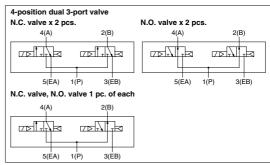


#### 2-position double with back pressure check valve (Built-in valve type)

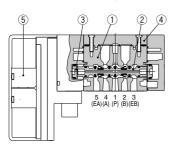


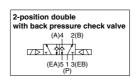

\* The built-in valve type back pressure check valve is not available for the SY7000.

#### 4-position dual 3-port valve with back pressure check valve (Built-in valve type)

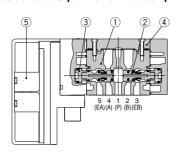

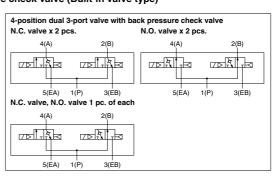

\* The built-in valve type back pressure check valve is not available for the SY7000.

INDEX




EX600


XT34

### **Metal Seal**


### 

### 2-position double

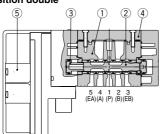


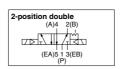

### 3-position closed center/exhaust center/pressure center

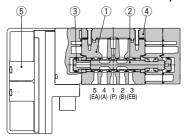



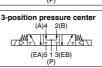


3-position exhaust center					
(A)4 2(B)					
(EA)5 1 3(EB)					

#### **Component Parts**

No.	Description	Material	Note
1	Body	Body SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted	
2	Spool, Sleeve	Stainless steel/HNBR	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported
5	Pilot valve assembly	_	Refer to page 26.

# **Valve Replacement Parts**

### **How to Order Port Block Assembly**

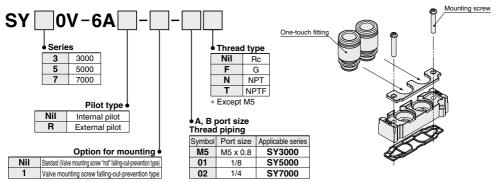

Metric size (One-touch fitting)

	oize (eile teaeli littiing)				
Cumbal	Doub sine	Applicable series			
Symbol	Port size	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

Inch size (One-touch fitting)

Cumhal	Port size	Applicable series						
Symbol	Port size	SY3000	SY5000	SY7000				
N1	ø1/8"	•	_	_				
N3	ø5/32"	•	•	_				
N7	ø1/4"	•	•	•				
N9	ø5/16"	_	•	•				
N11	ø3/8"	_	_	•				

#### • Possible to replace only the One-touch fitting.

	Port size	SY3000	SY5000	SY7000
	ø2	VVQ1000-50A-C2	_	_
	ø3.2	VVQ1000-50A-C3	_	_
	ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_
Metric size	ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8
	ø10		_	VVQ2000-51A-C10
	ø12	_	_	KQ2H12-17-X899
	ø1/8"	VVQ1000-50A-N1	_	_
	ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_
Inch size	ø 1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9
	ø3/8"	_	_	VVQ2000-51A-N11


Refer to pages 261 and 262 for how to replace the port block assembly, One-touch fitting and body cover assembly.



### Valve Replacement Parts Series SY3000/5000/7000

### **Body Cover Assembly**


\* Used when the top ported is changed to the side or bottom ported.

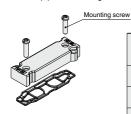

		Part no.			
Series		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type		
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1		
313000	External pilot	SY30V-16AR	SY30V-16AR-1		
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1		
315000	External pilot	SY50V-16AR	SY50V-16AR-1		
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1		
51/000	External pilot	SY70V-16AR	SY70V-16AR-1		
. The next o		antad on the product			

<sup>\*</sup> The part number is not indicated on the product.


### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

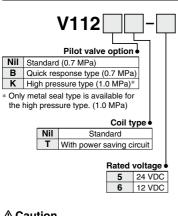

#### 

- 1. The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly
- 2. When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.



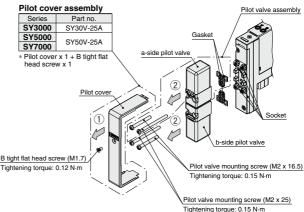

How to replace pilot valves

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow 1.
- · Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- \* Assemble by following the removal procedure in reverse.

Note 1) Ensure the gasket is mounted, and take care not to bend the socket. Note 2) Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.

INDEX

Directional Control Valves

EX600 VM **XT34** 




### Series SY5000

With Residual Pressure Release Valve

Mountable manifold SS5Y5-50/51 type manifold SS5Y5-(M)10/11 type manifold Sub-plate single unit (Except top ported type)

How to Order (With mounting screw)

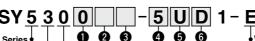

Series ● 5 SY5000

Type of actuation

3 3-position closed center\*
 \* Only closed center type is available.

#### Base mounted

(Top ported is not available.)

### With residual pressure release valve

With residual pressure release valve\*

 Mounting screw types, hexagon socket head cap screw B
 and screw falling-out-prevention type K, H are not available.



#### Seal type

0	Rubber seal
1	Metal seal

#### 2 Pilot valve option

Nil Standard (0.7 MPa)					
В	Quick response type (0.7 MPa)				
K*	High pressure type (1.0 MPa)				

 Only metal seal type is available for the high pressure type.

#### Coil type

	,
Nil	Standard
Т	With power saving circuit (Continuous duty

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

### A Rated voltage

	_	24 VD		
ь		12 VD	C	
* The	nnlicable	rated voltage	varioe	donondin


The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How to Order Manifold" pages.

### Light/surge voltage suppressor and common specification

Symbol With light		Surge voltage suppressor	Common specification			
Nil	_	_				
R	_		Non-polar			
U	•					
S	_	•	Positive			
Z	•	_	common			
NS	_		Negative			
NZ	•		common			
. Only "7" and "NI7" types are available for with						

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### 6 Manual override

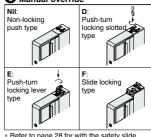

- Refer to page 28 for with the safety slide locking manual override.
- \* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 87 or 234 for part numbers of the base gasket and mounting screw.

### **Valve Specifications**

Valve construction	Rubber seal Metal seal		
vaive construction	3-position closed center valve with residual pressure release valve Note 1)		
Fluid	Air		
Operating pressure range MPa Note 2)	0.3 to 0.7	0.3 to 0.7 (High pressure: 0.3 to 1)	
Weight g	117	128	

Note 1) Rubber seal is used for the residual pressure release valve.

Note 2) Internal pilot type only

Note 3) Other specifications are common to the valve specifications on page 17.

#### Symbol






A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3 position closed center valve is exhausted.

### **Dimensions**

27

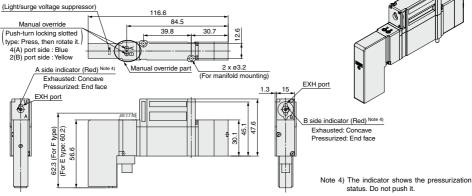

# Series SY3000/5000/7000 Made to Order

Please contact SMC for detailed dimensions, specifications and lead times.



Directional

EX600

VM

**XT34** 


Symbol -X90

1 Main Valve Fluororubber Specification

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3 $\bigcirc_3^0$ 0, SY5 $\bigcirc_3^0$ 0, SY7 $\bigcirc_3^0$ 0 (Only rubber seal type)

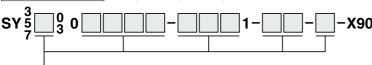


Entry is the same as standard products.

Specifications and performance are the same as standard products.

### 2 With Safety Slide Locking Manual Override

A safety lock is added to the slide locking manual override. (Refer to page 10.)

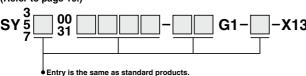

3 Metal Seal Valve, Main/Pilot Valve Common Exhaust

Entry is the same as standard products.


Specifications and performance are the same as standard products.



Symbol

-X16

This is the type where the exhaust method of the pilot valve is integrated into the exhaust port of the main valve.

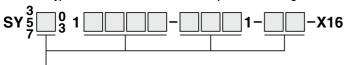

Entry is the same as standard products.

\* Note that the response time of the valve becomes slower than standard products. Please contact SMC for details.



Directional Control Valves

SY

EX600

XT34

# Plug-in Sub-plate Type [IP67 Compliant]



# Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported) (RoHS)

### Plug-in Sub-plate Specifications

Manifold type	Plug-in sub-plate				
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side	ported	
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	ported		
Piping direction	Tournated	1(P), 5(EA)/3(EB) port	Side	oorted	
	Top ported	4(A)/2(B) port	Top p	orted	
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indiv	ridual]		
Applicable connector		M12 waterproof connector			
Internal wiring		Positive common, Negative common			
			SY3000	1/8	
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4	
			SY7000	3/8	
	Bottom ported		SY3000	1/8	
Port size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4	
I OIT SIZE			SY7000	3/8	
	Top ported		SY3000	1/8	
		1(P), 5(EA)/3(EB) port	SY5000	1/4	
			SY7000	3/8	
		4(A)/2(B) port Compliant with the		the valve. Note 1)	
Enclosure (Based on IEC60529)		IP67			
		Side ported	99		
	SY3000	Bottom ported	109		
		Top ported	104		
		Side ported	145		
Weight: W [g] Note 2)	SY5000	Bottom ported	172		
		Top ported	159		
		Side ported	20	05	
	SY7000	Bottom ported	23	32	
		Top ported	22	27	

Note 1) Refer to page 17 for valve specifications.

### **Plug-in Sub-plate Flow-rate Characteristics**

Rubber Seal							
Series	Sub-plate	Fitting p	ort size	1 → 4/2		4/2 → 5/3	
Series	piping location	(P,E)	(A,B)	С	b	С	b
	Side ported	1/8	1/8	1.8	0.27	1.7	0.26
SY3000	Bottom ported	1/8	1/8	1.7	0.23	1.4	0.27
	Top ported	1/8	C6	1.3	0.34	1.5	0.27
	Side ported	1/4	1/4	4.2	0.21	4.0	0.26
SY5000	Bottom ported	1/4	1/4	4.0	0.19	4.0	0.23
	Top ported	1/4	C8	2.9	0.29	4.1	0.33
SY7000	Side ported	3/8	3/8	6.5	0.24	6.3	0.23
	Bottom ported	3/8	3/8	6.4	0.22	6.3	0.22
	Top ported	3/8	C12	5.4	0.30	6.0	0.27

<sup>\*</sup> Calculation of effective area S and sonic conductance C:  $S = 5.0 \times C$  Note) The value is for individually operated 2-position type.

Metal Sea	al						
Series	Sub-plate	Fitting p	ort size	1 →	4/2	4/2 -	→ 5/3
Series	piping location	(P,E)	(A,B)	С	b	С	b
	Side ported	1/8	1/8	1.4	0.14	1.3	0.26
SY3000	Bottom ported	1/8	1/8	1.3	0.13	1.3	0.22
	Top ported	1/8	C6	1.2	0.22	1.4	0.29
	Side ported	1/4	1/4	3.2	0.13	3.5	0.16
SY5000	Bottom ported	1/4	1/4	3.0	0.12	3.2	0.17
	Top ported	1/4	C8	2.6	0.23	3.2	0.19
	Side ported	3/8	3/8	4.6	0.10	4.9	0.16
SY7000	Bottom ported	3/8	3/8	4.6	0.10	4.9	0.17
	Top ported	3/8	C12	4.0	0.18	4.7	0.16


Note 2) The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 19, and to include the cable weight, add the connector cable weight on page 33.

EX600 VM

**XT34** 

### **How to Order**

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

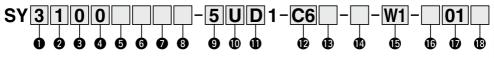

U Sel	ries
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single		
2		Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
<b>A</b> *		N.C./N.C.		
B* C*		N.O./N.O.		
C*	dual o port	N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Valve piping type

	p.pg .,p.
0	Base mounted (Port location: Side, Bottom)
3	Top ported (4A, 2B port location: Top)

#### A Soal type

-	ai type
0	Rubber seal
1	Metal seal

<b>U</b> Pile	ot type	
Nil	Internal pilot	
R	External pilot	

#### Back pressure check valve (Built-in valve type) Nil None

- н Built-in Only rubber seal type
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

#### Pilot valve option

•	
Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

\* Only metal seal type is available for the high pressure type.

#### Coil type

NII	Standard
Т	With power saving circuit (Continuous duty type)
* Be sur	e to select the power saving circuit type

- when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage


5	24 VDC
6	12 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil		_		
R	-		Non-polar	
U	•		1	
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

\* Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

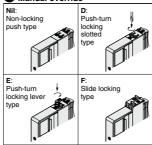

\* Refer to page 28 for with the safety slide locking manual override.

### A, B port size (\*Top ported valve only)

ш	riireau pipilig			
Sy	mbol	Port size	Applicable series	
N	<b>/15</b>	M5 x 0.8	SY3000	
(	01	1/8	SY5000	
(	12	1/4	SY7000	

Symbol	A, B port			
Syllibol	A, b port	SY3000	SY5000	SY700
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4 C6	ø4	•	•	_
	ø6	•	•	•
C8	ø8	T -	•	•
C10	ø10	_	_	•
C12	ø12	I -	_	•

IIICII	Size (One-touc			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

### A, B port thread type (Top ported valve only)

Nil	Rc
F	G
N	NPT
T	NPTF

\* Only Nil is available for M5.

#### Type of mounting screw

Type of illounting sciew		
Nil	Round head combination screw Hexagon socket head cap screw	
В		
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* Refer to page 33 when the base gaskets and mounting screws are required for maintenance.
- \* When using an optional spacer assembly, "B" and "H" cannot be selected.

#### Wiring specifications

wo	Without M12 connector cable	
W1	With M12 connector cable (300 mm)	
W2	With M12 connector cable (500 mm)	
W3	With M12 connector cable (1000 mm)	
W4	With M12 connector cable (2000 mm)	
W7	With M12 connector cable (5000 mm)	
140 1 2 1 1 1 140		

When ordering a product with M12 connector cable, the connector cable is included.

#### 16 Port location (Sub-plate)

Transfer (Can plate)		
Nil	Side ported	
В	Bottom ported	
٧*	Top ported (1P, 5EA, 3EB port: Side ported)	

\* Only available for the valve piping type "3" top ported.

#### Port size (Sub-plate)

Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

### 10 Cub plate thread type

Sub-plate thread type	
Nil	Rc
F	G
N	NPT
Т	NPTF

Note) When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 33.


32



#### How to Order

#### In the case of (Sub-plate) (Sub-plate single unit part no.)

\* Without valve

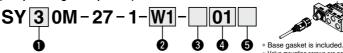



• ••••••	
3	SY3000
5	SY5000
7	SY7000

### 3 Port location (Sub-plate)

Nil	Side ported	
В	Bottom ported	
٧	Top ported [1(P), 5(EA), 3(EB) port: Side ported]	

\* Valve mounting screws are not included.

	Sub-plate thread type	
Γ	Nil	Rc
	F	G
	N	NPT
	Т	NDTE

Wiring specifications

wo	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

Note 1) Refer to the table below for connector cable part numbers.

Note 2) When ordering a product with M12 connector cable, the connector cable is included

### 4 Port size

Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)


SY30M-27-1-W1-01.....1 set (Sub-plate single unit part no.) \*SY3200-5U1-X90 ....... 1 set (2-position double part no./Main valve fluororubber specification)

#### Ordering example when mounting a manifold option (spacer etc.)

SY30M-27-1-W1-01·····1 set (Sub-plate single unit part no.) \*SY3400-5U1.....1 set (3-position exhaust center part no.)

\*SY30M-60-1A ......1 set (Part no. for double check spacer with residual pressure release valve)

### Sub-plate Parts No.

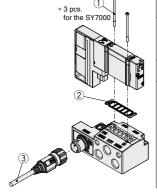

No.	Description		Part no.			Note
			SY3000	SY5000	SY7000	Note
1	Valve mounting screw	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.). (30 pcs. for the SY7000)
		Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	
2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
	M12 waterproof connector cable		ZS-37-L			Cable length: 300 mm Cable weight: Approx.18 g
3			ZS-37-M			Cable length: 500 mm Cable weight: Approx.23 g
			ZS-37-N			Cable length: 1000 mm Cable weight: Approx.36 g
			ZS-37-P			Cable length: 2000 mm Cable weight: Approx.62 g
			ZS-37-C			Cable length: 5000 mm Cable weight: Approx.140 g



**Tightening torque** 


M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000) Dimensions: Series SY3000

**Side Ported** 

Top Ported

**XT34** 

Plug-in Single Unit/Sub-plate

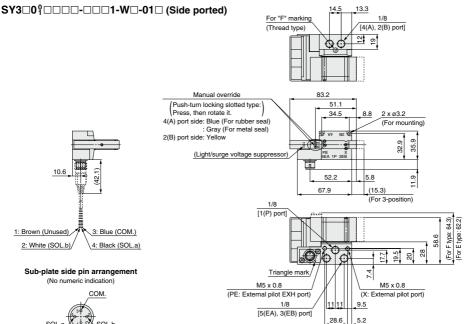


Note 1) These figures show the "SY3200-5Z1-WO-01F".



Unused (Without terminal)



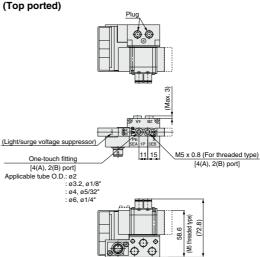


Note 2) These figures show the "SY3230-5Z1-C6-WO-V01F". Note 3) 1 (P), 5 (EA), 3 (EB), X and PE ports are side ported.



Dimensions: Series SY3000

Plug-in Single Unit/Sub-plate

**Bottom** Ported

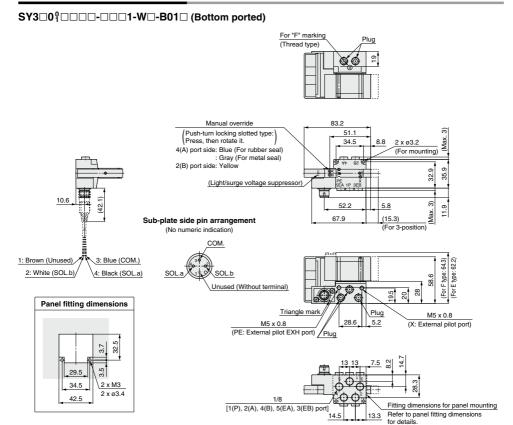

Note) These figures show the "SY3200-5Z1-WO-B01F".

Dimensions: Series SY5000

10.6

1: Brown (Unused)

2: White (SOL.b),

SY5□01□□□□□□1-W□-02□ (Side ported)

3: Blue (COM.)

10.8

Plug-in Single Unit/Sub-plate


46.4

1/4

[4(A), 2(B) port]

M5 x 0.8

EX600

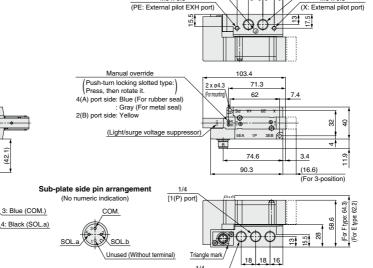


[5(EA), 3(EB) port]

For "F" marking

(Thread type)

M5 x 0.8

Note 1) These figures show the "SY5200-5Z1-WO-02F".

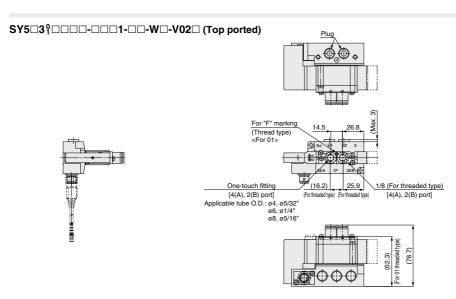

Note 2) These figures show the "SY5230-5Z1-C8-WO-V02F" Note 3) 1 (P), 5 (EA), 3 (EB), X and PE ports are side ported.

Plug-in Single Unit/Sub-plate **Bottom** Ported Dimensions: Series SY5000 SY5□01□□□□□□1-W□-B02□ (Bottom ported) For "F" marking (Thread type) 10.8 46.4 M5 x 0.8 M5 x 0.8 Plug (PE: External pilot EXH port) (X: External pilot port) 103.4 Manual override 71.3 Push-turn locking slotted type: (Max. 2 x ø4.3 62 7.4 Press, then rotate it. 4(A) port side: Blue (For rubber seal) : Gray (For metal seal) 2(B) port side: Yellow Max. 32 4 (Light/surge voltage suppressor) 10.6 74.6 3.4 11.9 90.3 (16.6)(For 3-position) Sub-plate side pin arrangement (No numeric indication) (For F type: 64.3) (For E type: 62.2) 1: Brown (Unused) 3: Blue (COM.) сом. 2: White (SOL.b) 4: Black (SOL.a) 58.6 28 SOL.b Panel fitting dimensions Triangle mark 2 x M4 Unused (Without terminal) 2 x ø4.5 Fitting dimensions for panel mounting Refer to panel fitting dimensions 8 32 for details.

Note) These figures show the "SY5200-5Z1-WO-B02F".

30.5

[1(P), 2(A), 4(B), 5(EA), 3(EB) port]


3.5


57

62


Dimensions: Series SY7000

XT34

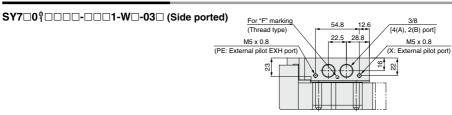

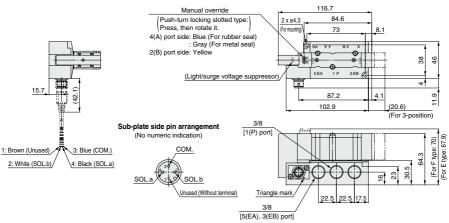

Note 1) These figures show the "SY7200-5Z1-WO-03F".

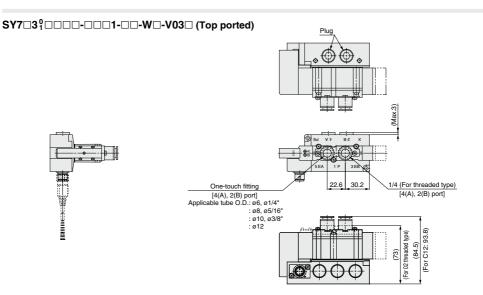


Note 2) These figures show the "SY7230-5Z1-C10-WO-V03F" Note 3) 1 (P), 5 (EA), 3 (EB), X and PE ports are side ported.

Dimensions: Series SY7000

Plug-in Single Unit/Sub-plate

**Bottom** Ported

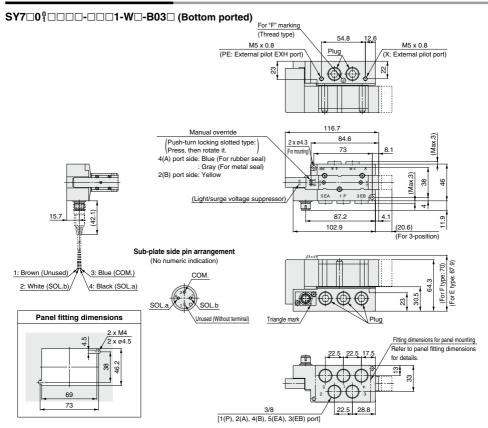


Note) These figures show the "SY7200-5Z1-WO-B03F".

# Plug-in Metal Base

EX600 VM

XT34

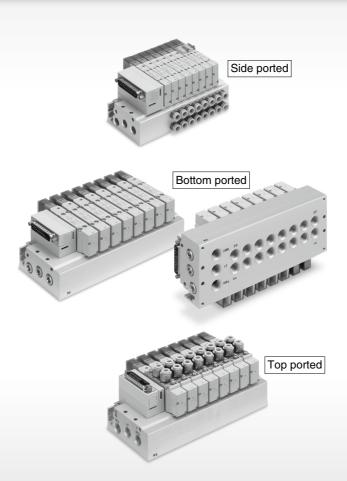


# Series SY3000/5000/7000 Type 50, 51, 52

## Plug-in Metal Base

SY7000



Enclosure (Based on IEC60529)

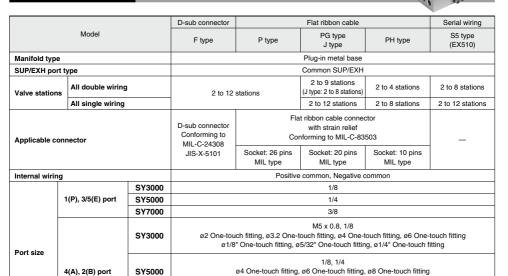

ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting

ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4" One-touch fitting, ø5/16" One-touch fitting, ø3/8" One-touch fitting

IP20

IP40

# Directional Control Valves

SY

EX600

9 XT34

### Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Valve flow-rate characteristics				Weight: W [g] Note 2)	
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm3/(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	Fixed: C□	Replaceable: KC□
<b>SS5Y3-50 (Side ported)</b> 1/8 C6		1.1	0.19	1.1	0.15	39n + 247	43.5n + 247	
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	1.2	0.14	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	1.2	0.20	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	2.6	0.14	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	2.8	0.20	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	3.1	0.13	103n + 379	
SS5Y7-50 (Side ported)	SS5Y7-50 (Side ported) 3/8		3.8	0.27	4.0	0.20	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	4.8	0.20	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	4.9	0.24	164n	+ 510

Valve Seal Type: Metal Seal

vaive ocal Type: Metal ocal									
	Port size		Valve	flow-rate c	Weight: W [g] Note 2)				
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		(n: stations)		
	(P, EA, EB)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	Fixed: C□	Replaceable: KC	
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	1.0	0.12	39n + 247	43.5n + 247	
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	1.1	0.10	41.5n + 251	48.5n + 251	
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	1.1	0.14	44n + 247		
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	2.3	0.13	93n + 379	110n + 379	
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	2.5	0.16	93n + 413	113n + 413	
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	2.6	0.12	103n	+ 379	
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	3.5	0.18	144n + 510	158n + 510	
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	4.0	0.16	150n + 549	172n + 549	
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	3.8	0.18	164n	+ 510	

 $<sup>\</sup>ast$  Calculation of effective area S and sonic conductance C: S = 5.0 x C



Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.

Note 2) Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 19 for the appropriate number of stations.




# Plug-in Metal Base

D-sub Connector | Flat Ribbon Cable | PC Wiring

# Series SY3000/5000/7000

#### **How to Order Manifold**

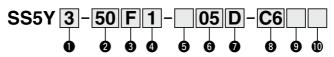


#### Series SY3000 SY5000 SY7000

<b>2</b> Туре							
50	Side ported						
51	Bottom ported						
50R	Side ported, External pile						

\* External pilot is not available for the bottom ported type.

#### 3 Connector type

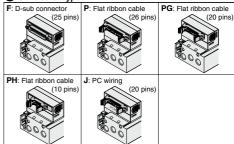

# Connector entry direction

1: Upward	2: Lateral

# Wiring type


Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

## **How to Order Manifold Assembly**

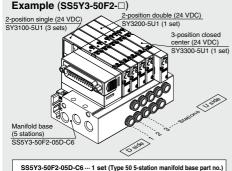

\*SY3100-5U1------ 3 sets (2-position single part no.)

\*SY3200-5U1 ...... 1 set (2-position double part no.) SY3300-5U1-----1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 64.

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### Valve stations

Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	double		-	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:		single		-	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring

PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins)								
Symbol	Stations	Note	Symbol	Stations	Note			
02	2 stations	All	02	2 stations	All			
1	- :	double	:	- :	double			
04	4 stations	wiring	08	8 stations	wiring			
02	2 stations	All	02	2 stations	All			
1	- :	single	:	- :	single			
08	8 stations	wiring	12	12 stations	wiring			

\* This also includes the number of blanking plate assembly.

# Plug-in Metal Base Series SY3000/5000/7000

7 P, E port entry

U	U side Note 1)			
D	D side Note 1, Note 2)			
В	Both sides			
Note 1) Blugg are mounted on the				

Note 1) Plugs are mounted on the opposite side of the selected ports.

Note 2) Only D side is available for Type 51 (Bottom ported).

1 Thread type

Tilleau type				
Nil	Rc			
F	G			
N	NPT			
Т	NPTF			

**Mounting** 

Nil	Direct mounting						
D	DIN rail mounting (With DIN rail)						
D0	DIN rail mounting (Without DIN rail)						
D3	For 3 stations	Canaify a languar rail than					
:		Specify a longer rail than the standard length.					
D12	For 12 stations	the standard length.					

Note 1) Only direct mounting is available for Type 51 (Bottom ported).

Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

## 8 A, B port size

Thread piping

Symbol	A, B port	SY3000	SY5000	SY70
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

One-touch fitting (Metric)

		and the state of	01/0000	07.000	SY7000				
Sy	/mbol	A, B port	513000	515000	517000				
	C2	ø2	•	_	_				
	C3	ø3.2	•	_	_				
Fixed	C4	ø4	•	•	_				
íĈ	C6	ø6	•	•	_				
	C8	ø8	_	•	•				
	C10	ø10	_	_	•				
	KC2	ø2	•	_	_	Type 50	Type 51		
	KC3	ø3.2	•	_	_	(Side ported)	(Bottom ported)		
흥	KC4	ø4	•	•	_	า			
Replaceable	KC6	ø6	•	•	•	م ا ا			
plac	KC8	ø8	_	•	•				
Be	KC10	ø10			•				
	KC12	ø12	_	_	•		<b>*</b>		
	M*	Mixed sizes	sizes		•	<b>1</b>			
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8				


One-touch fitting (Inch)

Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•			
Fixed	N7	ø1/4"	•	•	_	- /	97
"	N9	ø5/16"	_	•	•		<i>SO</i> L
	N11	ø3/8"	_	_	•	<b></b>	
	KN1	ø1/8"	•	_	_	Type 50	Type 51
흥	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Seat	KN7	ø1/4"	•	•	•		
Replaceable	KN9	ø5/16"	_	•	•	<b>700</b>	
	KN11	ø3/8"			•	000 ca	
	M*	Mixed sizes	•	•	•		
P,	P, E port size (Thread piping)			1/4	3/8		

<sup>\*</sup> When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

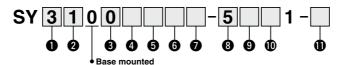

#### A Sarias

	• ••	
	3	SY3000
	5	SY5000
	7	SY7000

2 Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
<b>A</b> *	4 position	N.C./N.C.			
B*	4-position dual 3-port	N.O./N.O.			
C*	dual 5-port	N.C./N.O.			

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

• i not type						
Nil	Internal pilot					
R	External pilot					

# Back pressure check valve (Ruilt-in valve type)

(Bu	ıilt-in valve type)
Nil	None

- \* Only rubber seal type
- \* Back pressure check valve is not available for the 3-position type and the SY7000.

Built-in

#### 6 Pilot valve option

•	O I not valve option									
Nil	Standard (0.7 MPa)									
В	Quick response type (0.7 MPa)									
K*	High pressure type (1.0 MPa)									

\* Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
* Bo cur	e to select the nower saving circuit type

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbo	Symbol With light		Common specification		
Nil	_	_			
R	_		Non-polar		
U	•				
S	_		Positive		
Z	•	•	Negative common		
NS					
NZ	•				
. 0-1	1711 1 ((A 1711 A				

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

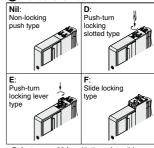

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

<u>יעטיישט</u>	be of illounting screw			
Nil Round head combination scre				
В	Hexagon socket head cap screw			
K	Round head combination screw (Falling-out-prevention type)			
Н	Hexagon socket head cap screw (Falling-out-prevention type)			

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 87 for part numbers of the base gasket and mounting screw.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

# Metal Base Series SY3000/5000/7000

Type 50/Side Ported Plug-in D-sub Connector


Directional Control Valves

SY

EX600 VM


XT34

Metal Base

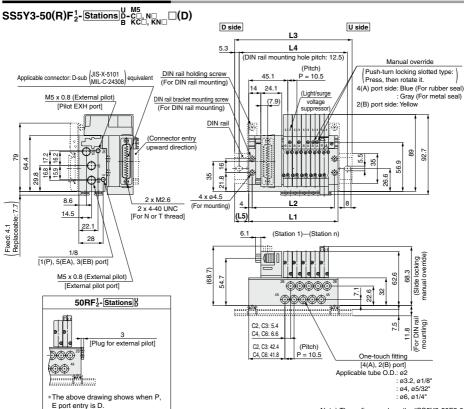

Dimensions: Series SY3000


Note) These figures show the "SS5Y3-50F2-05B-C6".

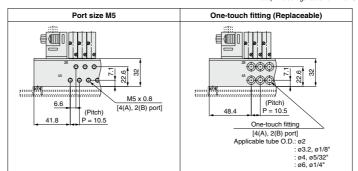

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17



Plug-in Type 50/Side Ported
Metal Base D-sub Connector

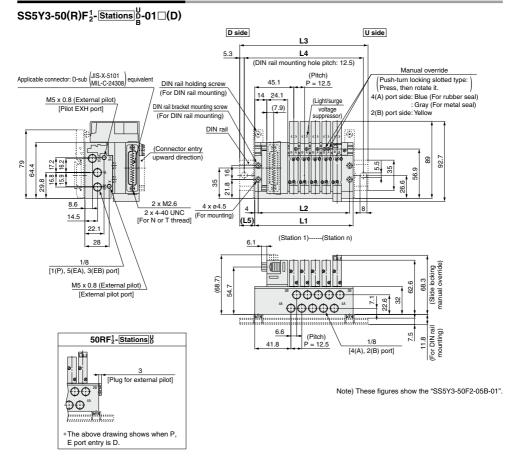

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

# Pug-in Metal Base Series SY3000/5000/7000


Plug-in Type 50/Side Ported
Metal Base D-sub Connector

Directional Control Valves


SY

EX600

XT34

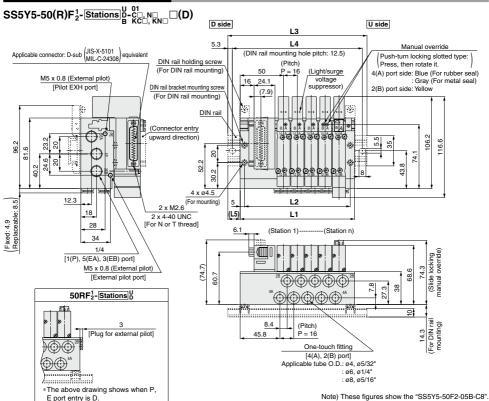

Dimensions: Series SY5000

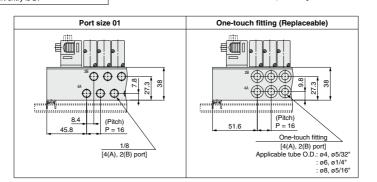


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5



Plug-in Type 50/Side Ported

Metal Base D-sub Connector

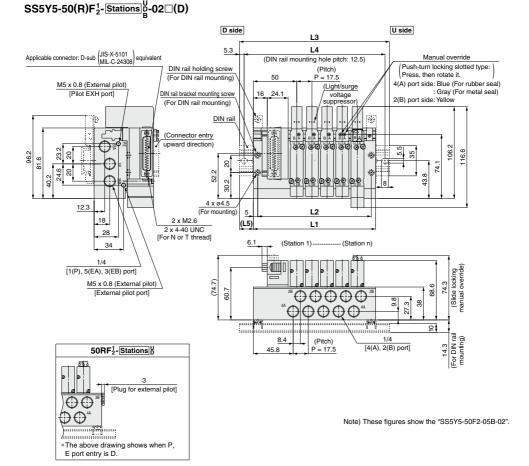

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

# Metal Base Series SY3000/5000/7000



Directional Control Valves

SY


EX600


VM

XT34


Dimensions: Series SY7000 SS5Y7-50(R) $F_2^1$ -Stations  $\stackrel{U}{\stackrel{0}{\stackrel{}}{\stackrel{}}}$   $\stackrel{02}{\stackrel{}{\stackrel{}}{\stackrel{}}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$   $\stackrel{\square}{\stackrel{}}$ D side U side 5.3 1 4 Applicable connector: D-sub (JIS-X-5101 MIL-C-24308) equivalent (DIN rail mounting hole pitch: 12.5) Manual override Push-turn locking slotted type: (Pitch) P = 19 DIN rail holding screw Press, then rotate it. 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) M5 x 0.8 (External pilot) 16 24.1 (Light/surge voltage : Gray (For metal seal) PE: Pilot EXH port DIN rail bracket mounting screw 2(B) nort side: Yellow (7.9) suppressor (For DIN rail mounting) (DIN rail)

5.5 (Connector entry upward direction) 116.7 133.2 102 92.1 84. 32. 2 x M2.6 6 4 2 x 4-40 UNC [For N or T thread] 32 18.1 (5.4) 4 x ø4.5 20.9 (For mounting) 12 34.5 L1 M5 x 0.8 (External pilot) 40.5 X: External pilot port 3/8 6.1 (Station 1)-----(Station n) [1(P), 5(EA), 3(EB) port]

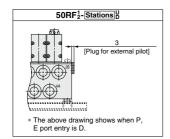

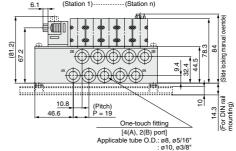

Note) These figures show the "SS5Y7-50F2-05B-C10".

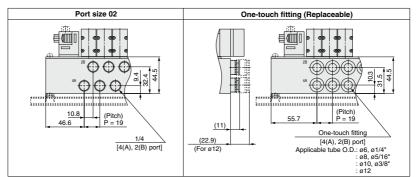


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


**SMC** 

Plug-in Type 5
Metal Base Flat F


Type 50/Side Ported
Flat Ribbon Cable



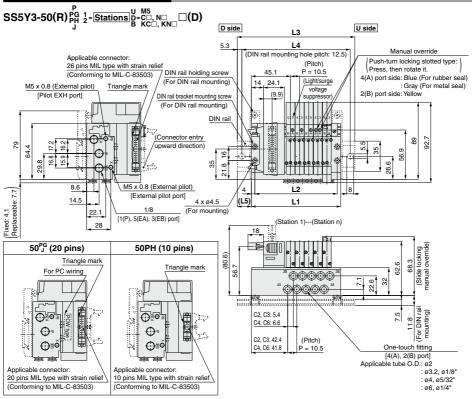

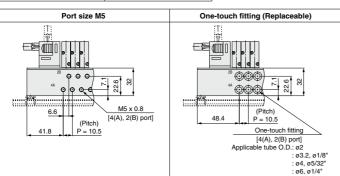

Note 1) These figures show the "SSSY3-50P2-05B-C6". Note 2) Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

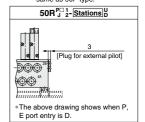

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Metal Base Series SY3000/5000/7000

Plug-in

Type 50/Side Ported Flat Ribbon Cable


SY

Directional Control Valves

EX600

VM XT34



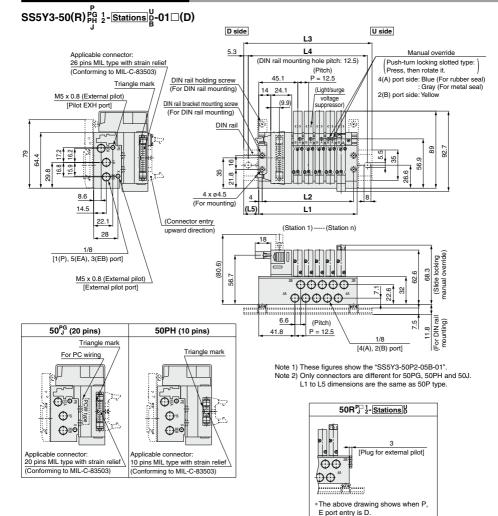



Dimensions: Series SY3000


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5





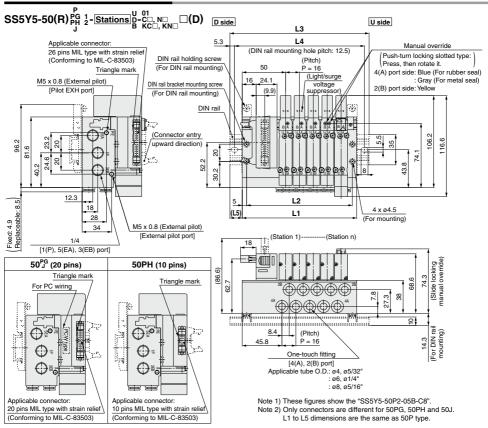

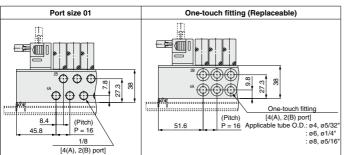

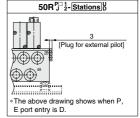

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

# Metal Base Series SY3000/5000/7000


Plug-in Metal Base Flat Ribbon Cable


Type 50/Side Ported

Directional Control Valves

SY EX600

VM XT34

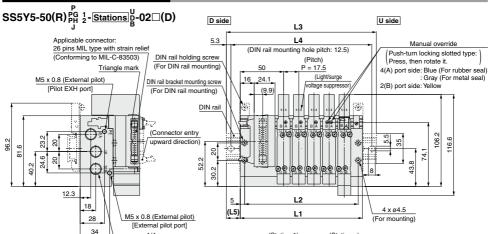


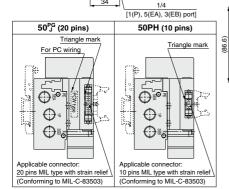

Dimensions: Series SY5000

(Station n) 18 (Slide locking manual override) 9.89 62.7 9.8 8 27.3 유 (For DIN rail mounting) 8.4 (Pitch) [4(A), 2(B) port] 14.3 45.8 P = 17.5

Note 1) These figures show the "SS5Y5-50P2-05B-02". Note 2) Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

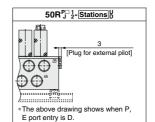



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5






Type 50/Side Ported
Flat Ribbon Cable

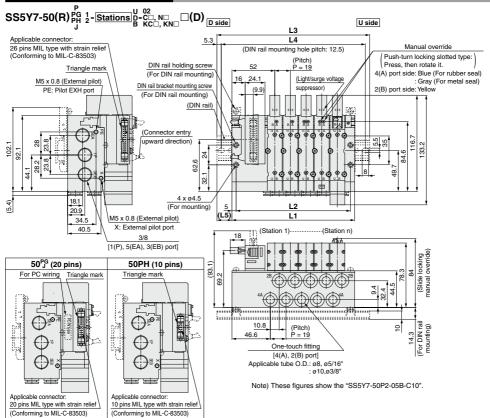

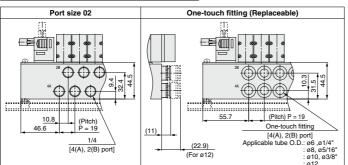

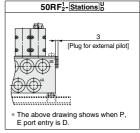

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

# Purson Metal Base Series SY3000/5000/7000





Directional Control Valves

SY

EX600

XT34

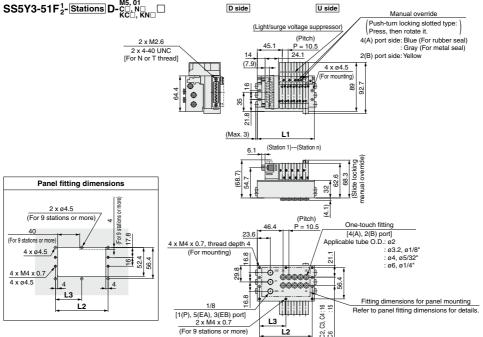

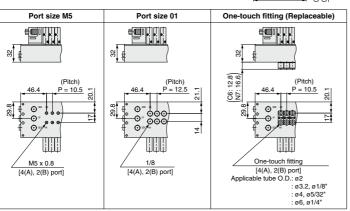

Note) These figures show the "SS5Y3-51F2-05D-C6".


Port Size M5, C□, N□, KC□, KN□


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

Port	Size	01
------	------	----

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	-	_	_	-	_	-	77.8	84	90.3	96.5



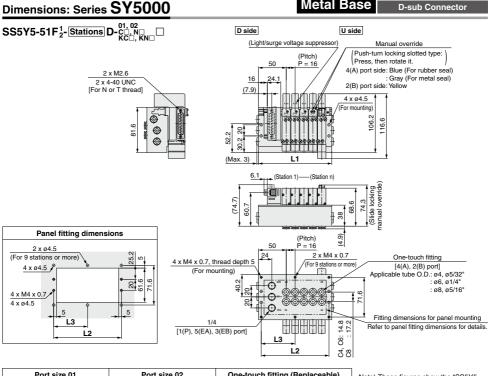

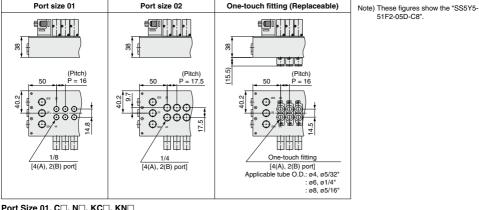

- 1	ort size of, Co, No, Roo, RNo											
	n: Stations	2	3	4	5	6	7	8	9	10	11	12
	L1	84	100	116	132	148	164	180	196	212	228	244
	L2	74	90	106	122	138	154	170	186	202	218	234
	L3	_	_	_	_	_	_	_	93	101	109	117

Port Size 02											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

D--4 0:-- 00

# Pug-in Metal Base Series SY3000/5000/7000




Directional Control Valves


SY


EX600


XT34



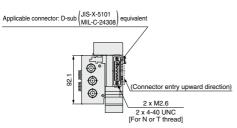


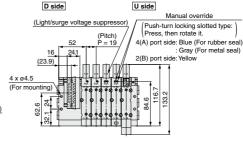

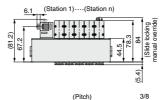

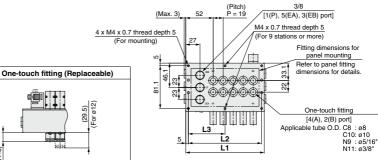


Note) These figures show the "SS5Y7-51F2-05D-C10".

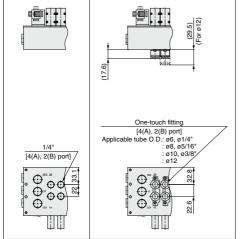

Port size 02

Panel fitting dimensions							
4 x Ø4.5	2 x ø4.5 (For 9 stations or more)  4 x M4 x 0.7 4 x ø4.5						


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

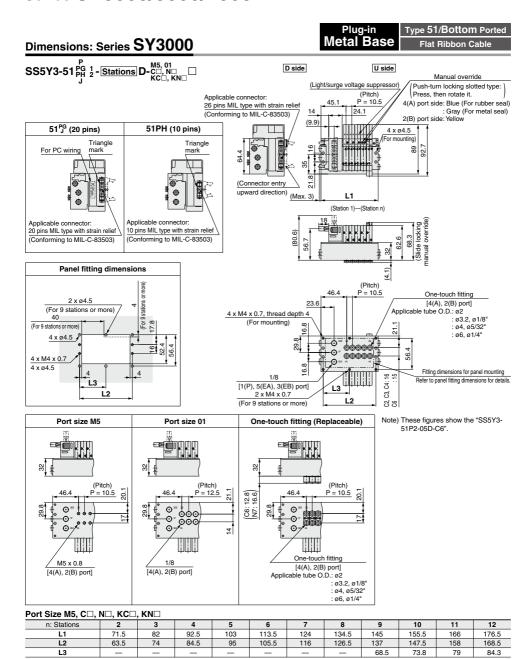

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

Port Size 01

# Pug-in Metal Base Series SY3000/5000/7000

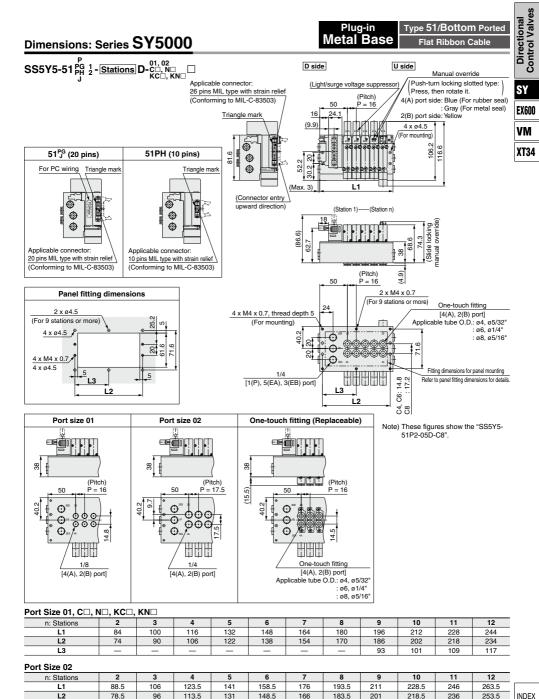

**SMC** 

100.5

109.3

118

L3


126.8


· C□, N□ □(D)


## Dimensions: Series SY7000


SS5Y7-51 PG 1-Stations D-




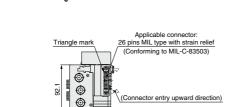

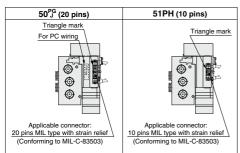


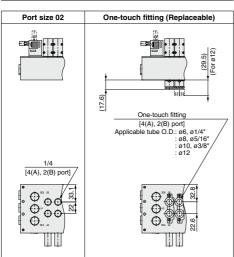

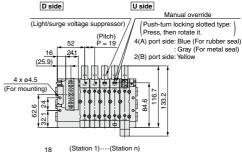

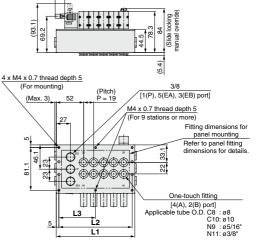

Note) These figures show the "SS5Y7-51P2-05D-C10".

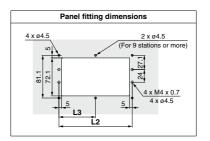

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136


# Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

Type 52 Top Ported

# Series SY3000/5000/7000


#### **How to Order Manifold**

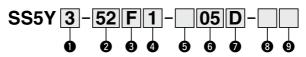

#### Series SY3000 SY5000

2 Type 52 Top ported 52R Top ported, External pilot

4 Connector entry direction

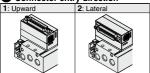

0	Wiring	tvpe


Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a

## How to Order Manifold Assembly

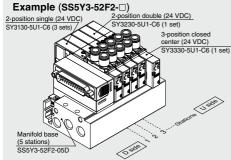


SS5Y3-52F2-05D 1 set (Type 52 5-station manifold base part no.)
*SY3130-5U1-C6 3 sets (2-position single part no.)
*SY3230-5U1-C6 1 set (2-position double part no.)
*SY3330-5U1-C61 set (3-position closed center part no.)
The estarial denotes the symbol for essembly

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Prefix it to the part numbers of the valve etc.

#### Connector type

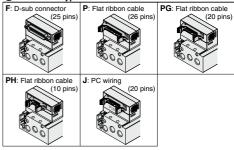

#### 6 Valve stations

<b>F</b> : D-	sub con	nector (25 pins)	P: Fla	t ribbon	cable (26 pins)	PG: Flat ribbon cable (20 pins)			
Symbol	mbol Stations Note		Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
:	- :	double	:	:	double	:	:	double	
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
:	- :	single	:	- i	single	:	:	single	
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring	
DII.		11 (40 : )	1.50		(00 : )				

PH:	lat ribbo	n cable (10 pins)	J: PC wiring (20 pins)					
Symbol	Stations	Note	Symbol	Stations	Note			
02	2 stations	All	02	2 stations	All			
- :	- :	double	:	- :	double			
04	4 stations	wiring	08	8 stations	wiring			
02	2 stations	All	02	2 stations	All			
- :	:	single	:	:	single			
08	8 stations wiring		12	12 stations	wiring			

\* This also includes the number of blanking plate assembly.

P, E port entry								
U	U side Note)							
D	D side Note)							
В	Both sides							

Note) Plugs are mounted on the opposite side of the selected ports.

#### Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

Mounting				
Nil	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	0		
:	i :	Specify a longer rail than the standard length.		
D12	For 12 stations	une standard length.		

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.


EX600

VM

**XT34** 

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

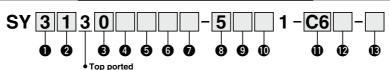

#### Series

•	
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

er
er
er

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

	- · · · · · · · · · · · · · · · · · · ·
Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

(Built-in valve type)	
Nil	None
Н	Built-in

- \* Only rubber seal type
- Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

\* Only metal seal type is available for the high pressure type.

### Coil type

Con type		
	Nil	Standard
	Т	With power saving circuit
		(Continuous duty type)

- \* Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage


<u> </u>		
	5	24 VDC
	6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•	•	
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

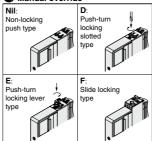

\* Refer to page 28 for with the safety slide locking manual override.

#### A, B port size

#### Thread pipin

	uu pipiiig		
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

#### One-touch fitting (Metric)

Symbol	A D t	SY3000	CVEDOO	CV7000
	A, B port	513000	212000	31/000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-	-touch fitting (i	ncn)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### 1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

#### B Type of mounting screw

<u>ועי שט</u>	be of illounting screw
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket

manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 87 for part numbers of the base


gasket and mounting screw.
"B" and "H" cannot be selected for the individual

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in Metal Base Type 52/Top Ported


D-sub Connector, Flat Ribbon Cable

Dimensions: Series SY3000

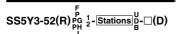


\*The above drawing shows when P,

E port entry is D.

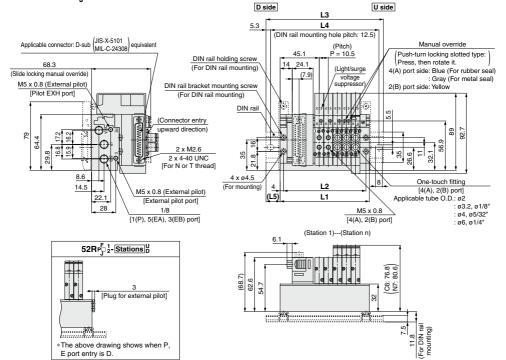

Note) These figures show the "SS5Y3-52F2-05B".

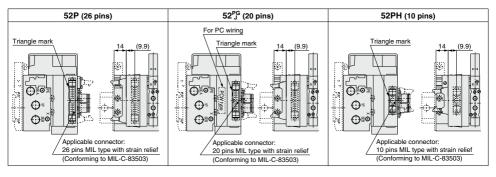

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Pug-in Metal Base Series SY3000/5000/7000




Type 52/Top Ported


D-sub Connector, Flat Ribbon Cable

Directional
Control Valves


EX600


VM XT34

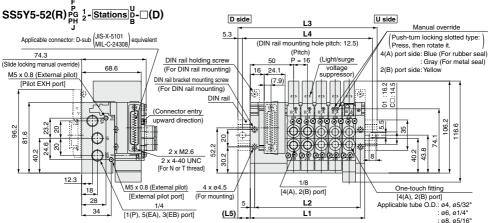


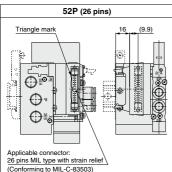

Dimensions: Series SY5000

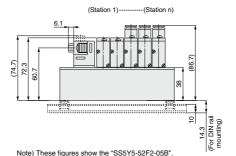


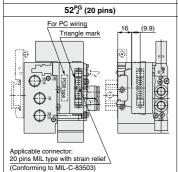

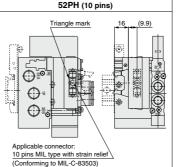

52RP 2-Stations D
[Plug for external pilot]
*The above drawing shows when P, E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

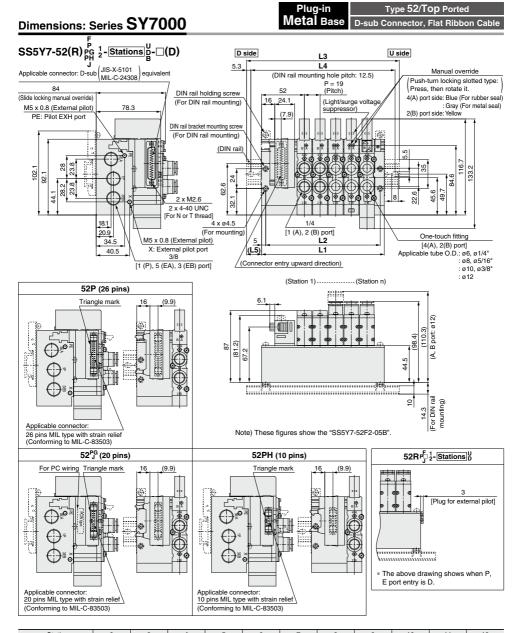

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

# Plus-in Metal Base Series SY3000/5000/7000



# 015 AXT100-DS25-030 (N) [IP40 compliant]

Nil: Metric size N: Inch size

Lead wire color for D-sub connector cable assembly by

		le mm² x 25 cores . ø1.4
1	Approx	c. ø10
	Seal	(Length)
	Mole	led cover
	4	2 x M2.6 x 0.45 or 2 x 4-40 UNC
,		Connector JBZ-25S made by J.S.T. Mfg. Co., Ltd.
	6 55	
	1425	Socket side
	9	Terminal no.
	47.04	

			termi	nal nur	nber
	Cable 0.3 mn O.D. ø	n <sup>2</sup> x 25 cores 1.4	Terminal no.	Lead wire color	Dot marking
	. Approx. 6	×10	1	Black	None
	- Approx. v	<u> </u>	2	Brown	None
	Seal (L		3	Red	None
	Sear (L	.engin)	4	Orange	None
			5	Yellow	None
	E∃ ∠Molded	l cover	6	Pink	None
	/ / /	x M2.6 x 0.45	7	Blue	None
		2 x 4-40 UNC	8	Purple	White
Ф	/ <u>  W</u> o	onnector JBZ-25S-3	9	Gray	Black
-		ade by J.S.T. Mfg.	10	White	Black
-ф		o., Ltd.	11	White	Red
	55		12	Yellow	Red
	1425	Socket side	13	Orange	Red
_		Terminal no.	14	Yellow	Black
φ	(·····································	Terminarno.	15	Pink	Black
+	113*		16	Blue	White
	47.04		17	Purple	None
-			18	Gray	None
			19	Orange	Black
			20	Red	White
			21	Brown	White
0	nnector cable as	sembly	22	Pink	Red
	Accombly part no	Noto	23	Gray	Red

#### D-sub o

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable
3 m	AXT100-DS25-030	0.3 mm <sup>2</sup> x 25 cores
5 m	AXT100-DS25-050	0.511111 x 25 coles

- \* When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- \* Cannot be used for movable wiring.
- \* Lengths other than the above are also available. Please contact SMC for details.

Electrical cria	lacteris	uc
Item	Property	
Conductor resistance Ω/km, 20°C	65 or less	
Voltage limit V, 1 minute, AC	1000	
Insulation resistance MΩ/km, 20°C	5 or more	

#### Electrical characteristics | Connector Manufacturers' Example

- · Fujitsu, Ltd.
- · Japan Aviation Electronics Industry, Ltd.

24 Black White

25 White None

- . J.S.T. Mfg. Co., Ltd. · Hirose Electric Co., Ltd.
- Note) The minimum bending radius of the D-sub connector cable is 20 mm.

Note) When	using a valve with no p	olarity, either po	sitive common or
negativ	ve common can be use	ed.	

**Electrical Wiring Specifications** 

Connector terminal no.

Terminal no.

14

3

16

4

5

6

19

0 7

0 20

0 8

0 9

0 10

0

0 11

0 24

0 25

COM. o 13

0 21

22 0

12

Station 3

Station 4

Station 6 {

Station 7

Station 9 -

Station 10 23

Station 12 4

<All double wiring>

SOL.a

SOL.b o

SOL.a

SOL.a

SOL.b

SOL.a

SOL.a

SOL.b o

SOL.a

SOL.a

SOL.a

SOL.a

SOL.b 15

SOL.b o 17

SOL.b 19

SOL.b o 20

SOL.b o 21

SOL b 22

SOL.a 10

SOLa 11

SOL.b 24

SOLa 12

mSOL.b 25

COM. ○ 13

SOL.b o 23

Terminal no. Polarity

2 (-)(+)

3 (-)(+)

16 (-) (+)

4

5

18 (-) (+)

6

7 (-)(+)

8 (-)(+)

(-)(+)

(-) (+)

(-) (+)

(-) (+)

(-) (+)

(-)(+)

(-)(+)

(-) (+)

(-)(+)

(-) (+)

(-) (+)

(-) (+)

(-) (+)

(-) (+)

(+) (-)

Positive Negative common common

(+)

(+)

(+)

D-sub connector

01

05 06

<All single wiring>

\_\_\_\_SOL.a\_o

SOL.a

\_\_\_SOL.a\_o 2

\_\_\_\_SOL.a\_o

\_\_\_\_SOL.a\_o

SOL.a

\_\_\_\_SOL.a\_o

\_\_\_\_SOL.a\_o

\_\_\_\_SOL.a\_o

\_\_\_\_SOL.a\_o

\_\_\_\_\_SOL.a\_o 17

\_\_\_\_\_SOL.a\_\_ 15

200 08 0.9

Station 1

Station 2

Station 3

Station 4

Station 5

Station 6

Station 7

Station 8

Station 9


Station 10

Station 11

Station 12



#### **Electrical Wiring Specifications**

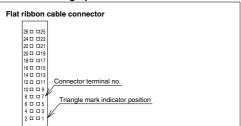


	P: Fla	t ribbon ca	able (26 pir	าร)		
<all single<="" th=""><th>wiring&gt;</th><th><all (<="" th=""><th>double wiri</th><th>ng&gt;</th><th></th><th></th></all></th></all>	wiring>	<all (<="" th=""><th>double wiri</th><th>ng&gt;</th><th></th><th></th></all>	double wiri	ng>		
	Terminal	no.		ninal n	o. Pol	arity
Station 1 Station 2 Station 3 Station 3 Station 4 Station 5 Station 6 Station 6 Station 7 Station 8 Station 9 Station 10 Station 9 Station 10 S	Terminal (OLA) 1 (OLA) 1 (OLA) 2 (OLA) 2 (OLA) 3 (OLA) 4 (OLA) 5 (OLA) 6 (OLA) 7 (OLA) 9 (OLA) 1 (OLA)		Term SOL.a SOL.b SOL.a SOL.b SOL.a SOL.b SOL.a SOL.b SOL.b SOL.b SOL.b SOL.b SOL.b SOL.b SOL.b SOL.b SOL.c SOL.b SOL.c	ninal n 1 2 3 4 5 6 7 8 9 110 111 12 13 14 15 16 17 18 19 20 11 11 12 13 14 15 16 17 18 19 20 11 11 11 11 11 11 11 11 11 11 11 11 11	o. Pol	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
	° 22 ° 23 ° 24	Station 12 {	m SOL.b	23 24	(-) (-)	(+) (+) (+)
	OM. OM. 0 25		COM.	~-	(+) (+)	(-) (-)
				F	ositive	Negative

#### PG: Flat ribbon cable (20 pins) <All single wiring> <All double wiring> Terminal no. Polarity Terminal no. SOL.a SOL.a Station 1 1 (+) SOL.a SOL.b Station 1 Station 2 2 2 (-) (+) SOL.a SOL.a Station 3 3 3 (-)(+) SOL.a Station 2 SOL.b Station 4 4 4 (-)(+)SOL.a SOL.a 5 (<del>-</del>) Station 5 5 (+) SOL.a Station 3 SOL.b Station 6 6 6 (+) SOL.a SOL.a 7 Station 7 (+) SOL.a Station 4 SOL.b Station 8 R 8 (-) (-) (+) SOL.a ....SOLa 9 Station 9 9 (+) SOL.b ∘ 10 Station 5 (-) (-) Station 10 (+) SOL.a ∘ 11 \_\_\_\_\_<u>SOL.a</u> 0 11 Station 11 (+) Station 6 SOL.b 12 m SOL.a 12 (-) (-) (-) Station 12 (+) SOL.a 13 ∘ 13 (+) Station 7 SOL.b 14 (+) 0 14 SOL.a ∘ 15 0 15 (+) Station 8 SOL.b ∘ 16 (-) 0 16 (+) SOL.a 0 17 (-) 0 17 (+) Station 9 SOL.b 18 ∘ 18 (+) COM. ○ 19 COM.<sub>○</sub> 19 (+) (-)COM. 20 С<u>ОМ.</u> <sub>о 20</sub> (+)Positive Negative common common

Note) When using a valve with no polarity, either positive common or

negative common can be used

#### Cable Assembly

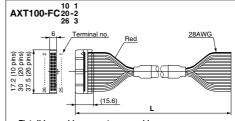

#### Flat ribbon cable connector assembly

	Cable	Assembly part no.						
length (L)		26 pins 20 pins		10 pins				
	1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1				
	3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2				
	5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3				

- \* When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \* Cannot be used for movable wiring.
- \* Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Sumitomo 3M Limited
   J.S.T. Mfg. Co., Ltd.
- Fujitsu, Ltd.
- Oki Electric Cable Co., Ltd.

PH: Flat ribbon cable (10 p	ins)	_		7
<all single="" wiring=""> <all double="" th="" w<=""><th>iring</th><th>&gt;</th><th></th><th></th></all></all>	iring	>		
	minal	no. Pola	arity	
Station 1	1 2 3 4 5 6 7 8 9	(-) (-) (-) (-) (-) (-) (-) (-) (+)	(+) (+) (+) (+) (+) (+) (+) (+) (-) (-)	
		Positive common	Negative common	

	J: Flat ribbo	on cable (2	20 pins) P	C w	iring	
<all sir<="" th=""><th>ngle wiring&gt;</th><th><aii< th=""><th>double wi</th><th>rinç</th><th><b>j&gt;</b></th><th></th></aii<></th></all>	ngle wiring>	<aii< th=""><th>double wi</th><th>rinç</th><th><b>j&gt;</b></th><th></th></aii<>	double wi	rinç	<b>j&gt;</b>	
	Terminal	no.	Term	ninal	no. Pol	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 8 Station 9 Station 11 Station 11	SOLa 20	Station 1 {   Station 2 {   Station 3 {   Station 4 {   Station 5 {   Station 6 {   Station 7 {   Station 7 {   Station 8 {   Station 9 {   St	-m-SOL.a	20 18 16		(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
					Positive common	Negative common

common common

# Plug-in Metal Base Ex510

# Series SY3000/5000/7000

#### **How to Order Manifold**



#### Series SY3000 5 SY5000 SY7000

#### Side ported Bottom ported 50R Side ported, External pilot

SI (	unit output polarity
Nil	Positive common
N	Megative common

\* External pilot is not available for the bottom ported type.

02	2 stations		
:	:		

6 P, E port entry

6 Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
- :	:	wiring	- :		wiring
08	8 stations	wiring	12	12 stations	wiring

Note 1) Plugs are mounted on the opposite

Note 2) Only D side is available for Type 51

side of the selected ports.

(Bottom ported).

\* This also includes the number of blanking plate assembly.

## Wiring type

Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

## A, B port size


В

iiiicuu	piping			
Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4		•	•

U side Note 1) D side Note 1) Note 2)

Both sides

#### **How to Order Manifold Assembly**

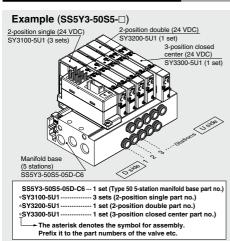

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 82. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B nort on base side

#### One-touch fitting (Metric)

ſ	Sy	mbol	A, B port	SY3000	SY5000	SY7000			
		C2	ø2	•	_	_			
Fixed		СЗ	ø3.2	•	_	_			
	ed	C4	ø4	•	•	_			
	Ě	C6	ø6	•	•	_			
		C8	ø8	_	•	•		) I	
ı		C10	ø10	_	_	•			
		KC2	ø2	•	_	_	Type 50	Type 51	
ı		кс3	ø3.2	•	_	_	(Side ported)	(Bottom ported)	
ı	e	KC4	ø4	•	•	_	111		
ı	Replaceable	KC6	ø6	•	•	•		`	
ı	plac	KC8	ø8	_	•	•			
ı	æ	KC10	ø10	_	_	•			
ı		KC12	ø12	_	_	•			
ı		M*	Mixed sizes	•	•	•	40	_	
Ī	Ρ,	E port s	size (Thread piping)	1/8	1/4	3/8			

Or	ie-tou	ch fitting (Inch	1)				
Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•		~/(	<u> </u>
"	N9	ø5/16"	_	•	•		10 L
	N11	ø3/8"	_	_	•	<u></u>	9
	KN1	ø1/8"	•	_	-	Type 50	Type 51
e	KN3	ø5/32"	•	•	_	1 (Side ported)	(Bottom ported)
Replaceable	KN7	ø1/4"	•	•	•	Ш.	( ************************************
Bac	KN9	ø5/16"	_	•	•		
Be	KN11	ø3/8"	_	_	•		
	M*	Mixed sizes	•	•	•		
P,	E port s	size (Thread piping)	1/8	1/4	3/8		

\* When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

# Plus Metal Base Series SY3000/5000/7000

Directional Control Valves

SY

EX600

VM

XT34

### 8 Thread type

Nil	Rc
F	G
N	NPT
т	NPTF

Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than	
·	For 12 stations Specify a foriger rail trial		
D12			


Note 1) Only direct mounting is available for Type 51 (Bottom ported).

Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details about the EX510 Gateway-type Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smcworld.com

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

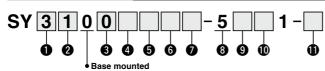

#### 1 Series

	<b>U</b> 00.	103
ı	3	SY3000
	5	SY5000
ı	7	SY7000

2 Type of actuation

1	2-position	Single
2	2-position	Double
3	3-position	Closed center
4 5		Exhaust center
		Pressure center
<b>A</b> *	4-position dual 3-port	N.C./N.C.
B* C*		N.O./N.O.
		N.C./N.O.
•		

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

A Pilot type

<u> </u>	ot type
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

(50	ant-in valve type)
Nil	None
H	Built-in

- \* Only rubber seal type
- \* Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
	, ,	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

 Only metal seal type is available for the high pressure type.

#### Coil type

	••	
Nil	Standard	
T	With power saving circuit (Continuous duty type)	

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage

5	24 VDC


#### Light/surge voltage suppressor and common specification

and common operment.			
Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_	•	Positive common
Z	•		FUSITIVE CONTINUE
NS	_		Negative common
NZ	•		iveyalive collillori

\* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common).

Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).

## Manual override

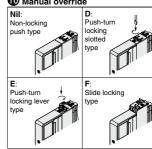

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

- //	<b>J</b>	
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 87 for part numbers of the base gasket and mounting screw.


\* "B" and "H" cannot be selected for the individual


"B" and "H" cannot be selected for the individua SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

↑ Protective class class II (Mark: ♠)



Plug-in **Metal** Base Type 50/Side Ported EX510

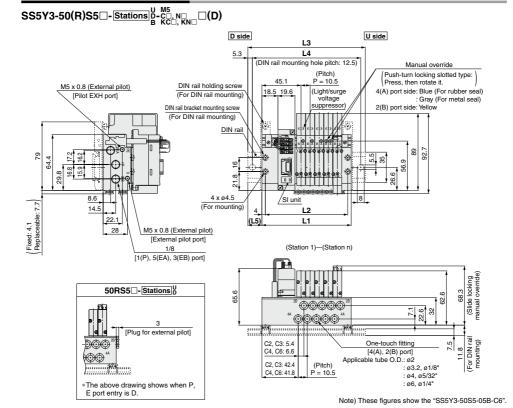

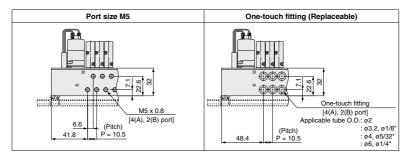

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Puggin Metal Base Series SY3000/5000/7000

Plug-in Type 50/Side
Metal Base Ex510


Control Valves

SY

EX600

XT34


Dimensions: Series SY3000
SS5Y3-50(R)S5\_-Stations D-01\_(D)

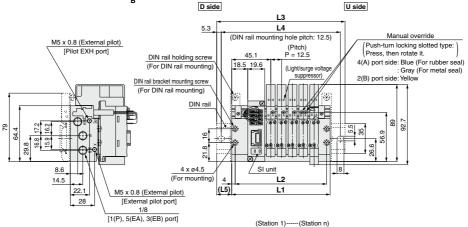

50RS5□-Stations S

3
[Plug for external pilot]

\*The above drawing shows when P, E port entry is D.

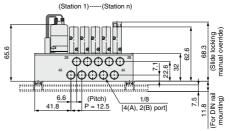


Note) These figures show the "SS5Y3-50S5-05B-01".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5



Plug-in **Metal** Base Type 50/Side Ported EX510

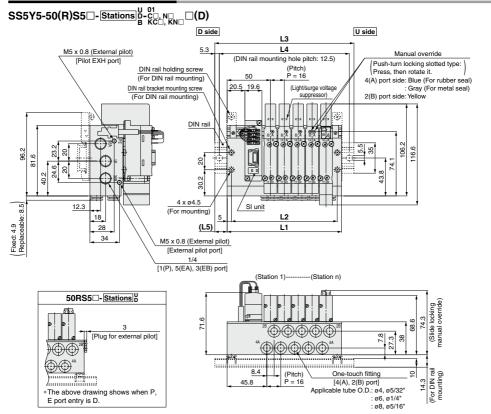

Note) These figures show the "SS5Y5-50S5-05B-C8".

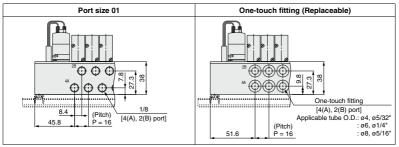

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


# Plus-in Metal Base Series SY3000/5000/7000

Plug-in Ty Metal Base

Type 50/Side Ported

Directional Control Valves

Dimensions: Series SY5000
SS5Y5-50(R)S5 - Stations 5-02 (D)

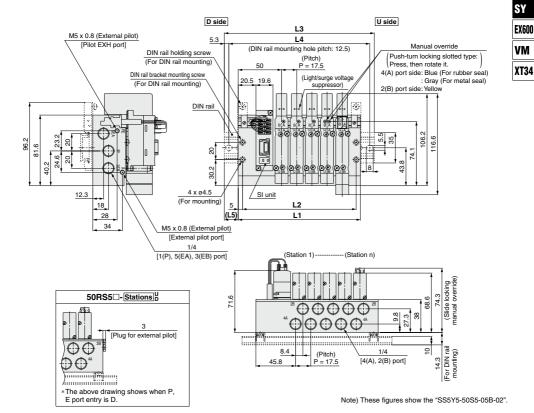

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5


INDEX




76

Dimensions: Series SY7000


Plug-in **Metal** Base Type 50/Side Ported EX510

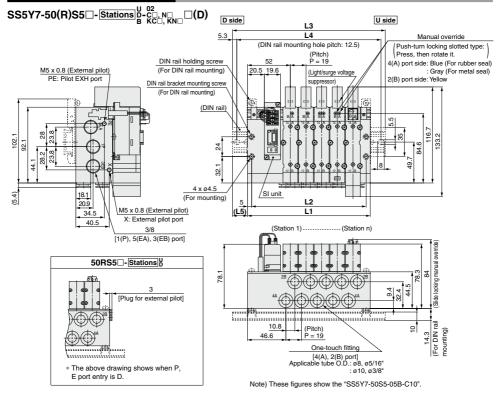

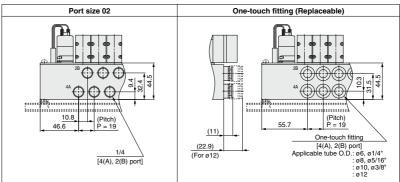

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


## Pugin Metal Base Series SY3000/5000/7000

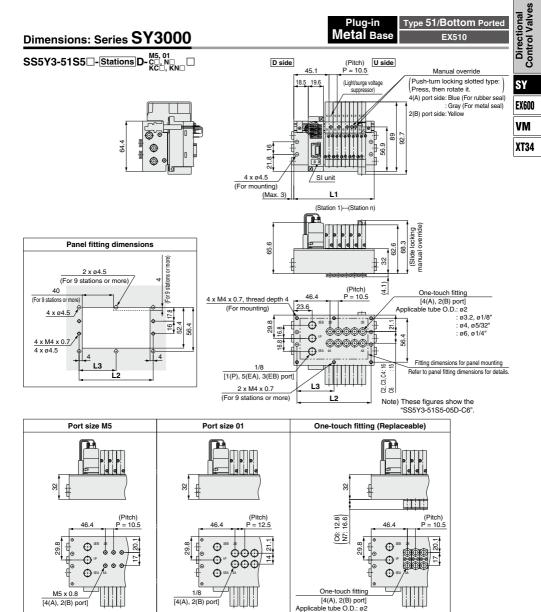

Port S	Port Size M5, C□, N□, KC□, KN□										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3			_	_		_	_	68.5	73.8	79	84.3

Port S	Port Size 01										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

: Ø3.2, Ø1/8" : Ø4, Ø5/32" : Ø6, Ø1/4"

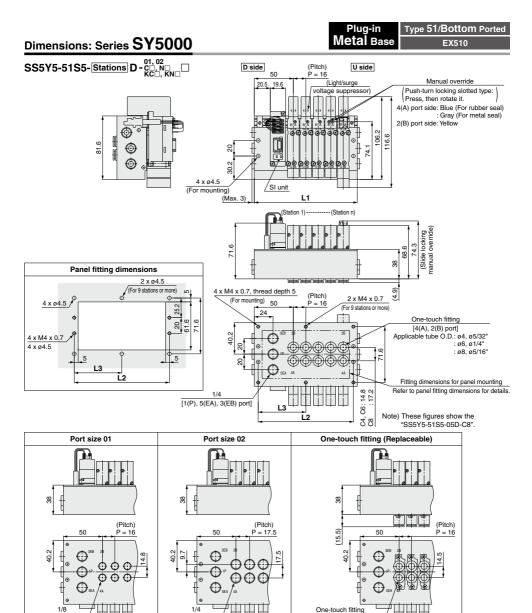

Port S	Port Size 01, C□, N□, KC□, KN□										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_		_	_	93	101	109	117

[4(A), 2(B) port]

PUIL 3	ize u	_									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

: ø6, ø1/4" : ø8, ø5/16"

[4(A), 2(B) port] Applicable tube O.D.: ø4, ø5/32

[4(A), 2(B) port]

Port Size 02

## Puse Metal Base Series SY3000/5000/7000

Plug-in **Metal** Base

Type 51/Bottom Ported

EVE10

SY EX600

Directional Control Valves


VM


XT34





SS5Y7-51S5□-<u>Stations</u>D-<sup>02</sup><sub>KC□, KN□</sub>□(D)

Dimensions: Series SY7000

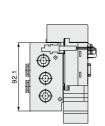


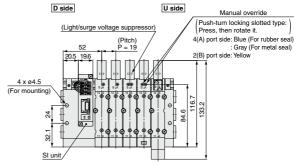


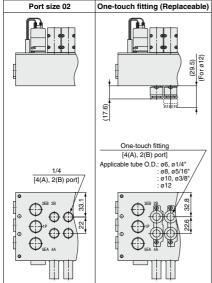

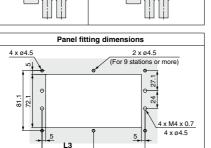

Ľ2

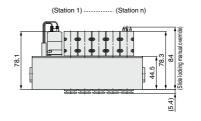

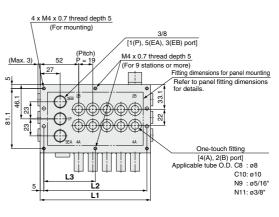

Note) These figures show the "SS5Y7-51S5-05D-C10".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136



## Plug-in Metal Base Ex510

# Series SY3000/5000/7000

### **How to Order Manifold**

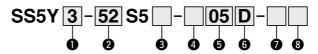

## Series

- 1	<b>O</b> O O O	100
ſ	3	SY3000
	5	SY5000
[	7	SY7000

## 2 Type

• ',	<b>J</b> C
52	Top ported
52R	Top ported, External pilot

## 3 SI unit output polarity

Nil	Positive common
N	Negative common

## Wiring type

Nil	All double wiring Note 1)	
S	All single wiring Note 2)	

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used.

Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

## **5** Valve stations

Symbol	Stations	Note		
02	2 stations	All double		
:	:	wiring		
08	8 stations			
02	2 stations	All single		
:				
12	12 stations	wiring		


 This also includes the number of blanking plate assembly.

### 6 P. E port entry

U	U side Note)
D	D side Note)
В	Both sides

Note) Plugs are mounted on the opposite side of the selected ports.

## How to Order Manifold Assembly

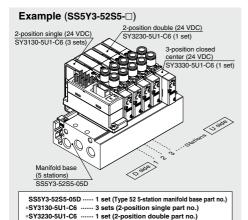

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

\*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

## 8 Mounting

	•			
Nil	Direct mounting			
D		DIN rail mounting		
-		(With DIN rail)		
D0		DIN rail mounting		
D0	(Without DIN rail)			
D3	For 3 stations	Consifer a language sail than		
:	- :	Specify a longer rail than the standard length.		
D12	For 12 stations			

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway-type Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual.

Please download the Operation Manual via SMC website, http://www.smcworld.com


SY EX600

VM

**XT34** 

## How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

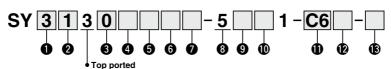

### Series

3	SY3000
5	SY5000
7	SY7000

## Type of actuation

• 1)   0   1   1   1   1   1   1   1   1   1				
1	2-position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *	4-position	N.C./N.C.		
B*	dual	N.O./N.O.		
C* 3-port		N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

	a, po	, p.
0	Rubber seal	Rubber
1	Metal seal	Metal s

## Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve

(E	uilt-in valve t	ype)
Nil	l N	lone

- Built-in
- Only rubber seal type \* Back pressure check valve is not available
- for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
K*	High pressure type (1.0 MPa)		

\* Only metal seal type is available for the high pressure type.

## Coil type

N	il	Standard	
T		With power saving circuit (Continuous duty type)	

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

## Rated voltage


24 VDC

### 9 Light/surge voltage suppressor and common specification

Symbol With light		Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•		Non-polai	
S	s –		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

\* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).

## Manual override

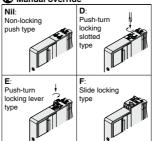

Refer to page 28 for with the safety slide locking manual override.

## A, B port size

#### Thread piping

Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### One-touch fitting (Metric)

one reach many (means)					
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3 C4	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10			•	
C12	ø12	_	_	•	

#### One-touch fitting (Inch)

Olie.	touch hitting (i	iicii)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

## 12 Thread type

Nil	Rc					
F	G					
N	NPT					
Т	NPTF					

\* Only Nil is available for M5.

## (R) Type of mounting screw

40 . 1	Type of illounting screw								
Nil	Round head combination screw								
В	Hexagon socket head cap screw								
K	Round head combination screw (Falling-out-prevention type)								
Н	Hexagon socket head cap screw (Falling-out-prevention type)								

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 87 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in Type 52/Top Ported

Metal Base EX510

## Dimensions: Series SY3000

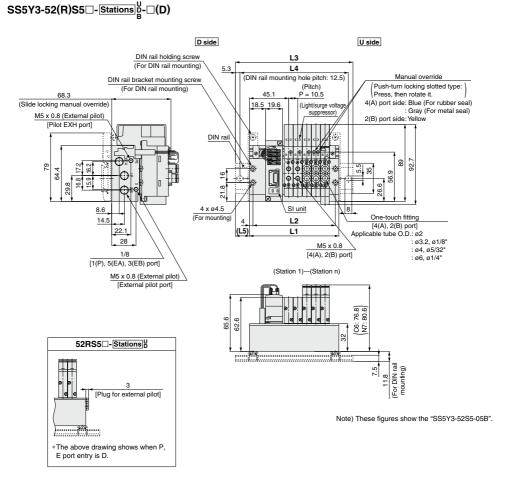

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

## Metal Base Series SY3000/5000/7000

Plug-in Metal Base


Type 52/Top Ported EX510

Directional Control Valves

SY

EX600 VM

**XT34** 

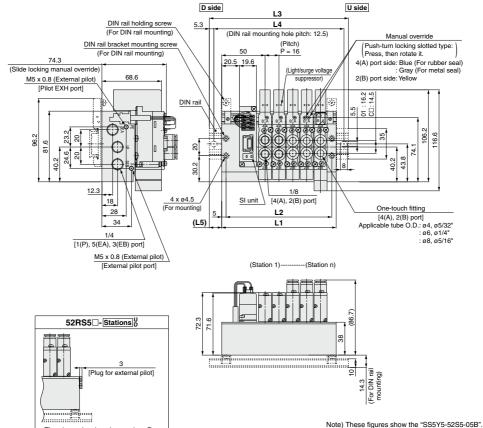

Dimensions: Series SY5000

SS5Y5-52(R)S5□-Stations D-□(D)

\*The above drawing shows when P,


E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5



Type 52/Top Ported Plug-in Metal Base EX510

## Dimensions: Series SY7000 SS5Y7-52(R)S5□-Stations D-□(D)

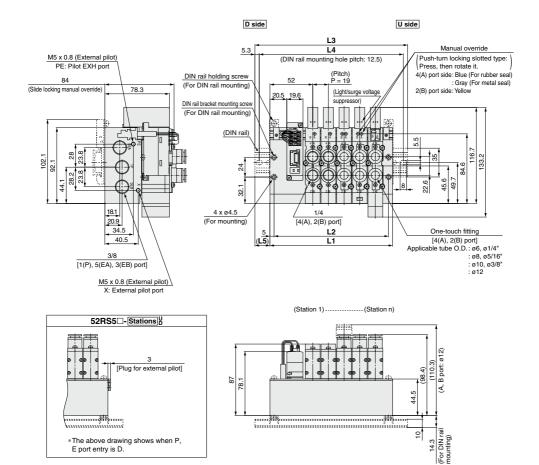


Note) These figures show the "SS5Y7-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

E port entry is D.

# Series SY3000/5000/7000 Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

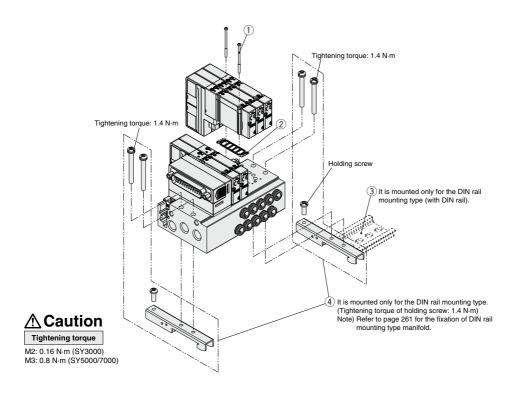

### Manifold Parts No.

No.	De	scription		Part no.	Note	
		SY3000 SY5000 SY7000				
(1)	Valve mounting	Round head combination screw		<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
	screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(30 pcs. for the SY7000)
2	Base gasket (for plug-in metal	base and sub-plate)	SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
(3)	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 239.
4	Clamp bracket a		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).

SY EX600 VM **XT34** 

## Manifold Parts No.


#### ■Blanking plate assembly (With mounting screw)

Used when expecting valve additions, or for maintenance.

A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.





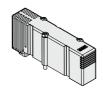

SY30M-26-2A (-B)

SY50M-26-2A (-B)


SY70M-26-2A (-B)

Refer to pages 250, 252, 254 for dimensions.

Refer to pages 240 to 244 for individual SUP/EXH and other options.

How to Order Blanking Plate Assembly


Circuit diagram

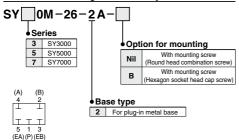



XT34

## Plug-in Connector Connecting Base

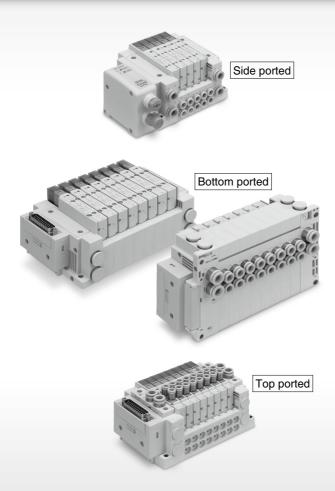



# Series SY3000/5000/7000 Type 10, 11, 12 Plug-in Connector Connecting Base

## **Manifold Specifications**

	Model			sub ector	Fla	t ribbon ca	able	Terminal block box	Lead wire	Circular connector		Serial	wiring	
			F type	FW type	P type	PG type J type G type	PH type	T type	L type	M type	S6□ type (EX600)	SA2 type (EX500) S4□ type (EX126)	S□ type (EX250) (EX260)	S3□ type (EX120)
Manifol	d type			Plug-in connector connecting base										
SUP/EX	H port type					C	Common S	UP/EXH (	Common f	or 3/5 por	t)			
Valve stations			2 t	o 24 static	ns	2 to 18 stations (J/G type: 2 to 16 stations)	2 to 8 stations	2 to 20 stations	2 to 24 stations			2 to 16 stations	2 to 24 stations	2 to 16 stations
Applicable connector			D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 109.)	Dedicated connector (Refer to page 109.)	wit Conform	ch strain reing to MILer to page Socket: 20 pins MIL type	lief -C-83503 111.) Socket: 10 pins							
Internal	wiring						Positive	common,	Negative	common				
		SY3000		ø8 One-touch fitting										
			ø5/16" One-touch fitting											
	1(P), 3/5(E) port	SY5000	ø10 One-touch fitting ø3/8" One-touch fitting											
		SY7000					9	o12 One-to	ouch fitting	)				
Port		317000		ø1/2" One-touch fitting										
size		SY3000		ø2		•					ıg, ø6 One		ng	
							-			<u> </u>	One-touch			
	4(A), 2(B) port	SY5000					0.		·		ouch fitting	-		
	P						<u> </u>			· .	One-touch			
	SY700			Ø6		•		•		•	g, ø12 One One-touch		rig	
					1/4 ق	One-touc	ii iittiiriy, છ	3/10 One	-toucii iittii	ig, שאוס (	IP67*	IP67*		-
Enclosure (Based on IEC60529)		IP40	IP67*		IP40			IP67*		I/O unit: partially IP40	EX500 gateway unit, input unit: IP65	IP67* (Partially IP40)	IP20	

<sup>\*</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 256).

## SY

EX600

VM

XT34

## Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Val	ve flow-rate	AA AA F A Note (1)			
Model	1, 3/5	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	Weight: W [g] Note 2) (n: stations)	
	(P, E)	(A, B)	C [dm3/(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	(II. Stations)	
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	1.6	0.19	28.9n + 293	
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	1.3	0.19	25.1n + 314	
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	3.6	0.17	74.7n + 398	
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	4.2	0.26	76.8n + 445	
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	3.8	0.23	66.3n + 417	
SS5Y7-10 (Side ported)	C12	C12	6.2	0.23	5.9	0.20	106.6n + 496	
SS5Y7-11 (Bottom ported)	C12	C12	6.2	0.25	6.6	0.21	117.9n + 532	
SS5Y7-12 (Top ported)	C12	C12	5.6	0.31	5.7	0.24	84.1n + 519	

Valve Seal Type: Metal Seal

arve dear Type: Metar dear							
	Port	size	Val	ve flow-rate			
Model	1, 3/5	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/I	3→E)	Weight: W [g] Note 2) (n: stations)
	(P, E)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	(II. Stations)
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	1.3	0.18	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	1.3	0.18	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	3.1	0.17	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	3.5	0.15	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	3.0	0.16	66.3n + 417
SS5Y7-10 (Side ported)	C12	C12	4.4	0.14	4.4	0.17	106.6n + 496
SS5Y7-11 (Bottom ported)	C12	C12	4.6	0.16	4.7	0.18	117.9n + 532
SS5Y7-12 (Top ported)	C12	C12	3.9	0.21	4.1	0.14	84.1n + 519

<sup>\*</sup> Calculation of effective area S and sonic conductance C; S = 5.0 x C

Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.

Note 2) Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.


To obtain the weight with valves attached, add the valve weights given on page 19 for the appropriate number of stations.




## **Connector Wiring Layout**

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring) (Manifold specification sheet is not necessary.)

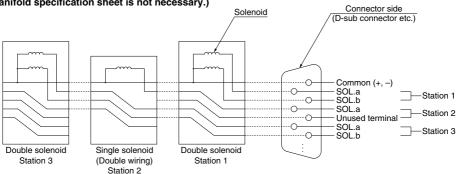

■ Single/double wiring are mixed.

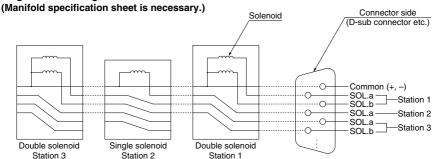

Note) These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.



٧M XT34





## Plug-in Connector Connecting Base


D-sub Connector Flat Ribbon Cable PC Wiring

## Series SY3000/5000/7000



### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

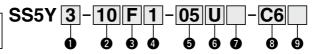


#### Series SY3000 5 SY5000 SY7000

<b>②</b> Ty	ре
10	Side ported
11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

3 Connector type

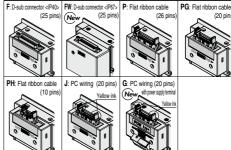

4 Connector entry direction





The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 222) sepa-

## Valve stations

F/FV	<b>V</b> : D-s	ub connector (25 pins)	P: Flat ribbon cable (26 pins)					
Symbol	Stations	Note	Symbol	Stations	Note			
02	2 stations		02	2 stations				
:	- :	Double wiring Note 1)	:	- :	Double wiring Note 1)			
12	12 stations	-	12	12 stations				
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)			
÷	- :	(Available up to	:	-	(Available up to			
24	24 stations	24 solenoids)	24	24 stations	24 solenoids)			
PG:	Flat ri	ibbon cable (20 pins)	PH:	Flat ril	bbon cable (10 pins)			

PG:	PG: Flat ribbon cable (20 pins)							
Symbol	Stations	Note						
02	2 stations							
:	;	Double wiring Note 1						
09	9 stations							
02	2 stations	Specified layout Note 2)						
:	:	(Available up to						
18	18 stations	18 solenoids)						

	10 30000113						
J/G:	J/G: PC wiring (20 pins)						
Symbol	Stations	Note					
02	2 stations						
	- ;	Double wiring Note 1)					
08	8 stations						
02	2 stations	Specified layout Note 2)					
	- ;	(Available up to					
16	16 stations	16 solenoids)					


	PH: Flat ribbon cable (10 pins)					
1	Symbol	Stations	Note			
1	02	2 stations				
	:	:	Double wiring Note 1)			
	04	4 stations				
1	02	2 stations	Specified layout Note 2)			
	:	:	(Available up to			
	08	8 stations	8 solenoids)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an

unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4position valves cannot be used where single wiring has been specified.) Note 3) This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

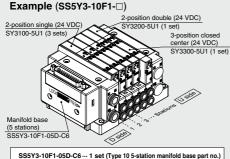

- \*SY3100-5U1------ 3 sets (2-position single part no.)
- \*SY3200-5U1------1 set (2-position double part no.) \*SY3300-5U1------1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order
- from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 108. In this case, use caution as there is also output on the A and B port on base side Specify on a manifold specification sheet if plugs are required on the A and B port on base side

## Connector Connecting Base Series SY3000/5000/7000

EX600

VM

**XT34** 

6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

## SUP/EXH block assembly

	Nil	Internal pilot
	s	Internal pilot,
		Built-in silencer
	R	External pilot

\* 3/5(E) port is plugged for the built-in silencer type.

9 Mounting and Option

Cumbal	Mounting	Option Name plate Station number			DIN Rail	Option	
Syllibol		Name plate	Station number		Nil	Dire	ct mounting
Nil	Direct	_	_		0	Without D	IN rail (with bracket)
AA	mounting	•	•		3	For 3 stations	Specify a longer rail
BA		•	_		:		than the total length
D□	DIM 1	-	_		24	For 24 stations	of specified stations.
A□	DIN rail mounting	•	•				
В□		•	_				

Note 1) Enter the number of stations inside  $\hfill\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported). Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

8	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)								
		A R port			10/Side											
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000								
C2			ø2	•	_	_	_	_	_							
C3			ø3.2	•	_	_	_	_								
C4	_		ø4	•	•	_	•									
C6	ight		ø6	•	•	•	•	•								
C8	Straight		ø8	_	•	•	•	•	200							
C10	0,		ø10			•		•	CO STATE							
C12			ø12	_	_	•	_	•	4							
CM*		Straig	ht port, mixed sizes	•	•	•	•	•								
L4			ø4	•	•	_	_	_								
L6		2	ø6	•	•	•	_	_								
L8		Upward	ø8	_	•	•	_	-								
L10		5	5	5	5	5	5	5	5	ø10	_	_	•	_	_	
L12	(e)		ø12	_	_	•	_	I	S Jal San							
B4	N No	Elbow Note	ø4	•	•	_	_	_								
B6	lρο		Downward	vnward	vnward	ard	ard	ar	ard	ø6	•	•	•	_	_	
B8	Е					ø8	_	•	•	_	I					
B10				ø10	_	_	•	_	_							
B12			ø12	_	_	•	_	_								
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_								
			rt size h fittings)	ø8	ø10	ø12	ø10	ø12								

A B nort size (Inch/One-touch fitting)

А, в	) P	JΓL	Size (Inc	in/One	:-touci	ı mum	9)				
Symbol		A, B port			10/Side						
.,				SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_			
N3	]		ø5/32"	•	•	_	•	_			
N7	튱		ø1/4"	•	•	•	•	•			
N9	Straight		ø5/16"	_	•	•	•	•			
N11	"		ø3/8"	_	_	•	_	•	of Superson		
CM*	1	Straig	ght port, mixed sizes	•	•	•	•	•			
LN3			ø5/32"	•	_	_	_	_			
LN7	1	ard	ø1/4"	•	•	_	_	_			
LN9	(0	Jpward	ø5/16"	_	•	_	_	_			
LN11			ø3/8"	_	_	•	_	_	O TO SERVICE S		
BN3	Elbow Note)	ē	ø5/32"	•	_	_	_	_			
BN7	Š	ownwar	Downward	War	ø1/4"	•	•	_	_	_	
BN9	□			ø5/16"	_	•	_	_	_		
BN11	1		ă	ø3/8"	_	_	•	_	_		
LM*	Elbow port, mixed sizes (Including upward and downward piping)		luding upward and	•	•	•	_	_			
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).


\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**ØSMC** 

## How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

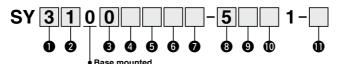

#### A Sarias

• ••	
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

O Type of dotadtion			
1	2-position	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *	4-position	N.C./N.C.	
B*	B* dual	N.O./N.O.	
C*	3-port	N.C./N.O.	
0 1 11 11 1 11 1 11 1 11			

\* Only rubber seal type is available for the 4-position dual 3-port valve.

## 6 Pilot valve ontion

•	• ra op				
Nil	Standard (0.7 MPa)				
В	Quick response type (0.7 MPa)				
K*	High pressure type (1.0 MPa)				


\* Only metal seal type is available for the high pressure type.

## Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type)		
* Be sure to select the power saving circuit type when the valve is continuously energized for			

- long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page
- 258 for details.

## Manual override

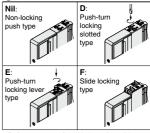

\* Refer to page 28 for with the safety slide locking manual override.

## Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

NII	None
Н	Built-in
* Only ru	ubber seal type. Manifold installed type

- is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

## 8 Rated voltage

5	24 VDC
6	12 VDC

Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC.

## Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R			Non-polar
U	•		
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- \* Only "Z" and "NZ" types are available for with the power saving circuit.
- \* For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

Type of mounting screw

Γ	Nil	Round head combination screw
	В	Hexagon socket head cap screw
Γ	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance
- Refer to page 234 for part numbers of the base gasket and mounting screw.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in **Connector Connecting Base**  Type 10/Side Ported

Directional Control Valves D-sub Connector (IP40)


SY

EX600

VM

XT34

SS5Y3-10F<sub>2</sub>-Stations

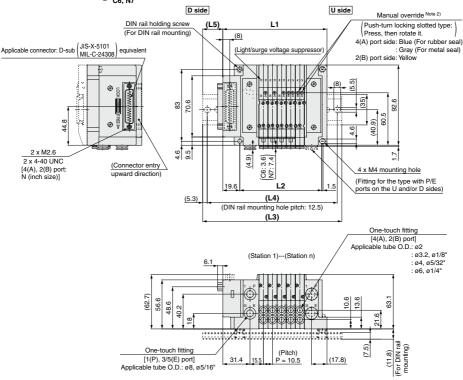

Note 1) These figures show the "SS5Y3-10F2-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


98




Dimensions: Series SY5000

Plug-in Type 10/Side Ported
Connector Connecting Base D-sub Connector (IP40)

SS5Y5-10F<sub>2</sub>-Stations D-C6, N7 (D)

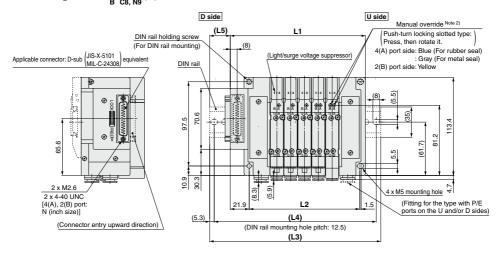

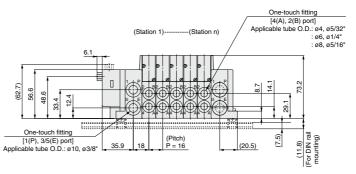

Note 1) These figures show the "SS5Y5-10F2-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000

Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

Directional Control Valves


SY


EX600

VM

XT34

SS5Y7-10F<sub>2</sub>-Stations D-C8, N7 (D)

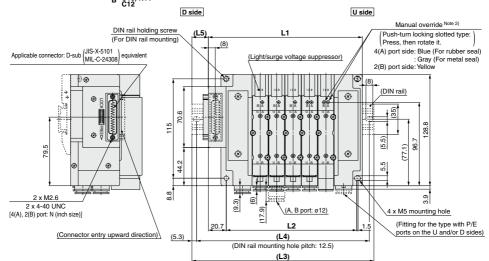

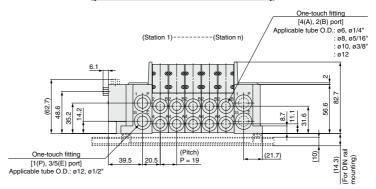

Note 1) These figures show the "SS5Y7-10F2-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 202 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20



Dimensions: Series SY3000

## Plug-in Type 10/Side Ported Connector Connecting Base D-sub Connector (IP67)

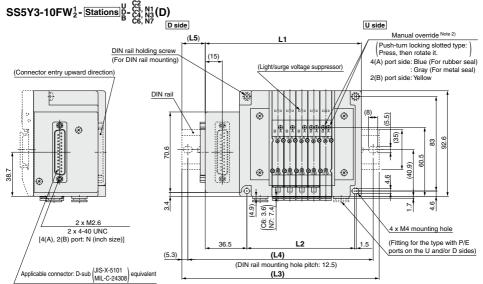

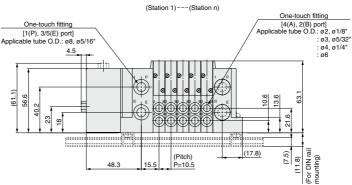

Note 1) These figures show the "SS5Y3-10FW2-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

n: Station	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY5000

Plug-in **Connector Connecting Base**  Type 10/Side Ported

Directional Control Valves D-sub Connector (IP67)


SY

EX600

VM

XT34

SS5Y5-10FW<sub>2</sub><sup>1</sup>-Stations D C4, N3 (D) B C8, N9 D side U side Manual override Note 2) Push-turn locking slotted type: L1 Press, then rotate it. DIN rail holding screw (15) 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) (Light/surge voltage suppressor (Connector entry upward direction) : Gray (For metal seal) 2(B) port side: Yellow DIN rail вВ 9.02 97.5 13.4 8 (61.7) 59.5 0 24.2 Φ 2 x M2.6 2 x 4-40 UNC 4 x M5 mounting hole [4(A), 2(B) port: (Fitting for the type with P/E (5.3) N (inch size)] (L4)ports on the U and/or D sides) (DIN rail mounting hole pitch: 12.5) Applicable connector: D-sub (JIS-X-5101 | equivalent

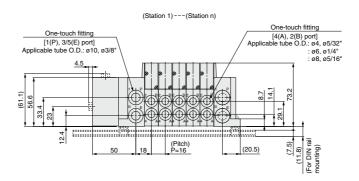

(L3)

Note 1) These figures show the "SS5Y5-10FW2-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

INDEX





102

Dimensions: Series SY7000

## Plug-in Connector Connecting Base D-sub Connector (IP67)

Type 10/Side Ported

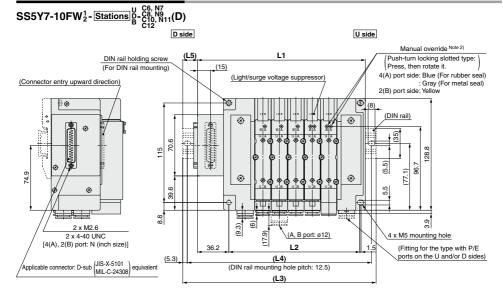

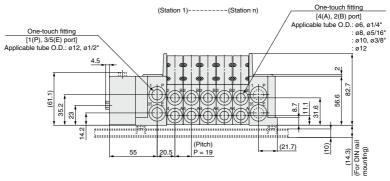

Note 1) These figures show the "SS5Y7-10FW2-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5



## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in Connector Connecting Base Type 10/Side Ported Flat Ribbon Cable

63

mounting) (11.8)

2

2 For DIN rail


(17.8)

Directional Control Valves

SY

EX600

VM **XT34** 

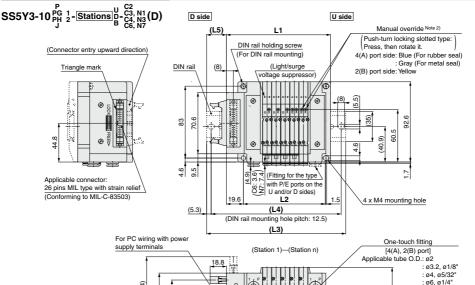

Note 1) These figures show the "SS5Y3-10P2-05D-C6".

One-touch fitting

[1(P), 3/5(E) port] Applicable tube O.D.: ø8, ø5/16"

18.6 40.2

(75 9.99

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


31.4

(Pitch)

P=10.5

Note 3) Refer to page 200 for dimensions of A or B port top-ported type

Note 4) Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

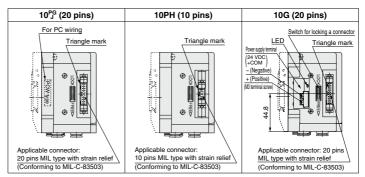



n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

**SMC** 

## Dimensions: Series SY5000 Plug-in Connector Connecting Base


Type 10/Side Ported
Flat Ribbon Cable

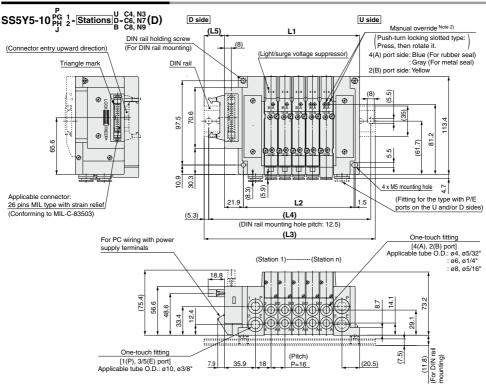

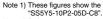

- Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 201 for dimensions of A or B port top-ported type.
- Note 4) Only connectors are different for 10PG, 10PH and 10J. L1 to L5 dimensions are

the same as 10P type.

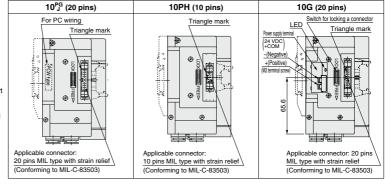

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

## Connector Connecting Base Series SY3000/5000/7000


Plug-in Connector Connecting Base

Type 10/Side Ported Flat Ribbon Cable

Directional Control Valves

VM **XT34** 

EX600

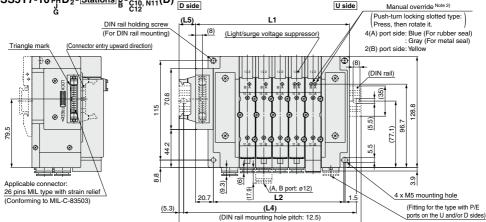

Note 1) These figures show the "SS5Y7-10P2-05D-C8".


Note 2) Refer to page 197 for dimensions of external pilot silencer, elbow fittings and slide locking manual override.


Dimensions: Series SY7000

SS5Y7-10 PHD 2-Stations

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

Note 4) Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

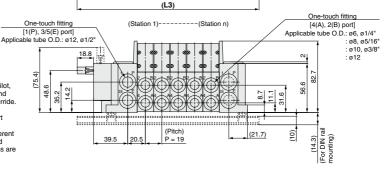

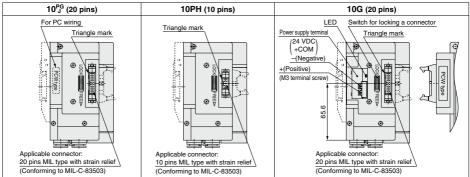

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

INDEX



106


## Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable PC Wiring

Type 12 Top Ported

## Series SY3000/5000/7000

## **How to Order Manifold**

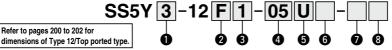

## Series


SY3000 SY5000 SY7000

2 Connector type F: D-sub connector < IP40> FW: D-sub connector < IP67> P: Flat ribbon cable PG: Flat ribbon cable (25 pins) PH: Flat ribbon cable J: PC wiring (20 pins) G: PC wiring (20 pins) New with power supply termina (10 pins) Yellow ink

P, E port entry						
	U Note)	U side (2 to 10 stations)				
	D Note)	D side (2 to 10 stations)				
	В	Both sides (2 to 24 stations)				

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

## **How to Order Manifold Assembly**

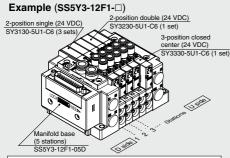

SS5Y3-12F1-05D ······ 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.) SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

. The valve arrangement is numbered as the 1st station from the D side Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold

## 3 Connector entry direction



The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 222) sepa-

Note Double wiring Note 1)

Specified layout Note 2)

(Available up to

8 solenoids)

### 4 Valve stations

F/FV	<b>V</b> : D-s	ub connector (25 pins)	P: Flat ribbon cable (26 pins)						
Symbol	Stations	Note	Symbol	Stations	Note				
02	2 stations		02	2 stations					
:	:	Double wiring Note 1)	- :	-	Double wiring Note 1)				
12	12 stations	-	12	12 stations	-				
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)				
:	:	(Available up to	- :	-	(Available up to				
24	24 stations	24 solenoids)	24	24 stations	24 solenoids)				

## PG: Flat ribbon cable (20 pins) PH: Flat ribbon cable (10 pins)

ru.	FII. Flat								
Symbol	Stations	Note	Symbol	Station					
02	2 stations		02	2 statio					
:	- :	Double wiring Note 1)	:	_ :					
09	9 stations	-	04	4 statio					
02	2 stations	Specified layout Note 2)	02	2 statio					
:	- :	(Available up to	:	- :					
18	18 stations	18 solenoids)	08	8 statio					

J/G: PC wiring (20 pins)						
Symbol	Stations	Note				
02	2 stations					
:	- :	Double wiring Note 1)				
08	8 stations	=				
02	2 stations	Specified layout Note 2)				
:	- :	(Available up to				
16	16 stations	16 solenoids)				

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

SUP/EXH block assemble					
Nil	Internal pilot				
s	Internal pilot, Built-in silencer				
R	External pilot				

 For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

#### 8 Mounting

Nil	Direct mounting					
D	DIN rail m	ounting (With DIN rail)				
D0	DIN rail mo	unting (Without DIN rail)				
D3	For 3 stations	Specify a longer				
i i	- :	rail than the				
D24	For 24 stations	standard length.				

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

P, E port size (One-touch littings)							
Symbol	SY3000	SY5000	SY7000				
Nil	ø8	ø10	ø12				
N	ø5/16"	ø3/8"	ø1/2"				

\* For N. sizes are in inches.




specification sheet

SY EX600

VM

**XT34** 

Refer to page 17 for valve specifications.

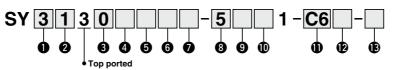

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

## 2 Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
<b>A</b> *	4-position	N.C./N.C.			
B*	dual	N.O./N.O.			
C*	3-port	N.C./N.O.			

\* Only rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

## Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve

(Built-in valve type)		
Nil	None	
н	Built-in	

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

## 6 Pilot valve option

Nil		Standard (0.7 MPa)
	В	Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

\* Only metal seal type is available for the high pressure type.

#### Coil type Nil

T With power saving circuit (Continuous du		With power saving circuit (Continuous duty type)	
* Be sure to select the power saving circuit type			
	when the valve is continuously energized for		

Standard

long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

## Rated voltage

• Hatsa Fellage		
5	24 VDC	
6	12 VDC	


\* Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC.

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS			Negative	
NZ	•		common	

- \* Only "Z" and "NZ" types are available for with
- the power saving circuit.

  \* For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

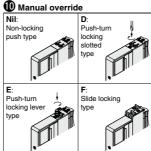

\* Refer to page 28 for with safety slide locking manual override.

## A, B port size

	Till Cut piping		
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

#### ne-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### na tauah fitting (Inah)

One-touch fitting (inch)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

### Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
H	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance


service. Refer to page 234 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class

class II (Mark: (ii))

### **Electrical Wiring Specifications**

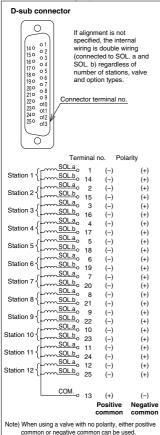

#### **Specified Layout**


COM.

#### (25 pins)



Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double 3-position and 4-position.

#### Cable Assembly

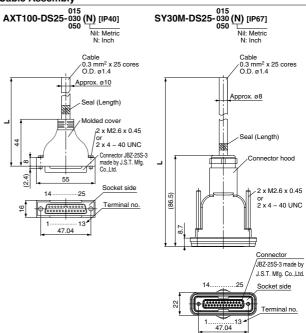

### D-sub connector cable assembly [IP40]

Cable length (L)	Assembly part no.	Note	
1.5 m	AXT100-DS25-015	Cable	
3 m	AXT100-DS25-030	0.3 mm <sup>2</sup> x 25 cores	
5 m	AXT100-DS25-050	0.0 IIIII X 2.0 00103	
Whon using a standard commercial			

- connector, use a 25-pin type female connector conforming to MIL-C-24308
- Cannot be used for movable wiring.
- \* Lengths other than the above are also available. Please contact SMC for details.

### D-sub connector cable assembly [IP67]

Cable length ( <b>L</b> )	Assembly part no.	Note			
1.5 m	SY30M-DS25-015				
3 m	SY30M-DS25-030	Cable 0.3 mm <sup>2</sup> x 25 cores			
5 m	SY30M-DS25-050	0.5 IIIIF X 25 COIES			

- \* Be sure to use the connector cable assembly in the table, to satisfy enclosure
- \* Cannot be used for movable wiring.

Licoti ioui oili	ai aotoi i
Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance	5 or more

Note) The minimum hending radius of the D-sub connector cable is 20 mm.

## Electrical characteristics | Connector Manufacturers' Example

<ul> <li>Japan Aviation Electronics Industry, Ltd</li> </ul>
J.S.T. Mfg. Co., Ltd.
Hirose Electric Co., Ltd.

00			
	1		

• Fuiitsu I td

#### D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	1	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	euoN	None	Black	White	White	Red	Red	White	None



EX600

VM

**XT34** 

## Flat ribbon cable connector 26 □ □25 24 □ □23 22 □ □21

 If alignment is not specified, the internal wiring is double wiring (connected to SOL a and SOL. b) regardless of number of stations, valve and option types.

#### P: Flat ribbon cable (26 pins) <Double wiring> Terminal no. Polarity SOL.a 1 (-) (+) SOL.b 2 (-)(+)SOL.a 3 (-) (+) SOL.b 4 (-) (+) SOL.a 5 (-) (+) SOL.b 6 (-) (+) SOL.a 7 (-)(+)SOL.b 8 (-)(+)SOL.a 9 (-)(+)SOL.b 10 (-) (+)SOL.a 11 (-)(+)SOL.b 12 (-) (+)SOL.a 13 (-)(+)SOL.b 14 (+)SOL.a 15 (-)(+)SOL.b (-) 16 (+)SOL.a 17 (-)(+)SOL.b 18 (-) (+)SOL.a 19 (-) (+)SOL.b 20 (-)(+)SOL.a (-í 21 (+) SOL.b 22 (-) (+)SOL.a 23 (-) (+)SOL.b 24 (-) (+) COM 25 (+) (-) COM. 26 (+) (-)

PG: Flat ribbon	cable (20 pins)
<double< th=""><th>wiring&gt;</th></double<>	wiring>
	Terminal no. Polarity
Station 1 { SOL.a SOL.b	1 (-) (+) 2 (-) (+)
Station 2 {SOL.b_o	3 (-) (+) 4 (-) (+)
Station 3 { SOL.a SOL.b SOL.b	5 (-) (+) 6 (-) (+)
Station 4 { SOL.a SOL.b SOL.a	7 (-) (+) 8 (-) (+)
Station 5 { SOL.b SOL.a	9 (-) (+) 10 (-) (+)
Station 6 SOL.b SOL.a	11 (-) (+) 12 (-) (+)
Station 7 { SOL.b SOL.a	13 (-) (+) 14 (-) (+)
Station 8 SOL.b	15 (-) (+) 16 (-) (+)
Station 9 SOL.b	17 (-) (+) 18 (-) (+)
COM.	19 (+) (-) 20 (+) (-)
	Positive Negative common common

PH: Flat ribbon cable	e (10 pins)
<double th="" wiri<=""><th>ng&gt;</th></double>	ng>
Termin   SOL.a   Station 1   SOL.a   2   SOL.a   3   3	al no. Polarity  (-) (+) (+) (+) (+) (+) (+) (+) (+) (+) (+

Positive Negative

J: Flat ribbon cable (20 pins)					
PC w	iring				
<double< th=""><th></th></double<>					
SOL.a	Terminal no. Polarity				
Station 1 SOL.b SOL.a	20 (-) (+) 18 (-) (+)				
Station 2 SOL.b SOL.a	16 (-) (+) 14 (-) (+)				
Station 3 SOL.b	12 (-) (+) 10 (-) (+)				
Station 4 SOL.b SOL.a	8 (-) (+) 6 (-) (+)				
Station 5 { SOL.b SOL.a	19 (-) (+) 17 (-) (+)				
Station 6 SOL.b	15 (-) (+) 13 (-) (+)				
Station 7 SOL.b SOL.a SOL.a	11 (-) (+) 9 (-) (+)				
Station 8 SOL.b	7 (-) (+) 5 (-) (+)				
	4 (-) (+)				
COM.	3 (-) (+)				
COM.	2 (+) (-) 1 (+) (-)				
	Positive Negative				
	common common				


Note) When using a valve with no polarity, either positive common or negative common can be used.

Note 1) This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20-18-16-14 without skipping or leaving any connectors remaining.

Note 2) For details on PC wiring system, refer to the WEB catalog or the

Rest Pneumatics No. 1

## G: Flat ribbon cable (20 pins) PC wiring (with power supply terminal)

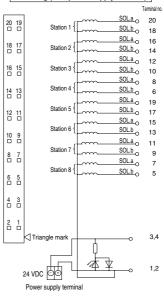


Note 1) This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20−18→16→14 without skipping or leaving any connectors remaining.

Note 2) For details on PC wiring system, refer to **the WEB catalog** or the Best Pneumatics No. 1.

### Flat Ribbon Cable Assembly



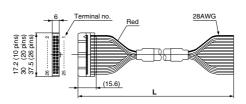

#### Flat ribbon cable connector assembly


Cable	Assembly part no.							
length (L)	26 pins	20 pins	10 pins					
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1					
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2					
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3					

- \* When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \* Cannot be used for movable wiring.
- \* Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu, Ltd.
- · Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

### Specified Layout

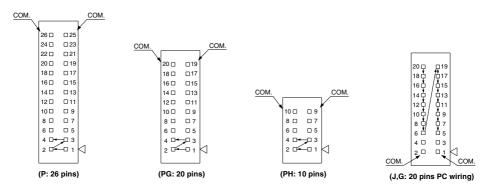

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, 8 or less for PH, and 16 or less for J/G. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position bubble, 3-position and 4-position.



## **Plug-in** Connector Connecting Base


Terminal Block Box

## Series SY3000/5000/7000

**( (** RoHS

### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

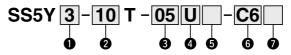

## Series

3	3	SY3000
5	;	SY5000
7	'	SY7000

<b>②</b> Ty	ре
10	Side ported
11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

### 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	1	Double wiring Note 1)
10	10 stations	
02	2 stations	O : f:!     + Note 2)
:	1	Specified layout Note 2) (Available up to 20 solenoids)
20	20 stations	(Available up to 20 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

## 4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)


## 5 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	R External pilot	

- 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for **6**.

## **How to Order Manifold Assembly**

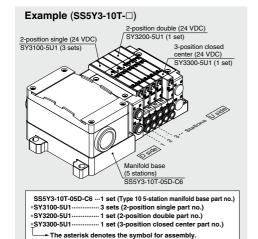

The valve arrangement is numbered as the 1st station from the D side.

I leader the manifold part number state the valves to be manufald in order.

I leader the manifold part number state the valves to be manufald in order.

Prefix it to the part numbers of the valve etc.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 120. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

wounting and Option					
Symbol	Mounting	Option			
Symbol		Name plate	Station number		
Nil	Direct	_	_		
AA	mounting	•	•		
BA	mounting	•	_		
D□	DIN rail mounting	_	_		
A□		•	•		
B□	mounting	•	_		

Note 1) Enter the number of stations inside 
when it is larger than the number of 
valve stations. (Refer to "DIN Rail 
Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

#### DIN Rail Option

DIN Hall Option				
Nil	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Coosify a language rail than the		
- :	:	Specify a longer rail than the		
20	For 20 stations	total length of specified stations.		



## Eligen Connector Connecting Base Series SY3000/5000/7000

EX600

VM **XT34** 

6 A, B port size (Metric/One-touch fitting)

	, <u> </u>		Typo	10/8ido	ported		ttom norted											
Symbol		A, B port																
•				SY3000	SY5000	SY7000	SY5000	SY/000										
C2			ø2	•	_	_	_	_										
C3			ø3.2	•	_	_	_	_										
C4	_		ø4	•	•	_	•	_										
C6	igh		ø6	•	•	•	•	•										
C8	Straight		ø8	_	•	•	•	•										
C10	0,		ø10	_	_	•	_	•	OG SEES									
C12			ø12	_	_	•	_	•	4									
CM*		Straig	ht port, mixed sizes	•	•	•	•	•										
L4			ø4	•	•	_	_	_										
L6		힏	ø6	•	•	•	_	_										
L8		Upward	ø8	_	•	•	_	_										
L10		5	ø10	_	_	•	_	_										
L12	te)		ø12	_	_	•	_	_	Jel Bar									
B4	Elbow Note)	Downward	ø4	•	•	_	_	_										
<b>B</b> 6	ρον		vnward	vnward	ard	ard	ard	a g	a S	adla	ard	ø6	•	•	•	_	_	
<b>B8</b>	Ш				ø8	_	•	•	_	_								
B10			ø10	_	_	•	_	_										
B12			ø12	_	_	•	_	_										
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_										
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12										

A, B port size (Inch/One-touch fitting)

Symbol		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported			
Syllibul				SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_			
N3	_		ø5/32"	•	•	_	•	_			
N7	igh		ø1/4"	•	•	•	•	•			
N9	Straight		ø5/16"	_	•	•	•	•			
N11	٠,		ø3/8"	_	_	•	_	•	e Susan		
CM*		Straig	ht port, mixed sizes	•	•	•	•	•			
LN3		_	ø5/32"	•	_	_	_	_			
LN7		Jpward	ø1/4"	•	•	_	_	_			
LN9		γď	ø5/16"	_	•	_	_	_			
LN11	(e)	_	ø3/8"	_	_	•	_	_			
BN3	Elbow Note)	rd	ø5/32"	•	_	_	_	_			
BN7	ğ	ρ	ğ	wa	ø1/4"	•	•	_	_	_	
BN9	Ш	Downward	ø5/16"	_	•	_	_	_			
BN11				Δ	ø3/8"	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
	P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"				

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).


\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**SMC** 

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

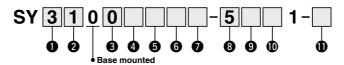

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *	4 position	N.C./N.C.		
B*	4-position dual 3-port	N.O./N.O.		
C*	duai 5-port	N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

• I not varie option		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type)		
* Be sure to select the power saving circl			

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
C	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common
0 1 (77) 1 (71)			

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

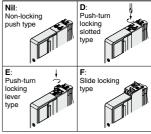

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in
Connector Connecting Base

Type 10/Side Ported

Terminal Block Box

Directional Control Valves

SY

EX600

VM

XT34

SS5Y3-10T-Stations

D side U side L1 (L5)Manual override Note 2) DIN rail holding screw Push-turn locking slotted type: DIN rail holding screw (For DIN rail mounting) (For DIN rail mounting) Press, then rotate it. 8 DIN rail 4(A) port side: Blue (For rubber seal) (Light/surge : Gray (For metal seal) voltage suppressor) 2(B) port side: Yellow Q. 35) 26 83 95.6 8 30.5 (40.9)8 8 20.4 9 3.6 4 x M4 mounting hole (4.9) 06:0 N7:0 2 x M5 mounting hole (Fitting for the type with P/E ports on the U and/or D sides) 7. 88.2 (5.3)(L4) (DIN rail mounting hole pitch: 12.5) (L3) One-touch fitting One-touch fitting [1(P), 3/5(E) port] [4(A), 2(B) port] 2 x G3/4 Applicable tube O.D.: ø8, ø5/16 Applicable tube O.D.: ø2 Conduit port : ø3.2. ø1/8" (Station 1)---(Station n) : ø4, ø5/32 : ø6, ø1/4" 77.7 13.6 co 33 45.5 56. 40.2

Note 1) These figures show the "SS5Y3-10T-05D-C6".

34.9

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

(Pitch)

P = 10.5

6 2

(17.8)

(7.5)

(For DIN rail mounting)

(11.8)

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

107.1

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16

INDEX




116


Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations D-C6, N7 (D)

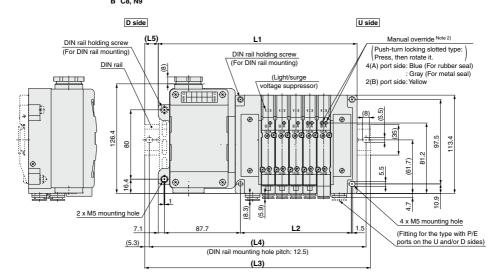

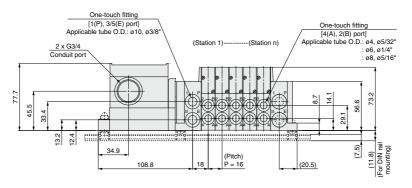

Note 1) These figures show the "SS5Y5-10T-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5



## Pug-in Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000


Plug-in
Connector Connecting Base


Type 10/Side Ported

Terminal Block Box

Directional Control Valves

C6, N7 -C8, N9 -C10, N11 C12 SS5Y7-10T-Stations

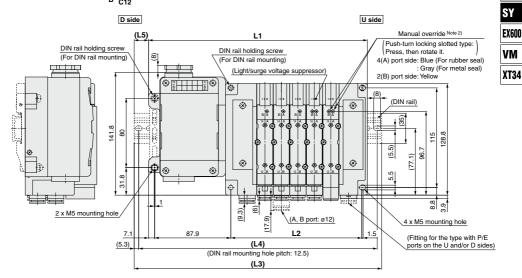

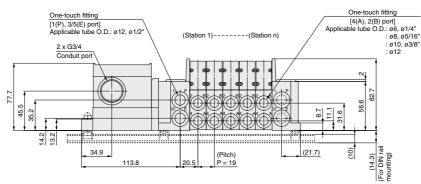

Note 1) These figures show the "SS5Y7-10T-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18



118

Terminal Block Box

Type 12 Top Ported

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**



Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

# 3 SY3000 5 SY5000 7 SY7000

P, E port entry

Γ	U Note)	U side (2 to 10 stations)
	D Note)	D side (2 to 10 stations)
	В	Both sides (2 to 20 stations)

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 2 Valve stations

Stations	Note			
2 stations				
:	Double wiring Note 1)			
10 stations	g .			
2 stations	O : fi I I + Note 2\			
:	Specified layout Note 2) (Available up to 20 solenoids)			
20 stations	(Available up to 20 soleriolus)			
	2 stations : 10 stations 2 stations : : : : : : : : : : : : : : : : : : :			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

#### 4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

(One todon intingo)							
Symbol	SY3000	SY5000	SY7000				
Nil	ø8	ø10	ø12				
N	ø5/16"	ø3/8"	ø1/2"				

\* For N. sizes are in inches.

#### **How to Order Manifold Assembly**

Example (SS5Y3-	12T-□)	
	2-position double	
	SY3230-5U1-C6	
2-position single (24 VDC)	h	3-position closed
SY3130-5U1-C6 (3 sets)		center (24 VDC)
		SY3330-5U1-C6 (1 set)
		<b>%</b> 3
		Ma. a
		<b>7</b> 7
	///////////////////////////////////////	17 (3)
		SK8
		J. Salarde (1918)
	/// [ \times_\cdots	`v <sup>-</sup>
\ ,\\\	\ / 💖	
<b>(2)</b>	Manifold ba	se
IMI	(5 stations)	
4	SS5Y3-12T	-05D
SS5Y3-12T-05D	I set (Type 12 5-statio	n manifold base part no.)
*SY3130-5U1-C6	sets (2-position si	ngle part no.)
*SV3230-5111-C6		

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

\*SY3330-5U1-C6 ........ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

## **6** Mounting

Mounting							
Nil	Direct mounting						
D		DIN rail mounting					
, D	(With DIN rail)						
DO		DIN rail mounting					
DU	(Without DIN rail)						
D3	For 3 stations	Specify a longer rail than					
- :	: :	the standard length.					
D20	For 20 stations	and diamand forigin.					

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

# Directional Control Valves


SY EX600

VM

**XT34** 

How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

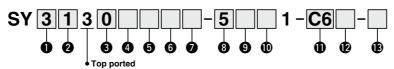

#### Series

3	SY3000
5	SY5000
7	SY7000

#### Tvne of actuation

• ., po o. aotaa							
1	2-position	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
<b>A</b> *	4 position	N.C./N.C.					
B*	4-position dual 3-port	N.O./N.O.					
C*	duai 5-poit	N.C./N.O.					

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

Nil	Internal pilot	
R	External pilot	

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### A Pilot valve option

	Filot valve option		
Nil S		Standard (0.7 MPa)	
	В	Quick response type (0.7 MPa)	
	K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

	NII	Standard
	Т	With power saving circuit (Continuous duty type)
* Be sure to select the power saving circuit		

- when the valve is continuously energized for long periods of time. \* Be careful of the energizing time when the
- power saving circuit is selected. Refer to page 258 for details

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

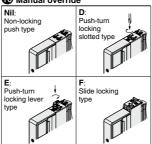

\* Refer to page 28 for with the safety slide locking manual override.

#### A, B port size

i ili eau pipilig		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### -touch fitting (Metric)

One-touch nitting (wetric)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-touch hitting (inich)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### 1 Thread type

	Nil	Rc
	F	G
Γ	N	NPT
	Т	NPTF

\* Only Nil is available for M5.

#### Type of mounting screw

Type of illouriting screw		
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
н	Hexagon socket head can screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service. Refer to page 234 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class


INDEX

**ØSMC** 

#### **Terminal Block Connection**


#### Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

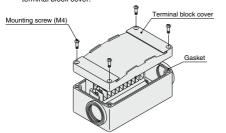

## Step 2. The below diagram shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

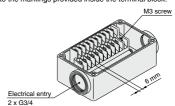

#### Step 3. Mounting the terminal block cover


Securely tighten the screws to the torque shown in the below table only after confirming that the gasket is installed correctly.

Proper tightening torque N·m

0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

#### **Electrical Wiring Specifications (IP67 compatible)**

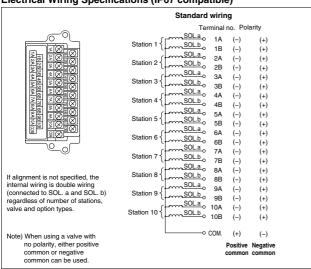

#### Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.





٧M XT34






Lead Wire

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

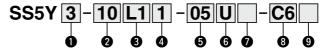

# 3 SY3000 5 SY5000 7 SY7000

#### 

| 10 | Side ported | 11 | Bottom ported\*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

## L3 9 cores

U Lea	ad wire length
1	0.6 m
2	1.5 m
3	3 m

#### Valve stations

(L1	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	- :	Double wiring Note 1)	:	1	Double wiring Note 1)
16	16 stations		04	4 stations	
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)
:	- :	(Available up to	:	1	(Available up to
24	24 stations	32 solenoids)	80	8 stations	8 solenoids)

( <b>L2</b> [	□)			
Symbol	Stations	Note		
02	2 stations			
1	:	Double wiring Note 1)		
08	8 stations			
02	2 stations	Specified layout Note 2)		
1	:	(Available up to		
16	16 stations	16 solenoids)		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.


Use of a 2-position single solenoid will result in an unused control

signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold
specification sheet. (Note that 2-position double, 3-position and
4-position valves cannot be used where single wiring has been

specified.)
Note 3) This also includes the number of blanking plate assembly.

#### **How to Order Manifold Assembly**

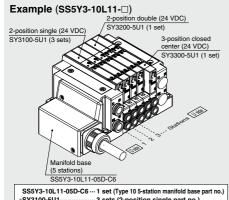

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.

Under the manifold part number, state the valves to be mounted in order.

Under the manifold part number, state the valves to be mounted in order
from the 1st station as shown in the figure above. If the arrangement
becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 130.

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B nort on base side.

#### 6 P. E port entry

P, E port entry						
U	U side (2 to 10 stations)					
D	D side (2 to 10 stations)					
В	Both sides (2 to 24 stations)					

#### SUP/EXH block assembly

OUT /EXTI BIOCK assembly					
Nil	Internal pilot				
S	Internal pilot, Built-in silencer				
R	External pilot				

\* 3/5(E) port is plugged for the built-in silencer type.

\* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## Eligen Connector Connecting Base Series SY3000/5000/7000

EX600

**XT34** 

VM

A. B port size (Metric/One-touch fitting)

<u> </u>	т,	<u> </u>	OIL SIZE	(INICHI)	C/ OTTO	toucii		9/	
Symbol	A, B port			10/Side					
Oymboi		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	١		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	
C10	0,		ø10	_	_	•	_	•	00
C12			ø12	_	_	•	_	•	400
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	<b>D</b>
L6		힏	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12	(e)		ø12	—	—	•	_	_	S Selfons
B4	Elbow Note)		ø4	•	•	_	_	_	
B6	pov	ard	ø6	•	•	•	_	_	
B8	Ш	Ę	ø8	—	•	•	_	_	
B10		õ	ø10	_	_	•	_	_	
B12		-	ø12	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_		
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

Symbol	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported			
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	Straight		ø1/4"	•	•	•	•	•		
N9	Stra		ø5/16"	_	•	•	•	•		
N11	٠,		ø3/8"	_	_	•	_	•	ol Sur	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3		_	ø5/32"	•	_	_	_	_		
LN7		Upward	ø1/4"	•	•	_	_	_		
LN9		ď	ø5/16"	_	•	_	_	_		
LN11	(e)	_	ø3/8"	_	_	•	_	_	J. J. Branch	
BN3	δ N	rd	ø5/32"	•	_	_	_	_		
BN7	Elbow Note)	Elbo	Downward	ø1/4"	•	•	_	_	_	
BN9			wc	ø5/16"	_	•	_	_	_	
BN11		Δ	ø3/8"	_	_	•	_	_		
LM*		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_		
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### Mounting and Option

Symbol	Mounting	Option		
Symbol	wounting	Name plate	Station number	
Nil	Direct	_	_	
AA	mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
B□	mounting	•	_	

**DIN Rail Option** 

1	Nil	Direct mounting				
	0	Without DIN rail (with bracket)				
ſ	3	For 3 stations	Specify a longer rail than the			
ſ	:	:	total length of specified			
ſ	24	For 24 stations	stations.			

Note 1) Enter the number of stations inside  $\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported). Note 3) Refer to page 261 for the fixation of DIN rail mounting type

manifold.



#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

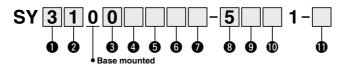

#### A Sarias

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	0	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
<b>A</b> *	4 position	N.C./N.C.				
В*	4-position dual 3-port	N.O./N.O.				
C*	dual o port	N.C./N.O.				

\* Only rubber seal is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### 5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

O I not vaive option											
Nil	Standard (0.7 MPa)										
В	Quick response type (0.7 MPa)										
K*	High pressure type (1.0 MPa)										

\* Only metal seal type is available for the high pressure type.

#### Coil type

	Otandara
Т	With power saving circuit (Continuous duty type)
	e to select the power saving circuit type
when t	he valve is continuously energized for

Standard

long periods of time.

\* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	suppressor	specification					
Nil	-	_						
R	ı		Non-polar					
U	•							
S	_	•	Positive					
Z	•	_	common					
NS	1		Negative					
NZ	•		common					
0 . "								

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

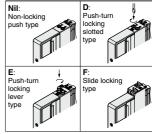

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 234 for part numbers of the base gasket and mounting screw.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Plug-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base

Type 10/Side Ported Lead Wire

Directional Control Valves


SY


EX600


VM

**XT34** 

Dimensions: Series SY3000 SS5Y3-10L $\frac{1}{3}$  -Stations  $\stackrel{\text{U}}{\text{P}}$  - $\stackrel{\text{C2}}{\text{C3}}$ ,  $\stackrel{\text{N3}}{\text{N3}}$  (D)  $\stackrel{\text{C2}}{\text{C6}}$ ,  $\stackrel{\text{N3}}{\text{N7}}$ 

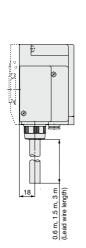

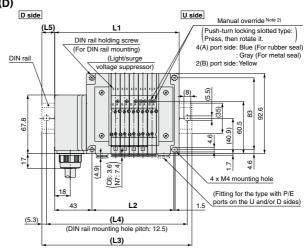

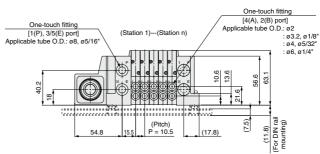

Note 1) These figures show the "SS5Y3-10L1□-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15




Dimensions: Series SY5000

Plug-in Connector Connecting Base Type 10/Side Ported

SS5Y5-10L<sup>1</sup><sub>2</sub> - Stations D - C6, N7 (D)

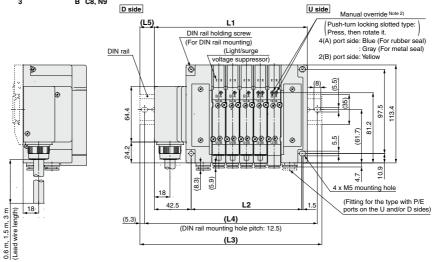

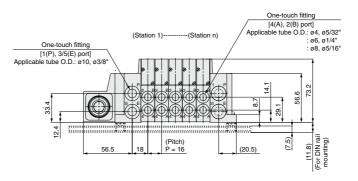

Note 1) These figures show the "SS5Y5-10L1 □-05D-C8".


Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15


## Pug-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base Type 10/Side Ported

wire

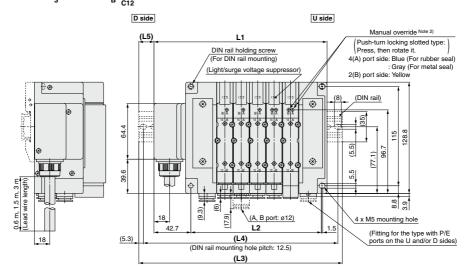

(Station 1)-----(Station n)

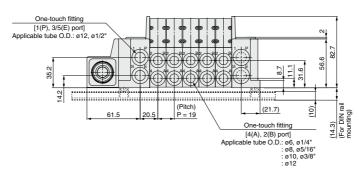

Note 1) These figures show the "SS5Y7-10L1 □-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

INDEX

128



Directional Control Valves

SY

EX600

XT34


Lead Wire

Type 12 Top Ported

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**

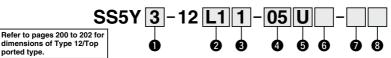

## Series

3	SY3000
5	SY5000
7	SY7000

#### Number of cores (Lead wire)

	uu wiic,
L1	34 cores
L2	17 cores
L3	9 cores

3 Lead wire length									
1	0.6 m								
2	1.5 m								
_									

#### P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) **⑤** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### **How to Order Manifold Assembly**

# Example (SS5Y3-12L11-□) 2-position double (24 VDC) SY3230-5U1-C6 (1 set) 3-position closed center (24 VDC) SY3330-5U1-C6 (1 set) SY3330-5U1-C6 (1 set) Manifold base (5 stations) SS5Y3-12L11-05D

SSSY3-12L11-05D··· 1 set (Type 12 5-station manifold base part no.)

\*SY3130-5U1-C6······ 3 sets (2-position single part no.)

\*SY3230-5U1-C6······ 1 set (2-position double part no.)

\*SY3330-5U1-C6····· 1 set (3-position closed center part no.)

➤ The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 4 Valve stations

(L1[	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	:	Double wiring Note 1)	:	1	Double wiring Note 1)
16	16 stations		04	4 stations	
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)
- :		(Available up to	:		(Available up to
24	24 stations	32 solenoids)	08	8 stations	8 solenoids)

(L2□)				
Symbol	Stations	Note		
02	2 stations			
- I	- :	Double wiring Note 1)		
08	8 stations	-		
02	2 stations	Specified layout Note 2)		
		(Available up to		
16	16 stations	16 solenoids)		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

#### 6 SUP/EXH block assembly

• • • • • • • • • • • • • • • • • • • •		
Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\* For N, sizes are in inches.

#### Mounting

Widuliting			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:			
D24	For 24 stations	1 trie standard length.	

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

# Directional Control Valves


SY EX600

VM

**XT34** 

How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications

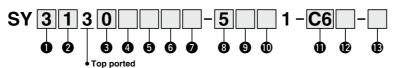

#### A Sarias

SY3000
SY5000
SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	4 3-position	Closed center
4		Exhaust center
		Pressure center
<b>A</b> *	4 manitian	N.C./N.C.
B* C*	4-position dual 3-port	N.O./N.O.
C*		N.C./N.O.

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve

(Bt	ilit-in valve type)
Nil	None
Н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### A Pilot valve option

_	Pilot valve option		
ſ	Nil	Standard (0.7 MPa)	
	В	Quick response type (0.7 MPa)	
Γ	K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

INII	Standard
Т	With power saving circuit (Continuous duty type)
	e to select the power saving circuit type he valve is continuously energized for

long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

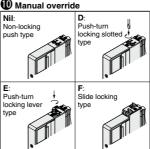

\* Refer to page 28 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	p-pg	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### touch fitting (Matric)

One-touch fitting (wetric)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
СЗ	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

#### a taugh fitting (Inch)

One-touch litting (inch)					
A, B port	SY3000	SY5000	SY7000		
ø1/8"	•	_	_		
ø5/32"	•	•	_		
ø1/4"	•	•	•		
ø5/16"	_	•	•		
ø3/8"	_	_	•		
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  Ø1/8"  Ø5/32"  Ø1/4"  Ø5/16"  —	A, B port SY3000 SY5000  ø1/8"		

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF
	141 11

\* Only Nil is available for M5.

#### Type of mounting screw

ועי שטע	be of illouriting screw
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the


manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark: (ii))

#### **Electrical Wiring Specifications**

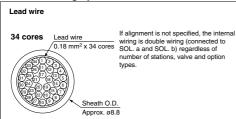

				Lead wire	Printed r	
	Lead wire no	. Pol	arity	color	Type	Color
Station 1 {	SOL.b 2	(-) (-)	(+) (+)	Orange	-	Red Black
Station 2	SOL.b 4	(-) (-)	(+) (+)	Light gray	_	Red Black
Station 3 {	m SOL.a 5	(-) (-)	(+) (+)	White	-	Red Black
Station 4 {	SOL.b g	(-) (-)	(+) (+)	Yellow	ı	Red Black
Station 5 {	SOL.b	(-) (-)	(+) (+)	Pink	-	Red Black
Station 6	SOL.b 12	(-) (-)	(+) (+)	Orange	I	Red Black
Station 7		(-) (-)	(+) (+)	Light gray	-	Red Black
Station 8	SOL.b 0 16	(-) (-)	(+) (+)	White		Red Black
Station 9 {	SOL.b 18	(-) (-)	(+) (+)	Yellow		Red Black
Station 10 {	SOL.b 20	(-) (-)	(+) (+)	Pink		Red Black
Station 11 {	SOL.b 22	(-) (-)	(+) (+)	Orange		Red Black
Station 12 {	SOL.b 24	(-) (-)	(+) (+)	Light gray		Red Black
Station 13 {	SOL.b as	(-) (-)	(+) (+)	White		Red Black
Station 14	SOL.b 28	(-) (-)	(+) (+)	Yellow		Red Black
Station 15 {	SOL.b 30	(-) (-)	(+) (+)	Pink		Red Black
Station 16 {	SOL.b 32	(-) (-)	(+) (+)	Orange		Red Black
	COM	(+) (+)	(-) (-)	Light gray		Red Black
		sitive nmon	Negative common			

#### **Electrical characteristics**

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

Note) Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.

#### **Specified Layout**

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.




## Eligen Connector Connecting Base Series SY3000/5000/7000

Directional Control Valves

EX600 VM

XT34

**Electrical Wiring Specifications** Lead wire

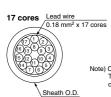

Station 1 4

Station 2

Station 3

Station 4

Station 5

Station 6

Station 7

Station 8

Note) Cannot be used for movable wiring. The minimum bending radius of the cable is 45 mm.

ø6.8

ø6.8				Lead wire	(Both sid	
	wire	no.	Polarity	color	Type	Color
m_SOL.a_o	1	(-)	(+)	_	,,	Red
m_SOL.b_o	2	(-)	(+)	Orange	_	Black
SOL.a	3	(-)	(+)	Light		Red
SOL.b	4	(-)	(+)	gray	_	Black
SOL.a	5	(-)	(+)	14/1-is-		Red
m_SOL.b_o	6	(-)	(+)	White	_	Black
SOL.a	7	(-)	(+)	V-11		Red
SOL.b	8	(-)	(+)	Yellow	_	Black
sol.a o	9	(-)	(+)	B		Red
m_SOL.b_o	10	(-)	(+)	Pink	_	Black
SOL.a	11	(-)	(+)	0		Red
SOL.b	12	(-)	(+)	Orange		Black
SOL.a	13	(-)	(+)	Light		Red
m_SOL.b_o	14	(-)	(+)	gray		Black
SOL.a	15	(-)	(+)	White		Red
SOL.b	16	(-)	(+)	vviille		Black
COM.	17	(+)	(-)	Yellow		Red

Positive Negative common common

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.

	110
9 cores Lead wire	Conducto Ω/km, 20°
0.18 mm <sup>2</sup> x 9 cores	Voltage lir V, 1 minu
(853)	Insulation MΩ/km, 2
	ot be used ninimum be is 40 mm.
Sheath O.D.	

Item Property Conductor resistance 143 or less Ω/km, 20°C Voltage limit 2000 V, 1 minute, AC Insulation resistance 10 or more MΩ/km, 20°C annot be used for movable wiring. ne minimum bending radius of the

Ø	6.3		
	Lead wire no.	Polarity	
Station 1 { SOL SOL	<u>.a</u> ○ 1 (-	-) -)	(+) (+)
cL_m_SOL	<u>a</u> o3 (	-) -)	(+) (+)
را مسم SOL	<u>.a</u> ∘ 5 (-	-) -) -)	(+) (+)
Station 4 SOL	<u>a</u> 0 7 (-	-)	(+)
CON	_O8 (-	-) +)	(+) (-)

Lead wire	Printed mark (Both sides)			
color	Type	Color		
0		Red		
Orange	_	Black		
Light gray		Red		
	_	Black		
White		Red		
vvnite	_	Black		
Yellow		Red		
Yellow	_	Black		
Pink	-	Red		

**Electrical characteristics** 

Positive Negative common common






Circular Connector

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

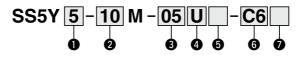

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 10 Side ported Bottom ported

The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

#### Valve stations

Symbol	Stations	Note				
02	2 stations					
÷	-	Double wiring Note 1)				
12	12 stations					
02	2 stations	O: fi + Noto 2)				
:	:	Specified layout Note 2) (Available up to 24 solenoids)				
24	24 stations	(Available up to 24 solenoids				

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold

> Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate

#### A P. E port entry

• . , = port ordary							
U	U side (2 to 10 stations)						
D	D side (2 to 10 stations)						
В	Both sides (2 to 24 stations)						


#### 5 SUP/EXH block assembly

Nil	Internal pilot				
S	Internal pilot, Built-in silencer				
R	External pilot				

- \* 3/5(E) port is plugged for the built-in silencer
  - \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.

#### **How to Order Manifold Assembly**

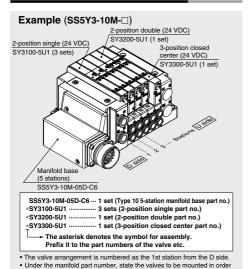

Note) When mixing top ported configurations, select from page 140. In this case, use caution as there is also output on the A and B port on base side Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### Mounting and Option

Symbol	Mounting	Option				
Symbol	wounting	Name plate	Station number			
Nil	Discort	_	_			
AA	Direct mounting	•	•			
BA	mounting	•	_			
D□	DIN rail	_	_			
A□	mounting	•	•			
B□	mounting	•	_			

Note 1) Enter the number of stations inside  $\square$ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

DIN Hall Option					
Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Consifer a language sail than the			
:	:	Specify a longer rail than the total length of specified stations.			
24	For 24 stations	total length of specified stations.			



## Connector Connecting Base Series SY3000/5000/7000

EX600

VM **XT34** 

**6** Δ B part size (Metric/One-touch fitting)

w.	н, і	Dμ	ort size	(wetri	C/One	-touci	ı ıntınığ	3)	
0		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	_
СЗ			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	
C10	•		ø10	_	_	•	_	•	<b>100</b> 100 100 100 100 100 100 100 100 100
C12			ø12	_	_	•	_	•	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		힏	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_		
L12	te)		ø12		_	•	_		G O Jalon
B4	Elbow Note)	_	ø4	•	•	_	_	_	
B6	ωq	Downward	ø6	•	•	•	_		
B8	Ш	2	ø8	_	•	•	_	_	
B10	l	Ď	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inc	h/One-touch fitting)
---------------------	----------------------

Combal		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	Straight		ø1/4"	•	•	•	•	•		
N9	Stra		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	e South	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_				
LN7		/arc	ø1/4"	•	•	_	_	_		
LN9				Upward	ø5/16"	_	•	_	_	_
LN11	te)	_	ø3/8"	_	_	•	_	_	J. Breeze	
BN3	Elbow Note)	rd	ø5/32"	•	_	_	_	_		
BN7	ρo	Downward	ø1/4"	•	•	_	_	_		
BN9	亩	JWC	ø5/16"	_	•	_	_	_		
BN11		Δ	ø3/8"	_	_	•	_	_		
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).


\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**SMC** 

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

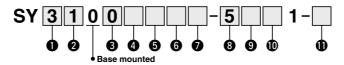

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single								
2	2-position	Double								
3		Closed center								
4	3-position	Exhaust center								
5		Pressure center								
<b>A</b> *	4-position	N.C./N.C.								
B* C*	dual 3-port	N.O./N.O.								
C*	addi 5-port	N.C./N.O.								

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

Nil

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Н	Built-in
	bber seal type. Manifold installed type

- is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


3	24 VDC	
6	12 VDC	

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil		_	
R	_		Non-polar
U	•		
S	ı	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

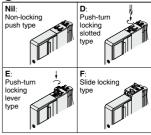

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Eligen Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in Connector Connecting Base

Type 10/Side Ported


Circular Connector

SY

EX600

Directional Control Valves

XT34

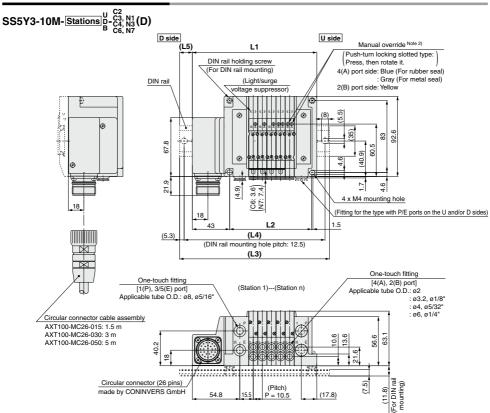

Note 1) These figures show the "SS5Y3-10M-05D-C6".

Note 1) These figures show the 33313-10M-03D-03.

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15



Dimensions: Series SY5000

Plug-in Connector Connecting Base

Type 10/Side Ported
Circular Connector

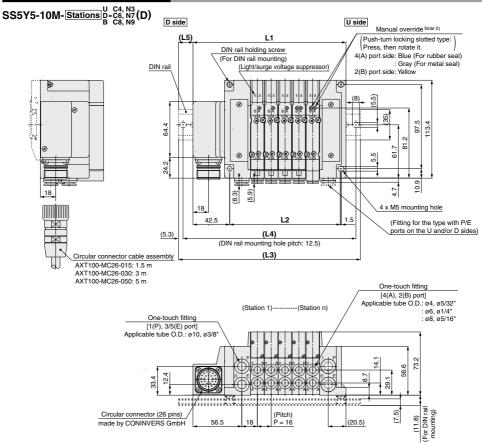

Note 1) These figures show the "SS5Y5-10M-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15

## Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base

Type 10/Side Ported

Circular Connector


Directional Control Valves

EX600

VM

XT34

Dimensions: Series SY7000

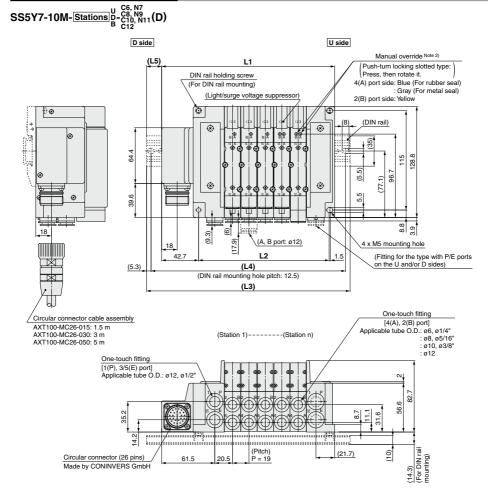

Note 1) These figures show the "SS5Y7-10M-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



138

Circular Connector

#### Type 12 Top Ported

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**



Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

Series	
3	SY3000
5	SY5000

#### Valve stations

Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
:	:	
12	12 stations	
02	2 stations	Considered Invest Note 2)
:	- :	Specified layout Note 2) (Available up to 24 solenoids)
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout. Note 2) Specified layout: Indicate the wiring

(ote 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

#### 3 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


#### 4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- FO bull: n silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side).
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **How to Order Manifold Assembly**


SY7000

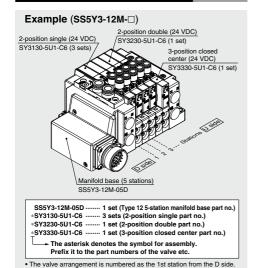

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet. **5** P, E port size (One-touch fittings)

T , E port oizo (one todon intant			,,, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

\* For N, sizes are in inches

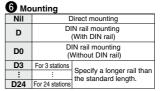


Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

SY EX600

VM

**XT34** 

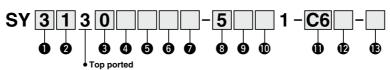

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

O manitian	Single
z-position	Double
	Closed center
3-position	Exhaust center
	Pressure center
4	N.C./N.C.
	N.O./N.O.
addi o port	N.C./N.O.
	2-position 3-position 4-position dual 3-port

\* Only rubber seal is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

н

T not type	
Nil	Internal pilot
R	External pilot

## Back pressure check valve

_ (	Built	-in valve type)	
Ni		None	

\* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the

Built-in

same time because it will reduce the flow. \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

#### A Pilot valve option

O FIN	ot vaive option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

\* Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
* Be sur	e to select the power saving circuit type

- when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage


5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
C	•			
S	_	•	Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

\* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

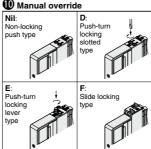

\* Refer to page 28 for with the safety slide locking manual override.

#### A, B port size

11116	riireau pipilig			
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### One-touch fitting (Metric)

One todon namy (means)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	-	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### a tauch fitting (Inch)

One-	One-touch fitting (inch)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	
	95/0			_	

#### Thread type

Timeda type	
Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

#### Type of mounting screw

Type of illouriting screw		
Nil Round head combination screw		
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the
- valve is removed for maintenance etc. \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class



#### **Electrical Wiring Specifications**



If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

#### Terminal no. Polarity SOL.a (-) (+)SOL.b Station 1 2 (-)(+) 3 (-) (+)SOL.b (-) (+)SOL.a 5 (-)(+)Station 3 SOL.b 6 (-)(+) SOL.a (-)(+)SOL.b SOL.a 9 (-)(+)SOL.b 10 Station 5 (-) (+) SOL.a o 11 (-) (+)Station 6 SOL.b o 12 (-) (+) SOL.a o 13 (-)(+)Station 7 SOLb 14 (+) SOL.a o 15 (-)(+) SOL.b o 16 Station 8 (-) (+)SOLa o 17 (-)(+)SOL.b o 18 Station 9 (-) (+) SOL.a o 19 (-) (+) SOL.b 20 Station 10 (-) (+)SOL.a 0 21 (-)(+) SOL.b 22 Station 11 (-)(+)SOL.a o 23 (-) (+) SOL.b 24 Station 12 (-)(+) (-) COM. 26 (+) (-)


Note) When using a valve with no polarity, either positive common or negative common can be used.

Positive Negative common common

#### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

#### Cable Assembly

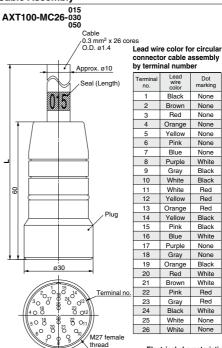

#### Circular connector cable assembly

On outer connector cubic assembly		
Cable	Assembly part no.	
length (L)	26 pins	
1.5 m	AXT100-MC26-015	
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

Cannot be used for movable wiring.
 Lengths other than the above is also available. Please contact SMC for details.

Item	1 Toperty	
Conductor resistance Ω/km, 20°C	65 or less	
Voltage limit V, 1 minute, AC	1000	
Insulation resistance MΩ/km, 20°C	5 or more	
Note) The minimum		

Electrical characteristics

Note) The minimum bending radius of the circular connector cable is 20 mm.




**EX500** 

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

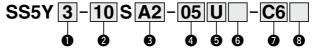

1 Series		
3	SY3000	
5	SY5000	
7	SY7000	

<b>②</b> Tyj	oe e
10	Side ported
11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

#### SI unit Without SI unit DeviceNet™/PROFIBUS DP/ EtherNet/IP™ (Positive common) DeviceNet™/PROFIBUS DP/ A2N EtherNet/IP™

(Negative common)

Note) Ensure a match with the common specification of the valve to be used.

#### Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring Note 1)
08	8 stations	
02	2 stations	Specified layout Note 2) (Available up to 16 solenoids)
÷	:	
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### A P E port entry


R

• i , = port ontry				
	U	U side (2 to 10 stations)		
	D	D side (2 to 10 stations)		
	В	Both sides (2 to 16 stations)		

6 SUP/EXH block assembly					
Nil	Internal pilot	Ī			
S	Internal pilot Built-in silencer				

- External pilot 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **How to Order Manifold Assembly**

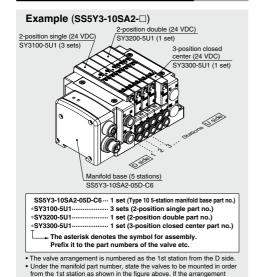

Note) When mixing top ported configurations, select from page 150. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B

becomes complicated, specify on a manifold specification sheet.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 226 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



## Connector Connecting Base Series SY3000/5000/7000

Directional Control Valves

SY

EX600

XT34

VM

### A, B port size (Metric/One-touch fitting)

Ob. al	, pert elle		Type 1	0/Side	ported		ttom ported									
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000								
C2			ø2	•	_	_	_	_								
СЗ			ø3.2	•	_	—										
C4	_		ø4	•	•	_	•	_								
C6	igh		ø6	•	•	•	•	•								
C8	Straight		ø8	_	•	•	•	•								
C10	٠,		ø10	_	_	•	_	•	<b>8</b>							
C12			ø12	_	_	•	_	•	•							
CM*		Straig	tht port, mixed sizes	•	•	•	•	•								
L4			ø4	•	•	_	_	_								
L6		Upward	ø6	•	•	•	-	-								
L8			ø8	_	•	•	_	_								
L10			ø10	_	_	•	_	_								
L12	œ l		ø12	_	_	•	-	-	المعالمة الم							
B4	٥V	Elbow w	Downward Downward	ø4	•	•	_	_	_							
<b>B</b> 6	bov			wnward	Mnward	wnward	wnward	wnward	lar la	ø6	•	•	•	ı	I	
B8	Ш								ø8	_	•	•	_	_		
B10		lá	ø10	_	_	•	_	_								
B12			ø12	_	_	•	_	_								
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	-	-								
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12									

A, B port size (Inch/One-touch fitting)

0	A D most		Type 1	0/Side	ported	Type 11/Bo	ttom ported			
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•		•			
N7	igh		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	ol Sark	
CM*		Straig	pht port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7		Jpward	ø1/4"	•	•	_	_	_		
LN9	1		۱ĕ	ø5/16"	_	•	_	_	_	
LN11	(e)	-	ø3/8"	_	_	•	_	_		
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_		
BN7	ρο	ĭ	ø1/4"	•	•	_	_	_		
BN9	Ш	Downward	ø5/16"	_	•	_	_	_		
BN11		ă	ø3/8"	_	_	•	_	_		
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### Mounting and Option

Symbol	Mounting	Option		
Syllibol	Mounting	Name plate	Station number	
Nil	Discort	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN	_	_	
A□	DIN rail mounting	•	•	
B□		•	_	

Note 1) Enter the number of stations inside □ when it is larger than the number of valve

stations. (Refer to "DIN Rail Option" below.) Note 2) Only direct mounting is available for Type

11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

#### DIN Rail Option


zar raan opaon				
Nil	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail		
÷		than the total length of		
16	For 16 stations	specified stations.		

\* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 239 for part numbers of DIN rail.)

Protective class class II (Mark: (1))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

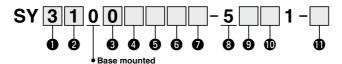

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of dotadtion				
1	0	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *	4 manitian	N.C./N.C.		
B*	4-position dual 3-port	N.O./N.O.		
C*	C* Guara-port	N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

	,
0	Rubber seal
1	Metal seal

#### A Pilot type

<b>○</b> :, p. :					
Nil	Internal pilot				
R	External pilot				
- 11	External pilot				

#### Back pressure check valve (Ruilt-in valve type)

	Built iii vaive type)				
Nil	None				
ш	Duilt in				

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Pilot valve option

O I not varie option				
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K*	High pressure type (1.0 MPa)			

\* Only metal seal type is available for the high pressure type.

#### Coil type

ı	1411	Stariuaru
	Т	With power saving circuit (Continuous duty type)
	Be sur	e to select the power saving circuit type

- when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	ı		Non-polar		
U	•		Non-polai		
S	_	•	Positive		
Z	•	_	common		
NS	-		Negative		
NZ	•		common		

\* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI unit specification is A2N (negative common).

#### Manual override

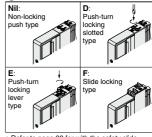

Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

.,,	<b>J</b>				
Nil Round head combination sci					
B Hexagon socket head cap screen					
	Round head combination screw (Falling-out-prevention type)				
Н	Hexagon socket head cap screw (Falling-out-prevention type)				

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 234 for part numbers of the
- base gasket and mounting screw.
  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in Connector Connecting Base

Type 10/Side Ported

EX500

Directional Control Valves

SY


EX600

VM

**XT34** 

SS5Y3-10SA2-Stations D

D side U side Manual override Note 2) Push-turn locking slotted type: DIN rail holding screw Press, then rotate it. (For DIN rail mounting) 4(A) port side: Blue (For rubber seal) : Gray (For metal seal) (Light/surge voltage suppresso 2(B) port side: Yellow SI unit ⊗ 0 95.6 32) 8 67.8 60.5 (40.9)3.6 12.1 4 x M4 mounting hole S. S. (Fitting for the type with P/E ports on the U and/or D sides) L2 (L4) (5.3)(DIN rail mounting hole pitch: 12.5) (L3)

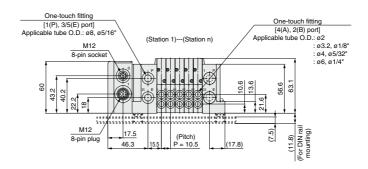

Note 1) These figures show the "SS5Y3-10SA2-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5




Dimensions: Series SY5000

Plug-in Connector Connecting Base Type 10/Side Ported EX500

SS5Y5-10SA2-Stations D - C6, N7 (D)

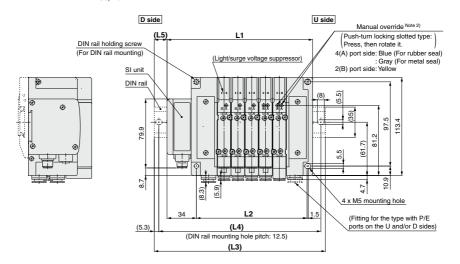

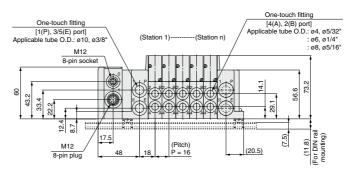

Note 1) These figures show the "SS5Y5-10SA2-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5



## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000

Plug-in Connector Connecting Base

Type 10/Side Ported

Directional Control Valves


EX600


VM

**XT34** 

SS5Y7-10SA2-Stations D

₽⊗

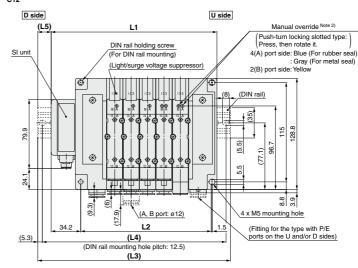

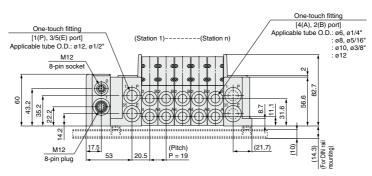

Note 1) These figures show the "SS5Y7-10SA2-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5




148

Type 12 Top Ported

# Series SY3000/5000/7000

#### **How to Order Manifold**

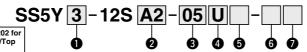

Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

## Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI unit

0	Without SI unit						
A2	DeviceNet™/PROFIBUS DP/ EtherNet/IP™ (Positive common)						
A2N	DeviceNet™/PROFIBUS DP/ EtherNet/IP™ (Negative common)						

Note) Ensure a match with the common specification of the valve to be used.

#### P, E port entry

U Note)  D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

Note) 5 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### SUP/EXH block assembly Internal pilot Internal pilot/Built-in silencer S External pilot

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### Valve stations

Symbol	Stations	Note
02	2 stations	
:	-:	Double wiring Note 1)
08	8 stations	
02	2 stations	O (f) II (Note 2)
:	-:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolds)


Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## **How to Order Manifold Assembly**

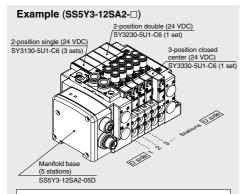

SS5Y3-12SA2-05D ··· 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.) SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

P, E port size (One-touch fittings)											
Symbol	SY3000	SY5000	SY7000	D'é							
Nil	ø8	ø10	ø12								
N	ø5/16"	ø3/8"	ø1/2"	M							

\* For N sizes are in inches

#### Mounting 1

•		
Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer rail than the standard length.
:	:	
D16	For 16 stations	

Note 1) When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 239 for the DIN rail part number.)

Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 226 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com


SY EX600

VM

**XT34** 

How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications

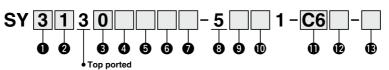

#### A Sarias

• ••	
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>			
1	2-position	Single	
2		Double	
3	3 4 3-position 5	Closed center	
4		Exhaust center	
		Pressure center	
<b>A</b> *	4 position	N.C./N.C.	
B* C*	4-position dual 3-port	N.O./N.O.	
		N.C./N.O.	

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil Internal pilo	ot
R External pile	ot

# 5 Back pressure check valve

(Built-in valve type)			
Nil None			
Н	Built-in		

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### A Pilot valve option

Filot valve option		
Nil	Standard (0.7 MPa)	
B Quick response type (0.7 MPa)		
K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

With power saving circuit (Continuous duty type)
to select the power saving circuit type e valve is continuously energized for

Standard

long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.


#### 8 Rated voltage

5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R			Non-polar	
U	•		Non-polai	
S	_	•	Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

\* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R. U. S or Z when the SI unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI unit specification is A2N (negative common).

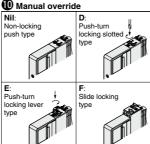

\* Refer to page 28 for with the safety slide locking manual override.

#### (II) A, B port size

rineau piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### atouch fitting (Motric)

One-touch fitting (Wetric)					
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4 C6	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	l –	•	•	
C10	ø10		_	•	
C12	ø12	_	_	•	

#### One-touch fitting (Inch)

One-touch litting (inch)					
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•		_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	Τ-	•	•	
N11	ø3/8"	_	_	•	

#### Thread type

Timeda type							
Nil	Rc						
F	G						
N	NPT						
Т	NPTF						

\* Only Nil is available for M5.

## (R) Type of mounting screw

• . ,,	oc or mounting corem
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class





**EX600** 

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

Series								
3	SY3000							
5	SY5000							
7	SY7000							

 Type

 10
 Side ported

 11
 Bottom ported\*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

#### 3 SI unit

0	Without SI unit
Q	DeviceNet™
N	PROFIBUS DP
V	CC-Link
ZE	EtherNet/IP™
D	EtherCAT
F	PROFINET

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and SI unit is not mounted to a valve without SI unit. Refer to the EX600 catalog (CAT.E02-24) for mounting.

#### 4 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector	
Without SI unit	Nil		
SI unit positive common	2	3	
SI unit negative common	4	5	

Note 1) Ensure a match with the common specification of the valve to be used Note 2) Without SI unit, the symbol is nil.

#### **5** I/O unit stations

SS5Y 3

Nil	None
1	1 station
:	:
9 9 stations	

Note 1) Without SI unit, the symbol is nil. Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 6 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	Considered Invest Note 2)
:	- :	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

#### Mounting and Option

Symbol	Marintina	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Discort	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN	_	_	
A□ B□	DIN rail mounting	•	•	
	mounting	•	_	

Note 1) Enter the number of stations inside 
when it is larger than the number of 
valve stations. (Refer to "DIN Rail 
Ootion" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

Sit tian Option							
Nil	Direct mounting						
0	Without DIN rail (with bracket)						
3	For 3 stations	Consider a language wail them the					
:	:	Specify a longer rail than the total length of specified stations.					
24	For 24 stations	total length of specified stations.					

\* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 239 for the DIN rail part number.)

P. E port entry, SUP/EXH block assembly

P, E port entry, SUP/EXH block assembly									
P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot						
U side (2 to 10 stations)	U	С	G						
D side (2 to 10 stations)	D	E	Н						
Both sides (2 to 24 stations)	В	F	J						

- \* 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to pages 227 and 228 in this catalog. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via SMC website, http://www.smcworld.com



# Pug-in Connector Connecting Base Series SY3000/5000/7000

EX600

VM XT34

8 A, B port size (Metric/One-touch fitting)

Combal	A, B port		Type	10/Side	ported	Type 11/Bo	ttom ported				
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000				
C2	-		ø2	•	_	_	_	_			
СЗ			ø3.2	•	—						
C4	_		ø4	•	•	_	•	_			
C6	igh		ø6	•	•	•	•	•			
C8	Straight		ø8	—	•	•	•	•	2010		
C10	0,		ø10	_	_	•	_	•	08		
C12			ø12	_	_	•	_	•	- I		
CM*		Straig	ght port, mixed sizes	•	•	•	•	•			
L4			ø4	•	•	_	_	_			
L6	Elbow Note)	2	ø6	•	•	•	_	_			
L8		Upward	ø8	l –	•	•	_	_			
L10		(e)	5	ø10	_	_	•	_	_		
L12			(e)	(e)		ø12	_	_	•	_	_
B4		Downward	ø4	•	•	_	_	_			
B6			ø6	•	•	•	_	_			
B8	Ш		ø8	_	•	•	_	ı			
B10		lá	ø10	_	_	•	_	_			
B12			ø12	_	_	•	_	_			
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	•	_	_			
	P, E port size (One-touch fittings)				ø10	ø12	ø10	ø12			

A, B port size (Inch/One-touch fitting)


Symbol	A P port			Type 1	0/Side	ported	Type 11/Bo	ttom ported					
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000					
N1			ø1/8"	•	_	_	_	_					
N3					ø5/32"	•	•	_	•	_			
N7	Straight		ø1/4"	•	•	•	•	•					
N9	Stra		ø5/16"	_	•	•	•	•					
N11	0,		ø3/8"	_	_	•	_	•	ol Sure				
CM*		Straig	ght port, mixed sizes	•	•	•	•	•					
LN3			ø5/32"	•	_	_	_	_					
LN7		Jpward	ø1/4"	•	•	_	_	_					
LN9		à	ø5/16"	_	•	_	_	_					
LN11	pow	Elbow Note)	Elbow Note)	_	ø3/8"	_	_	•	_	_			
BN3				5	ø5/32"	•	_	_	_	_			
BN7				Wa	ø1/4"	•	•	_	_	_			
BN9				⊞	⊞	ownward	ø5/16"	_	•	_	_	_	
BN11									ď	ø3/8"	_	_	•
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_					
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"					

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM"

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

### How to Order Manifold Assembly

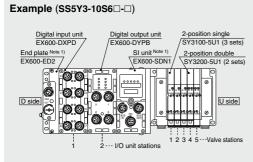

SS5Y	3-10S6Q42-05B-C6··· 1 set (Type 10 5-station manifold base part n
*SY31	00-5U1 3 sets (2-position single part no.)
*SY32	00-5U1 2 sets (2-position double part no.)
*EX60	0-DXPD 1 set I/O unit part number (Station 1)
EX60	0-DYPB 1 set I/O unit part number (Station 2)
	The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.


- Under the manifold part number, state the valves to be mounted, then the I/O units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- Note 1) Do not enter the SI unit part number and the end plate part number
- together.

  Note 2) When mixing top ported configurations, select from page 162. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

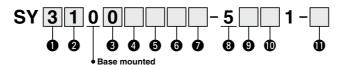

#### A Sarias

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single								
2	2-position	Double								
3		Closed center								
4	3-position	Exhaust center								
5		Pressure center								
<b>A</b> *	4	N.C./N.C.								
B*	4-position dual 3-port	N.O./N.O.								
C*	duai 3-port	N.C./N.O.								

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

o i not valve option												
Nil	Standard (0.7 MPa)											
В	Quick response type (0.7 MPa)											
K*	High pressure type (1.0 MPa)											

\* Only metal seal type is available for the high pressure type.

#### Coil type

- Nil Standard
  T With power saving circuit (Continuous duty type)

  \* Be sure to select the power saving circuit type
- when the valve is continuously energized for long periods of time.

  \* Be careful of the energizing time when the
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	ı		Non-polar
U	•		Non-polar
S	I	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- \*Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

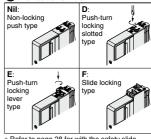

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

,
Round head combination screw
Hexagon socket head cap screw
Round head combination screw (Falling-out-prevention type)
Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

# Plus-in Connector Connecting Base Series SY3000/5000/7000


Dimensions: Series SY3000

Plug-in Connector Connecting Base

Type 10/Side Ported

EX600 (M12 Connector)

Directional Control Valves

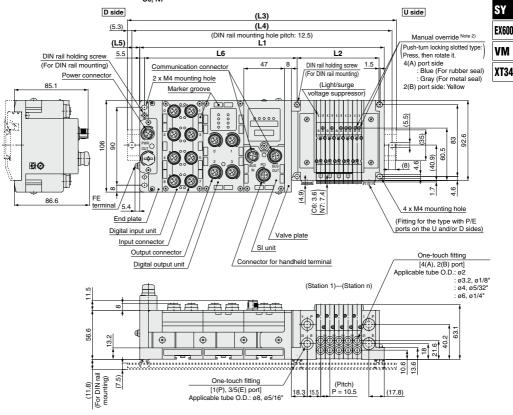

L1 = 10.5 x n1 + 135.5 + 47 x n2 L2 = 10.5 x n1 + 42

L2 = 10.5 x n1 + 42 L4 = L3 - 10.5

L4 = L3 - 10.5 L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 82$ 

n1: Valve stations n2: I/O unit stations

8

L3: DIN Rail Overall Length

560.5 573

610.5 623

585.5 598

635.5 635.5

598

610.5 623

660.5 673

635.5 648

685.5 698

Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748

Note 1) These figures show the "SS5Y3-10S6Q22-05D-C6".

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

710.5 723

760.5 760.5 773

735.5 735.5 748

785.5 798

INDEX



710.5 723

673 685.5 698

735.5 748

660.5 673

835.5 **154** 

785.5 798


835.5

760.5 773

810.5 823

Dimensions: Series SY3000

Plug-in Type 10/Side Ported
Connector Connecting Base EX600 (7/8 Inch Connector)

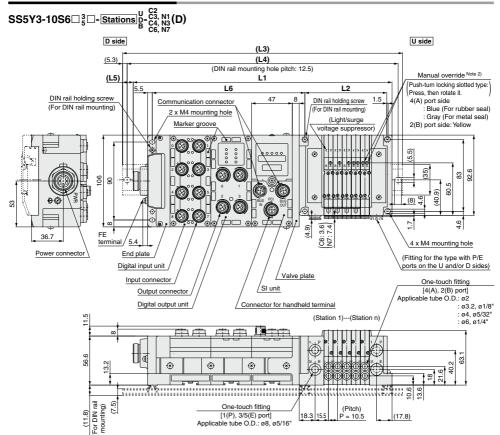

L1 = 10.5 x n1 + 152 + 47 x n2

L2 = 10.5 x n1 + 42 L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 82

n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y3-10S6Q32-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

#### 1.3: DIN Rail Overall Length

LJ. DIN NO	L3: DIN Rail Overall Length																						
Valve stations (n1) unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

# Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY5000

Plug-in Connecting Base


Type 10/Side Ported EX600 (M12 Connector)

Directional Control Valves

VM

**XT34** 

SS5Y5-10S6 2 - Stations D-C6, N7 (D)

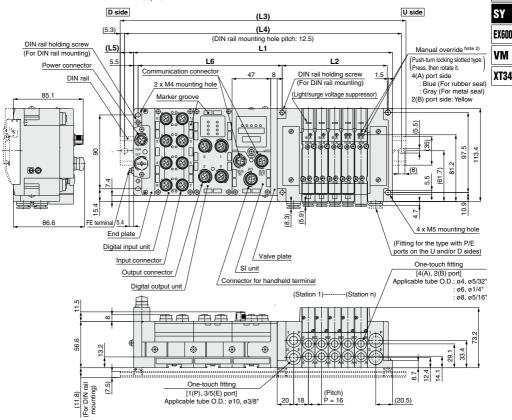

L1 = 16 x n1 + 141.5 + 47 x n2 L2 = 16 x n1 + 48

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 81.5

n1: Valve stations n2: I/O unit stations

Note 1) These fire	nurge chow the	"CCEVE_10CCC	122-UED-C8.

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

L3: DIN Ra	ail Ov	erall/	Leng	gth																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

INDEX

**SMC** 

Dimensions: Series SY5000

Plug-in Type 10/Side Ported
Connector Connecting Base EX600 (7/8 Inch Connector)

[4(A), 2(B) port]


(20.5)

Applicable tube O.D.: ø4, ø5/32"

: ø6, ø1/4"

33.4 29.

: ø8, ø5/16"

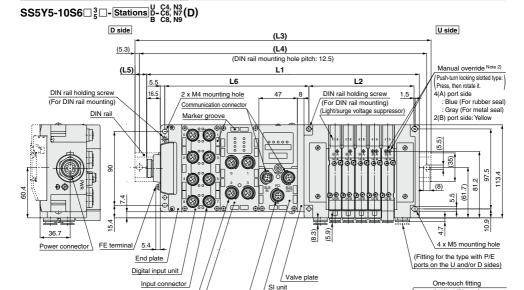

For DIN rail mounting) L1 = 16 x n1 + 158 + 47 x n2 L2 = 16 x n1 + 48 L4 = L3 - 10.5 L5 = (L3 - L1)/2

26 13.2

L6 = 47 x n2 + 81.5 n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y5-10S6Q32-05D-C8".

€

One-touch fitting

[1(P), 3/5(E) port] Applicable tube O.D.: ø10, ø3/8'

\*\*

Output connector

Digital output unit

(%)

Ha

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

Connector for handheld terminal

⊛

(Station 1)

(Pitch)

(Station n)

#### I 3: DIN Pail Overall Leng

L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations (n1) unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_

# Pug-in Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000

SS5Y7-10S6 4 - Stations B C6, N7 C6, N7 C7 C7 C12, N11 (D)

Plug-in Connector Connecting Base Type 10/Side Ported EX600 (M12 Connector)


U side

SY

Directional Control Valves

EX600

XT34

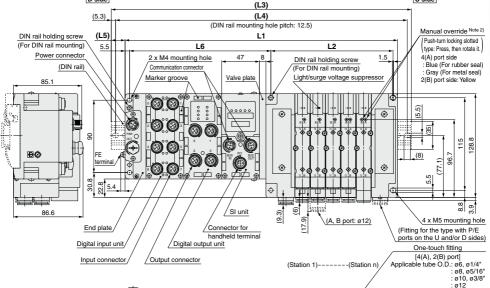

8 56.6) 56.6 13.2 35.2 ⟨\$) (%) ⇎ (%) 31.6 7.4 (For DIN rail mounting) (Pitch) 6 One-touch fitting P = 19 (21.7)[1(P), 3/5(E) port] Applicable tube O.D.: ø12, ø1/2"

L1 = 19 x n1 + 149.7 + 47 x n2

L2 = 19 x n1 + 56

L3 = DIN rail dimension

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = (L3 - L1)/2 L6 = 47 x n2 + 81.7

n1: Valve stations

n2: I/O unit stations

Note 1) These figures show the "SS5Y7-10S6Q22-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

I 3: DIN Rail Overall Length


L3: DIN F	L3: DIN Raii Overaii Length																						
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	_	_	_	_



Dimensions: Series SY7000

Plug-in Connector Connecting Base EX600 (7/8 Inch Connector)

Type 10/Side Ported

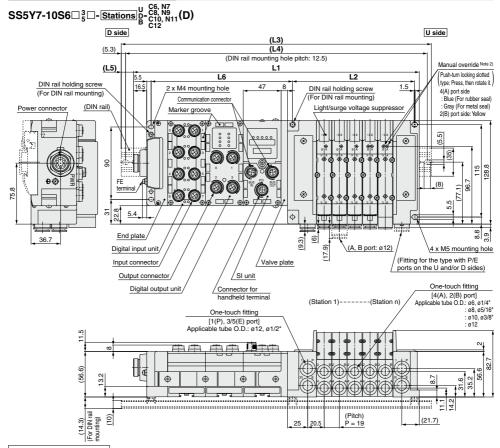

- L1 = 19 x n1 + 166.2 + 47 x n2 L2 = 19 x n1 + 56
- L4 = L3 10.5
- L5 = (L3 L1)/2
- L6 = 47 x n2 + 81.7
- n1: Valve stations
- n2: I/O unit stations

- Note 1) These figures show the "SS5Y7-10S6Q32-05D-C10".
- Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

Valve I/O stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	-	_	_		_



**EX600** 

Type 12 Top Ported

# Series SY3000/5000/7000 <u>C</u>€

**How to Order Manifold** 

SS5Y 3 - 12S6 Q Refer to pages 200 to 202 for dimensions of Type 12/Top

ported type.

U Sei	ries
3	SY3000
5	SY5000
7	SY7000

SI unit

0	Without SI unit
Q	DeviceNet™
N	PROFIBUS DP
V	CC-Link
ZE	EtherNet/IP™
D	EtherCAT
F	PROFINET

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and SI unit is not mounted to a valve without SI unit. Refer to the EX600 catalog (CAT.E02-24) for mounting.

3 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI unit	N	lil
SI unit positive common	2	3
SI unit negative common	4	5

Note 1) Without SI unit, the symbol is nil. Note 2) Ensure a match with the common specification of the valve to be used.

#### 4 I/O unit stations

for mounting.

Nil	None								
1	1 stations								
:	:								
9	9 stations								
	460 101 110 1111 11								

Note 1) Without SI unit, the symbol is nil. Note 2) SI unit is not included in I/O unit stations. Note 3) When I/O unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual

6 Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring Note 1)
16	16 stations	
02	2 stations	O : #:       +   Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolus)


Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

not desired, order with a specified layout.

Note 3) This also includes the number of blanking plate assembly

## How to Order Manifold Assembly

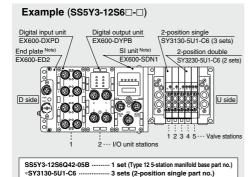

. The valve arrangement is numbered as the 1st station from the D side . Under the manifold part number, state the valves to be mounted, then the I/O units in order from the 1st station as shown in the figure above If the arrangement becomes complicated, specify on a manifold specification

\*SY3230-5U1-C6 ...... 2 sets (2-position double part no.) \*EX600-DXPD ...... 1 set I/O unit part number (Station 1)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

........... 1 set I/O unit part number (Station 2)

Note) Do not enter the SI unit part number and the end plate part number together.

### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C Note)	G
D side (2 to 10 stations)	D	E Note)	Н
Both sides (2 to 24 stations)	В	_	J

For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

\* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Note) For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

#### P. E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\* For N. sizes are in inches

#### **Mounting**

<u> </u>	mounting		
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail	
:	1	than the standard length.	
D24	For 24 stations	than the standard length.	

Note 1) When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 239 for part numbers of DIN rail.) Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to pages 227 and 228 in this catalog. (IP40 specifications may be required according to the I/O unit to be selected.) Please download


the Operation Manual via SMC website, http://www.smcworld.com

SY EX600

VM

**XT34** 

Refer to page 17 for valve specifications.

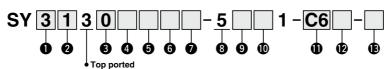

#### A Sarias

Type of actuation

Seal type

4 Pilot type Nil

R

• •••••	
3	SY3000
5	SY5000
7	SY7000

## A Pilot valve option

	Filot valve option		
	Nil	, ,	
	В		
K* High pressure type (1.0 MPa			

\* Only metal seal type is available for the high pressure type.

#### (I) A, B port size

One-touch fitting (Metric)

A, B port

α2

ø3.2

ø4

ø6

ø8

ø10

ø12

One-touch fitting (Inch)

A, B port

ø1/8"

ø5/32

ø1/4"

α5/16"

ø3/8"

12 Thread type

C2

C3

C4

C6

C8

C10

C12

N1

N3

N7

N9

N11

ınre	i nread piping		
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

•

SY3000 SY5000 SY7000

SY3000 SY5000 SY7000

•

•

•

1	2-position	Single
•		Sirigie
2		Double
3		Closed center
4 3-posi	3-position	Exhaust center
5		Pressure center
	A* 4-position dual 3-port	N.C./N.C.
B*		N.O./N.O.
C*		N.C./N.O.

\* Only rubber seal type is available for the 4-position dual 3-port valve.

Rubber seal

Metal seal

Internal pilot

External pilot

#### Coil type

	Т	With power saving circuit (Continuous duty type)
* Be sure to select the power saving circuit type when the valve is continuously energized for		
	long pe	eriods of time.

Standard

\* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details

#### Rated voltage

•	ou ronugo
5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- Only "Z" and "NZ" types are available for with the power saving circuit.


	NII	HC
	F	G
	N	NPT
	Т	NPTF
_		

Only Nil is available for M5.

## Back pressure check valve

Nil	None
н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000

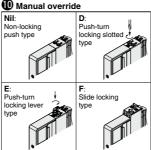

\* Refer to page 28 for with the safety slide locking manual override.

	Type of mounting screw		
Nil Round head combination screw		Round head combination screw	
	В	Hexagon socket head cap screw	
	K	Round head combination screw (Falling-out-prevention type)	
	Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark: (ii))




EX250

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

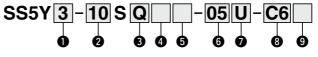

### Series

3	SY3000
5	SY5000
7	SY7000

## 2 Type

10	Side ported			
11	Bottom ported*			
* The CVECCO manifold base is used for the				

The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

#### 4 Input block stations

Nil	None					
1	1 station					
:	i i					
8	8 stations					

Note) Without SI unit, the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI unit.

#### SI unit

0	Without SI unit						
Q	DeviceNet™ (Negative common)						
N	PROFIB	PROFIBUS DP (Negative common)					
V	CC-	CC-Link (Positive common)					
TA	AS-Interface	supply	8 in/8 out, 31 slave modes				
TB			4 in/4 out, 31 slave modes				
TC	(Negative common)		8 in/8 out, 31 slave modes				
TD	Commission	systems	4 in/4 out, 31 slave modes				
Y	CANopen (Negative common)						
75	Este - MI-4/IDTM (NI4)						

Note 1) Ensure a match with the common

specification of the valve to be used.

Note 2) Input block cannot be mounted without
SI unit.

Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

#### Input block type

PNP input	NPN input
(Positive common)	(Negative common)
N	il
Α	D
В	E
С	F
	(Positive common)  N A B

Note) Without SI unit, the symbol is nil.

#### 6 Valve stations

_		, o.u				
Symbol	Stations	Note				
02	2 stations					
:	- :	Double wiring Note 1)				
16	16 stations					
02	2 stations	Considered Invest Note 2)				
:	- :	Specified layout Note 2) (Available up to 32 solenoids)				
24	24 stations	(Available up to 32 soleriolus)				

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

when determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.


8 in/8 out specification: Max. 8 solenoids
 4 in/4 out specification: Max. 4 solenoids

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the product without the SI unit (S0),

lote 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## **How to Order Manifold Assembly**

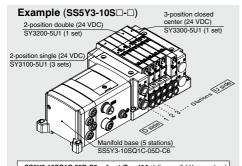

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
  Under the manifold part number, state the valves to be mounted in order
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 170. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B nort on base side.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

\* 3/5(E) port is plugged for the built-in silencer type.

\* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 229 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

# Plus-in Connector Connecting Base Series SY3000/5000/7000

Directional Control Valves

٩V

EX600

VM

XT34

### 8 A, B port size (Metric/One-touch fitting)

$\overline{}$	Type 10/Side ported Type 11/Bottom ported											
Symbol		A, B port										
Sylliuui				SY3000	SY5000	SY7000	SY5000	SY7000				
C2		ø2		•	_	_	_	_				
СЗ			ø3.2	•	_	_	_	_				
C4	_		ø4	•	•	_	•	_				
C6	ight		ø6	•	•	•	•	•				
C8	Straight		ø8	_	•	•	•	•				
C10	0,		ø10	_	_	•	_	•	00			
C12			ø12			•	_	•	\ \frac{1}{2}			
CM*		Straig	tht port, mixed sizes	•	•	•	•	•				
L4			ø4	•	•	_	_	_				
L6		2	ø6	•	•	•	_	_				
L8		Upward	ø8	_	•	•	_	_				
L10		2	5	5	ø10	_	_	•	_	_		
L12	te)		ø12	_	_	•	_	_	S Jaione			
B4	۸No	Downward	ø4	•	•	_	_	_				
B6	pov		/ard	ard	ad bo	ø6	•	•	•	_	_	
B8	Ш		ø8	_	•	•	_	_				
B10			ø10	_	_	•	_	_				
B12			ø12	_	_	•	_	_				
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_					
P, E port size (One-touch fittings)				ø8	ø10	ø12	ø10	ø12				

#### A, B port size (Inch/One-touch fitting)

Combal	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported							
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000							
N1			ø1/8"	•	_	_	_	_						
N3			ø5/32"	•	•	_	•	_						
N7	igh		ø1/4"	•	•	•	•	•						
N9	Straight		ø5/16"	_	•	•	•	•						
N11	0)		ø3/8"	_	_	•	_	•	e lange					
CM*		Straig	tht port, mixed sizes	•	•	•	•	•						
LN3			ø5/32"	•	_	_	_	_						
LN7		/ard	ø1/4"	•	•	_	_	_						
LN9		Jpward	ø5/16"	_	•	_	_	_						
LN11	(e)	-	ø3/8"	_	_	•	_	_	S S S S S S S S S S S S S S S S S S S					
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_						
BN7	ò	wa	Downward	wa	wal	wal	×	ø1/4"	•	•	_	_	_	
BN9	⊞	ž	ø5/16"	_	•	_	_	_						
BN11		ă	ø3/8"	_	_	•	_	_						
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_						
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"						

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### Mounting and Option

O IVIO	wounting and Option							
		Option		[	DIN Rail Option			
Symbol	Mounting	Name plate	Station number		Nil	Direct	mounting	
Nil	D: .		_		0		rail (with bracket)	
AA	Direct mounting	•	•		3	For 3 stations	Specify a longer	
BA		•	_		:		rail than the total length of specified	
D□	D.II. 1	_	_		24	For 24 stations	stations.	
A□	DIN rail mounting	•	•					
B□		•	_					

Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).


Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

\* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 239 for part numbers of DIN rail.)

Protective class class II (Mark: (iii))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

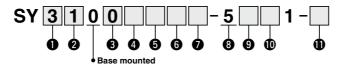

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

• Type of dotadtion				
1	0 141	Single		
2	2-position	Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
<b>A</b> *	4	N.C./N.C.		
B*	4-position dual 3-port	N.O./N.O.		
C*	duai 3-port	N.C./N.O.		

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

9 1 111	o i not vaive option											
Nil	Standard (0.7 MPa)											
В	Quick response type (0.7 MPa)											
K*	High pressure type (1.0 MPa)											

\* Only metal seal type is available for the high pressure type.

#### Coil type

	Otanida d
Т	With power saving circuit (Continuous duty type)
	e to select the power saving circuit type

Standard

- when the valve is continuously energized for long periods of time.

  \* Be careful of the energizing time when the
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	Ī		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- \* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

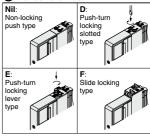

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

- VI	oc or mounting corem
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

# Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base


Type 10/Side Ported

For DIN rail mounting)

(11.8) 5

Dimensions: Series SY3000

SS5Y3-10S

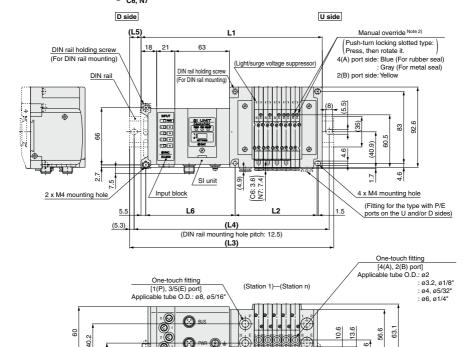

(Pitch)

P = 10.5

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

(17.8)

L1 = 10.5 x n1 + 135.5 + 21 x n2

4 x M8

3-pin socket

2 x M12

Note 1) These figures show the "SS5Y3-10SQ1A-05D-C6".

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

L2 = 10.5 x n1 + 42

L4 = L3 - 10.5

L5 = (L3 - L1)/2L6 = 21 x n2 + 82

n1: Valve stations

n2: Input block stations

L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

INDEX

166

SMC

Directional Control Valves

SY

EX600 VM


**XT34** 

Dimensions: Series SY5000

Plug-in Connecting Base

Type 10/Side Ported

 $SS5Y5-10S \square \square - \underbrace{Stations}_{D}^{U} \overset{C4, N3}{\underset{C8, N9}{\sim}} (D)$ 

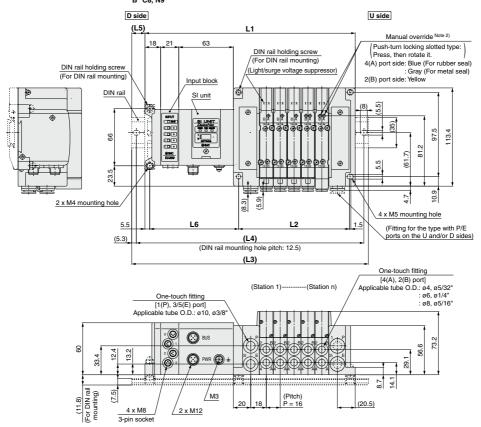

L1 = 16 x n1 + 141.5 + 21 x n2 L2 = 16 x n1 + 48 L4 = L3 - 10.5

L5 = (L3 – L1)/2 L6 = 21 x n2 + 81.5

n1: Valve stations n2: Input block stations

L3: DIN Rail Overall Lengtl

Note 1) These figures show the "SS5Y5-10SQ1A-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.


L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723

# Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base

Type 10/Side Ported

Dimensions: Series SY7000

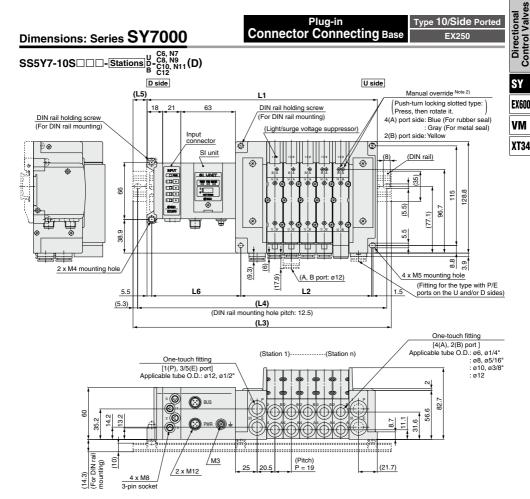

L1 = 19 x n1 + 149.7 + 21 x n2 L2 = 19 x n1 + 56

L4 = L3 - 10.5

L5 = (L3 - L1)/2L6 = 21 x n2 + 81.7

n1: Valve stations

n2: Input block stations

Note 1) These figures show the "SS5Y7-10SQ1A-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.


L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) I/O unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798

**SMC** 

Type 12 Top Ported

# Series SY3000/5000/7000 €

#### **How to Order Manifold**

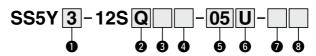

Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

#### Series SY3000 SY5000

Input block stations

Nil	None									
1	1 station									
:										
8	8 stations									

Note) Without SI unit the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI unit.

4 Input block type

	PNP input	NPN input
	(Positive common)	(Negative common)
Without input block	N	il
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

Note) Without SI unit, the symbol is nil.

Si unit				
0	Without SI unit			
Q	DeviceNet™ (Negative common)			
N	PROFIBUS DP (Negative common)			
٧	CC-	CC-Link (Positive common)		
TA	AS-Interface (Negative	supply systems 1 power	8 in/8 out, 31 slave modes	
TB			4 in/4 out, 31 slave modes	
TC	common)		8 in/8 out, 31 slave modes	
TD		supply systems	4 in/4 out, 31 slave modes	
Υ	CANopen (Negative common)			
ZE	EtherNet/IP™ (Negative common)			


- Note 1) Ensure a match with the common specification of the valve to be used Note 2) Input block cannot be mounted without
- SLunit
- Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited

#### 6 Valve stations

Symbol	Stations	Note		
02	2 stations			
:	- :	Double wiring Note 1)		
16	16 stations			
02	2 stations	Specified layout Note 2) (Available up to 32 solenoids)		
:	- :			
24	24 stations			

- 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired.
- order with a specified layout. Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where
- single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.
  - 8 in/8 out specification: Max. 8 solenoids
     4 in/4 out specification: Max. 4 solenoids
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold

## How to Order Manifold Assembly

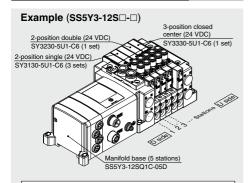

SS5Y3-12SQ1C-05D ··· 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6------ 3 sets (2-position single part no.) \*SY3230-5U1-C6...... 1 set (2-position double part no.) \*SY3330-5U1-C6------ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.

. The valve arrangement is numbered as the 1st station from the D side. . Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet

#### 6 P. E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C Note)	G
D side (2 to 10 stations)	D	E Note)	Н
Both sides (2 to 24 stations)	В	_	J

- For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
  When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.
- Note) For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\* For N sizes are in inches


Mounting Nil Direct mounting DIN rail mounting (With DIN rail) DIN rail mounting (Without DIN rail) DO

Note 1) If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 239 for the DIN rail part number.) Specify a longer Note 2) Refer to page 261 for the fixation rail than the of DIN rail mounting type D24 For 24 stations standard length.

manifold. For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be

How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications

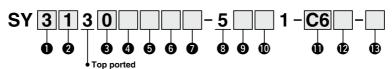

#### A Sarias

• ••	
3	SY3000
5	SY5000
7	SY7000

Coil type Nil

long periods of time.

page 258 for details.

8 Rated voltage

<b>9</b> FI	Filot valve option	
Nil	Nil Standard (0.7 MPa)	
В		
K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

\* Be careful of the energizing time when the power saving circuit is selected. Refer to

Standard With power saving circuit (Continuous duty type) \* Be sure to select the power saving circuit type when the valve is continuously energized for

24 VDC

#### (ID) A. B port size

11116	ilileau pipilig		
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-	touch fitting (N			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12			•

One-to	ouch fitting	(Inch)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"		•	•
NI11	~0/0!!			

#### 2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	4 3-position 5	Exhaust center
5		Pressure center
<b>A</b> *	4	N.C./N.C.
B*	B* 4-position dual 3-port	N.O./N.O.
C*		N.C./N.O.

\* Only rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

	or typo
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)


Nil	None
Н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		NOTI-polal
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common
* "D" one	1 "I I" ava anni	licable for ave	on Clunit

- "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- \* Only "Z" and "NZ" types are available for with the power saving circuit.

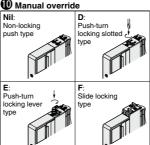

\* Refer to page 28 for with the safety slide locking manual override.

Thread type

Tilleau type	
Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## Type of mounting screw

• '/	<b>J</b>
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service. Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class

INDEX



Directional Control Valves

SY EX600

VM

**XT34** 




**EX260** 

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type

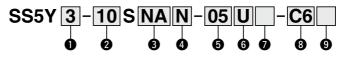

# 11/Bottom ported type

<b>U</b> Series		
3	SY3000	
5	SY5000	
7	SY7000	

10 Side ported	<b>②</b> Typ	oe .
	10	Side ported
11 Bottom ported*	11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Type Manifold" (from page 203).

3 SI unit specifications

Symbol	Protocol	Number of outputs	Communication connector
0	W	ithout SI un	iit
QA	DeviceNet™	32	M12
QB	Device Net	16	IVIIZ
NA		32	M12
NB	PROFIBUS	16	IVIIZ
NC	DP	32	D-sub Note)
ND		16	D-Sub (10.0)
VA	CC-Link	32	M12
VB	CC-LINK	16	IVIIZ
DA	EtherCAT	32	M12
DB	ElilerCAT	16	IVIIZ
FA	PROFINET	32	M12
FB	PROFINET	16	IVITZ
EA	EtherNet/IP™	32	M12
EB	Ettletivet/IP1m	16	IVI12
Natal ID40 for the David and Control			

Note) IP40 for the D-sub applicable communication connector specification. DIN rail cannot be mounted without SI unit.

### A SI unit output polarity

<u> </u>	ant output polarity
Nil	Positive common (NPN)
N	Negative common (PNP)

Note 1) Ensure a match with the common specification of the valve to be used. Note 2) Without SI unit, the symbol is nil.

#### Valve stations

In the case of the 32-output SI unit		
Symbo	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	O: Note 2)
:	:	Specified layout Note 2)
24	24 etatione	(Available up to 32 solenoids)

#### In the case of the 16-output SI unit

Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring Note 1)	
08	8 stations		
02	2 stations	O If II A Note 2)	
:	- :	Specified layout Note 2)	
16	16 stations	(Available up to 16 solenoids)	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified lavout

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- \* 3/5(E) port is plugged for the built-in silencer type
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for (3).

#### 9 Mounting and Option

Symbol	Marintina	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Direct mounting	_	_	
AA		•	•	
BA		•	_	
D□	DIN!!	_	_	
A□	DIN rail mounting	•	•	
B□		•	_	

Note 1) Enter the number of stations inside  $\square$ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

#### DIN Ball Ontion

ziit itaii optioii			
Nil	Standard length Without DIN rail (with bracket)		
0			
3	For 3 stations	0	
:		Specify a longer rail than the total length of specified stations.	
24	For 24 stations	total lerigili of specified stations.	
140 V			

\* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 239 for part numbers of DIN rail.)

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 230 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

# Plusin Connector Connecting Base Series SY3000/5000/7000

EX600

VM

**XT34** 

#### 8 A, B port size (Metric/One-touch fitting)

	, _ p		Type	10/Side	norted		attom norted	1			
Symbol		A, B port			SY5000						
C2			ø2	010000	013000	317000	313000	317000			
		H		-							
СЗ		_	ø3.2	•							
C4	+		ø4	•	•	_	•	_			
C6	ig		ø6	•	•	•	•	•			
C8	Straight		ø8		•	•	•	•	2010		
C10	0)	П	ø10	_	_	•	_	•	000		
C12			ø12	_	_	•	_	•	4		
CM*		Straig	ht port, mixed sizes	•	•	•	•	•			
L4			ø4	•	•	_	_	_			
L6		2	ø6	•	•	•	_	_			
L8		Upward	ø8	l –	•	•	_				
L10		5	ø10	_	_	•	_	_			
L12	(e)		ø12	_	_	•	_	_	Jeise Par		
B4	Not		ø4	•	•	_	_	_	. 08		
B6	Elbow Note)	Downward	ard	ard	ø6	•	•	•	_	_	
B8	⊞		ø8	_	•	•	_	_			
B10			ø10	_	_	•	_	_			
B12	-	-	ø12	_	_	•	_	_			
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
	P, E port size One-touch fittings)			ø8	ø10	ø12	ø10	ø12			

A, B port size (Inch/One-touch fitting)

Combal		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	ol Sax
CM*		Strai	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		arg	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11		-	ø3/8"	_	_	•	_	_	
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	ò	Downward	ø1/4"	•	•	_	_	_	
BN9	⊞	ž	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	


Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**ØSMC** 

### **How to Order Manifold Assembly**

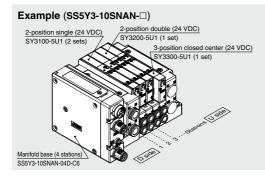

SS5Y3-10SNAN-04D-C6---1 set (Type 10 4-station manifold base part no.) \*SY3100-5U1-----2 sets (2-position single part no.) \*SY3200-5U1-----1 set (2-position double part no.) \*SY3300-5U1--------1 set (3-position closed center part no.) The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.


- The valve arrangement is numbered as the 1st station from the D side.
- · Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 178. Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

> Protective class class II (Mark: (ii))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

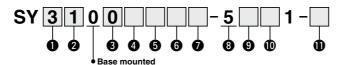

#### A Sarias

• ••••		
	3	SY3000
	5	SY5000
	7	SY7000

#### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *	4	N.C./N.C.
B*	4-position dual 3-port	N.O./N.O.
C*	duai 3-port	N.C./N.O.

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

# 5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

o i not vaive option					
Nil	Standard (0.7 MPa)				
В	Quick response type (0.7 MPa)				
K*	High pressure type (1.0 MPa)				

 Only metal seal type is available for the high pressure type.

#### Coil type

	NII	Standard	
	Т	With power saving circuit (Continuous duty type)	
* Be sure to select the power saving circuit t			

- \* Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	suppressor	specification
R	_		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).
- Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

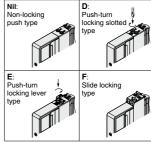

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
К	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



# Eligen Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series **SY3000** 

Plug-in Connector Connecting Base

Type 10/Side Ported

EX260

Directional Control Valves

SY


EX600


VM


**XT34** 

SS5Y3-10S - Stations p - S

- C2 - C3, N1 C4, N3 C6, N7

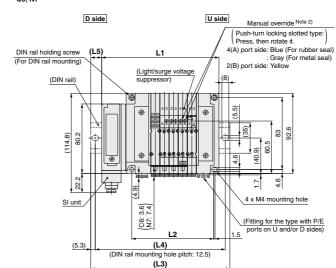

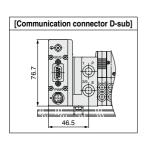

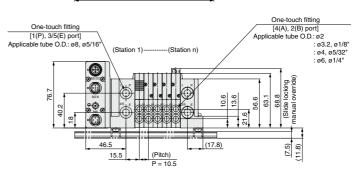

Note 1) These figures show the "SS5Y3-10SQA-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12


n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13





Dimensions: Series SY5000

Plug-in Connector Connecting Base Type 10/Side Ported EX260

SS5Y5-10S - Stations D - C6, N3 (D)

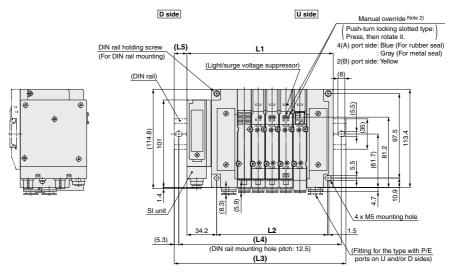

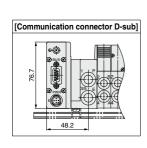

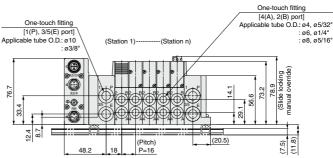

Note 1) These figures show the "SS5Y5-10SQA-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5

# Pug-in Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000

Plug-in Connector Connecting Base

Type 10/Side Ported

EX260


Directional Control Valves


EX600

VM

**XT34** 

SS5Y7-10S - Stations P - C6, N7 C8, N9 C10, N11 (D)

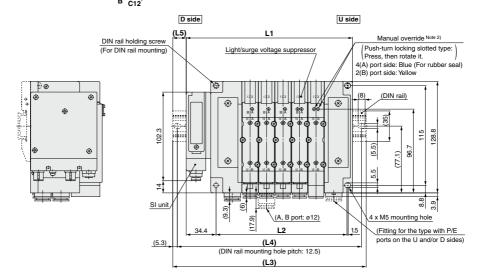

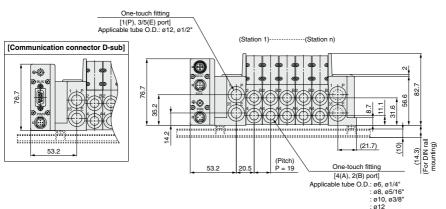

Note 1) These figures show the "SS5Y7-10SQA-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

INDEX

176

# Series SY3000/5000/7000 ⊆ €

**How to Order Manifold** 

SS5Y 3 -12S NA

Refer to pages 200 to 202 for Type 12/Top ported dimensions.

1 Sei	ries
3	SY3000
5	SY5000
7	CV7000

2 SI unit specifications

Symbol	Protocol	Number of outputs	Communication connector						
0	Without SI unit								
QA	DeviceNet™	32	M12						
QB	Devicemet	16	IVITZ						
NA		32	M12						
NB	PROFIBUS	16	IVITZ						
NC	DP	32	D-sub Note)						
ND		16	D-sub No.c/						
VA	CC-Link	32	M12						
VB	CC-LIIK	16	IVIIZ						
DA	EtherCAT	32	M12						
DB	EllielCAI	16	IVIIZ						
FA	PROFINET	32	M12						
FB	PHOFINE	16	IVITZ						
EA	EtherNet/IP™	32	M12						
EB	Euleinel/IP	16	IVIIZ						

Note) IP40 for the D-sub applicable communication connector specification. DIN rail cannot be mounted without SI unit

SI SI	unit output polarity
Nil	Positive common (NPN)
N	Negative common (PNP)

Note 1) Ensure a match with the common specification of the valve to be used

Note 2) Without SI unit, the symbol is nil.

Walve stations

In the	case of the	ne 32-output	SI unit
Symbol	Stations		Note

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	Oifid I t Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolds)

#### In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	O
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification (Note that 2-position double, 3-position and 4-position valves cannot be used

where single wiring has been specified.) Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

A P F port entry

• :, = port ont;	
U Note)	
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 6 SUP/EXH block assembly

Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids

#### P, E port size (One-touch fittings)

ymbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

For N. sizes are in inches

#### Mounting


Woulding		
Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	
:	Specify a longer rail than the standard length.	
D24		

Note 1) When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 239 for part numbers of DIN rail.

Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

## How to Order Manifold Assembly

Operation Manual via SMC website, http://www.smcworld.com

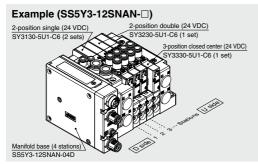

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the

WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part

numbers of SI units to be mounted, refer to page 230 in this catalog. Please download the

SS5Y3-12SNAN-04D ····· 1 set (Type 12 4-station manifold base part no.) \*SY3130-5U1-C6 ...... 2 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.) \*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

. The valve arrangement is numbered as the 1st station from the D side. · Under the manifold part number, state the valves to be mounted in

order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.


SY EX600

VM

**XT34** 

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications

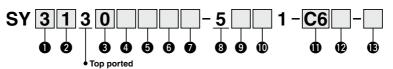

#### Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *	4-position dual 3-port	N.C./N.C.
B*		N.O./N.O.
C*		N.C./N.O.

\* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

Pilot type

<u> </u>	
Nil	Internal pilot
R	External pilot

# Back pressure check valve

(Built-in valve type)	
Nil	None
н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same
- time because it will reduce the flow. \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Bilot valve option

	Pilot valve option		
Nil Standard (0.7 MPa)		Standard (0.7 MPa)	
	В	Quick response type (0.7 MPa)	
	K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

		>
	Nil	Standard
	T	With power saving circuit (Continuous duty type)
* Be sure to select the power saving circuit to		


- long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

U Ha	leu vollage	
5		24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		14011-polai
S	_		Positive
Z	•	•	common
NS			Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).
- \* Only "Z" and "NZ" types are available for with the power saving circuit.

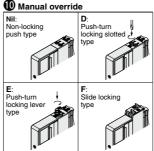

\* Refer to page 28 for with the safety slide locking manual override.

**ØSMC** 

#### A, B port size

#### \_\_\_ \_\_

11116	i ili eau pipilig								
Symbol	Port size	Applicable series							
M5	M5 x 0.8	SY3000							
01	1/8	SY5000							
02	1/4	SY7000							

#### no touch fitting (Matric)

Olle-	One-touch fitting (Metric)								
Symbol	A, B port	SY3000	SY5000	SY7000					
C2	ø2	•	_	_					
C3	ø3.2	•	_	_					
C4	ø4	•	•	_					
C6	ø6	•	•	•					
C8	ø8	_	•	•					
C10	ø10		_	•					
C12	ø12	_	_	•					
				_					

#### One-touch fitting (Inch)

One-touch litting (inch)								
Symbol	A, B port	SY3000	SY5000	SY7000				
N1	ø1/8"	•	_	_				
N3	ø5/32"	•	•	_				
N7	ø1/4"	•	•	•				
N9	ø5/16"	_	•	•				
N11	ø3/8"	_	_	•				

#### 1 Thread type

Nil		Rc
	F	G
	N	NPT
	Т	NPTF

\* Only Nil is available for M5.

### Type of mounting screw

Type of mounting cores							
Nil	Round head combination screw						
В	Hexagon socket head cap screw						
К	Round head combination screw (Falling-out-prevention type)						
н	Hexagon socket head cap screw (Falling-out-prevention type)						

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 234 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.


> Protective class class II (Mark: (ii))



# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type

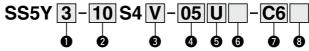

#### Series SY3000 5 SY5000 SY7000

•	<b>2</b>	8	4	6 6	0	8
2 Type				4 Valve	stations	s

The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

Side ported

Bottom ported

10

11

#### SI unit Without SI unit CC-Link (Positive common NPN)

Only a terminal block plate is mounted for the valve without SI unit.


•	v aiv c	Juliona					
Symbol	Stations	Note					
02	2 stations						
1	:	Double wiring Note 1)					
08	8 stations						
02	2 stations	O 16' 1 1 + Noto 2)					
1	:	Specified layout Note 2)					
16	16 stations	(Available up to 16 solenoids)					

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

# **How to Order Manifold Assembly**

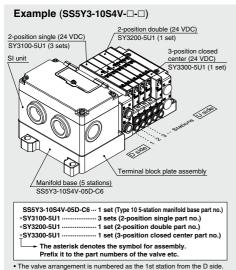

P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

## 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \* 3/5(E) port is plugged for the built-in silencer
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 186 In this case, use caution as there is also output on the A and B port on

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 231 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

# Plus-in Connector Connecting Base Series SY3000/5000/7000

Directional Control Valves

QV.

EX600

VM

XT34

A, B port size (Metric/One-touch fitting)

				Type 1			Type 11/Bo		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2		ø2		•	_	_	_	_	
СЗ	1	П	ø3.2	•	_	_	_	_	
C4	_	П	ø4	•	•	_	•	_	
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	200
C10	"		ø10	_	_	•	_	•	08
C12			ø12	_	_	•	_	•	- Tar
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		2	ø6	•	•	•	_	_	
L8		Upward	ø8	—	•	•	l –	_	
L10		5	ø10	_	_	•	_	_	
L12	e e		ø12	_	_	•	_	_	Jest Barre
B4	Elbow Note)		ø4	•	•	_	_	_	
B6	ò	ard	ø6	•	•	•	_	_	
B8	Ш	Downward	ø8	_	•	•	_	_	
B10		Do	ø10	_	_	•	_	_	
B12			ø12	_	-	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12			

			D	Type 1	10/Side ported Type 11/Bottom ported					
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•			
N7	Straight		ø1/4"	•	•	•	•	•		
N9	Stra		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	ol Sax	
CM*		Straig	tht port, mixed sizes	•	•	•	•	•		
LN3		1	ø5/32"	•	_	_	_	_		
LN7			varc	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_		
LN11	te)	_	ø3/8"	_	_	•	_	_	O DESCRIPTION OF THE PERSON OF	
BN3	Elbow Note)	Б	ø5/32"	•	_	_	_	_		
BN7	bov	wa	ø1/4"	•	•	_	_	_		
BN9		Downward	ø5/16"	_	•	_	_	_		
BN11		Ó	ø3/8"			•	_			

A, B port size (Inch/One-touch fitting)

Elbow port, mixed sizes (Including upward and downward piping)

P, E port size

(One-touch fittings)

ø5/16" | ø3/8" | ø1/2" | ø3/8" | ø1/2"

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### 8 Mounting and Option

Symbol	Mounting	Option		
Syllibol	Wounting	Name plate	Station number	
Nil	Direct	_	_	
AA	mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
В□	Iniounting	•	_	

Note 1) Enter the number of stations inside 
when it is larger than the number of 
valve stations. (Refer to "DIN Rail 
Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.


#### DIN Rail Option

Dirt Hair Option				
Nil	Nil Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rai		
:	:	than the total length		
16	For 16 stations	of specified stations.		

Protective class class II (Mark: (1))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

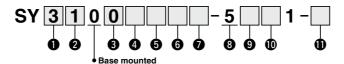

#### A Sarias

	3	SY3000
	5	SY5000
	7	SY7000

2 Type of actuation

O Type of detadlion				
1	2-position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *	4	N.C./N.C.		
B*	4-position dual 3-port	N.O./N.O.		
C*	duai 3-port	N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type) Nil

H Built-in			
* Only ru	ibber seal type. Manifold installed type		
is avail	able if the back pressure check valve		
is requ	ired for a valve with metal seal. Refer		

- to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Pilot valve option

• I not varie option				
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K*	High pressure type (1.0 MPa)			

\* Only metal seal type is available for the high pressure type.

#### Coil type

IVII	Statiuatu			
Т	With power saving circuit (Continuous duty type)			
* Be sure to select the power saving circuit typ				
when the valve is continuously energized for				

long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC				

#### 9 Light/surge voltage suppressor and common specification

S	ymbol	With light	Surge voltage suppressor	Common specification	
	R U			Non-polar	
	S	_	_	Positive	
	Z	•		common	

\* Only "Z" type is available for with the power saving circuit.

#### Manual override

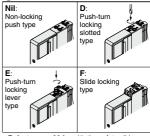

Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 234 for part numbers of base gasket and mounting screw.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

# Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base

Type 10/Side Ported EX126


Directional Control Valves SY


EX600

VM XT34

Dimensions: Series SY3000

SS5Y3-10S4V - Stations D

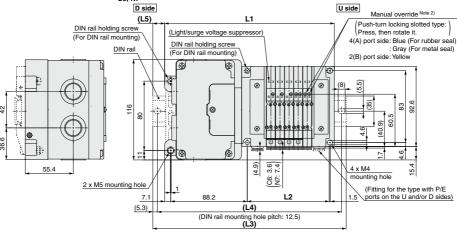

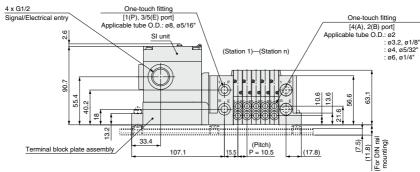

Note 1) These figures show the "SS5Y3-10S4V-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.


	n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
	L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
	L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
	L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
	L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12
-																




Dimensions: Series SY5000

Plug-in Connector Connecting Base Type 10/Side Ported

SS5Y5-10S4V - Stations D - C6, N7 (D)

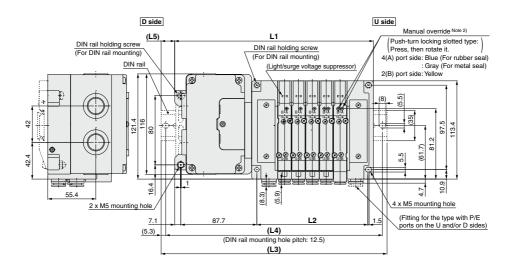

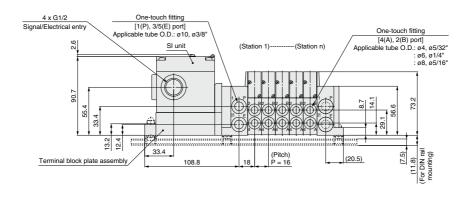

Note 1) These figures show the "SS5Y5-10S4V-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15



# Plus-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base


Type 10/Side Ported


Directional Control Valves

EX600

VM

Dimensions: Series SY7000 SS5Y7-10S4□-Stations D

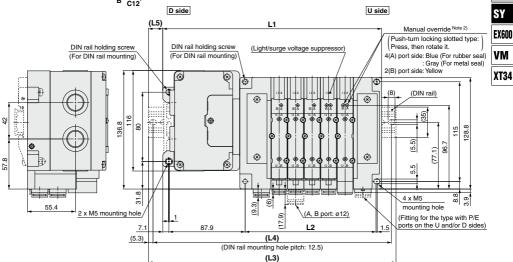

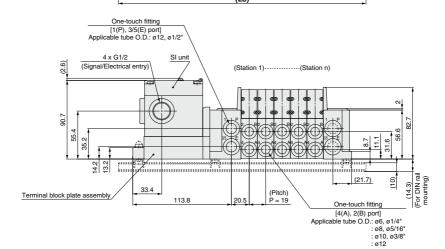

Note 1) These figures show the "SS5Y7-10S4V-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12




Type 12 Top Ported

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

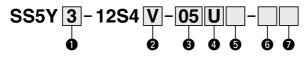

#### A Series

<b>O</b> CC.	O OCITICO						
3	SY3000						
5	SY5000						
7	SY7000						

## A SI unit

<u> </u>	G or unit							
0	Without SI unit							
V	CC-Link (Positive common NPN)							

\* Only a terminal block plate is mounted for the valve without SI unit.

#### Valve stations

Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring Note 1)						
08	8 stations	· ·						
02	2 stations	O#						
:	:	Specified layout Note 2) (Available up to 16 solenoids)						
16	16 stations	(Available up to 16 soleriolds)						

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

#### A P F nort entry

T , E port citaly									
U Note)	U side (2 to 10 stations)								
D Note)	D side (2 to 10 stations)								
В	Both sides (2 to 16 stations)								


Note) 5 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### How to Order Manifold Assembly

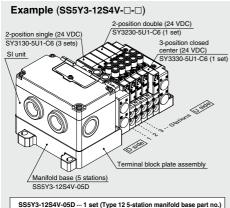

\*SY3130-5U1-C6...... 3 sets (2-position single part no.) \*SY3230-5U1-C6------ 1 set (2-position double part no.)

\*SY3330-5U1-C6...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. Under the manifold part number, state the valves to be mounted in order. from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

## 6 P. E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	D
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	M

\* For N. sizes are in inches.



Nil	Direct mounting						
D	DIN rail mounting (With DIN rail)						
D0	DIN rail mounting (Without DIN rail)						
D3	For 3 stations	Specify a longer rail					
		than the standard					
D16	For 16 stations	length.					

Note) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 231 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

# Directional Control Valves


SY EX600

VM

**XT34** 

How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications

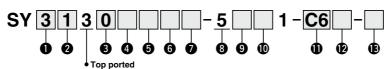

#### A Sarias

• ••	
3	SY3000
5	SY5000
7	SY7000

Type of actuation

Type of actuation				
2-position	Opposition	Single		
	Double			
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
<b>A</b> *	4	N.C./N.C.		
В*	4-position dual 3-port	N.O./N.O.		
C*		N.C./N.O.		

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in
* Only ru	ubber seal type. Manifold installed type

- is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	T not valve option			
Nil B		Standard (0.7 MPa)		
		Quick response type (0.7 MPa)		
	K*	High pressure type (1.0 MPa)		

\* Only metal seal type is available for the high pressure type.

#### Coil type

	NII Standard		
	Т	With power saving circuit (Continuous duty type)	
v	vhen t	e to select the power saving circuit type he valve is continuously energized for	

long periods of time. \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage


•	
5	24 VDC

#### Light/surge voltage suppressor and common specification

and common opcomoduon				
Symbol	With light	Surge voltage suppressor	Common specification	
R	_	•	Non-polar	
U	•			
S	_		Positive	
Z	•		common	

* Only "Z" type is	available f	for with	the power
saving circuit.			

#### Manual override

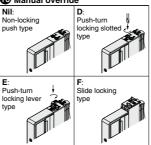

\* Refer to page 28 for with the safety slide locking manual override.

**ØSMC** 

#### (I) A, B port size

rineau piping			
	Symbol	Port size	Applicable series
	M5	M5 x 0.8	SY3000
	01	1/8	SY5000
	02	1/4	SY7000

#### touch fitting (Motric)

One-touch fitting (wetric)						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
СЗ	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

#### One-touch fitting (Inch)

One-touch fitting (inch)							
Symbol	A, B port	SY3000	SY5000	SY7000			
N1	ø1/8"	•	_	_			
N3	ø5/32"	•	•	_			
N7	ø1/4"	•	•	•			
N9	ø5/16"	_	•	•			
N11	ø3/8"	_	_	•			

#### Thread type

Timeda type							
Nil	Rc						
F	G						
N	NPT						
Т	NPTF						

\* Only Nil is available for M5.

#### Type of mounting screw

<b>4</b> . , ,	pe or iniounting cores
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc. \* When ordering a valve individually, the
- base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class



## **Plug-in** Connector Connecting Base


EX120

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**

Refer to pages 198 (SY5000) and 199 (SY7000) for dimensions of Type 11/Bottom ported type.

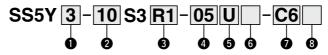

## 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Typ	oe .
10	Side ported
11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 203).

#### 3 SI unit

0	Without SI unit					
Q	DeviceNet™ (Positive common NPN)					
R1	OMRON CompoBus/S	16 outputs				
R2	(Positive common NPN)	8 outputs				
٧		re common NPN)				
ZB Note 2)	CompoNet™	Positive common NPN				
ZBN Note 2)	Componer	Negative common PNP				

Note 1) Ensure a match with the common specification of the valve to be used. Note 2) The communication connector (for the opposite side) is not provided. Please order it separately.

#### 4 Valve stations

Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring Note 1)					
08	8 stations						
02	2 stations	O :#: 1 1 + Note 2)					
:	:	Specified layout Note 2)					
16	16 stations	(Available up to 16 solenoids)					

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

 3/5(E) port is plugged for the built-in silencer type.

#### **How to Order Manifold Assembly**

Example (SS5Y3-10S3V-	,
	tion double (24 VDC)
2-position single (24 VDC) SY320	00-5U1 (1 set)
SY3100-5U1 (3 sets)	3-position closed
	center (24 VDC)
	SY3300-5U1 (1 set)
	M9 19-7
	60×0/ <3°
	See
	, , , , , , , , , , , , , , , , , , ,
	♠
/ Manifold base (5 stations)	8°/
SS5Y3-10S3V-05D-C6	
\$\$5Y3-10\$3V-05D-C6 1 set (Type \$\$Y3100-5U1	position single part no.)
The asterisk denotes the syr	mhol for assembly
Prefix it to the part numbers	
<ul> <li>The valve arrangement is numbered a</li> </ul>	as the 1st station from the D side.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 194. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 232 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



## Connector Connecting Base Series SY3000/5000/7000

EX600

VM

XT34

A, B port size (Metric/One-touch fitting)

	., _ p		Type	In/Side	norted	Type 11/Bo	ttom norted	1						
Symbol						-		_						
				513000	5 1 5000	517000	SY5000	517000						
C2			ø2	•	_	_	_	_						
C3			ø3.2	•	_	_	_	_						
C4	_		ø4	•	•	_	•	_						
C6	ight		ø6	•	•	•	•	•						
C8	Straight		ø8	_	•	•	•	•	2010					
C10	0,		ø10	_	_	•	_	•	(00 )					
C12			ø12	_	_	•	_	•	4					
CM*		Straig	ht port, mixed sizes	•	•	•	•	•						
L4			ø4	•	•	_	_	_	<b>D</b>					
L6		٦	ø6	•	•	•	_	_						
L8		Upward	ø8	_	•	•	_	_						
L10			ø10	_	_	•	_	_						
L12	6	(ә	6	6	6	6		ø12	_	_	•	_	_	S Jaione
B4	Not	Elbow Note)	ø4	•	•	_	_	_						
В6	νoc		ad	ad g	ar So	ø6	•	•	•	_	_			
B8	⊞	Š	ø8	_	•	•	_	_						
B10		Downward	ø10	_	_	•	_	_						
B12		اتا	ø12	_	_	•	_	_						
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	•	_	_						
P, E port size (One-touch fittings)				ø8	ø10	ø12	ø10	ø12						

Symbol	A D nort		A, B port							
Symbol	A, b port			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•			
N7	igh		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	0 1993E	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7	lbow Note)	Upward	ø1/4"	•	•	_	_	_		
LN9			횩	ø5/16"	_	•	_	_	_	
LN11		Ľ	ø3/8"	_	_	•	_	_	J. Branch	
BN3		5	ø5/32"	•	_	_	_	_		
BN7		ownward	ø1/4"	•	•	_	_	_		
BN9		Š	ø5/16"	_	•	_	_	_		

ø3/8" ø1/2" ø3/81 a1/2"

a5/16

A, B port size (Inch/One-touch fitting)

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242).

BN11

LM

ø3/8"

(Including upward and downward piping) P, E port size

(One-touch fittings)

\* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

\* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**SMC** 

#### 8 Mounting and Option

Symbol	Mounting	Option	
Syllibol	wounting	Name plate Station number	
Nil	Direct mounting	_	_
AA		•	•
BA		•	_
D□	DIN rail mounting	_	_
A□		•	•
ВП		•	_

Note 1) Enter the number of stations inside  $\square$ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.


#### DIN Rail Ontion

DIN Hall Option		
Nil	Direct mounting	
0	Without DIN rail (with bracket)	
3	For 3 stations	Specify a longer rail
		than the total length
16	For 16 stations	of specified stations.

<sup>\*</sup> When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 239 for part numbers of DIN rail.)

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

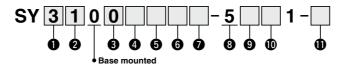

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2	2-position	Double	
3	3 4 3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *		N.C./N.C.	
B*	4-position dual 3-port	N.O./N.O.	
C*	duai 3-port	N.C./N.O.	

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

U FIII	or type
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

(Zuite iii tuite type)		int in tuite type/
	Nil	None
	Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

o i not vaive option		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \* Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R U	_		Non-polar
S	_	•	Positive
Z NS	_		Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit specification is positive common. Select a valve from R, U, NS or NZ when the SI unit specification is ZBN (negative common).
- \* Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

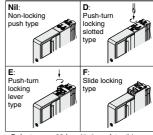

\* Refer to page 28 for with the safety slide locking manual override.

#### Type of mounting screw

Nil Round head combination sci		Round head combination screw
	В	Hexagon socket head cap screw
		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve

## Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000

Plug-in Connector Connecting Base

Type 10/Side Ported

Directional Control Valves

SY


EX600

VM

**XT34** 

EX120

C2 -C3, N1 C4, N3 C6, N7 SS5Y3-10S3 - Stations B

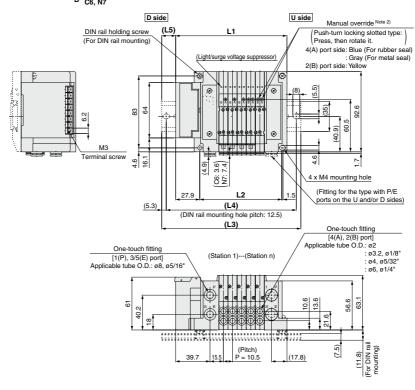

Note 1) These figures show the "SS5Y3-10S3V-05D-C6".

Note 2) Refer to page 195 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 200 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5
			•						•			•			




Dimensions: Series SY5000

Plug-in Connector Connecting Base Type 10/Side Ported

(For DIN rail mounting)

(20.5)

SS5Y5-10S3 - Stations D - C6, N3 (D)

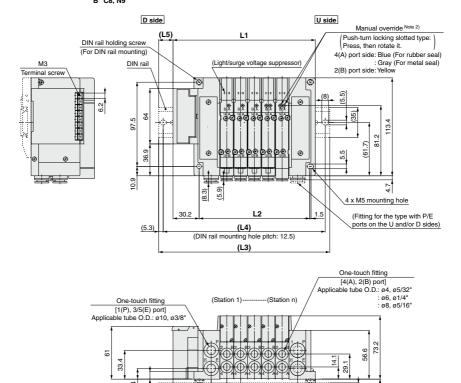

Note 1) These figures show the "SS5Y5-10S3V-05D-C8".

Note 2) Refer to page 196 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

(Pitch)

P = 16

Note 3) Refer to page 201 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16



## Eligen Connector Connecting Base Series SY3000/5000/7000

Plug-in Connector Connecting Base Dimensions: Series SY7000

Type 10/Side Ported

Directional Control Valves


SY


EX600

VM

**XT34** 

SS5Y7-10S3 - Stations

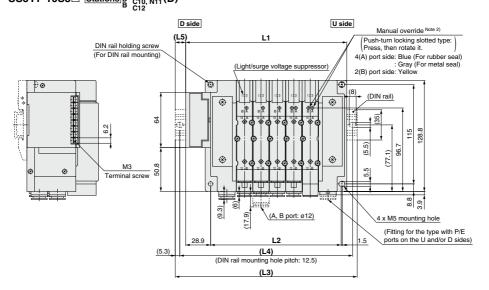

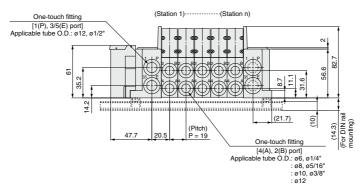

Note 1) These figures show the "SS5Y7-10S3V-05D-C10".

Note 2) Refer to page 197 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 202 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14

INDEX



192

## **Plug-in** Connector Connecting Base

EX120


Type 12
Top Ported

# Series SY3000/5000/7000

**( (** RoHS

#### **How to Order Manifold**

Refer to pages 200 to 202 for dimensions of Type 12/Top ported type.

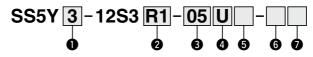

## Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI unit

0	Without SI unit							
Q	DeviceNet™ (Posi	DeviceNet™ (Positive common NPN)						
R1	OMRON CompoBus/S							
R2	(Positive common NPN)	8 outputs						
V		e common NPN)						
ZB Note 2)		Positive common NPN						
ZBN Note 2)	Componer	Negative common PNP						

Note 1) Ensure a match with the common specification of the valve to be used. Note 2) The communication connector (for the

Note 2) The communication connector (for the opposite side) is not provided. Please order it separately.

#### Valve stations

Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring Note 1)					
08	8 stations	_					
02	2 stations	O					
:	:	Specified layout Note 2) (Available up to 16 solenoids)					
16	16 stations	(Available up to 16 soleholds)					

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### 4 P, E port entry

• I, E port only									
U Note)	U side (2 to 10 stations)								
D Note)	D side (2 to 10 stations)								
В	Both sides (2 to 16 stations)								


Note) S For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

### **How to Order Manifold Assembly**

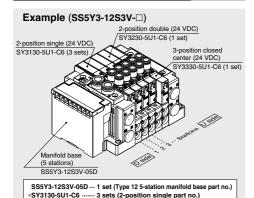

\*SY3230-5U1-C6 ······· 1 set (2-position double part no.)

\*SY3330-5U1-C6 ······ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly.


Prefix it to the part numbers of the valve etc.

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

\* For N, sizes are in inches.

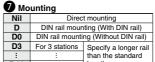

D16 For 16 stations length.

Note 1) When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to age 239 for the DIN rail part number.)


Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 232 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

SY EX600

VM

**XT34** 

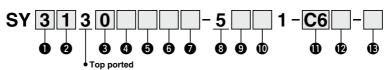

#### A Sarias

• ••	
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Opposition	Single				
2-position	Double				
	Closed center				
3-position	Exhaust center				
	Pressure center				
4 position	N.C./N.C.				
	N.O./N.O.				
duai 3-port	N.C./N.O.				
	2-position 3-position 4-position dual 3-port				

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve

(Built-iii vaive type)	
Nil	None
н	Built-in

- \* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

Pilot valve option		
Nil Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

\* Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
* Be sur	e to select the power saving circuit type

- when the valve is continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details

#### Rated voltage


5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	-		Non-polar
U	•		rton polar
S	ı	•	Positive
Z	•	_	common
NS	1		Negative
NZ	•		common

- \* Select a valve from R, U, S or Z when the SI unit specification is positive common. Select a valve from R, U, NS or NZ when the SI unit
- specification is ZBN (negative common). Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

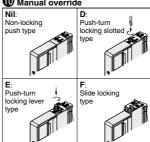

\* Refer to page 28 for with the safety slide locking manual override.

#### (II) A, B port size

#### Thread nining

11116	i ili eau pipilig		
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

#### a touch fitting (Matric)

One.	One-touch litting (wethe)			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C2 C3 C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol A, B port SY3000 SY5000 SY7000			
A, B port	SY3000	SY5000	SY7000
ø1/8"	•	_	_
ø5/32"	•	•	_
ø1/4"	•	•	•
ø5/16"	_	•	•
ø3/8"	_	_	•
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  Ø1/8"  Ø5/32"  Ø1/4"  Ø5/16"  —	A, B port SY3000 SY5000  01/8"

#### 1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

#### 13 Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the
- valve is removed for maintenance etc. \* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class


## Series SY3000/5000/7000 **Common Dimensions**


Plug-in

Type 10/Side Ported

Series SY3000 Connector Connecting Base External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y3-10□-Stations U(S, R)-L□

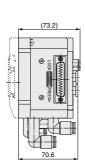


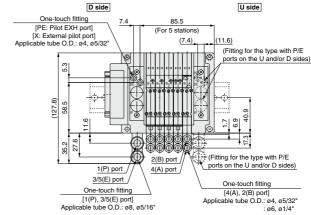


(Station 1)---(Station n)


External pilot for straight piping P, E port entry: D 85.5 (For 5 stations) 37 78.6 One-touch fitting [PE: Pilot EXH port] 82.3 [X: External pilot port] Applicable tube O.D.: ø4, ø5/32"



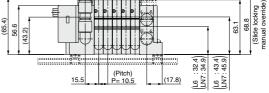



Note) These figures show the "SS5Y3-10F2-05DR-L6".

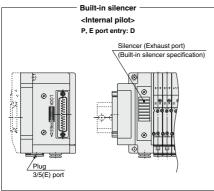

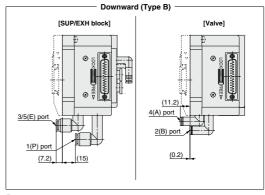

## Common Dimensions Series SY3000/5000/7000

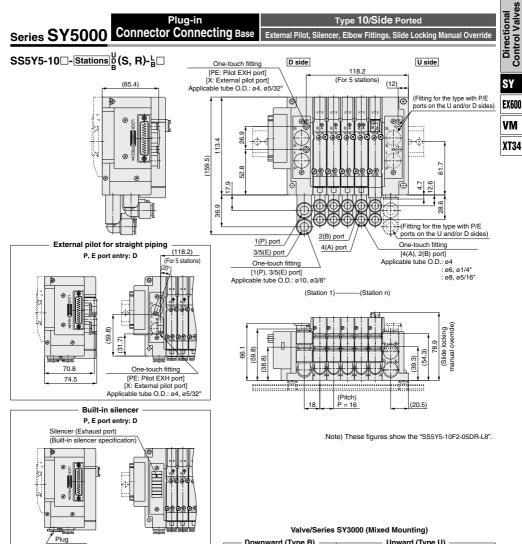

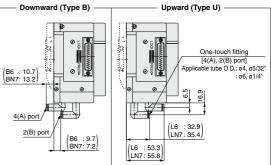

INDEX

3/5(E) port

[SUP/EXH block]

Downward (Type B)

(11.1)

[Valve]


(3.9)


Plug-in

Type 10/Side Ported


Series SY7000 Connector Connecting Base External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y7-10□-Stations US (S, R)-L□

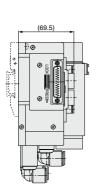

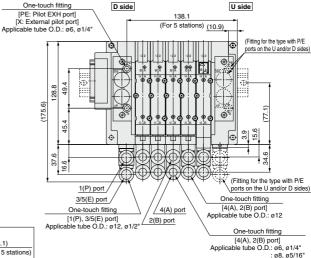



External pilot for straight piping P, E port entry: D (138.1) (For 5 stations) (74.2)(23.5)One-touch fitting 77.7 [PE: Pilot EXH port] [X: External pilot port] Applicable tube O.D.: ø6, ø1/4"

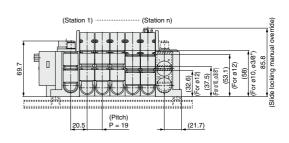


Note) These figures show the "SS5Y7-10F2-05DR-LM".

: ø10, ø3/8"

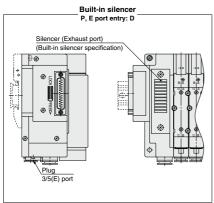

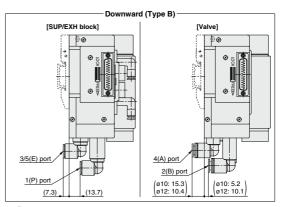

## Common Dimensions Series SY3000/5000/7000

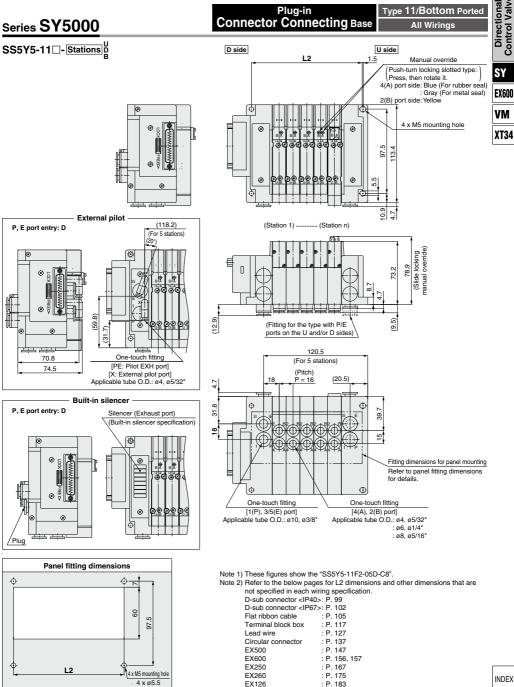

EX120


ØSMC

: P. 191

Directional Control Valves

EX600

**XT34** 

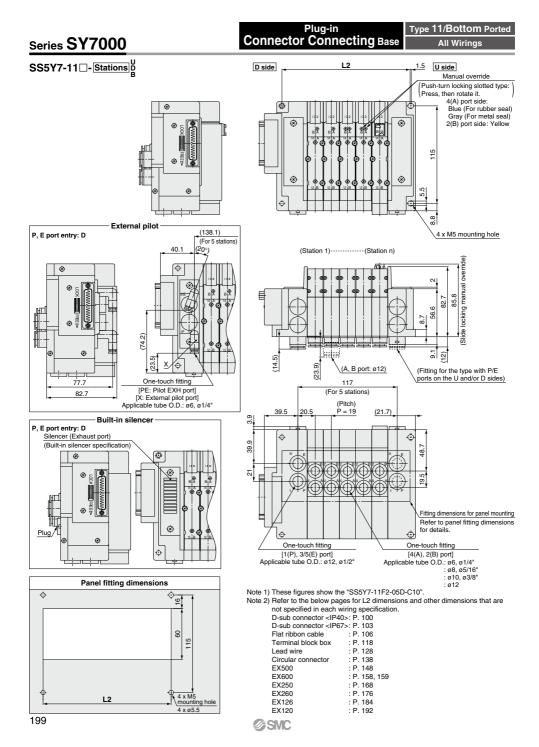

## Common Dimensions Series SY3000/5000/7000

Series SY3000

Plug-in Connector Connecting Base


Type 12/Top Ported All Wirings

SY


EX600

Directional Control Valves

VM **XT34** 

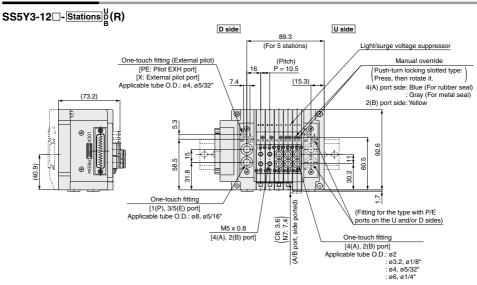

(Station 1)---(Station n)

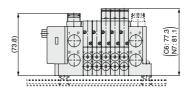

Note 1) These figures show the "SS5Y3-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 195 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 98 D-sub connector <IP67>: P. 101 Flat ribbon cable : P. 104 Terminal block box : P. 116 Lead wire : P. 126 Circular connector : P. 136 EX500 : P. 146 : P. 154, 155 FX600 EX250 : P. 166 EX260 : P. 174 : P. 182 EX126 : P. 190

FX120





Series SY5000

Plug-in Connecting Base

Type 12/Top Ported
All Wirings

SS5Y5-12 - Stations (R)

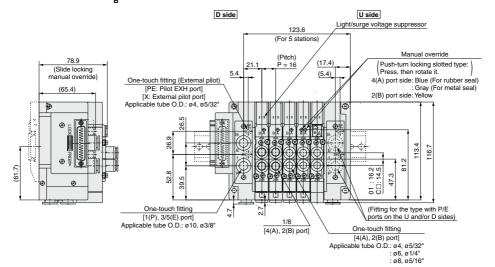

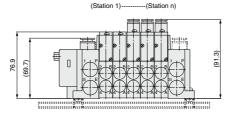

Note 1) These figures show the "SS5Y5-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 196 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 99 D-sub connector <IP67>: P. 102 Flat ribbon cable : P. 105 : P. 117 Terminal block box Lead wire : P. 127 Circular connector : P. 137 : P. 147 EX500 : P. 156, 157 EX600 : P. 167 FX250 EX260 : P. 175 EX126 : P. 183

: P. 191

EX120



## Common Dimensions Series SY3000/5000/7000

Series SY7000

Plug-in Connector Connecting Base Type 12/Top Ported
All Wirings

One-touch fitting


[4(A), 2(B) port]

Directional Control Valves


SY

EX600

XT34

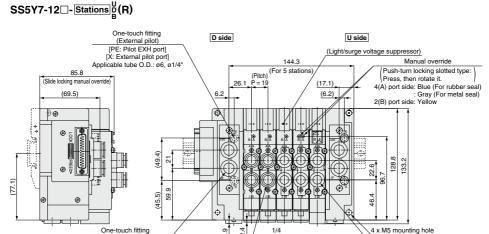

[4(A), 2(B) port]

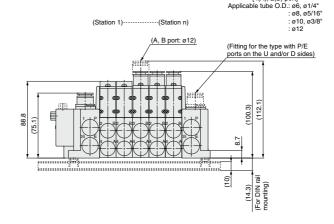

Note 1) These figures show the "SS5Y7-12F2-05D".

[1(P), 3/5(E) port]

Applicable tube O.D.: ø12, ø1/2'

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 197 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 100 D-sub connector <IP67>: P. 103 Flat ribbon cable : P. 106 Terminal block box : P. 118 Lead wire : P. 128 : P. 138 Circular connector EX500 : P. 148 : P. 158, 159 EX600 EX250 : P. 168 EX260 : P. 176 EX126 : P. 184 : P. 192 FX120



Type 10

Type 11 **Bottom Ported** 

## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

# Series **SY3000/5000**

The SY3000 can be mounted onto the SY5000 size manifold.

#### **How to Order Manifold**

Refer to page 212 for dimensions of Type 11/Bottom ported type.

SS5Y5 - M 1 Mixed Mounting Type

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

1 Type

- ,,	.v
10	Side ported
11	Bottom ported

2 Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	
PG	Flat ribbon cable	20 pins	95
PH		10 pins	
J	PC wiring	I	
G	(20 pins)	With power supply terminal	
Т	Terminal block box		113
L1		34 cores	
L2	Lead wire	17 cores	123
L3		9 cores	
M	Circular connector		133
S□		EX500	143
S6□		EX600	151
S□	Serial	EX250	163
S□	transmission	EX260	171
S4□		EX126	179
S3□		EX120	187

\* Refer to the pages shown in the table above for details.

#### With Lead wire

ead	wire	length

-cuu .	riic iongin
1	0.6 m
2	1.5 m
3	3 m

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction

1	Upward
2	Lateral

\* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission

#### Walve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:	- :	on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

#### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
D ( ) 151 ( ) 51000 10	

Refer to page 151 for the EX600 and 7 or page 163 for the EX250.

#### A SUP/FYH block assembly

30F/LATI block assembly		
Nil Internal pilot		
s	Internal pilot, Built-in silencer	
R	External pilot	

- \* 3/5(E) port is plugged for the built-in silencer
- \* Refer to page 151 for the EX600 and 7 on page 163 for the EX250.

#### Fitting type: One-touch fitting

Symbol	A, B port		
С		Stra	ight
L	Metric size	Elbow	Upward Note)
В		Elbow	Downward Note)
N		Stra	ight
LN	Inch size	Elbow	Upward Note)
BN		Elbow	Downward Note)
CM*	Mixed sizes	Stra	ight
LM*	IVIIXeu Sizes	Elbow (Including upward a	and downward piping) Note)

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242). Elbow fittings are not available for Type 11 (Bottom ported).

- \* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- \* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- \* Elbow fittings: ø2, ø3.2 and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8" and ø5/32" are not available for the SY5000 series

## Connector Connecting Base Series SY3000/5000

Directional Control Valves

SY

EX600

VM

XT34

## 8 SY5000: A, B port size

(Metric/One-touch fitting) (Inch/One-touch fitting)

Symbol	Port size	Symbol	Port size
4	ø4	3	ø5/32"
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
Nil	For all stations of SY3000	Nil	For all stations of SY3000

<sup>\*</sup> No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### 9 SY3000: A, B port size

(Metric/One-touch fitting)

ch fitting)	(Inch/Or	ne-touch fitting)
Port size	Symbol	Port size
ø2	1	ø1/8"
ø3.2	3	ø5/32"
ø4	7	ø1/4"
ø6	9	ø5/16" Note)
ø8 Note)	1	

Note) The valve pitch is the same as the SY5000.

\* No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### Mounting


Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:	:	[The SY5000 valve is now at a mountable lengt	
D24	For 24 stations	(manifold block length of 16 mm).]	
	D D0 D3	D D0	

Note 1) Only direct mounting is available for Type 11 (Bottom ported).

Note 2) Refer to page 210 to determine the L3 using "Calculation formula" for the DIN rail lenoth.

Note 3) Refer to page 261 for the fixation of DIN rail mounting type manifold.

### **How to Order Manifold Assembly**

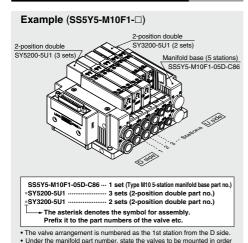

becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 216.

In this case, use caution as there is also output on the A and B port on base side.


from the 1st station as shown in the figure above. If the arrangement

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Protective class class II (Mark: (iii))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

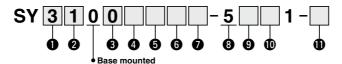

#### Series

• ••	
3	SY3000
5	SY5000

2 Type of actuation

1	2-position	Single	
2		Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *	4-position dual 3-port	N.C./N.C.	
B* C*		N.O./N.O.	
		N.C./N.O.	

\* Only rubber seal type is available for the 4-position dual 3-port valve.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

\* Only metal seal type is available for the high pressure type.


Coil type

Nil Standard		Standard	
	Т	With power saving circuit (Continuous duty type)	
* Be sure to select the power saving circuit			
	when the valve is continuously energized for		

long periods of time.

\* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

Manual override

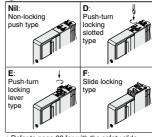

 Refer to page 28 for with the safety slide locking manual override.

#### 3 Seal type

0	Rubber seal	
1	Metal seal	

Pilot type

ı	Nil	Internal pilot	
	R	External pilot	
1			

## Back pressure check valve (Built-in valve type)

	Nil	None	
H Built-in		Built-in	
	* Only ri	ibber seal type. Manifold installed type	

- is available if back pressure check valve is required for the valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type.

8 Rated voltage

5	24 VDC	
6	12 VDC	
0 1 041/00: "11 4 "		

 Only 24 VDC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	1		Non-polar	
U	•	•		
S	_		Positive	
Z	•		common	
NS	I		Negative	
NZ	•		common	

\*"Nil" is not available for the SI unit manifold.

Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

EX500: P. 145 EX600: P. 153 EX250: P. 165 EX260: P. 173 EX126: P. 181 EX120: P. 189 Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K Round head combination screw (Falling-out-prevent)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

XT34



Type 10

**Type 11 Bottom Ported**  Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

# Series **SY5000/7000**

The SY5000 can be mounted onto the SY7000 size manifold.

#### **How to Order Manifold**

Refer to page 213 for dimensions of Type 11/Bottom ported type.

**SS5Y7 - M** Mixed Mounting Type

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

1 Type

<b>U</b> . y	pc
10	Side ported
11	Bottom ported

2 Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	
PG	Flat ribbon cable	20 pins	95
PH		10 pins	
J	PC wiring	I	
G	(20 pins)	With power supply terminal	
Т	Terminal blo	ck box	113
L1		34 cores	
L2	Lead wire	17 cores	123
L3		9 cores	
M	Circular cor	nector	133
S□		EX500	143
S6□		EX600	151
S□	Serial	EX250	163
S□	transmission	EX260	171
S4□		EX126	179
S3□		EX120	187

\* Refer to the pages shown in the table above for details.

#### With Lead wire

Lead	wire	lena	th

1	0.6 m	
2	1.5 m	
3	3 m	

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction

1	Upward
2	Lateral
2	Lateral

\* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission

#### 4 Valve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:	:	on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

#### A P. E port entry

	<u> </u>		
U	U side (2 to 10 stations)		
D	D side (2 to 10 stations)		
В	Both sides (2 to 24 stations)		

\* Refer to page 151 for the EX600 and 7 on page 163 for the EX250.

#### 6 SUP/EXH block assembly

• ••• /=/:: =:•• : =:•		
Nil	Internal pilot	
s	Internal pilot, Built-in silencer	
R	External pilot	

- \* 3/5(E) port is plugged for the built-in silencer
- \* Refer to page 151 for the EX600 and 7 on page 163 for the EX250.

#### 7 Fitting type: One-touch fitting

Symbol	A, B port		
C		Stra	ight
L	Metric size		Upward Note)
В		Elbow	Downward Note)
N	Inch size	Stra	ight
LN		Elbow	Upward Note)
BN		Elbow	Downward Note)
CM*	Mixed sizes	Stra	ight
LM*		Elbow (Including upward a	and downward piping) Note)

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 240 to 242). Elbow fittings are not available for Type 11 (Bottom ported).

- \* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- \* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- \* Elbow fittings: ø1/4" and ø5/16" are not available.

## Connector Connecting Base Series SY5000/7000

Directional Control Valves

SV.

EX600

VM XT34

8 SY7000: A, B port size

(Metric/One-touch fitting)		
Symbol	Port size	
6	ø6	
8	ø8	
10	ø10	
12	ø12	
Nil	For all stations of SY5000	

(Inch/One-touch fitting)

	Symbol	Port size
	7	ø1/4"
	9	ø5/16"
Ī	11	ø3/8"
Ī	Nil	For all stations of SY500
П		

\* No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### 9 SY5000: A, B port size

Port size

ø6

ø8

ø10

ø12

(Metric/One-touch fitting)

Symbol

6

8

10

12

(inch/One-touch fitting)		
Symbol	Port size	
7	ø1/4"	
9	ø5/16"	
11	ø3/8"	

Note) The valve pitch is 19 mm, the same as the SY7000.

\* No symbol needs to be specified when fitting type "CM", "LM" is

#### Mounting and Option

DIN Rail Option

ber	Nil	Direct mounting		
Without DIN rail (without DIN rail)				
$\neg$	3	For 3 stations	Specify a longer rail	
$\neg$	:	:	than the total length	
$\neg$	24	For 24 stations	of specified stations.	
$\neg$				
_				

Note 1) Enter the number of stations inside  $\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 210 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)

Note 4) The manifold block width is 19 mm for both the SY5000 and SY7000 sizes.

Note 5) Refer to page 261 for the fixation of DIN rail mounting type

### **How to Order Manifold Assembly**

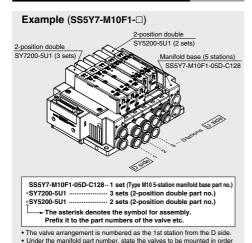

becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 216.

In this case, use caution as there is also output on the A and B port on base side.


from the 1st station as shown in the figure above. If the arrangement

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Protective class class II (Mark: (iii))

#### How to Order Valves (With mounting screw)

Refer to page 17 for valve specifications.

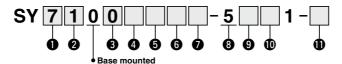

#### Series

•	301100	
5	SY5000	
7	SY7000	

Type of actuation

1	O monition	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *	4-position dual 3-port	N.C./N.C.
B* C*		N.O./N.O.
C*		N.C./N.O.

\* Only rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K*	High pressure type (1.0 MPa)			

\* Only metal seal type is available for the high pressure type.


#### Coil type

Nil   Standard				
	Т	With power saving circuit (Continuous duty type)		
* Be sure to select the power saving circuit				
when the valve is continuously energized				

long periods of time.

\* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Manual override

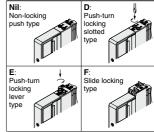

 Refer to page 28 for with the safety slide locking manual override.

#### Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot		
R	External pilot		

## Back pressure check valve (Built-in valve type)

	Nil None					
Н		Built-in				
	* Only ru	ubber seal type. Manifold installed type				

- is available if back pressure check valve is required for the valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

 Only 24 VDC is available for the serial transmission type.

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil	1	_	Non-polar		
R	Ī				
U	•				
S	1	•	Positive		
Z	•	_	common		
NS	ĺ		Negative		
NZ	•		common		

\*"Nil" is not available for the SI unit manifold.

Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

EX500: P. 145 EX600: P. 153 EX250: P. 165 EX260: P. 173 EX126: P. 181 EX120: P. 189

#### Type of mounting screw

Nil Round head combination screv			
В	Hexagon socket head cap screw		
K	Round head combination screw (Falling-out-prevention type)		
Н	Hexagon socket head cap screw (Falling-out-prevention type)		

- For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.


## Plusin Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY3000/5000

Plug-in Connector Connecting Base Type 10/Side Ported Mixed Mounting Type Directional Control Valves

EX600

VM **XT34** 

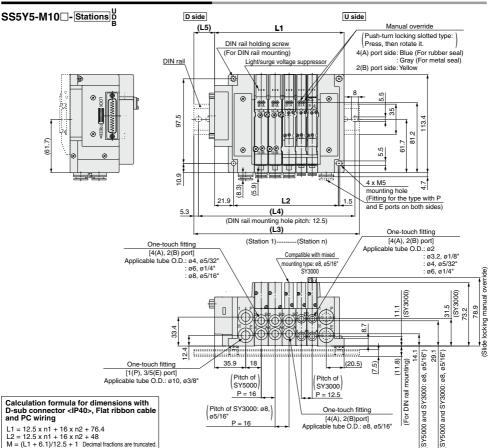

Calculation formula for dimensions with D-sub connector <IP40>. Flat ribbon cable and PC wiring

L1 = 12.5 x n1 + 16 x n2 + 76.4 L2 = 12.5 x n1 + 16 x n2 + 48

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated  $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5 L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø8, Ø5/16")

Calculation formula for dimensions with D-sub connector <P67>, Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ L2 = 12.5 x n1 + 16 x n2 x 48 M = L1/12.5 + 1 Decimal fractions are truncated.  $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16") n3: Number of I/O units or input block stations

Note) Refer to pages 156 to 157 for dimensions of the EX600 serial transmission with I/O unit and page 167 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

Note) Refer to pages 195 and 196 for dimensions of external pilot, built-in silencer and elbow fittings.

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7		_




Dimensions: Series SY5000/7000

Plug-in Connector Connecting Base Mixed Mounting Type

Type 10/Side Ported

SS5Y7-M10 - Stations D

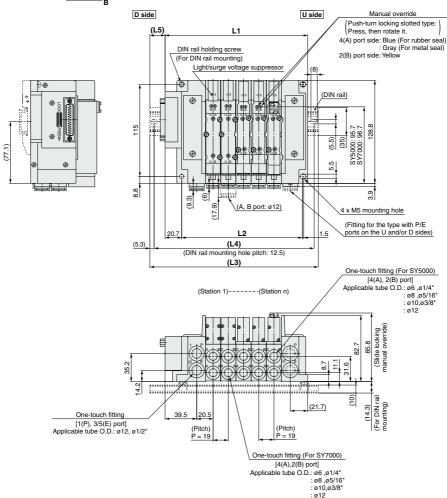

Note 1) Refer to page 197 for dimensions of external pilots and built-in silencers.

Note 2) Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 100 D-sub connector <IP67>: P. 103 Flat ribbon cable : P. 106 Terminal block box : P. 118 : P. 128 Lead wire : P. 138 : P. 148 Circular connector EX500 EX600 : P. 158, 159 EX250 : P. 168 EX260 : P. 176 : P. 184 EX126 : P. 192 EX120


## Plus-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Type 11/Bottom Ported Connector Connecting Base Dimensions: Series SY3000/5000

Directional Control Valves Mixed Mounting Type

EX600 VM

**XT34** 

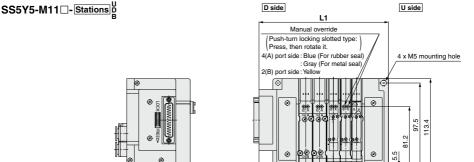

21.9

Compatible with mixed

P=16

಼

ø6, ø1/4'

35.9 18

Panel fitting dimensions 0 8 97 12 4 x M5 mounting hole 4 x a 5 5

mounting type: ø8, ø5/16 SY3000 (Slide locking manual override) 78.9 73.2 SY5000) (Fitting for the type with P and E ports on both sides) Γ. (Pitch of SY3000: ø8, ø5/16") P=16 (Pitch of SY5000) (Pitch of SY3000)

(Station 1)---

Calculation formula for dimensions  $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ L2 = 12.5 x n1 + 16 x n2 + 48  $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16")

n3: Number of I/O units or input block stations

Note) Refer to pages 156 and 157 for dimensions of the EX600 serial transmission with I/O unit and page 167 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

Serial transmission: EX120

8 8 Fitting dimensions for panel mounting Refer to panel fitting dimensions One-touch fitting [1(P), 3/5(E) port] Applicable tube O.D.: ø10, ø3/8 One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø4, ø5/32"

ω

ø8, ø5/16" Coefficient b С D-sub connector <IP40>, Flat ribbon cable or PC wiring 76.4 D-sub connector <IP67> 90.5 Terminal block box or Serial transmission: EX126 149.3 Lead wire or Circular connector 97 88.5 Serial transmission: EX500 Serial transmission: EX600 (M12 connector) 141.5 47 81.5 Serial transmission: EX600 (7/8 inch connector) 158 47 81.5 141.5 Serial transmission: EX250 21 81.5 88.7 Serial transmission: FX260

Note) Refer to page 198 for dimensions of external pilots and built-in silencers

1.5

P=12.5

Œ

(20.5)and

39

5

One-touch fitting

[4(A), 2(B) port]

Applicable tube O.D.: ø8, ø5/16"

SY5000

SY5000 and SY3000: ø8, ø5/16"

08.05/16" SY3000)

49.6

(SY3000)

: ø3.2, ø1/8"

: ø4, ø5/32'

: ø6, ø1/4"

One-touch fitting

[4(A), 2(B) port]

Applicable tube O.D.: ø2

--- (Station n)

INDEX



84.7


Dimensions: Series SY5000/7000


Plug-in Connector Connecting Base


Type 11/Bottom Ported Mixed Mounting Type


SS5Y7-M11 - Stations D



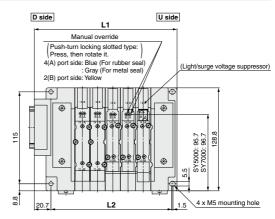

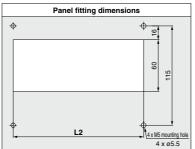

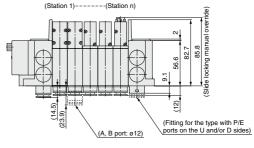

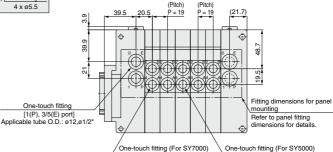

Note 1) Refer to page 199 for dimensions of external pilots and built-in silencers. Note 2) Refer to the below pages for L1, L2 dimensions and other dimensions

that are not specified in each wiring specification. Dimensions of Type 11/Bottom ported: P. 199 D-sub connector <IP40> : P. 100 : P. 103 D-sub connector <IP67> : P. 106 Flat ribbon cable : P. 118 Terminal block box Lead wire : P. 128 : P. 138 Circular connector EX500 : P. 148 FX600 : P. 158, 159 EX250 : P. 168 EX260 : P. 176 EX126 : P. 184 : P. 192 EX120

[4(A), 2(B) port] [4(A), 2(B) port] Applicable tube O.D.: ø6 ,ø1/4" Applicable tube O.D.: ø6 ,ø1/4" : ø8 .ø5/16" : ø10,ø3/8"

: ø8 .ø5/16"

: ø10,ø3/8"

XT34

## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

Type 12 Top Ported


# Series **SY3000/5000/7000** ← €

For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold.

For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

#### **How to Order Manifold**

Refer to pages 201 and 202 for dimensions of Type 12/Top ported type.

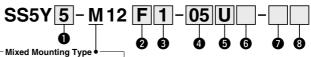

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for ø8 or ø5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series.

U Sei	ries
5	SY5000
7	SY7000

#### With Lead wire

#### Lead wire length 0.6 m 1.5 m 3 m

· With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction Upward

			_	Late	ıaı		_		J	
k	It is not	necessary	to	select	the	items	ab	ove	fo	10

the valve with terminal block box or with circular connector or the serial transmission type.

#### Connector type

Symbol	Туре	Page					
F	D-sub connector	IP40					
FW	(25 pins)	IP67					
P		26 pins					
PG	Flat ribbon cable	20 pins	107				
PH		10 pins					
J	PC wiring	_					
G	(20 pins)	With power supply terminal					
T	Terminal blo	ock box	119				
L1		34 cores					
L2	Lead wire	17 cores	129				
L3		9 cores					
M	Circular cor	nector	139				
S□		EX500	149				
S6□		EX600	161				
S□	Serial	EX250	169				
S□	transmission	EX260	177				
S4□		EX126	185				
S3□		EX120	193				
. D-f							

\* Refer to the pages shown in the table above for details.

#### 49 Valve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:	:	on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

#### P F port entry

	1
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\* Refer to page 161 for the EX600 and 6 on page 169 for the EX250. Note) For type "S", supply/exhaust block assembly with built-in silencer, choose U

### or D for P port entry. 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* Refer to page 161 for the EX600 and 6 on page 169 for the EX250.

#### P. E port size (One-touch fittings)

Symbol	SY5000	SY7000	Note
Nil	ø10	ø12	Metric size
N	ø3/8"	ø1/2"	Inch size


#### Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length. [For the SS5Y5-M12, the SY5000	
:	:	length. [For the SS5Y5-M12, the SY5000 valve is now at a mountable length	
D24	For 24 stations	(manifold block length of 16 mm).]	

Note 1) Refer to page 217 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)

Note 2) Refer to page 261 for the fixation of DIN rail mounting type manifold.

### How to Order Manifold Assembly

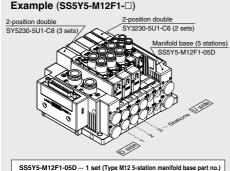

\*SY5230-5U1-C8 ...... 3 sets (2-position double part no.) SY3230-5U1-C6 ...... 2 sets (2-position double part no.)


The asterisk denotes the symbol for assembly Prefix it to the part numbers of the valve etc.

. The valve arrangement is numbered as the 1st station from the D side. Under the manifold part number, state the valves to be mounted in order. from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

SY EX600

VM

**XT34** 

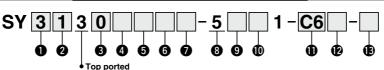

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
<u>4</u> 5		Exhaust center
		Pressure center
<b>A</b> *	4-position dual 3-port	N.C./N.C.
B* C*		N.O./N.O.
		N.C./N.O.

 Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

• 1 1101 type	
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

(Built-in valve type)	
Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 246 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Pilot valve ontion

Pilot valve option		
Nil Standard (0.7 MPa)		
B Quick response type (0.7 MPa		
K* High pressure type (1.0 MPa		

 Only metal seal type is available for the high pressure type.

#### Coil type

• • • • • • • • • • • • • • • • • • • •	
Nil	Standard
Т	With power saving circuit (Continuous duty type)
* Be sure to select the power saving circuit type	

long periods of time.

\* Be careful of the energizing time when the power saving circuit is selected. Refer to page 258 for details.

#### Rated voltage

<u> </u>		
5	24 VDC	
6	12 VDC	
* Only 24 VDC is available for the social		

 Only 24 VDC is available for the serial transmission type.


## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•	•		
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

\*"Nii" is not available for the SI unit manifold. Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details. EX500: P. 150 EX600: P. 162 EX250: P. 170

EX500: P. 150 EX600: P. 162 EX250: P. 170 EX260: P. 178 EX126: P. 186 EX120: P. 194

#### Manual override

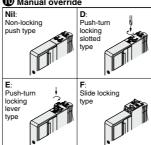

\* Refer to page 28 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-touch fitting (inch)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Till cad type	
Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

#### (B) Type of mounting screw

	Type of illourning screw		
		Round head combination screw	
		Hexagon socket head cap screw	
	K	Round head combination screw (Falling-out-prevention type)	
	Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \* For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 234 for part numbers of the base gasket and mounting screw.

\* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.


↑ Protective class class II (Mark: ♠)




Dimensions: Series SY5000

#### Plug-in Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported

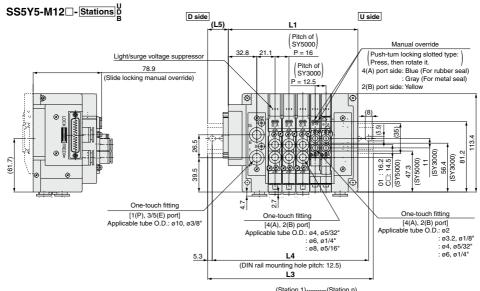

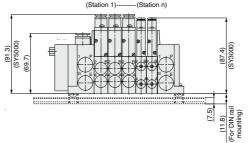

Note) Refer to page 196 for dimensions of external pilot and elbow fittings.

#### Calculation formula for dimensions with D-sub connector <IP40>, Flat ribbon cable and PC wiring

L1 = 12.5 x n1 + 16 x n2 + 76.4 L2 = 12.5 x n1 + 16 x n2 + 48

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated. L3 = 12.5 x M + 23

L4 = L3 - 10.5L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120

serial transmission  $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

L2 = 12.5 x n1 + 16 x n2 x 48 M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

n3: Number of I/O units or input block stations

Note) Refer to pages 156 and 157 for dimensions of the EX600 serial transmission with I/O unit and page 167 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

а	b	С
90.5	_	_
149.3	_	_
97	_	_
88.5	_	_
141.5	47	81.5
158	47	81.5
141.5	21	81.5
88.7	_	_
84.7	_	_
	90.5 149.3 97 88.5 141.5 158 141.5 88.7	90.5 — 149.3 — 97 — 88.5 — 141.5 47 158 47 141.5 21 88.7 —



## Plus-in Connector Connecting Base Series SY3000/5000/7000

Dimensions: Series SY7000


Plug-in **Connector Connecting Base** 

Type 12/Top Ported Mixed Mounting Type Directional Control Valves

EX600

**XT34** 

SS5Y7-M12 - Stations D

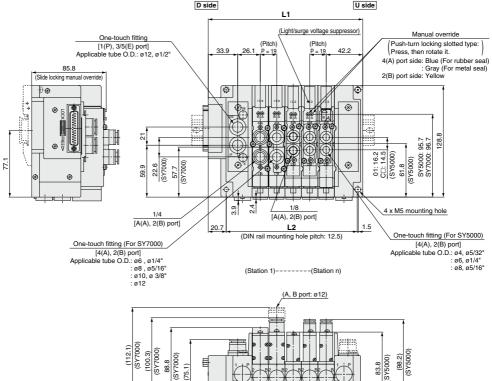

2 5 2 5

Note 1) Refer to page 197 for dimensions of external pilot and elbow fittings.

88.8 75.1)

Note 2) Refer to the below pages for L1, L2, L3, L4 dimensions and other

dimensions that are not specified in each wiring specification.

: P. 192

Dimensions of Type 12/Top ported: P. 202 : P. 100 D-sub connector <IP40> D-sub connector <IP67> : P. 103 Flat ribbon cable : P. 106 : P. 118 Terminal block box : P. 128 Lead wire : P. 138 Circular connector EX500 : P. 148 EX600 : P. 158, 159 : P. 168 EX250 : P. 176 EX260 : P. 184 EX126

EX120





SY


EX600 VM

**XT34** 


# Series SY3000/5000/7000 Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

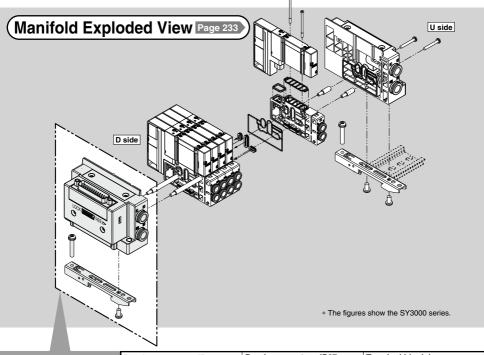

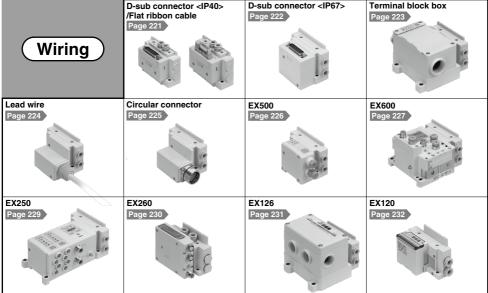

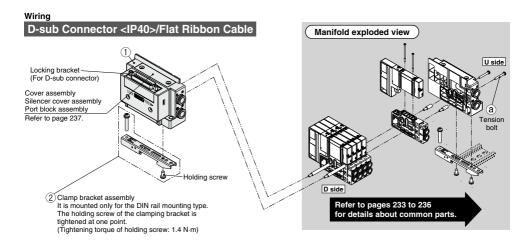

#### Manifold Parts No.

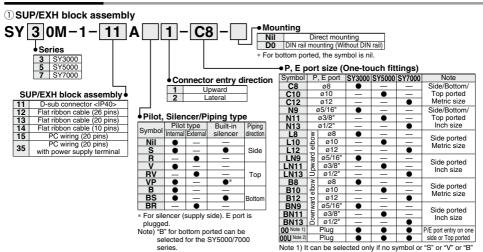

#### SUP/EXH block assembly (D side)

accessories and the number of access

accessories and the number of accessories		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

#### 2 Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	

<sup>\*</sup> Part number is for one assembly.

Note 2) "00U" is available only for the D-sub connector type and it has an inch size locking bracket.

is selected for the pilot and the piping.

Holding screw

**D-sub Connector < IP67>** 


(3) Clamp bracket assembly

tightened at two points.

It is mounted only for the DIN rail mounting type. The holding screws of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

# Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

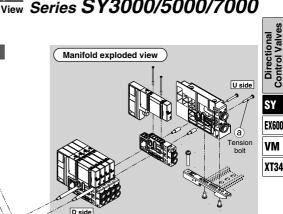

Refer to pages 233 to 236

for details about common parts.

# SY EX600 VM **XT34**


#### Manifold Parts No.

Wiring

Locking

bracket

Mounting screw (Tightening torque: 0.8 N·m)

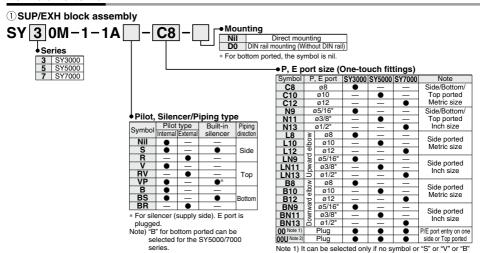

#### SUP/EXH block assembly (D side)

docessories and the number of docessories			
Accessories		SY5000 SY7000	
a Tension bolt	None Note)	3 pcs.	

Note) Since the nuts are embedded in the SUP/EXH block.

#### 2 D-sub connector block assembly < IP67>

- D Gub Goillige	or brook ao	oob.y < c	•
Part no.	Connector direction	Locking bracket	
SY30M-14-9A1	Тор	Manual and a	
SY30M-14-9A2	Side	Metric size	
SY30M-14-9A1U	Тор	Inch size	
SY30M-14-9A2U	Side	IIICII SIZE	


#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


is selected for the pilot and the piping.

Note 2) "00U" has an inch size locking bracket.

<sup>\*</sup> Part number is for one assembly.

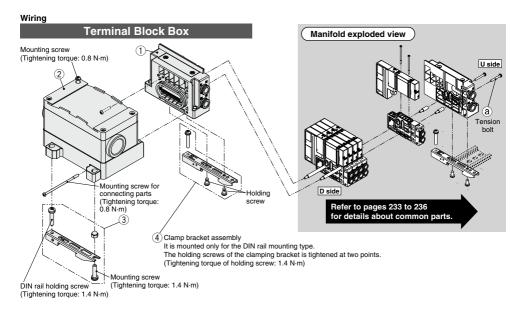

#### Manifold Parts No.

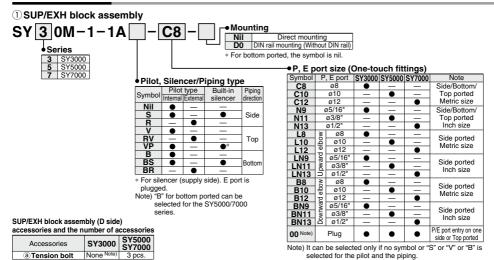

Note) Since the nuts are embedded in the SUP/EXH block.

② Terminal block box housing assembly

#### VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

#### SY30M-15-4A


\* Part number is for one assembly.

#### 4 Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.



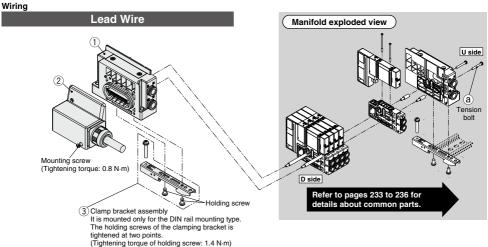

#### Manifold Parts No.

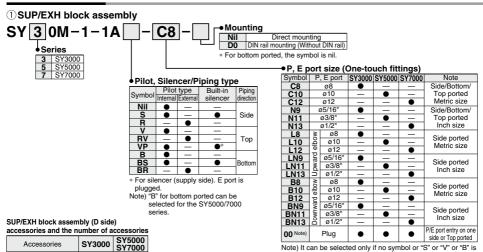

None Note) 3 pcs. a Tension bolt Note) Since the nuts are embedded in the SUP/EXH block.

② Lead wire connector block assembly SY30M-14-4A-						
Number of cores				Lea	ad wire	ength
	1	34	ı	1	0.6	
	2	17		2	1.5	
	3	9		3	3	

#### ③ Clamp bracket assembly


-	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.




(m)

selected for the pilot and the piping

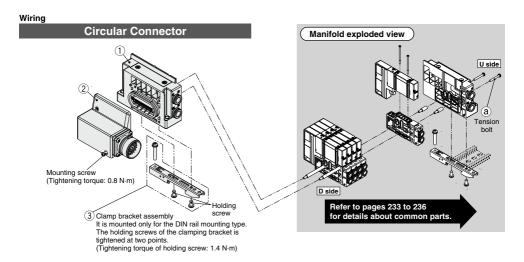

#### Manifold Parts No.

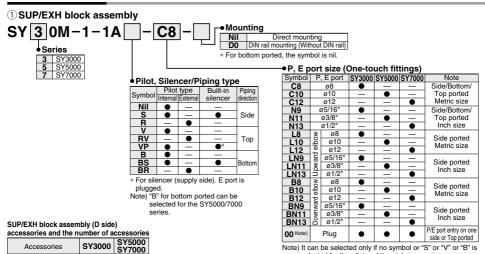

selected for the pilot and the piping.

Note) Since the nuts are embedded in the SUP/EXH block.

None Note)

3 pcs

#### 2 Circular connector block assembly

#### SY30M-14-5A

a Tension bolt

\* 26 pins


#### (3) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*</sup> Part number is for one assembly.

selected for the pilot and the piping



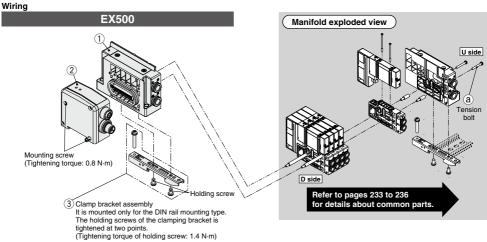

#### Manifold Parts No.

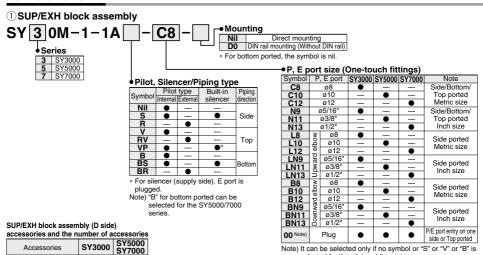

None Note) a Tension bolt 3 pcs Note) Since the nuts are embedded in the SUP/EXH block.

2 EX500 SI unit

EX500-Q 0 01

Output specifications

NPN (Positive common)


PNP (Negative common)

\* Compatible with DeviceNet™, PROFIBUS DP, EtherNet/IP™


#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.

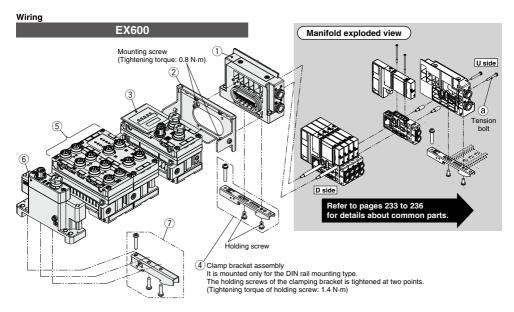

#### Manifold Parts No.

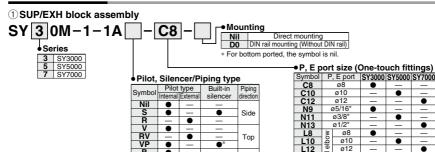

Note) "B" for bottom ported can be selected for the SY5000/7000 series. SUP/EXH block assembly (D side)

В

BS

accessories and the number of accessories		
	SY3000	
a Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

#### ③ EX600 SI unit

# EX600-S PR 1

For silencer (supply side). E port is plugged.

(2 pcs. of M4 x 6 a		8)	
(2 poo. o. m · x o c	a 2 poo: 0: 1110 x	Symbol	
		PR	PI
_		DN	
4) Clamp brace	cket assemb	ly MJ	
Series	Part no.	EN	Ethe
Selles	raitiio.	=0	l =

SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	
* Part number is for one assembly		

2 Valve plate

EX600-ZMV2 \* With mounting screws

313000//000	5150IVI-15-1A	Note) Cannot be commun
Part number is for	one assembly.	with the EX600-HT1

<b>1000</b>	_3		•		
				Т.,	

Bottom

	FIOLOCOI	
Symbol	Description	
PR	PROFIBUS DP	
DN	DeviceNet™	
MJ	CC-Link	
EN	EtherNet/IP™ Note)	
EC	EtherCAT Note)	
PN	PROFINET Note)	

vote)	Canno	t be com	imunicated
	with the	e EX600	-HT1-□.

	Version
- 6	O

Symbol	Description		
Nil	When MJ, EN, EC or PN is selected		
Α	When PR or DN is selected		

ø5/16

ø3/8"

ø1/2'

ø8

ø10

ø12

ø5/16

ø3/8

ø1/2

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping

B8

**B10** 

00 Note)

B12 BN9 BN11 BN13

Note

Side/Bottom/

Top ported

Metric size

Side/Bottom/

Top ported

Inch size

Side ported

Metric size

Side ported

Inch size

Side ported

Metric size

Side ported

Inch size

P/E port entry on one

side or Top ported

Output type

Symbol	Description
1	PNP (Negative common)
2	NPN (Positive common)



SY

EX600

VM **XT34** 

#### Manifold Parts No.

5 EX600 digital input unit

# EX600-DXPB

Input type PNF

Number of inputs, open circuit detection, and connector

Symbol	Number of inputs	Open circuit detection	Connector
В	8	No	M12 connector (5 pins) 4 pcs.
С	8	No	M8 connector (3 pins) 8 pcs.
C1	8	Yes	M8 connector (3 pins) 8 pcs.
D	16	No	M12 connector (5 pins) 8 pcs.
E	16		D-sub connector (25 pins) Note 1) 2)
F	16	No	Spring type terminal block (32 pins) Note 1) 2)



5 EX600 digital output unit

# EX600-DY P

Output type Symbol Description

Number of outputs and connector

Training or outpute and comments.		
Symbol	Number of outputs	Connector
В	8	M12 connector (5 pins) 4 pcs.
E	16	D-sub connector (25 pins) Note 1) 2)
F	16	Spring type terminal block (32 pins) Note 1) 2)



5 EX600 digital input/output unit


PNP NPN



Inpu	t/Out	put type		
	Symbol	Description	n	

n	Symbol Number of inputs 1			Connector
	E	8		D-sub connector (25 pins) Note 1) 2)
	F	8	8	Spring type terminal block (32 pins) Note 1) 2)

NPN 5 EX600 analog input/output unit

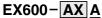

Analog input/output			
	Symbol	Description	
	AX	Analog input	
	AY	Analog output	

Number	of innut	channela	and aa	nnootor

Symbol	Number of input channels								
Α	2 channels	M12 connector (5 pins) 2 pcs.*							

\* Refer to Notes 1) and 2) below for AY.



5 EX600 analog input/output unit

#### EX600-AMB

Analog input/output

· ituii	- italiber of inputoutput charmers and connector									
Symbol	Number of input channels	Number of output channels	Connector							
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs. Note 1) 2)							


6 EX600 end plate



	Wei confidential
Symbol	Connector
2	M12 (5 pins)
3	7/8 inch (5 pins)

Ŷ	M	o	u	n	ti	n	c

Symbol	Description
Nil	Without DIN rail mounting bracket
3	With DIN rail mounting bracket

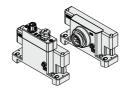

7 Clamp bracket for EX600


#### EX600-ZMA3

**Enclosed parts** 


Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

> Note 1) Cannot be communicated with the EX600-HT1-□ (Old version of the Handheld Terminal). Note 2) Cannot be connected with the EX600-SPR1, EX600-SPR2, EX600-SDN1, or EX600-SDN2.



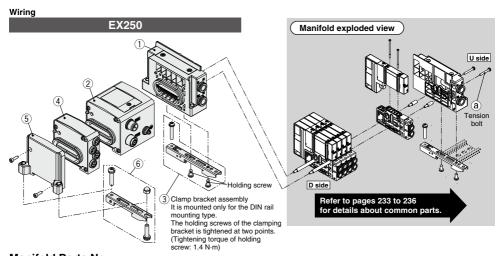

#### Manifold Parts No.

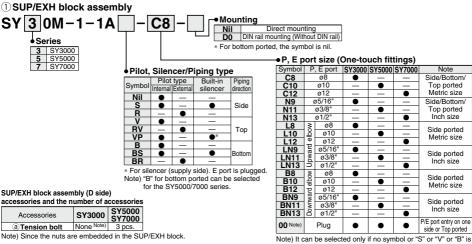

Note) Since the nuts are embedded in the SUP/EXH block.

2 EX250 SI unit

# EX250-S DN1

Communication proto


• Com	munication protocol
DN1	DeviceNet™ (Negative common)
PR1	PROFIBUS DP (Negative common)
MJ2	CC-Link (Positive common)
AS3	AS-Interface (8 in/8 out, 31 slave modes, 2 isolated common type) (Negative common)
AS5	AS-Interface (4 in/4 out, 31 slave modes, 2 isolated common type) (Negative common)
AS7	AS-Interface (8 in/8 out, 31 slave modes, 1 common type) (Negative common)
AS9	AS-Interface (4 in/4 out, 31 slave modes, 1 common type) (Negative common)
CA1A	CANopen (Negative common)
FN1	EtherNet/IP™ (Negative common)

③ Clamp bracket assembly

Series	Part no.				
SY3000	SY30M-15-1A				
SY5000/7000	SY50M-15-1A				

\* Part number is for one assembly.

(4) Input block

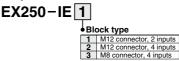

selected for the pilot and the piping.

5 EX250 end plate assembly

#### EX250-EA1

\* With mounting screws (2 pcs. of M3 x 10)


6 Clamp bracket assembly for EX250 SI unit

#### SY30M-15-3A


\* Part number is for one assembly.



Note

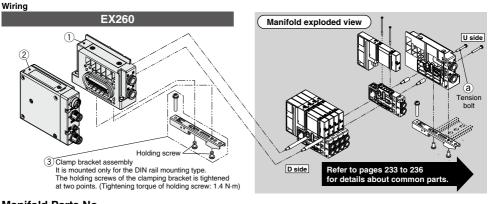

#### Manifold Parts No.

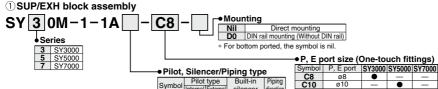

	. ,	Internai	External	siiencer	airection
	Nil	•			
	S	•		•	Side
	R	_	•		1 1
	V	•			
	RV	_	•		Top
	VP	•	_	•*	1 '
	В	•	_	_	
	BS	•	_	•	Bottom
SUP/EXH block assembly (D side)	BR	_	•	_	1
accessories and the number of accessories	o Farail			oida) E nas	i in

accessories and the

Accessories		SY5000 SY7000
a Tension bolt	None Note)	3 pcs.
0:		

Note) Since the nuts are embedded in the SUP/EXH block.

#### \* For silencer (supply side). E port is plugged.

Note) "B" for bottom ported can be selected for the SY5000/7000 series.

1	C8	ø8 ø10		•	_	_	Side/Bottom/
	C10			_	•	_	Top ported
	C12		ø12	_	_	•	Metric size
	N9	ç	ø5/16"	•	_	_	Side/Bottom/
	N11		ø3/8"	_	•	_	Top ported
	N13		ø1/2"	_	_	•	Inch size
	L8	≥	ø8	•	-	_	Side ported
	L10	elbow	ø10	-	•	_	Metric size
	L12		ø12	_	_	•	Well ic Size
	LN9	ard	ø5/16"	•	_	_	Cide newled
	LN11	ğ	ø3/8"	_	•	_	Side ported Inch size
J	LN13		ø1/2"	_	_	•	IIICII SIZE
	B8	elbow	ø8	•	_	_	Side ported
	B10	를 기류	ø10	_	•	_	Metric size
	B12		ø12	_	_	•	Well ic Size
	BN9	Downward	ø5/16"	•	_	_	Side ported
	BN11	₹	ø3/8"	_	•	_	Inch size
	BN13	8	ø1/2"	_	_	•	IIICII SIZE
	<b>00</b> Note)		Plug	•	•	•	P/E port entry on one side or Top ported

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 2 EX260 SI unit

# EX260-S PR1

#### Communication protocol

-		•					_				
Symbol	Protocol	Number of outputs	SI unit output polarity	Communication	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1		32	Source/PNP (Negative common)		QAN	EC1		32	Source/PNP (Negative common)		DAN
DN2	DeviceNet™	32	Sink/NPN (Positive common)	M12	QA	EC2	EtherCAT	32	Sink/NPN (Positive common)	M12	DA
DN3	Devicemet	16	Source/PNP (Negative common)	IVIIZ	QBN	EC3	ElilerCAT	16	Source/PNP (Negative common)	IVI I Z	DBN
DN4		16	Sink/NPN (Positive common)		QB	EC4		10	Sink/NPN (Positive common)		DB
PR1		32	Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN
PR2		32	Sink/NPN (Positive common)	M12	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	M12	FA
PR3	DESCRIPTION 10		Source/PNP (Negative common)	IVIIZ	NBN	PN3	PHOFINE	16	Source/PNP (Negative common)	IVIIZ	FBN
PR4			Sink/NPN (Positive common)		NB	PN4		10	Sink/NPN (Positive common)		FB
PR5	FNOFIBUS DF	32	Source/PNP (Negative common)		NCN	EN1		32	Source/PNP (Negative common)		EAN
PR6		32	Sink/NPN (Positive common)	D-sub Note)	NC	EN2	EtherNet/IP™	32	Sink/NPN (Positive common)	M12	EA
PR7		16	Source/PNP (Negative common)	D-Sub Noic)	NDN	EN3	Ellietive/iF	16	Source/PNP (Negative common)	IVI I Z	EBN
PR8		16	Sink/NPN (Positive common)		ND	EN4		16	Sink/NPN (Positive common)		EB
MJ1		32	Source/PNP (Negative common)		VAN						
MJ2	CC-Link	32	Sink/NPN (Positive common)	M12	VA						
MJ3	CC-LINK	16	Source/PNP (Negative common)	IVIIZ	VBN						
MJ4		10	Sink/NPN (Positive common)		VB						

Note) Enclosure is IP40 when the communication connector is D-sub.


#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*</sup> Part number is for one assembly.

INDEX

230

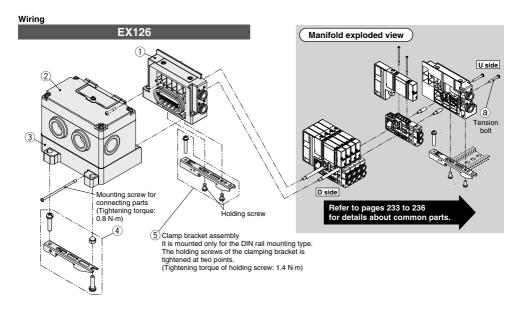

#### Manifold Parts No.

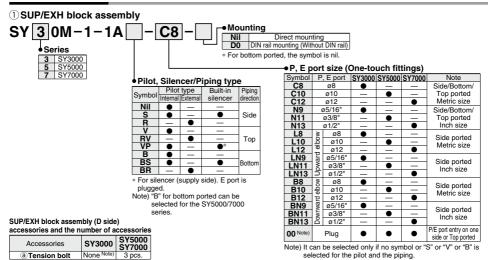

Note) Since the nuts are embedded in the SUP/EXH block.

2 EX126 SI unit

#### EX126D-SMJ1

\* CC-Link (Positive common)

3 Terminal block plate assembly

VVQC1000-74A-2

# (4) Clamp bracket assembly for EX126 SI unit

selected for the pilot and the piping.

#### SY30M-15-4A

\* Part number is for one assembly.

#### ⑤ Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\* Part number is for one assembly




selected for the pilot and the piping



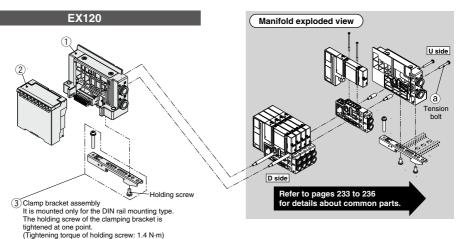

#### Manifold Parts No.

Wiring

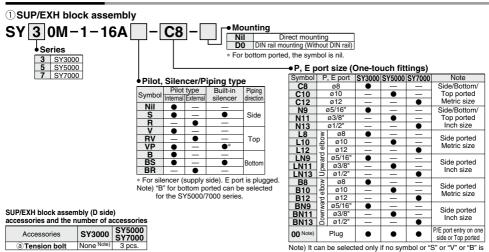

a Tension bolt Note) Since the nuts are embedded in the SUP/EXH block

#### ②EX120 SI unit

## EX120-S DN1

Communication protocol

	DeviceNet™ (Positive common)
	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
	CompoNet™ NPN (Positive common)
CM3	CompoNet™ PNP (Negative common)


#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.




# Manifold Exploded View (Common Parts)

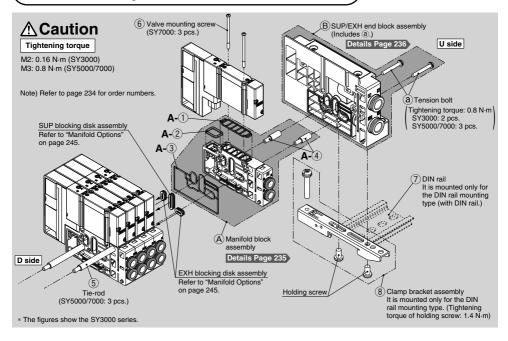

#### Type 10, 11, 12: How to Increase Connector Type Manifold

Loosen the U-side tension bolt ⓐ, and remove the ® SUP/EXH end block assembly.

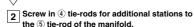

Screw them in until there is no gap between the tie-rods.

3 Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).


Tightening torque for tension bolt @ (M3): 0.8 N·m

#### 

Be sure to shut off the power and air supplies before disassembly.

Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.

When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

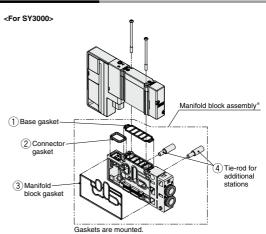

\* Manifold block assembly

No.	Description	Q'ty	Note
123	Gasket	3	For base, connector and manifold block
4	Tie-rod for additional stations	SY3000 2 pcs. SY5000 3 pcs. SY7000 3 pcs.	

Refer to page 234 for ordering single unit.



# Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

#### For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.			Description	SY3000	SY5000	SY7000	Note
<b>A</b> -①	bly	Base gasket (for connector connecting base)		SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)
<b>A</b> -2				SX3000-146-2		Supplied individually.	
<b>A-</b> 3		Manifo	ld block gasket	SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually.
	block	r ote 1)	SY3000/5000/7000	<b>SY30M-49-2-A</b> (10.5 mm pitch)	SV2000-55-2A-A	SY70M-49-2-A Note 2) (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
<b>A</b> -④	Manifold block Tie-rod for additional		For mixed mounting of SY3000/5000: A, B port size $\emptyset 8$ , $\emptyset 5/16$ "	1	(16 mm pitch)	_	3 pcs. supplied.
	Ma	Tie- add stat	For mixed mounting of SY3000/5000: except A, B port size Ø8, Ø5/16" Note 4)	1	<b>SY50M-49-2-A</b> (12.5 mm pitch)	_	3 pcs. supplied.
5	⑤ Tie-rod		SY3000/5000/7000	VVQC1000-TR-□ (10.5 mm pitch)	SV2000-55-1-□-A (16 mm pitch)	Note 2) <b>SY70M-49-1-</b> □ <b>-A</b> (19 mm pitch)	☐: Manifold stations (2 stations to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
			Mixed mounting type manifold	_	SY50M-49-1-□-A Note 3,4) (12.5 mm pitch)	(19 min piton)	□: Manifold stations (2 stations to 24 stations) 3 pcs. supplied.
(6)	Val	ve untina	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000: for 10 valves (20 pcs. included)
	scr		Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	SY7000: for 10 valves (30 pcs. included)
7	DIN	l rail		VZ1000	VZ1000-11-1-□ VZ1000-11-4-□		Refer to page 239.
8	Clamp bracket assembly (for connector connecting base)			lamp bracket assembly (for connector connecting base) SY30M-15-1A SY50M-15-1A		l-15-1A	Supplied individually.

Note 1) For the SS5Y5/7-(M)10/11/12, the manifold cannot be assembled with only the tie-rod for additional stations. Be sure to use the tie-rod ⑤.

Note 2) Order this part number when mounting with the SY5000.

Note 3) Order this part number when mounting only the SY3000 (12.5 mm pitch except A, B port size ø8, ø5/16").

Note 4) The port sizes except A, B port size Ø8, Ø5/16" are the following: Ø2, Ø3.2, Ø4, Ø6, Ø1/8", Ø5/32", Ø1/4".

INDEX


Directional Control Valves

SY EX600 VM XT34



#### Manifold Parts No.



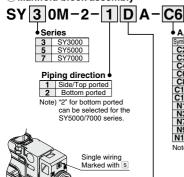

A, B port size (One-touch fittings) Symbol A. B port | SY3000 | SY5000 | SY7000 | Note | | Symbol | A. B port | SY3000 | SY5000 | SY7000 | Note

C2	ø2	•	_	_	
C3	ø3.2	•	_	_	Side/
C4	ø4	•	•	_	Bottom
C6	ø6	•	•	•	ported
C8	ø8	Note)	•	•	Metric
C10	ø10	_	_	•	size
C12	ø12	_	_	•	
N1	ø1/8"	•	_		Side/
N3	ø5/32"	•	•		Bottom
N7	ø1/4"	•	•	•	ported
N9	ø5/16"	Note)	•	•	Inch
N11	ø3/8"	_	_	•	size

Note) Refer to mixed mounting type for ø8, ø5/16


L4	П	ø4	•	•	_	Side
L6	,	ø6	•	•	•	ported
L8	δ	ø8	Note)	•	•	Metric
L10	믈	ø10	_	_	•	size
L12	5	ø12	_		•	3126
LN3	å	ø5/32"	•		_	Side
LN7	ē		•	•	_	ported
LN9	۲	ø5/16"	Note)	•	_	Inch
LN11		ø3/8"	_		•	size
B4	П	ø4	•	•	_	0:-1-
B6	ì≷	ø6	•	•	•	Side
B8		ø8	Note)	•	•	ported Metric
B10		ø10			•	size
B12	ä	ø12			•	3126
	≥	ø5/32"	•	_	_	Side
BN7	Ĭ	ø1/4"	•	•	_	ported
BN9	ă	ø5/16"	Note)			Inch
BN11		ø3/8"	_	_	•	size
00		Plug	•	•	•	Top ported
	L6 L8 L10 L12 LN3 LN7 LN9 LN11 B4 B6 B8 B10 B12 BN3 BN7 BN9 BN11	L6 L8 L10 L12 LN3 LN7 LN9 LN11 B4 B66 B8 B10 B12 BN3 BN7 BN9 BN11	1.6	1.6   0.6	1.6	1.6


(A) Manifold (All parts inside ———are included.)

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

Wiring type Single wiring

D Double wiring

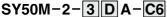

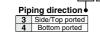

Wiring type Single wiring S Single wiring

Double wiring A. B port size (One-touch fittings)

Symbol	A, B port	Note	Symbol	1	A, B port	Note
C2	ø2	Side/Bottom	L4	//0	ø4	Side ported
C3	ø3.2	ported	L6	g e	ø6	Metric size
C4	ø4	Metric size	LN3	//arc	ø5/32"	Side ported
C6	ø6	WELLIC SIZE	LN7	ďη	ø1/4"	Inch size
N1	ø1/8"	Side/Bottom	B4	DOW	ø4	Side ported
N3	ø5/32"	ported	B6	rdel	ø6	Metric size
N7	ø1/4"	Inch size	BN3	rwa		Side ported
			BN7	ρ	ø1/4"	Inch size
			00		Plug	Top ported

block assembly 1 Base gasket (2) Connector 4 Tie-rod for gasket additional stations Gaskets are mounted (3) Manifold block gasket

A Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000 for Ø8, Ø5/16" (A manifold block assembly for mounting the SY3000 valves on the SY5000 manifolds at A, B port size: Ø8, Ø5/16")

# SY50M-2-5 D

# Piping direction 5 Side ported 6 Bottom ported Wiring type

S Single wiring
D Double wiring

A, B port		Note	
ø8		Side/Bottom ported Metric size	
ø5/16"		Side/Bottom ported Inch size	
Upward	ø8	Side ported Metric size	
elbow	ø5/16"	Side ported Inch size	
Downward	ø8	Side ported Metric size	
elbow	ø5/16"	Side ported Inch size	
	Ø Upward elbow Downward	ø5/16" Upward ø8 elbow ø5/16" Downward ø8	

Manifold block assembly accessories and

the number of accessories						
Accessories	SY3000	SY5000 SY7000 Note:				
Base gasket		oc.				
2 Connector gasket		oc.				
3 Manifold block gasket		oc.				
4 Tie-rod assembly for additional stations	2 pcs.	3 pcs.				

Note) Including mixed mounting type

A Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

SY70M-2-3 DA-C10


Piping direction 3 Side/Bottom ported 4 Bottom ported

> Wiring type S Single wiring
>
> D Double wiring

A. B port size (One-touch fittings)

,	- ri, z portoizo (ono touen intinigo)										
Symbol	A, B port	Note	Symbol .	A, B port	Note	Symbol	A, B port	Note			
C6	ø6	Side/Bottom	L6 ≥	ø6		B6	§ ø6				
C8	ø8	ported	L8 8	ø8	Side ported	B8	₩ ø8	Side ported			
C10	ø10	Metric size	L10 0	ø10	Metric size	B10	g ø10	Metric size			
C12	ø12	WIGHT SIZE	L12 8	ø12	1	<b>B12</b>	® ø12	1			
N7	ø1/4"	Side/Bottom	LN11	ø3/8"	Side ported	BN11	Ø3/8"	Side ported			
N9	ø5/16"	ported		03/6	Inch size	DIVII		Inch size			
N11	ø3/8"	Inch size				00	Plug	Top ported			

#### Manifold Parts No.

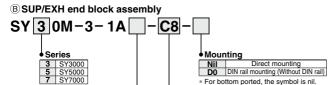

Pilot, Silencer/Piping type


Cumbal	Pilot	type	Built-in	Piping
Syllibol	Internal	type External	silencer	direction
Nil	•		_	
S	•	_	•	Side
R		•	_	
٧	•	_	_	
RV		•	_	Top
VP	•	_	•*	
В	•	_	_	
BS	•	_	•	Bottom
BR		•	_	
	-			

\* For silencer (supply side). E port is plugged. Note) "B" for bottom ported can be selected for the SY5000/7000 series.

P, E port size (One-touch fittings)

				, <b>-</b> P		(One todon manage)		
Symbol	P, E port		SY3000	SY5000	SY7000	Note		
C8		ø8			_	Side/Bottom/Top ported		
C10		ø10	_	•	_	Metric size		
C12		ø12	_	-	•	Weth C Size		
N9	Ç	5/16"	•	-	_	Side/Bottom/Top ported		
N11	ø3/8" ø1/2"			•	_	Inch size		
N13				-	•	IIICII Size		
L8	wodl	ø8	•	-	_	Side ported		
L10	q	ø10		•	_	Side ported Metric size		
L12	e	ø12	_	-	•	Weth C Size		
LN9	ar	ø5/16"	•	_	_	Side ported		
LN11	pward	ø3/8"	_	•	_	Inch size		
LN13	h	ø1/2"	_	-	•	IIICII SIZE		
B8	MΟ	ø8	•	-	_	Side ported		
B10	qle	ø10	_	•	_	Metric size		
B12	2	ø12	_	_	•	Wetric 3ize		
BN9	wa	ø5/16"			_	Sido portod		
BN11	Downward	ø3/8"	_	•	_	Side ported Inch size		
BN13	o	ø1/2"	_		•	IIIGII SIZE		
<b>00</b> Note)		Plug	•	•	•	P/E port entry on one side or Top ported		

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

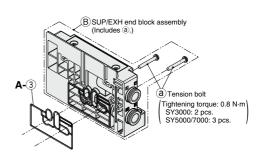


SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000/7000
(a) Tension bolt	2 pcs.	3 pcs.
A-3 Manifold block gasket	1	pc.

Gasket is mounted.

#### Manifold Parts No.



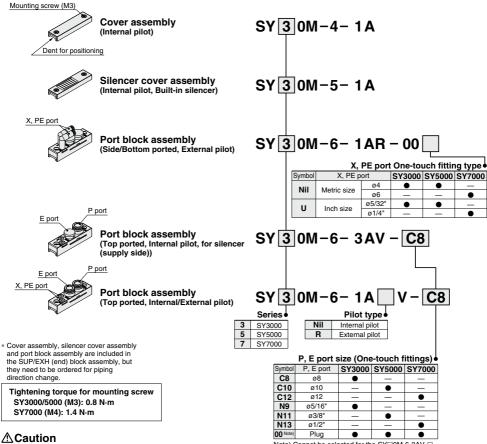

Note) Cannot be selected for the SY□0M-6-3AV-□ and SY□0M-6-1ARV-□.

1. Be sure to shut off the power and air supplies before disassembly.

Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.

2. When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

# Directional Control Valves

EX600 VM XT34

# Series SY3000/5000/7000 One-touch Fittings and Plug Assembly/Part No.

Refer to "Changing One-touch Fittings" on page 262 for replacement method.

#### ■ One-touch fittings

		Port siz	e	SY3000	SY5000	SY7000
		ø2		VVQ1000-50A-C2	_	_
		ø3.2	1	VVQ1000-50A-C3	_	_
		ø4	1	VVQ1000-50A-C4	VVQ1000-51A-C4	_
		ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
		ø8	1	_	VVQ1000-51A-C8	VVQ2000-51A-C8
		ø10	1	_	_	VVQ2000-51A-C10
	_	ø12	1	_	_	KQ2H12-17-X224
	) jže	ø4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_
	<u>i</u>	ø6	1	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6
	Metric size	ø8	Elbow type	_	SZ3000-74-1A-L8	SZ3000-83-1A-L8
	2	ø10	1 "	_	_	SZ3000-83-1A-L10
		ø12	1	_	_	KQ2L12-17N-X224
_		ø4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	_
ote1		ø6	1	SZ3000-73-2A-L6	SZ3000-74-2A-L6	SZ3000-83-2A-L6
B port Note1)		ø8	Long elbow type	_	SZ3000-74-2A-L8	SZ3000-83-2A-L8
8		ø10	1 , , ,	_	_	SZ3000-83-2A-L10
A,		ø12	1	_	_	KQ2W12-17N-X224
٩		ø1/8"		VVQ1000-50A-N1	_	_
		ø5/32"	1	VVQ1000-50A-N3	VVQ1000-51A-N3	_
		ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
		ø5/16"	1	— VVQ1000-51A-N9		VVQ2000-51A-N9
		ø3/8"	1	_	_	VVQ2000-51A-N11
	ze	ø5/32"		KJL03-95-X224	_	_
	nch size	ø1/4"	1	KJL07-95-X224	KQ2L07-14-X224	_
	힏	ø5/16"	Elbow type	_	KQ2L09-14-X224	_
	_	ø3/8"	1	_	_	KQ2L11-14-X224
		ø5/32"		KJL03-95-X225	_	_
		ø1/4"	1	KJL07-95-X225	KQ2L07-14-X225	_
		ø5/16"	Long elbow type	_	KQ2L09-14-X225	_
		ø3/8"	1	_	_	KQ2L11-14-X225
		ø8		VVQ1000-51A-C8	_	_
		ø10	Straight type	_	VVQ2000-51A-C10	_
		ø12		_	_	VVQ4000-50B-C12
	size	ø8		SZ3000-74-1A-L8	_	_
	. <u>ö</u>	ø10	Elbow type	_	SZ3000-83-1A-L10	_
	Metric size	ø12	1 ,,	_		KQ2L12-19N-X224
	≥	ø8		SZ3000-74-2A-L8	_	_
-		ø10	Long elbow type		SZ3000-83-2A-L10	_
E port		ø12	1 , ,	_	_	KQ2W12-19N-X224
ш		ø5/16"		VVQ1000-51A-N9	_	_
σ,	g,	ø3/8"	Straight type		VVQ2000-51A-N11	_
		ø1/2"	1	_		VVQ4000-50B-N13
	Ze	ø5/16"		KQ2L09-14-X224	_	_
	is r	ø3/8"	Elbow type		KQ2L11-14-X224	_
	Inch size	ø1/2"	1 "	_		KQ2L13-19N-X224
	_	ø5/16"		KQ2L09-14-X225	_	
		ø3/8"	Long elbow type		KQ2L11-14-X225	_
		ø1/2"	1 , , ,	_		KQ2W13-19N-X224
			1			A=

Note 1) A and B ports (ø8 and ø5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

Note 2) The basic order unit of the One-touch fitting part number is 1 pc. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

#### ■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

Note) The basic order unit of the plug assembly part number is 1 pc.




# Series SY3000/5000/7000 Manifold Options

■ DIN rail dimensions/weight for the SY3000 Plug-in metal base and the SY3000/5000 Plug-in connector connecting base

#### VZ1000-11-1-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

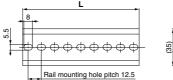


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight (g)	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight (g)	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight (g)	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight (g)	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

# ■ DIN rail dimensions/weight for the SY5000/7000 Plug-in metal base and the SY7000 Plug-in connector connecting base

#### VZ1000-11-4-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

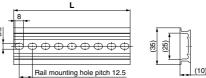

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight (g)	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight (g)	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight (g)	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension				0.40							005.5	040	000 5	070	005.5				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				



EX600

VM

**XT34** 

#### **Manifold Options**

\* Refer to pages 250, 252, 254 for dimensions.

How to Order Blanking Plate Assembly

ning torque for mounting screv M2: 0.16 N·m (SY3000)


M3: 0.8 N-m (SY5000/7000)


#### ■ Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]

Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting Mounting screws from sliding



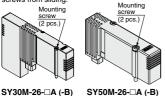

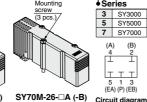

SY|3|0M-26-|1|A Series 3 SY3000 SY5000 7 SY7000 (B)


> 5 1 3

Option for mounting With mounting screw (Round head combination screw) With mounting screw (Hexagon socket head cap screw) Base type 1 For plug-in connector connecting base 2 For plug-in metal base

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures. Note) When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

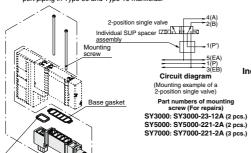


#### ■ Individual EXH spacer assembly

Connector gasket


Connector gasket

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)1

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust. Note) When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B

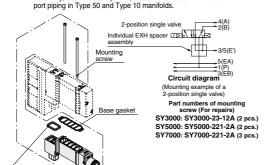

#### How to Order Individual SUP/EXH Spacer Assembly

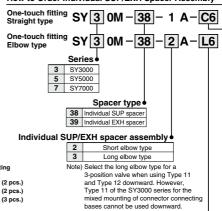

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•
LN7	ø1/4" ø5/16"	• • - -	- • •	_  _

#### Port size (Metric/One-touch fittings

	1 Off 3126 (Metho/Offe-toden fittings)									
Symbol	P, E port	SY3000	SY5000	SY7000						
C2	ø2	•	_	_						
C3	ø3	•	_	_						
C4 C6	ø4	•	•	_						
C6	ø6	•	•	•						
C8	ø8	_	•	•						
C10	ø10	_	_	•						
C12	ø12	_	_	•						

#### Port size (Inch/One-touch fittings)

	1 011 0120	(	ic todoii	ugo
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø 1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø 1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•



#### **⚠** Caution

ning torque for mounting scre M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**

\* Refer to pages 250 to 255 for dimensions.

#### ■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

Note) Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly.

Series	Part no.
SY3000	SY30M-50-1A
SY5000	SY50M-50-1A
SY7000	SY70M-50-1A


pressure release valvel

and mount it to the manifold.

residual pressure exhaust valve.

facing downward

air cannot be shut off.

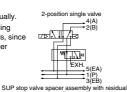

Circuit diagram (Mounting example of a 2-position single valve)

Connector gaske pressure release valve

Base gasket Mounting screw Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.) SY7000: SY70M-56-1A (3 pcs.) Valve mounting screw Tightening torque: Series SY3000: 0.16 N·m

Series SY5000/7000: 0.8 N·m For Hexagon socket head cap screen Nominal wrench size: Series SY3000: 1.5 Series SY5000/7000: 2.5 SUP stop valve space assembly with residual pressure

> Plate type SUP stop valve mounting so Tightening torque Series SY3000: 0.16 N·m Series SY5000/7000: 0.8 N.m.

Hexagon wrench Nominal wrench size: Series SY3000: 1.3 Series SY5000/7000: 2

#### ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

Note 3) This product is only for internal pilot specifications, as the external pilot

[How to mount SUP stop valve spacer assembly with residual

Insert the SUP stop valve mounting screw from the side of the spacer assembly,

Note 1) Install the plate type nut to the spacer assembly as shown in the figure if

it comes off. The SUP stop valve mounting screws can be tightened with

manifolds, they will interfere with the piping for the spacer assembly.

Therefore, combine the A and B ports with straight types or elbows

Tighten the SUP stop valve mounting screw to the specified tightening torque.

Mount the valve and tighten the valve mounting screws to the specified

a hexagon wrench without removing the plate type nut.

Note 2) When the elbows are facing upward in A and B ports in Type 10


tightening torque after mounting the SUP stop valve spacer assembly with

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve. Operating pressure range: 0.1 to 1.0 MPa

Note) When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

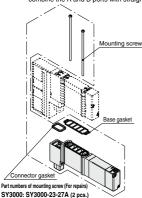

Series Part no SY3000 SY30M-60-1A SY5000 SY50M-60-1A SY7000 SY70M-60-1A


rmediate stop Drop prevention Applicable valve SY5401 SY5201

#### 

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage
- Combining with 3-position closed center or pressure center valve will not work
- · If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately
- · Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


#### <Example>

#### Double check spacer assembly with residual pressure release valve

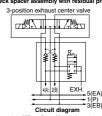

(Intermediate stop: When 3-position exhaust center valve is mounted)

#### Double check spacer assembly with residual pressure release valve

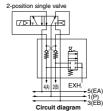

(Drop prevention: When 2-position single valve is mounted)

241

SY5000: SY5000-221-4A (2 pcs.)

SY7000: SY7000-221-4A (3 pcs.)



SY

EX600

VM

**XT34** 

# Manifold Options Series SY3000/5000/7000

**⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


\* Refer to pages 251, 253, 255 for dimensions.

#### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

#### How to Order

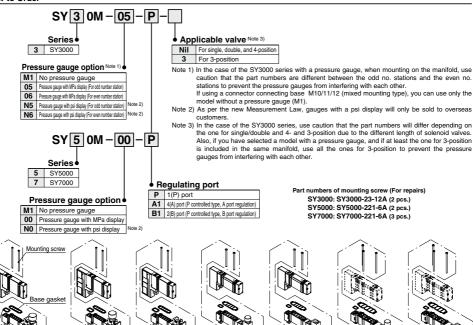

SY30M-05/N5SY30M-06/N6SY30M-M1SY50M-00/N0SY50M-M1SY70M-00/N0SY70M-00/N0SY70M-00/N0SY70M-00/N0SY70M-00/N0SY70M-M1(With pressure gauge) (With pressure gauge


#### Specifications

Interface regula	Interface regulator model		SY50M-□-□	SY70M-□-□			
Applicable valve	model Note 2)	SY3□ <sub>3</sub> □(R)	SY5□ <sub>3</sub> □(R)	SY7□30(R)			
Regulating port		1(P), 4(A), 2(B)					
Set pressure ra	Set pressure range		0.1 to 0.7 MPa				
Maximum opera	ting pressure	1.0 MPa					
Fluid		Air					
Ambient and flui	id temperature	e -10 to 50°C (No freezing)			−10 to 50°C (No freezing)		j)
Weight [g] Note 3)	With pressure gauge		75	93			
weight [g] Hote of	Without pressure gauge	27(29) Note 4)	69	87			

- Note 1) Always apply pressure from 1(P) port in the base for interface regulator.
- Note 2) 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.

Note 3) Gasket and mounting screws are included in the weight.

Note 4) (): Denotes the values of SY30M- -- -- 3.

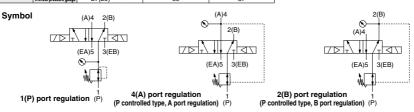

#### Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### Spacer Combinations and Screw List ①

		① SY30	000 (M2)	② SY50	000 (M3)	3 SY70	00 (M3)
Combination					Hexagon socket head cap screw		Hexagon socket head cap screw
GRound head combination screen   : SY3000-23-24A   : : SY5000-221-1A   : : SY7000-221-1A	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
### deapon societ head cap screw- 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 10: SY30M-56-2A 2: SY50M-56-2A 3: SY70M-56-2A	SUP stop valve spacer assembly B with residual pressure release valve  Individual SUP (EXH) spacer assembly		<b>1-56-2A</b> ocs.)		I-56-2A		I-56-2A
#Bound head combination screw  ①: SY3000-23-33A  ②: SY5000-221-5A  ③: SY7000-221-5A	Double check spacer assembly with residual pressure release valve  Individual SUP (EXH) spacer assembly	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
-Round head combination screw- ①: SY3000-23-32A ②: SY5000-221-3A ③: SY7000-221-3A	Individual BUP (EXH) spacer assembly Individual C EXH (SUP) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	_	SY7000- 221-3A (3 pcs.)	_
Round head combination screw	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
②: \$Y\$000-221-1A ③: \$Y7000-221-1A deleagen sodiel head cap screw-10: \$Y3000-222-1A ②: \$Y5000-222-1A ②: \$Y5000-222-1A ①: \$Y3000-222-1A ①: \$Y30M-56-4A ②: \$Y50M-56-4A ③: \$Y70M-56-4A	SUP stop valve spacer assembly B with residual pressure release valve lends valve lodividual SUP (EXH) spacer assembly lndividual EXH (SUP) spacer assembly		<b>1-56-4A</b> ocs.)		<b>1-56-4A</b> pcs.)		<b>1-56-4A</b> locs.)

<sup>\*</sup> Mounting onto a manifold follows the order explained above.

Note) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.



# Manifold Options Series SY3000/5000/7000

#### **∆** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Directional Control Valves

EX600

VM XT34

## Spacer Combinations and Screw List 2

Combination		① SY30	000 (M2)	② SY50	000 (M3)	③ SY70	000 (M3)
Combination	_	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
(-Round head combination screw) (1): SY3000-23-24A / (2): SY5000-221-1A (3): SY7000-221-1A	\ Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
d-biasgon socket head cap soreto	SUP stop valve spacer assembly with residual pressure release valve	SY30N	1-56-3A	SY50N	I-56-3A	SY70N	l-56-3A
①: SY30M-56-3A ②: SY50M-56-3A ③: SY70M-56-3A	Double check spacer assembly with residual pressure release valve	(2 p	ocs.)	(2 p	ocs.)	(3 p	cs.)
(-Round head combination screws / ①: SY3000-23-24A ②: SY5000-221-1A	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	SY3000- 222-1 A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
3: SY7000-221-1A delagon societ head cap soreiv- 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-5A ②: SY50M-56-5A ③: SY70M-56-5A	Double check spacer assembly with residual pressure release valve		<b>I-56-5A</b> ocs.)		<b>I-56-5A</b> ocs.)		I-56-5A cs.)
	Individual EXH (SUP) spacer assembly						
(Round head combination screw)	Valve						
2: SY5000-221-7A 3: SY7000-221-7A	Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
	Individual SUP (EXH) spacer assembly						

<sup>\*</sup> Mounting onto a manifold follows the order explained above.

Note 2) When laminating an interface regulator with other options, only the combinations in the table above are possible.



Note 1) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

#### **⚠** Caution

ning torque for mounting scre M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### Manifold Options

\* Refer to pages 251, 253, 255 for dimensions.

#### ■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a senarate air supply is required, or if addition air is required for additional air flow

Individual SUP block assembly occupies 1 station

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

\* Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification

Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)

- \* Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- \* When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \* A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.

## ■ Individual EXH block assembly

On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations


Individual EXH block assembly occupies 1 station


Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).


\* Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification

Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)

- \* Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- \* When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \* A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

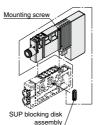

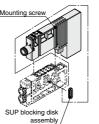


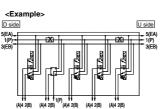


3 SY3000


7 SY7000

SY5000

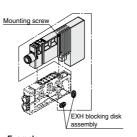

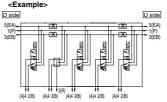

#### How to Order Individual SUP/EXH Block Assembly

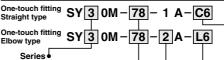

Block type 78 Individual SUP block 79 Individual EXH block

Individual SUP/EXH block assembly Short elbow type (Type 12) 3 Long elbow type (Type 11) Note) Long elbow type is for the SY5000/7000 only.

Port size (Metric/One-touch fittings)

	Symbol	P, E port	SY3000	SY5000	SY7000
	L4	ø4	•	•	_
	L6	ø6	•	•	•
Ī	L8	ø8	_	•	•
	L10	ø10	_	_	•
[	L12	ø12	_	_	•

Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	-
LN11	ø3/8"	_	_	•

Port size (Metric/One-touch fittings)

	Fort Size (Wethic/One-touch hittings)					
Symbol	P, E port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
СЗ	ø3	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

	Port size			
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•





# Manifold Options Series SY3000/5000/7000

#### **Manifold Options**

#### ■ SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12)

#### [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

#### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

SY

Directional Control Valves

EX600

XT34

#### ■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

SUP/EXH blocking disk label




disk label			
d	/1]_	[1]	ν,
L	3/	15	Δ.



3/5 3/5



If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted will be labeled and shipped out.

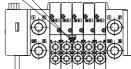

# Series Part no. SY3000 SY5000 SY7000 SJ3000-155-1A

#### ■ Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.


\* When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)

Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

#### <Pre>cautions>

- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- When the back pressure check valve assembly is mounted, please contact SMC for valve flow-rate characteristics.

#### Ordering Example

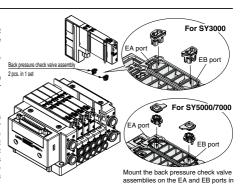

order shown in the figure above.				
	Series	Part no.		
	SY3000	SY30M-24-1A		
	SY5000	SY50M-24-1A		
	SY7000	SY70M-24-1A		




#### **Manifold Options**

#### ■ Dual flow fitting (for connector connecting base, Type 10, side ported)

This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.

\* When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

#### **How to Order Dual Flow Fitting**

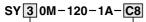

Series SY3000 SY5000

5


A, B port size (One-touch fittings)


Symbol	A, B port		SY3000	SY5000
C8	Metric size	ø8	•	_
C10	WELLIC SIZE	ø10	_	•
N9	Inch size	ø5/16"	•	_
N11	Inch size	ø3/8"	_	•

Ordering Example
 SS5Y3-10F1-08B-CM
 \*SY3100-5U1

\*SY30M-120-1A-C8

— \*The asterisk denotes the symbol for assembly.

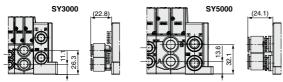

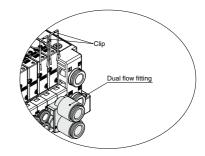

Note 1) Specifically for side porting for a connector connecting base. Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases.


Note 2) When adding or changing clips, push them into the very end of the manifold for each station. Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.

Note 3) Not available for the SY7000 series.

#### ■ Silencer

#### (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.

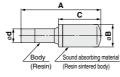


Series	Model	Effective area	Α	В	С
For SY3000 (ø8)	AN15-C08	20 mm <sup>2</sup>	45	13	20
For SY5000 (ø10)	AN20-C10	30 mm <sup>2</sup>	57.5	16.5	30.5
For SY7000 (ø12)	AN30-C12	41 mm <sup>2</sup>	71.5	20	43.5

Note) Shipped together with the product.

#### ■ Plug (White)

These are inserted in unused cylinder ports and P, E ports.

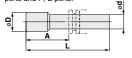

Note) Shipped together with the product.

#### Dimensions

Applicable fitting size ø <b>d</b> (Metric size)	Model	Α	L	øD
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ød (Inch size)	Model	Α	L	øD
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5
1/2"	KQ2P-13	24	46	15

EX600

VM

**XT34** 

# Manifold Options Series SY3000/5000/7000

#### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

#### ■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

 When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.


SS5Y3-10	
SS5Y5-10	
SS5Y7-(M)10	
. /	


				Moun	ting and	Option •
			Mountin	g option		
Symbol	Prin	iting		DIN rail		Direct
	Yes	No	With	Without	Specified length	mounting
AA	•	_	_	_	-	•
Α	•	_	•	_	_	_
A0	•		_	•	_	_
A3	•	_	_	_	For 3 stations	_
÷	- :	:		:	:	_
A24	•	_	_	_	For 24 stations	_
BA	_	•	_	_	-	•
В	_	•	•	_	_	_
B0	_	•	_	•	_	_
В3	_	•	_	_	For 3 stations	_
:	- :	:	i	:	:	_
B24	_	•	_	_	For 24 stations	_


Cordering Example
SS5Y3-10F1-05UR-C6AA ···································
*SY3200R-5U1
* The asterisk denotes the symbol for assembly.

- Note 1) Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- Note 2) No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

<SY5000/7000>

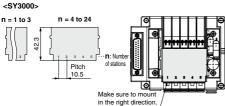

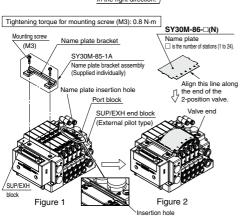

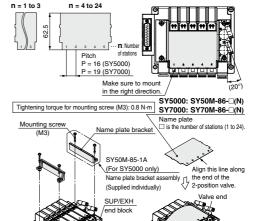

INDEX

block

Figure 1

Figure 2

#### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

#### ■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

#### Name plate part no.

Se	ries	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	□:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

Name plate bracket assembly part no, and number of items ordered

tarrie prate bracket	occinion, partiner	aaa	01110 01 001 00
Series		SS5Y3-10	SS5Y5-10/11
Name plate asse	mbly part no.	SY30M-85-1A	SY50M-85-1A
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	
block assembly Pilot type and P, E port entry	Internal pilot double sided piping	2 pcs.	0.000
	External pilot U/D piping	1 pc. Note)	2 pcs.
	External pilot double sided piping	Not required Note)	

Note 1) If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

Note 2) Name plate bracket assembly is not required for the SY7000.

#### 

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.



# Manifold Options Series SY3000/5000/7000

#### **Dimensions: Manifold Options/Series SY3000**

#### ■Blanking plate assembly











<Type 50, 51, 52>

<Type 10, 12>

# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

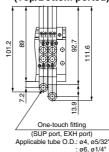


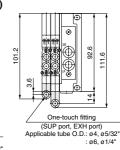


Directional Control Valves


SY EX600


> VM XT34

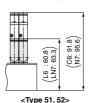


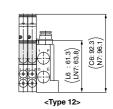


#### ■Individual SUP/EXH spacer assembly (Side ported)

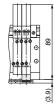

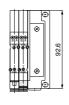

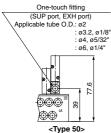

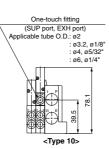

■SUP stop valve spacer assembly with residual pressure release valve







<Type 50, 51, 52>



<Type 10, 12>


INDEX


**SMC** 

250

#### **Dimensions: Manifold Options/Series SY3000**

■ Double check spacer assembly with residual pressure release valve

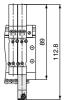

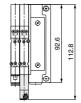






<Type 50, 51>


■Individual SUP/EXH block assembly (Top ported)

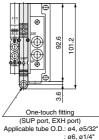



<Type 12>


#### ■ Interface regulator

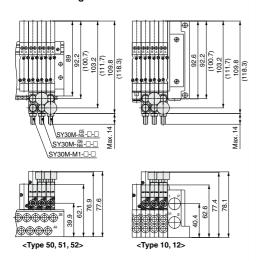

\*The dimensions within ( ) applies to the SY30M-□-□-3.

#### ■Individual SUP/EXH block assembly (Side ported)



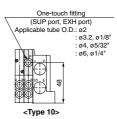


# Manifold Options Series SY3000/5000/7000

#### **Dimensions: Manifold Options/Series SY5000**

#### ■ Blanking plate assembly



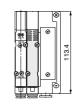







<Type 50, 51, 52>


<Type 10, 11, 12>


#### ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

: ø6, ø1/4"

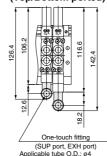

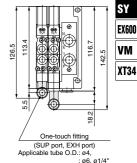


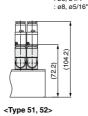


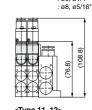



<Type 11, 12>

#### ■ Individual SUP/EXH spacer assembly (Side ported)

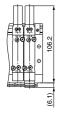

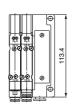


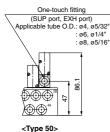


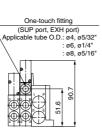

<Type 10>

■ SUP stop valve spacer assembly with residual pressure release valve

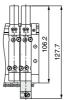

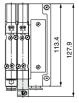





<Type 50, 51, 52>

<Type 10, 11, 12>


INDEX


252

Directional Control Valves

#### **Dimensions: Manifold Options/Series SY5000**

# ■ Double check spacer assembly with residual pressure release valve

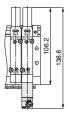

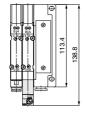








<Type 50, 51> <Type 10, 11>

# ■ Individual SUP/EXH block assembly (Top ported)

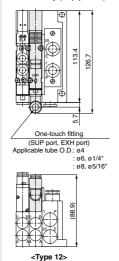



■ Individual SUP/EXH block assembly (Side ported)

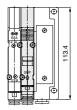

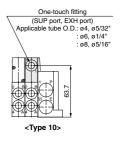


#### ■ Interface regulator

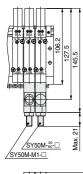

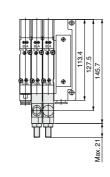





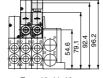

<Type 10, 11, 12>

# ■ Individual SUP/EXH block assembly (Bottom ported)

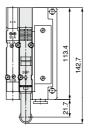

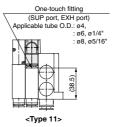


# Manifold Options Series SY3000/5000/7000


SY EX600

VM

XT34

#### ■Blanking plate assembly

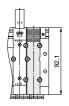

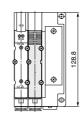








<Type 50, 51, 52>


<Type 10, 11, 12>

# ■ Individual SUP/EXH spacer assembly (Side ported)

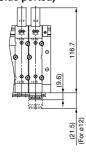


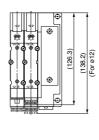

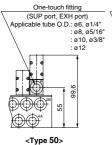


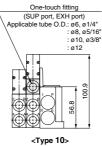


# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

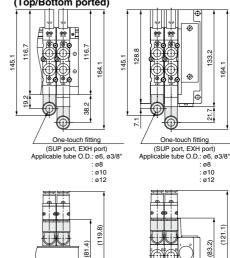

# ■SUP stop valve spacer assembly with residual pressure release valve

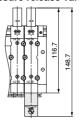

<Type 51, 52>

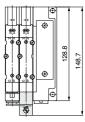

<Type 11, 12>




<Type 10>




<Type 10, 11, 12>

#### **Dimensions: Manifold Options/Series SY7000**

#### ■ Double check spacer assembly with residual pressure release valve

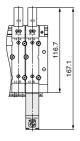

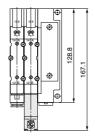






<Type 50, 51>

<Type 10, 11>


#### ■ Individual SUP/EXH block assembly (Top ported)

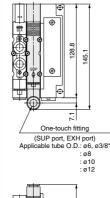





<Type 12>


#### ■ Individual SUP/EXH block assembly (Side ported)

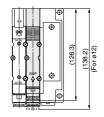


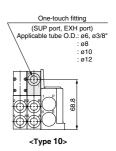


#### ■ Interface regulator

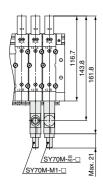


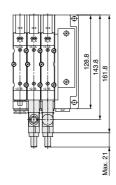


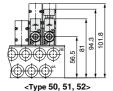

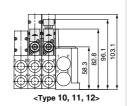

■ Individual SUP/EXH block assembly (Bottom ported)

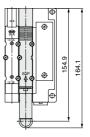

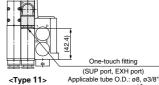

: ø10 : ø12

EX600

**XT34** 



# Series SY3000/5000/7000 **Specific Product Precautions 1**

Be sure to read before handling. Refer to page 1574 for Safety Instructions, For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

#### **Environment**

# **⚠** Warning

- 1. Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- 2. Products compliant with IP67 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- 4. The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

#### Valve Mounting

# 

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

	Model	Thread size	Tightening torque
	SY3000	M2	0.16 N·m
SY5000/7000 M3 0.8 N·m	SY5000/7000	M3	0.8 N·m

#### Manual Override

# **⚠Warning**

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

#### ■ Non-locking push type


Push down on the manual override button until it stops



#### ■ Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking type.

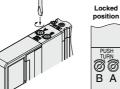


#### **Manual Override**

# 

#### ■ Push-turn locking lever type [Type E]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking type.

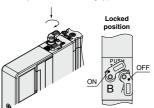




## ∕.∖ Caution

Do not apply excessive torque when turning the manual override. [0.1 N·m]

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage etc.

#### ■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

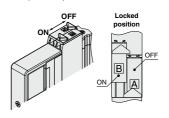





Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

#### **Back Pressure Check Valve**

## **∕** Caution

- •There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow-rate characteristics goes down. Please contact SMC for details.
- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

#### **Exhaust Throttle**

# 

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

#### Used as a 3-Port Valve

## **⚠** Caution

#### ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plu	g position	B port	A port
Туре	of actuation	N.C.	N.O.
Number of solenoids	Single	(A)4 2(B) (EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB)
Number of	Double	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)

#### **Valve and Manifold Combination**

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type  $(SY_{\frac{3}{2}}^{\frac{3}{2}}\square\square)$  and top ported type  $(SY_{\frac{3}{2}}^{\frac{3}{2}}\square\square)$ , therefore, it can be mounted to all manifolds of the side ported type (Type 50 and Type 10), the bottom ported type (Type 51 and Type 11) and the top ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.



Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Directional

EX600

**XT34** 

#### Light/Surge Voltage Suppressor

# 


#### ■ Polar type

#### Positive common

#### Single solenoid Light/surge voltage suppressor (□Z)

Polarity protection diode COM 38

Surge voltage suppressor (□S)

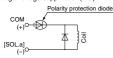

#### Positive common

#### Double solenoid. 3-position, 4-position


Light/surge voltage suppressor (□Z) [SOL.b] LED COM Polarity protection diode

Surge voltage suppressor (□S)



#### Negative common Single solenoid


Light/surge voltage suppressor (□NZ) Polarity protection diode COM

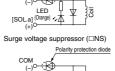


#### Negative common

#### Double solenoid. 3-position, 4-position

Light/surge voltage suppressor (□NZ)

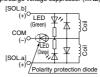

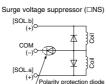

#### ■ Non-polar type

#### With surge voltage suppressor (□R)

## Single solenoid



#### Double solenoid



#### With light/surge voltage suppressor (□U)

#### Single solenoid



#### Double solenoid



#### ■ With power saving circuit

Not available for the 12 VDC

specification


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

Note) Be careful of the energizing time, as quick response and high pressure types will become operational when the energizing time is over 40 ms.

#### <Standard> <High pressure> Electric circuit diagram (With power saving circuit) Polarity protection diode In the case of single solenoic (+) circuit 村曾 PWM circuit i1: Starting current, i2: Holding current Polarity protection diode

The above circuit reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below

#### <Electrical power waveform with power saving circuit>

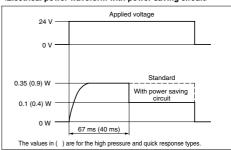

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- · Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

#### Residual voltage of the surge voltage suppressor

Note) If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change. refer to the valve specifications on page 18.

#### Residual Voltage

Surge voltage	D	С
suppressor	24 V	12 V
S, Z	Appro	x. 1 V
R, U	Approx. 47 V	Approx. 32 V





Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

#### **Continuous Duty**

## **⚠** Caution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for a long period of time, take special care as the temperature rise will be greater.

#### Countermeasure for Surge Voltage Intrusion

#### ■ Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

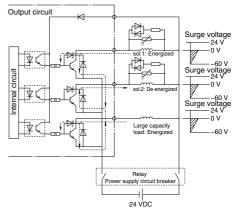


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

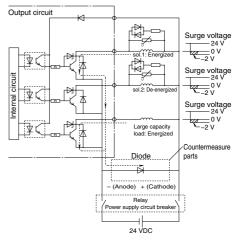


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 VDC)



EX600

**XT34** 

# $\triangle$

# Series SY3000/5000/7000 Specific Product Precautions 5


Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Type 1□ (Connector Connecting Base) Changing Connector Entry Direction

# ght and surge voltage suppressor, hen solenoid a is energized, and it

Connector direction for electrical entry of D-sub connector <IP40>, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire etc., to break. Thus, refrain from using in these ways.

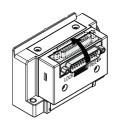


#### How to Order Manifold

## **⚠** Caution


The letter "S\" is indicated on manifold blocks for the SY series Type 1□ (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-or 4-position valves cannot be used for manifolds blocks with single wiring specification [S].)

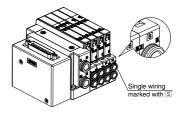

#### **Light Indication**


When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energized, and it turns green when solenoid b is energized.

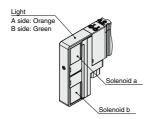

Type 5□ (Metal Base) Changing Connector Entry Direction

# **↑** Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed. If the directional change is required, push the lever on both sides to remove the connector and change the connector direction for electrical entry as shown in the figure. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

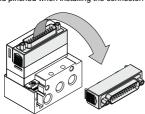





Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

#### Substrate Assemblies inside Manifolds

#### 

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

#### Fixation of DIN Rail Mounting Type Manifold

#### 

- 1. When the manifold is fixed with bolts on a mounting surface etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.

Port Block Assembly and How to Change Piping Types between Top and Side


## **⚠** Caution

For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 237 for part numbers of port block assembly and body cover assembly.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

# Caution Tightening torque M2: 0.16 N-m (SY3000) M3: 0.8 N·m (SY5000/7000) Port block assembly Thread piping Mounting screw Port block assembly One-touch fitting \* Part number is not shown on the body cover assembly.

#### ■ How to change while mounted on a manifold

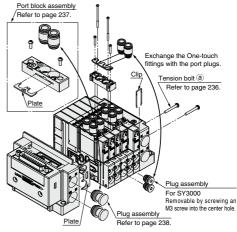



Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Directional Control Valves

EX600

VM

**XT34** 


#### **Changing One-touch Fittings**

## ∕**.**∖ Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 238 for part numbers of One-touch fittings for valve or manifold.

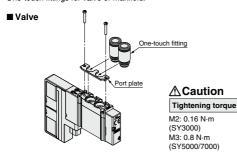

#### ■ Plug-in metal base

#### Side ported (Type 50)



#### Bottom ported (Type 51)



#### Clin next no /10 nee included

Clip part li	o. (10 pcs. included
Series	Part no.
SY3000	SY30M-19-2A
SY5000	SY50M-19-2A
SY7000	SY70M-19-2A


# Plate assembly part no. (10 pcs. included)

Series	Part no.
SY3000	SY30M-10-3A
SY5000	SY50M-10-6A
SY7000	SY70M-10-7A

Note) Including mounting screw

#### ■ Plug-in connector connecting base

#### Side ported (Type 10)

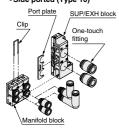

#### Clip part no. (10 pcs. included)

Series	Part no.						
SY3000	SY30M-19-1A						
SY5000 Note 1)	SY50M-19-6A						
SY3000/5000 Mixed mounting type	SY50M-19-1A						
SY7000	SV3000-70-1A						

Note 1) A and B ports (ø8 and ø5/16") of the SY3000/5000 mixed mounting type are those for the SY5000. Note 2) If the port plate for the SUP/EXH block is required, please contact SMC.

#### **Changing One-touch Fittings**

# 

Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

# Manifold block

#### Plate part no. (10 pcs. included)

Series	Part no.						
SY5000 Note)	SY50M-10-4A						
SY3000/5000 Mixed mounting type							
SY7000	SY70M-10-4A						

Note) A and B ports (ø8 and ø5/16") of the SY3000/5000 mixed mounting type are those for the SY5000.

#### Other Tube Brands

#### **⚠** Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within ±0.1 mm 2) Soft nylon tube within ±0.1 mm 3) Polyurethane tube within +0.15 mm -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

#### **One-touch Fittings**

#### ■ Tube attachment/detachment for One-touch fittings

#### 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters. the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

#### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tuhe

INDEX



262



Be sure to read before handling. Refer to page 1574 for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

#### **One-touch Fittings**

# **⚠** Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

#### Applicable Fittings: Series KQ2H, KQ2S

Series	Model	Piping port	Port size		Applicable tube O.D.							
					ø <b>2</b>	ø <b>3.2</b>	ø <b>4</b>	ø <b>6</b>	ø <b>8</b>	ø10	ø <b>12</b>	
	SY3□30-□□-M5	4A, 2B	M5	KQ2H								
				KQ2S								
SY3000	SS5Y3-50/51/52 (R) Manifold base	1P, 5EA, 3EB	1/8	KQ2H								
				KQ2S								
		X, PE	M5	KQ2H								
				KQ2S								
			1/8	KQ2H								
		4A, 2B	1/6	KQ2S								
		4A, 2B	M5	KQ2H								
			IVID	KQ2S								

Series N	Model	Piping port	Port size	Fiftings	Applicable tube O.D.							
	iviouei	Fibility port			ø2	ø <b>3.2</b>	ø4	ø6	ø <b>8</b>	ø10	ø <b>12</b>	
	0.42=00 == 04	44.00	1/0	KQ2H								
	SY5□30-□□-01	4A, 2B	1/8	KQ2S								
		1P, 5EA, 3EB	4/4	KQ2H								
SY5000			1/4	KQ2S								
		X, PE	M5	KQ2H								
	SS5Y5-50/51/52 (R)			KQ2S								
	Manifold base		1/4	KQ2H								
	4A, 2B	4A 2B		KQ2S								
		4A, 2D	1/0	KQ2H								
		1/8	1/0	KQ2S								

Series	Model	Piping port	Port size	Port Fittings	Applicable tube O.D.						
		i ipilig port		i ittiiigs	ø2	ø <b>3.2</b>	ø4	ø6	ø <b>8</b>	ø10	ø12
	SY7□30-□□-02	4A, 2B		KQ2H							
			1/4	KQ2S							
		1P, 5EA, 3EB	3/8	KQ2H							
SY7000		IF, SEA, SEB		KQ2S							
	SS5Y7-50/51/52 (R)	X, PE	M5	KQ2H							
	Manifold base	Λ, ΓΕ	IVIO	KQ2S							
	<b>4A</b> , :	4A 2B	1/4	KQ2H							
		4A, 2D	1/4	KQ2S							

#### ■ Trademark

DeviceNet™ is a trademark of ODVA.

EtherNet/IP™ is a trademark of ODVA. CompoNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

