

# Clean Exhaust Filter


RoHS

New


## This filter enables direct exhaust of air in a clean room!

(Cleanliness class 4\*: ISO14644-1) (\* Based on SMC's measuring conditions.)

Air can be directly exhausted in a clean room only by mounting this product to the pneumatic equipment in the clean room.

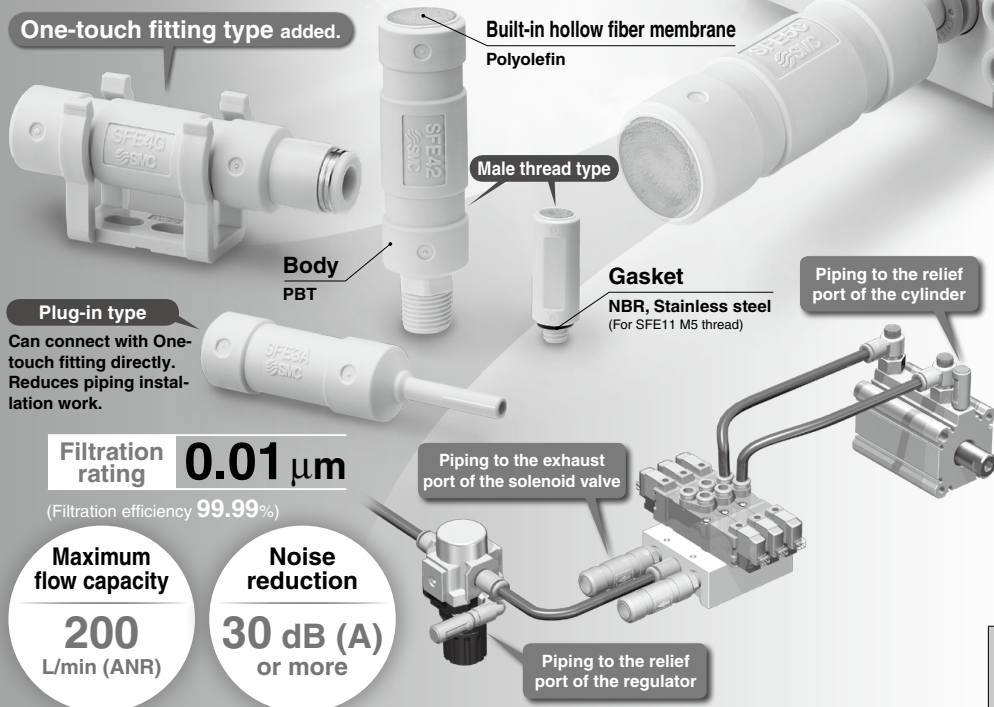




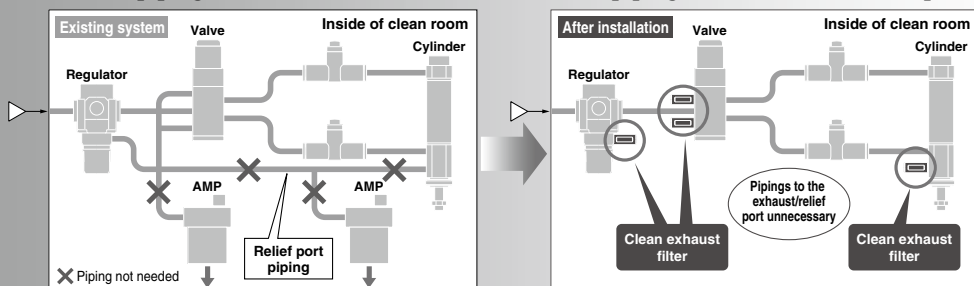









No need for piping for exhaust air and relief air. Reduces piping installation work and space.



## Series SFE




Mounting variations

Series	Maximum flow capacity L/min (ANR)	M5	R1/8	R1/4	ø4	ø6	ø8	ø10	ø4	ø6	ø8	ø10
SFE1	3											
SFE3	30											
SFE4	65											
SFE5	130											
SFE7	200											


Hollow fiber membrane

The hollow fiber membrane has a porous construction with numerous fine holes on a straw type fiber membrane wall. The hollow fiber membrane filter filtrates the impurities from the compressed air through the overlapping layered fine holes.

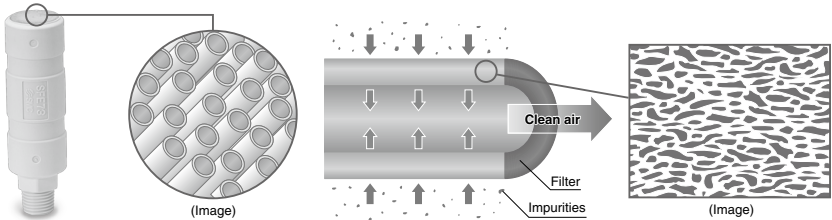

One-touch fitting type

Space-saving installation

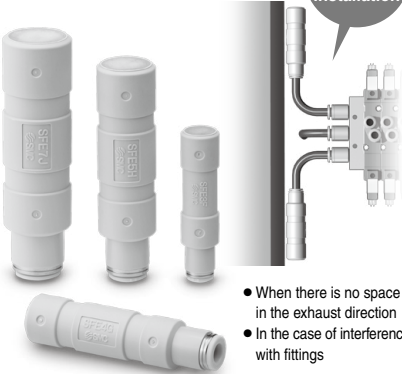

- When there is no space in the exhaust direction
- In the case of interference with fittings

# Series SFE Model Selection

## Selection Procedure

Model selection for the clean exhaust filters uses the flow-rate characteristic graphs for the corresponding exhaust flow rate from the equipment that the clean exhaust filter is mounted to.

Calculate the flow rate by performing "1. Calculation of Exhaust Flow Rate", and then, select the correct model following the instructions in "2. Model Selection Based on Exhaust Flow Rate". When the exhaust flow rate is already known, start selecting the model from "2. Model Selection Based on Exhaust Flow Rate".

### 1. Calculation of Exhaust Flow Rate


#### 1) Exhaust flow rate from cylinder (from solenoid valve)

- Find the exhaust flow rate of the cylinder from the cylinder bore size and the actuating speed using the graph shown below.
- Correct the exhaust flow rate that is found into exhaust flow rate at the operating pressure (supply pressure to the cylinder) by calculation using the conversion formula shown below.

$$\text{Corrected exhaust flow rate} = \text{Exhaust flow rate} \times \frac{\text{Supply pressure to the cylinder (gauge pressure)} + 0.1}{0.5}$$

- To operate more than one cylinder using collective piping with manifolds, etc, total the exhaust flow of the cylinders to find the maximum flow capacity.

**Graph 1 Exhaust flow rate of cylinder (Meter-out control)**

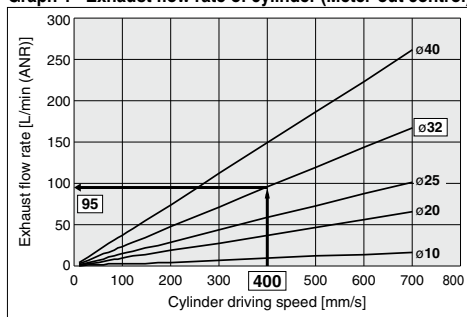

Example) Bore size: ø32, Driving speed: 400 mm/s,  
Supply pressure: 0.5 MPaG

- From the graph, exhaust flow rate is found to be 95 L/min (ANR).
- Corrected exhaust flow rate found with the conversion formula:

$$95 \times \frac{0.5 + 0.1}{0.5} = 114 \text{ L/min (ANR)}$$

#### 2) Exhaust from ejectors

In the case of ejectors, the exhaust flow rate is the total of the suction flow rate and the air consumption.

#### 3) Exhaust from other equipment

Use the air consumption specified for each piece of equipment as a standard.


### 2. Model Selection Based on Exhaust Flow Rate

The exhaust flow rate that is calculated in step "1. Calculation of Exhaust Flow Rate" is the flow capacity shown in Graph 2. Select the model that is shown with a point where the dotted line, for flow capacity, and the solid line, for flow-rate characteristics, intersects.

- Some equipment may have problems with the operation or performance when back pressure is applied. Check the equipment's back pressure range, with the catalog etc, and that the equipment will not be influenced, and select a model within that range.
- Long piping between the cylinder and the exhaust port increases exhaust resistance. Give some margin with the selected model.
- Depending on the equipment that the clean exhaust filter is mounted to, the filter body may interfere with the piping, making it difficult to be mounted. Please confirm the external dimensions so that it may cause no interference.

**Graph 2 Flow-rate characteristics**

The graph shows the flow ranges recommended for each exhaust filter model. (Initial conditions)

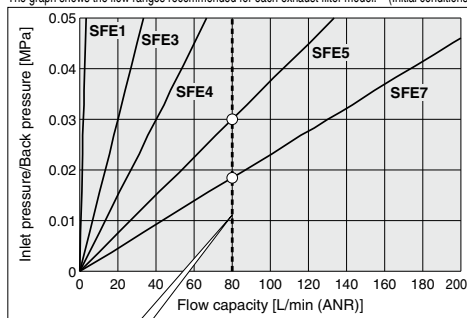

When the flow capacity is 80 L/min (ANR), the graph lines of **SFE5** and **SFE7** reach 80 L/min (ANR), thus either of these two models can be selected.

# Clean Exhaust Filter Series *SFE*

RoHS

## How to Order

### SFE 11

#### Size/Port size Male thread type

Symbol	Port size	Max. flow capacity L/min (ANR)
11	M5 x 0.8	3
42	R1/8	65
52	R1/8	130
53	R1/4	130
73	R1/4	200

#### Plug-in type

Symbol	Port size	Max. flow capacity L/min (ANR)
3A	ø4	30
4B	ø6	65
5C	ø8	130
7D	ø10	200

#### One-touch fitting type

Symbol	Applicable tubing O.D.	Max. flow capacity L/min (ANR)
3F	ø4	30
4G	ø6	65
5H	ø8	130
7J	ø10	200



Male thread type



Plug-in type



One-touch fitting type

#### Bracket

### SFE-BR 3

Symbol	Applicable model
3	SFE3□
4	SFE4□
5	SFE5□
7	SFE7□



## Specifications

Model	SFE11	SFE3□	SFE4□	SFE5□	SFE7□	
Fluid <sup>Note 1)</sup>	Air					
Maximum flow capacity <sup>Note 2)</sup>	Up to 3 L/min (ANR)	Up to 30 L/min (ANR)	Up to 65 L/min (ANR)	Up to 130 L/min (ANR)	Up to 200 L/min (ANR)	
Filtration rating <sup>Note 3)</sup>	0.01 μm (Trapping efficiency 99.99%)					
Noise reduction <sup>Note 3)</sup>	30 dB (A)					
Operating temperature	5 to 45°C					
Differential pressure proof <sup>Note 4)</sup> (Maximum operating pressure)	0.1 MPa					
Material <sup>Note 5)</sup>	Body	PBT, Polyolefin, Polyurethane, PP*, Stainless steel*, EPDM (Fluoro coated)*				
	Gasket	NBR, Stainless steel	—			
Weight	Male thread	1 g	—	7 g	12 g	17 g
	Plug-in	—	3 g	6 g	11 g	16 g
	One-touch fitting	—	5.5 g	8 g	16 g	24 g
Bracket weight	—	1.2 g	2.5 g	3.5 g	5.5 g	
Applicable tubing material <sup>Note 6)</sup> (One-touch fitting type)	—	PFA, Polyolefin, Soft polyolefin, Polyurethane				
Replacement period	· 2 years or when back pressure reached 0.1 MPa · When the system fails to operate normally due to clogging					
Packaging	Antistatic double packaging processes					

Note 1) Do not use this product in air containing ozone, since it may break.

Note 2) Model should be selected based on the flow capacity. (Refer to page 524.)

Note 3) Based on SMC's measuring conditions.


Note 4) Pressure applied to SFE, and not supply pressure to the equipment that SFE is mounted to (e.g. solenoid valve, cylinder).

Note 5) The materials with an asterisk (\*) are used for the One-touch fitting type only.


Note 6) Due to the softness of polyurethane tubing, it may fold when being inserted. Hold the end of the tubing and insert it all the way in.

**Dimensions**

**SFE11**




**SFE42/52/53/73**

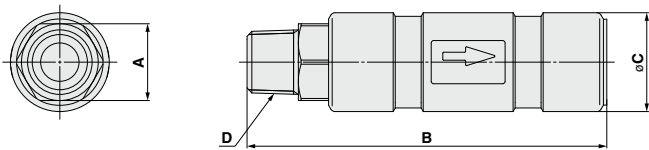


Dimensions (mm)				
Model	A	B	C	D
SFE42	10	62	16.5	R1/8
SFE52	10	71	20.5	R1/8
SFE53	17	75	20.5	R1/4
SFE73	17	84	24	R1/4

**SFE3A**




**SFE4B/5C/7D**

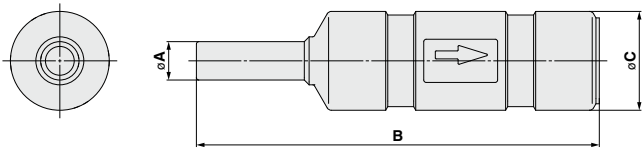


Dimensions (mm)			
Model	A	B	C
SFE4B	6	73	16.5
SFE5C	8	84	20.5
SFE7D	10	94	24

**Dimensions**

**SFE3F**



**SFE4G/5H/7J**

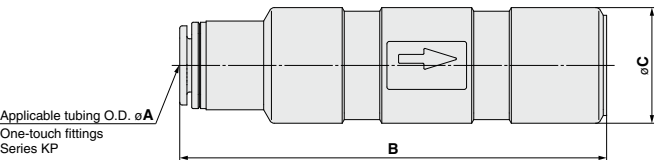


Dimensions (mm)			
Model	A	B	C
SFE4G	6	68.5	16.5
SFE5H	8	79	20.5
SFE7J	10	89	24

**Bracket**

**SFE-BR3**



**SFE-BR4/5/7**

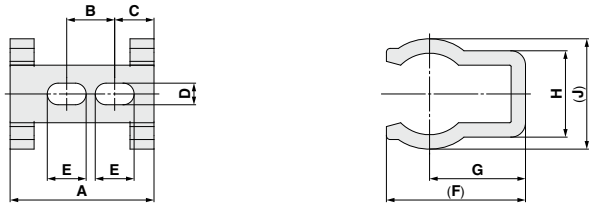

Dimensions (mm)										
Model	A	B	C	D	E	F	G	H	J	
SFE-BR4	30	16	7	4.5	7.5	(24.5)	17	15.5	(19.5)	
SFE-BR5	30	10	8.2	4.5	8.1	(29)	20	18	(23)	
SFE-BR7	34	14	7.35	4.5	9.8	(35)	24	20	(27.3)	

( ): Reference dimensions



## Series SFE

# Specific Product Precautions

Be sure to read this before handling. Refer to page 1154 for Safety Instructions. For Air Preparation Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smcworld.com>

### Selection

#### ⚠ Warning

1. Thoroughly and carefully confirm the purpose of use, required specifications and operating conditions (fluid, pressure, flow rate, filtration rating, and environment), then select a model within the specifications.
2. Do not use this product for any purposes that may adversely influence, directly or indirectly, the human body such as for food or medical applications.
3. Do not use air which contains ozone, as it will cause damage to the product.

### Mounting

#### ⚠ Caution

1. Flush and clean the piping before connecting it to the product.
2. Do not apply excessive force to the product.  
Install piping so that it does not apply pulling, pressing, bending or other forces on the products.  
Tighten the screws by hand, and then apply a wrench to the wrench flats to tighten the screw for additional 1 to 2 rotations.  
For the model with the M-thread, tighten the tip of the main body securely by hand until it is in contact with the end face, and then retighten it by hand. At this time, note that the retightening amount should be 30° or less. (Tighten it with 0.2 N·m or less.)
3. Do not mount the product in a place where dust will be stirred up by the exhaust air from the product and affect peripheral equipment.
4. Do not mount the product in a location where air from the product will be directly exhausted to the workpiece.
5. If installing the products to valve ports, interference may occur with the fittings. Please confirm the dimensions before installing.

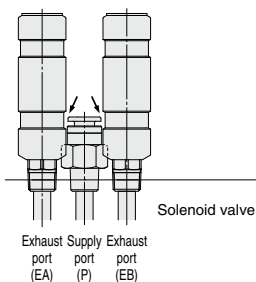


Fig. Example of the interference with fittings

### Supply Air

#### ⚠ Caution

1. The product cannot be used with air containing water droplets.
2. Install a mist separator (Series AM), micro mist separator (Series AMD), or micro mist separator with pre-filter (Series AMH) on the air supply side.

### Supply Air

#### ⚠ Caution

3. When using on the ejector etc., do not allow liquids such as water or oil to be drawn in with the air.

### Operating Environment

#### ⚠ Warning

1. Do not operate under the conditions listed below due to a risk of malfunction.
  - 1) In locations having ozone, corrosive gases, organic solvents, and chemical solutions, or in locations in which these elements are likely to adhere to the equipment.
  - 2) In locations in which sea water, water, or water steam could come in contact with the equipment.
  - 3) Where the product is exposed to ultraviolet rays or temperature increase.
  - 4) Where the product is exposed to heat sources or in areas that the product is exposed to radiant heat.
  - 5) In locations that are exposed to direct sunlight.
  - 6) In locations that are exposed to shocks and vibrations.

### Maintenance

#### ⚠ Warning

1. Replace the product with a new one right away when it reaches its life.

Make sure to verify the operating conditions of the actuator at least once a day.

##### — Criteria of the product's life —

The service life of the product ends when either of the following two conditions occurs.

- 1) After 2 years of usage has elapsed.
- 2) When the back pressure of the SFE reaches 0.1 MPa even though the operating period has been less than 2 years.
- 3) When the system fails to operate normally due to clogging.

### Handling of One-touch Fitting Type

#### ⚠ Caution

1. Clean One-touch fittings (Series KP) are used for the One-touch fitting type. Grease is not used due to the series KP oil-free specifications. For this reason, a greater insertion force is required when the tube is installed. In particular, polyurethane tubing may fold when inserted due to its softness. Hold the end of the tubing, and insert it all the way in slowly and securely.
2. The outside diameter of tubes that have been used at high temperatures or for long periods of time will expand, and in some cases pipe fittings cannot be reattached. Tubes that cannot be attached should be discarded and replaced with new ones.
3. Refer to the precautions of the KP series for handling.