




5 Port Solenoid Valve *Series SV*

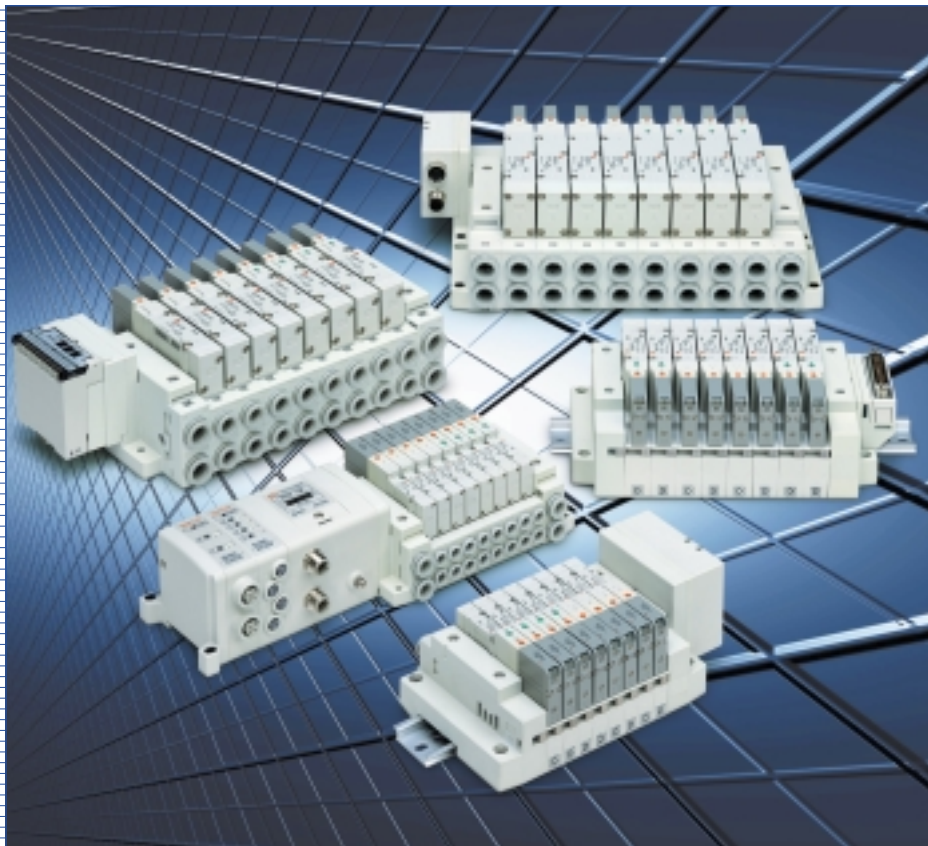

Lateral Plug-In Style Manifold
4 Position Dual 3 Port Valves Available
Accommodates Gateway Type Serial Wiring
Manifold Option Conforming to IP65/IP67
Manifold Interface Options

New Concept Connector Type Manifold Series SV1000/2000/3000/4000


The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.

The SV series employs a multi-connector instead of the conventional lead wires for internal manifold wiring. By connecting each block with a connector, changes to manifold stations are greatly simplified.


Connector wiring diagram

For both serial and parallel wiring, additional manifold blocks are sequentially assigned pins on the connector.

This makes it completely unnecessary to disassemble the connector unit.

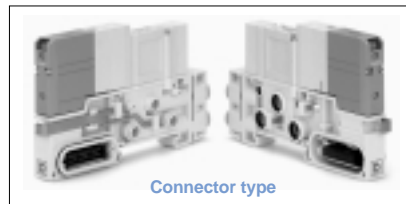


Connector type

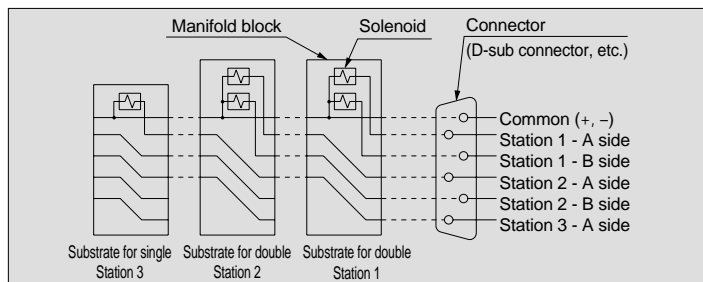

Cassette base type manifold (for SV1000/2000)

Cassette base type manifolds offer the ultimate in flexibility. Manifold sections can be added using a simple release mechanism.

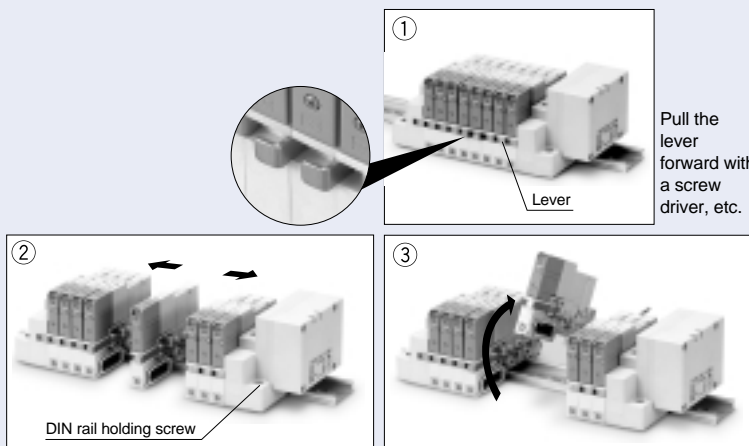

Loosen the DIN rail holding screws at both ends, and separate the manifold to the right and left.

Pull the valve up at the front.


Tie-rod base manifold (for SV1000/2000/3000/4000)

Conventional tie-rod base type manifolds are also available.

The use of 34 pin connector allows up to 16 stations with double solenoids.

4 position dual 3 port valves available for series SV1000/2000

- Two 3 port valves built into a single valve body.
- A and B ports can be individually controlled.
- Three combinations are available: [N.C./N.C.], [N.O./N.O.] and [N.C./N.O.].
- Mixed mounting with 5 port valves is also possible.
- Labels are attached to indicate A and B side functions, using the same color as the manual override.

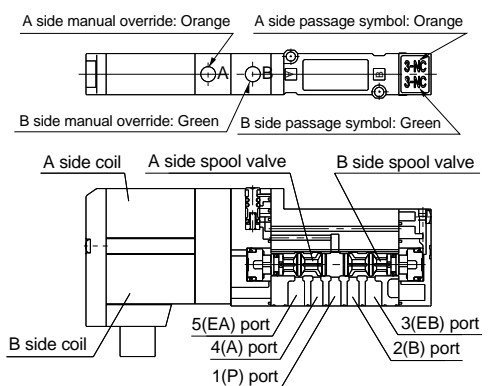

Model	A side	B side	JIS symbol
SV ₂ A00	N.C. valve	N.C. valve	
SV ₂ B00	N.O. valve	N.O. valve	
SV ₂ C00	N.C. valve	N.O. valve	

* External pilot specification is not available for 4 position dual 3 port valves.

NEW Serial options:

Accommodates gateway type serial wiring

Series EX500 gateway features:


- IP65 protection
- 128 I/O (64 inputs, 64 outputs)
- Controls up to 4 branches with 32 I/O per branch
- A single cable from the gateway provides both signal and power for each branch, eliminating the need for separate power connections for each manifold.

Series EX250 features:

Serial wiring with I/O unit Series EX250

- IP65 protection
- 64 I/O (32 inputs, 32 outputs)
- Double solenoid allows up to 16 stations (up to 32 solenoids).

Product is CE compliant

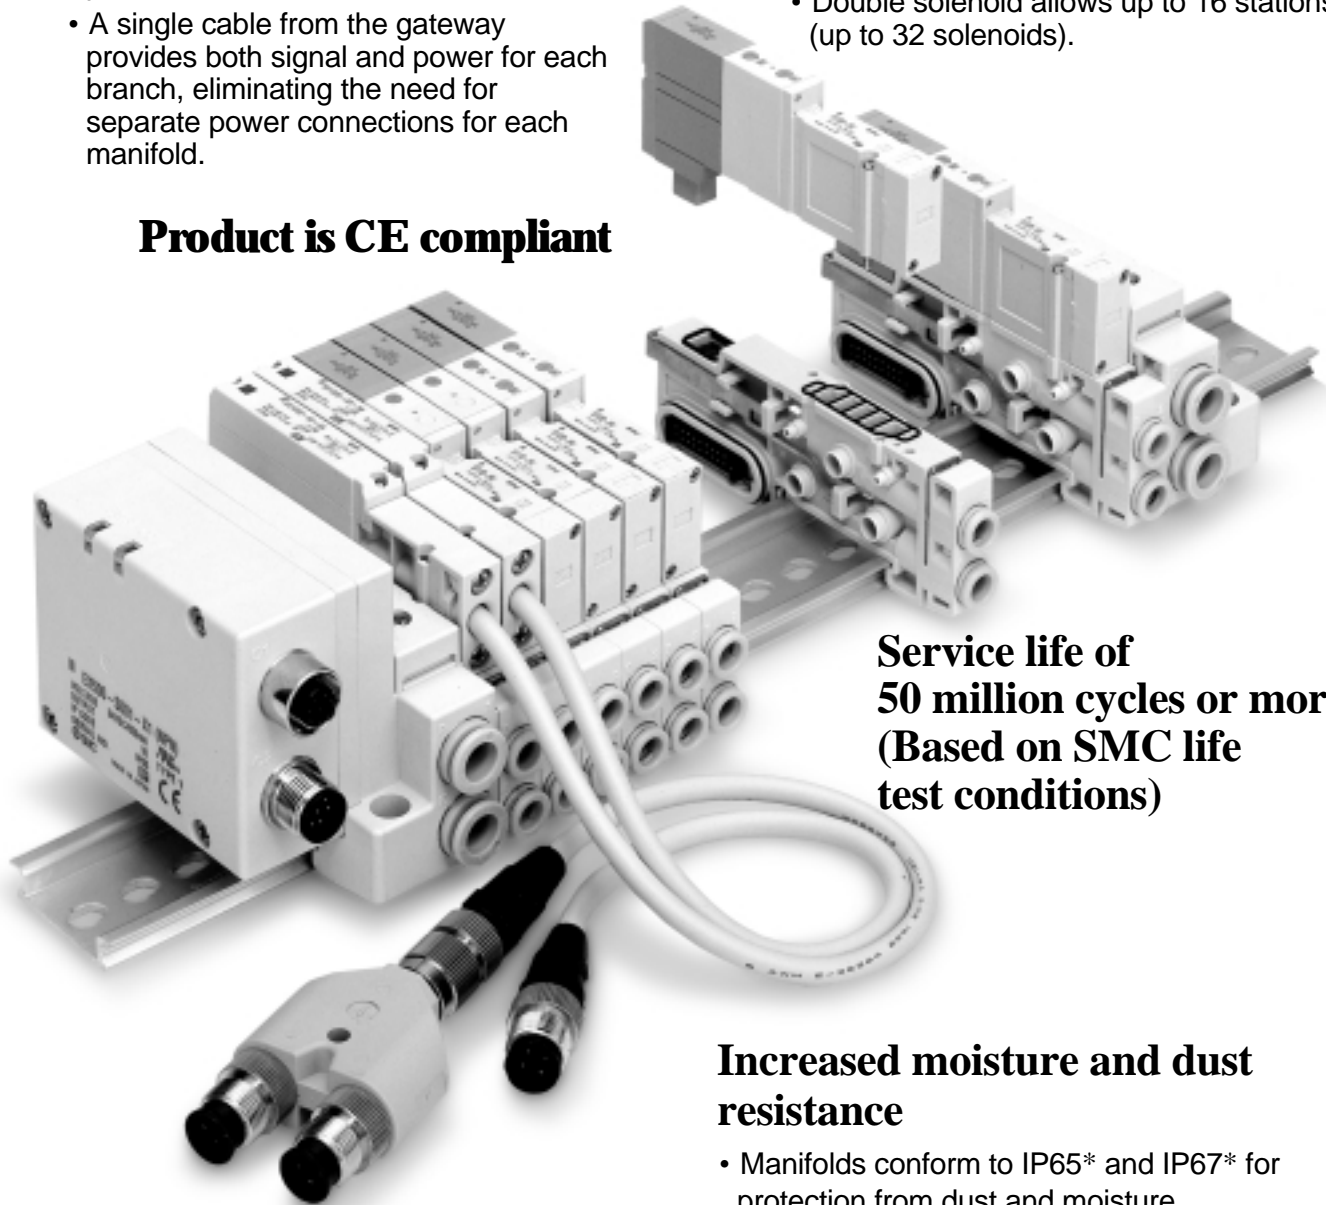

**Service life of
50 million cycles or more
(Based on SMC life
test conditions)**

Increased moisture and dust resistance

- Manifolds conform to IP65* and IP67* for protection from dust and moisture.

(Based on IEC529*.)


(Refer to the catalog contents for details, as some types of connectors do not meet these standards.)

**Power consumption: 0.6W
(Current: 25mA, 24VDC)**

**A relay output module is
available for control of devices
up to 110VAC, 3A.**

Series SV1000

Applicable bore size: $\varnothing 20$, $\varnothing 25$, $\varnothing 32$, $\varnothing 40$

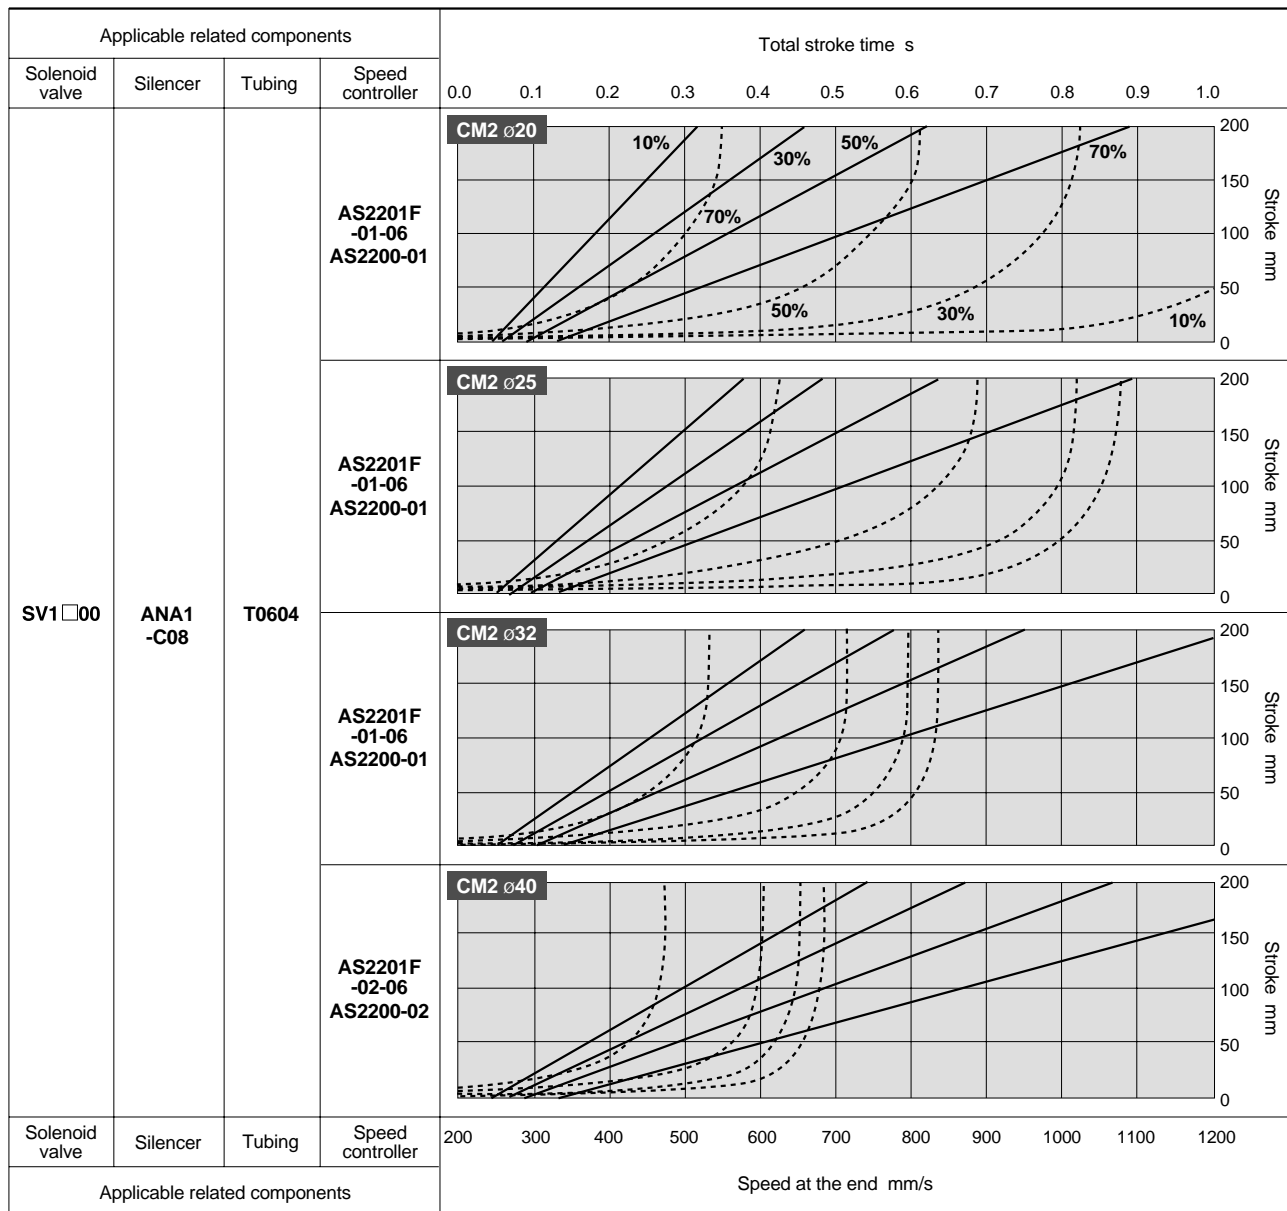

For details regarding different conditions, make determinations after using the SMC Model Selection Program - Pneumatic Cylinder Drive Systems.

Reading the graphs


These graphs show the total stroke time and speed at the end when a cylinder drive system is composed of the ideal components. The graphs above indicate the total stroke time and speed at the end with respect to various load ratios and strokes for each cylinder bore size.

1in = 25.4mm
mm/\$
= metre
1Mpa = 14.5psa

Common conditions

Supply pressure	0.5MPa (72psi)
Piping length	SV1000: 1m, SV2000/3000: 2m, SV4000: 3m
Cylinder direction	Vertical upward
Speed controller	Meter-out, Directly connected to cylinder, Needle fully open
Load ratio	$\{(\text{Load weight})/(\text{Theoretical output})\} \times 100\%$


Series SV2000

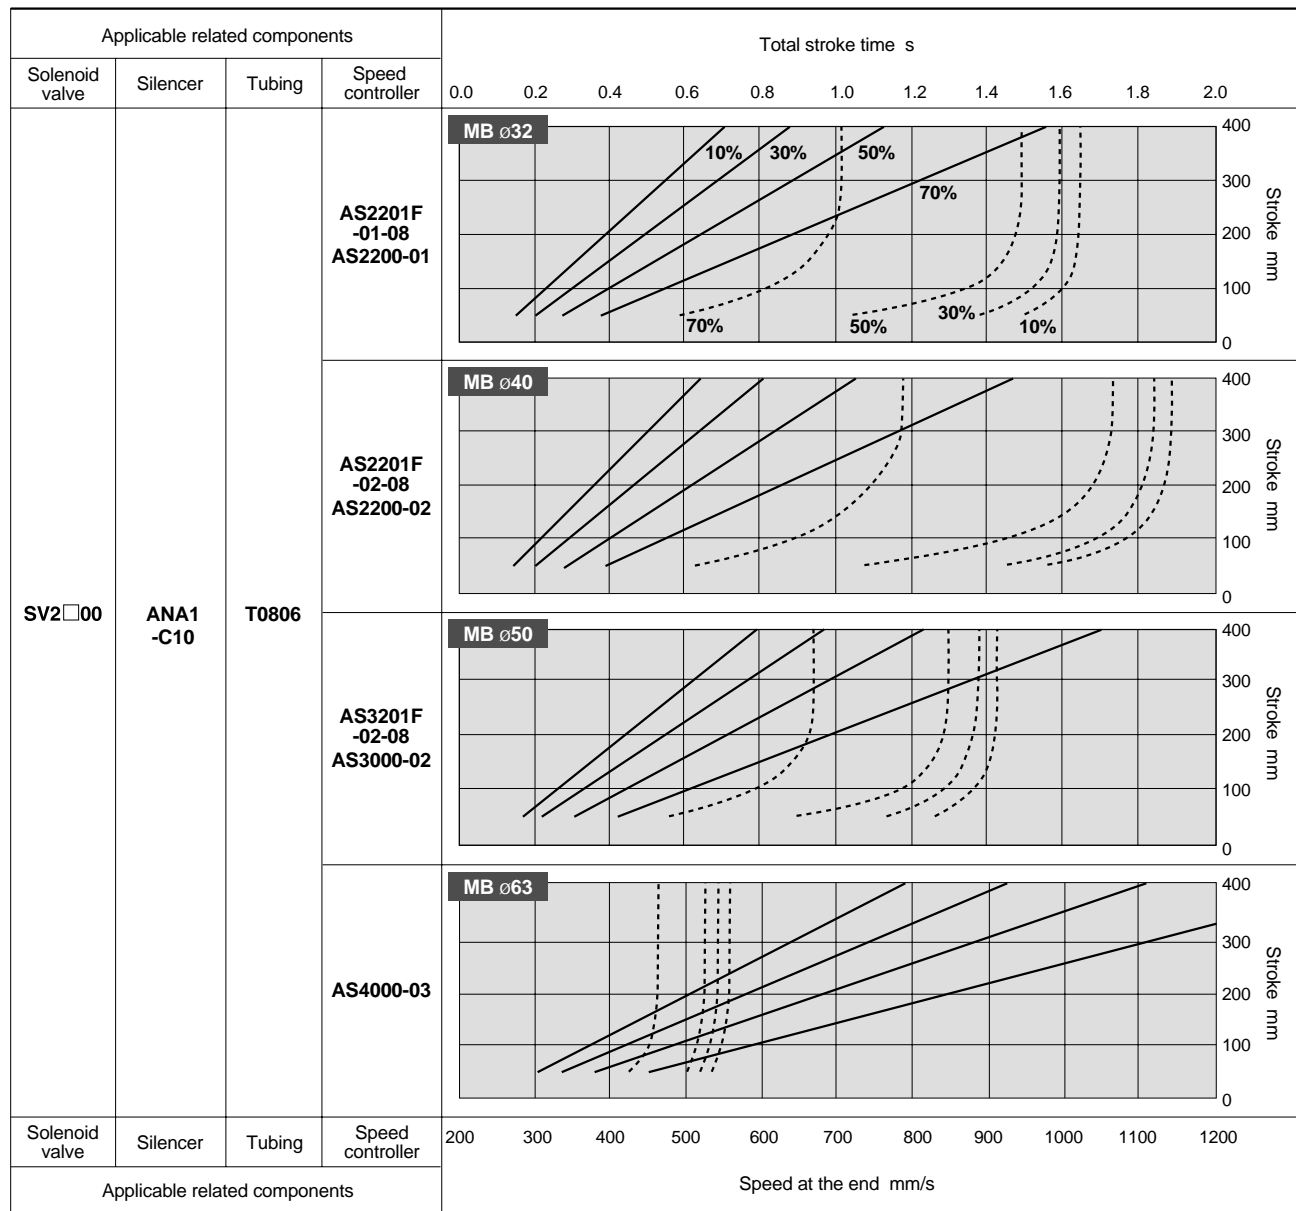Applicable bore size: $\varnothing 32$, $\varnothing 40$, $\varnothing 50$, $\varnothing 63$ 

For details regarding different conditions, make determinations after using the SMC Model Selection Program - Pneumatic Cylinder Drive Systems.


Example

Go to the chart for the bore size cylinder you are using (\varnothing). To find the stroke time (t), follow arrow ① from your stroke length ("L") to the solid line representing the load ratio ($d\%$) for the application then up to the stroke time (t). To find the ending cylinder speed (u), follow arrow ② from your stroke length ("L") to the dotted line representing the load ratio ($d\%$) then down to the ending cylinder speed (u).

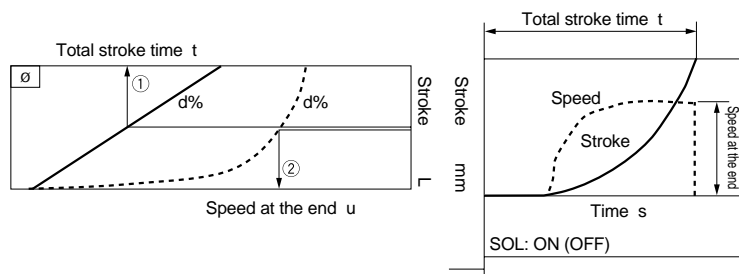

Series SV3000

Applicable bore size: $\phi 50$, $\phi 63$, $\phi 80$, $\phi 100$

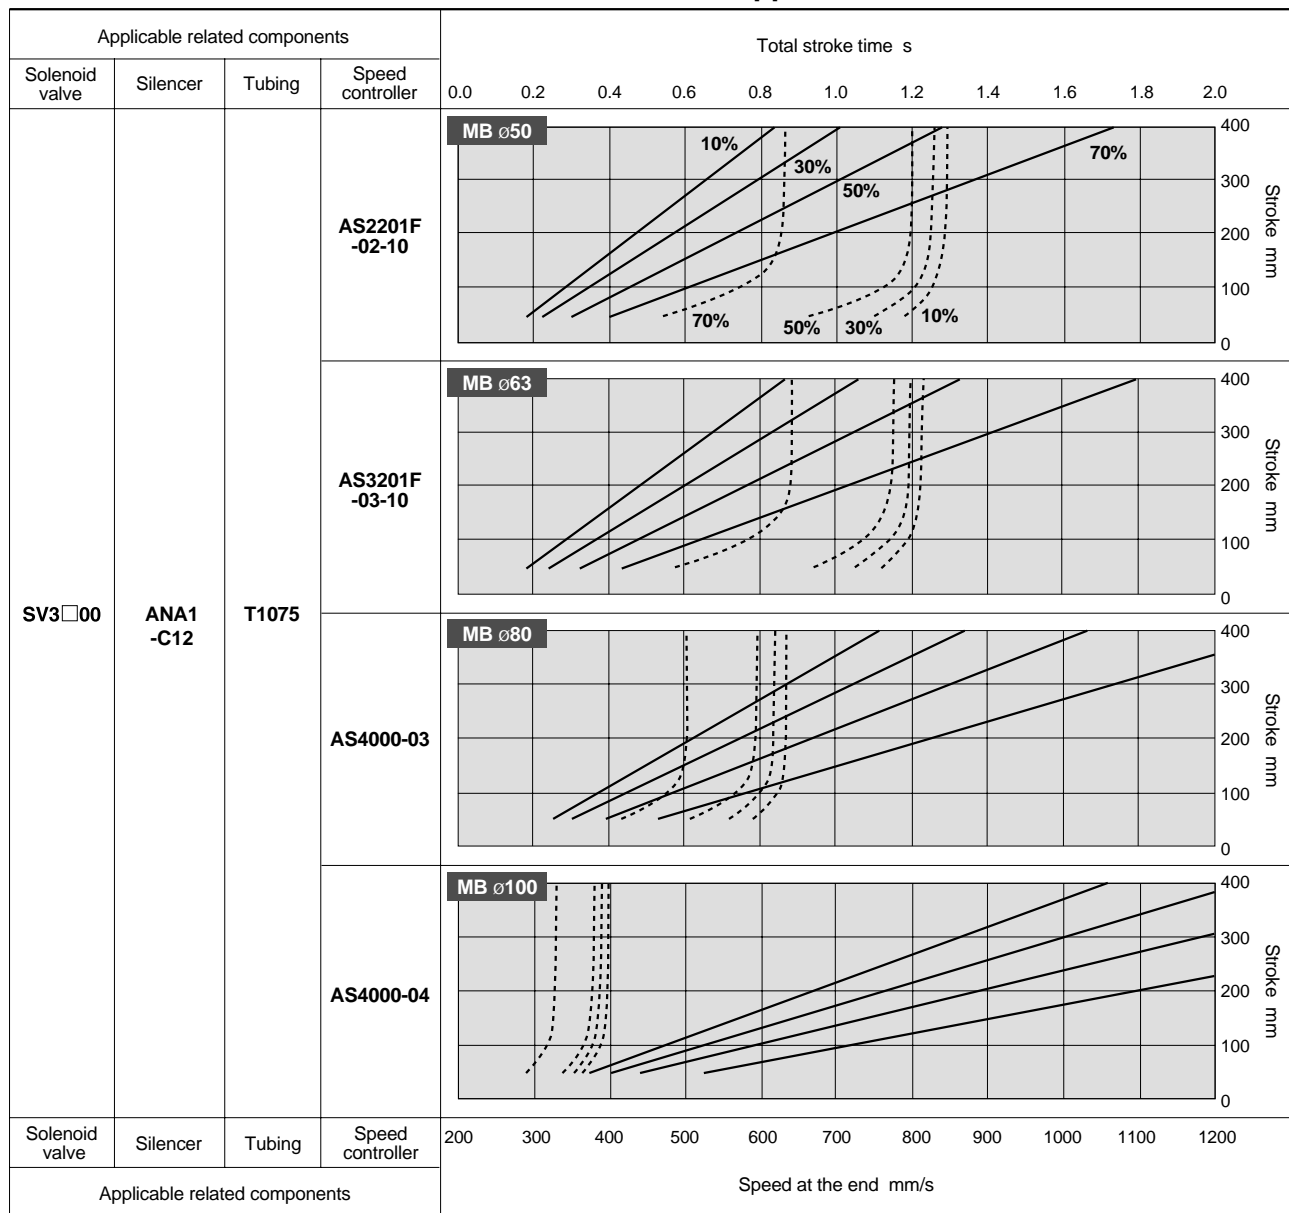

For details regarding different conditions, make determinations after using the SMC Model Selection Program - Pneumatic Cylinder Drive Systems.


Reading the graphs

These graphs show the total stroke time and speed at the end when a cylinder drive system is composed of the ideal components. The graphs above indicate the total stroke time and speed at the end with respect to various load ratios and strokes for each cylinder bore size.

Common conditions

Supply pressure	0.5MPa (72psi)
Piping length	SV1000: 1m, SV2000/3000: 2m, SV4000: 3m
Cylinder direction	Vertical upward
Speed controller	Meter-out, Directly connected to cylinder, Needle fully open
Load ratio	$\{(\text{Load weight})/(\text{Theoretical output})\} \times 100\%$

Series SV4000

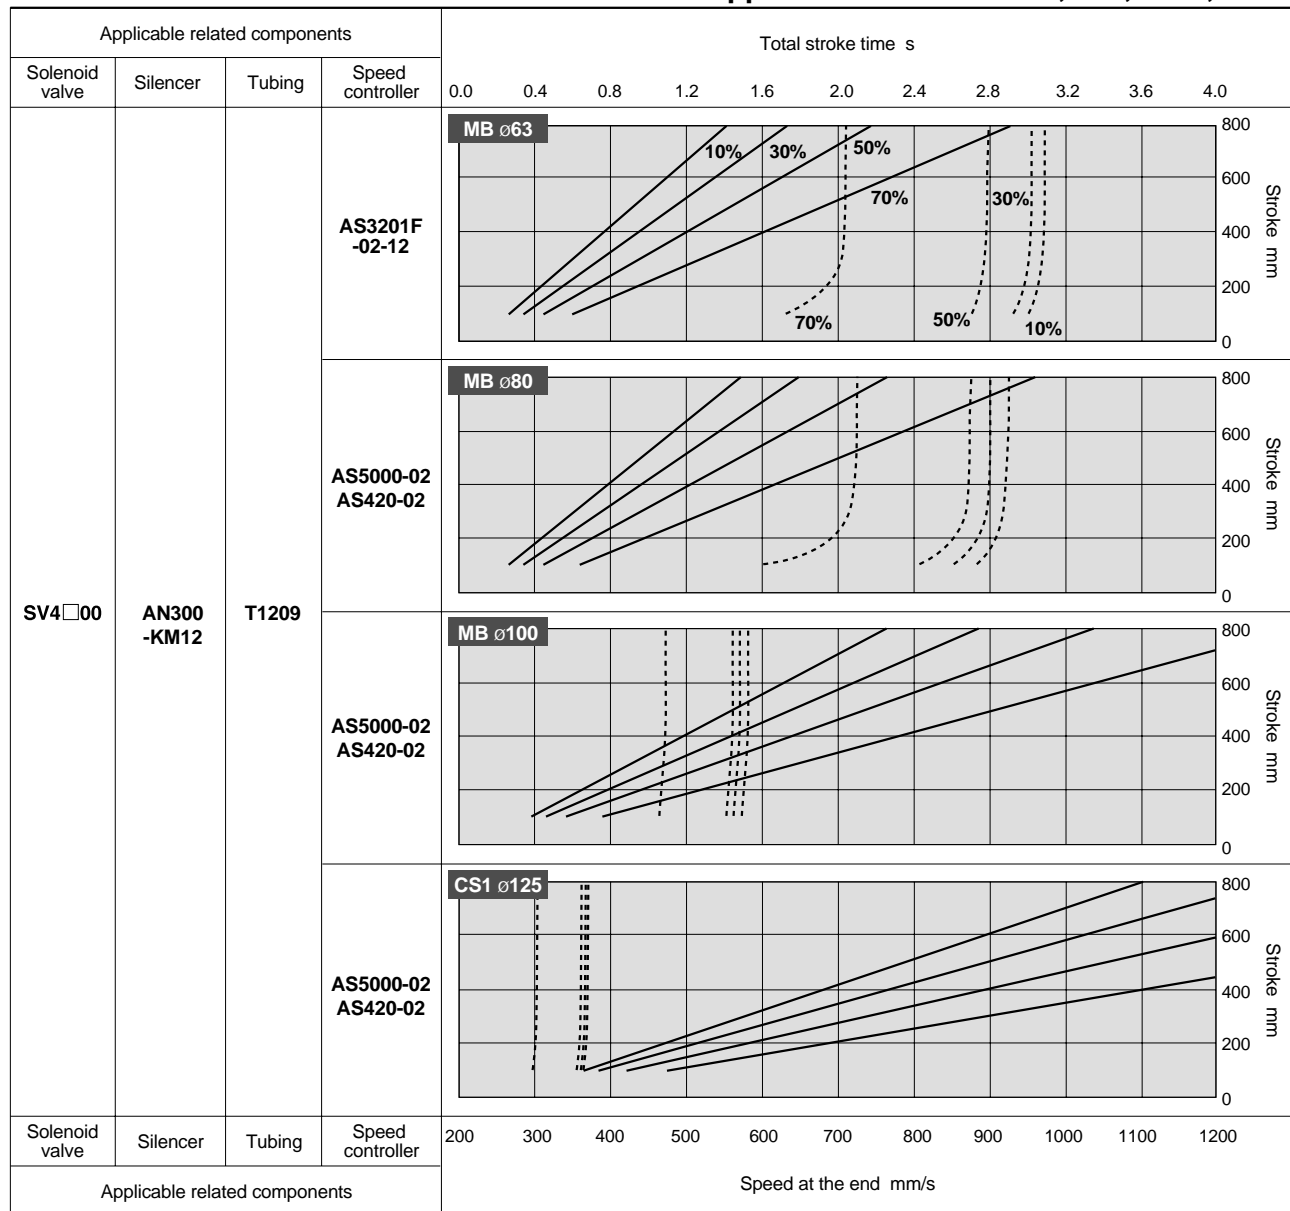Applicable bore size: $\phi 63$, $\phi 80$, $\phi 100$, $\phi 125$ 

For details regarding different conditions, make determinations after using the SMC Model Selection Program - Pneumatic Cylinder Drive Systems.

Example

Go to the chart for the bore size cylinder you are using (ϕ). To find the stroke time (t), follow arrow ① from your stroke length ("L") to the solid line representing the load ratio ($d\%$) for the application then up to the stroke time (t). To find the ending cylinder speed (u), follow arrow ② from your stroke length ("L") to the dotted line representing the load ratio ($d\%$) then down to the ending cylinder speed (u).



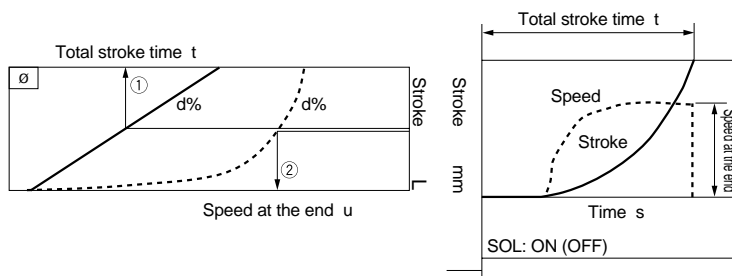




Table of Contents

Series SV Manifold Variations

Serial Wiring

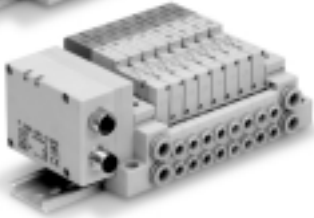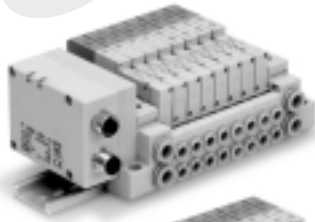

Parallel Wiring

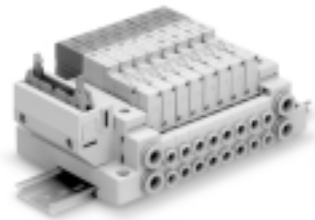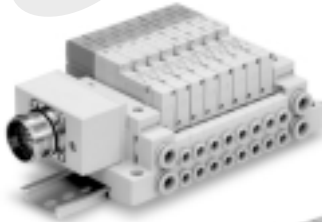

Valve Manifold Common Specifications

P. 2

Manifold specifications

Decentralized Serial Wiring

P. 5

IP67 protection

Applicable series

Cassette base manifold
SV1000/SV2000

Tie-rod base manifold
SV1000/SV2000/SV3000/SV4000

- Number of outputs: 16
- EX500 gateway communication specifications
Remote I/O, DeviceNet, Profibus

Serial Wiring with Input/Output Unit

P. 23

IP67 protection

Applicable series

Tie-rod base manifold
SV1000/SV2000/SV3000

- Number of inputs/outputs: 32 each

Serial Wiring for Dedicated Output

P. 31

Applicable series

Cassette base manifold
SV1000/SV2000

Tie-rod base manifold
SV1000/SV2000/SV3000/SV4000

- Number of outputs: 16

Circular Connector

P. 43

IP67 protection

Applicable series

Cassette base manifold
SV1000/SV2000

Tie-rod base manifold
SV1000/SV2000/SV3000/SV4000

- Number of connectors: 26 pins

D-sub Connector

P. 53

Applicable series

Cassette base manifold
SV1000/SV2000

Tie-rod base manifold
SV1000/SV2000/SV3000/SV4000

- Number of connectors: 25 pins
- MIL-C-24308
- Conforms to JIS-X-5101

Flat Ribbon Cable

P. 63

Applicable series

Cassette base manifold
SV1000/SV2000

Tie-rod base manifold
SV1000/SV2000/SV3000/SV4000

- Number of connectors: 26, 20, 10 pins
- With strain relief
- Conforms to MIL-C-83503

Valve Manifold Specifications

P. 88

Manifold exploded view
Manifold options

Single Valve/Sub-plate

P. 97

IP67 protection

Applicable series

SV1000/SV2000/SV3000/SV4000

- With waterproof M12 connector

Manifold Specification Sheets

Valve Manifold
Common
Specifications

EX500

EX250

EX120

Circular
Connector

D-sub
Connector

Flat Ribbon Cable

Valve Manifold
Specifications

Single Valve
Sub-plate

Manifold
Specification Sheets

Cassette base



- Manifold stations can be easily changed by lever operation.

Specification

Applicable series		SV1000	SV2000
Manifold type		Stacking type cassette base manifold	
1 (P: SUP)/3, 5 (E: EXH) type		Common SUP, EXH	
Valve stations (maximum)		18 stations	20 stations
Max. number of solenoids		18 points	26 points
Port size	1(P)/3, 5 (E) port	C8, N9	C10, N11
	4(A)/2(B) port	C3, C4, C6 N1, N3, N7	C4, C6, C8 N3, N7, N9

Flow Characteristics

Model	Port size		Flow characteristics					
	1, 5, 3 (P/EA/EB)	4, 2 (A/B)	1→4, 2 (P→A, B)			4, 2→5, 3 (A, B→EA, EB)		
			C[dm ³ /(s·bar)]	b	Cv	C[dm ³ /(s·bar)]	b	Cv
SS5V1-16	C8	C6	0.89	0.22	0.22	0.98	0.21	0.23
SS5V2-16	C10	C8	2.3	0.28	0.50	2.7	0.18	0.56

Note) Value is for manifold base with 5 stations and individually operated 2 position type.

Tie-rod base



- A 34 pin connector allows up to 16 stations with double solenoids.

Specification

Applicable series		SV1000	SV2000	SV3000	SV4000
Manifold type		Tie-rod base manifold			
1(P: SUP)/3, 5(E: EXH) type		Common SUP, EXH			
Valve stations (maximum)		20 stations			
Max. number of solenoids		32 points			
Port size	1(P)/3, 5(E) port	C8, N9	C10, N11	C12, N11	C12, N11, 03
	4(A)/2(B) port	C3, C4, C6 N1, N3, N7	C4, C6, C8 N3, N7, N9	C6, C8, C10 N7, N9, N11	C8, C10, C12 N9, N11, 02, 03

Flow Characteristics


Model	Port size		Flow characteristics					
	1, 5, 3 (P, EA, EB)	4, 2 (A, B)	1→4, 2(P→A, B)			4, 2→5, 3(A, B→EA, EB)		
			C[dm ³ /(s·bar)]	b	Cv	C[dm ³ /(s·bar)]	b	Cv
SS5V1-10	C8	C6	0.96	0.26	0.24	1.1	0.35	0.28
SS5V2-10	C10	C8	2.1	0.20	0.46	2.4	0.18	0.48
SS5V3-10	C12	C10	4.2	0.22	0.91	4.3	0.21	0.93
SS5V4-10	C12	C12	6.2	0.19	1.3	7.0	0.18	1.6

Note) Value is for manifold base with 5 stations and individually operated 2 position type.


Series SV Solenoid Valve Specifications

JIS symbol


2 position single solenoid




2 position double solenoid




3 position closed center




3 position exhaust center




3 position pressure center




4 position dual 3 port valve: N.C./N.C.

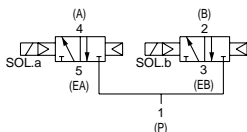

4 position dual 3 port valve: N.O./N.O.

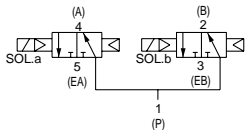

4 position dual 3 port valve: N.C./N.O.

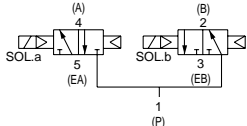

Fluid	Air	
Internal pilot operating pressure range MPa (psi)	2 position single	0.15 to 0.7 (22 to 101)
	4 position dual 3 port valve	
	2 position double	
External pilot operating pressure range MPa (psi)	3 position	0.2 to 0.7 (29 to 101)
	Operating pressure range	-100kPa to 0.7 (-14.5 to 101)
	2 position single, double	0.25 to 0.7 (36 to 101)
	3 position	
Ambient and fluid temperature °C (°F)		-10 to 50 (with no freezing)* (14 to 122)
Maximum operating frequency Hz	2 position single, double	5
	4 position dual 3 port valve	
	3 position	3
Manual override		Non-locking push type
		Slotted locking type
Pilot exhaust method	Internal pilot	Main valve/Pilot valve common exhaust
	External pilot	Pilot valve individual exhaust
Lubrication		Not required
Mounting orientation		Unrestricted
Impact/Vibration resistance ms ^x		150/30 (8.3 to 2000Hz)
Enclosure		IP67 (based on IEC529)
Rated coil voltage		24VDC, 12VDC
Allowable voltage fluctuation		±10% of rated voltage
Power consumption W		0.6 (With light: 0.65)
Surge voltage suppressor		Zener diode
Indicator light		LED

Note) Impact resistance: No malfunction when tested with a drop tester in the axial direction and at a right angle to the main valve and armature, one time each in energized and de-energized states (at initial value).

Vibration resistance: No malfunction when tested with one sweep of 8.3 to 2000Hz in the axial direction and at a right angle to the main valve and armature, in both energized and de-energized states (at initial value).

* Refer to page 102.

Response time

Type of actuation	Response time ms at 0.5MPa (72.5psi)			
	SV1000	SV2000	SV3000	SV4000
2 position single	11 or less	25 or less	28 or less	40 or less
2 position double	10 or less	17 or less	26 or less	40 or less
3 position	18 or less	29 or less	32 or less	82 or less
4 position dual 3 port valve	15 or less	33 or less	—	—

Note) Based on JISB8375-1981 dynamic performance test (with coil temperature of 20°C, at rated voltage).

Weights


Series	Type of actuation	Weight g (lbs)
SV1000	Single solenoid	66 (.14)
	Double solenoid	71 (.15)
	3 position	73 (.16)
	4 position dual 3 port	71 (.15)
SV2000	Single solenoid	74 (.163)
	Double solenoid	78 (.17)
	3 position	83 (.18)
	4 position dual 3 port	78 (.17)
SV3000	Single solenoid	99 (.21)
	Double solenoid	102 (.22)
	3 position	110 (.24)
SV4000	Single solenoid	186 (.41)
	Double solenoid	190 (.42)
	3 position	211 (.46)

Note) Weights of solenoid valve only.

Decentralized Serial Wiring

Series EX500

IP67 protection

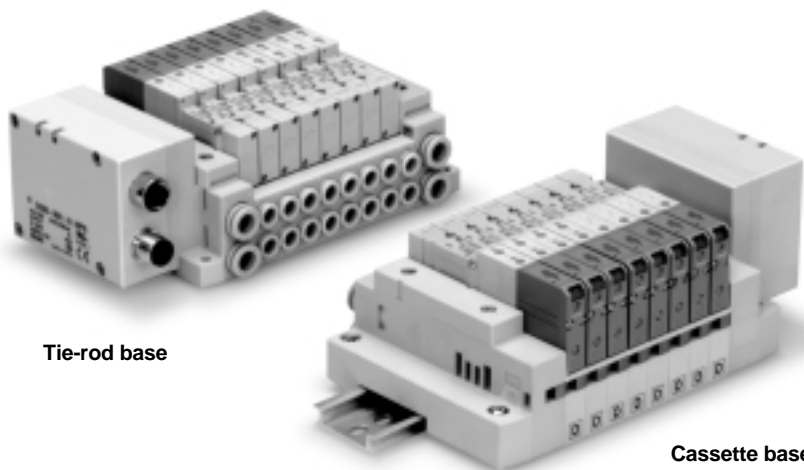

Tie-rod base


Cassette base


Applicable series	Cassette base manifold SV1000/SV2000
	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	<ul style="list-style-type: none">• Number of outputs: 16• EX500 gateway unit communication specifications Remote I/O, DeviceNet, PROFIBUS-DP

Series EX500 Decentralized Serial System Configuration

A configuration of series EX500 serial system with series SV is shown below.

- One gateway unit can be configured with manifold valves (outputs) and input unit manifolds (inputs) for up to 16 inputs and outputs per branch, with a maximum of four branches. (Maximum of 64 outputs and 64 inputs)

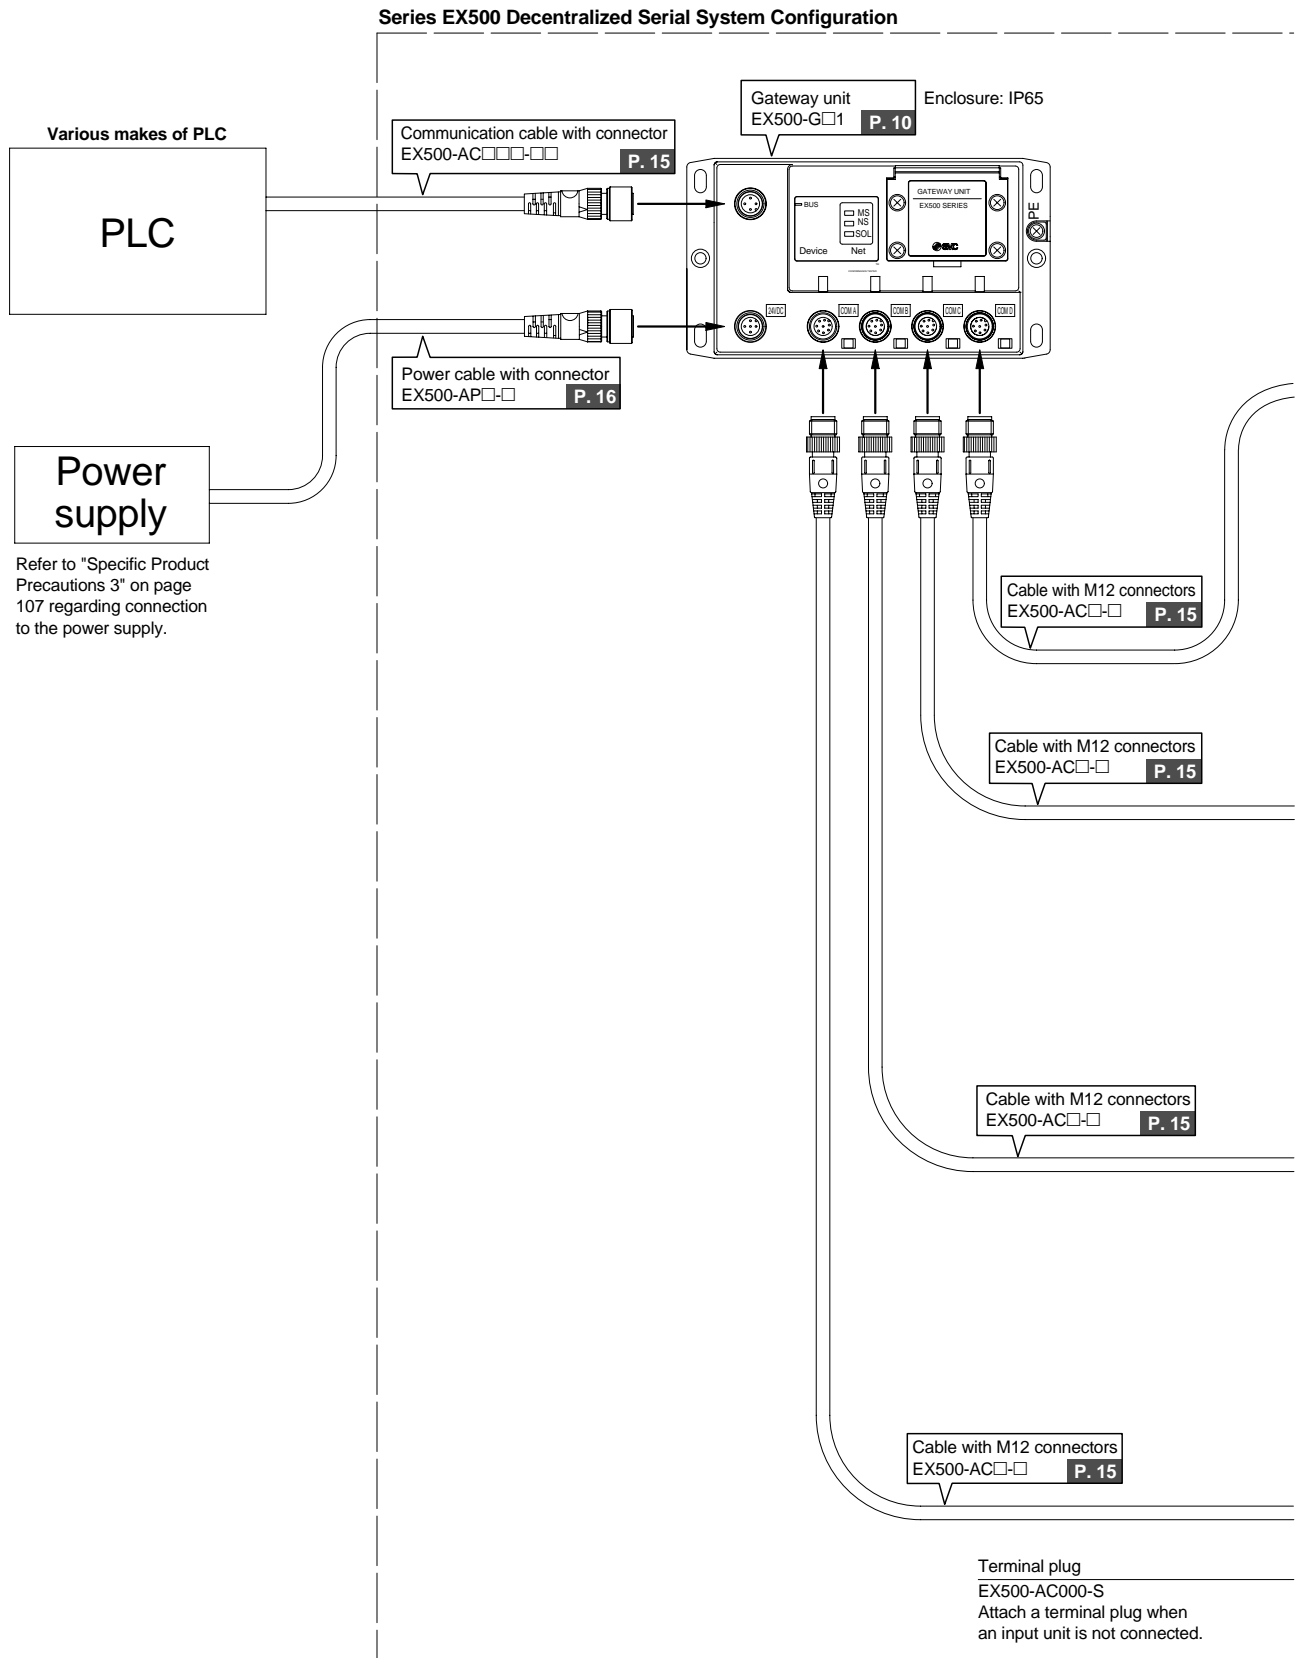

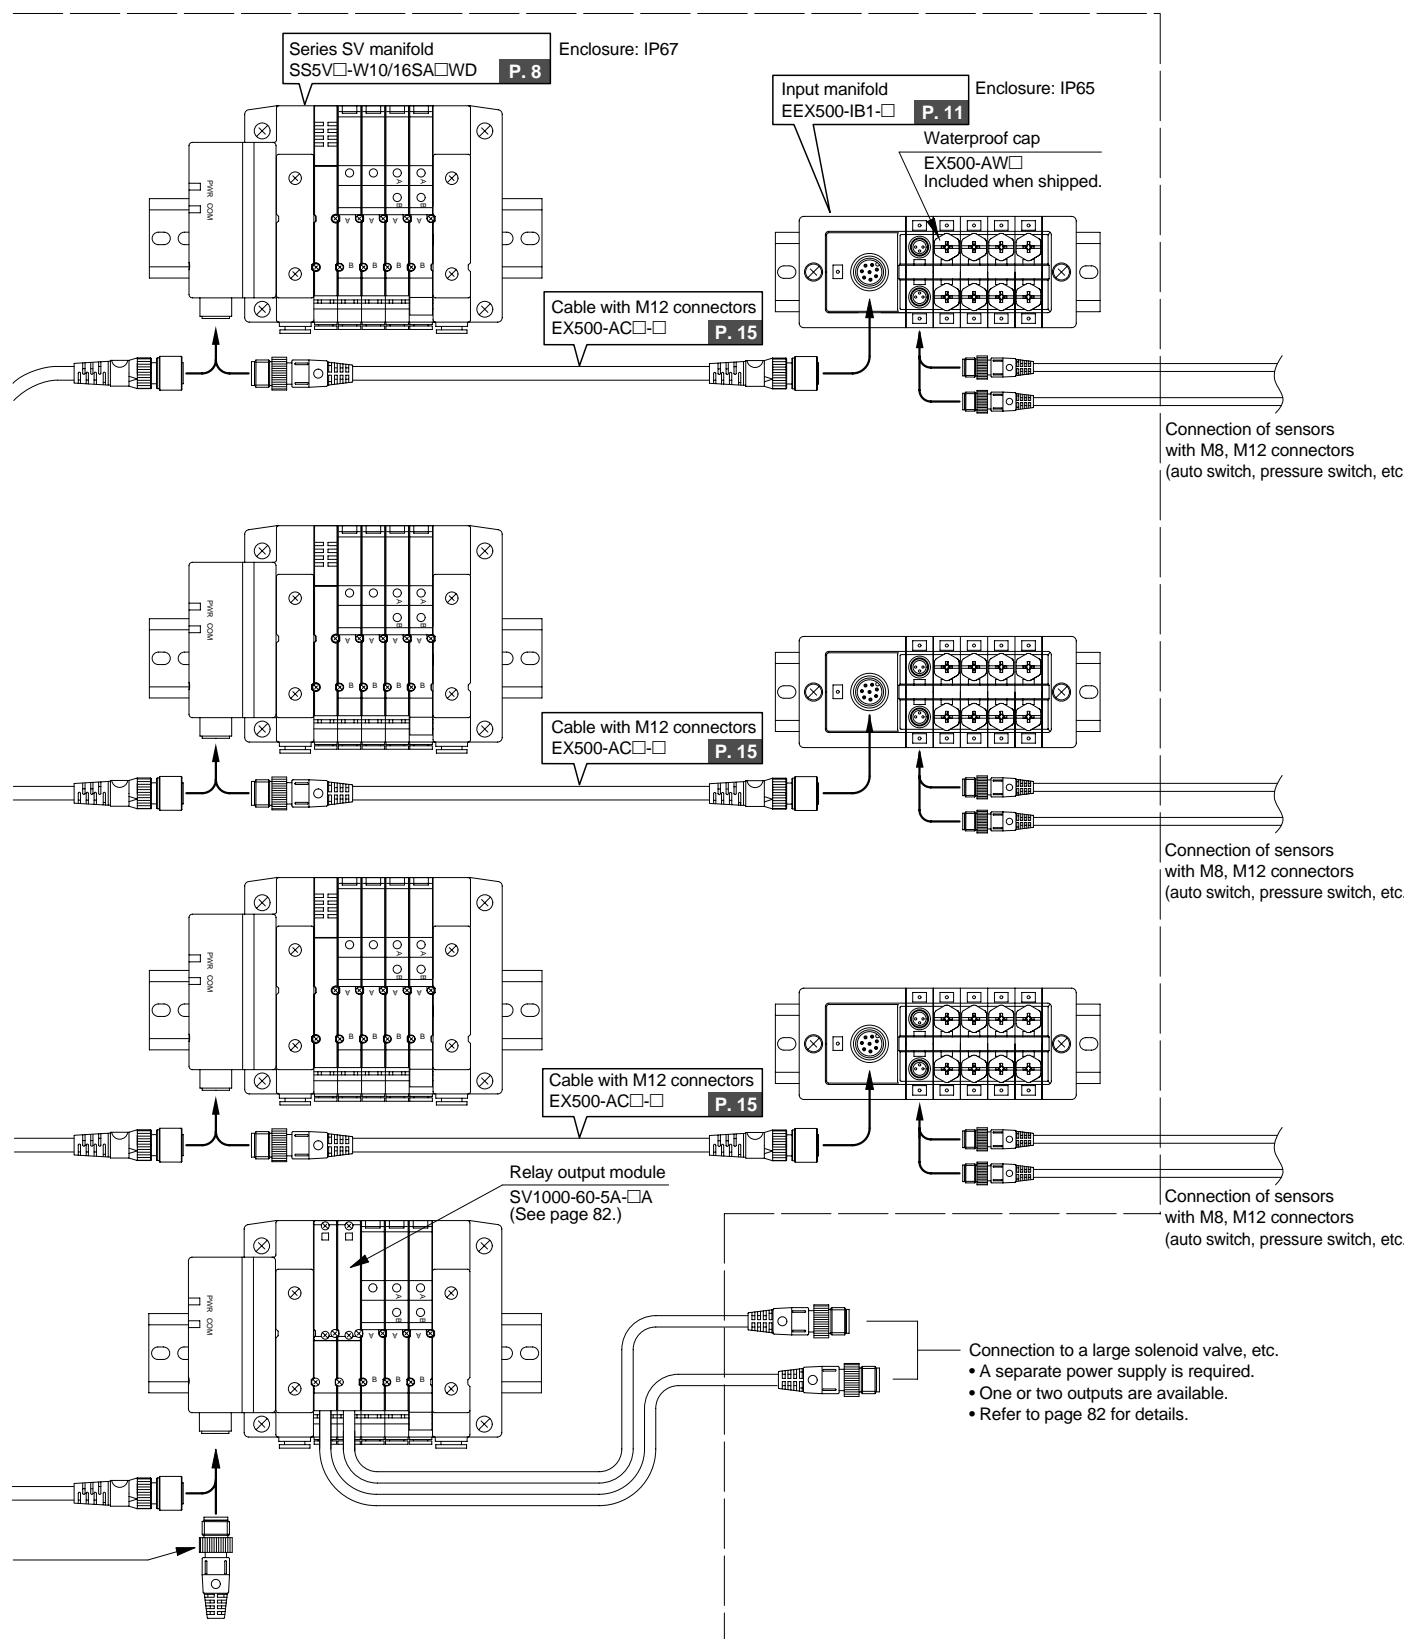

How to Order

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Tie-rod base

Cassette base

Mounting

Nil	Direct mount
D	DIN rail mount (with DIN rail)
D0 (Note)	DIN rail mount (without DIN rail)
D3	For 3 stations
...	...
D16	For 16 stations

Note) In case of D0, only DIN rail fittings are attached.

SI unit specification

A1W	For remote I/O
A2W	For DeviceNet/PROFIBUS-DP
0	Without SI unit

Valve stations

Symbol	Stations	Note
02	2 stations	Double wiring specification
...	...	
08	8 stations	Specified layout (Up to 16 solenoids possible.)
02	2 stations	
...	...	
16	16 stations	

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet. (Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

P, E port position

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

Supply/Exhaust block assembly specification

Nil	Internal pilot specification
S*	Internal pilot/Built-in silencer
R	External pilot specification
RS*	External pilot/Built-in silencer

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

DIN rail length

Nil	Standard length
3	For 3 stations
...	...
16	For 16 stations

A, B port size (metric)

Symbol	A, B port	P, E port	Applicable series	
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting	ø10 One-touch fitting	SV2000	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV3000	
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV4000	
C10	ø10 One-touch fitting			
C8	ø8 One-touch fitting			
C10	ø10 One-touch fitting			
C12	ø12 One-touch fitting			
02	Rc 1/4	Rc 3/8		
03	Rc 3/8			
02F	G 1/4	G 3/8		
03F	G 3/8			
M	A, B ports mixed			

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series	
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000	
N3	ø5/32" One-touch fitting			
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV2000	
N3	ø5/32" One-touch fitting			
N7	ø1/4" One-touch fitting			
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV3000	
N7	ø1/4" One-touch fitting			
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV4000	
N11	ø3/8" One-touch fitting			
N9	ø5/16" One-touch fitting			
N11	ø3/8" One-touch fitting	NPT 3/8		
02N	NPT 1/4			
03N	NPT 3/8	NPTF 3/8		
02T	NPTF 1/4			
03T	NPTF 3/8			
M	A, B ports mixed			


* In case of mixed specification (M), indicate separately on a manifold specification sheet.

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold

SS5V1-W16SA1WD-06B-C6 (1 set)

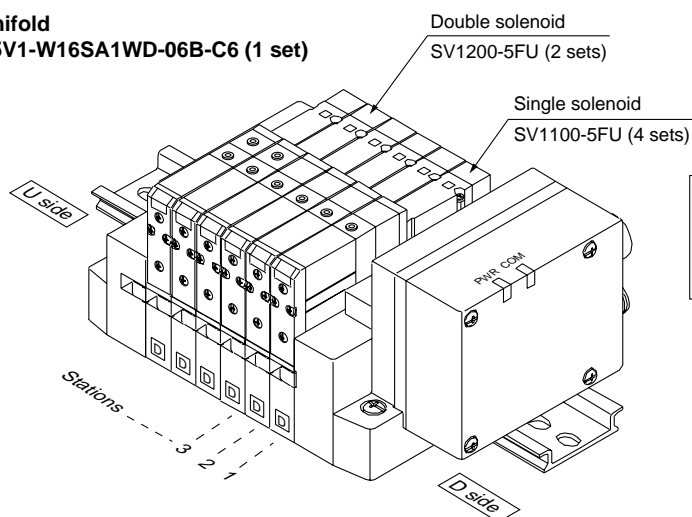

SS5V1-W16SA1WD-06B-C6 1 set (manifold part no.)

* SV1100-5FU 4 sets (single solenoid part no.)

* SV1200-5FU 2 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 0 0 — 5 F

Note) Available with manifold block for station additions. Refer to pages 77 and 81.

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Back pressure check valve

Nil	None
K	Built-in


* Built-in back pressure check valve type is applicable to series SV1000 only.

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

Manual override

Nil: Non-locking push type D: Slotted locking type

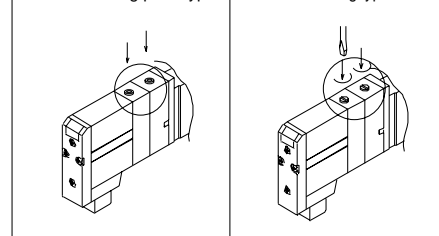

Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

Rated voltage

5	24VDC
---	-------

Gateway (GW) Unit



Specifications

Model	EX500-GAB1-X1	EX500-GDN1	EX500-GPR1
Applicable PLC/Communication protocol	Rockwell Automation PLC	DeviceNet Release 2.0	PROFIBUS-DP
Communication speed	57.6Kbit/sec, 115.2Kbit/sec 230.4Kbit/sec	125Kbit/sec, 250Kbit/sec 500Kbit/sec	9.6/19.2/93.75/187.5/500Kbit/sec 1.5/3/6/12Mbit/sec
Rated voltage	24VDC		
Power supply voltage range	Input and control unit power supply: 24VDC ±10% Solenoid valve power supply: 24VDC +10%/–5% (power drop warning at approx. 20V)		
Current consumption	200mA or less		
Number of inputs/outputs	Maximum 64 inputs/64 outputs		
Number of input/output branches	4 branches (16 inputs/16 outputs per branch)		
Branch cable	8 core heavy duty cable		
Branch cable length	5m or less (total extension 10m or less)		
Communication connector	M12 connector (8 pins, socket)		
Power connector	M12 connector (5 pins, plug)		
Ambient operating temperature/humidity	+5°C to +45°C/35% to 85%RH (no condensation)		
Enclosure	IP65		
Applicable standard	UL, CSA, CE		
Weight g	470		

* Communication cables and connectors are sold separately.
Refer to options on page 15.

How to Order

EX500 — G **DN** 1


Communication protocol

DN	DeviceNet
PR	PROFIBUS-DP
AB	Remote I/O (RIO)

Applicable GW unit

Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

Dimensions

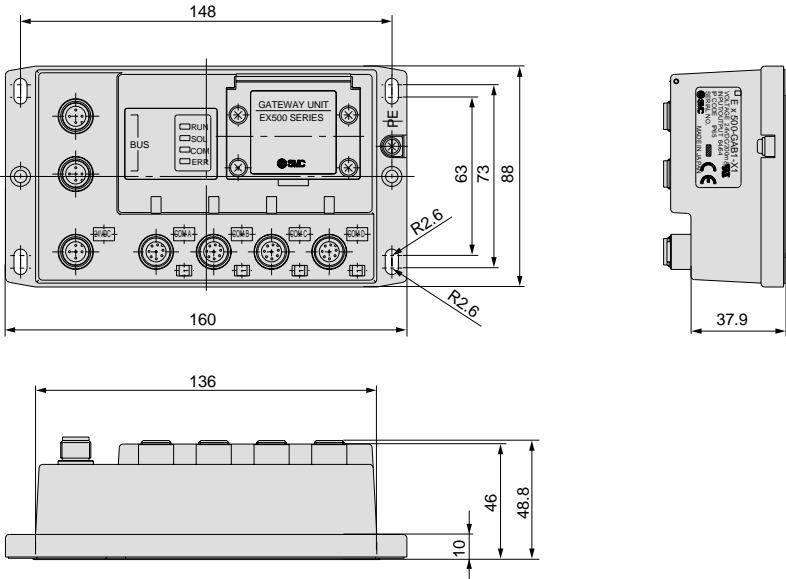

How to Order Input Manifolds

How to Order Input Blocks

Input unit
manifold

EEX500—IB1—E 8

Input unit specification

Connector type

E	M8 connector
T	M12 connector
M	M8, M12 mixed

Stations

1	1 station
...	...
8	8 stations

Applicable GW unit

Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

EX500 — IE 1

Block type

1	M8 connector, PNP specification
2	M8 connector, NPN specification
3	M12 connector, PNP specification
4	M12 connector, NPN specification
5	8 point integrated type, M8 connector, PNP specification
6	8 point integrated type, M8 connector, NPN specification

Applicable GW unit

Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

Input Unit Specifications


Connection block	Current source type input block (PNP input block) or Current sink type input block (NPN input block)
Communication connector	M12 connector (8 pins, plug)
Number of connection blocks	Maximum 8 blocks
Block supply voltage	24VDC
Block supply current	0.65A maximum
Current consumption	100mA or less (at rated voltage)
Short circuit protection	Operates at 1ATyp. (power supply cut) GW unit reset by turning power OFF and back ON.
Enclosure	IP65
Weight g (lbs) ^{Note)}	100 (Input unit + End block) (.22)

Note) Since the DIN rail weight is not included, confirm the DIN rail length being used on page 13, and add the weight found in the DIN rail dimension table on page 85.


Input Block Specifications

Applicable sensor	Current source type (PNP output) or Current sink type (NPN output)
Sensor connector	M8 connector (3 pins) or, M12 connector (4 pins)
Number of inputs	2 inputs/8 inputs (M8 only)
Rated voltage	24VDC
Indication	Green LED
Insulation	None
Sensor supply current	Maximum 30mA/Sensor
Enclosure	IP65
Weight g	[For M8: 20] [For M12: 40] [8 point integrated type, for M8: 55]



How to Order Input Unit Manifolds [Order Example]

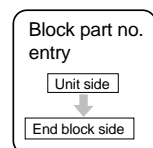



Example 1) M8 input block only

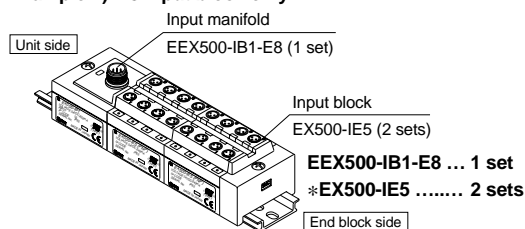

Example 2) M12 input block only

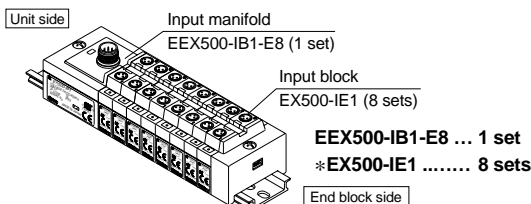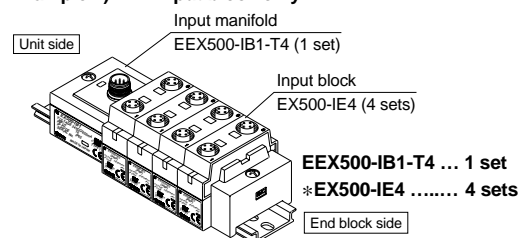


Example 3) M8 and M12 mixed

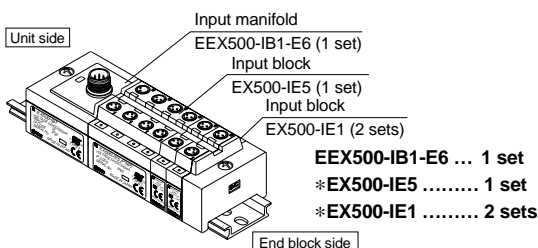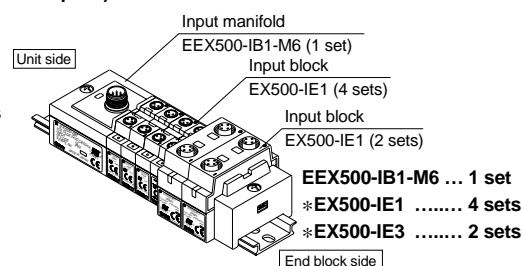

Note) • Since the 8 point integrated type input block is equivalent to the length of four stations on an M8 input block, pay attention to the number of stations on an input manifold.

• When an input block layout becomes complicated, indicate on an input unit manifold specification sheet.

Input Unit Manifold Exploded View

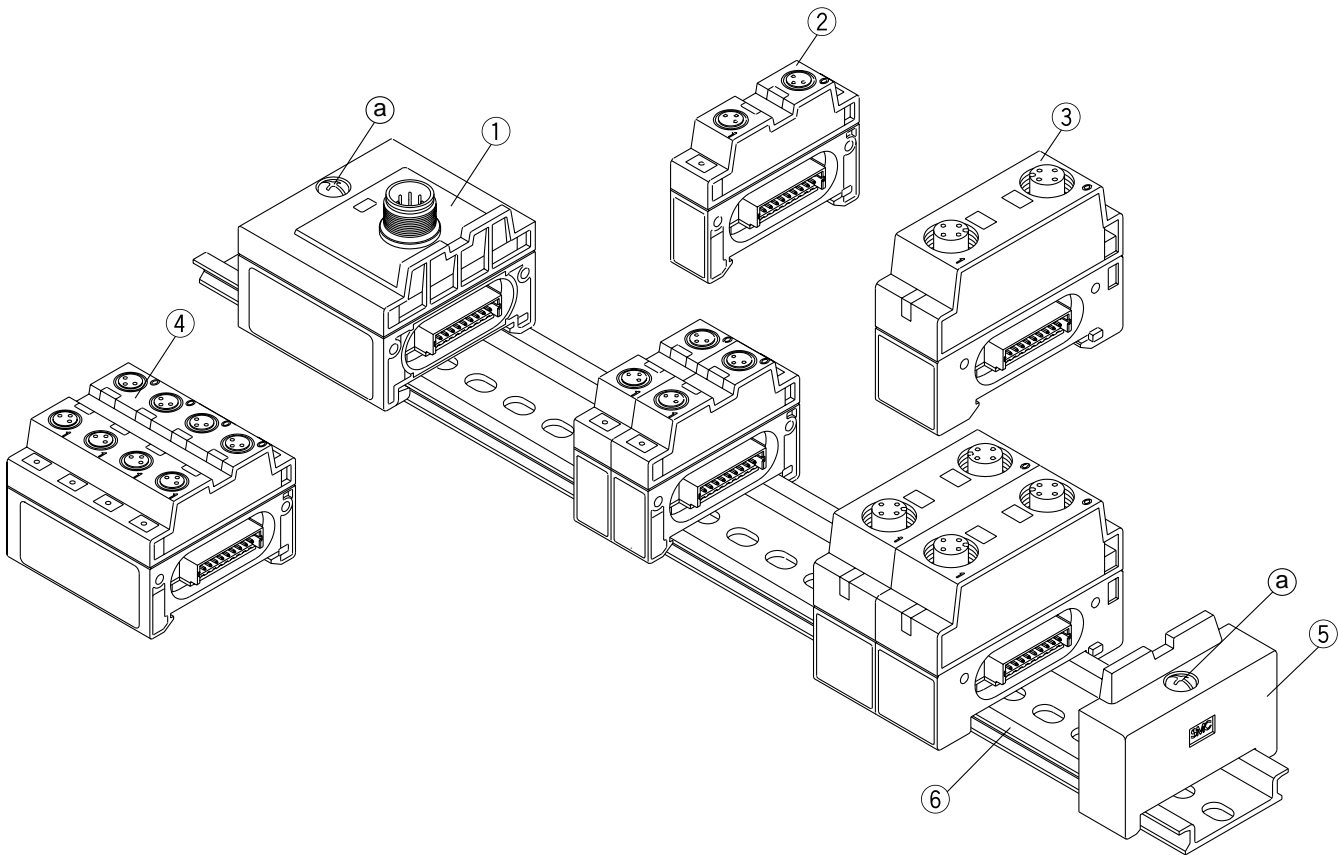

Parts list

No.	Description	Part no.		Note
		For standard	For RIO	
1	Input unit	EX500-IB1	EX500-IB1-X1	
2	Input block (M8 connector)	EX500-IE□	EX500-IE□-X1	PNP specifications ... □: 1, NPN specifications ... □: 2
3	Input block (M12 connector)	EX500-IE□	EX500-IE□-X1	PNP specifications ... □: 3, NPN specifications ... □: 4
4	8 input block (M8 connector)	EX500-IE□	EX500-IE□-X1	PNP specifications ... □: 5, NPN specifications ... □: 6
5	End block	EX500-EB1		
6	DIN rail	VZ1000-11-1-□		□: Length (Refer to page 85.)


How to add input block stations

- 1
- Loosen the screws (a) (2 places) that are holding the end blocks.
- 2
- Separate the blocks at the locations where stations are to be added.
- 3
- Attach the additional blocks to the DIN rail, and connect the blocks so that they fit together securely.
- 4
- While holding the blocks together so that there are no gaps between them, secure them to the DIN rail by tightening the screws (a).
- Note: Be sure to tighten the screws with the prescribed tightening torque. (0.6N·m)

Input Unit Manifold Dimensions


Input block (M8) only

1in = 25.4mm

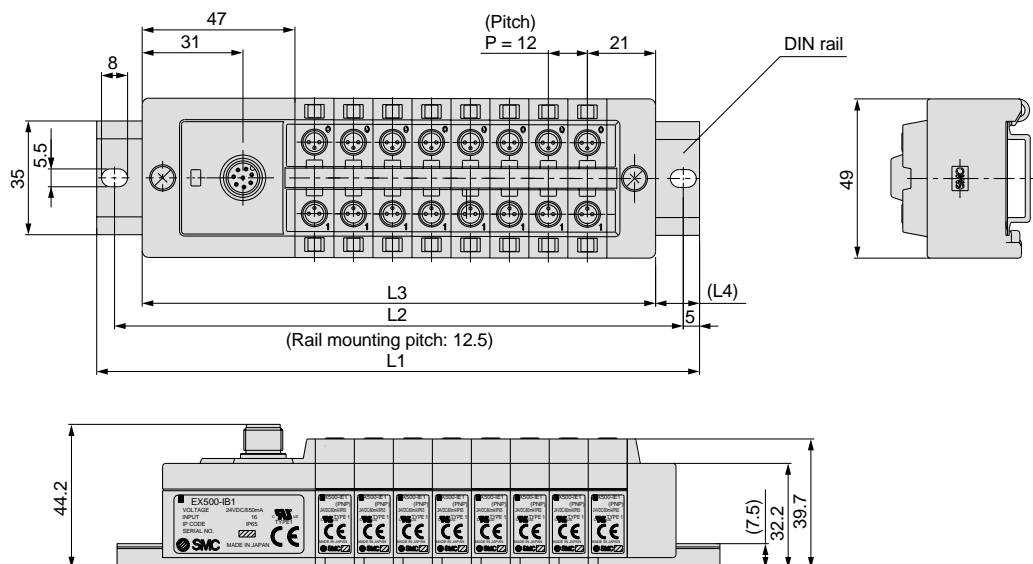

	(mm)							
Stations	1	2	3	4	5	6	7	8
Rail length L1	98	110.5	123	135.5	148	160.5	173	185.5
Mounting pitch L2	87.5	100	112.5	125	137.5	150	162.5	175
Manifold length L3	74	86	98	110	122	134	146	158
L4	12	12	12.5	12.5	13	13	13.5	13.5

Input block (M12) only

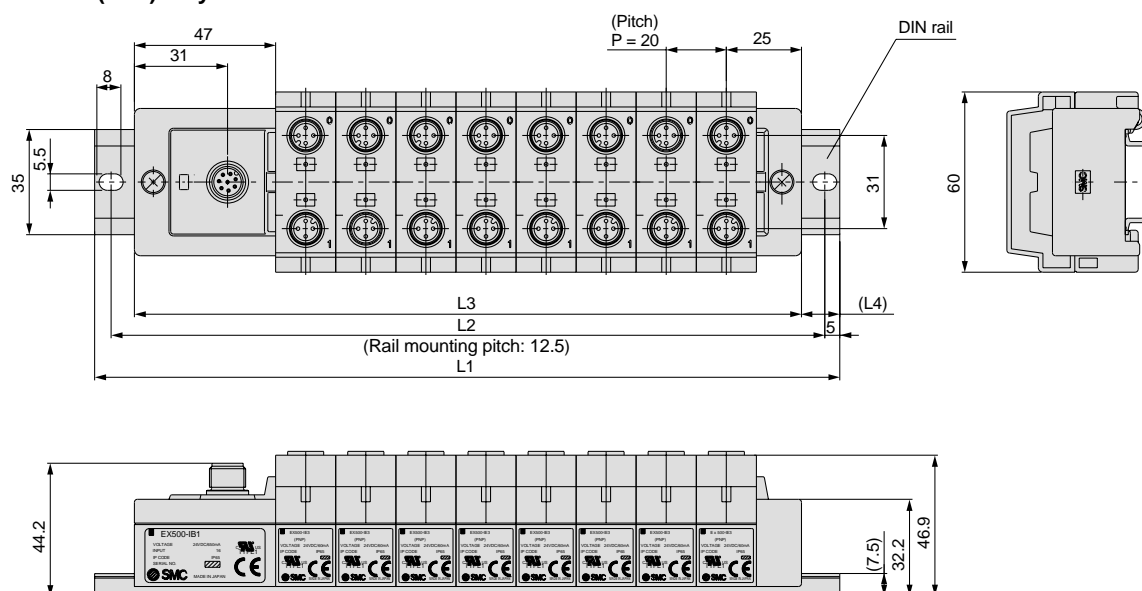

	(mm)							
Stations	1	2	3	4	5	6	7	8
Rail length L1	110.5	123	148	173	185.5	210.5	223	248
Mounting pitch L2	100	112.5	137.5	162.5	175	200	212.5	237.5
Manifold length L3	82	102	122	142	162	182	202	222
L4	12	12	12.5	12.5	13	13	13.5	13.5



Refer to page 3 for valve specifications.

How to Order SI Unit

EX500 – S001




● Applicable GW unit

Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

Specifications

Connection block	Solenoid valve (single, double) Relay output module (1 output, 2 outputs)
Communication connector	M12 connector (8 pins, plug, socket)
Connection block stations	Double solenoid valve Relay output module (2 points): Maximum 8 stations Single solenoid valve Relay output module (1 point): Maximum 16 stations
Block supply voltage	24VDC
Block supply current	0.65A maximum
Current consumption	100mA or less (at rated voltage)
Weight g (lbs)	115 (.25)


Options

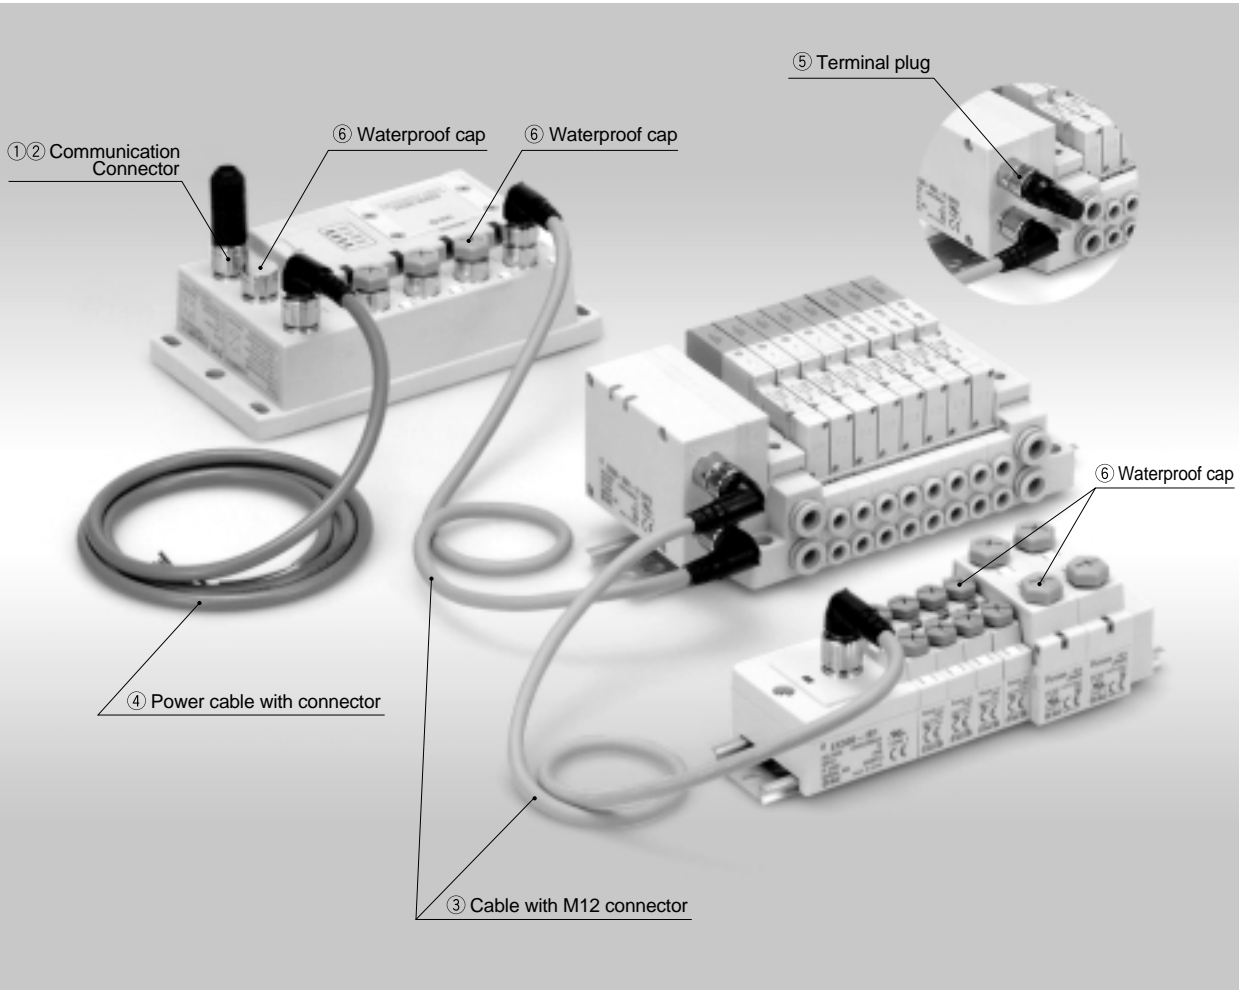

Options

① Communication connector (for RIO type GW unit)

EX500 — AC000 — AB

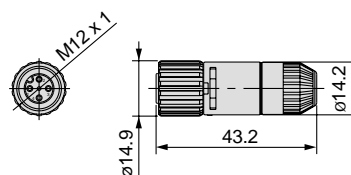



Compatible cable size
ø6 (ø5 to ø6)

② Communication connector cable (for DeviceNet type GW unit)

EX 500 — AC 050 — DN

Cable length (/)

010	1m (3.24ft)
050	5m (17.20ft)

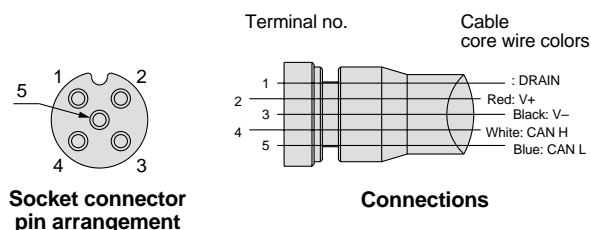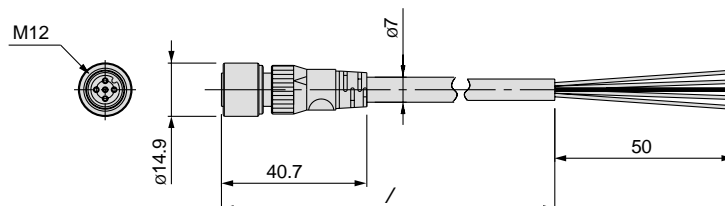

③ Cable with M12 connector



EX500 — AC 030 — SSPS

Cable length (/)



003	0.3m (.97ft)
005	0.5m (1.62ft)
010	1m (3.24ft)
030	3m (9.72ft)
050	5m (16.2ft)

Connector specification

SSPS	Socket side: Straight, Plug side: Straight
SAPA	Socket side: Angle, Plug side: Angle

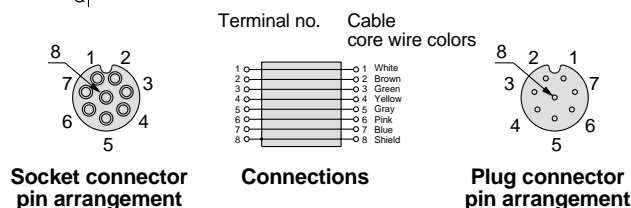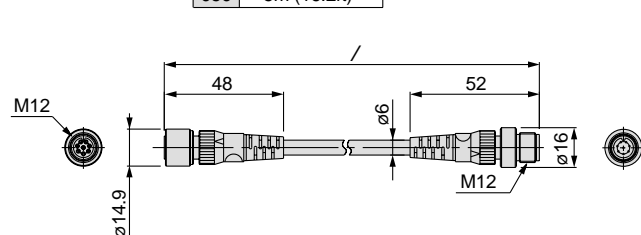

Straight connector type

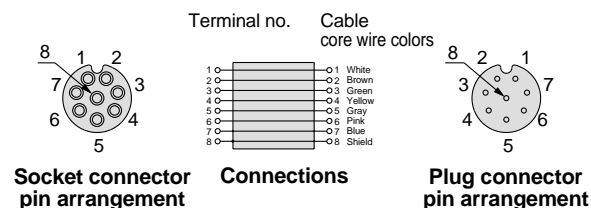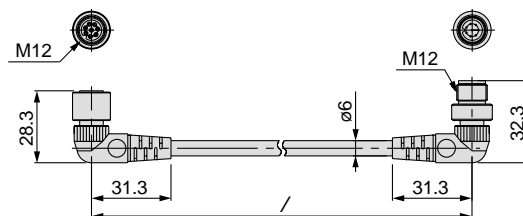

Angle connector type

Options

1in = 25.4mm

④ Power cable with connector


EX500 — AP 050 — S

Cable length (/)


010	1m (3.24ft)
050	5m (16.2ft)

Connector specifications

S	Straight
A	Angle

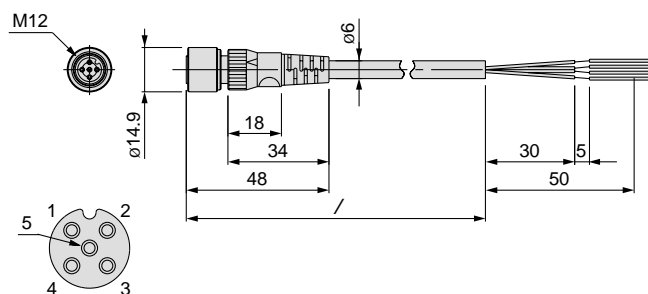


Socket connector pin arrangement

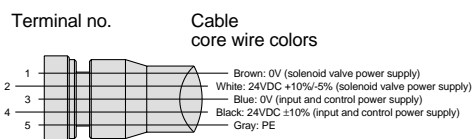


Connections

Straight connector type

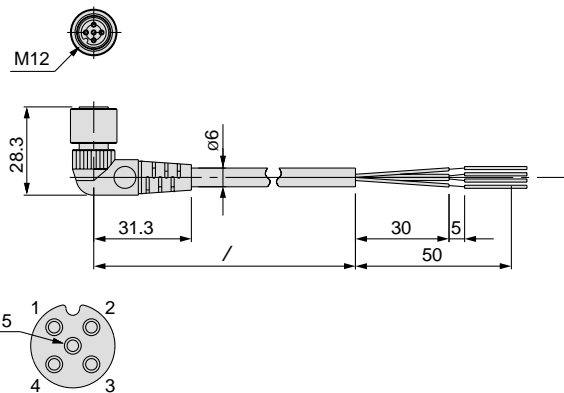

Socket connector pin arrangement

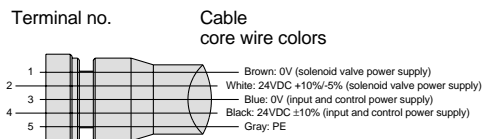


Connections

Angle connector type

⑤ Terminal plug

This is used where an input manifold (input unit/input block) is not being used.
(If a terminal plug is not used, the GW unit's COM LED will not light up.)

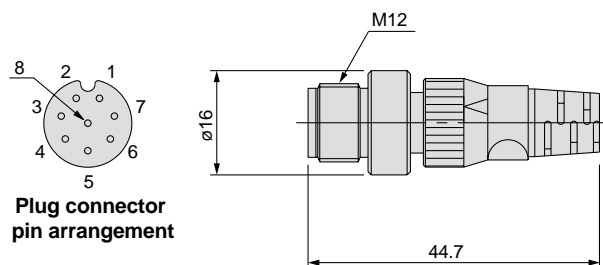EX500 — AC000 — S

Plug connector pin arrangement

⑥ Waterproof cap


Use this on ports that are not being used for a GW unit or input block.
Use of this waterproof cap maintains the integrity of the IP65 enclosure.
(Included with each input block.)

Note) Tighten the waterproof cap with the prescribed tightening torque. (For M8: 0.05N·m, For M12: 0.1N·m)

EX500 — AW

Connector type

ES	M8 connector (for socket)
TP	M12 connector (for plug)
TS	M12 connector (for socket)




Waterproof cap

Dimensions: Series SV1000 for EX500 Decentralized Serial Wiring




1in = 25.4mm

• Cassette base manifold: **SS5V1-W16SA□WD** - Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (S, R, RS) - $\begin{matrix} C3, N1 \\ C4, N3 \\ C6, N7 \end{matrix}$

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

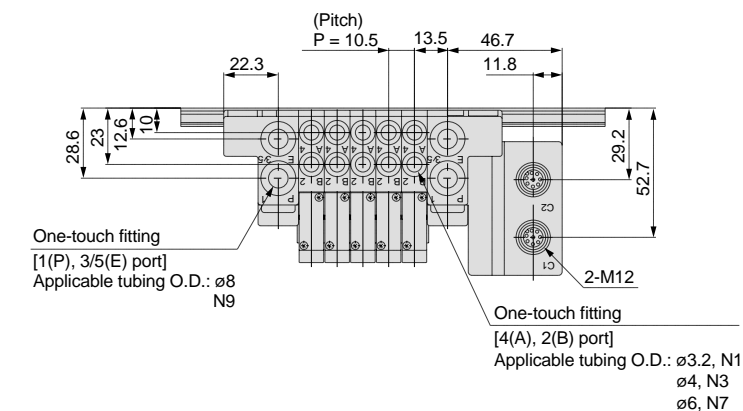

With external pilot specification

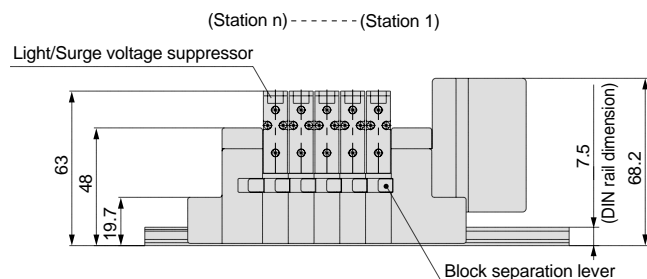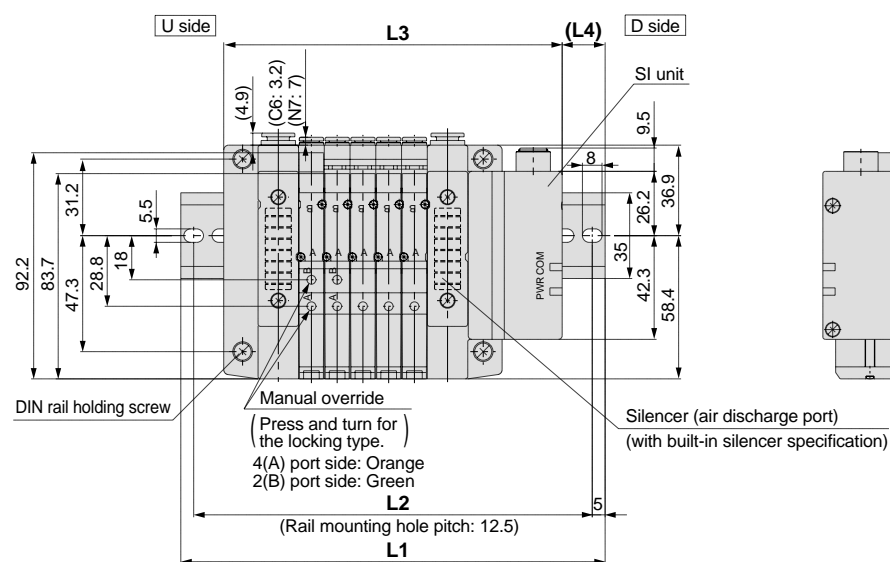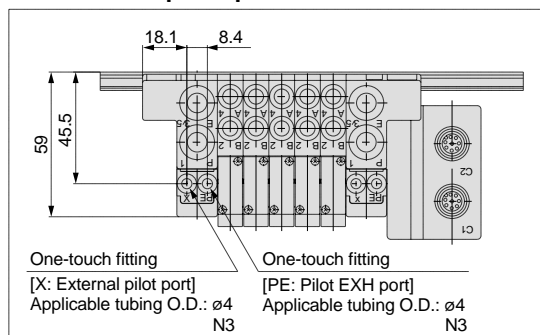

L dimensions

n: Stations


n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5
L2	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275
L3	106.5	117	127.5	138	148.5	159	169.5	180	190.5	201	211.5	222	232.5	243	253.5
L4	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16

Dimensions: Series SV2000 for EX500 Decentralized Serial Wiring





• Cassette base manifold: **SS5V2-W16SA** ☐ **WD** - Stations $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ (**S, R, RS**) - $\begin{matrix} \text{C4, N3} \\ \text{C6, N7} \\ \text{C8, N9} \end{matrix}$

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

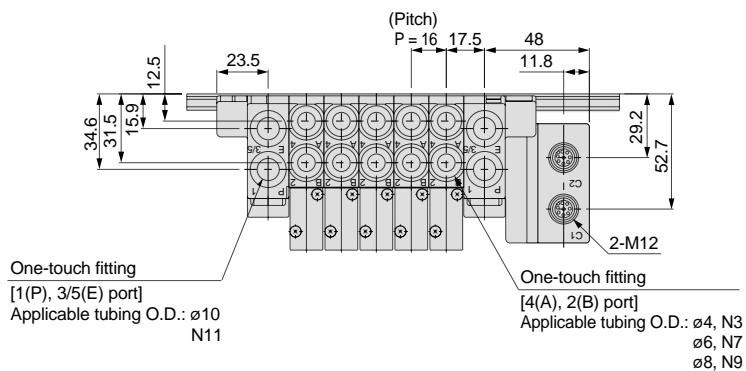

With external pilot specification

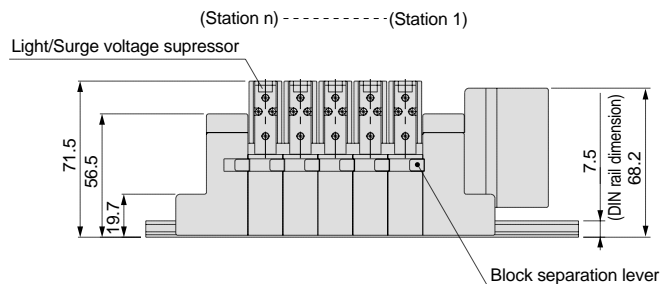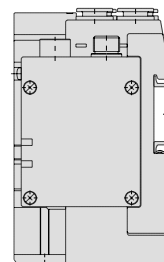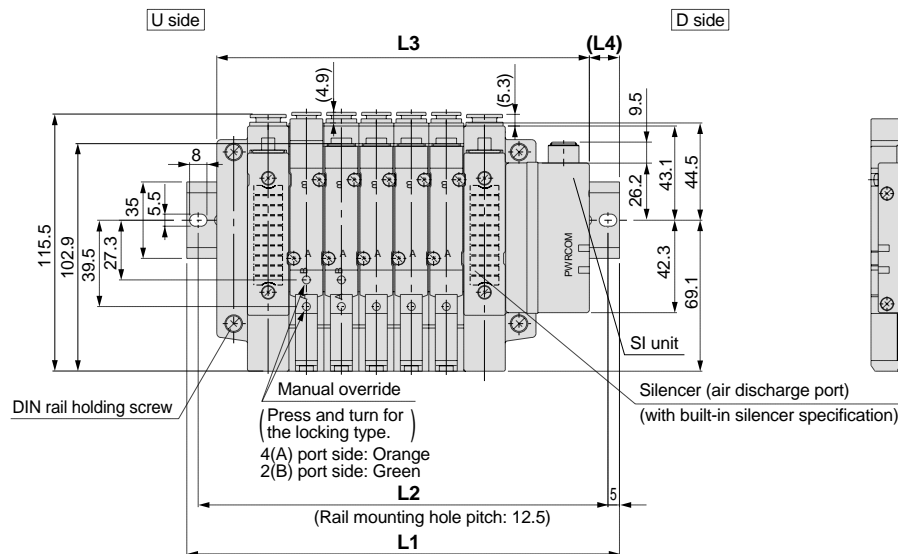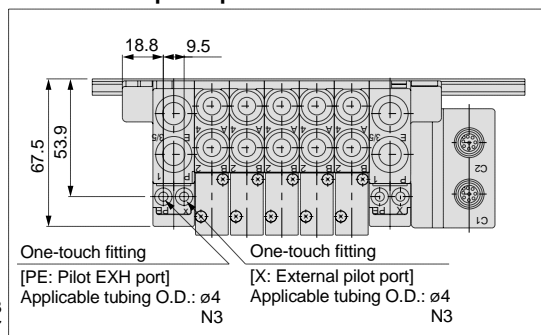

L dimensions

n: Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373
L2	137.5	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5
L3	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5
L4	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5

Dimensions: Series SV1000 for EX500 Decentralized Serial Wiring




1in = 25.4mm

• Tie-rod base manifold: **SS5V1-W10SA** ☐ **WD** - Stations $\frac{U}{D}$ **(S, R, RS)** $\frac{C3, N1}{C4, N3}$ **(-D)** $\frac{C6, N7}{C6, N7}$

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

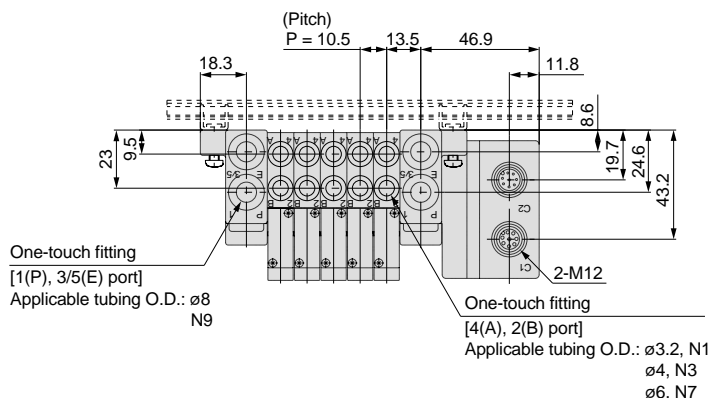

With external pilot specification

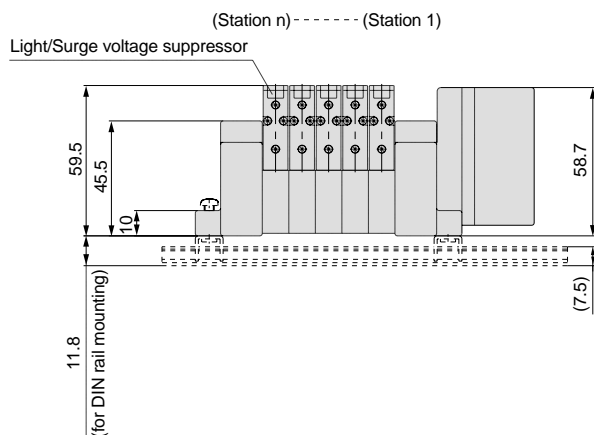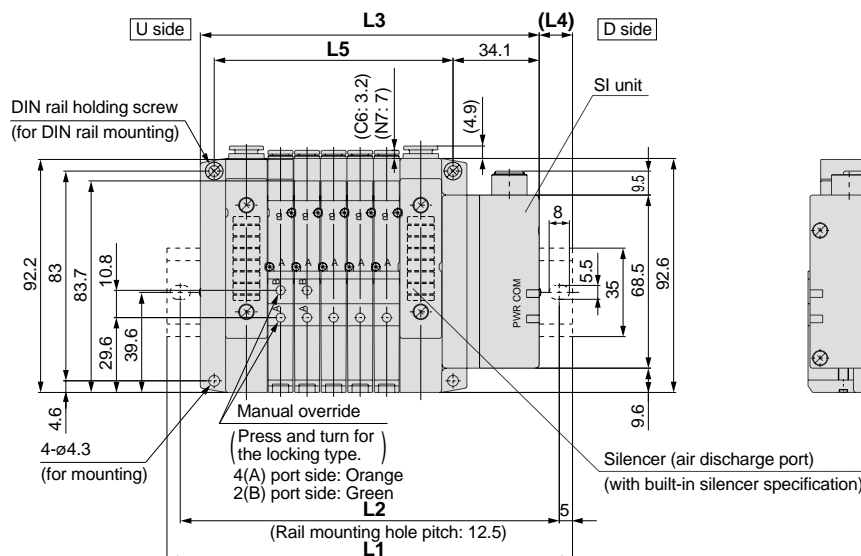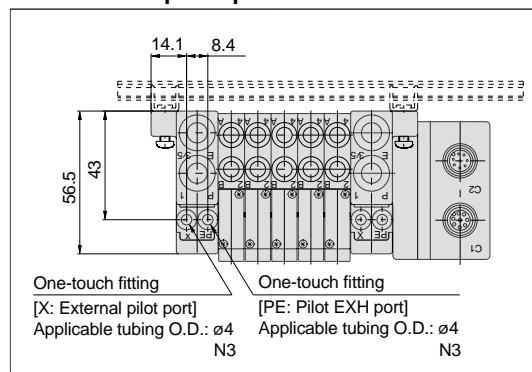

L dimensions

n: Stations


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273
L2		125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5
L3		102.6	113.1	123.6	134.1	144.6	155.1	165.6	176.1	186.6	197.1	207.6	218.1	228.6	239.1	249.6
L4		16.5	17.5	12	13	14	15	16	17	12	13	14	15	16	17	11.5
L5		63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

Dimensions: Series SV2000 for EX500 Decentralized Serial Wiring





1in = 25.4mm

• Tie-rod base manifold: **SS5V2-W10SA** **WD** - Stations $\begin{matrix} \text{U} \\ \text{D} \end{matrix}$ **(S, R, RS)** - $\begin{matrix} \text{C4, N3} \\ \text{C6, N7} \\ \text{C8, N9} \end{matrix}$ **(-D)**

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

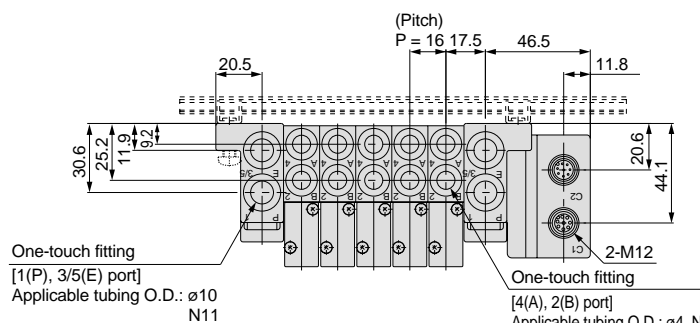

With external pilot specification

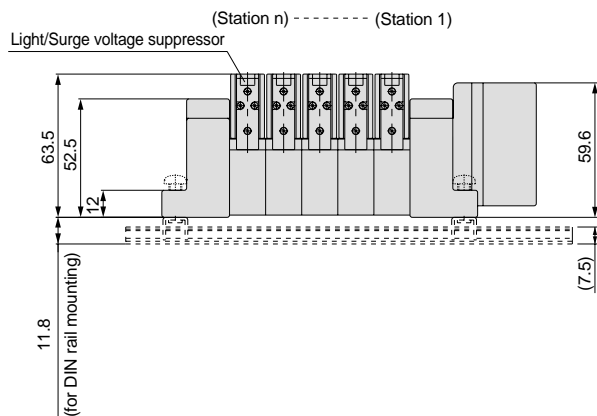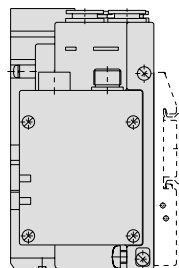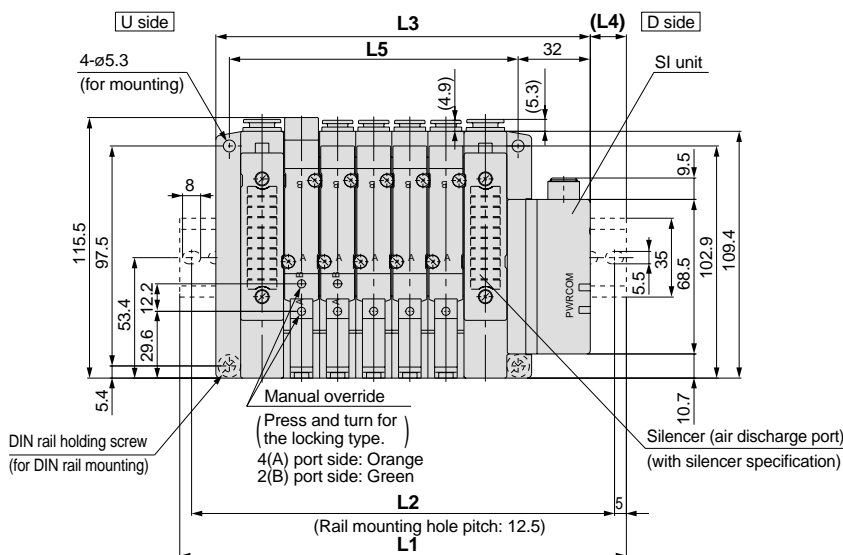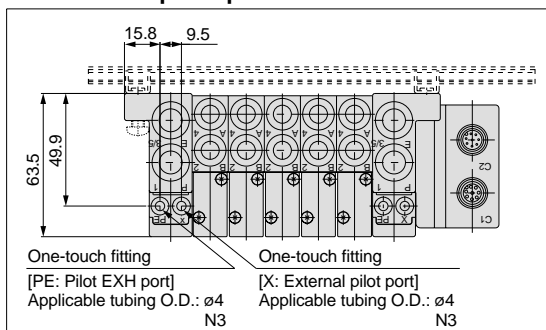

L dimensions

n: Stations


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	185.5	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	
L2	137.5	150	175	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	
L3	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342	
L4	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	

Dimensions: Series SV3000 for EX500 Decentralized Serial Wiring




1in = 25.4mm

• Tie-rod base manifold: **SS5V3-W10SA** Stations $\begin{matrix} \text{U} \\ \text{D} \end{matrix}$ **(S, R, RS)** $\begin{matrix} \text{C6, N7} \\ \text{C8, N9} \\ \text{C10, N11} \end{matrix}$ **(-D)**

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

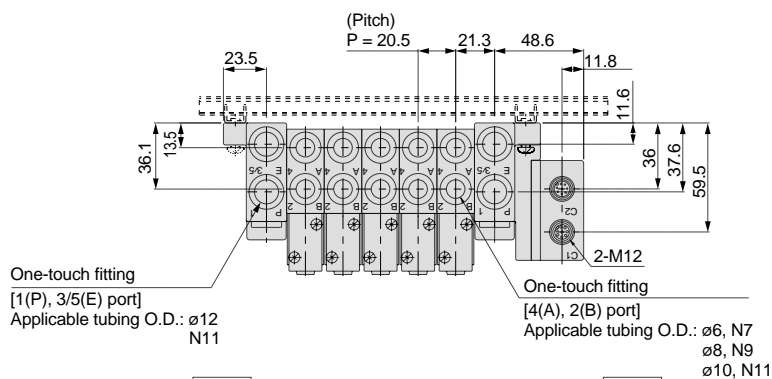

With external pilot specification

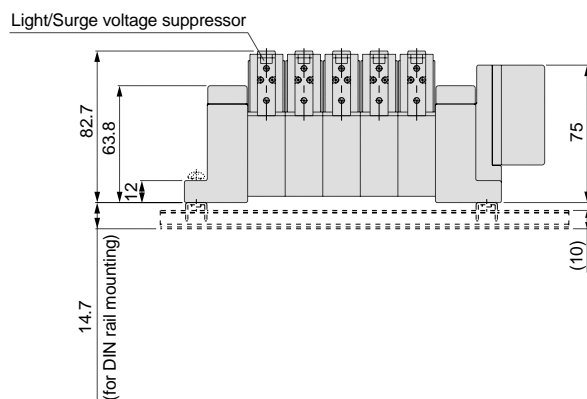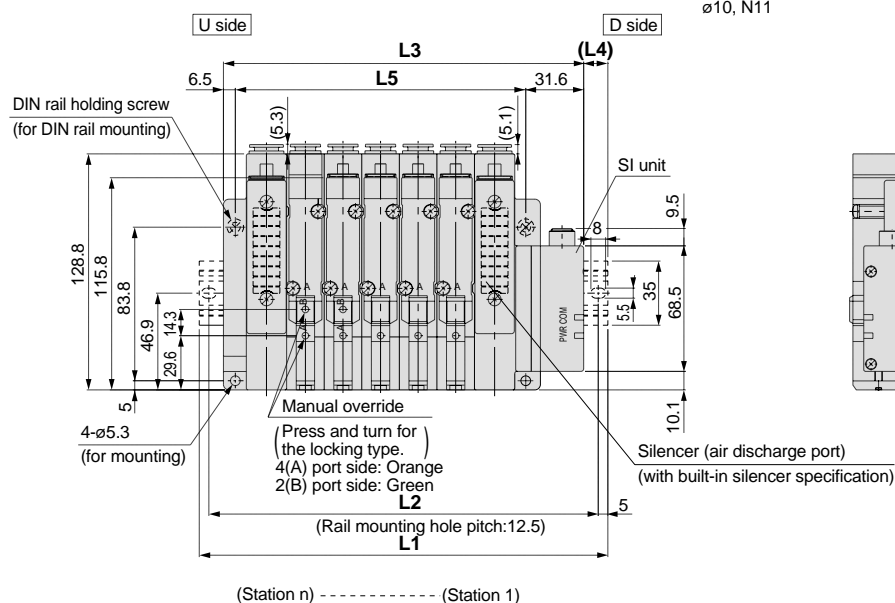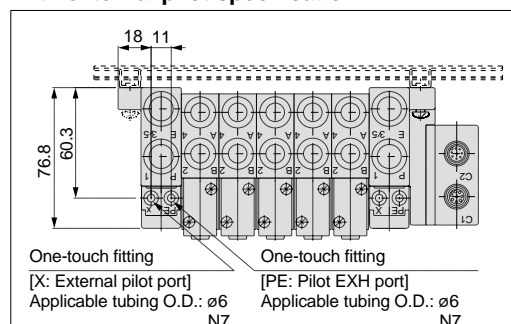

L dimensions


n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	160.5	185.5	210.5	223	248	273	285.5	310.5	323	348	373	385.5	410.5	435.5	448
L2	150	175	200	212.5	237.5	262.5	275	300	312.5	337.5	362.5	375	400	425	437.5
L3	135.1	155.6	176.1	196.6	217.1	237.6	258.1	278.6	299.1	319.6	340.1	360.6	381.1	401.6	422.1
L4	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384




Dimensions: Series SV4000 for EX500 Decentralized Serial Wiring

• Tie-rod base manifold: **SS5V4-W10SA** ☐ **WD** - Stations $\frac{U}{D}$ $\frac{B}{B}$ (S, R, RS) $\frac{02, C8, N9}{03, C10, N11}$ (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

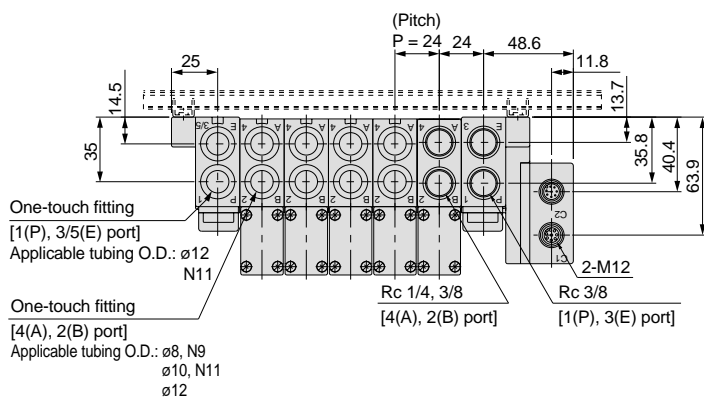

With external pilot specification

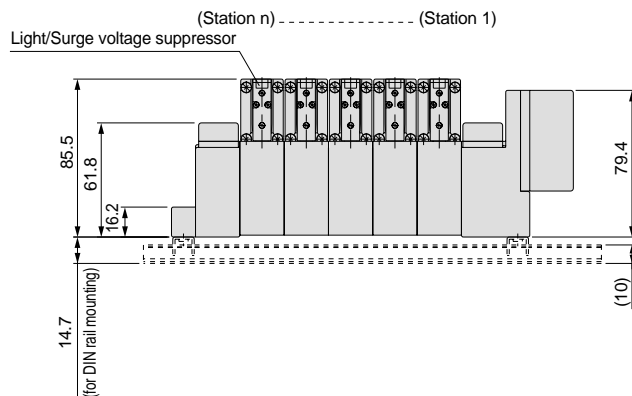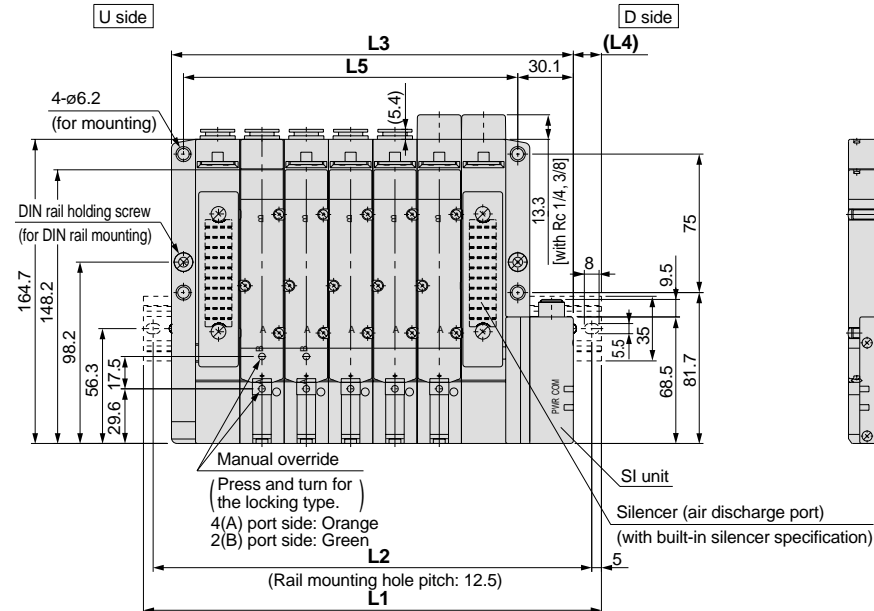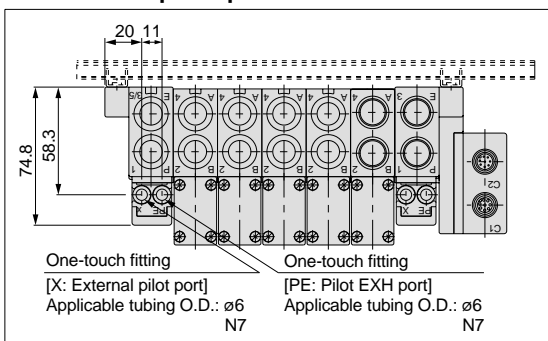

L dimensions


n: Stations

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	198	223	248	273	298	323	348	373	385.5	410.5	435.5	460.5	485.5	510.5
L2	162.5	187.5	212.5	237.5	262.5	287.5	312.5	337.5	362.5	375	400	425	450	475	500
L3	145.6	169.6	193.6	217.6	241.6	265.6	289.6	313.6	337.6	361.6	385.6	409.6	433.6	457.6	481.6
L4	13.5	14	14.5	15	15.5	16	16.5	17	17.5	12	12.5	13	13.5	14	14.5
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445

Serial Wiring with Input/Output Unit

Series EX250

IP67 protection

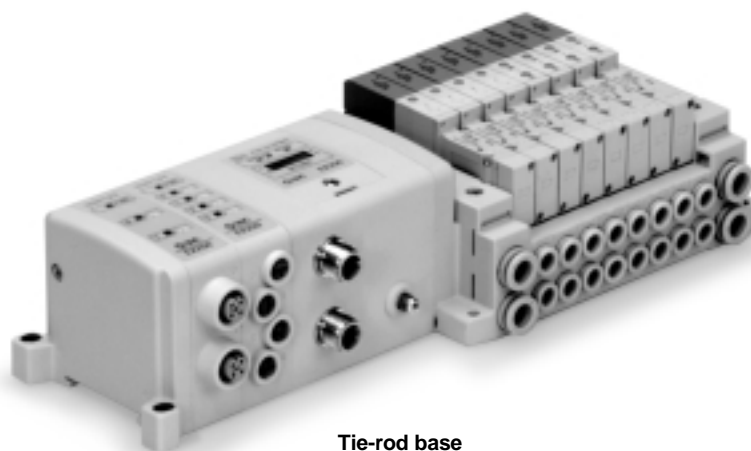

Tie-rod base

Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000
	• Number of inputs/outputs: 32 each

How to Order

• Tie-rod base

SS5V 1 — W10S1 QW [] [] [] D — 05 U [] [] []

Series

1	SV1000
2	SV2000
3	SV3000

Enclosure IP67 specification

SI unit specification

QW	For DeviceNet
NW	For PROFIBUS-DP
0	Without SI unit

- Input blocks cannot be mounted without SI unit.
- When the DIN rail is included without an SI unit, the DIN rail length will accommodate an SI unit and one input block.

Input block stations

Nil	None
1	1 station
⋮	⋮
8	8 stations

Note) Without SI unit, the symbol is nil.

Input block type

Nil	Without input block
1	M12: 2 inputs
2	M12: 4 inputs
3	M8: 4 inputs (3 pins)

Note) Without SI unit, the symbol is nil.

Input block common specification

Nil	+COM
N	-COM

Valve stations

Symbol	Stations	Note
02	2 stations	Double wiring specification Note 1)
⋮	⋮	
16	16 stations	Specified layout (Up to 32 solenoids possible.) Note 2)
⋮	⋮	
20	20 stations	

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations.
Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet.
(Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

P, E port position

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 20 stations)

Supply/Exhaust block assembly specification

Nil	Internal pilot specification
S*	Internal pilot/Built-in silencer
R	External pilot specification
RS*	External pilot/Built-in silencer

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Mounting

Nil	Direct mount
D	DIN rail mount (with DIN rail)
Note) D0	DIN rail mount (without DIN rail)
D3	For 3 stations
⋮	⋮
D20	For 20 stations

Note) In case of D0, only DIN rail fittings are attached.

A, B port size (metric)

Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C4	ø4 One-touch fitting	ø10 One-touch fitting	SV2000
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting		
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV3000
C8	ø8 One-touch fitting		
C10	ø10 One-touch fitting		
M	A, B ports mixed		

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N3	ø5/32" One-touch fitting	ø3/8" One-touch fitting	SV2000
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV3000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting		
M	A, B ports mixed		


* In case of mixed specification (M), indicate separately on a manifold specification sheet.

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold

SS5V1-W10S1QW11ND-05B-C6 (1 set)

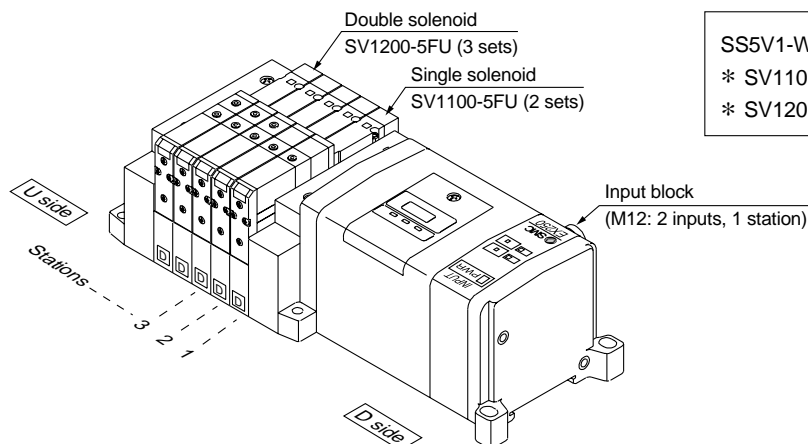

SS5V1-W10S1QW11ND-05B-C6 1 set (manifold part no.)

* SV1100-5FU 2 sets (single solenoid part no.)

* SV1200-5FU 3 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 00 — 5 F

Note) Available with manifold block for station additions. Refer to page 81.

Series

1	SV1000
2	SV2000
3	SV3000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Back pressure check valve

Nil	None
K	Built-in

* Built-in back pressure check valve type is applicable to series SV1000 only.



* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

Manual override

Nil: Non-locking push type

D: Slotted locking type

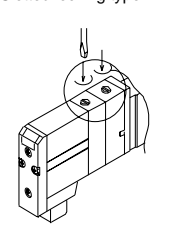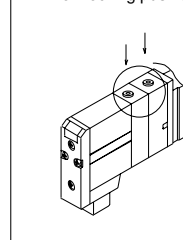

Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

Rated voltage

5	24VDC
---	-------

Series EX250 Serial Wiring with Input/Output Unit

SV1000/2000/3000

Applicable network: DeviceNet

The serial transmission system reduces connection work, while also minimizing wiring and saving space.

DeviceNet compatible SI unit


As a DeviceNet slave unit, it is capable of solenoid valve ON/OFF control up to a maximum of 32 points. In addition, by connecting an input block a maximum of 32 sensor signal inputs are possible.

Input block

This is an expansion block which connects to an SI unit to perform sensor input from auto switches, etc. Two or four sensor inputs can be accommodated by one input block, and the common can be matched to the sensor by an NPN/PNP switch. Input connectors are available in both M8 and M12 types.

Connector detail


Input connector: M12 ... 5 pins (socket)
Cable side connector example: OMRON Corporation XS2G 2 input block (EX250-IE1)

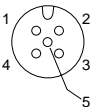


No.	Description	Function
1	SW+	Sensor power supply +
2	N.C (SIGNAL)	Open*
3	SW-	Sensor power supply -
4	SIGNAL	Sensor input signal
5	E	Sensor ground

* In the case of a 4 input block (EX250-IE2), this is the sensor input signal.


Communication connector: M12 ... 5 pins (plug) (for DeviceNet only)
Example of corresponding cable assemblies with connector:
OMRON Corporation: DCA1-5CN05F1
Karl Lumberg GmbH & Co. KG RKT5-56

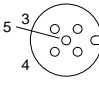

No.	Description	Function
1	Drain	Drain/Shield
2	V+	Circuit power supply +
3	V-	Circuit power supply -
4	CAN_H	Signal H
5	CAN_L	Signal L

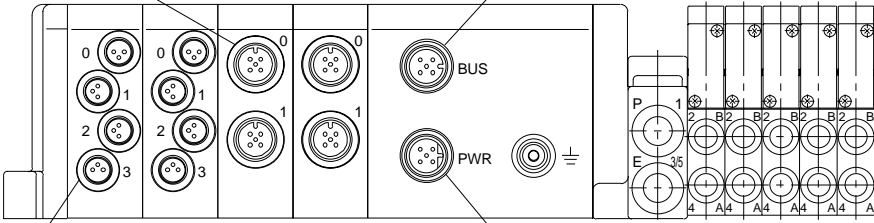


Input connector: M8 ... 3 pins (socket)
Cable side connector example: Franz Binder GesmbH 718, 768 series

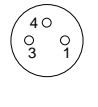

No.	Description	Function
1	24V	Sensor power supply +
3	0V	Sensor power supply -
4	IN	Sensor input signal


Power connector: M12 ... 5 pins (plug)
(boss configuration differs from communication connector)
Example of corresponding cable assemblies with connector:
Hans Turck FmbH & Co. KG WAKW4. 5T-2

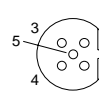

No.	Description	Function
1	SV24V	For solenoid valve +24V
2	SV0V	For solenoid valve 0V
3	SW24V	For input block +24V
4	SW0V	For input block 0V
5	E	Ground


Indicator unit (LED) descriptions and functions

SI unit

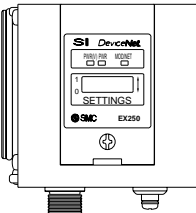

Description	Function
PWR(V)	ON when solenoid valve power supply is turned ON
PWR	ON when DeviceNet circuit power supply input is turned ON
MOD/NET	OFF: Power supply off, on line, or when checking duplication of MAC_ID Green blinking: Waiting for connection (on line) Green ON: Connection established (on line) Red blinking: Connection time out (minor communication abnormality occurs) Red ON: MAC_ID duplication error, or BUSOFF error (major communication abnormality occurs)

Input block

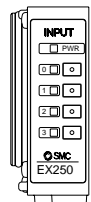

Description	Function
PWR	ON when sensor power is turned ON
0 to 3	ON when each sensor input goes ON

Weights




Description	Weight g
SI unit	225
Input block	85
End plate assembly	30

* Refer to page 78 for parts composition.

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

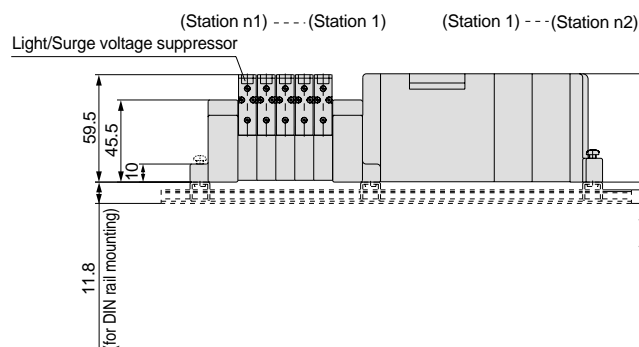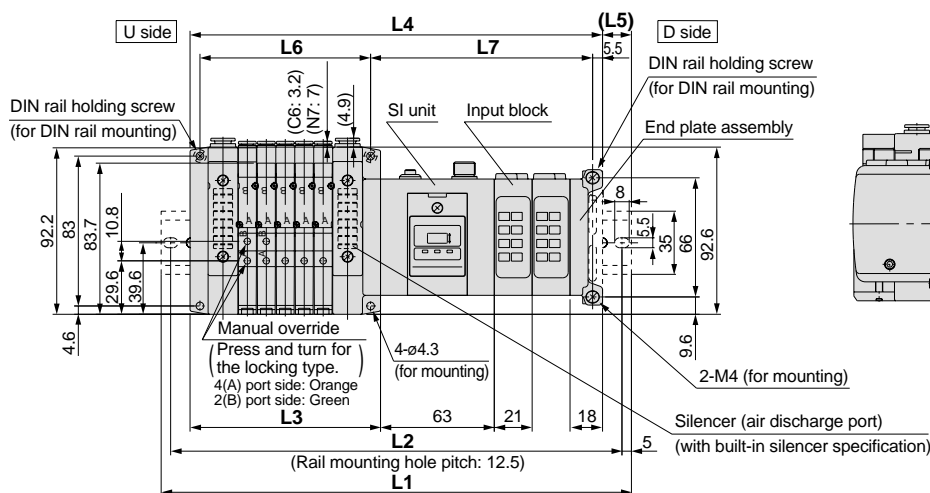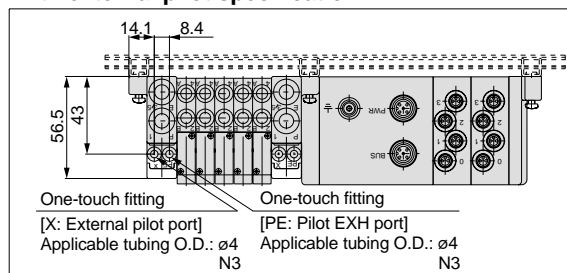

n1 = Valve stations
n2 = Input block stations

$$\begin{aligned} L2 &= L1 - 10.5 \\ L3 &= 10.5 \times n1 + 53 \\ L4 &= L3 + 81 + 21 \times n2 \\ L5 &= (L1 - L4)/2 \\ L6 &= 10.5 \times n1 + 42 \\ L7 &= 21 \times n2 + 81 \end{aligned}$$

(mm)

Valve stations (n1)		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	Input block Stations (n2)	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373
1		210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398
2		223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5
3		248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5
4		273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5
5		285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473
6		310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498
7		335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523
8		348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5


Dimensions: Series SV2000 for EX250 Serial Wiring with Input/Output Unit

• Tie-rod base manifold: **SS5V2-W10S1** ☐ ☐ ☐ ☐ **D** - Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (**S, R, RS**) $\begin{matrix} C4, N3 \\ C6, N7 \\ C8, N9 \end{matrix}$ (**-D**)




1in = 25.4mm

(With 2 input blocks)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

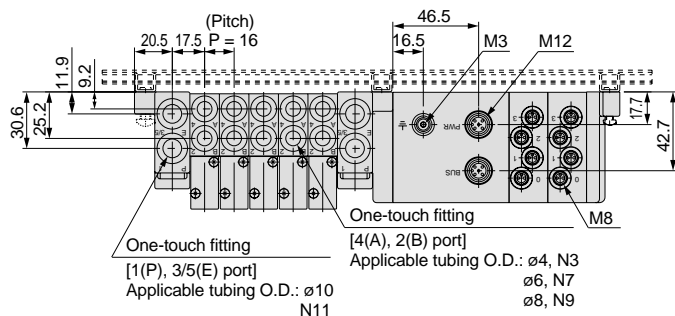

With external pilot specification

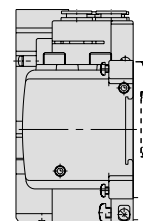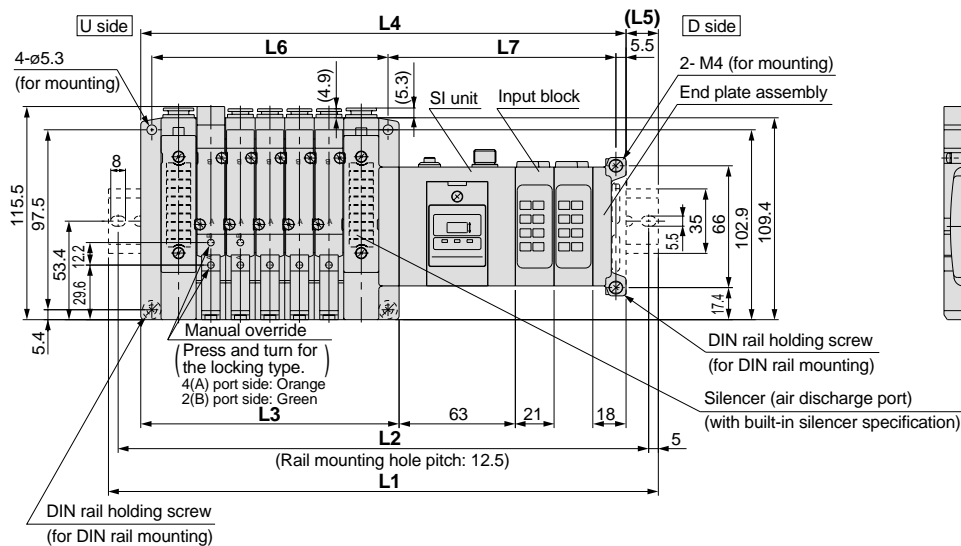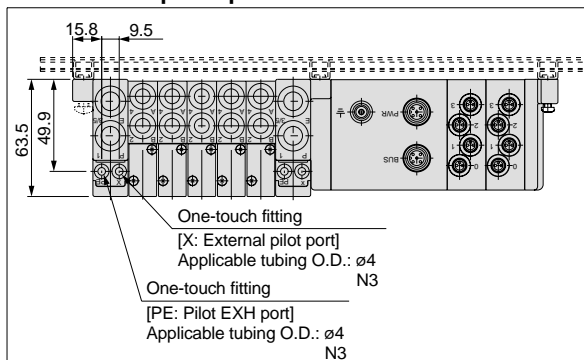

(Station n1) ----- (Station 1) (Station 1) --- (Station n2)

Light/Surge voltage suppressor

n1 = Valve stations
n2 = Input block stations

$$\begin{aligned} L2 &= L1 - 10.5 \\ L3 &= 16 \times n1 + 60 \\ L4 &= L3 + 81 + 21 \times n2 \\ L5 &= (L1 - L4)/2 \\ L6 &= 16 \times n1 + 48 \\ L7 &= 21 \times n2 + 81.5 \end{aligned}$$

L1: DIN rail overall length

(mm)

Valve stations Input block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	510.5	535.5
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548
4	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5
8	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5


Dimensions: Series SV3000 for EX250 Serial Wiring with Input/Output Unit

• Tie-rod base manifold: **SS5V3-W10S1** ☐ ☐ ☐ ☐ **D** - Stations $\frac{U}{D}$ **(S, R, RS)** $\frac{C6, N7}{C8, N9}$ **(-D)**




1in = 25.4mm

(With 2 input blocks)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

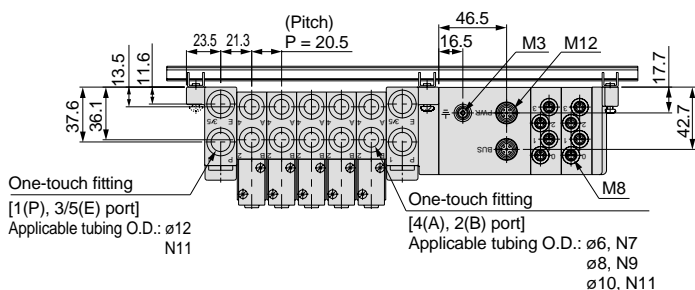

With external pilot specification

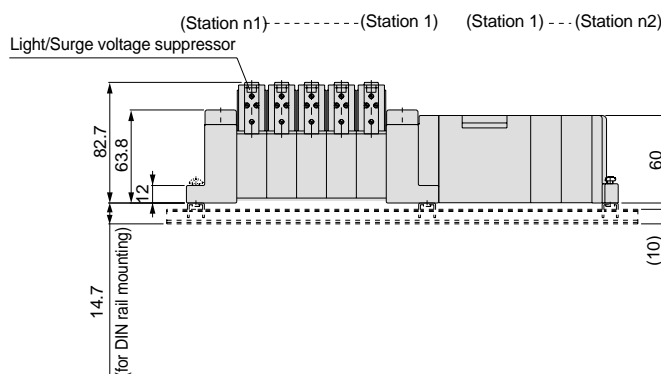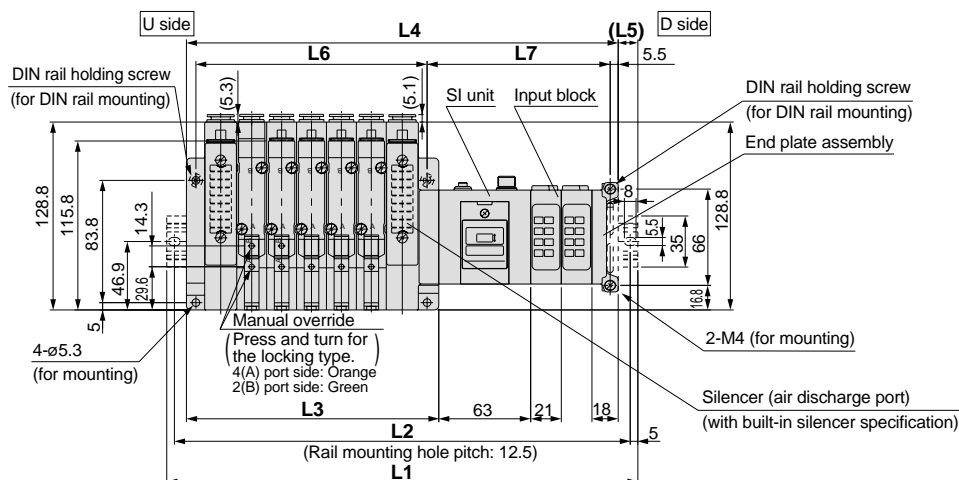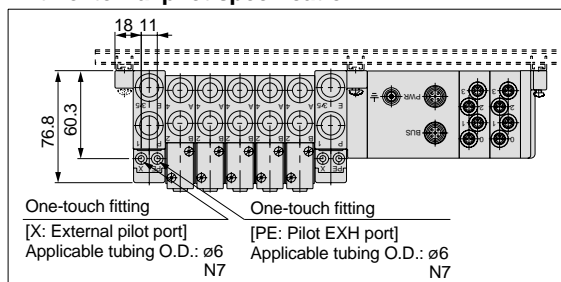

n1 = Valve stations
n2 = Input block stations

$$\begin{aligned} L2 &= L1 - 10.5 \\ L3 &= 20.5 \times n1 + 70.5 \\ L4 &= L3 + 81 + 21 \times n2 \\ L5 &= (L1 - L4)/2 \\ L6 &= 20.5 \times n1 + 56 \\ L7 &= 21 \times n2 + 83.5 \end{aligned}$$


L1: DIN rail overall length

(mm)

Valve stations (n1) Input block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	248	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5
1	248	260.5	285.5	310.5	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5	610.5
2	260.5	285.5	310.5	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5
3	285.5	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	648
4	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673
5	323	348	373	385.5	410.5	435.5	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698
6	348	373	385.5	410.5	435.5	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723
7	373	385.5	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5
8	385.5	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5	760.5

Dedicated Output Serial Wiring

Series EX120

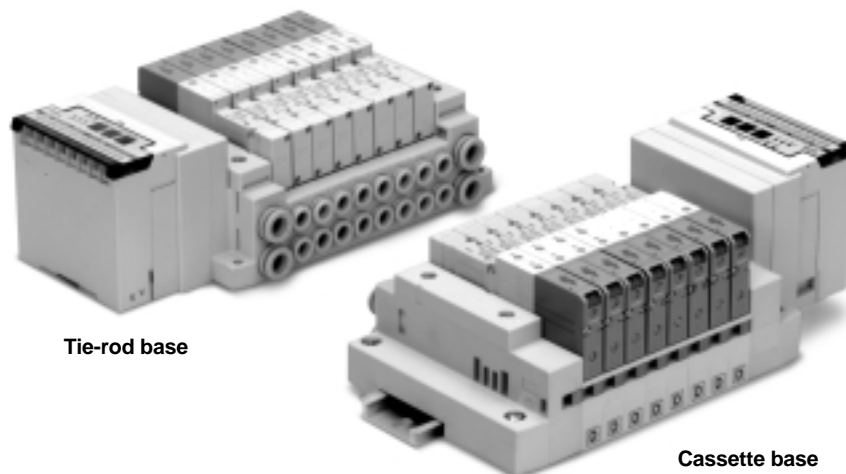

Applicable series	Cassette base manifold SV1000/SV2000
	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	• Number of outputs: 16

How to Order

Mounting

Nil	Direct mount
D	DIN rail mount (with DIN rail)
D0 <small>Note)</small>	DIN rail mount (without DIN rail)
D3	For 3 stations
⋮	⋮
D16	For 16 stations

Note) In case of D0, only DIN rail fittings are attached.

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

• Tie-rod base

SS5V 1 — 10S3 A D — 05 U

• Cassette base

SS5V 1 — 16S3 A D — 05 U

Series

1	SV1000
2	SV2000

SI unit specification

Symbol	Specification
0	Without SI unit
A*	General purpose type: Series EX300
B	Mitsubishi Electric Corporation: MELSECNET/MINI-S3 Data Link System
C	OMRON Corporation: SYSBUS Wire System
D	SHARP Corporation: Satellite I/O Link System
E	Matsushita Electric Works: MEWNET-F System
F1	NKE Corporation: Uni-wire System (16 outputs)
G	Rockwell Automation: Remote I/O (RIO) System
H	NKE Corporation: Uni-wire H System
J1	SUNX Corporation: S-LINK System (16 outputs)
J2	SUNX Corporation: S-LINK System (8 outputs)
K	Fuji Electric Co., Ltd.: T Link Mini System
Q	DeviceNet, OMRON Corporation: CompoBus/D
R1	OMRON Corporation: CompoBus/S (16 outputs)
R2	OMRON Corporation: CompoBus/S (8 outputs)
U	JEMANET (JPCN-1)
V	Mitsubishi Electric Corporation: CC-Link

* For the general purpose type, a transmission unit is required on the CPU side.

Valve stations

Symbol	Stations	Note
02	2 stations	<small>Note 1)</small> Double wiring specification
⋮	⋮	
08	8 stations	<small>Note 2)</small> Specified layout (Up to 16 solenoids possible.)
02	2 stations	
⋮	⋮	
16	16 stations	

• Since J2 and R2 type SI units have 8 outputs, note that up to 8 solenoids can be accommodated.

• This also includes the number of blanking plate assemblies.

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations.
Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet.
(Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

P, E port position

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

DIN rail length

Nil	Standard length
3	For 3 stations
⋮	⋮
16	For 16 stations

Supply/Exhaust block assembly specification

Nil	Internal pilot specification
S	Internal pilot/Built-in silencer
R	External pilot specification
RS	External pilot/Built-in silencer

SI unit part numbers


Symbol	Specification	For SS5V□-□□S3	Symbol	Specification	For SS5V□-□□S3
A*	General purpose: Series EX300	EX320-S001	H	NKE Corporation: Uni-wire H System	EX120-SUH1
B	Mitsubishi Electric Corporation: MELSECNET/MINI-S3 Data Link System	EX120-SMB1	J1	SUNX Corporation: S-LINK System (16 outputs)	EX120-SSL1
C	OMRON Corporation: SYSBUS Wire System	EX120-STa1	J2	SUNX Corporation: S-LINK System (8 outputs)	EX120-SSL2
D	SHARP Corporation: Satellite I/O Link System	EX120-SSH1	K	Fuji Electric Co., Ltd.: T Link Mini System	EX120-SFU1
E	Matsushita Electric Works: MEWNET-F System	EX120-SPA1	Q	DeviceNet, OMRON Corporation: CompoBus/D	EX120-SDN1
F1	NKE Corporation: Uni-wire System (16 outputs)	EX120-SUW1	R1	OMRON Corporation: CompoBus/S (16 outputs)	EX120-SCS1
G	Rockwell Automation: Remote I/O (RIO) System	EX120-SAB1	R2	OMRON Corporation: CompoBus/S (8 outputs)	EX120-SCS2
			U	JEMANET (JPCN-1)	EX120-SJN1
			V	Mitsubishi Electric Corporation: CC-Link	EX120-SMJ1

* Refer to pages 34 through 36 for terminal LED descriptions and cable wiring, etc., for each SI unit.

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold
SS5V1-16S3AD-06B-C6 (1 set)

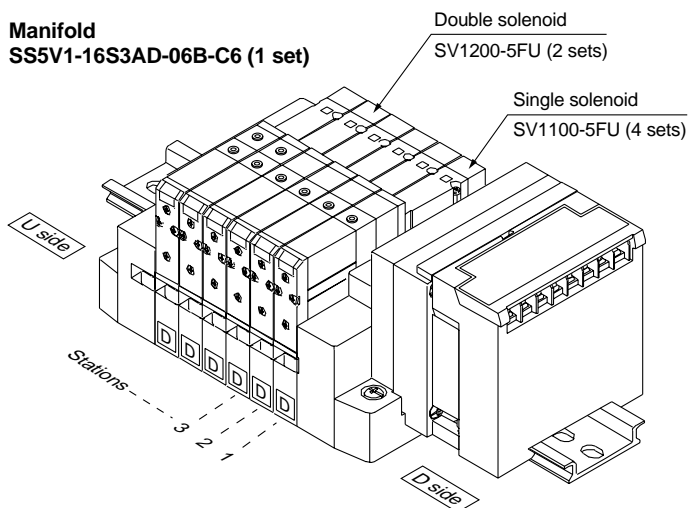

SS5V1-16S3AD-06B-C6 1 set (manifold part no.)

* SV1100-5FU 4 sets (single solenoid part no.)

* SV1200-5FU 2 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 0 0 — 5 F

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification


Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Note) Available with manifold block for station additions. Refer to pages 77 and 81.

Manual override

Nil: Non-locking push type D: Slotted locking type

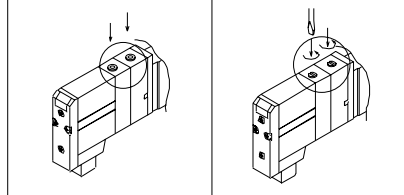

Rated voltage

5	24VDC
---	-------

Back pressure check valve

Nil	None
K	Built-in

Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

* Built-in back pressure check valve type is applicable to series SV1000 only.

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

A, B port size (metric)


Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C4	ø4 One-touch fitting	ø10 One-touch fitting	SV2000
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting		
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV3000
C8	ø8 One-touch fitting		
C10	ø10 One-touch fitting		
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV4000
C10	ø10 One-touch fitting		
C12	ø12 One-touch fitting		
02	Rc 1/4	Rc 3/8	
03	Rc 3/8		
02F	G 1/4	G 3/8	
03F	G 3/8		
M	A, B ports mixed		

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N3	ø5/32" One-touch fitting	ø3/8" One-touch fitting	SV2000
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV3000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV4000
N11	ø3/8" One-touch fitting		
02N	NPT 1/4		
03N	NPT 3/8	NPT 3/8	
02T	NPTF 1/4		
03T	NPTF 3/8		
M	A, B ports mixed		

* In case of mixed specification (M), indicate separately on a manifold specification sheet.








- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- Maximum 16 stations (For 9 stations or more, indicate on a manifold specification sheet.)

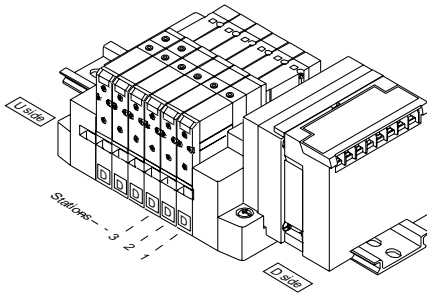








- Stations are counted from the D side.
- A maximum of 16 solenoids is possible (16 stations with single solenoids).

Item	Specification
External power supply	24VDC $\pm 10\%$
Current consumption (Inside unit)	0.1A A, B, D, E, F1, G, J1, J2, K, R1, R2, H, U, V
	0.3A C, Q

	<div>Type A Series EX300</div>	<div>Type B Mitsubishi Electric Corporation MELSECNET/mini-S3 Data Link System</div>																		
Terminal block LED description	<div></div> <table><tr><th>LED name</th><th>Description</th></tr><tr><td>TRD</td><td>ON for data reception</td></tr><tr><td>RUN/ERR</td><td>Blinks for normal data reception, ON for abnormal</td></tr></table>	LED name	Description	TRD	ON for data reception	RUN/ERR	Blinks for normal data reception, ON for abnormal	<div></div> <table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON for power supply Input</td></tr><tr><td>RUN</td><td>ON for normal data traffic with master unit</td></tr><tr><td>RD</td><td>ON during data reception</td></tr><tr><td>SD</td><td>ON during data transmission</td></tr><tr><td>ERR</td><td>ON for data reception error, OFF when normal</td></tr></table>	LED name	Description	POWER	ON for power supply Input	RUN	ON for normal data traffic with master unit	RD	ON during data reception	SD	ON during data transmission	ERR	ON for data reception error, OFF when normal
LED name	Description																			
TRD	ON for data reception																			
RUN/ERR	Blinks for normal data reception, ON for abnormal																			
LED name	Description																			
POWER	ON for power supply Input																			
RUN	ON for normal data traffic with master unit																			
RD	ON during data reception																			
SD	ON during data transmission																			
ERR	ON for data reception error, OFF when normal																			
Note	<ul style="list-style-type: none">• Connection to T unit PLC manufacturer's I/O card enables serial transmission. EX300-TMB1 ... for Mitsubishi Electric Corporation EX300-TTA1 ... for OMRON Corporation EX300-TFU1 ... for Fuji Electric Co., Ltd. EX300-T001 ... General purpose* Each T unit has 32 control points.• 16 outputs	<ul style="list-style-type: none">• MELSECNET/mini-S3 Data Link System Master unit: AJ71PT32-S3 AJ71T32-S3 A1SJ71PT32-S3• 16 outputs, occupying two stations																		
Cable wiring	<div></div> <p>* Ground either the reception side or the transmission side of the shielding wire shield.</p>	<div></div> <p>* Ground either the reception side or the transmission side of the shielding wire shield.</p>																		

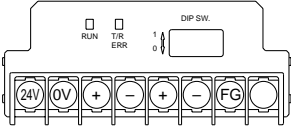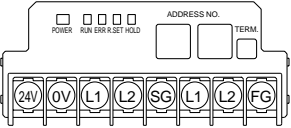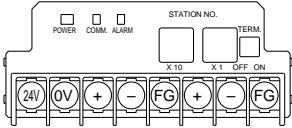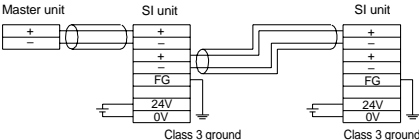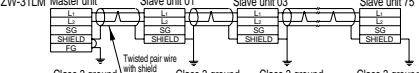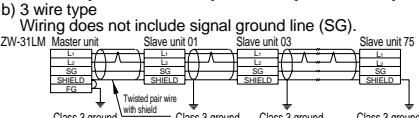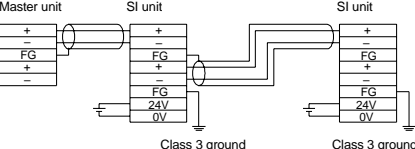	Type C OMRON Corporation SYSBUS Wire System	Type D SHARP Corporation Satellite I/O Link System	Type E Matsushita Electric Works MEWNET-F System																								
Terminal block LED description	<div></div> <table><tr><th>LED name</th><th>Description</th></tr><tr><td>RUN</td><td>ON when transmission is normal and PLC is in operation mode</td></tr><tr><td>T/R ERR</td><td>Blinks when transmission is normal ON when transmission is abnormal</td></tr></table>	LED name	Description	RUN	ON when transmission is normal and PLC is in operation mode	T/R ERR	Blinks when transmission is normal ON when transmission is abnormal	<div></div> <table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON when power supply is ON</td></tr><tr><td>RUN</td><td>ON when power is ON and slave unit operates normally</td></tr><tr><td>ERR</td><td>ON for abnormal slave unit switch setting, abnormal communication, master unit PLC stopped and defective slave unit</td></tr><tr><td>R.SET HOLD</td><td>ON for master unit control input</td></tr></table>	LED name	Description	POWER	ON when power supply is ON	RUN	ON when power is ON and slave unit operates normally	ERR	ON for abnormal slave unit switch setting, abnormal communication, master unit PLC stopped and defective slave unit	R.SET HOLD	ON for master unit control input	<div></div> <table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON when power supply is ON</td></tr><tr><td>COMM.</td><td>Blinks during data transmission/reception</td></tr><tr><td>ALARM</td><td>ON for unit abnormality, blinks for station no. setting error</td></tr></table>	LED name	Description	POWER	ON when power supply is ON	COMM.	Blinks during data transmission/reception	ALARM	ON for unit abnormality, blinks for station no. setting error
LED name	Description																										
RUN	ON when transmission is normal and PLC is in operation mode																										
T/R ERR	Blinks when transmission is normal ON when transmission is abnormal																										
LED name	Description																										
POWER	ON when power supply is ON																										
RUN	ON when power is ON and slave unit operates normally																										
ERR	ON for abnormal slave unit switch setting, abnormal communication, master unit PLC stopped and defective slave unit																										
R.SET HOLD	ON for master unit control input																										
LED name	Description																										
POWER	ON when power supply is ON																										
COMM.	Blinks during data transmission/reception																										
ALARM	ON for unit abnormality, blinks for station no. setting error																										
Note	<ul style="list-style-type: none">• SYSBUS Wire System Master unit: Type C500-RM201 Type C200H-RM201• 16 outputs	<ul style="list-style-type: none">• Satellite I/O Link System Master unit: ZW-31LM JW-31LM, JW-31LMH JW-23LM, JW-23LMH• 16 outputs	<ul style="list-style-type: none">• MEWNET-F System Master unit: AFP3740, AFP3742 AFP5740, AFP5742• 16 outputs																								
Cable wiring	<div></div> <p>Class 3 ground</p>	<div><p>a) 2 wire type Wiring does not include signal ground line (SG).</p><p>Class 3 ground</p><p>b) 3 wire type Wiring does not include signal ground line (SG).</p><p>Class 3 ground</p></div>	<div></div> <p>Class 3 ground</p>																								

	<div><div>Type F1 NKE Corporation Uni-wire System</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON for power supply input (ON when normal, flickers when voltage drops)</td></tr><tr><td>SEND</td><td>Transmission indication: Blinks when normal, OFF or ON when abnormal</td></tr></table></div><div><div>• Uni-wire System Send unit: SD-120</div><div>• 16 outputs</div></div></div>	LED name	Description	POWER	ON for power supply input (ON when normal, flickers when voltage drops)	SEND	Transmission indication: Blinks when normal, OFF or ON when abnormal	<div><div>Type G Remote I/O (RIO) System</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON when power supply is ON</td></tr><tr><td>COM</td><td>ON when communication is normal Blinks when communication is initialized OFF for abnormal communication</td></tr><tr><td>ERROR</td><td>ON for abnormal communication</td></tr></table></div><div><div>• Remote I/O (RIO) System</div><div>• 16 outputs</div></div></div>	LED name	Description	POWER	ON when power supply is ON	COM	ON when communication is normal Blinks when communication is initialized OFF for abnormal communication	ERROR	ON for abnormal communication	<div><div>Type J1, J2 SUNX Corporation S-LINK System</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON for power supply input</td></tr><tr><td>SEND</td><td>Transmission indication: Blinks when normal, Blinks slowly when abnormal</td></tr></table></div><div><div>• S-LINK System S-LINK controller: SL-CU1A</div><div>• 16 outputs (type J1) 8 outputs (type J2)</div></div></div>	LED name	Description	POWER	ON for power supply input	SEND	Transmission indication: Blinks when normal, Blinks slowly when abnormal
LED name	Description																						
POWER	ON for power supply input (ON when normal, flickers when voltage drops)																						
SEND	Transmission indication: Blinks when normal, OFF or ON when abnormal																						
LED name	Description																						
POWER	ON when power supply is ON																						
COM	ON when communication is normal Blinks when communication is initialized OFF for abnormal communication																						
ERROR	ON for abnormal communication																						
LED name	Description																						
POWER	ON for power supply input																						
SEND	Transmission indication: Blinks when normal, Blinks slowly when abnormal																						
Note																							
Cable wiring	<div></div>	<div></div>	<div><div>a) T type branch multi-drop wiring (S-LINK System)</div><div>b) Crossover wiring (Sensor Link System)</div><div></div><div>The example above uses a dedicated S-LINK flat ribbon cable SL-RCM*00.</div></div>																				
	<div><div>Type K Fuji Electric Co. Ltd. T Link Mini System</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>POWER</td><td>ON for power supply input</td></tr><tr><td>ALM</td><td>ON for abnormal transmission or processor side power supply cut</td></tr></table></div><div><div>• T Link Mini System Master unit: FTM100B Converter: FRC100A-G02 Repeater: FRC200A-C10</div><div>• 16 outputs</div></div></div>	LED name	Description	POWER	ON for power supply input	ALM	ON for abnormal transmission or processor side power supply cut	<div><div>Type Q DeviceNet</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>PWR</td><td>Green light ON for DeviceNet circuit power input OFF When this unit is off line or circuit power is OFF</td></tr><tr><td>MOD/NET</td><td>Green blinks When waiting for connection (on line) Green ON When connection is established (on line) Red blinks When connection time out occurs (recoverable communication abnormality) Red ON For MAC ID duplication error, or BUSOFF error (major communication abnormality)</td></tr></table></div><div><div>• DeviceNet</div><div>• OMRON Corporation CompoBus/D System Master unit: Type C200HW-DRM21-V1 Type CS1W-DRM21</div><div>• 16 outputs</div></div></div>	LED name	Description	PWR	Green light ON for DeviceNet circuit power input OFF When this unit is off line or circuit power is OFF	MOD/NET	Green blinks When waiting for connection (on line) Green ON When connection is established (on line) Red blinks When connection time out occurs (recoverable communication abnormality) Red ON For MAC ID duplication error, or BUSOFF error (major communication abnormality)	<div><div>Type R1, R2 OMRON Corporation CompoBus/S</div><div></div><div><table><tr><th>LED name</th><th>Description</th></tr><tr><td>PWR</td><td>ON when communication power is supplied, OFF when power is OFF</td></tr><tr><td>COMM</td><td>ON for normal communication, OFF for abnormal communication or waiting</td></tr><tr><td>ERR</td><td>ON for abnormal communication, OFF for normal communication or waiting</td></tr></table></div><div><div>• CompoBus/S System Master unit: Type C200HW-SRM21-V1 Type CQM1-SRM21-V1</div><div>• 16 outputs (type SR1) 8 outputs (type SR2)</div></div></div>	LED name	Description	PWR	ON when communication power is supplied, OFF when power is OFF	COMM	ON for normal communication, OFF for abnormal communication or waiting	ERR	ON for abnormal communication, OFF for normal communication or waiting
LED name	Description																						
POWER	ON for power supply input																						
ALM	ON for abnormal transmission or processor side power supply cut																						
LED name	Description																						
PWR	Green light ON for DeviceNet circuit power input OFF When this unit is off line or circuit power is OFF																						
MOD/NET	Green blinks When waiting for connection (on line) Green ON When connection is established (on line) Red blinks When connection time out occurs (recoverable communication abnormality) Red ON For MAC ID duplication error, or BUSOFF error (major communication abnormality)																						
LED name	Description																						
PWR	ON when communication power is supplied, OFF when power is OFF																						
COMM	ON for normal communication, OFF for abnormal communication or waiting																						
ERR	ON for abnormal communication, OFF for normal communication or waiting																						
Note																							
Cable wiring	<div></div> <div>Connect the shielding wire to the SD terminal. If the shielding wire is not connected to the SD terminal, normal transmission will be impossible even for short distances. Furthermore, do not ground the shielding wire (SD).</div>	<div></div>	<div></div>																				

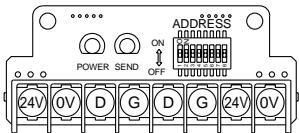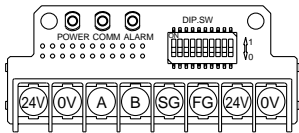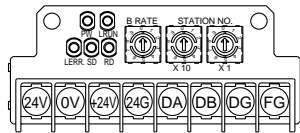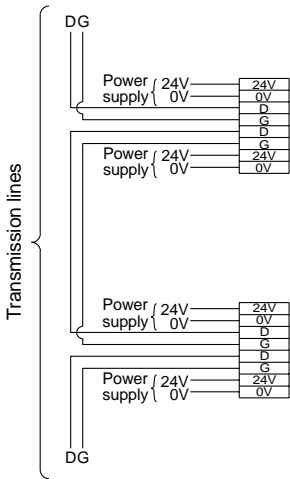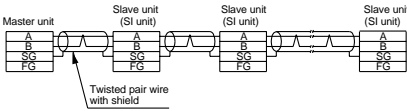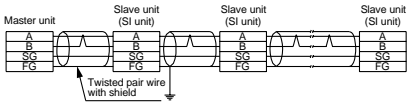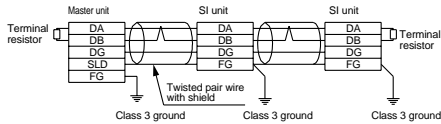
	Type H NKE Corporation Uni-wire H System	Type U JEMANET (JPCN-1)	Type V Mitsubishi Electric Corporation CC-Link																										
Terminal block LED description	<div></div> <table><thead><tr><th>LED name</th><th>Description</th></tr></thead><tbody><tr><td>POWER</td><td>ON for power supply input (ON when normal, flickers when voltage drops)</td></tr><tr><td>SEND</td><td>Transmission indication: Blinks when normal, OFF or ON when abnormal</td></tr></tbody></table>	LED name	Description	POWER	ON for power supply input (ON when normal, flickers when voltage drops)	SEND	Transmission indication: Blinks when normal, OFF or ON when abnormal	<div></div> <table><thead><tr><th>LED name</th><th>Description</th></tr></thead><tbody><tr><td>POWER</td><td>ON for SI unit power supply input</td></tr><tr><td>COMM</td><td>ON for normal communication</td></tr><tr><td>ALARM</td><td>ON for abnormal communication</td></tr></tbody></table>	LED name	Description	POWER	ON for SI unit power supply input	COMM	ON for normal communication	ALARM	ON for abnormal communication	<div></div> <table><thead><tr><th>LED name</th><th>Description</th></tr></thead><tbody><tr><td>PW</td><td>ON when communication power is supplied, OFF when power is OFF</td></tr><tr><td>L RUN</td><td>ON when normal data is being received</td></tr><tr><td>SD</td><td>ON when data is transmitted</td></tr><tr><td>RD</td><td>ON when data is received</td></tr><tr><td>L ERR.</td><td>ON for transmission error/wrong setting, Blinks when station or transmission speed setting changes during operation</td></tr></tbody></table>	LED name	Description	PW	ON when communication power is supplied, OFF when power is OFF	L RUN	ON when normal data is being received	SD	ON when data is transmitted	RD	ON when data is received	L ERR.	ON for transmission error/wrong setting, Blinks when station or transmission speed setting changes during operation
LED name	Description																												
POWER	ON for power supply input (ON when normal, flickers when voltage drops)																												
SEND	Transmission indication: Blinks when normal, OFF or ON when abnormal																												
LED name	Description																												
POWER	ON for SI unit power supply input																												
COMM	ON for normal communication																												
ALARM	ON for abnormal communication																												
LED name	Description																												
PW	ON when communication power is supplied, OFF when power is OFF																												
L RUN	ON when normal data is being received																												
SD	ON when data is transmitted																												
RD	ON when data is received																												
L ERR.	ON for transmission error/wrong setting, Blinks when station or transmission speed setting changes during operation																												
Note	<ul style="list-style-type: none">• Uni-wire H System Send unit: SD-H2• 16 outputs	<ul style="list-style-type: none">• JEMANET (JPCN-1) (Reference) AJ71J92-S3 (Mitsubishi Electric Corporation) A1SJ71J92-S3 (Mitsubishi Electric Corporation) Type C200HW-JRM21 (OMRON Corporation) NJ-JPCN-1 (Fuji Electric Co., Ltd.) NP1L-JP1 (Fuji Electric Co., Ltd.)• 16 outputs	<ul style="list-style-type: none">• CC-Link System Master unit: AJ61BT11 A1SJ61BT11 AJ61QBT11 A1SJ61QBT11• 16 outputs																										
Cable wiring	<div></div>	<div><p>a) 2 wire type</p><p>b) 3 wire type</p></div>	<div></div>																										

Dimensions: Series SV1000 for EX120 Dedicated Output Serial Wiring

• Cassette base manifold: **SS5V1-16S3** **D** - Stations **U** **D** **B** (**S, R, RS**) - **C3, N1**
 C4, N3
 C6, N7

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

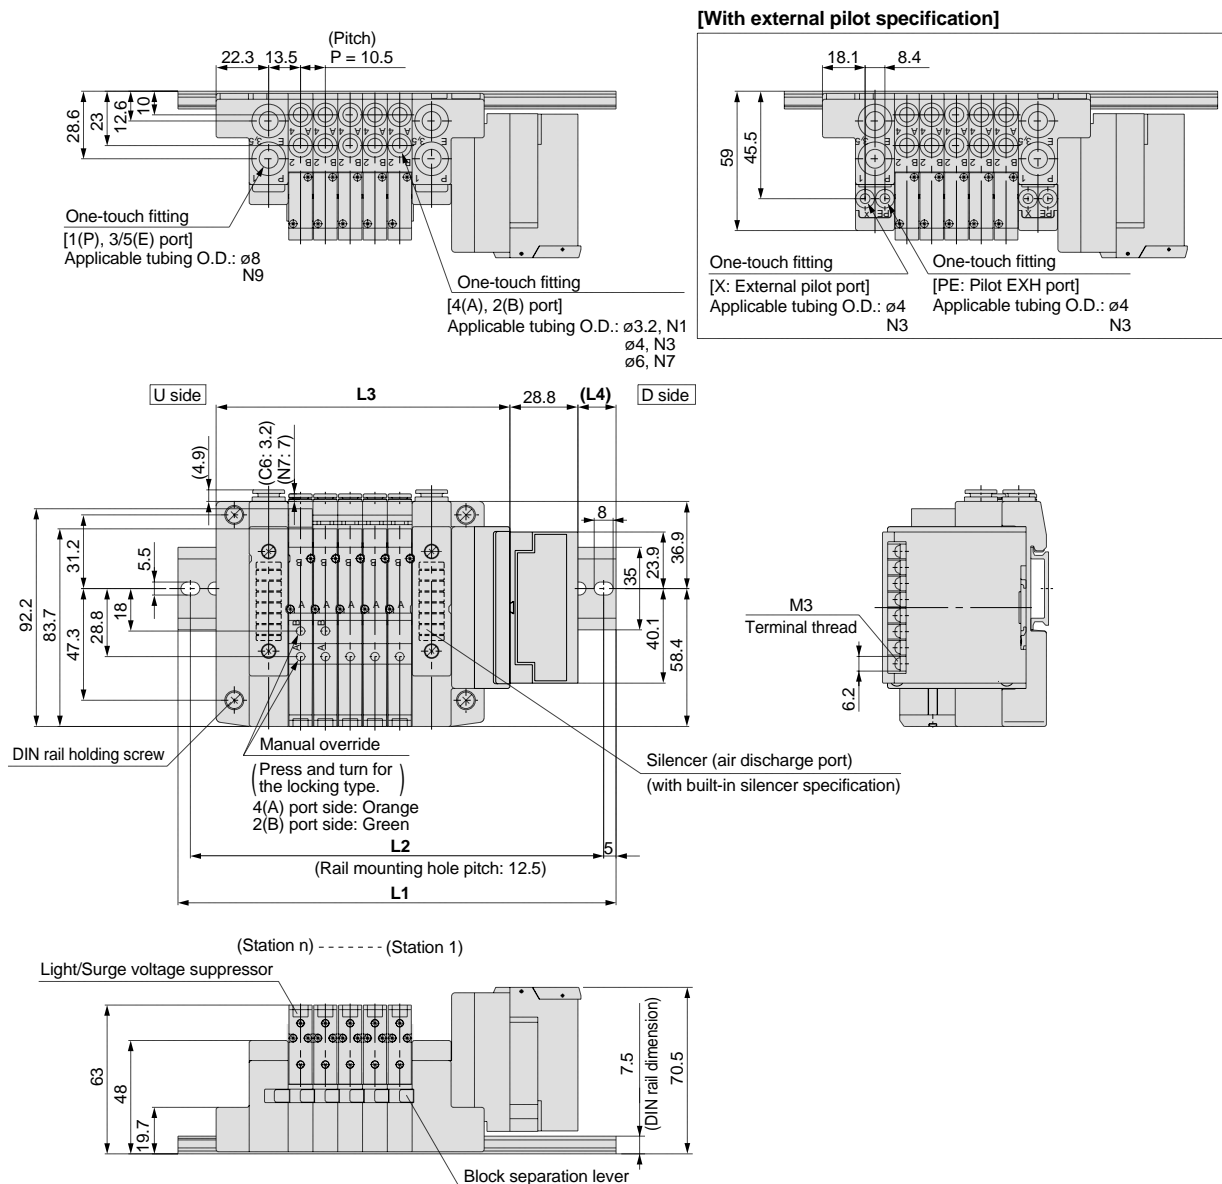

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	92.9	103.4	113.9	124.4	134.9	145.4	155.9	166.4	176.9	187.4	197.9	208.4	218.9	229.4	239.9
L4	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5

Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is **24.3mm** greater.
 Contact SMC for details.




Dimensions: Series SV2000 for EX120 Dedicated Output Serial Wiring

• Cassette base manifold: **SS5V2-16S3** □ **D** - Stations $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ (S, R, RS) - $\begin{matrix} \text{C4, N3} \\ \text{C6, N7} \\ \text{C8, N9} \end{matrix}$

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

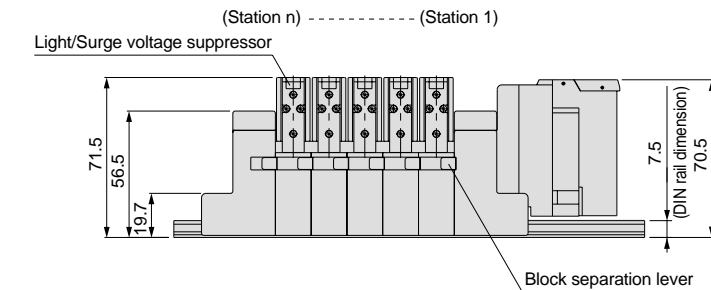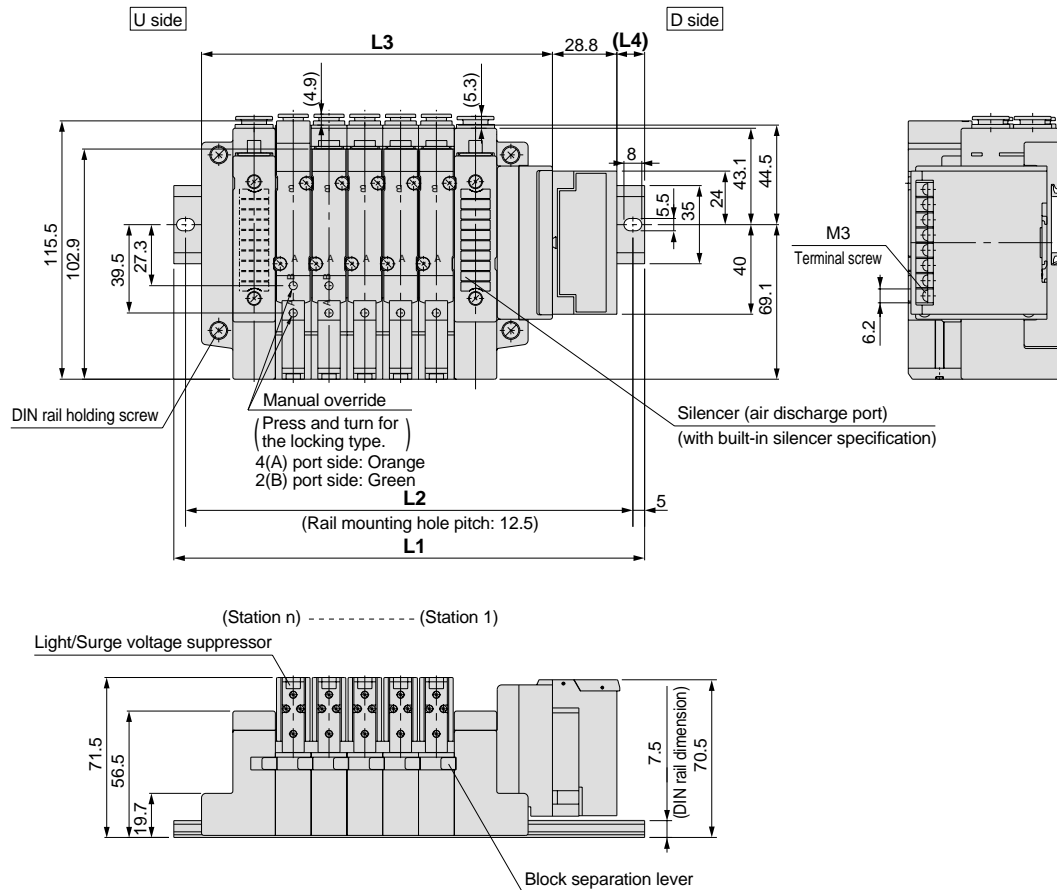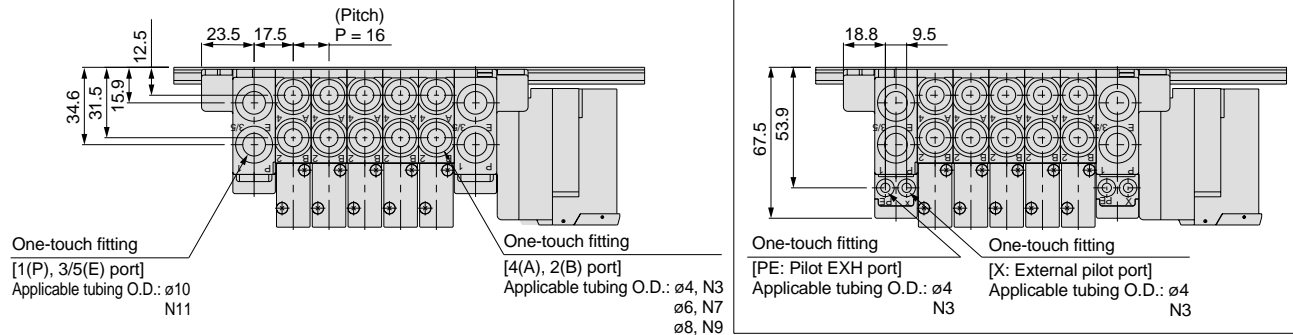

L dimensions (mm)

n: Stations

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L2	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L3	108.9	124.9	140.9	156.9	172.9	188.9	204.9	220.9	236.9	252.9	268.9	284.9	300.9	316.9	332.9
L4	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5	12


Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is 24.3mm greater.
Contact SMC for details.

Dimensions: Series SV1000 for EX120 Dedicated Output Serial Wiring

1in = 25.4mm

• Tie-rod base manifold: **SS5V1-10S3□D - Stations** $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ **(S, R, RS) -** $\begin{matrix} \text{C3, N1} \\ \text{C4, N3} \\ \text{C6, N7} \end{matrix}$ **(-D)**

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

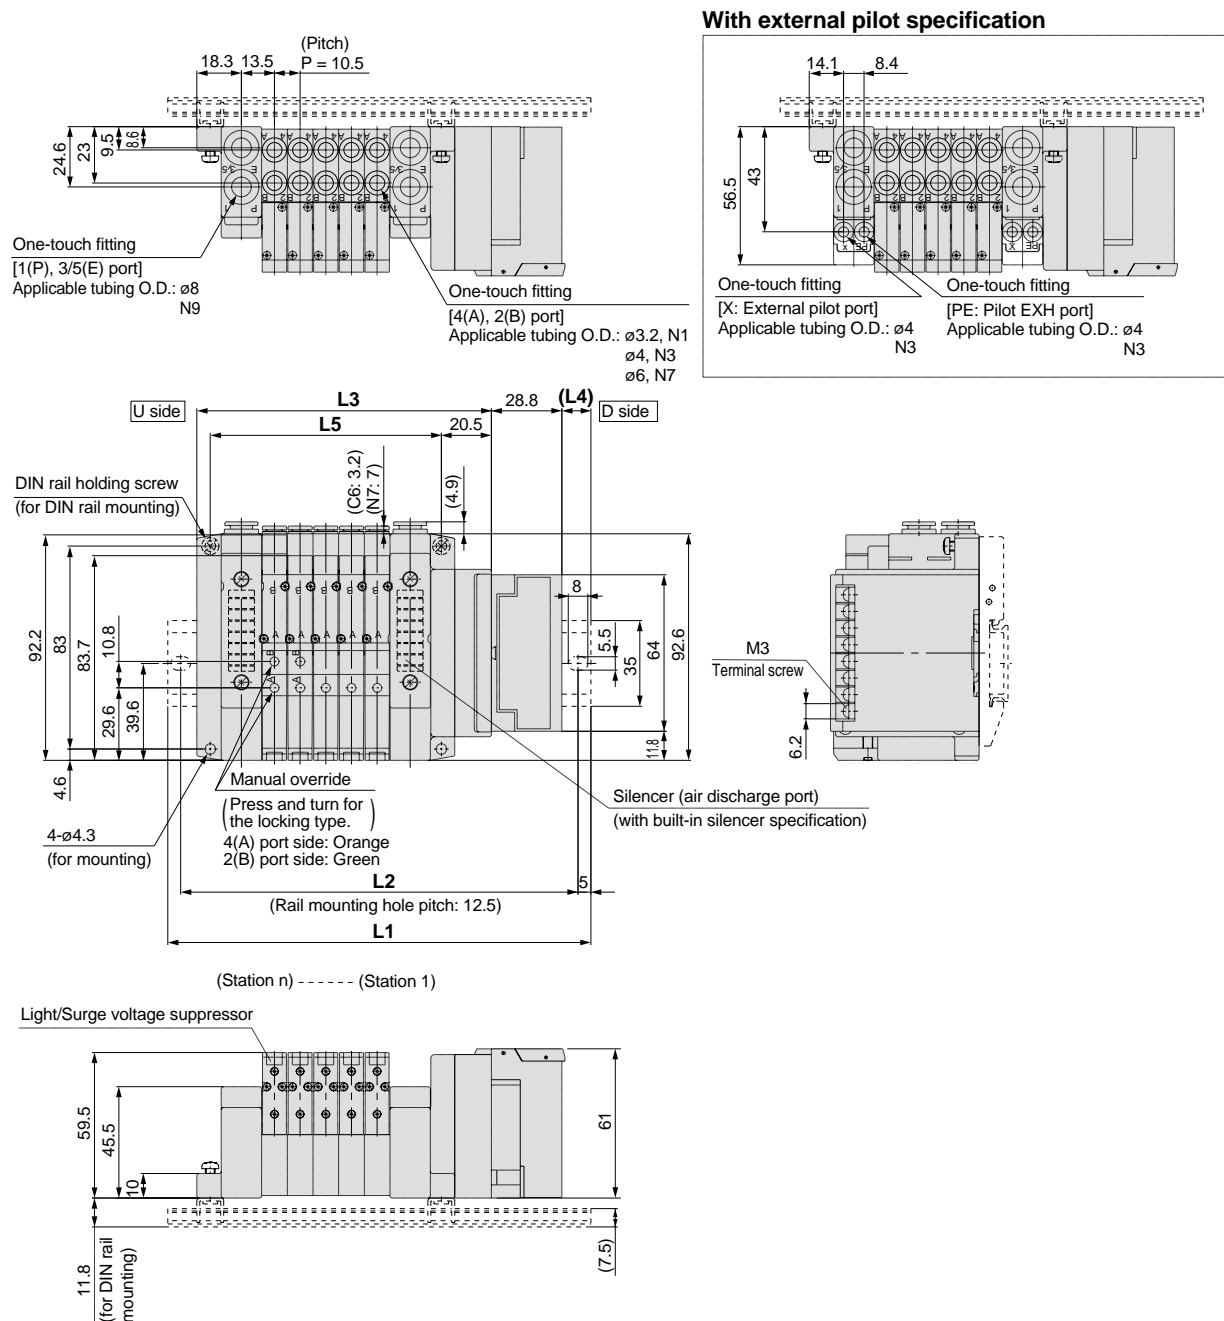

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298
L2	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5
L3	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236
L4	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5	15.5	16.5
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is 24.3mm greater.
Contact SMC for details.


Dimensions: Series SV2000 for EX120 Dedicated Output Serial Wiring

1in = 25.4mm

• Tie-rod base manifold: **SS5V2-10S3** \square **D** - Stations $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ (**S, R, RS**) - $\begin{matrix} \text{C4, N3} \\ \text{C6, N7} \\ \text{C8, N9} \end{matrix}$ (**-D**)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

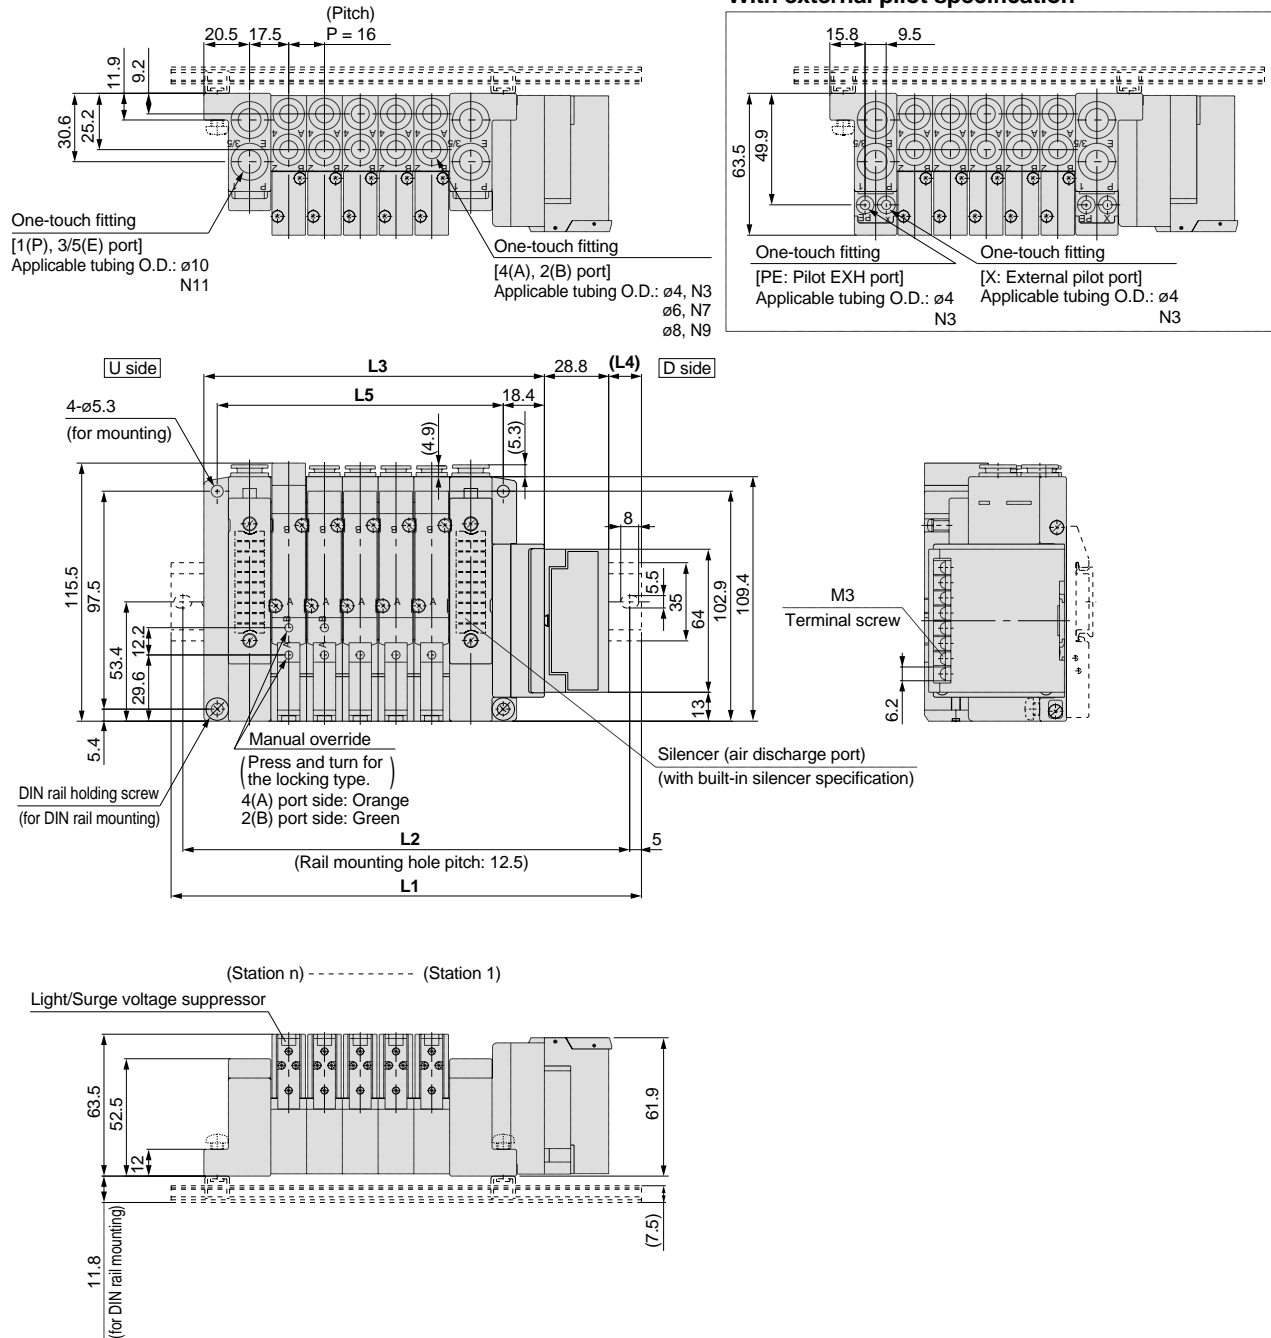

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5
L2	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375
L3	104.4	120.4	136.4	152.4	168.4	184.4	200.4	216.4	232.4	248.4	264.4	280.4	296.4	312.4	328.4
L4	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304

Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is $\boxed{24.3\text{mm}}$ greater.
Contact SMC for details.


Dimensions: Series SV3000 for EX120 Dedicated Output Serial Wiring

• Tie-rod base manifold: **SS5V3-10S3□D** - Stations $\frac{U}{D}$ (S, R, RS) - C6, N7 (-D)
C8, N9
C10, N11

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

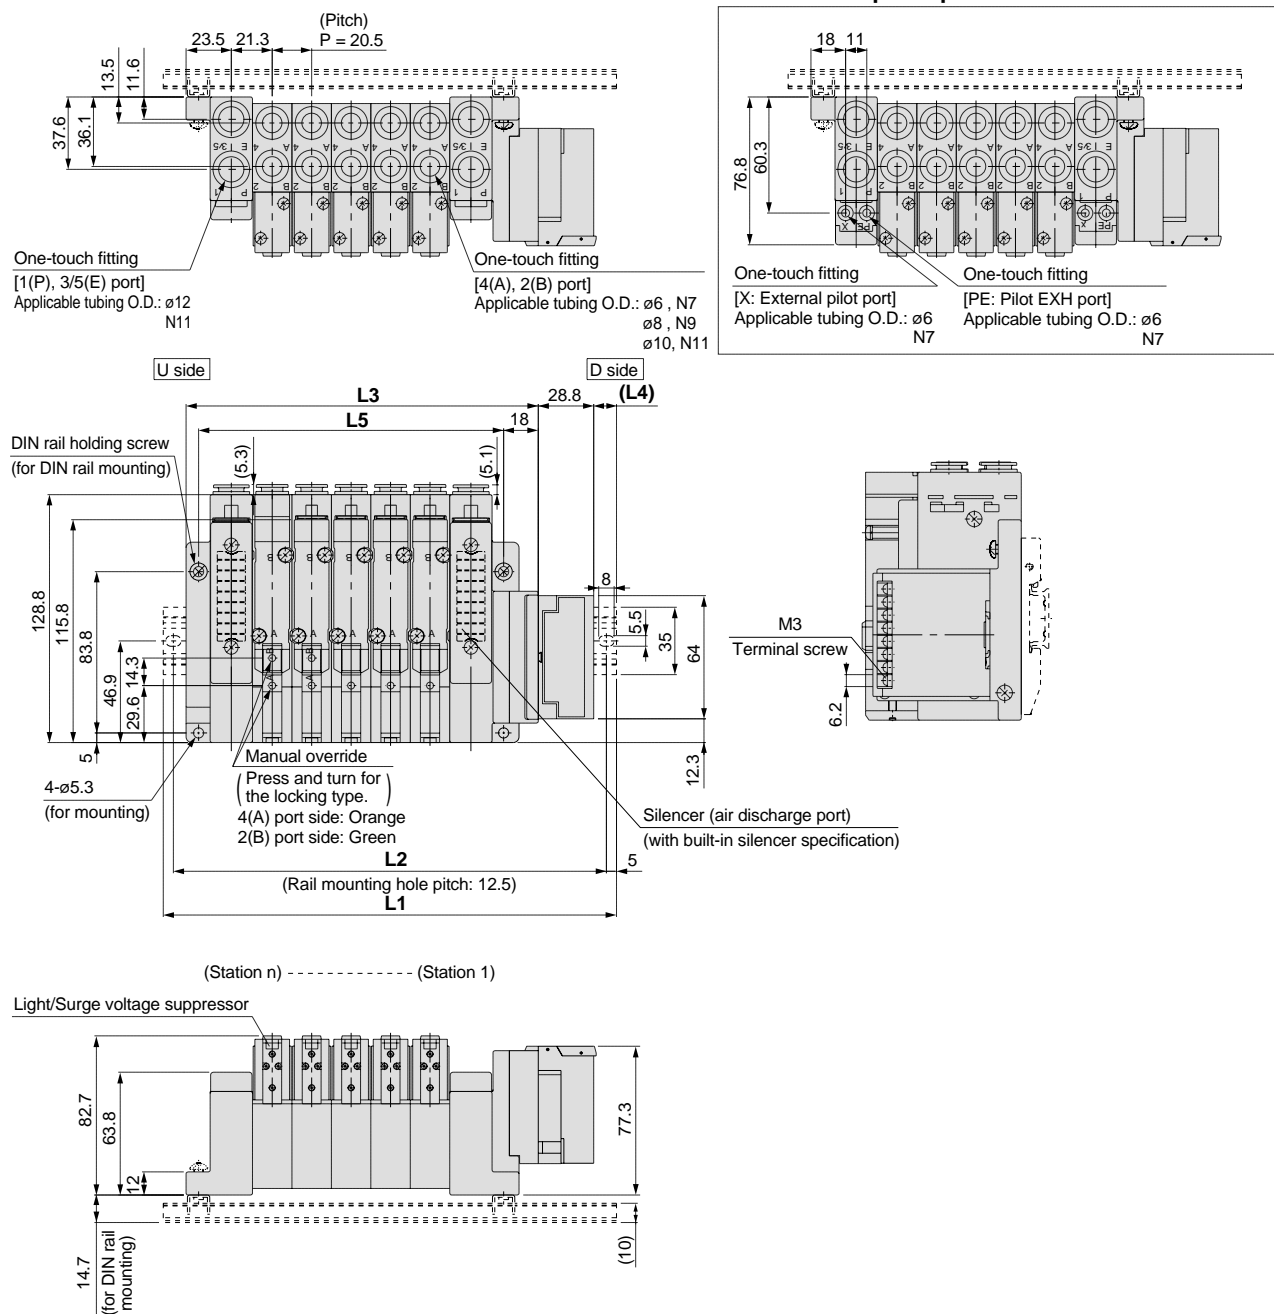

L dimensions (mm)

n: Stations

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	185.5	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	460.5
L2	175	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	400	412.5	437.5	450
L3	121.5	142	162.5	183	203.5	224	244.5	265	285.5	306	326.5	347	367.5	388	408.5
L4	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5	11.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384


Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is 24.3mm greater.
Contact SMC for details.

Dimensions: Series SV4000 for EX120 Dedicated Output Serial Wiring



1in = 25.4mm

• Tie-rod base manifold: **SS5V4-10S3** **D** - Stations $\begin{matrix} \text{U} \\ \text{D} \end{matrix}$ (**S, R, RS**) - $\begin{matrix} \text{02, C8, N9,} \\ \text{03, C10, N11} \end{matrix}$ (**-D**)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

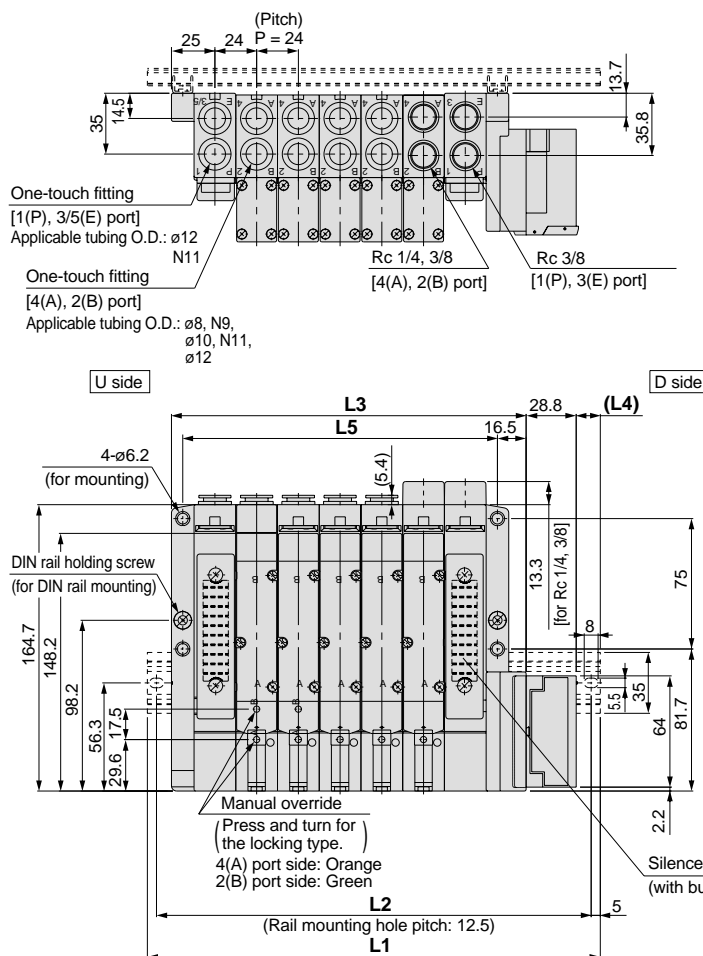

With external pilot specification

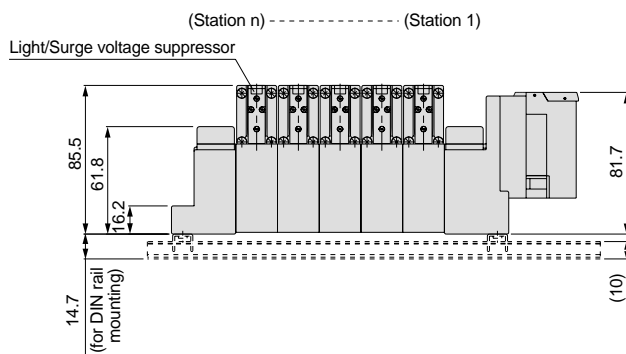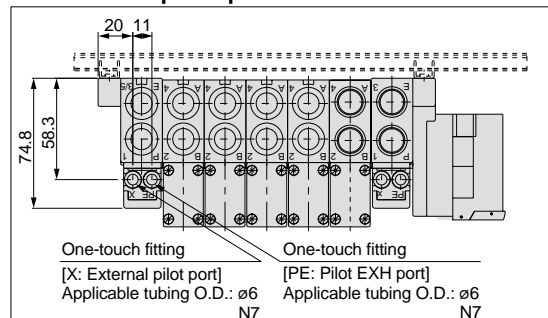

L dimensions (mm)


n: Stations

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	448	473	498	523
L2	175	200	225	250	275	300	325	350	375	400	425	437.5	462.5	487.5	512.5
L3	132	156	180	204	228	252	276	300	324	348	372	396	420	444	468
L4	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445

Note) The width of type E (Matsushita Electric Works) and type G (Rockwell Automation) SI units is 24.3mm greater.
Contact SMC for details.

Circular Connector

IP67 protection

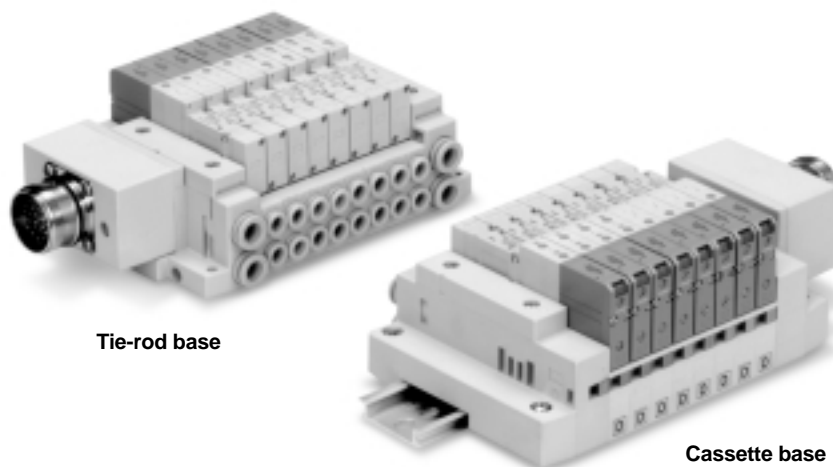

Tie-rod base

Cassette base

Applicable series	Cassette base manifold SV1000/SV2000
	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	• Number of connectors: 26 pins

How to Order

• Tie-rod base

• Cassette base

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Valve stations

Symbol	Stations	Note
02	2 stations	Double wiring specification Note 1)
:	:	
12	12 stations	Specified layout (Up to 24 solenoids possible.) Note 2)
02	2 stations	
:	:	
20	20 stations	

Mounting

Nil	Direct mount
D	DIN rail mount (with DIN rail)
D0 ^{Note)}	DIN rail mount (without DIN rail)
D3	For 3 stations
:	:
D20	For 20 stations

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet. (Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

Note) In case of D0, only DIN rail fittings are attached.

DIN rail length

Nil	Standard length
3	For 3 stations
:	:
20	For 20 stations

A, B port size (metric)

Symbol	A, B port	P, E port	Applicable series	
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting	ø10 One-touch fitting	SV2000	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV3000	
C8	ø8 One-touch fitting			
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV4000	
C8	ø8 One-touch fitting			
C10	ø10 One-touch fitting	ø12 One-touch fitting		
C12	ø12 One-touch fitting			
02	Rc 1/4	Rc 3/8	SV4000	
03	Rc 3/8			
02F	G 1/4	G 3/8	SV4000	
03F	G 3/8			
M	A, B ports mixed			

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV2000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV3000
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV4000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting	NPT 3/8	SV4000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting	NPTF 3/8	SV4000
02N	NPT 1/4		
03N	NPT 3/8	NPTF 3/8	SV4000
02T	NPTF 1/4		
03T	NPTF 3/8		
M	A, B ports mixed		

Enclosure IP67 specification

Valve stations

Series SV1000

Symbol	Stations	Note
02	2 stations	Double wiring specification Note 1)
:	:	
09	9 stations	Specified layout (Up to 18 solenoids possible.) Note 2)
02	2 stations	
:	:	
18	18 stations	

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet. (Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

Series SV2000

Symbol	Stations	Note
02	2 stations	Double wiring specification Note 1)
:	:	
12	12 stations	Specified layout (Up to 24 solenoids possible.) Note 2)
02	2 stations	
:	:	
20	20 stations	

P, E port position

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 20 stations)

Supply/Exhaust block assembly specification


Nil	Internal pilot specification
S*	Internal pilot/Built-in silencer
R	External pilot specification
RS*	External pilot/Built-in silencer

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold
SS5V1-W16CD-06B-C6 (1 set)

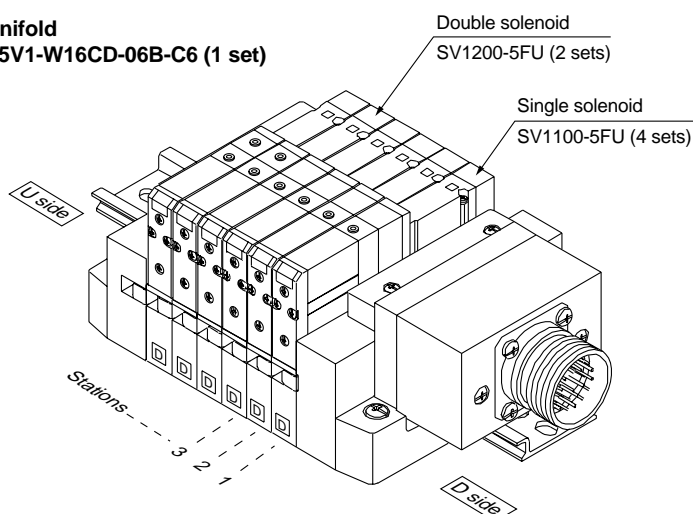

SS5V1-W16CD-06B-C6 1 set (manifold part no.)
 * SV1100-5FU 4 sets (single solenoid part no.)
 * SV1200-5FU 2 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 00 — 5 F

(Note) Available with manifold block for station additions. Refer to pages 77 and 81.

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Back pressure check valve

Nil	None
K	Built-in

* Built-in back pressure check valve type is applicable to series SV1000 only.



* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

Manual override

Nil: Non-locking push type

D: Slotted locking type

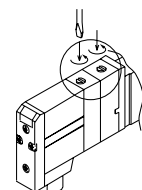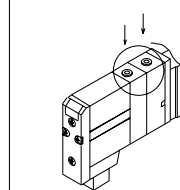

Light/Surge voltage suppressor



U	With light and surge voltage suppressor
R	With surge voltage suppressor

Rated voltage

5	24VDC
6	12VDC

Manifold Electrical Wiring

10C/16C Circular Connector Type (26 pins)

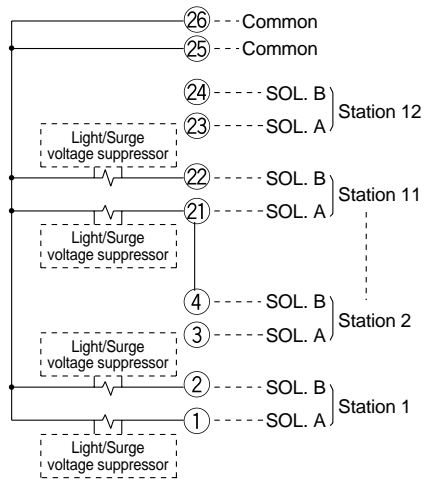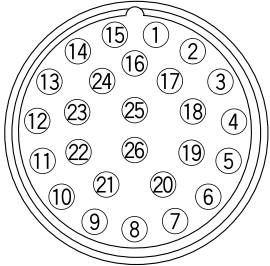

- This circuit has double wiring specifications for up to 12 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→2→3→4, etc.
- Stations are counted starting from station 1 on the D side (connector side).
- Since solenoid valves do not have polarity, either the +COM or –COM can be used.

Usable number of solenoids


Model		Maximum number of solenoids
Tie-rod base type 10	SV1000 to SV4000	24
Cassette base type 16	SV1000	18
	SV2000	24

Dimensions: Series SV1000 for Circular Connector



1in = 25.4mm

• Cassette base manifold: **SS5V1-W16CD** - Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (**S, R, RS**) - $\begin{matrix} C3, N1 \\ C4, N3 \\ C6, N7 \end{matrix}$


- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

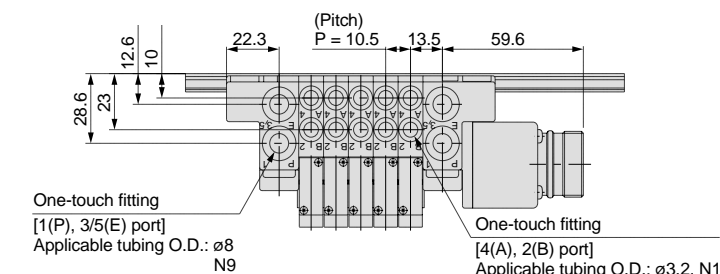

With external pilot specification

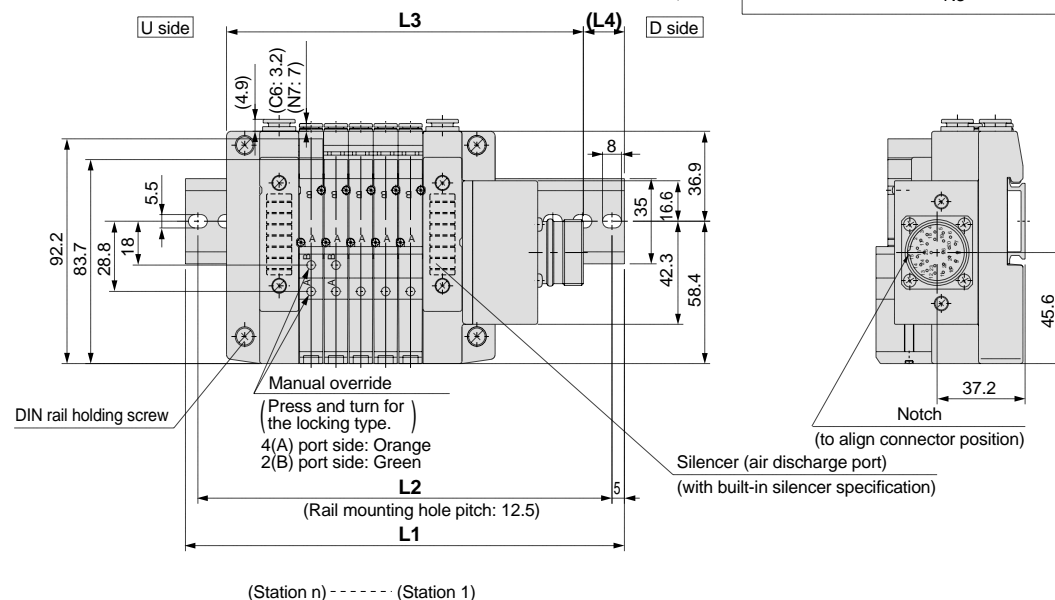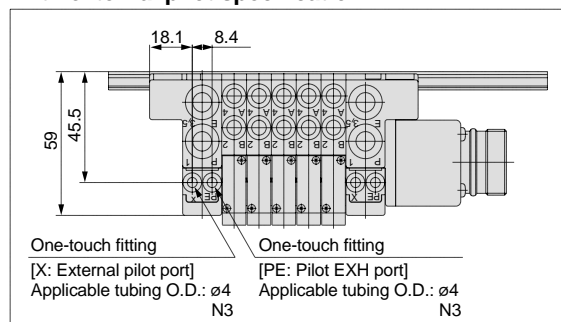

Light/Surge voltage suppressor

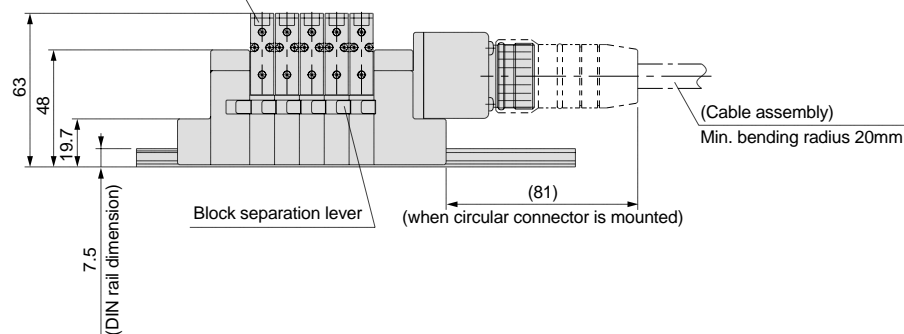

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5
L2	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300
L3	119.3	129.8	140.3	150.8	161.3	171.8	182.3	192.8	203.3	213.8	224.3	234.8	245.3	255.8	266.3	276.8	287.3
L4	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16	17	11.5

Dimensions: Series SV2000 for Circular Connector

• Cassette base manifold: **SS5V2-W16CD-**

Stations
U
D
B


 (S, R, RS) -

C4, N3
C6, N7
C8, N9

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

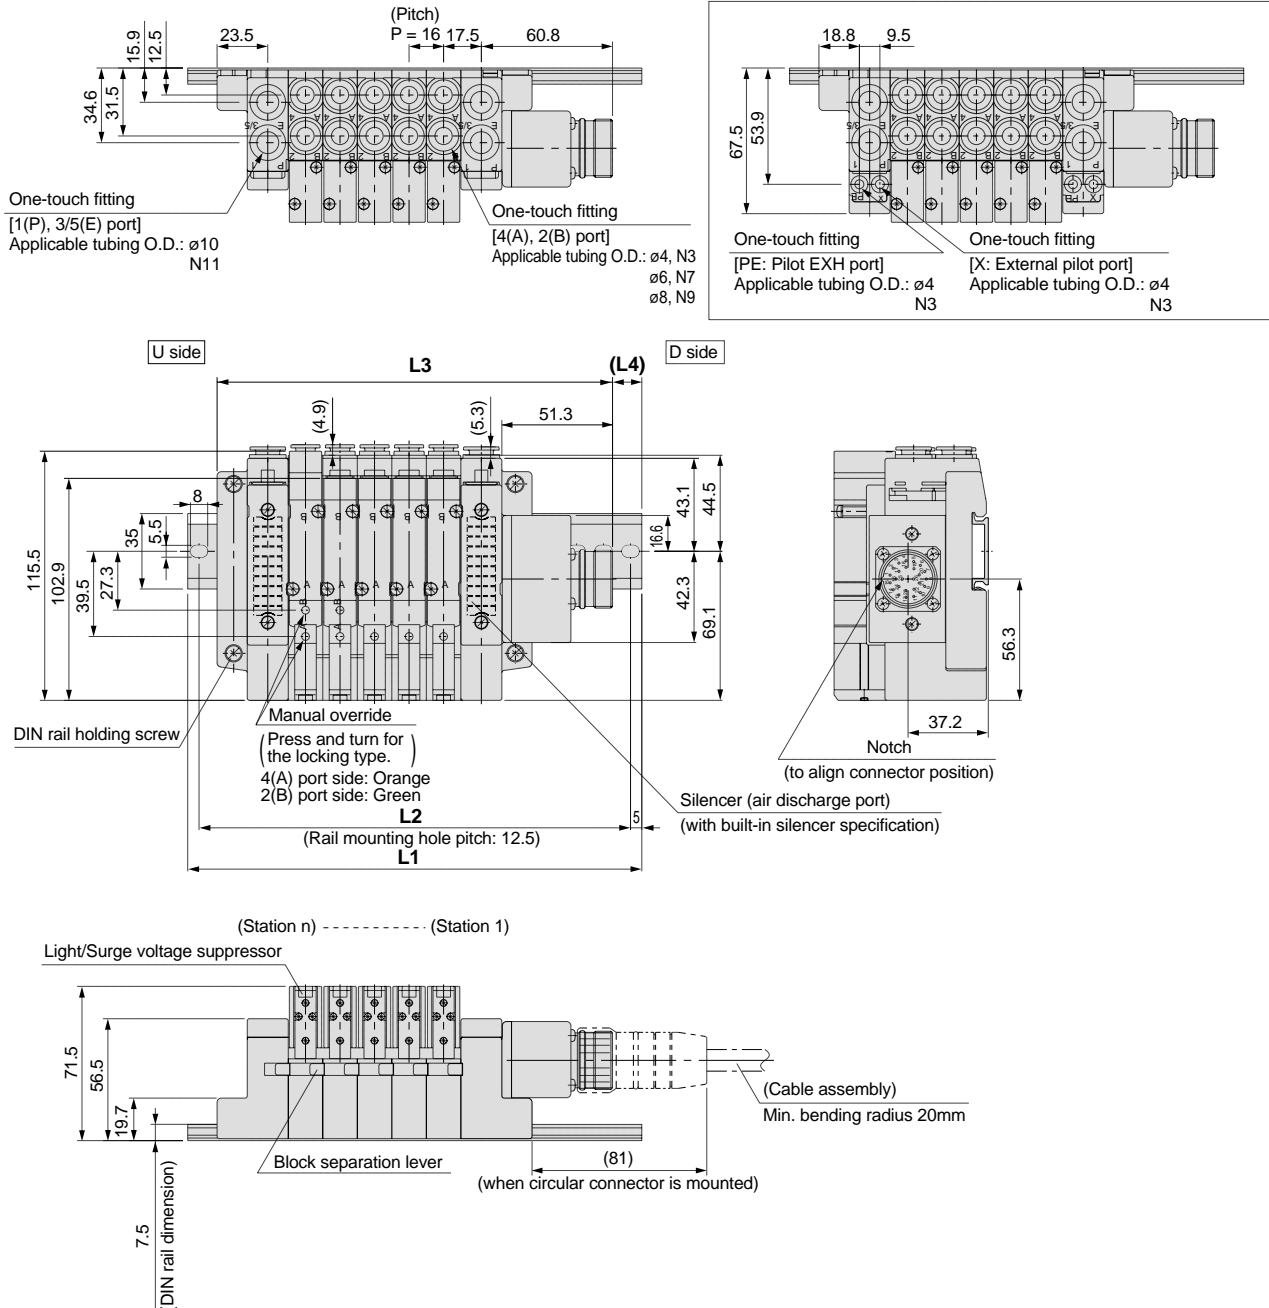

L dimensions (mm)

n: Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	185.5	198	210.5	223	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448
L2	150	175	187.5	200	212.5	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425	437.5
L3	135.3	151.3	167.3	183.3	199.3	215.3	231.3	247.3	263.3	279.3	295.3	311.3	327.3	343.3	359.3	375.3	391.3	407.3	423.3
L4	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

Dimensions: Series SV1000 for Circular Connector




1in = 25.4mm

• Tie-rod base manifold: **SS5V1-W10CD** - Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (**S, R, RS**) - $\begin{matrix} C3, N1 \\ C4, N3 \\ C6, N7 \end{matrix}$ (**-D**)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

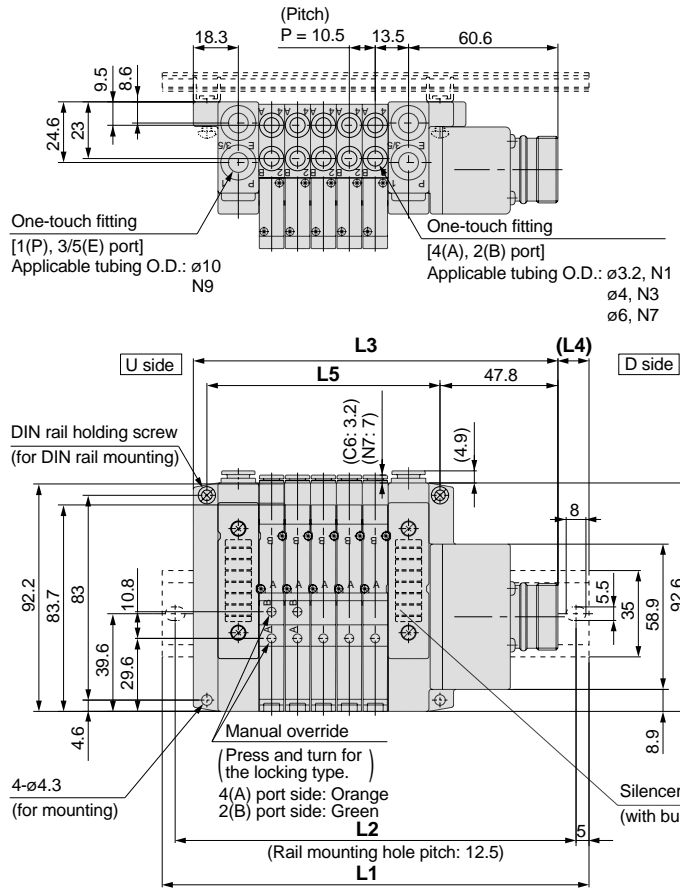

With external pilot specification

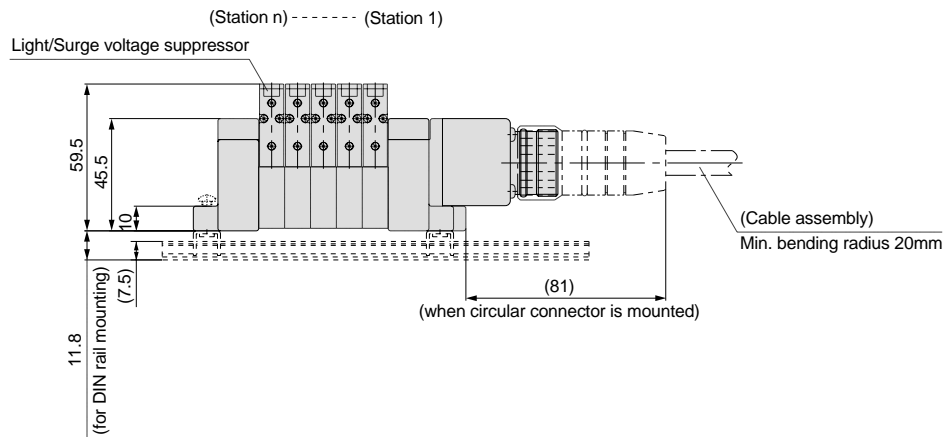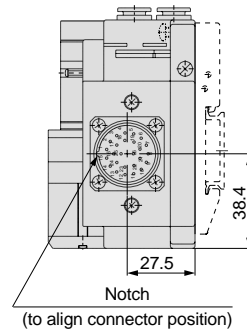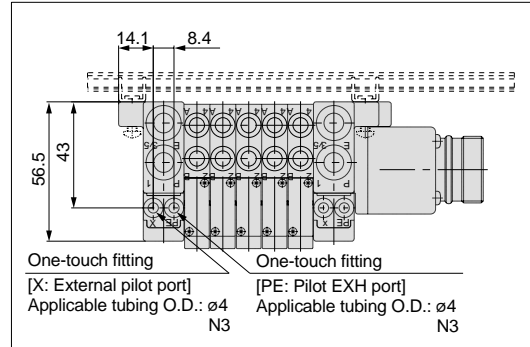

L dimensions (mm)

n: Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5
L2	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325
L3	116.3	126.8	137.3	147.8	158.3	168.8	179.3	189.8	200.3	210.8	221.3	231.8	242.3	252.8	263.3	273.8	284.3	294.8	305.3
L4	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

Dimensions: Series SV2000 for Circular Connector




1in = 25.4mm

• Tie-rod base manifold: **SS5V2-W10CD** - Stations $\begin{matrix} U \\ D \end{matrix}$ **(S, R, RS) - $\begin{matrix} C4, N3 \\ C6, N7 \\ C8, N9 \end{matrix}$ (-D)**

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

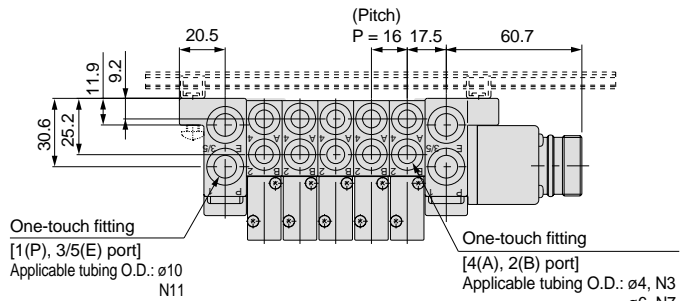

With external pilot specification

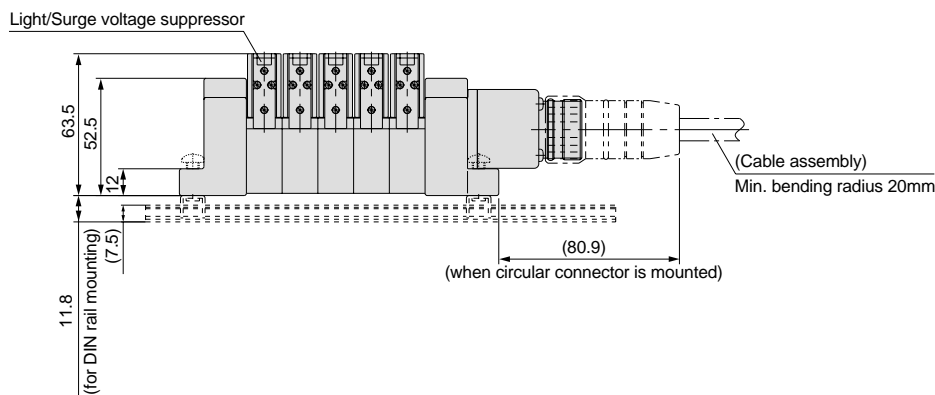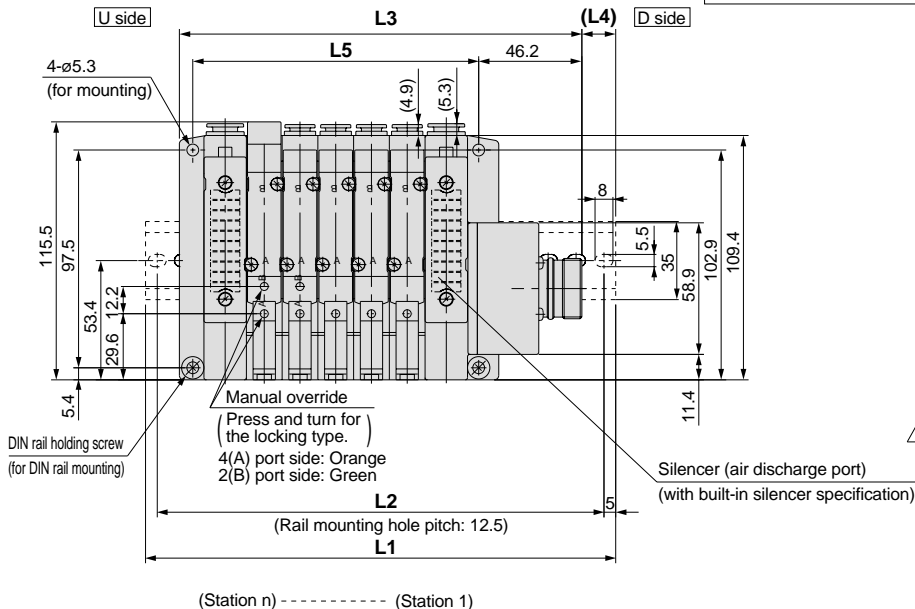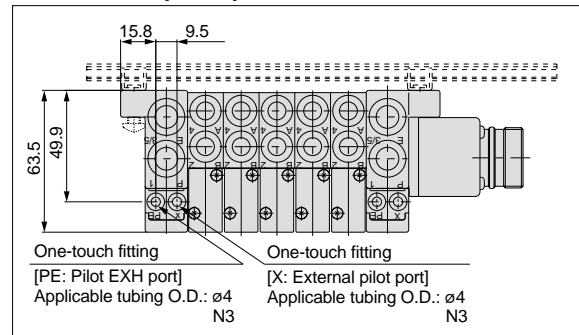

L dimensions (mm)

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1		160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448
L2		150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5
L3		132.2	148.2	164.2	180.2	196.2	212.2	228.2	244.2	260.2	276.2	292.2	308.2	324.2	340.2	356.2	372.2	388.2	404.2	420.2
L4		14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14
L5		80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


Dimensions: Series SV3000 for Circular Connector

1in = 25.4mm

• Tie-rod base manifold: **SS5V3-W10CD** - Stations $\begin{matrix} \text{U} \\ \text{D} \end{matrix}$ **(S, R, RS)** - $\begin{matrix} \text{C6, N7} \\ \text{C8, N9} \\ \text{C10, N11} \end{matrix}$ **(-D)**

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

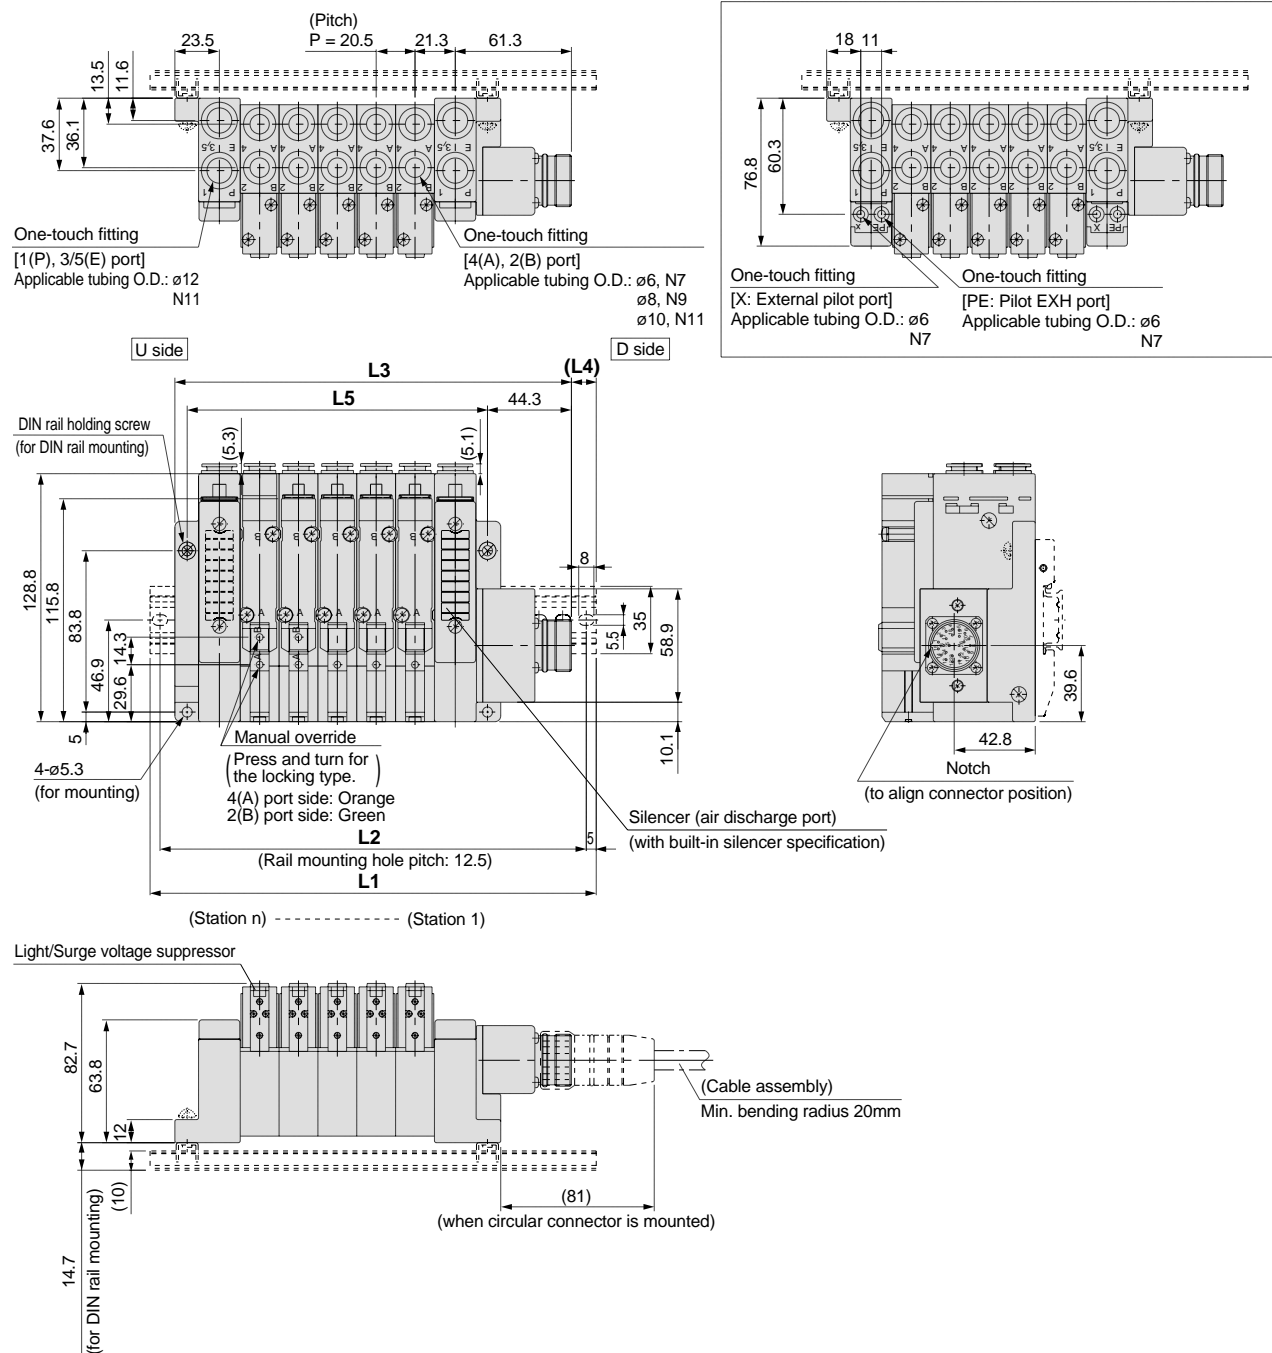

L dimensions (mm)

n : Stations


n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	198	223	235.5	260.5	285.5	298	323	335.5	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548
L2	162.5	187.5	212.5	225	250	275	287.5	312.5	325	350	375	387.5	412.5	437.5	450	475	500	512.5	537.5
L3	147.8	168.3	188.8	209.3	229.8	250.3	270.8	291.3	311.8	332.3	352.8	373.3	393.8	414.3	434.8	455.3	475.8	496.3	516.8
L4	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

Dimensions: Series SV4000 for Circular Connector




1in = 25.4mm

• Tie-rod base manifold: **SS5V4-W10CD** - Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (**S, R, RS**) - $\begin{matrix} 02, C8, N9, \\ 03, C10, N11, \\ C12, \end{matrix}$ (**-D**)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

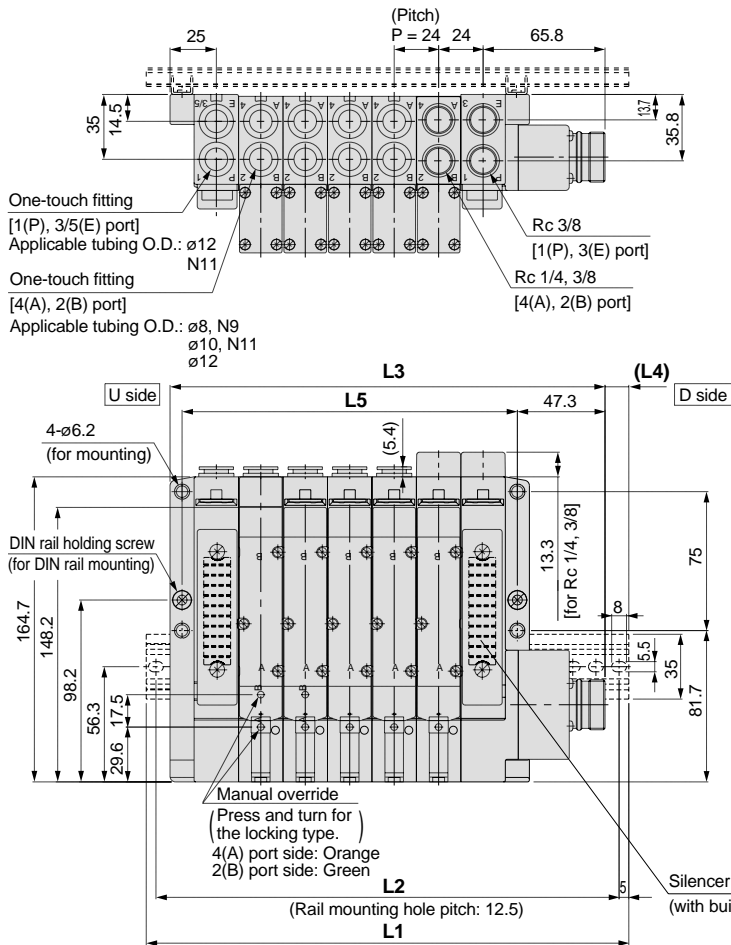

With external pilot specification

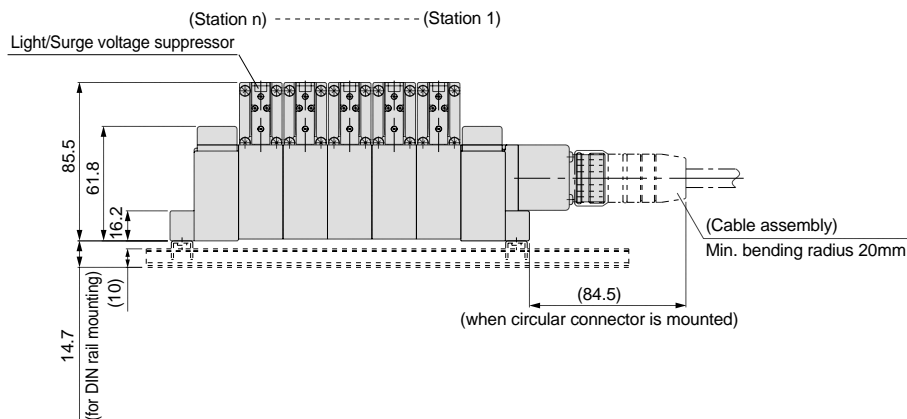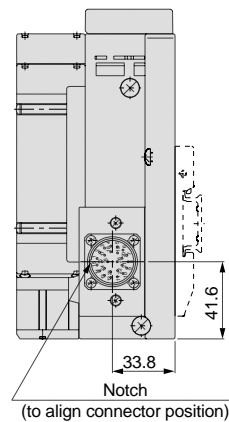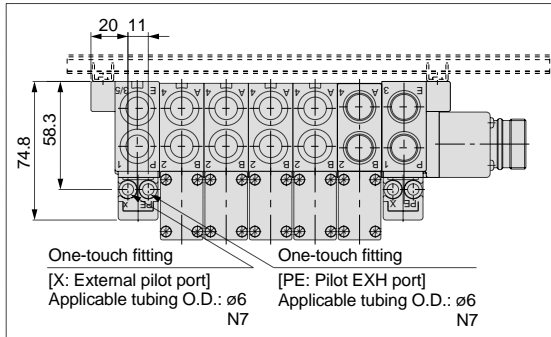

L dimensions (mm)


n: Stations

	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	198	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	498	523	548	573	598	623
L2	187.5	200	225	250	275	300	325	350	375	400	425	450	475	487.5	512.5	537.5	562.5	587.5	612.5
L3	162.8	186.8	210.8	234.8	258.8	282.8	306.8	330.8	354.8	378.8	402.8	426.8	450.8	474.8	498.8	522.8	546.8	570.8	594.8
L4	17.5	12	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13	13.5	14
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541

D-sub Connector



Tie-rod base

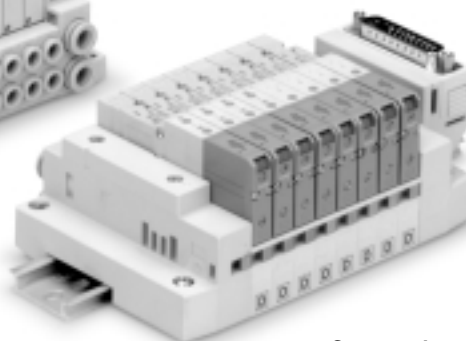


Cassette base

Applicable series	Cassette base manifold SV1000/SV2000
	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	<ul style="list-style-type: none">• Number of connectors: 25 pins• MIL-C-24308• Conforms to JIS-X-5101

How to Order

• Tie-rod base

• Cassette base

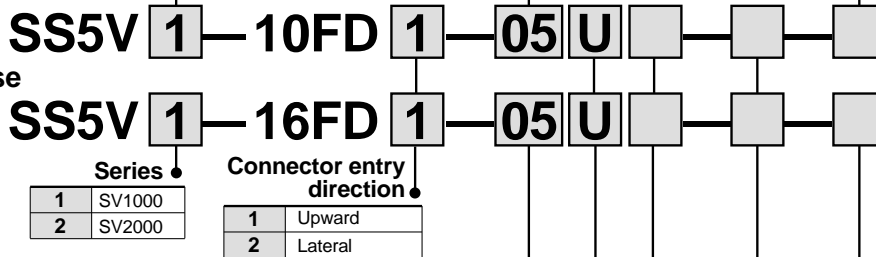

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet. (Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

Valve stations

Series SV1000

Symbol	Stations	Note
02	2 stations	Double wiring specification
:	:	
09	9 stations	Specified layout
02	2 stations	
:	:	(Up to 18 solenoids possible.)
18	18 stations	

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet. (Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

P, E port position

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 20 stations)

Pilot specification

Nil	Internal pilot specification
S	Internal pilot/Built-in silencer
R	External pilot specification
RS	External pilot/Built-in silencer

DIN rail length

Nil	Standard length
3	For 3 stations
:	:
20	For 20 stations

Series SV2000

Symbol	Stations	Note
02	2 stations	Double wiring specification
:	:	
11	11 stations	Specified layout
02	2 stations	
:	:	(Up to 23 solenoids possible.)
20	20 stations	

A, B port size (metric)

Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting	ø10 One-touch fitting	SV2000
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV3000
C8	ø8 One-touch fitting		
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV4000
C8	ø8 One-touch fitting		
C10	ø10 One-touch fitting	ø12 One-touch fitting	SV4000
C8	ø8 One-touch fitting		
C12	ø12 One-touch fitting	Rc 3/8	SV4000
02	Rc 1/4		
03	Rc 3/8	G 3/8	SV4000
02F	G 1/4		
03F	G 3/8	G 3/8	SV4000
M	A, B ports mixed		

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV2000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV3000
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV4000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting	ø3/8" One-touch fitting	SV4000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting	NPT 3/8	SV4000
02N	NPT 1/4		
03N	NPT 3/8	NPTF 3/8	SV4000
02T	NPTF 1/4		
03T	NPTF 3/8	A, B ports mixed	SV4000
M	A, B ports mixed		


* In case of mixed specification (M), indicate separately on a manifold specification sheet.

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold

SS5V1-10FD1-06B-C6 (1 set)

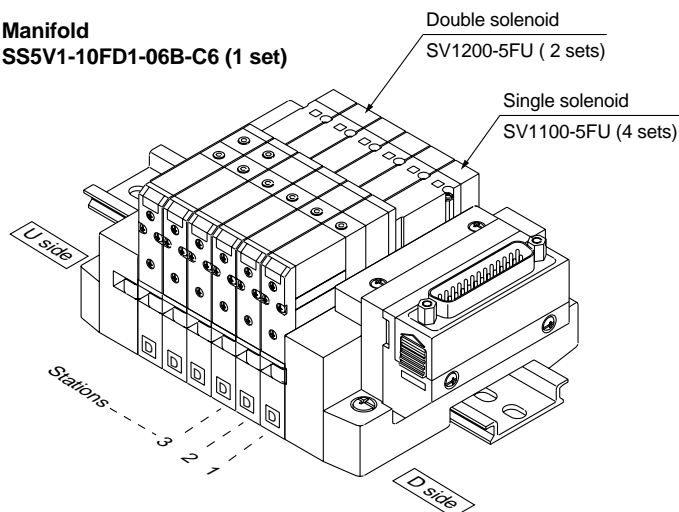

SS5V1-10FD1-06B-C6 1 set (manifold part no.)
 * SV1100-5FU 4 sets (single solenoid part no.)
 * SV1200-5FU 2 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 0 0 — 5 F

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Rated voltage

5	24VDC
6	12VDC

Back pressure check valve

Nil	None
K	Built-in

* Built-in back pressure check valve type is applicable to series SV1000 only.

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.



* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

Note) Available with manifold block for station additions. Refer to pages 77 and 81.

Manual override

Nil: Non-locking push type

D: Slotted locking type

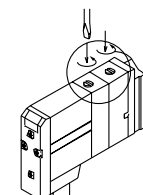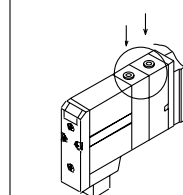


Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

Manifold Electrical Wiring

10F/16F D-sub Connector Type (25 pins)

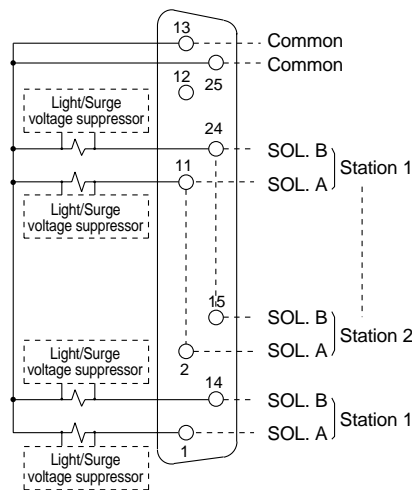

- This circuit has double wiring specifications for up to 11 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→14→2→15, etc.
- Stations are counted starting from station 1 on the D side (connector side).
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

Usable number of solenoids


Model		Maximum number of solenoids
Tie-rod base type 10	SV1000	23
	to SV4000	
Cassette base type 16	SV1000	18
	SV2000	23

Dimensions: Series SV1000 for D-sub Connector

• Cassette base manifold: **SS5V1-16FD** $\frac{1}{2}$ - Stations $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ (**S, R, RS**) - $\begin{matrix} \text{C3, N1} \\ \text{C4, N3} \\ \text{C6, N7} \end{matrix}$

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

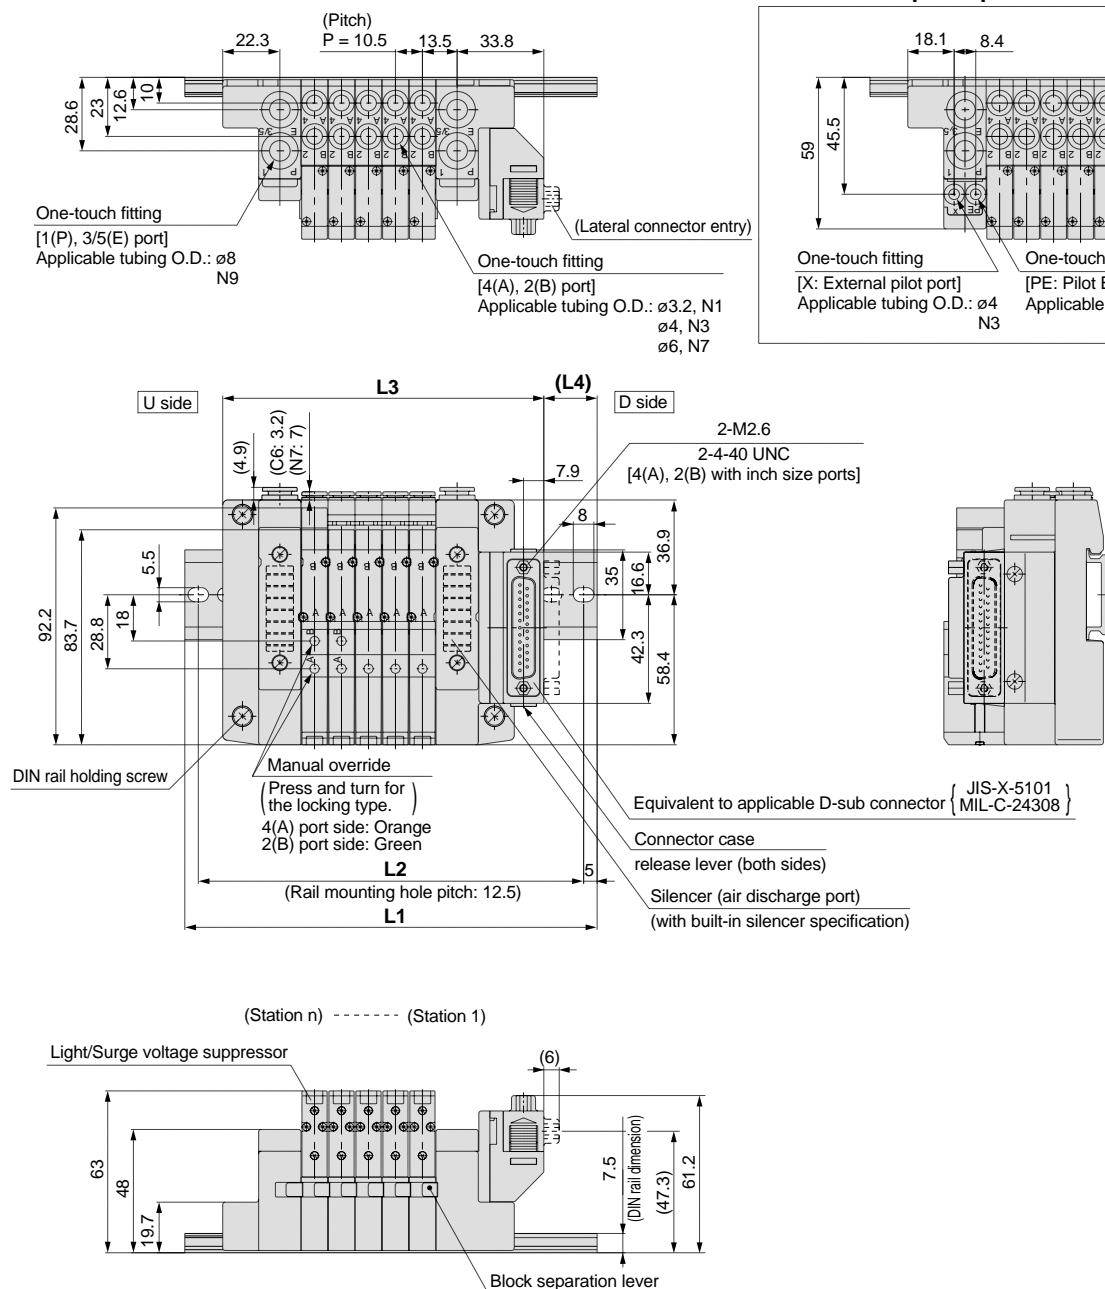

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5
L4	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5




Dimensions: Series SV2000 for D-sub Connector

• Cassette base manifold: **SS5V2-16FD** $\frac{1}{2}$ - Stations $\begin{matrix} \text{U} \\ \text{D} \\ \text{B} \end{matrix}$ (**S, R, RS**) - $\begin{matrix} \text{C4, N3} \\ \text{C6, N7} \\ \text{C8, N9} \end{matrix}$

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

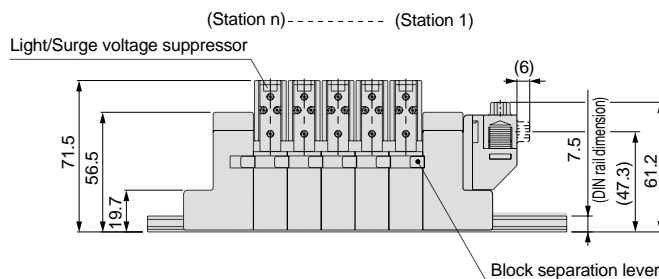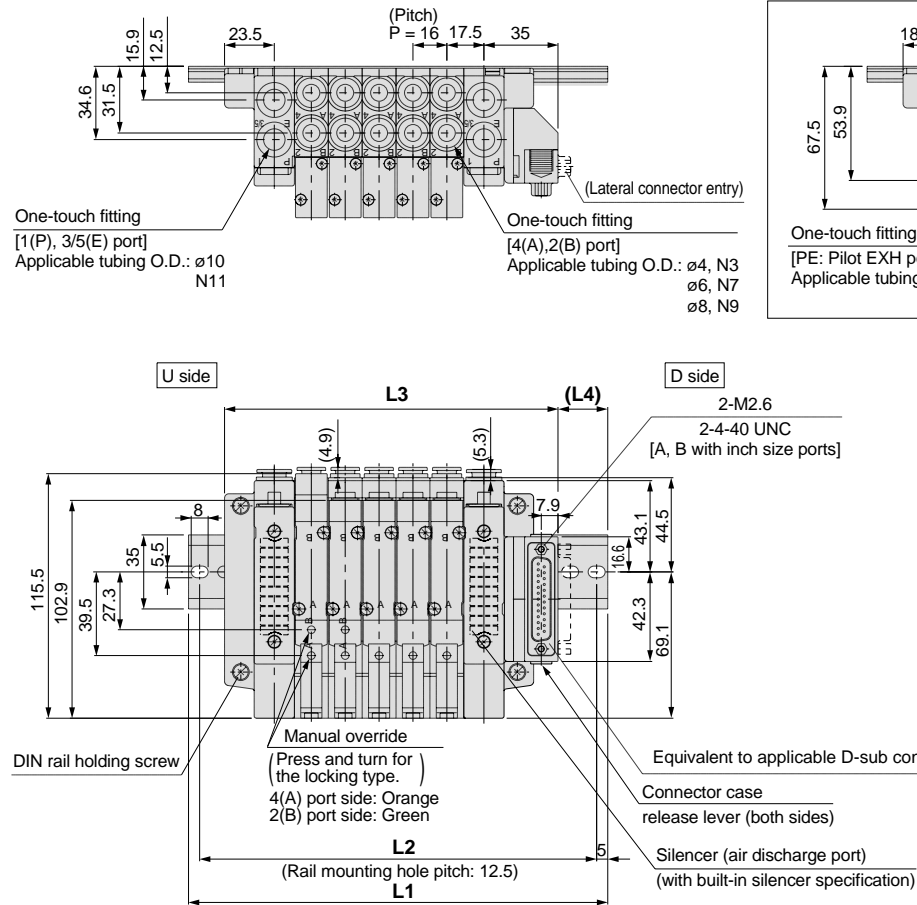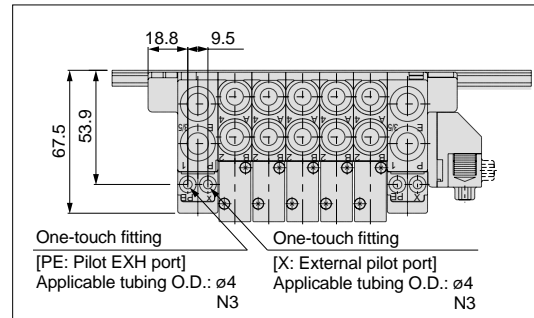

L dimensions (mm)

n: Stations

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
L4	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22


Dimensions: Series SV1000 for D-sub Connector

• Tie-rod base manifold: **SS5V1-10FD₂** - Stations $\frac{U}{D}$ **(S, R, RS) - C3, N1 C4, N3 C6, N7 (-D)**

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

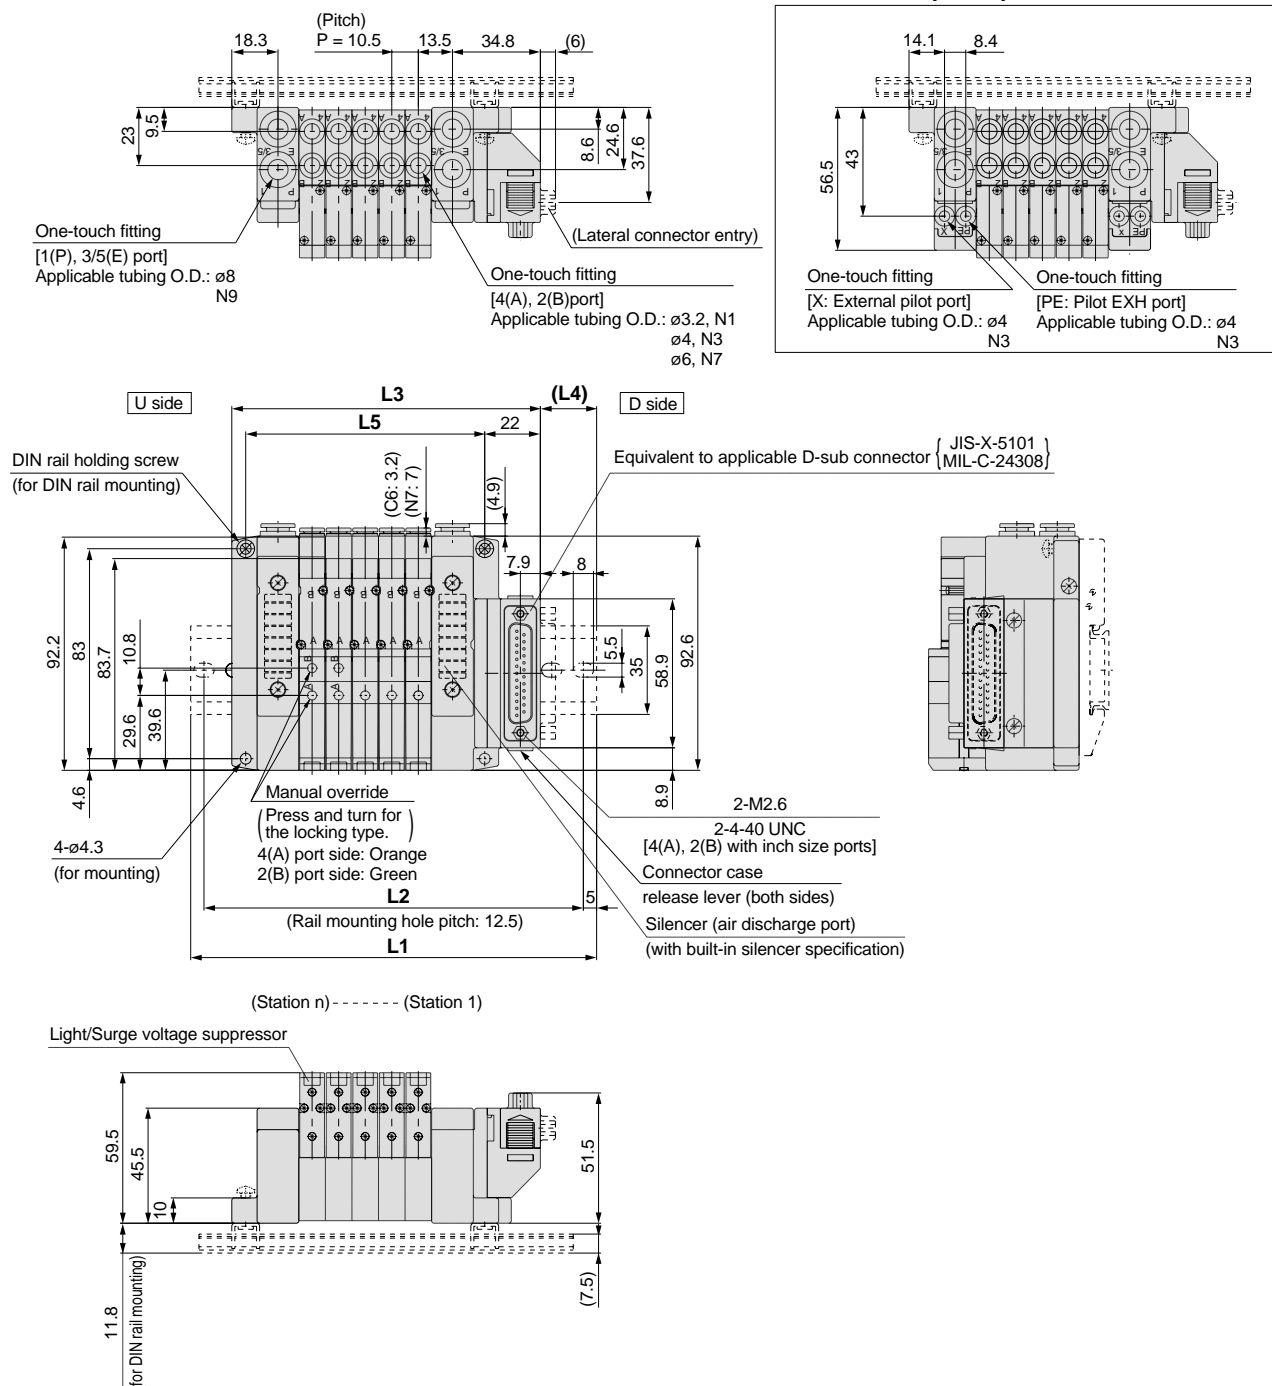

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	310.5	310.5
L2	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	300	300
L3	90.5	101	111.5	122	132.5	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
L4	19.5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	24	18.5
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.9	189	199.5	210	220.5	231	241.5	252




Dimensions: Series SV2000 for D-sub Connector

• Tie-rod base manifold: **SS5V2-10FD** $\frac{1}{2}$ = Stations $\begin{matrix} U \\ D \\ B \end{matrix}$ (S, R, RS) - $\begin{matrix} C4, N3 \\ C6, N7 \\ C8, N9 \end{matrix}$ (-D)

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

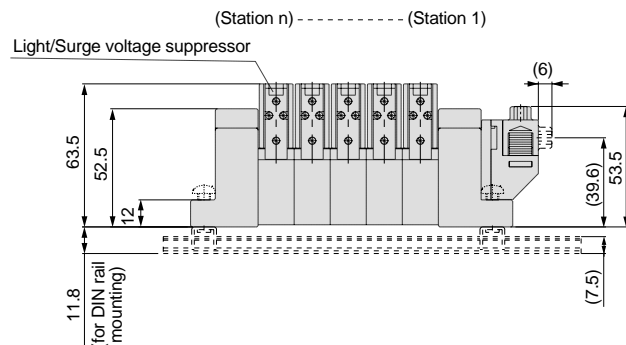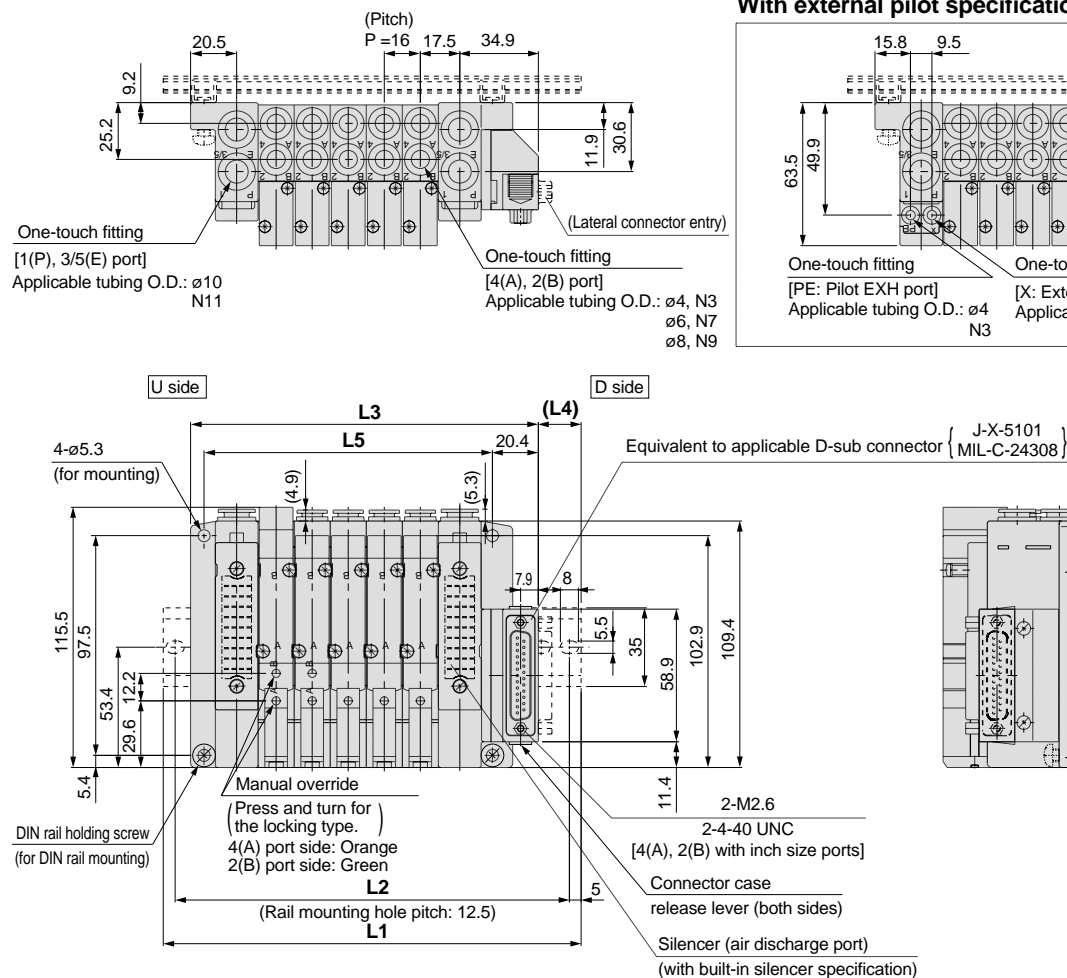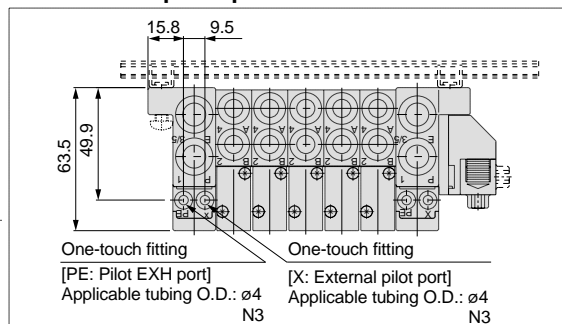

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5
L2	125	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425
L3	106.4	122.4	138.4	154.4	170.4	186.4	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4
L4	18	22	20.5	19	23	21.5	20	18	22.5	21	19	23.5	22	20	18	22.5	21	19	23.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


Dimensions/Series SV3000 for D-sub Connector

• Tie-rod base manifold: **SS5V3-10FD¹₂** - Stations $\begin{matrix} U \\ D \end{matrix}$ **(S, R, RS) - C6, N7** **(-D)** $\begin{matrix} C8, N9 \\ C10, N11 \end{matrix}$

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

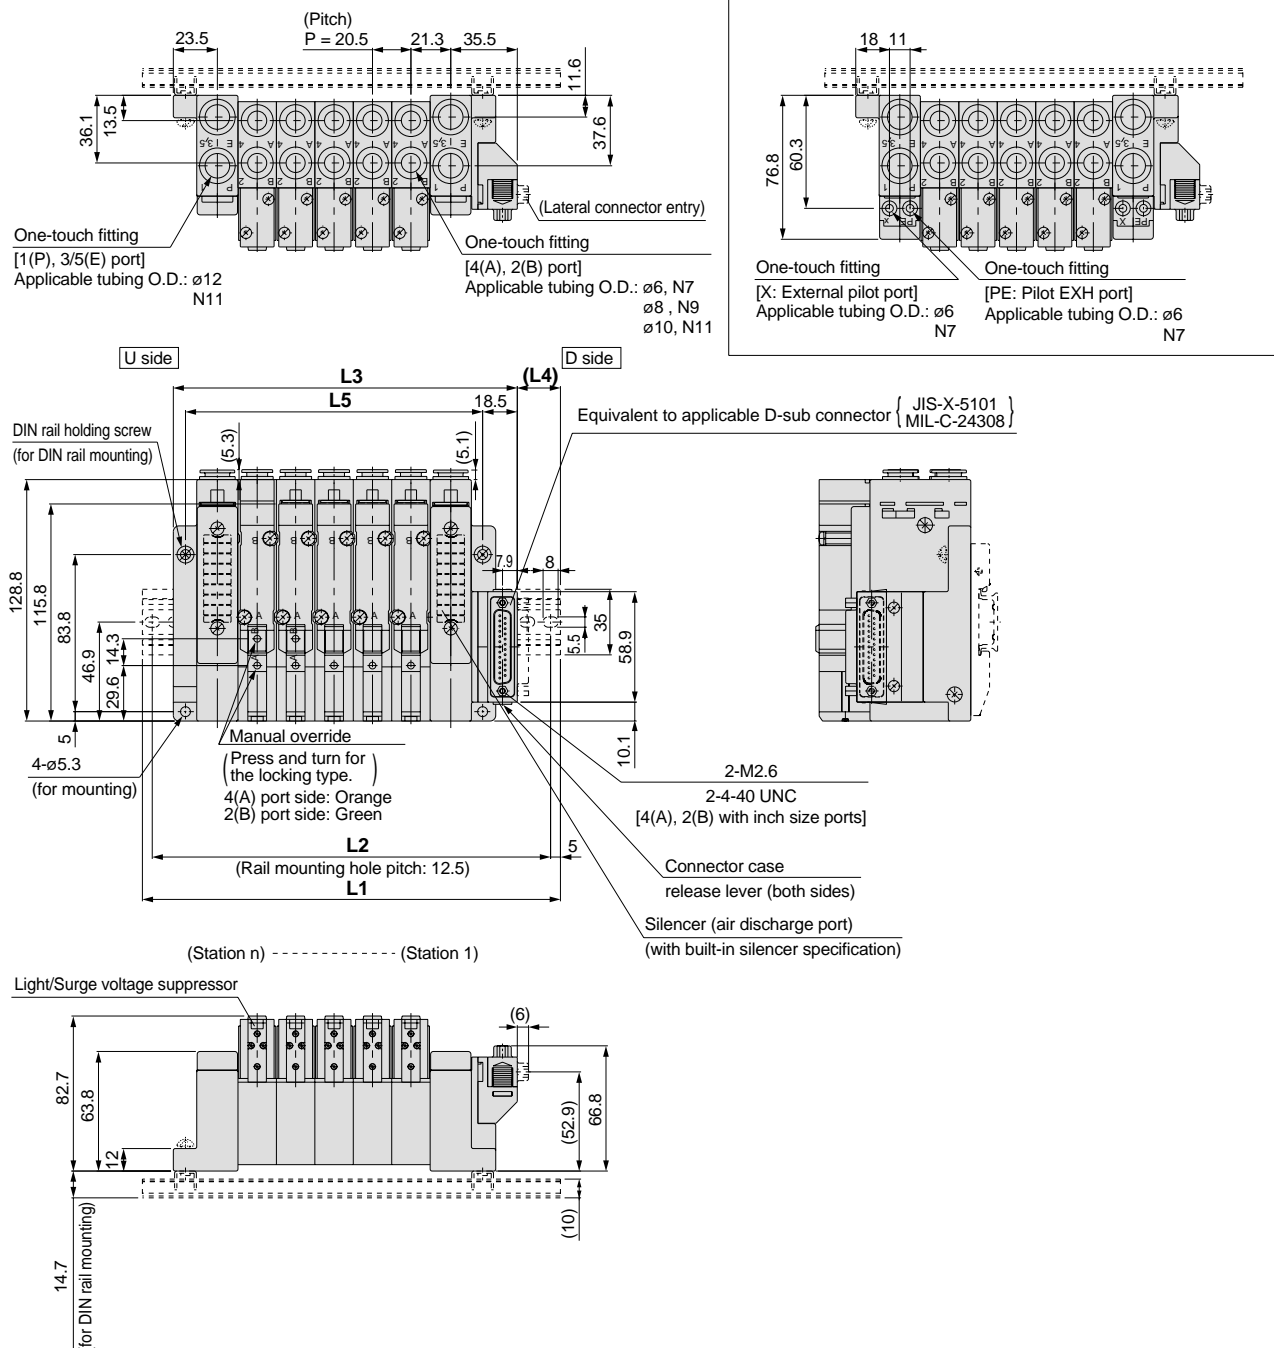

L dimensions (mm)

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1		160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2		150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3		122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
L4		22.5	18.5	20.5	23	19	21	23.5	19.5	21.5	24	20	22	18	20.5	22.5	18.5	21	23	19
L5		97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466


Dimensions: Series SV4000 for D-sub Connector

• Tie-rod base manifold: **SS5V4-10FD₂** - Stations $\frac{U}{D}$ (S, R, RS) - 02, C⁸, N⁹ 03, C¹⁰, N¹¹ (-D)

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

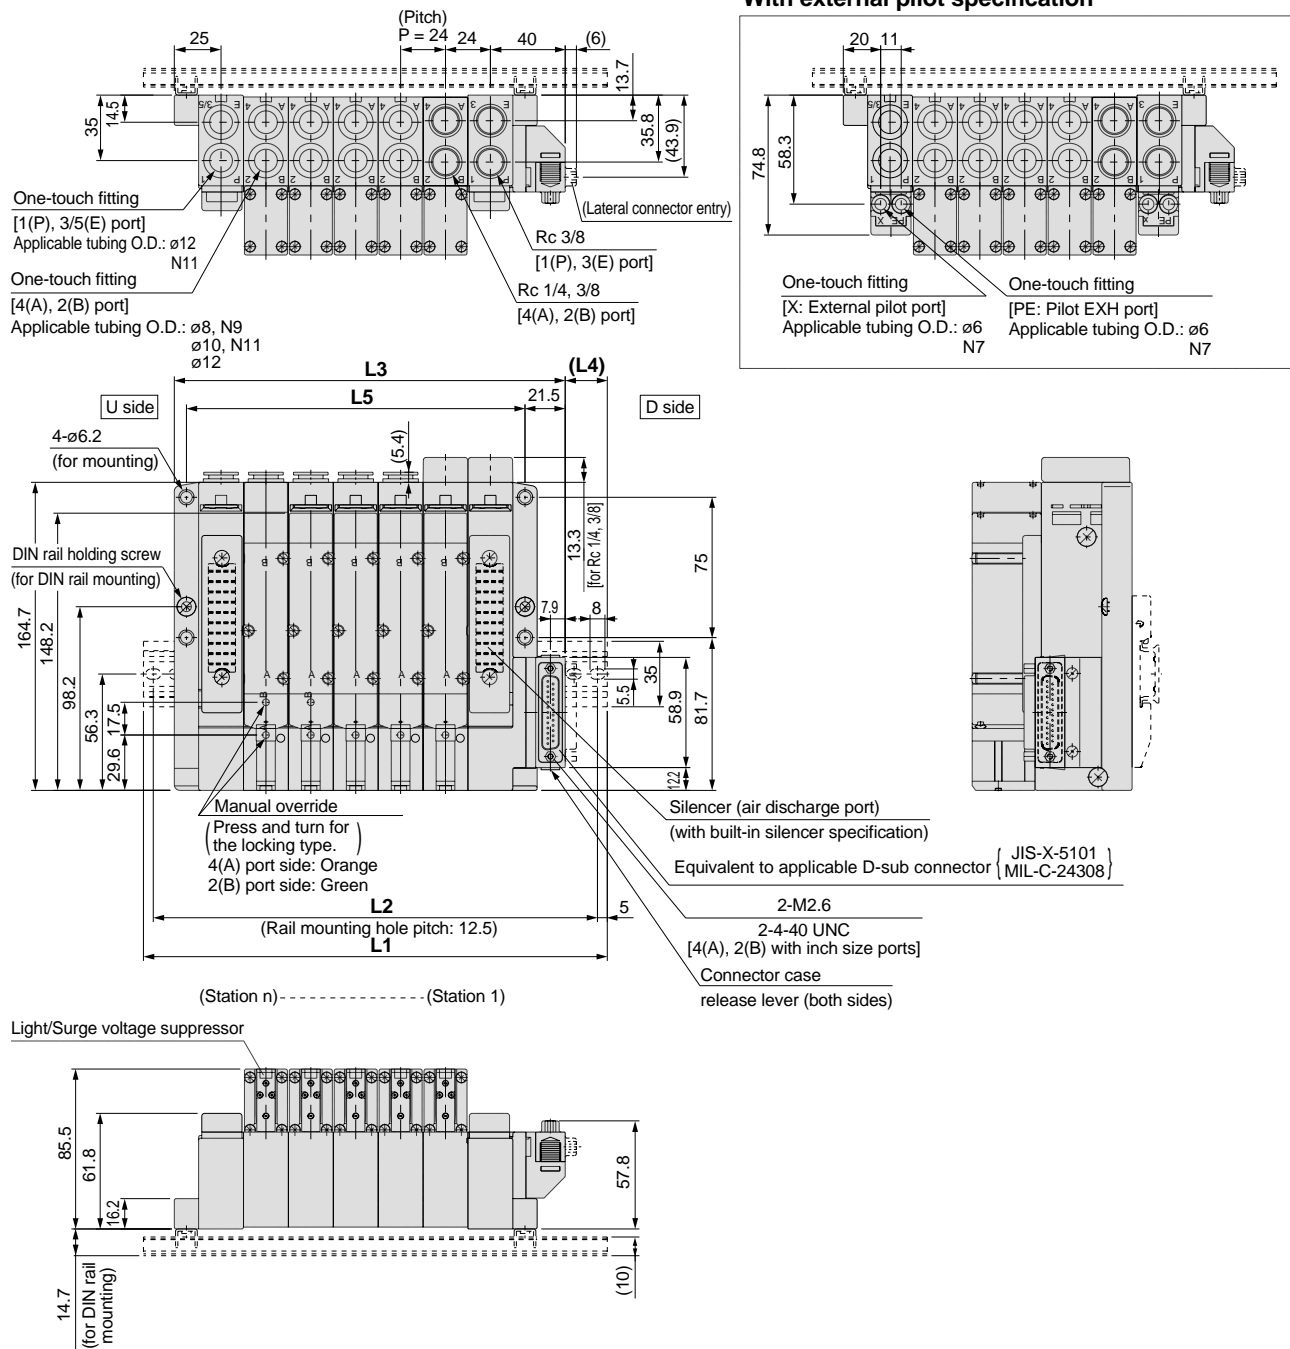

L dimensions (mm)


n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	198	223	248	273	298	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5	585.5	610.5
L2	162.5	187.5	212.5	237.5	262.5	287.5	300	325	350	375	400	425	450	475	500	525	550	575	600
L3	137	161	185	209	233	257	281	305	329	353	377	401	425	449	473	497	521	545	569
L4	21	21.5	22	22.5	23	23.5	18	18.5	19	19.5	20	20.5	21	21.5	22	22.5	23	23.5	24
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541

Flat Ribbon Cable




Tie-rod base

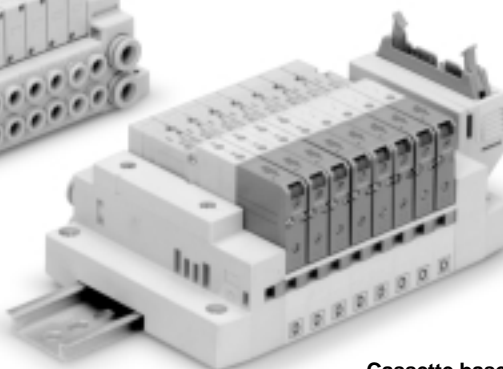

Cassette base

Applicable series	Cassette base manifold SV1000/SV2000
	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	<ul style="list-style-type: none">• Number of connectors: 26, 20, 10 pins• With strain reliefConforms to MIL-C-83503

How to Order

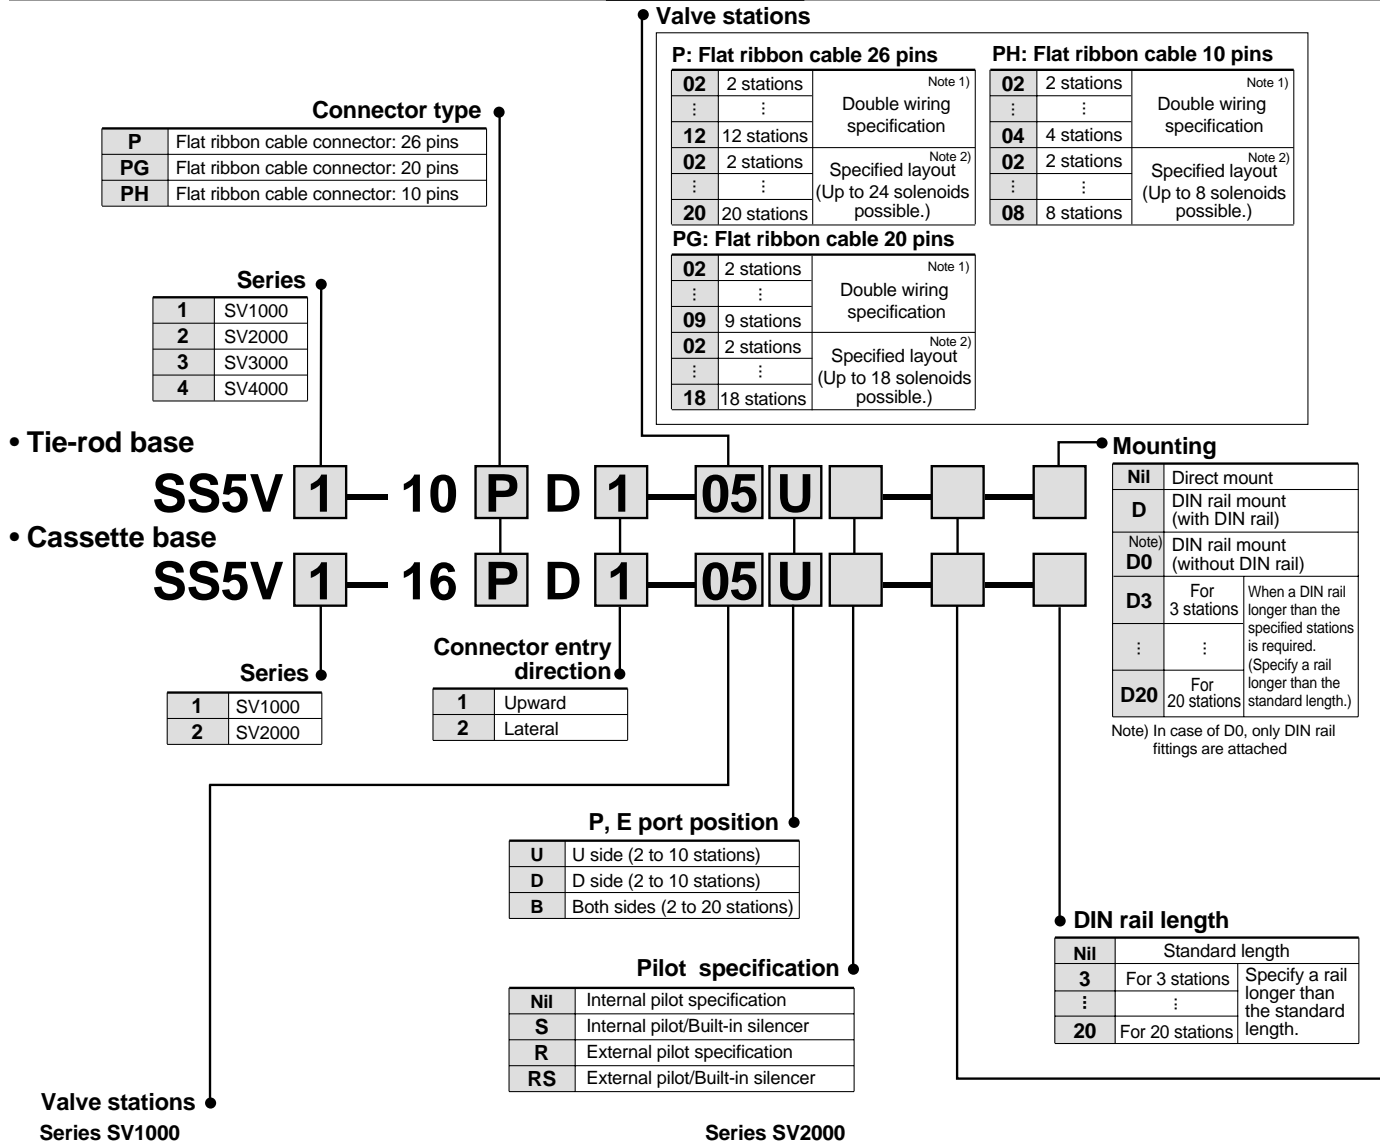

Valve stations

Series SV1000

P: Flat ribbon cable 26 pins			PH: Flat ribbon cable 10 pins		
02	2 stations	Double wiring specification <small>Note 1)</small>	02	2 stations	Double wiring specification <small>Note 1)</small>
⋮	⋮		⋮	⋮	
09	9 stations	Specified layout <small>Note 2)</small> (Up to 18 solenoids possible.)	04	4 stations	Specified layout <small>Note 2)</small> (Up to 8 solenoids possible.)
⋮	⋮		⋮	⋮	
18	18 stations		08	8 stations	

PG: Flat ribbon cable 20 pins		
02	2 stations	Double wiring specification <small>Note 1)</small>
⋮	⋮	
09	9 stations	Specified layout <small>Note 2)</small> (Up to 18 solenoids possible.)
⋮	⋮	
18	18 stations	

Note 1) Double wiring specification: Single, double and 3 position solenoid valves can be used on all manifold stations.
Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Series SV2000

P: Flat ribbon cable 26 pins			PH: Flat ribbon cable 10 pins		
02	2 stations	Double wiring specification <small>Note 1)</small>	02	2 stations	Double wiring specification <small>Note 1)</small>
⋮	⋮		⋮	⋮	
12	12 stations	Specified layout <small>Note 2)</small> (Up to 24 solenoids possible.)	04	4 stations	Specified layout <small>Note 2)</small> (Up to 8 solenoids possible.)
⋮	⋮		⋮	⋮	
20	20 stations		08	8 stations	


PG: Flat ribbon cable 20 pins		
02	2 stations	Double wiring specification <small>Note 1)</small>
⋮	⋮	
09	9 stations	Specified layout <small>Note 2)</small> (Up to 18 solenoids possible.)
⋮	⋮	
18	18 stations	

Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet.
(Note that double and 3 position valves cannot be used where single solenoid wiring has been specified.)

How to Order Manifold Assemblies (Order Example)

Example (SV1000)

Manifold
SS5V1-16PD1-06B-C6 (1 set)

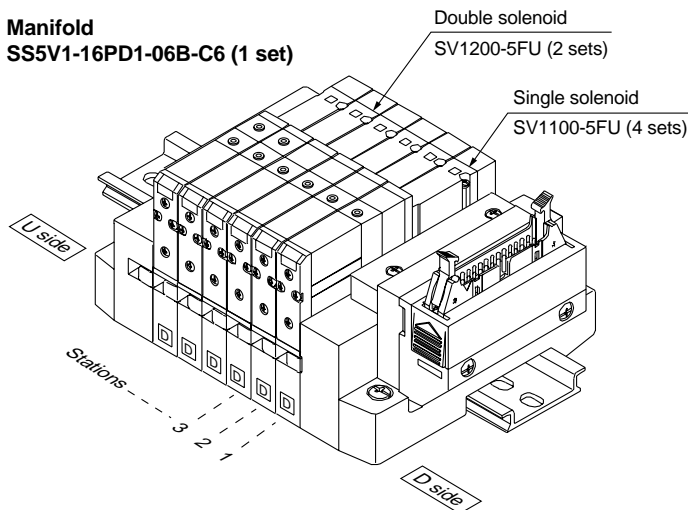

SS5V1-16PD1-06B-C6 1 set (manifold part no.)
 * SV1100-5FU 4 sets (single solenoid part no.)
 * SV1200-5FU 2 sets (double solenoid part no.)

How to Order Solenoid Valves

SV 1 1 00 — 5 F

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification

Nil	Internal pilot
R	External pilot



* External pilot specification is not available for 4 position dual 3 port valves.

Note) Available with manifold block for station additions. Refer to pages 77 and 81.

Manual override

Nil: Non-locking push type

D: Slotted locking type

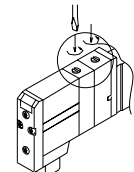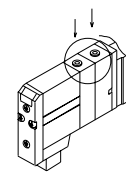

Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

Rated voltage

5	24VDC
6	12VDC

Back pressure check valve

Nil	None
K	Built-in

* Built-in back pressure check valve type is applicable to series SV1000 only.

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

A, B port size (metric)


Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8 One-touch fitting	SV1000
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C4	ø4 One-touch fitting	ø10 One-touch fitting	SV2000
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting		
C6	ø6 One-touch fitting	ø12 One-touch fitting	SV3000
C8	ø8 One-touch fitting		
C10	ø10 One-touch fitting		
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV4000
C10	ø10 One-touch fitting		
C12	ø12 One-touch fitting		
02	Rc 1/4	Rc 3/8	
03	Rc 3/8		
02F	G 1/4	G 3/8	
03F	G 3/8		
M	A, B ports mixed		

A, B port size (inch)

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16" One-touch fitting	SV1000
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N3	ø5/32" One-touch fitting	ø3/8" One-touch fitting	SV2000
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV3000
N9	ø5/16" One-touch fitting		
N11	ø3/8" One-touch fitting		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV4000
N11	ø3/8" One-touch fitting		
02N	NPT 1/4		
03N	NPT 3/8	NPT 3/8	
02T	NPTF 1/4		
03T	NPTF 3/8	NPTF 3/8	
M	A, B ports mixed		

* In case of mixed specification (M), indicate separately on a manifold specification sheet.


Manifold Electrical Wiring

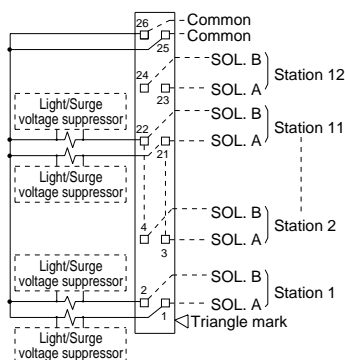10P/16P Flat Ribbon Cable Type (26 pins)


- This circuit has double wiring specifications for up to 12 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→2→3→4, etc.
- Stations are counted starting from station 1 on the D side (connector side).
- Since terminal numbers are not indicated on flat ribbon cables, use the triangle mark as a reference.
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

Usable number of solenoids


Model		Maximum number of solenoids
Tie-rod base type 10	SV1000 to SV4000	24
	SV1000 to SV2000	18
Cassette base type 16	SV2000	24

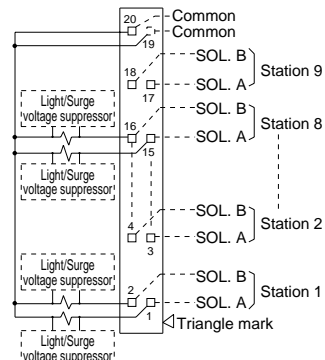10PG/16PG Flat Ribbon Cable Type (20 pins)


- This circuit has double wiring specifications for up to 9 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→2→3→4, etc.
- Stations are counted starting from station 1 on the D side (connector side).
- Since terminal numbers are not indicated on flat ribbon cables, use the triangle mark as a reference.
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

Usable number of solenoids

Model		Maximum number of solenoids
Tie-rod base type 10	SV1000 to SV4000	18
	SV1000 to SV2000	18
Cassette base type 16	SV2000	18

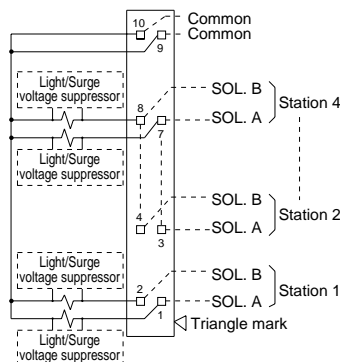10PH/16PH Flat Ribbon Cable Type (10 pins)


- This circuit has double wiring specifications for up to 4 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→2→3→4, etc.
- Stations are counted starting from station 1 on the D side (connector side).
- Since terminal numbers are not indicated on flat ribbon cables, use the triangle mark as a reference.
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

Usable number of solenoids


Model		Maximum number of solenoids
Tie-rod base type 10	SV1000 to SV4000	8
	SV1000 to SV2000	8
Cassette base type 16	SV2000	8

Dimensions: Series SV1000 for Flat Ribbon Cable





1in = 25.4mm

• Cassette base manifold: **SS5V1-16** $\begin{smallmatrix} P \\ PG \\ PH \end{smallmatrix} D \frac{1}{2}$ - Stations $\begin{smallmatrix} U \\ D \\ B \end{smallmatrix}$ (**S, R, RS**) - $\begin{smallmatrix} C3, N1 \\ C4, N3 \\ C6, N7 \end{smallmatrix}$

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

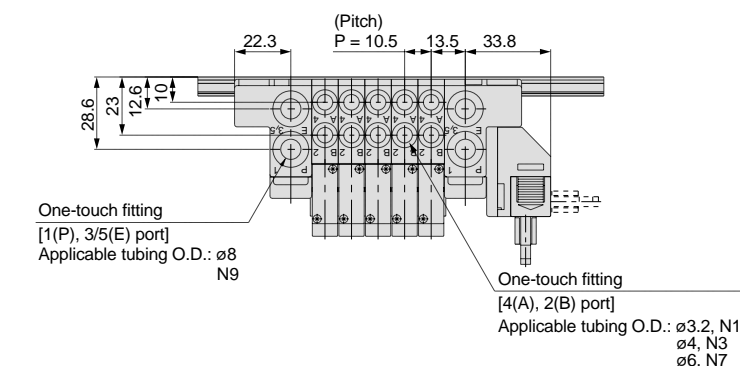

With external pilot specification

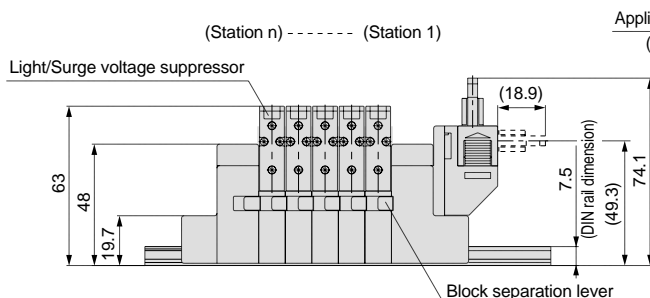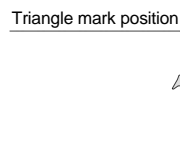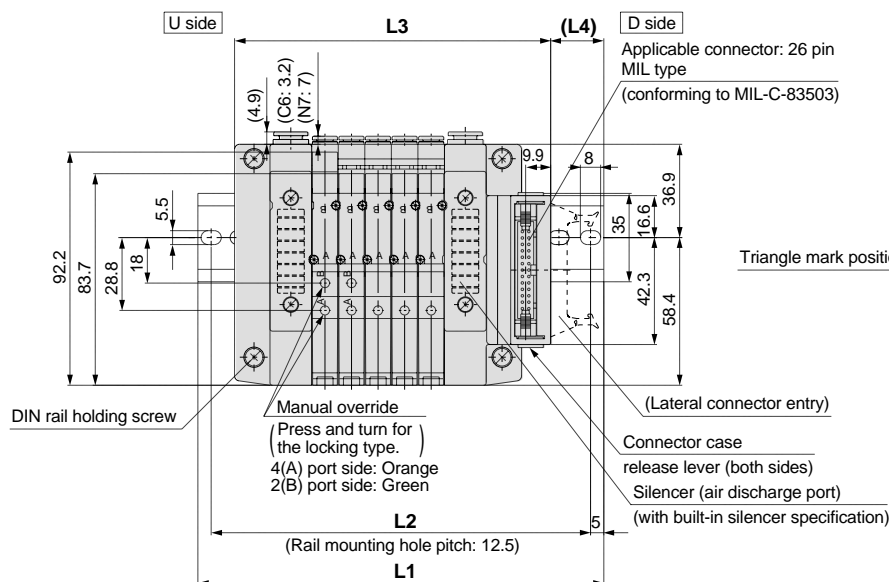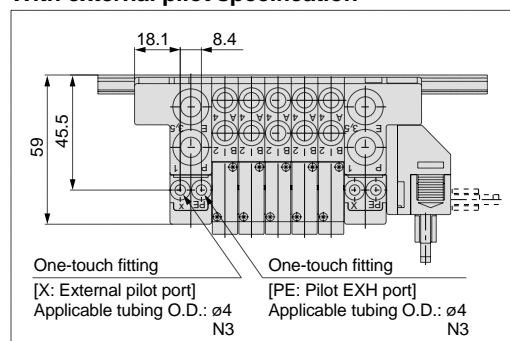

For 16PG (20 pins)

For 16PH (10 pins)

L dimensions (mm)

$\frac{L}{n}$	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5	251	261.5
L4	24.5	19	20	21	22	23	24	19	20	21	22	23	24	18.5	19.5	20.5	21.5

n: Stations




Dimensions: Series SV2000 for Flat Ribbon Cable

• Cassette base manifold: **SS5V2-16** $\frac{P}{PG} \frac{D}{PH} D_2^1$ - Stations - $\frac{U}{D} \frac{B}{B}$ (S, R, RS) - C4, N3
C6, N7
C8, N9

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

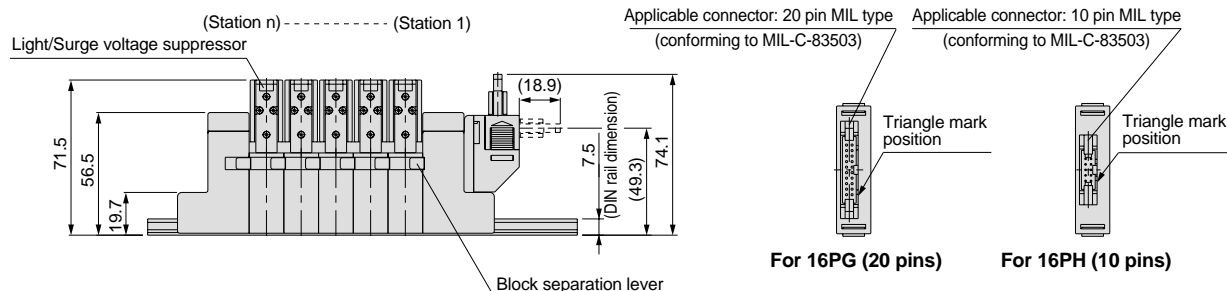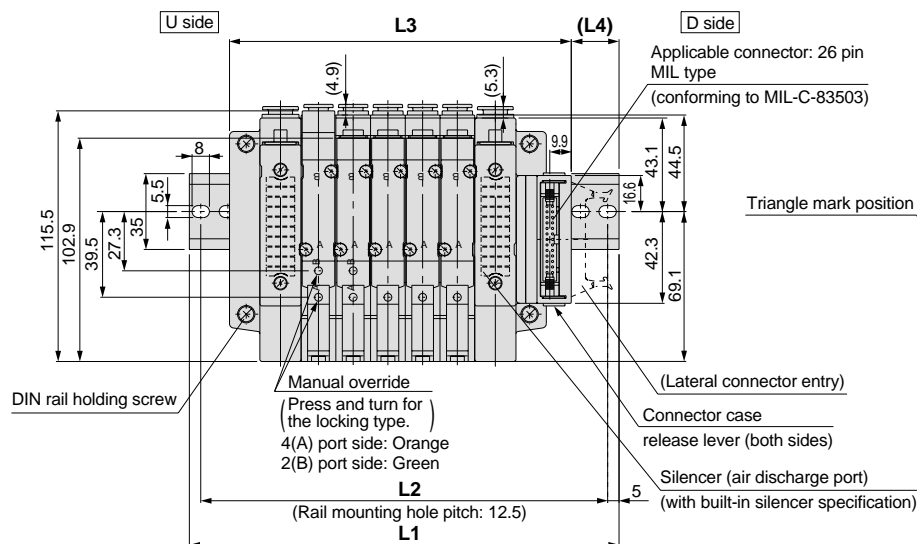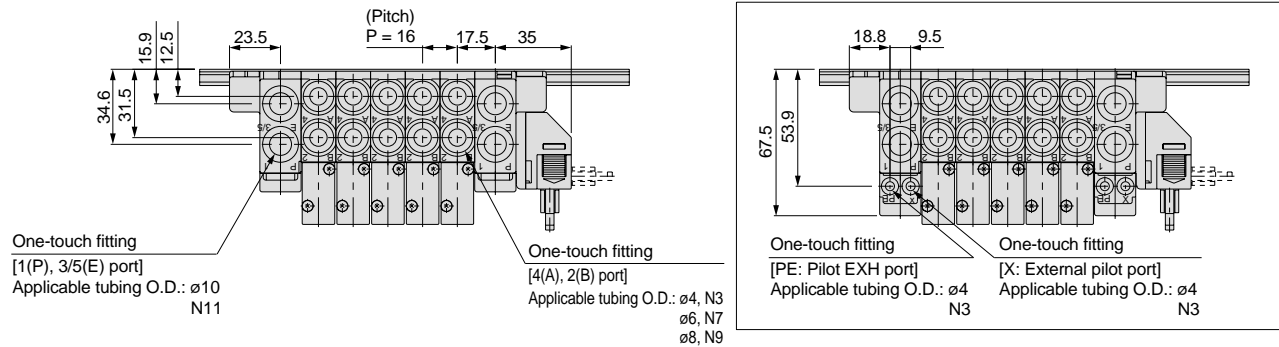

L dimensions (mm)

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
L4	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	24	22.5







Dimensions: Series SV1000 for Flat Ribbon Cable

• Tie-rod base manifold: **SS5V1-10** $\frac{P}{PH} D \frac{1}{2}$ - Stations $\frac{U}{B}$ (S, R, RS) - $\frac{C3, N1}{C4, N3, C6, N7}$ (-D)

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

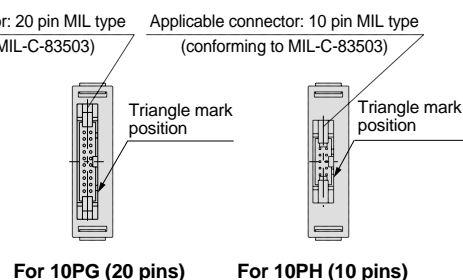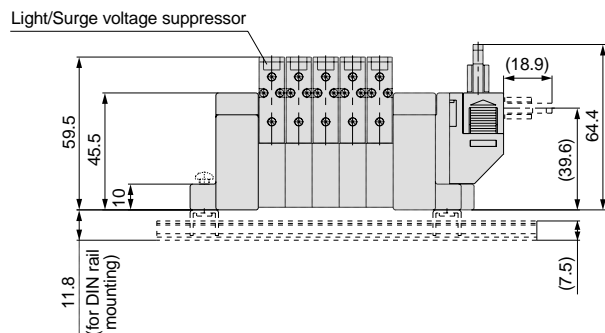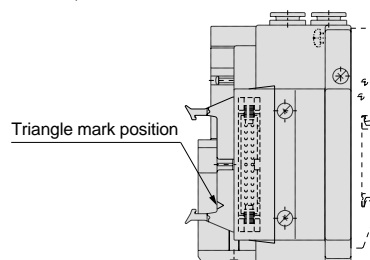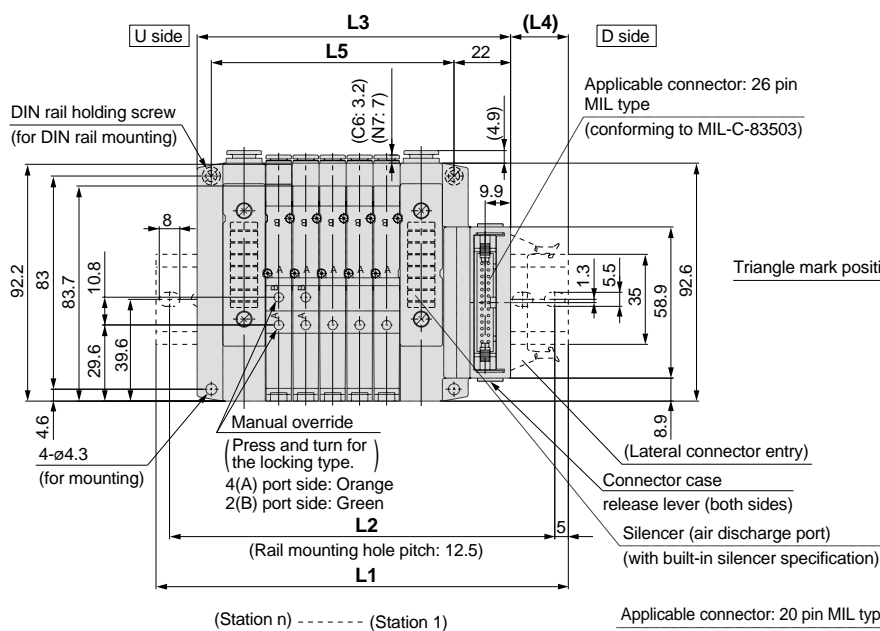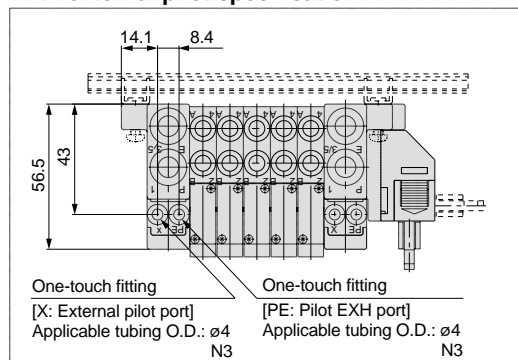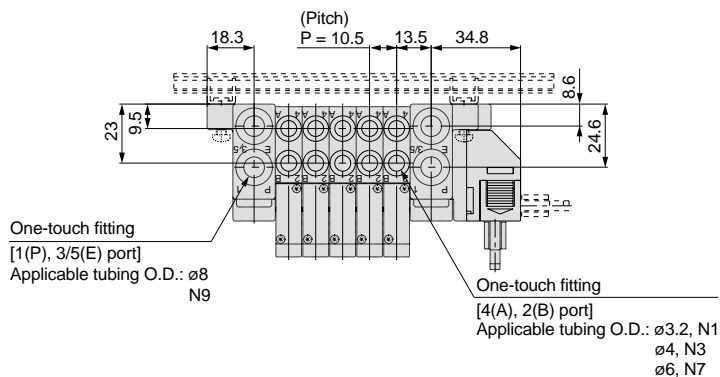

For 10PG (20 pins)

For 10PH (10 pins)

L dimensions (mm)

n: Stations


n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5
L2	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300
L3	90.5	101	111.5	122	132.5	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
L4	19.5	20.5	21.5	22.5	23.5	18.5	19.5	20.5	21.5	22.5	23.5	24.5	19	20	21	22	23	24	19
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

Dimensions: Series SV2000 for Flat Ribbon Cable




1in = 25.4mm

• Tie-rod base manifold: **SS5V2-10** $\frac{P}{PH} D_2^1$ - [Stations] $\frac{U}{D} B$ (S, R, RS) - $\frac{C4, N3}{C8, N7, N9}$ (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

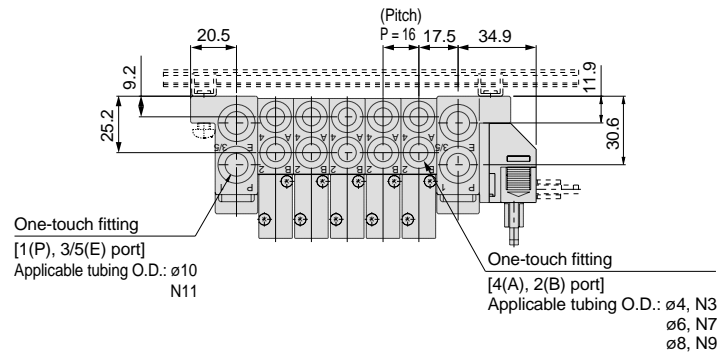


With external pilot specification

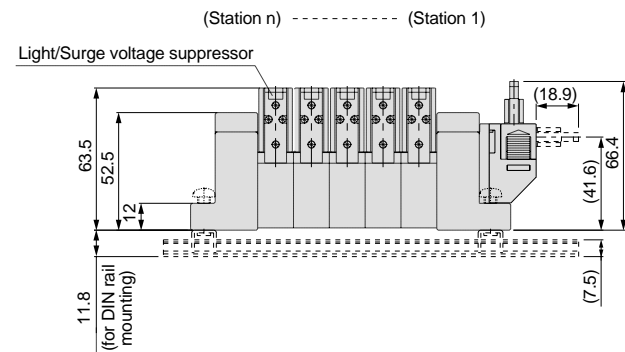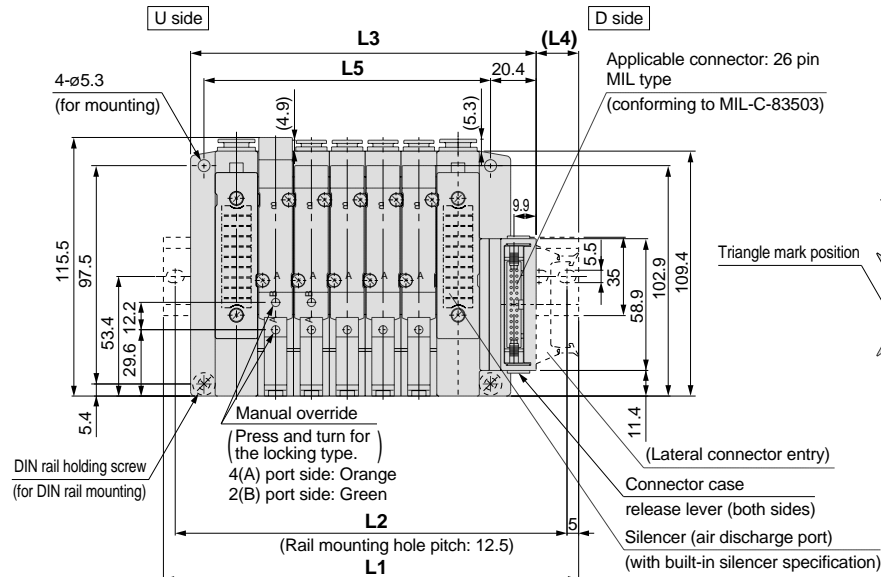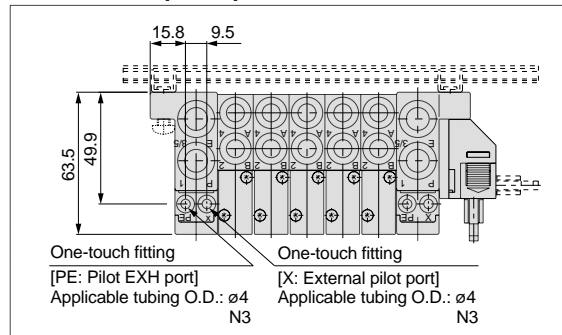


Applicable connector: 20 pin MIL type
(conforming to MIL-C-83503)

Applicable connector: 10 pin MIL type
(conforms to MIL-C-83503)

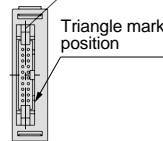

For 10PG (20 pins)

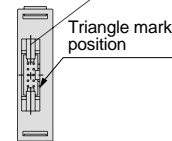

For 10PH (10 pins)

L dimensions (mm)

n: Stations

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5
L2	137.5	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425
L3	106.4	122.4	138.4	154.4	170.4	186.4	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4
L4	24.5	22.5	20.5	19	23.5	21.5	20	18.5	22.5	21	19.5	23.5	22	20.5	18.5	23	21	19.5	24
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


Dimensions: Series SV3000 for Flat Ribbon Cable

• Tie-rod base manifold: **SS5V3-10** ^P_{PG} ^D₂ ¹_{PH} - Stations ^U_D ^B (S, R, RS) - ^{C6, N7}_{C8, N9} ^{C10, N11} (-D)

1in = 25.4mm

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

With external pilot specification

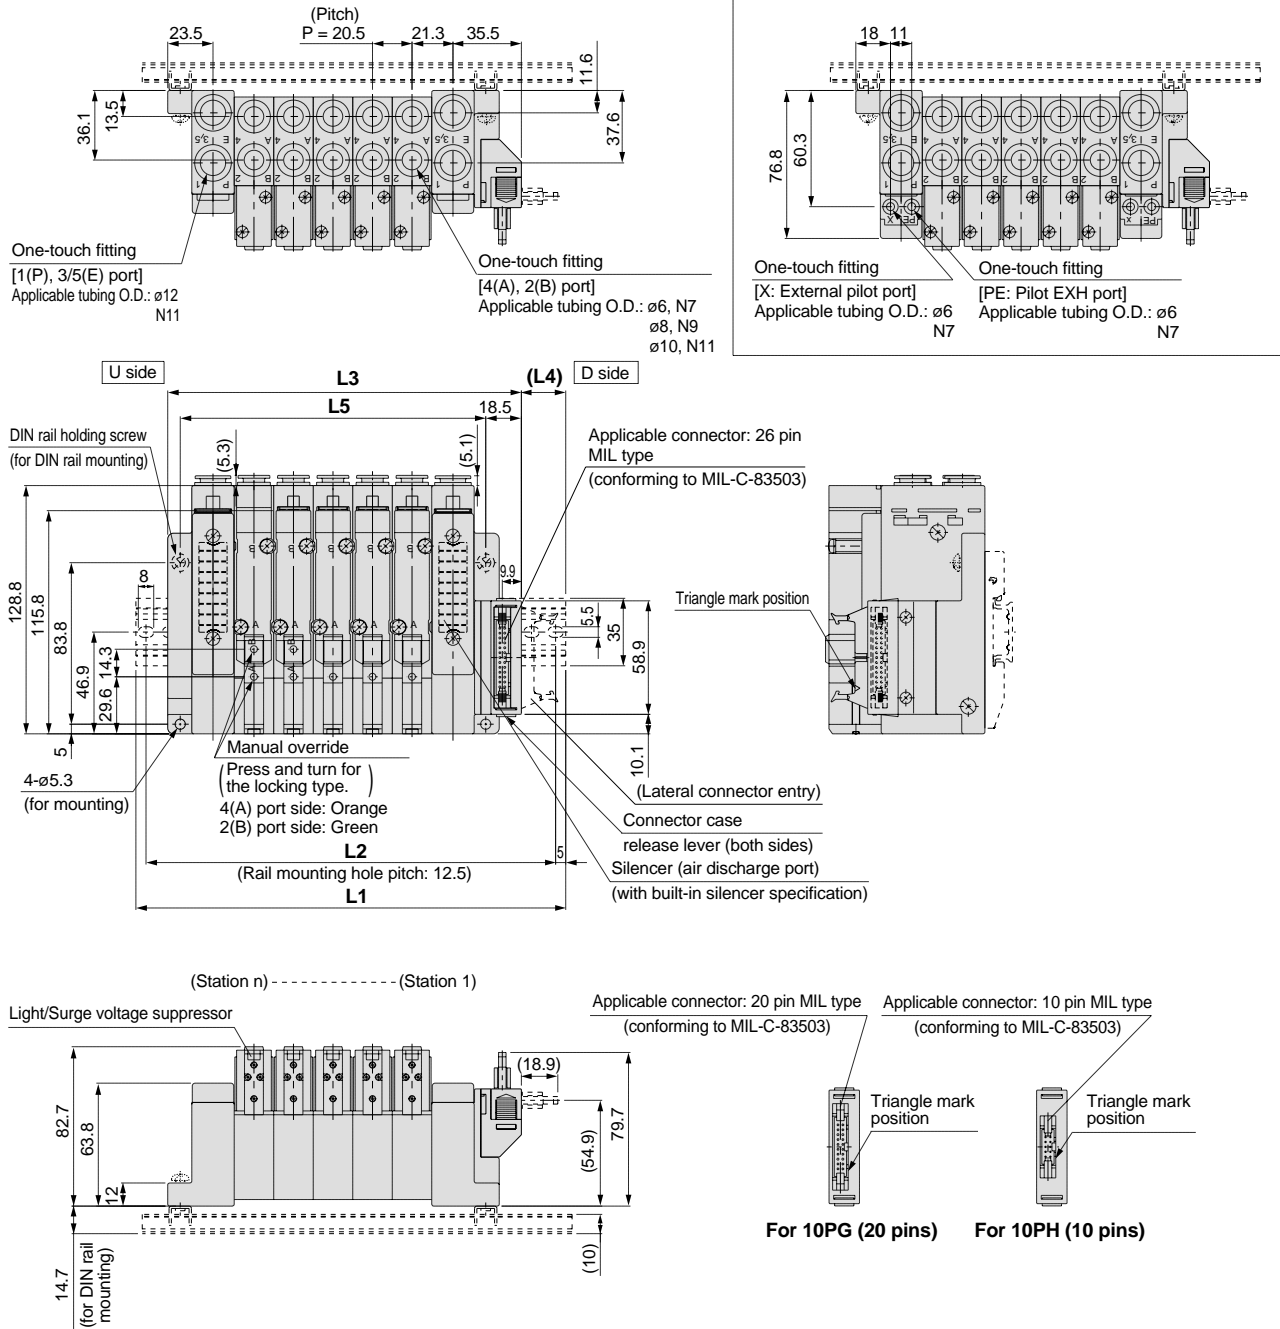

L dimensions (mm)

n : Stations


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2	150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3	122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
L4	22.5	18.5	21	23	19	21.5	23.5	19.5	22	24	20	22.5	18.5	20.5	23	19	21	23.5	19.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

Dimensions: Series SV4000 for Flat Ribbon Cable





1in = 25.4mm

• Tie-rod base manifold: **SS5V4-10** $\frac{P}{PH}$ $\frac{D_1}{D_2}$ - Stations $\frac{U}{D}$ $\frac{B}{B}$ (S, R, RS) - $\frac{02, C8, N9}{03, C10, N11}$ (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

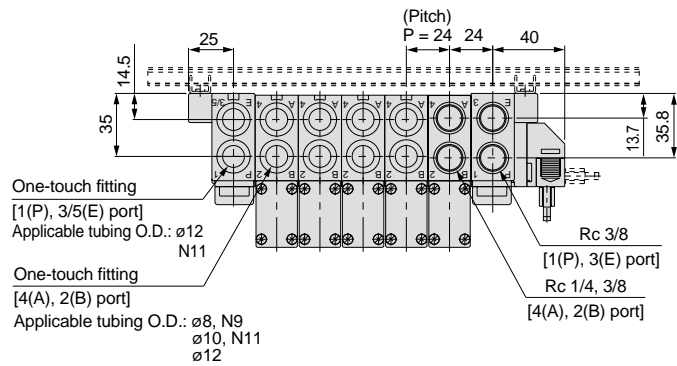


With external pilot specification

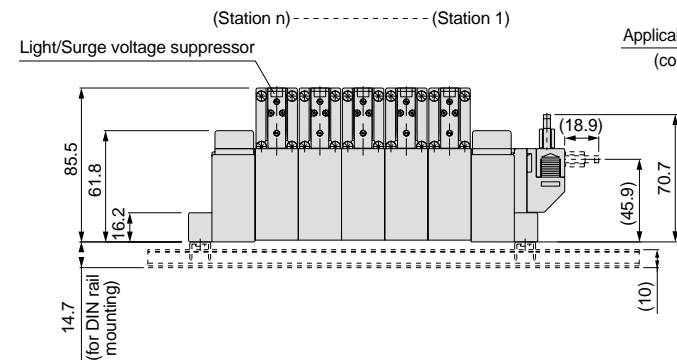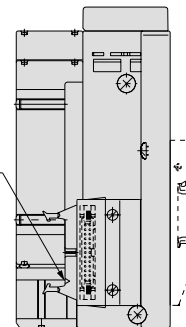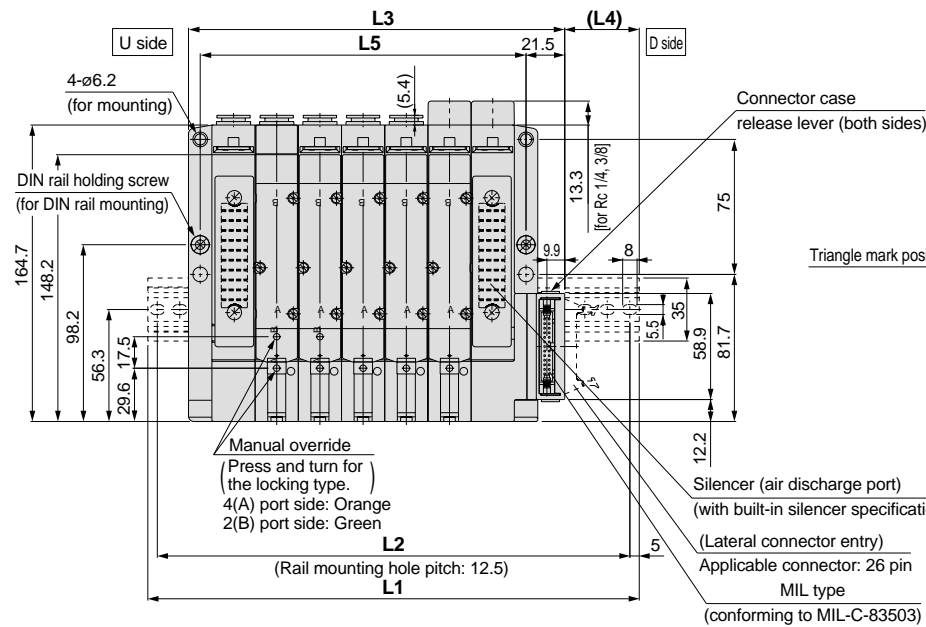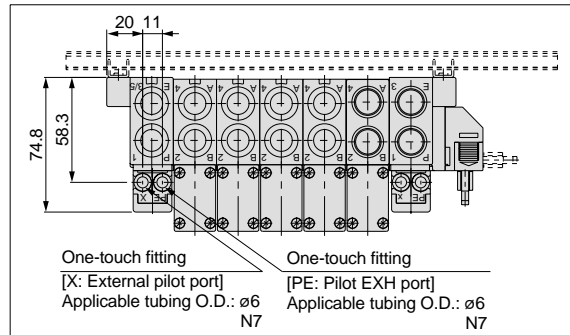


Applicable connector: 20 pin MIL type
(conforming to MIL-C-83503)

Applicable connector: 10 pin MIL type
(conforming to MIL-C-83503)



For 10PG (20 pins)



For 10PH (10 pins)

L dimensions (mm)


n: Stations

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	348	373	398	423	448	473	498	523	548	573	598	623
L2	175	200	225	250	275	300	325	337.5	362.5	387.5	412.5	437.5	462.5	487.5	512.5	537.5	562.5	587.5	612.5
L3	137	161	185	209	233	257	281	305	329	353	377	401	425	449	473	497	521	545	569
L4	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541

Valve Manifold Common Specifications	EX500	EX250	EX120	Circular Connector	D-sub Connector	Flat Ribbon Cable	Valve Manifold Specifications	Single Valve Sub-plate	Manifold Specification Sheets
--	-------	-------	-------	-----------------------	--------------------	-------------------	----------------------------------	---------------------------	----------------------------------

Type 16: Cassette Base Manifold Exploded View

Type 16C (circular connector type) manifold

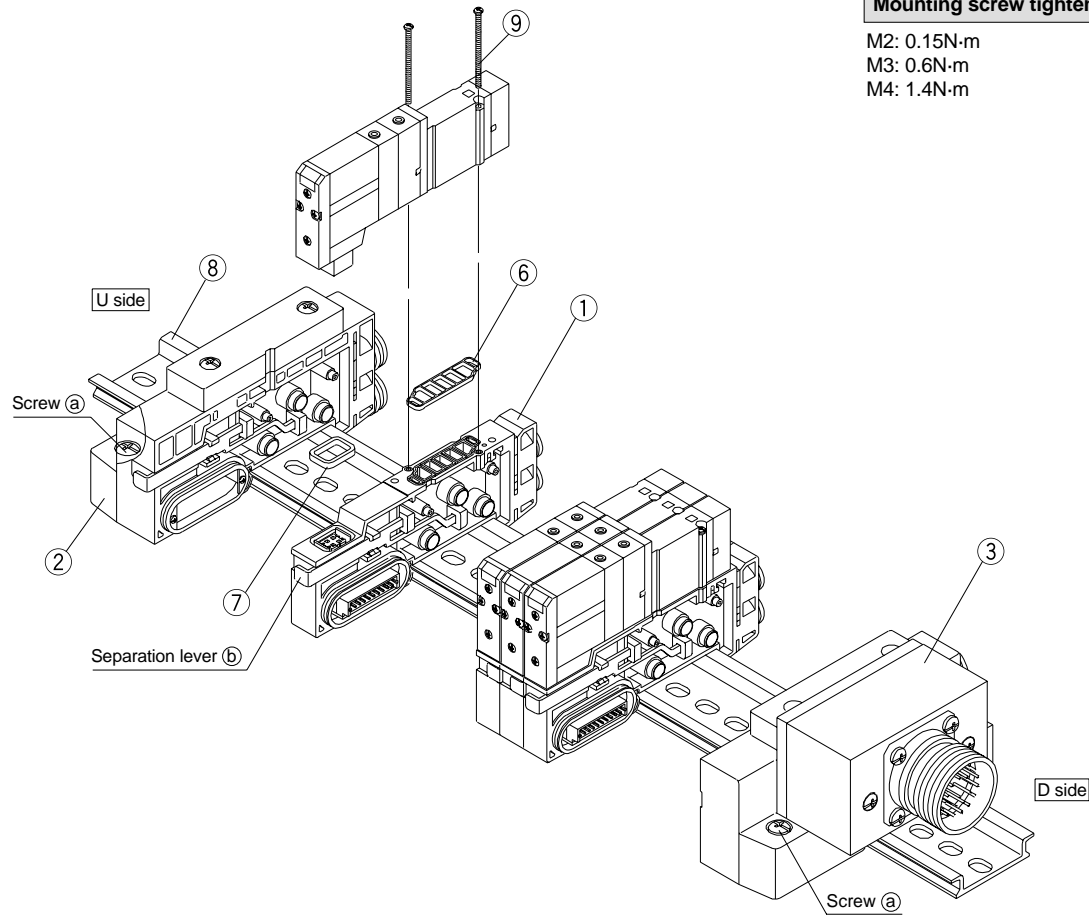

⚠ Caution

Mounting screw tightening torques


M2: 0.15N·m

M3: 0.6N·m


M4: 1.4N·m

③ Supply/Exhaust block assembly


EX500 (type 16SA□W)

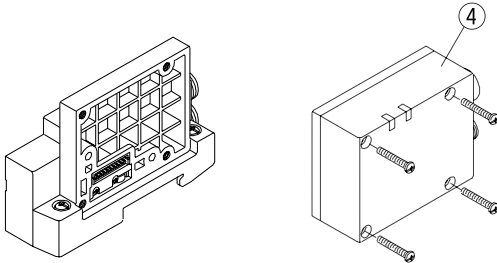


EX120 (type 16S3□)

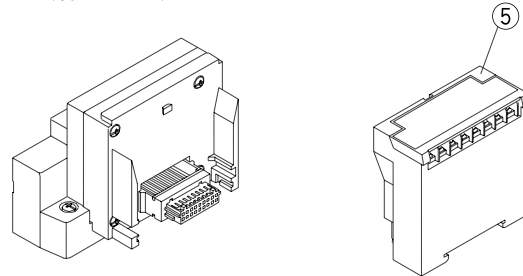


Circular connector (type 16C)

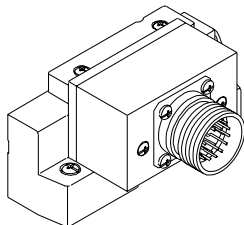

D-sub connector (type 16F□)

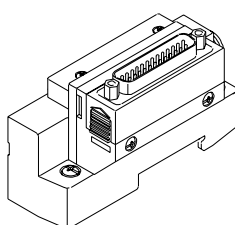

Flat ribbon cable connector (type 16P□)

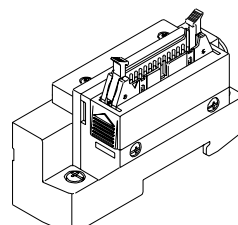


① Manifold block assembly part numbers

Series	Wiring specification	Manifold block assembly part no.	Note
SV1000	For single	SV1000-50-3A-□□	C3: With ø3.2 One-touch fitting N1: ø1/8" One-touch fitting C4: With ø4 One-touch fitting N3: ø5/32" One-touch fitting C6: With ø6 One-touch fitting N7: ø1/4" One-touch fitting (Gaskets ⑥ and ⑦ are included.)
	For double	SV1000-50-4A-□□	
SV2000	For single	SV2000-50-3A-□□	C4: With ø4 One-touch fitting N3: ø5/32" One-touch fitting C6: With ø6 One-touch fitting N7: ø1/4" One-touch fitting C8: With ø8 One-touch fitting N9: ø5/16" One-touch fitting (Gaskets ⑥ and ⑦ are included.)
	For double	SV2000-50-4A-□□	

② Supply/Exhaust end block assembly SV □ 000 – 52U – 2 A □ □

③ Supply/Exhaust block assembly SV □ 000 – 51D □ □ A □ □

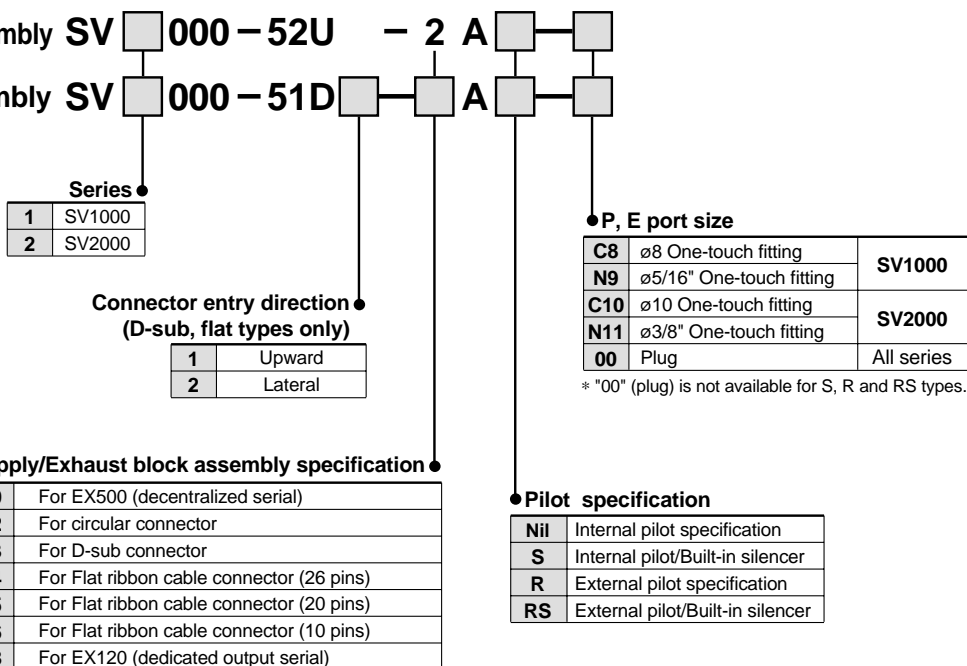

* Since EX500 and EX120 type SI units are not included, order them separately.

No.	Description	Part no.		Note
		SV1000	SV2000	
④	Series EX500 SI unit	Refer to page 14.		
⑤	Series EX120 SI unit	Refer to page 32.		
⑥	Gasket	SX3000-57-4	SX5000-57-6	
⑦	Connector gasket	SX3000-146-2		
⑧	DIN rail	VZ1000-11-1-□		Refer to the DIN rail dimension tables on page 85.
⑨	Round head combination screw	SX3000-22-2 (M2 x 24)	SV2000-21-1 (M3 x 30)	

Type 16: Cassette Base Manifold Replacement Parts

Adding manifold bases (type 16)

- 1 Loosen the screws (a) (2 pcs. on one side) that hold the manifold base onto the DIN rail.
(When removing the manifold base from the DIN rail, loosen the holding screws at four locations.)

- 2 Using a flat head screw driver, etc., pull the lever (b) forward on the manifold block assembly where a station is to be added, and disconnect the manifold block assemblies.

- 3 Attach the manifold block assembly to be added to the DIN rail as shown in the figure.

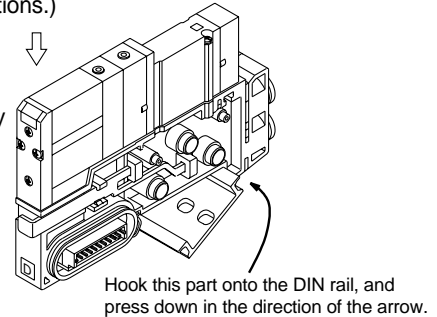


Figure. Block mounting

- 4 Connect the block assemblies by pressing them together, and push the lever in firmly until it stops. Then secure them to the DIN rail by tightening the screws (a).

⚠ Caution (Tightening torque: 1.4N·m)


⚠ Caution

Fitting assembly replacement

By replacing manifold fitting assemblies, it is possible to change the size of the A, B ports and P, E ports. To replace them, remove the clip with a flat head screw driver, etc., and pull out the fitting assembly. Mount the new fitting assembly by inserting it and then replacing the clip to its fully inserted position.

Fitting assembly part numbers

Port size		SV1000	SV2000
A, B port	ø3.2 One-touch fitting	VVQ1000-50A-C3	—
	ø4 One-touch fitting	VVQ1000-50A-C4	VVQ1000-51A-C4
	ø6 One-touch fitting	VVQ1000-50A-C6	VVQ1000-51A-C6
	ø8 One-touch fitting	—	VVQ1000-51A-C8
	N1 One-touch fitting	VVQ1000-50A-N1	—
	N3 One-touch fitting	VVQ1000-50A-N3	VVQ1000-51A-N3
	N7 One-touch fitting	VVQ1000-50A-N7	VVQ1000-51A-N7
	N9 One-touch fitting	—	VVQ1000-51A-N9
P, E port	ø8 One-touch fitting	VVQ1000-51A-C8	—
	ø10 One-touch fitting	—	VVQ2000-51A-C10
	N9 One-touch fitting	VVQ1000-51A-N9	—
	N11 One-touch fitting	—	VVQ2000-51A-N11

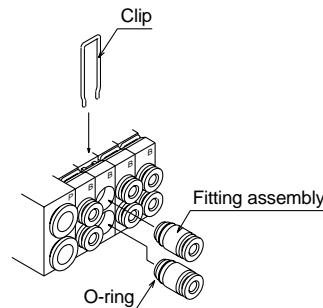

Note 1) Be careful to avoid damage or contamination of O-rings, as this can cause air leakage.

Note 2) When removing a fitting assembly from a valve, after removing the clip, attach tubing or a plug (KQP-□□) to the One-touch fitting, and pull it out while holding the tubing (or plug). If it is pulled out while holding the release button of the fitting assembly (resin part), the release button may be damaged.

Note 3) Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.

How to order cassette base type 16 solenoid valves with manifold block

[Series SV1000/SV2000]

• Type with manifold block is used when adding stations, etc.

SV 1 1 0 0 - 5 F

Series

1	SV1000
2	SV2000

Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Back pressure check valve

Nil	None
K	Built-in

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Built-in back pressure check valve type is applicable to series SV1000 only.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

A, B port size

Refer to A, B ports size tables on pages 8, 33, 44, 54 and 65.

Manifold wiring specification

Nil	Double wiring
S	Single wiring



Manifold block type

C	Cassette base type 16 with manifold block
---	---

Manual override

Nil: Non-locking push type

D: Slotted locking type

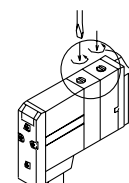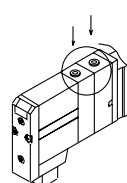

Light/Surge voltage suppressor


U	With light and surge voltage suppressor
R	With surge voltage suppressor

Rated voltage

5	24VDC
6	12VDC


* Note that serial wiring manifolds (EX500, EX250 and EX120) are only available with 24VDC.

Example (SV1000)
SV1200-5FU-C-C6

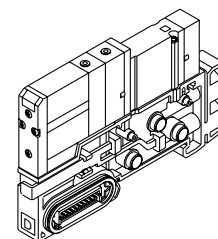

Type 10: Tie-rod Base Manifold Exploded View

Type 10C (circular connector type) manifold

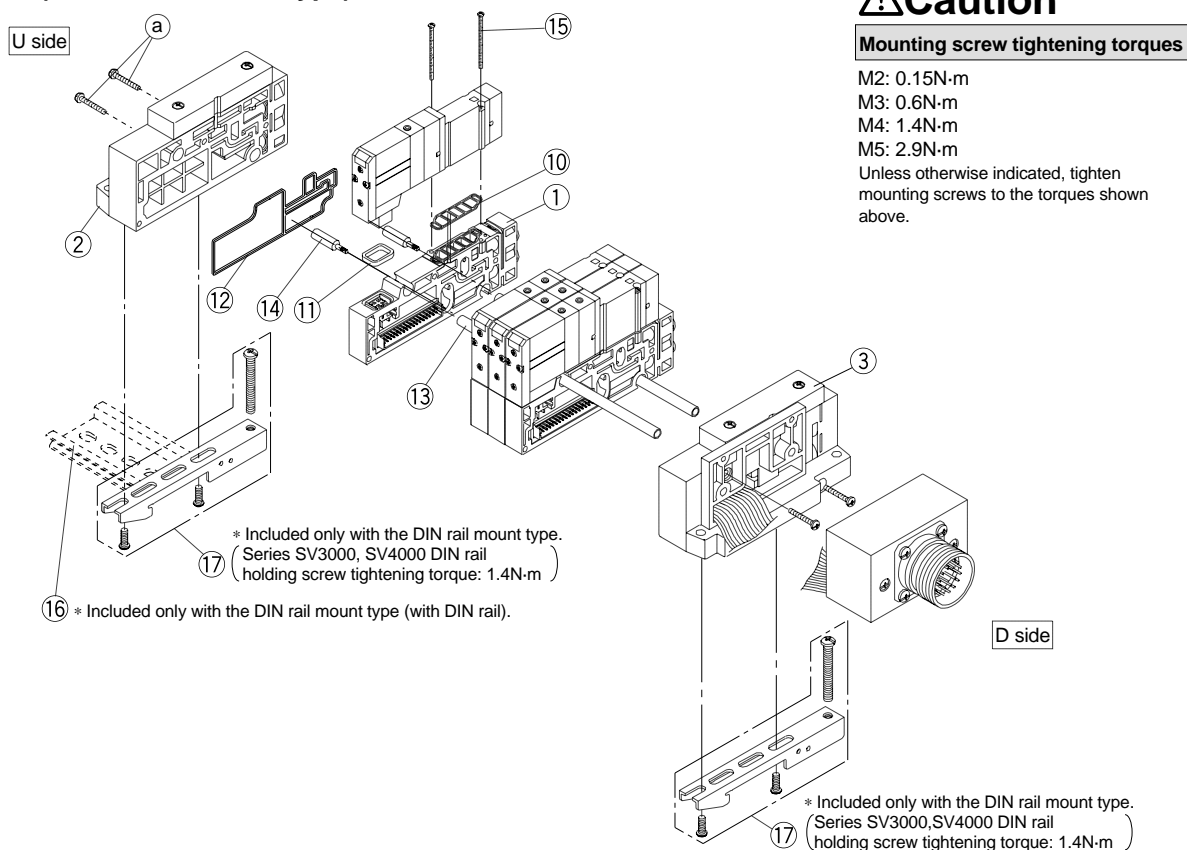

⚠ Caution

Mounting screw tightening torques

M2: 0.15N·m

M3: 0.6N·m


M4: 1.4N·m

M5: 2.9N·m


Unless otherwise indicated, tighten
mounting screws to the torques shown
above.

③ Supply/Exhaust block assembly


EX250 (type 10S1□W)

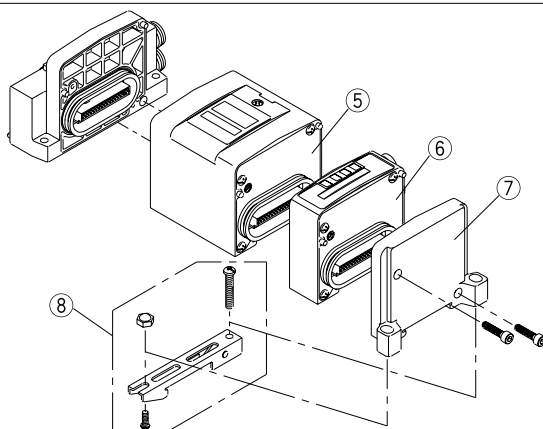* ⑤, ⑥, ⑦ and ⑧ are not included with the
supply/exhaust block assembly.* Included only with the DIN rail mount type.
(DIN rail holding screw tightening torque: 0.5N·m)


Circular connector (type 10C)

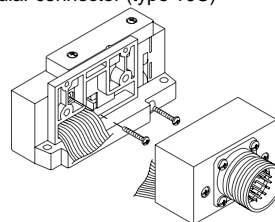


D-sub connector (type 10F)

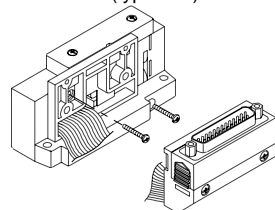


EX500 (type 10SA□W)

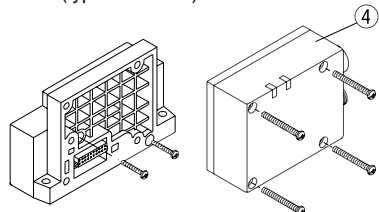* ④ is not included with the supply/exhaust
assembly.

EX120 (type 10S3□)

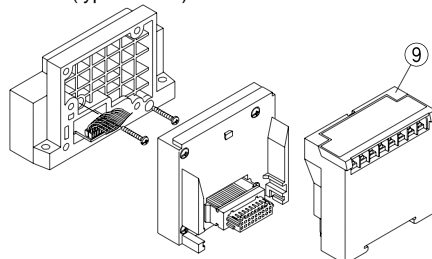* ⑨ is not included with the supply/exhaust
assembly.

Flat ribbon cable connector (type 10P□)

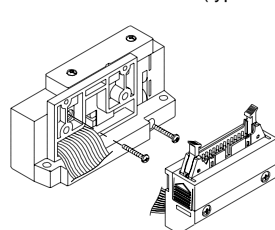

① Manifold block assembly part numbers

Series	Wiring specifications	Manifold block assembly part no.	Note
SV1000	For single	SV1000-50-1A-□□	C3: With ø3.2 One-touch fitting C4: With ø4 One-touch fitting C6: With ø6 One-touch fitting (Tie-rod for station additions ⑭ and gaskets ⑩, ⑪, and ⑫ are included.)
	For double	SV1000-50-2A-□□	N1: ø1/8" One-touch fitting N3: ø5/32" One-touch fitting N7: ø1/4" One-touch fitting
SV2000	For single	SV2000-50-1A-□□	C4: With ø4 One-touch fitting C6: With ø6 One-touch fitting C8: With ø8 One-touch fitting (Tie-rod for station additions ⑭ and gaskets ⑩, ⑪, and ⑫ are included.)
	For double	SV2000-50-2A-□□	N3: ø5/32" One-touch fitting N7: ø1/4" One-touch fitting N9: ø5/16" One-touch fitting
SV3000	For single	SV3000-50-1A-□□	C6: With ø6 One-touch fitting C8: With ø8 One-touch fitting C10: With ø10 One-touch fitting (Tie-rod for station additions ⑭ and gaskets ⑩, ⑪, and ⑫ are included.)
	For double	SV3000-50-2A-□□	N7: ø1/4" One-touch fitting N9: ø5/16" One-touch fitting N11: ø3/8" One-touch fitting
SV4000	For single	SV4000-50-1A-□□	C8: With ø8 One-touch fitting C10: With ø10 One-touch fitting C12: With ø12 One-touch fitting 02: Rc 1/4 02N: NPT 1/4 03: Rc 3/8 03N: NPT 3/8 02F: G 1/4 02T: NPTF 1/4 03F: G 3/8 03T: NPTF 3/8 (Tie-rod for station additions ⑭ and gaskets ⑩, ⑪, and ⑫ are included.)
	For double	SV4000-50-2A-□□	N9: ø5/16" One-touch fitting N11: ø3/8" One-touch fitting

② Supply/Exhaust end block assembly

SV □ 000 – 52U – 1 A □ □ □ □

③ Supply/Exhaust block assembly

SV □ 000 – 51D □ □ A □ □ □ □

Series	
1	SV1000
2	SV2000
3	SV3000
4	SV4000

Connector entry direction
(D-sub, flat types only)

1	Upward
2	Lateral

Mounting

Nil	Direct mount
D0	DIN rail mount

Supply/Exhaust block assembly specification

10	For EX500 (SI unit)
11	For EX250 (SI unit)
12	For circular connector
13	For D-sub connector
14	For Flat ribbon cable connector (26 pins)
15	For Flat ribbon cable connector (20 pins)
16	For Flat ribbon cable connector (10 pins)
18	For EX120 (SI unit)

* Since EX500 and EX120 type SI units are not included, order them separately.

Pilot specification

Nil	Internal pilot specification
S	Internal pilot/Built-in silencer
R	External pilot specification
RS	External pilot/Built-in silencer

P, E port size

C8	ø8 One-touch fitting	SV1000
N9	ø5/16" One-touch fitting	
C10	ø10 One-touch fitting	SV2000
N11	ø3/8" One-touch fitting	
C12	ø12 One-touch fitting	SV3000
N11	ø3/8" One-touch fitting	SV4000
03	Rc 3/8	
03F	G 3/8	
03N	NPT 3/8	
03T	NPTF 3/8	
00	Plug	All series

* "00" (Plug) is not available for S, R and RS types.

No.	Description	Part no.				Note
		SV1000	SV2000	SV3000	SV4000	
④	Series EX500 SI unit	Refer to page 14.				
⑤	Series EX250 SI unit	EX250-SDN1				For DeviceNet
		EX250-SPR1				For PROFIBUS-DP
⑥	Series EX250 input block	EX250-IE1				M12, 2 inputs
		EX250-IE2				M12, 4 inputs
		EX250-IE3				M8, 4 inputs
⑦	Series EX250 end plate assembly	EX250-EA1				With mounting screws (M3 x 10, 2 pcs.)
⑧	EX250 clamp assembly	SV1000-78A				
⑨	Series EX120 SI unit	Refer to page 32.				
⑩	Gasket	SX3000-57-4	SX5000-57-6	SX7000-57-5	SY9000-11-2	
⑪	Connector gasket	SX3000-146-2	SX3000-146-2	SX3000-146-2	SX3000-146-2	
⑫	Manifold block gasket	SX3000-181-1	SX5000-138-1	SV3000-65-1	SV4000-65-1	
⑬	Tie-rod	SV1000-55-1-□□	SV2000-55-1-□□	SV3000-55-1-□□	SV4000-55-1-□□	□□: Manifold stations
⑭	Tie-rod for station addition	SV1000-55-2-1	SV2000-55-2A	SV3000-55-2A	SV4000-55-2A	
⑮	Round head combination screw (Valve mounting screw)	SX3000-22-2 (M2 x 24)	SV2000-21-1 (M3 x 30)	SV3000-21-1 (M4 x 35)	SV2000-21-2 (M3 x 40)	
⑯	DIN rail	VZ1000-11-1-□	VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to DIN rail dimension tables on page 85.
⑰	Clamp assembly	SV1000-69A	SV1000-69A	SV3000-69A	SV3000-69A	

Note) Two pieces of ⑬ and ⑭ (tie-rod) are required for Series SV1000, and three pieces are required for Series SV2000, 3000 and 4000.

Two pieces of ⑮ (valve mounting screw) are required for Series SV1000, 2000 and 3000, and three pieces are required for Series SV4000.

Type 10: Tie-rod Base Manifold Replacement Parts

Adding manifold bases (type 10)


- ① Loosen the U side screws (a), and remove the supply/exhaust end block assembly ②.



- ② Screw in the tie-rods for station addition.
(Screw them in until there is no gap between the tie-rods.)



- ③ Connect the manifold assembly and supply/exhaust end block assembly to be added, and tighten the screws (a).

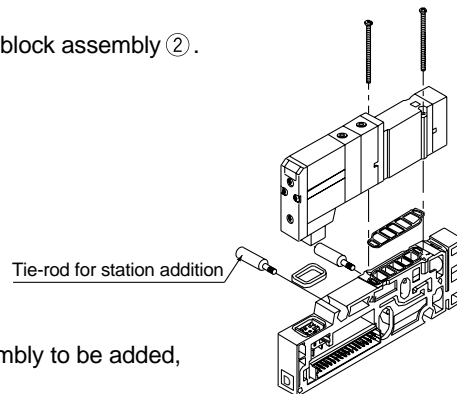

⚠ Caution Tightening torques

SV1000, SV2000	0.6N·m
SV3000	1.4N·m
SV4000	2.9N·m

Note) When eliminating manifold stations, the appropriate tie-rods ⑬ for the desired change should be ordered separately.
(When equipped with a DIN rail, be sure to tighten the DIN rail holding screws after tightening the tension bolts.)

⚠ Caution Fitting assembly replacement

By replacing manifold fitting assemblies, it is possible to change the size of the A, B ports and P, E ports. To replace them, remove the clip with a flat head screw driver, etc., and pull out the fitting assembly. Mount the new fitting assembly by inserting it and then replacing the clip to its fully inserted position.

Fitting assembly part numbers

Port size		SV1000	SV2000	SV3000	SV4000
A, B port	ø3.2 One-touch fitting	VVQ1000-50A-C3	—	—	—
	ø4 One-touch fitting	VVQ1000-50A-C4	VVQ1000-51A-C4	—	—
	ø6 One-touch fitting	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6	—
	ø8 One-touch fitting	—	VVQ1000-51A-C8	VVQ2000-51A-C8	VVQ4000-50B-C8
	ø10 One-touch fitting	—	—	VVQ2000-51A-C10	VVQ4000-50B-C10
	ø12 One-touch fitting	—	—	—	VVQ4000-50B-C12
	N1 One-touch fitting	VVQ1000-50A-N1	—	—	—
	N3 One-touch fitting	VVQ1000-50A-N3	VVQ1000-51A-N3	—	—
	N7 One-touch fitting	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7	—
	N9 One-touch fitting	—	VVQ1000-51A-N9	VVQ2000-51A-N9	VVQ4000-50B-N9
	N11 One-touch fitting	—	—	VVQ2000-51A-N11	VVQ4000-50B-N11
	1/4 threaded type port block assembly	—	—	—	SY9000-58A-02□
	3/8 threaded type port block assembly	—	—	—	SY9000-58A-03□
P, E port	ø8 One-touch fitting	VVQ1000-51A-C8	—	—	—
	ø10 One-touch fitting	—	VVQ2000-51A-C10	—	—
	ø12 One-touch fitting	—	—	VVQ4000-50B-C12	VVQ4000-50B-C12
	N9 One-touch fitting	VVQ1000-51A-N9	—	—	—
	N11 One-touch fitting	—	VVQ2000-51A-N11	VVQ4000-50B-N11	VVQ4000-50B-N11
	3/8 threaded type port block assembly	—	—	—	SY9000-58B-03□

1/4, 3/8 threaded type port block assembly part numbers

For A, B port



SY9000 – 58A – 02 03

For P, E port

SY9000 – 58B – 03

• Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

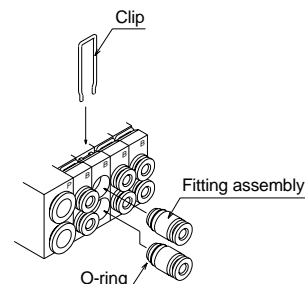

Note 1) Be careful to avoid damage or contamination of O-rings, as this can cause air leakage.

Note 2) When removing a fitting assembly from a valve, after removing the clip, attach tubing or a plug (KQP-□□) to the One-touch fitting, and pull it out while holding the tubing (or plug). If it is pulled out while holding the release button of the fitting assembly (resin part), the release button may be damaged. However, 02 and 03 port block assemblies should be pulled out as they are.

Note 3) Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.

How to order tie-rod type 10 solenoid valves with manifold block

[Series SV1000 to SV4000]

• Type with manifold block is used when adding stations, etc.

SV 1 1 0 0 — 5 F — — —

Series •

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Type of actuation •

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A	4 position dual 3 port valve: N.C./N.C.
B	4 position dual 3 port valve: N.O./N.O.
C	4 position dual 3 port valve: N.C./N.O.

* 4 position dual 3 port valves are applicable to series SV1000 and SV2000 only.

Pilot specification •

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Back pressure check valve •

Nil	None
K	Built-in

* Back pressure check valve is not available for 3 position closed center and 3 position pressure center.

* Built-in back pressure check valve type is applicable to series SV1000 only.

* Effective area of the built-in back pressure check valve type is reduced approximately 20%.

• A, B port size

Refer to A, B port size table on pages 8, 24, 33, 44, 54 and 65.

• Manifold wiring specification


Nil	Double wiring
S	Single wiring

• Manifold block type

T	Tie-rod type 10 with manifold block
---	-------------------------------------

Note) Tie-rod type 10 includes tie-rods for station additions.

• Manual override

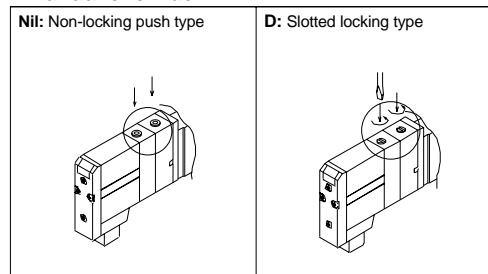

• Light/Surge voltage suppressor


U	With light and surge voltage suppressor
R	With surge voltage suppressor

• Rated voltage

5	24VDC
6	12VDC

* Note that serial wiring manifolds (EX500, EX250 and EX120) are only available with 24VDC.

Example (SV1000)
SV1200-5FU-T-C6

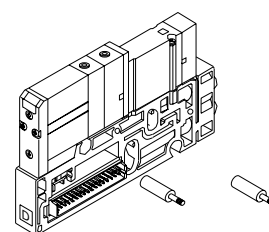

■Relay output module

By adding a relay output module to a series SV manifold, devices up to 110VAC, 3A (large type solenoid valves, etc.) can be controlled together with series SV valves.

How to Order

SV

000 – 60 – 5 A – 1A

Series

1	SV1000
2	SV2000
3	SV3000


Number of outputs

A	1 output
B	2 outputs

Rated voltage

5	24VDC
6	12VDC

* Note that serial wiring manifolds (EX500, EX250 and EX120) are available with 24VDC only.

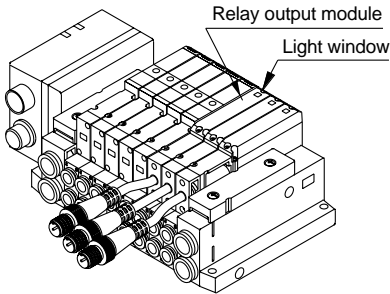

Relay output module specifications


Item	Specification			
Number of outputs	1 output [connector with lead wire (M12)]		2 outputs [connector with lead wire (M12)]	
Output type	4 pin connector (M12) plug <div><div><div>① — ② Output A ③ — ④ Output A</div><div><div>2</div><div>4</div></div><div>Contact type ("a" contact)</div></div><div><div><div>2</div><div>1</div></div><div><div>3</div><div>4</div></div><div>Relay output module side pin arrangement</div></div></div>		4 pin connector (M12) plug <div><div><div>① Output B ② Output A ③ Output B ④ Output A</div><div><div>2</div><div>1</div></div><div>④</div><div>3</div><div>Contact type ("a" contact)</div></div><div><div><div>2</div><div>1</div></div><div><div>3</div><div>4</div></div><div>Relay output module side pin arrangement</div></div></div>	
Load voltage	110VAC	30VDC	110VAC	30VDC
Load current	3A	3A	0.3A	1A
Indicator light	Orange		A side: Orange B side: Green	
Current consumption	20mA or less			
Polarity	Non-polar			
Weight g (lbs)	48 (.10)			

■Y type connector



Used to branch a two output relay output module to two separate systems.

How to Order

EX500 – ACY00 – S

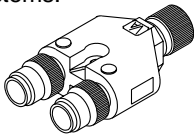


Relay output module and Y type connector wiring example

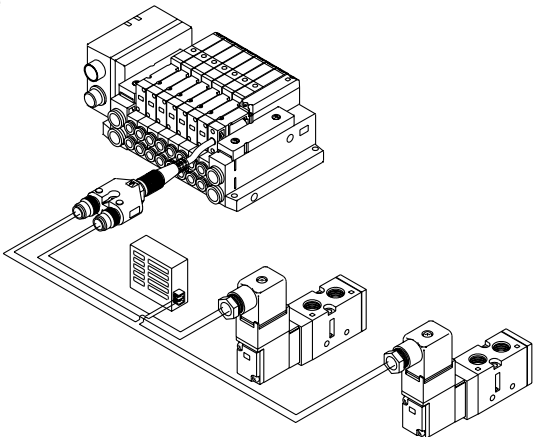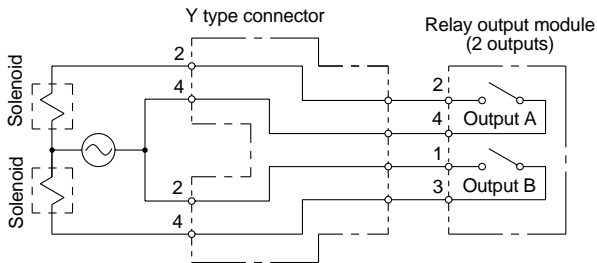

Manifold Options

Blanking plate assembly

Used in situations where valves will be added in the future, and for maintenance, etc.

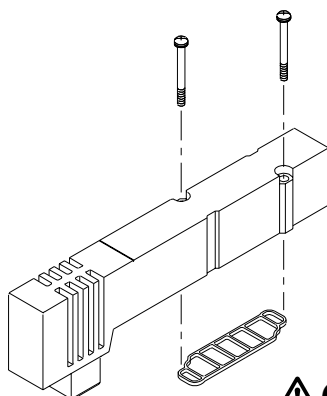

Series	Blanking plate assembly part no.
SV1000	SV1000-67-1A
SV2000	SV2000-67-1A
SV3000	SV3000-67-1A
SV4000	SV4000-67-1A

Caution

Mounting screw tightening torques

M2: 0.15N·m

M3: 0.6N·m

M4: 1.4N·m

SUP/EXH block disks


[SUP block disk]

By placing a SUP block disk in a manifold valve's pressure supply passage, two different high and low pressures can be supplied to one manifold.


[EXH block disk]

By placing an EXH block disk in a manifold valve's exhaust passage, the valve's exhaust can be separated so that it will not affect other valves.

It can also be used on a manifold with mixed positive pressure and vacuum. (Two pieces are required to block EXH on both sides. However, series SV1000 and 2000 type 10 manifolds require only one piece.)

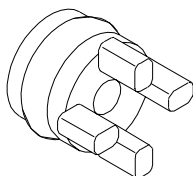

Cassette base type 16

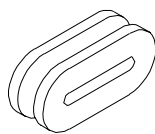

Tie-rod base type 10

Series	Manifold type	SUP block disk	EXH block disk
SV1000	10	SV1000-59-1A	SV1000-59-2A
	16	SX3000-77-1A	SX3000-77-1A
SV2000	10	SV2000-59-1A	SV2000-59-2A
	16	SV2000-59-3A	SV2000-59-3A
SV3000	10	SV3000-59-1A	SV3000-59-1A
SV4000	10	SY9000-61-2A	SY9000-61-2A

1mm² =

1in = 25.4mm

Block disk labels

These labels are attached to manifolds in which SUP and EXH block disks have been installed, in order to identify the installed locations. (Three sheets each included.)


* When manifolds are ordered with block disks installed, the labels will be attached where the block disks are installed.

SV1000 – 74 – 1A


SUP block disk label




EXH block disk label



SUP, EXH block disk label




* When ordering a manifold and block disks together using a manifold specification sheet, etc., labels will be attached where block disks are installed prior to shipment from the factory.

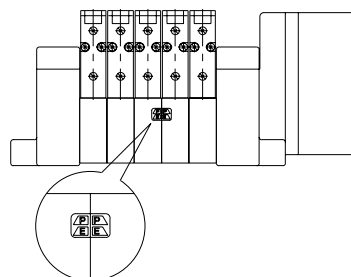

Silencer with One-touch fitting

This silencer can be quickly mounted on the manifold's E (exhaust) port.

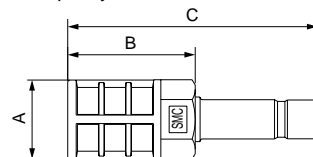


(mm)

Series	Model	Effective area	A	B	C
SV1000 (for ø8)	AN203-KM8	14mm²	ø16	26	51
	AN200-KM10	26mm²	ø22	53.8	80.8
SV2000 (for ø10)	AN300-KM10	30mm²	ø25	70	97
	AN300-KM12	41mm²	ø25	70	98

Plug (white)

These are inserted in unused cylinder ports and P, E ports.

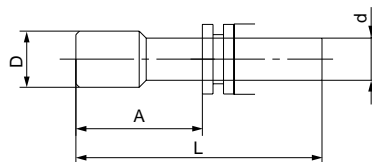

(mm)

Applicable fitting size d	Model	A	L	D
ø4	KQ2P-04	16	32	ø6
ø6	KQ2P-06	18	35	ø8
ø8	KQ2P-08	20.5	39	ø10
ø10	KQ2P-10	22	43	ø12
ø12	KQ2P-12	24	44.5	ø14
ø1/8"	KQ2P-01	16	31.5	ø5
ø5/32"	KQ2P-03	16	32	ø6
ø1/4"	KQ2P-07	18	35	ø8.5
ø5/16"	KQ2P-09	20.5	39	ø10
ø3/8"	KQ2P-11	22	43	ø11.5


Manifold Options

■ Circular connector/Cable assembly (26 pins)


AXT100 – MC26 – □

Lead wire length

Part no.	L dimension
AXT100-MC26-015	1.5m
AXT100-MC26-030	3m
AXT100-MC26-050	5m

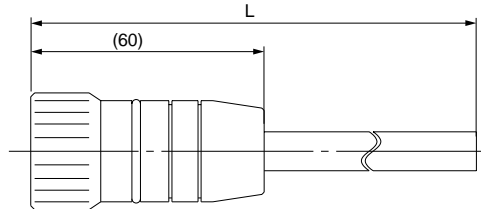

Plug terminal no.
(arrangement as seen from lead wire side)

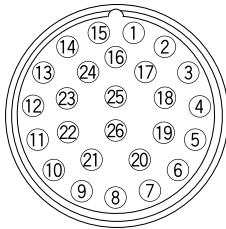

Circular connector cable assembly
Wire colors by terminal number

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Note) Terminal no. ②⑥ is connected to ②⑤ inside the connector.


■ D-sub connector/Cable assembly (25 pins)

AXT100 – DS25 – □

Lead wire length

Part no.	L dimension
AXT100-DS25-015	1.5m
AXT100-DS25-030	3m
AXT100-DS25-050	5m

When a commercially available connector is required, use a 25 pin female connector conforming to MIL-C24308.

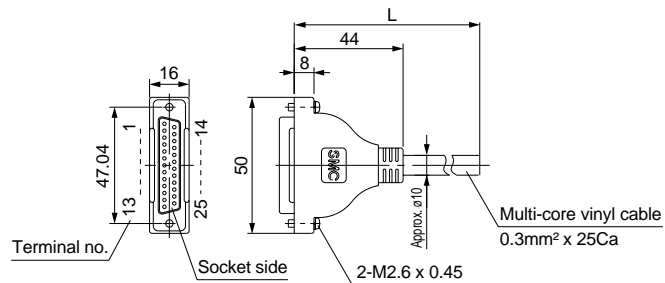

D-sub connector cable assembly
Wire colors by terminal number

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Circular connector, D-sub connector cable assembly
common specifications
Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km , 20°C	65 or less
Withstand voltage VAC, 1min.	1000
Insulation resistance, $M\Omega/\text{km}$, 20°C	5 or less

Note) The minimum inside bending radius for each cable is 20mm.


Manifold Options

■ Flat ribbon cable/Cable assembly

AXT100 – FC□ – □

Cable Length (L)	10 pins	20 pins	26 pins
1.5m	AXT100-FC10-1	AXT100-FC20-1	AXT100-FC26-1
3m	AXT100-FC10-2	AXT100-FC20-2	AXT100-FC26-2
5m	AXT100-FC10-3	AXT100-FC20-3	AXT100-FC26-3
Connector width (W)	17.2	30	37.5

* When a commercially available connector is required, use a strain relief type conforming to MIL-C-83503.

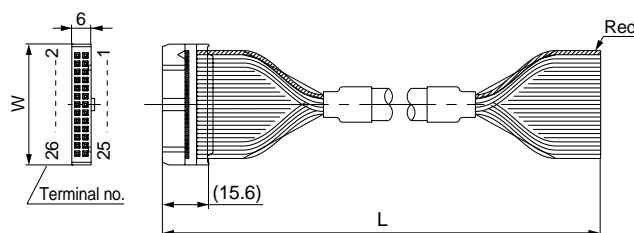


Connector manufacturers

- HIROSE ELECTRIC CO., LTD.
- Sumitomo/3-M Limited
- Japan Aviation Electronics Industry, Ltd.
- Fujitsu, Ltd.
- J.S.T. Mfg. Co., Ltd.

■ SV1000, 2000 and series EX500 input unit
DIN rail dimensions and weights

VZ1000 – 11 – 1 – □

* Enter a number into the □ from the DIN rail dimension table below.

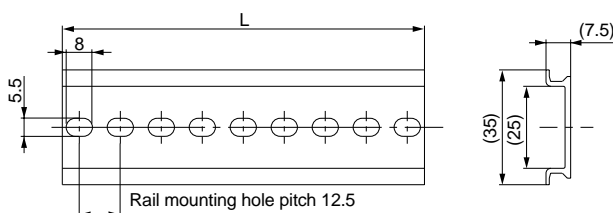

(mm)

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5	348
Weight (g)	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1	60.4	62.5

No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
L dimension	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5
Weight (g)	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9	103.1	105.4	107.6	109.9


No.	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
L dimension	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873
Weight (g)	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6	145.9	148.1	150.4	152.6	154.9	157.1

No.	63	64	65	66	67	68	69	70	71
L dimension	885.5	898	910.5	923	935.5	948	960.5	973	985.5
Weight (g)	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4

■ SV3000 and 4000 DIN rail dimensions and weights

VZ1000 – 11 – 4 – □

* Enter a number into the □ from the DIN rail dimension table below.

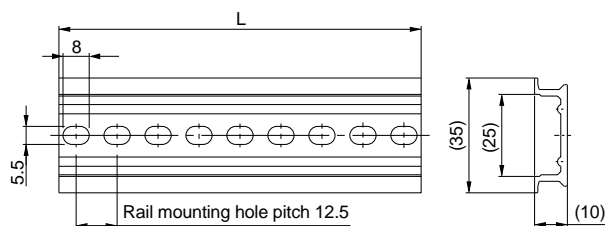

(mm)

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	233.5	248	260.5	273	285.5	298	310.5	323	335.5	348
Weight (g)	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7	84.9	88

No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
L dimension	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5
Weight (g)	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8	145	148.1	151.3	154.5

No.	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
L dimension	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873
Weight (g)	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9	205.1	208.2	211.4	214.5	217.7	220.9

No.	63	64	65	66	67	68	69	70	71
L dimension	885.5	898	910.5	923	935.5	948	960.5	973	985.5
Weight (g)	224	227.2	230.4	233.5	236.7	239.8	243	246.2	249.3

1in = 25.4mm
1g = .02lbs

Manifold Option

Interface regulator

How to order interface regulator

Series SV1000

SV1 0 00-05-P

Applicable valve

0	For single and double
3	For 3-position

Option

05	With pressure gauge (for odd no. station)
06	With pressure gauge (for even no. station)
M1	Without pressure gauge

Regulator port

P	P port
A1	A port (P port control type A port regulated)
B1	B port (P port control type B port regulated)

Series SV2000, 3000, 4000

SV 2 000-00-P

Series

2	SV2000
3	SV3000
4	SV4000

Regulator port

P	P port
A1	A port (P port control type A port regulated)
B1	B port (P port control type B port regulated)

Option

00	With pressure gauge
M1	Without pressure gauge

Note) Note that a part number for Series SV1000 with pressure gauge differs depending on the position of the station (odd no. or even no.) on which the manifold is mounted to prevent the pressure gauges from interfering each other.

Note) Note that a part number of the valve for single/double and 3-position differs due to the difference in length of the solenoid valve. When 3-position valve is used on the same manifold, all valves must be a 3-position valve.

SV1000-05-□
(For mounting on odd numbered station)







SV1000-06-□
(For mounting on even numbered station)

SV1000-M1-□

SV2000-00-□

SV2000-M1-□




SV3000-00-□

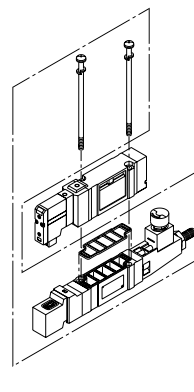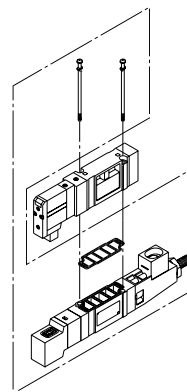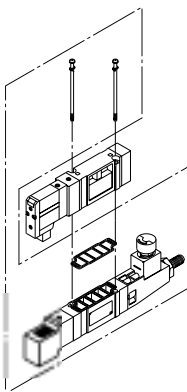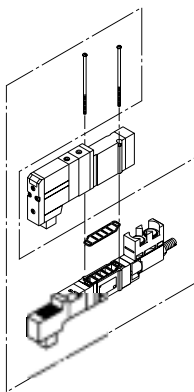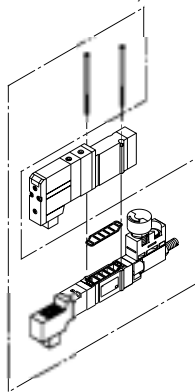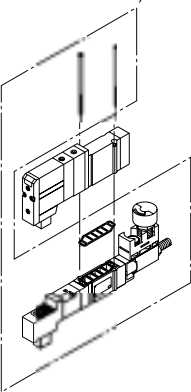


SV3000-M1-□

SV4000-00-□

SV4000-M1-□

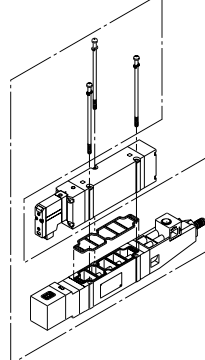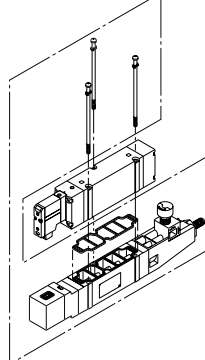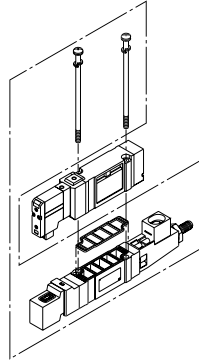

Symbol

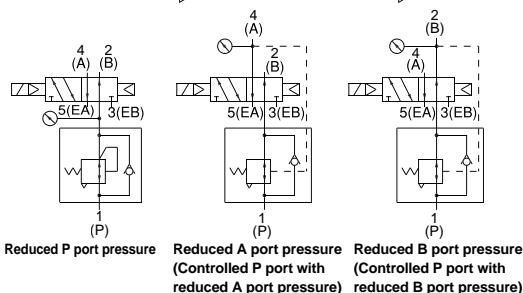

Accessory

Series	Round head combination screw	Gasket
SV1000	SX3000-22-9 (M2 x 39.5)	SX3000-57-4
SV2000	SV2000-21-7 (M3 x 53)	SX5000-57-6
SV3000	SV3000-21-4 (M4 x 57)	SX7000-57-5
SV4000	SV2000-21-8 (M3 x 69.5)	SY9000-11-2


Caution

Mounting screw tightening torque


M2: 0.15N·m
M3: 0.6N·m
M4: 1.4N·m

Manifold Option

M Individual SUP spacer assembly

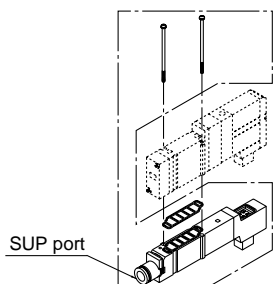

M Individual EXH spacer assembly

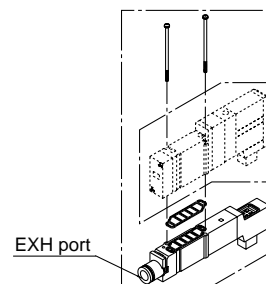

How to order individual SUP/EXH spacer assembly

Series SV1000

SV1000 — **38** — **1A** — **C6**

• Port size

C3	Ø3.2 One-touch fitting
C4	Ø4 One-touch fitting
C6	Ø6 One-touch fitting
N1	Ø1/8" One-touch fitting
N3	Ø5/32" One-touch fitting
N7	Ø1/4" One-touch fitting

• Spacer type

38	Individual SUP spacer
-----------	-----------------------

Series SV2000/3000/4000

SV **2** **000** — **38** — **1** **A**

• Series

2	SV2000
3	SV3000
4	SV4000

• Thread type*

Nil	Rc
F	G
N	NPT
T	NPTF



* Port size for Series SV2000/3000/4000

Series	Port size
SV2000	1/8
SV3000	1/4
SV4000	1/4

Accessory

Series	Round head combination screw	Gasket
SV1000	SX3000-22-9 (M2 x 39.5)	SX3000-57-4
SV2000	SV2000-21-6 (M3 x 46)	SY5000-11-15
SV3000	SV3000-21-3 (M4 x 53)	SY7000-11-11
SV4000	SV2000-21-5 (M3 x 60)	SY9000-11-2

How to Order

SV 1 1 00 — 5 W1 U D

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Type of actuation

1	2 position single solenoid	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
2	2 position double solenoid	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
3	3 position closed center	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
4	3 position exhaust center	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
5	3 position pressure center	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
A	4 position dual 3 port valve: N.C./N.C.	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
B	4 position dual 3 port valve: N.O./N.O.	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)
C	4 position dual 3 port valve: N.C./N.O.	
		(A) (B) 4 2 5 1 3 (EA) (P) (EB)

Pilot specification

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4 position dual 3 port valves.

Rated voltage

5	24VDC
6	12VDC

M12 waterproof connector

Symbol	Cable length (mm)
W1	300
W2	500
W3	1000
W4	2000
W7	5000

Port size

Symbol	Port size	Applicable series
Nil	Without sub-plate	
01	1/8	SV1000
02	1/4	SV2000 SV3000
03	3/8	SV3000
04	1/2	SV4000

Manual override

Nil	Non-locking push type
D	Slotted locking type

Light/Surge voltage suppressor

U	With light and surge voltage suppressor
R	With surge voltage suppressor

SV3000 and 4000 are not available with dual 3 port valve.

Series SV Solenoid Valve Specifications



Fluid		Air
Internal pilot operating pressure range MPa (psi)	2 position single	0.15 to 0.7 (22 to 101)
	4 position dual 3 port valve	
	2 position double	
External pilot operating pressure range MPa (psi)	3 position	0.1 to 0.7 (14 to 101)
	Operating pressure range	0.2 to 0.7 (14 to 101)
Ambient and fluid temperature °C (°F)	2 position single, double	-100kPa to 0.7 (-14.5 to 101)
	4 position dual 3 port valve	
	3 position	
Maximum operating frequency Hz	2 position single, double	-10 to 50 (with no freezing)* (14 to 22)
	4 position dual 3 port valve	
	3 position	
Manual override		Non-locking push type
		Slotted locking type
Pilot exhaust method	Internal pilot	Main valve/Pilot valve common exhaust
	External pilot	Pilot valve individual exhaust
Lubrication		Not required
Mounting orientation		Unrestricted
Impact/Vibration resistance msx		150/30 (8.3 to 2000Hz)
Enclosure		IP67 (based on IEC529)
Electrical entry		M12 waterproof connector
Rated coil voltage		24VDC, 12VDC
Allowable voltage fluctuation		±10% of rated voltage
Power consumption W		0.6 (With light: 0.65)
Surge voltage suppressor		Zener diode
Indicator light		LED

Note) Impact resistance: No malfunction when tested with a drop tester in the axial direction and at a right angle to the main valve and armature, one time each in energized and de-energized states (at initial value).

Vibration resistance: No malfunction when tested with one sweep of 8.3 to 2000Hz in the axial direction and at a right angle to the main valve and armature, in both energized and de-energized states (at initial value).

* Refer to page 102.

Response time

Type of actuation	Response time ms at 0.5MPa (72.5psi)			
	SV1000	SV2000	SV3000	SV4000
2 position single	11 or less	25 or less	28 or less	40 or less
2 position double	10 or less	17 or less	26 or less	40 or less
3 position	18 or less	29 or less	32 or less	82 or less
4 position dual 3 port valve	15 or less	33 or less	—	—

Note) Based on JISB8375-1981 dynamic performance test (with coil temperature of 20°C, at rated voltage).

M12 waterproof connector wiring specifications

Single solenoid	Double solenoid
<p>4 pin connector (M12) plug</p> <p>Solenoid</p> <p>Circuit diagram</p> <p>Solenoid valve side pin wiring diagram</p>	<p>4 pin connector (M12) plug</p> <p>Solenoid A</p> <p>Solenoid B</p> <p>Circuit diagram</p> <p>Solenoid valve side pin wiring diagram</p>

Note) Solenoid valves do not have polarity.

Model

Series SV1000

Note) Values inside [] are applicable normal position. Values inside () are applicable without sub-plate.

Valve Model	Type of Actuation		Port size	Flow characteristics						Weight (g) ^{Note)}	
				1→4, 2 (P→A, B)			4, 2→5, 3 (A, B→EA, EB)			M12 waterproof connector (cable length 300mm)	
				C[dm³/(s·bar)]	b	Cv	C[dm³/(s·bar)]	b	Cv		
SV1□00-□-01	2 position	Single	Rc 1/8	1.0	0.30	0.24	1.1	0.30	0.26	123 (88)	
		Double								128 (93)	
	3 position	Closed center		0.77	0.28	0.18	0.85	0.30	0.19	130 (95)	
		Exhaust center		0.73	0.31	0.18	1.1 [0.55]	0.26 [0.52]	0.24 [0.16]		
		Pressure center		1.2 [0.51]	0.24 [0.45]	0.29 [0.14]	0.89	0.47	0.24		
	4 position dual	N.C./N.C.		0.68	0.35	0.18	1.1	0.39	0.29	128 (93)	
		N.O./N.O.		0.87	0.31	0.23	0.77	0.44	0.21		

Series SV2000

Valve Model	Type of Actuation		Port size	Flow characteristics						Weight (g) ^{Note)}	
				1→4, 2 (P→A, B)			4, 2→5, 3 (A, B→EA, EB)			M12 waterproof connector (cable length 300mm)	
				C[dm³/(s·bar)]	b	Cv	C[dm³/(s·bar)]	b	Cv		
SV2□00-□-02	2 position	Single	Rc 1/4	2.4	0.41	0.64	2.8	0.29	0.66	159 (96)	
		Double								163 (100)	
	3 position	Closed center		1.8	0.47	0.50	1.8	0.40	0.47	168 (105)	
		Exhaust center		1.4	0.55	0.44	3.0 [1.2]	0.33 [0.48]	0.72 [0.37]		
		Pressure center		3.3 [0.84]	0.36 [0.60]	0.85 [0.28]	1.8	0.40	0.48		
	4 position dual	N.C./N.C.		2.2	0.40	0.55	2.6	0.31	0.60	163 (100)	
		N.O./N.O.		2.7	0.24	0.57	2.3	0.36	0.54		

Series SV3000


Valve Model	Type of Actuation		Port size	Flow characteristics						Weight (g) ^{Note)}	
				1→4, 2 (P→A, B)			4, 2→5, 3 (A, B→EA, EB)			M12 waterproof connector (cable length 300mm)	
				C[dm ³ /(s·bar)]	b	Cv	C[dm ³ /(s·bar)]	b	Cv		
SV3□00-□-02	2 position	Single	Rc 1/4	4.1	0.41	1.1	4.1	0.29	1.0	250 (121)	
		Double								253 (124)	
	3 position	Closed center		3.0	0.43	0.80	2.6	0.41	0.72	261 (132)	
		Exhaust center		2.6	0.42	0.71	4.7 [1.7]	0.35 [0.48]	1.1 [0.49]		
		Pressure center		5.3 [2.3]	0.39 [0.49]	1.3 [0.65]	2.2	0.49	0.63		
SV3□00-□-03	2 position	Single	Rc 3/8	4.9	0.29	1.2	4.5	0.27	1.1	235	
		Double								238	
	3 position	Closed center		3.0	0.40	0.80	2.6	0.45	0.73	246	
		Exhaust center		2.6	0.42	0.71	4.8 [1.7]	0.35 [0.48]	1.1 [0.34]		
		Pressure center		5.3 [2.3]	0.31 [0.51]	1.3 [0.64]	2.3	0.45	0.66		

Series SV4000


Valve Model	Type of Actuation		Port size	Flow characteristics						Weight (g) ^{Note)}	
				1→4, 2 (P→A, B)			4, 2→5, 3 (A, B→EA, EB)			M12 waterproof connector (cable length 300mm)	
				C[dm ³ /(s·bar)]	b	Cv	C[dm ³ /(s·bar)]	b	Cv		
SV4□00-□-03	2 position	Single	Rc 3/8	7.9	0.34	2.0	9.6	0.43	2.5	505 (208)	
		Double								509 (212)	
	3 position	Closed center		7.6	0.32	1.8	7.3	0.30	1.7	530 (233)	
		Exhaust center		7.2	0.34	1.7	13 [4.0]	0.23 [0.41]	2.8 [0.95]		
		Pressure center		12 [3.3]	0.26 [0.41]	2.8 [0.84]	6.7	0.40	1.9		
SV4□00-□-04	2 position	Single	Rc 1/2	8.0	0.48	2.2	10	0.29	2.5	484	
		Double								488	
	3 position	Closed center		7.6	0.32	1.8	7.3	0.32	1.8	509	
		Exhaust center		7.3	0.42	2.0	13 [4.7]	0.32 [0.54]	3.6 [1.5]		
		Pressure center		12 [3.3]	0.33 [0.51]	3.3 [0.94]	7.4	0.33	1.9		

Construction: SV1000/2000/3000/4000 Tie-rod Base Type


2 position single




2 position single

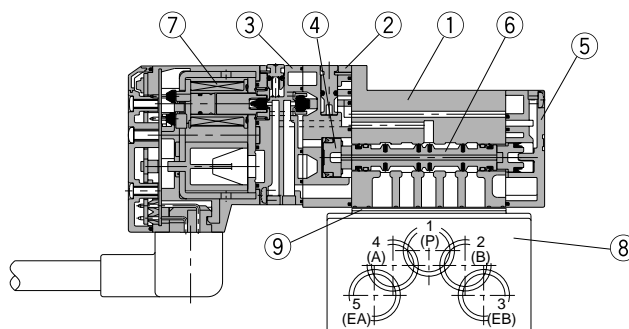


2 position double




2 position double

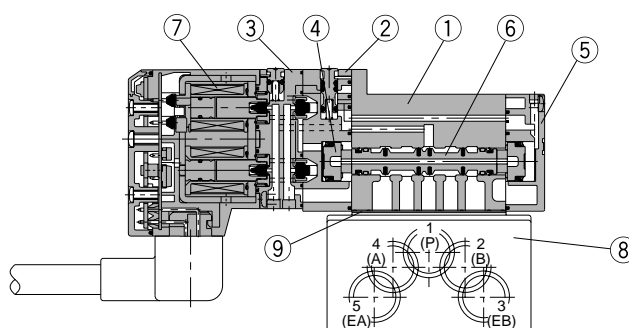


3 position closed center




3 position closed center/exhaust center/pressure center

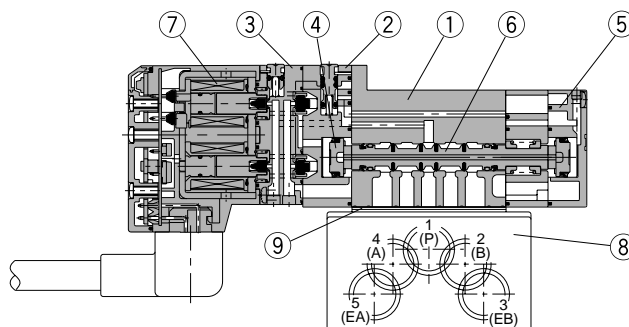

3 position exhaust center



3 position pressure center



Parts list

No.	Description	Material	Note
1	Body	Die-cast aluminum (SV1000 is die-cast zinc)	White
2	Adapter plate	Resin	White
3	Pilot body	Resin	White
4	Piston	Resin	—
5	End plate	Resin	White
6	Spool valve assembly	Aluminum/H-NBR	—
7	Molded coil	Resin	Gray

⚠ Caution

Mounting screw tightening torques

M2: 0.15N·m

M3: 0.6N·m

M4: 1.4N·m

Replacement parts

No.	Description	Part number				Note
		SV1□00	SV2□00	SV3□00	SV4□00	
8	Sub-plate	SY3000-27-1□-Q	SY5000-27-1□-Q	1/4: SY7000-27-1□-Q 3/8: SY7000-27-2□-Q	3/8: SY9000-27-1□ 1/2: SY9000-27-2□	Die-cast aluminium See thread types on page 86 for □.
9	Gasket	SY3000-11-25	SY5000-11-18	SY7000-11-14	SY9000-11-2	
—	Round head combination screw	SX3000-22-2 (M2 x 24)	SV2000-21-1 (M3 x 30)	SV3000-21-1 (M4 x 35)	SV2000-21-2 (M3 x 40)	For valve mounting (flat nickel plated)

2 position single/double/4 position dual 3 port [M12 waterproof connector type]
SV1□00(R)-□W□□-01

Manual override (non-locking)
A side: Orange
B side: Green

(L = 300 to 5000)



5-Rc 1/8
(Piping port)

M5 x 0.8
(Pilot EXH port)
<for external pilot type>

[illegible]

Dimensions: Series SV2000

1in = 25.4mm

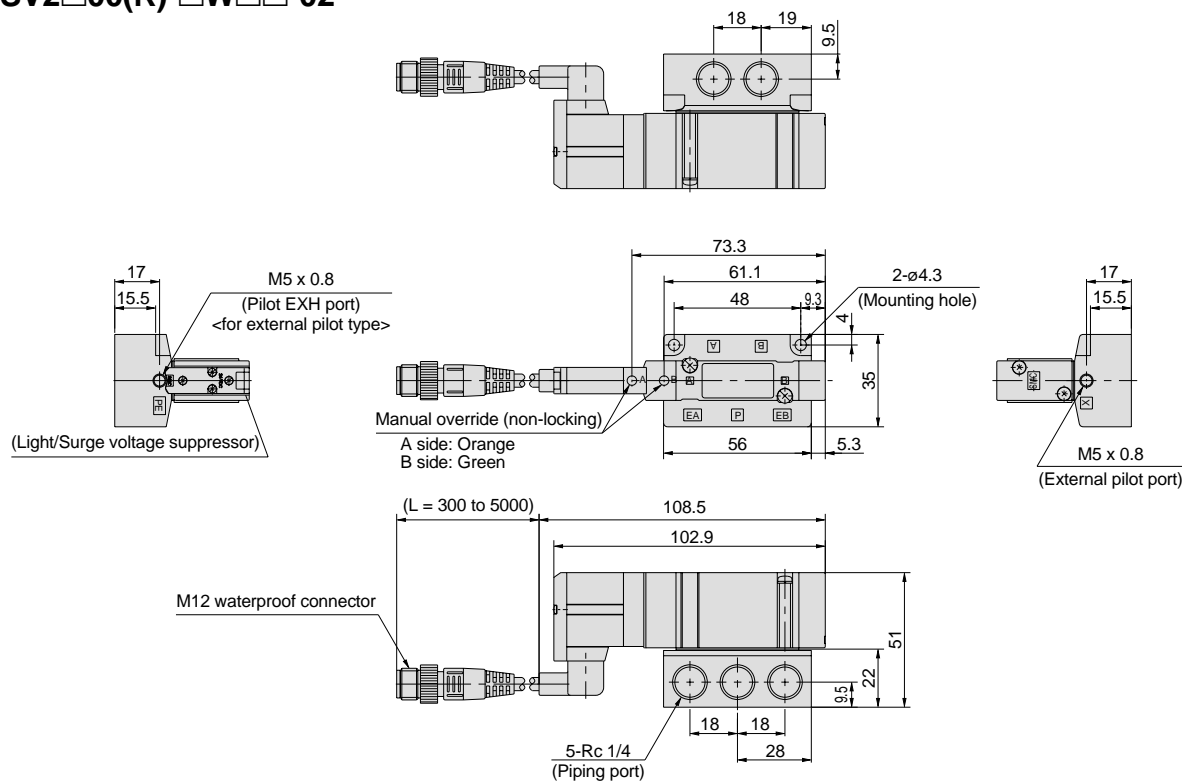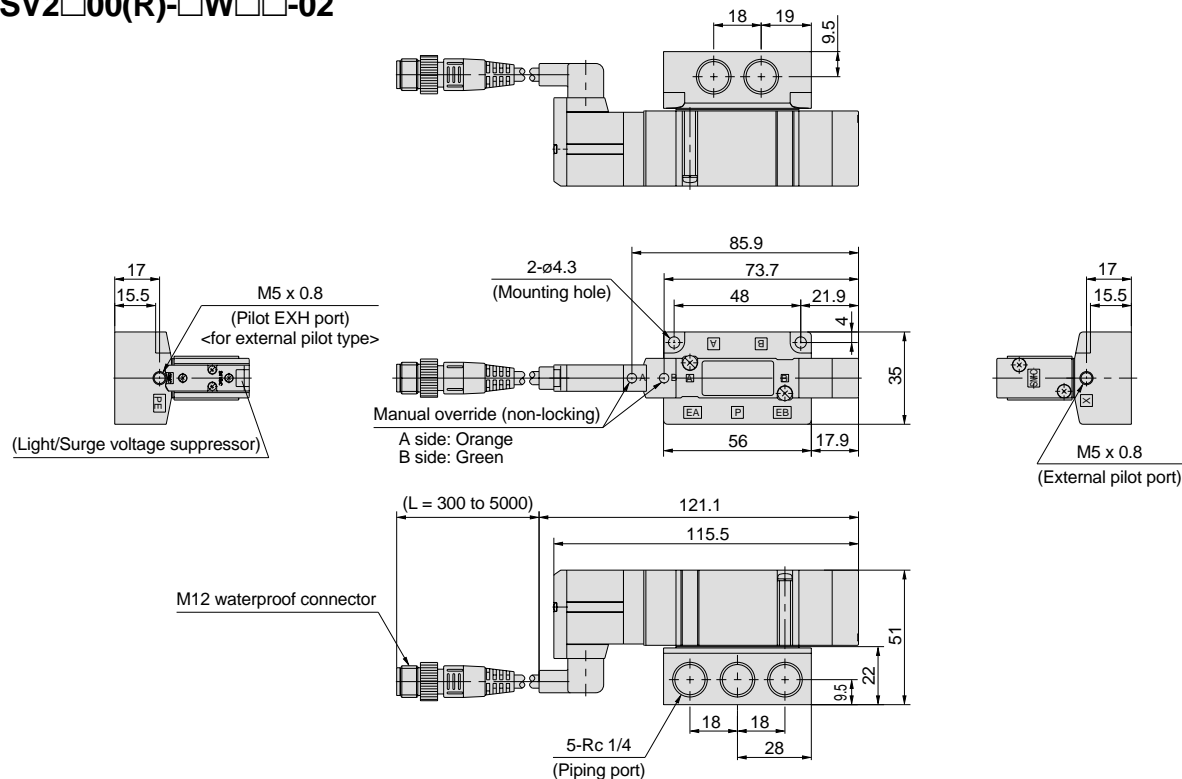
**2 position single/double/4 position dual 3 port [M12 waterproof connector type]
SV2□00(R)-□W□□-02****3 position closed center/exhaust center/pressure center [M12 waterproof connector type]
SV2□00(R)-□W□□-02**

Dimensions: Series SV3000

1in = 25.4mm


2 position single/double [M12 waterproof connector type]

SV3□00(R)-□W□□-02, 03

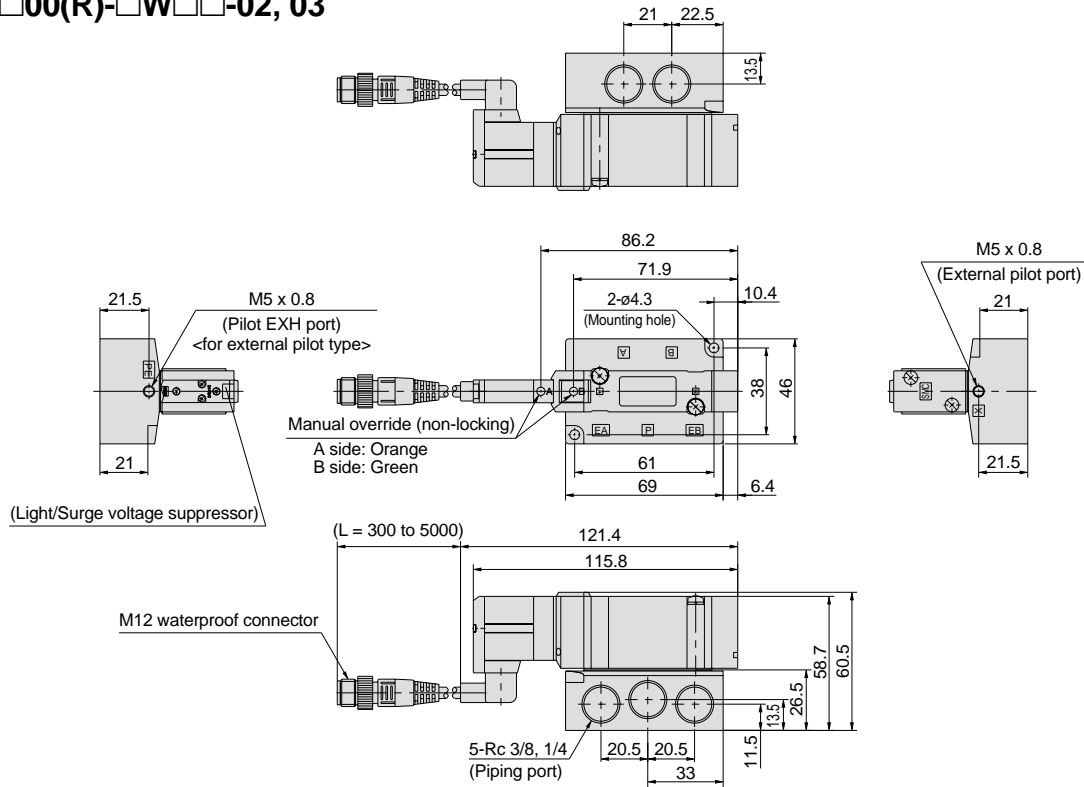

3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

SV3□00(R)-□W□□-02, 03

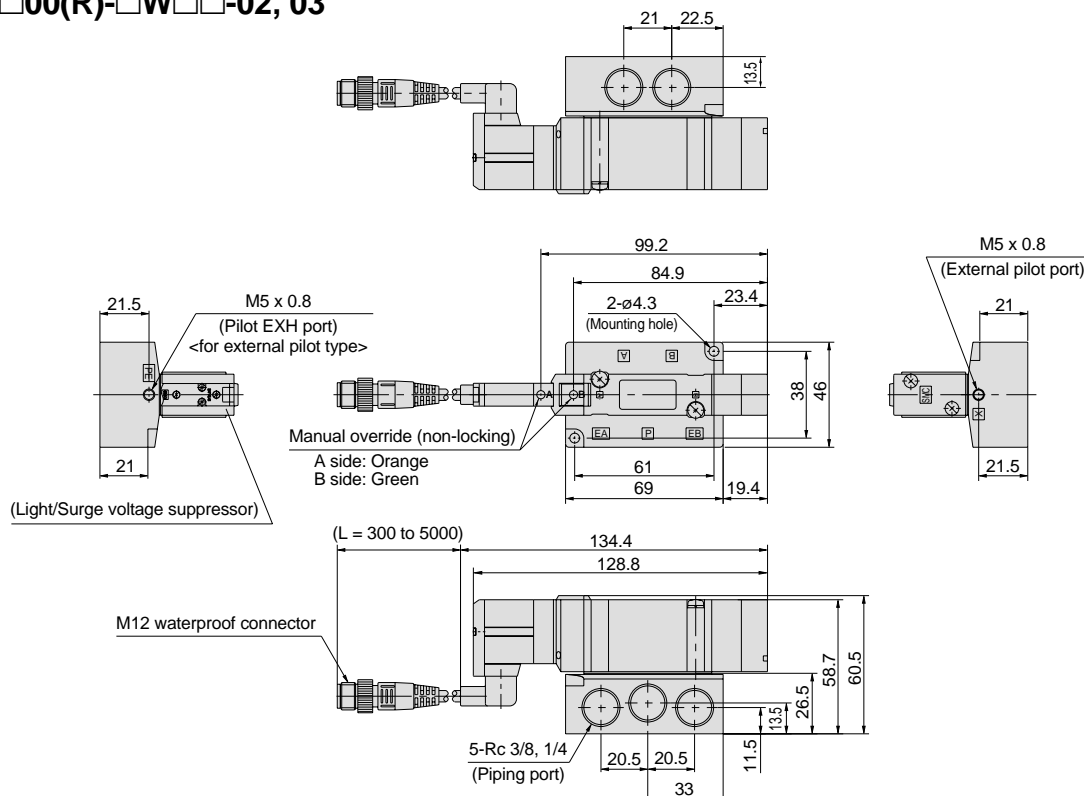


Dimensions: Series SV4000

1in = 25.4mm


2 position single/double [M12 waterproof connector type]

SV4□00(R)-□W□□-03, 04

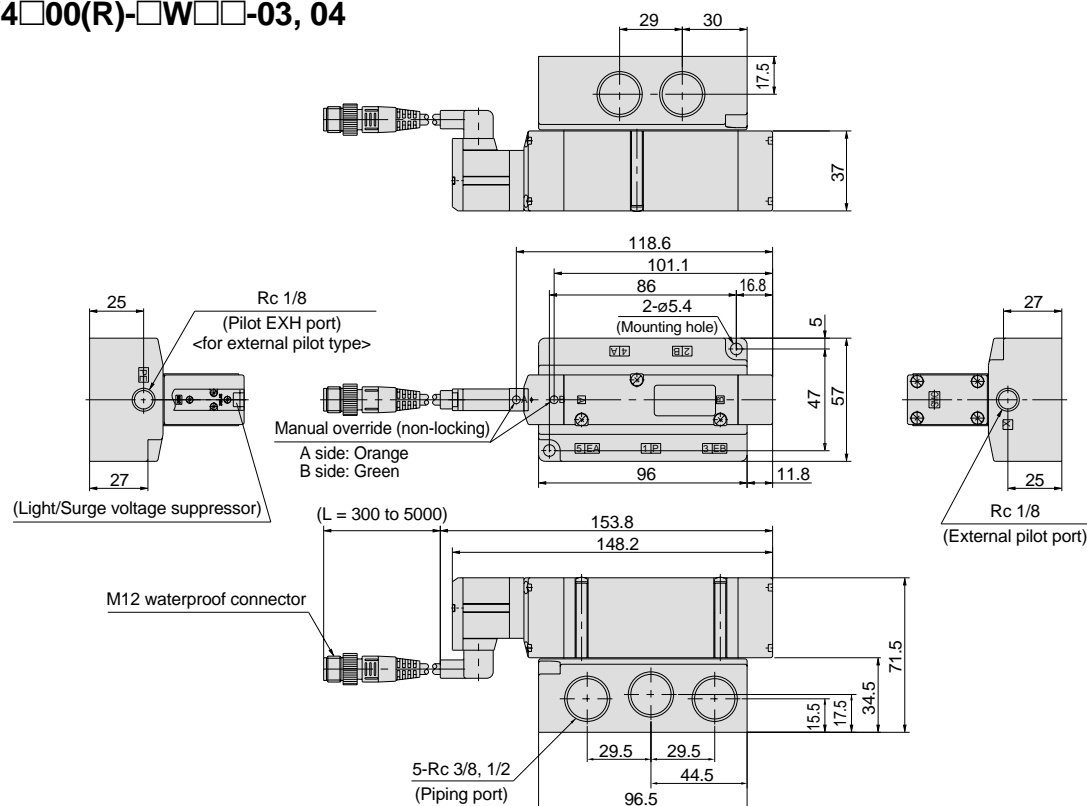

3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

SV4□00(R)-□W□□-03, 04

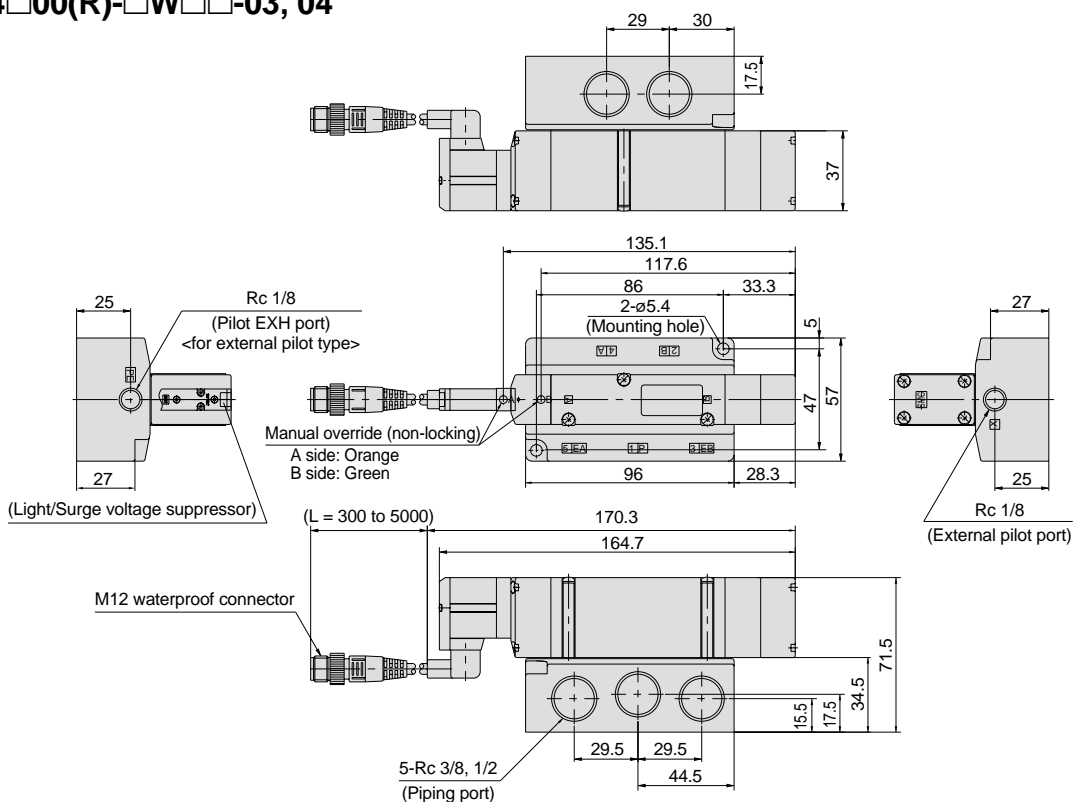



Contact SMC regarding detailed specifications, lead times and pricing.

1 Main Valve Fluoro Rubber Specification Symbol **-X90**

Fluoro rubber is used for rubber parts of the main valve to allow use in applications such as the following.

1. When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.
2. When ozone enters or is generated in the air supply.

Part no. **SV** ¹**00** ²**-** ³**00** ⁴**-X90**

• Entry is the same as standard products.

Specifications and performance are the same as standard products.

Note) Because in series-X90 fluoro rubber is used for only main valve, the rubber parts of the application/usage in conditions requiring heat resistance should be avoided.

2 Single, Double Common Type Symbol **-X5**

Single solenoid and double solenoid can be changed at the installation.

How to order

SV ¹**200** ²**-** ³**00** ⁴**-D-X5**

Manual override

• Entry is the same as standard products.

Specifications

Valve configuration	Pilot type 2 position 5 port solenoid valve	
Type of actuation	Single solenoid, double solenoid common type	
Internal pilot operating pressure range MPa (psi)	2 position single	0.15 to 0.7 (24 to 101)
	2 position double	0.15 to 0.7 (22 to 101)
External pilot operating pressure range MPa (psi)	Operating pressure range -100kPa to 0.7 (-14.5 to 101)	
Pilot pressure range	2 position single	0.25 to 0.7 (36 to 101)
	2 position double	0.25 to 0.7 (36 to 101)
Ambient and fluid temperature °C (°F)	-10 to 50 (with no freezing) Note) (14 to 122)	
Power consumption W	0.6 (With light: 0.65)	

* Other specifications (effective area, response time, etc.) are the same as standard products.

Note) Refer to page 102.

⚠ Caution

Operating precautions

1. The single solenoid specification is applicable when shipped from the factory. (Refer to Figure 1.)
2. For use as a double solenoid, set the manual override and connector assembly as follows.
 - ① Remove the B side manual override (green) label, and turn the slit of the B side manual override with a watchmakers screw driver so that it is positioned as shown in Figure 2.
3. When set for double solenoid, do not apply current to solenoids on both sides at the same time.
4. Refer to page 105 for details on electrical connections and electrical circuits with light and surge voltage suppressor.
5. Dimensions are the same as standard products.

Figure 1. When shipped: Manual override detail for single solenoid specification


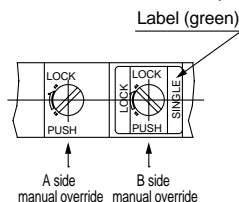


Figure 2. Manual override detail when changed to double solenoid

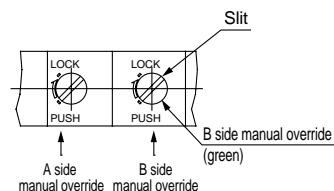

Date:

EX500 Decentralized Serial Type Manifold

Series SV¹₂³₄ 000: Tie-rod base
Cassette base

Manifold Specification Sheet

Follow procedures ① through ③.

① Manifolds Refer to page 8 for appropriate specification symbols to fill in the blanks below.

SS5V — W S D — —

Series
1 SV1000
2 SV2000
3 SV3000
4 SV4000

Manifold type
10 Tie-rod base
16 Cassette base
Cassette base available for SV1000, 2000 only.

Valve stations
Includes the number of blanking plate assemblies.

P, E port position

Supply/Exhaust block assembly specification

SI unit
0 Without SI unit
A1W For remote I/O
A2W For DeviceNet/Profibus

Option
Manifold mounting and DIN rail length can be specified.

A, B port size
For "M" (mixed ports), indicate the port size, such as C3 or C4, instead of a "O" in the ② section of the station table.

② Valves Refer to page 9 for appropriate specification symbols to fill in the blanks below.

SV * 00 * * — 5F

Series


Type of actuation
Indicate in the station table below.

Pilot type
When using an external pilot valve, enter a "O" in the ⑥ section of the station table below. However, the external pilot specification is not available for 4 position dual 3 port valves.

Manual override

Light/Surge voltage suppressor

Back pressure check valve
When using a valve with back pressure check valve, enter a "O" in section ③ of the station table below.

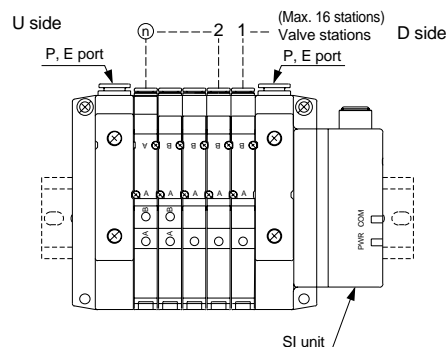

③ Stations

Indicate the layout of valves, etc., with a "O".

Valve stations		16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Quantity
②	2 position	Single solenoid																
		Double solenoid																
	3 position	Closed center																
		Exhaust center																
		Pressure center																
	4 position dual 3 port valve	N.C./N.C.																
		N.O./N.O.																
③	Relay output module	1 output																
		2 outputs																
Blanking plate assembly																		
④	External pilot specification (enter only for external pilot)																	
⑤	With back pressure check valve (enter only for back pressure check valve)																	
⑥ SUP block plate assembly																		
⑦ EXH block plate assembly																		
⑧	Wiring specifications	Single wiring																
		Double wiring																

Enter only when specifying the wiring.

For SMC use only

Enter ordered part numbers.

Part no.	Qty.

Part no.	Qty.

Order no.	
Clerk (code no.)	
Dept. code	

Date:

EX250 Integrated Input/Output Serial Type Manifold

Series SV¹₂000: Tie-rod base

Manifold Specification Sheet

Follow procedures ① through ③.

① Manifolds Refer to page 24 for appropriate specification symbols to fill in the blanks below.

SS5V — W10S1 D —

Series

1	SV1000
2	SV2000
3	SV3000

SI unit

0	Without SI unit
NW	For ProfiBus-DP
QW	For DeviceNet

Input block

Input block type

Nil	Without input block
1	M12: 2 inputs
2	M12: 4 inputs
3	M8: 4 inputs (3 pins)

Valve stations
Includes the number of blanking plate assemblies.

P, E port position

Supply/Exhaust block assembly specification

Input block common specification

Nil	Positive COM
N	Negative COM

Option
Manifold mounting and DIN rail length can be specified.

A, B port size
For mixed mounting, indicate the port size, such as C3 or C4, instead of a "O" in the ② section of the station table.

② Valves Refer to page 25 for appropriate specification symbols to fill in the blanks below.

SV * 00 * * — 5F

Series

Type of actuation
Indicate in the station table below.

Pilot type
When using an external pilot valve, enter a "O" in the ② section of the station table below. However, the external pilot specification is not available for 4 position dual 3 port valves.

Manual override

Light/Surge voltage suppressor

Back pressure check valve
When using a valve with back pressure check valve, enter a "O" in section ③ of the station table below.

③ Stations

Indicate the layout of valves, etc., with a "O".

Valve stations		20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Quantity
①	2 position	Single solenoid																				
		Double solenoid																				
	3 position	Closed center																				
		Exhaust center																				
		Pressure center																				
	4 position dual	N.C./N.C.																				
	3 port valve	N.O./N.O.																				
②	Relay output module	1 output																				
		2 outputs																				
Blanking plate assembly																						
③ External pilot specification (enter only for external pilot)																						
④ With back pressure check valve (enter only for back pressure check valve)																						
⑤ SUP block plate assembly																						
EXH block plate assembly																						
⑥ Wiring specifications	Single wiring																					
	Double wiring																					

Enter only when specifying the wiring.

For SMC use only

Enter ordered part numbers.

Part no.	Qty.

Part no.	Qty.

Order no.	
Clerk (code no.)	
Dept. code	

Date:

EX120 Dedicated Output Serial Type Manifold

Series SV¹₂³₄000: Tie-rod base
Cassette base

Manifold Specification Sheet

Follow procedures ① through ③.

Customer name			
Contact person			
Specification sheet no.			
Purchase order no.			
Equipment name			
Quantity	set(s)	Required date	

① Manifolds Refer to page 32 for appropriate specification symbols to fill in the blanks below.

SS5V — S3 D — — —

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Manifold type

10	Tie-rod base
16	Cassette base

Cassette base available for SV1000, 2000 only.

SI unit **Valve stations**
Includes the number of blanking plate assemblies.

P, E port position

Supply/Exhaust block assembly specification

Option
Manifold mounting and DIN rail length can be specified.

A, B port size
For "M" (mixed ports), indicate the port size, such as C3 or C4, instead of a "O" in the ③ section of the station table.

② Valves Refer to page 33 for appropriate specification symbols to fill in the blanks below.


SV * 00 * * — 5F

Series

Type of actuation
Indicate in the station table below.

Pilot type
When using an external pilot valve, enter a "O" in the ③ section of the station table below.
However, the external pilot specification is not available for 4 position dual 3 port valves.

Manual override
Light/Surge voltage suppressor
Back pressure check valve
When using a valve with back pressure check valve, enter a "O" in section ③ of the station table below.

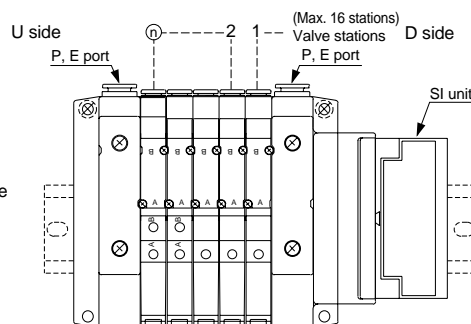**③ Stations**

Indicate the layout of valves, etc., with a "O".

Valve stations											16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Quantity	
a	2 position	Single solenoid																										
		Double solenoid																										
	3 position	Closed center																										
		Exhaust center																										
		Pressure center																										
	4 position dual	N.C./N.C.																										
		N.O./N.O.																										
	3 port valve	N.C./N.O.																										
Relay output module	1 output																											
	2 outputs																											
Blanking plate assembly																												
b	External pilot specification (enter only for external pilot)																											
c	With back pressure check valve (enter only for back pressure check valve)																											
d	SUP block plate assembly																											
	EXH block plate assembly																											
e	Wiring specifications	Single wiring																										
		Double wiring																										

Enter only when specifying the wiring.

For SMC use only

Enter ordered part numbers.

Part no.	Qty.

Part no.	Qty.

Order no.	
Clerk (code no.)	
Dept. code	

Date:

Circular Connector Type Manifold

Series SV¹₂³000: Tie-rod base
Cassette base⁴

Manifold Specification Sheet

Follow procedures ① through ③.

Customer name		
Contact person		
Specification sheet no.		
Purchase order no.		
Equipment name		
Quantity	set(s)	Required date

① Manifolds

Refer to page 44 for appropriate specification symbols to fill in the blanks below.

SS5V — W CD

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Manifold type

10	Tie-rod base
16	Cassette base

Cassette base available for SV1000, 2000 only.

Valve stations
Includes the number of blanking plate assemblies.

P, E port position

Supply/Exhaust block assembly specification

Option
Manifold mounting and DIN rail length can be specified.

A, B port size
For "M" (mixed ports), indicate the port size, such as C3 or C4, instead of a "O" in the (a) section of the station table.

② Valves

Refer to page 45 for appropriate specification symbols to fill in the blanks below.

SV * 00 * * — 5F

Series


Type of actuation
Indicate in the station table below.

Pilot type
When using an external pilot valve, enter a "O" in the (b) section of the station table below. However, the external pilot specification is not available for 4 position dual 3 port valves.

Manual override

Light/Surge voltage suppressor

Back pressure check valve
When using a valve with back pressure check valve, enter a "O" in section (c) of the station table below.

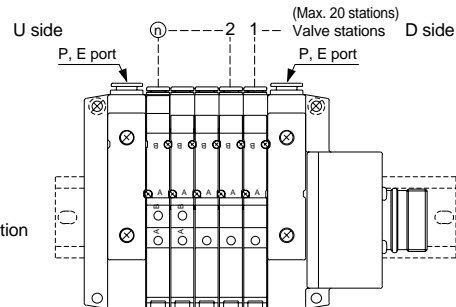

③ Stations

Indicate the layout of valves, etc., with a "O".

Valve stations		20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Quantity
①	2 position	Single solenoid																				
		Double solenoid																				
	3 position	Closed center																				
		Exhaust center																				
		Pressure center																				
	4 position dual	N.C./N.C.																				
		N.O./N.O.																				
	3 port valve	N.C./N.O.																				
	Relay output module	1 output																				
		2 outputs																				
②	Blanking plate assembly																					
	External pilot specification (enter only for external pilot)																					
	With back pressure check valve (enter only for back pressure check valve)																					
③	SUP block plate assembly																					
	EXH block plate assembly																					
④	Wiring specifications	Single wiring																				
		Double wiring																				

Enter only when specifying the wiring.

For SMC use only

Enter ordered part numbers.

Part no.	Qty.

Part no.	Qty.

Order no.	
Clerk (code no.)	
Dept. code	

Date:

D-sub Connector
Flat Ribbon Cable Connector Type ManifoldSeries SV ¹/₂/₃/₄ 000: Tie-rod base
Cassette base

Manifold Specification Sheet

Follow procedures ① through ③.

① Manifolds Refer to page 54 for appropriate specification symbols to fill in the blanks below.

SS5V — D — —

Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

Manifold type

10	Tie-rod base
16	Cassette base

Cassette base available for SV1000, 2000 only.

Connector type

F	D-sub connector 25 pins
P	Flat ribbon cable connector 26 pins
PG	Flat ribbon cable connector 20 pins
PH	Flat ribbon cable connector 10 pins

Valve stations
Includes the number of blanking plate assemblies.

Connector entry direction

1	Upward
2	Lateral

Option
Manifold mounting and DIN rail length can be specified.

A, B port size
For "M" (mixed ports), indicate the port size, such as C3 or C4, instead of a "O" in the (a) section of the station table.

Supply/Exhaust block assembly specification

P, E port position

② Valves Refer to page 55 for appropriate specification symbols to fill in the blanks below.

SV * 00 * * — 5F

Series

Type of actuation
Indicate in the station table below.

Manual override

Light/Surge voltage suppressor

Back pressure check valve
When using a valve with back pressure check valve, enter a "O" in section (c) of the station table below.

Pilot type
When using an external pilot valve, enter a "O" in the (b) section of the station table below.
However, the external pilot specification is not available for 4 position dual 3 port valves.

U side P, E port (Max. 20 stations) Valve stations D side P, E port

③ Stations

Indicate the layout of valves, etc., with a "O".

Valve stations		20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Quantity
(a)	2 position	Single solenoid																				
		Double solenoid																				
	3 position	Closed center																				
		Exhaust center																				
		Pressure center																				
	4 position dual	N.C./N.C.																				
		N.O./N.O.																				
	3 port valve	N.C./N.O.																				
	Relay output module	1 output																				
		2 outputs																				
Blanking plate assembly																						
(b)	External pilot specification (enter only for external pilot)																					
(c)	With back pressure check valve (enter only for back pressure check valve)																					
(d)	SUP block plate assembly																					
	EXH block plate assembly																					
(e)	Wiring specifications	Single wiring																				
		Double wiring																				

Enter only when specifying the wiring.

For SMC use only

Enter ordered part numbers.

Part no.	Qty.

Part no.	Qty.

Order no.	
Clerk (code no.)	
Dept. code	

Date:

EX500 Serial System

Input Unit Manifold Specification Sheet

To order, enter the input manifold part number + *block part number together.
For remote I/O (RIO) type, be sure to enter "-X1" at the end of each part number.

Customer name			
Contact person			
Specification sheet no.			
Purchase order no.			
Equipment name			
Quantity	set(s)	Required date	

① Input Manifolds

Enter symbols for the required specifications in the blanks below.
An input manifold includes the input unit + end block + DIN rail.

EEX500 —IB1 — (*1)

Input unit specification

Connector type

E	M8 connector
T	M12 connector
M	M8, M12 mixed


Stations

1	1 station
:	:
8	8 stations

Applicable GW unit

Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

For the remote I/O (RIO) type,
be sure to enter "-X1" at the end
of the part number.

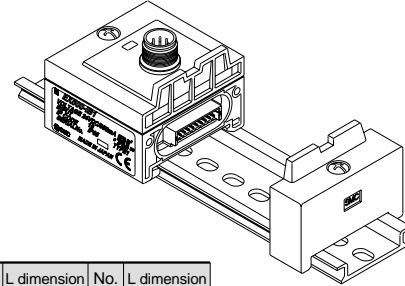

DIN rail L dimensions [mm]

Stations	M8 input block (m)								
	0	1	2	3	4	5	6	7	8
M12 input block (n)	0	0	1	2	3	4	5	6	7
	1	1	2	3	4	5	6	7	8
	2	2	3	4	5	6	7	8	
	3	4	5	6	7	8	9		
	4	6	7	8	9	10			
	5	7	8	9	10				
	6	9	10	11					
	7	10	11						
	8	12							


Connector type:

For T (n = 1 to 8)

Connector type:

For M (m + n = 2 to 8)

Connector type:
For E (m = 1 to 8)



L dimension

No.	L dimension	No.	L dimension
0	98	7	185.5
1	110.5	8	198
2	123	9	210.5
3	135.5	10	223
4	148	11	235.5
5	160.5	12	248
6	173		

*1) When a DIN rail other than the above is required, refer to the separate
DIN rail dimensions (page 85), and enter a number from the L dimension
table at the end of the part number.

② Input Blocks

Enter symbols for the required specifications in the blanks below.
Waterproof caps are attached to input blocks.

***EX500 —IE**

Block type

1	M8 connector, PNP specification
2	M8 connector, NPN specification
3	M12 connector, PNP specification
4	M12 connector, NPN specification
5	8 point integrated type, M8 connector, PNP specification
6	8 point integrated type, M8 connector, NPN specification

Applicable GW unit




Nil	DeviceNet PROFIBUS-DP
-X1	Remote I/O (RIO)

For the remote I/O (RIO) type,
be sure to enter "-X1" at the end
of the part number.

A M8 input block

B M12 input block


C 8 point integrated type input block

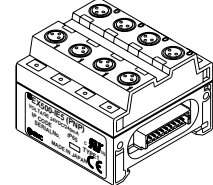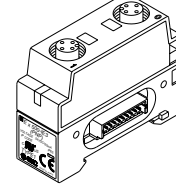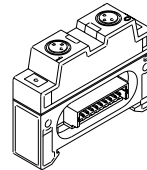

Indicate input sensor specifications and block arrangement (order) with "O" symbols.

Input sensor specifications		PNP (current source)				NPN (current sink)				Quantity
Arrangement (order)		1	2	3	4	5	6	7	8	
A	M8 input block									
B	M12 input block									
C	8 point integrated type input block (M8) *2)									

*2) The 8 point integrated type input block corresponds to four M8 input blocks.

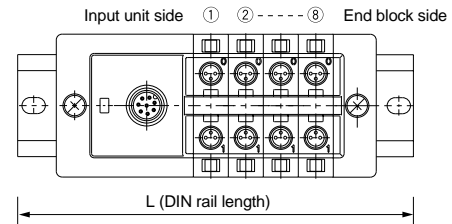

For SMC use only

Enter the part number to be ordered, and circle the connector type and sensor specification.

Connector type	Sensor specification	Description	Part number Note 1)	Qty.
—	—	① Input manifold	EEX500-IB1-	
E	M8 connector	② Input block Note 2)	*EX500-IE	
T	M12 connector		*EX500-IE	
M	M8, M12 mixed		*EX500-IE	

Note 1) When the gateway (GW) unit is an RIO type, enter "-X1" at the end of each part number.

Note 2) For input blocks, enter the total number of each block used.

Order no.	
P.O. no.	
Clerk (code no.)	
Dept. code	

Flow Characteristics of Solenoid Valve

(How to Express Flow Characteristics)

1. Express of Flow Characteristics

Table 1 shows the applicable International designation of flow characteristics in the specification section of a solenoid valve or any other types of equipment.

Table 1 Designation of flow characteristics

Equipment	Designation based on international standards	Other designation	Applicable standards
Pneumatics equipment	C, b		ISO 6358: 1989 JIS B 8390: 2000
		S	JIS B 8390: 2000 Equipment: JIS B 8373, 8374, 8375, 8379, 8381
		Cv	ANSI/(NFPA)T3.21.3: 1990

2. Pneumatic Equipment

2-1 Calculating flow rate according to International Standards

(1) Flow rate calculation formula

The flow rate calculation formula is defined as follows:

If $\frac{P_2+0.1}{P_1+0.1} \leq b$, a choke flow results.

$$Q = 600XC(P_1+0.1) \sqrt{\frac{293}{273+t}}$$

If $\frac{P_2+0.1}{P_1+0.1} > b$, a subsonic flow results.

$$Q = 600XC (P_1+0.1) \sqrt{1 - \left[\frac{\frac{P_2+0.1}{P_1+0.1} b}{1 - b} \right]^2} \sqrt{\frac{293}{273+t}}$$

Flow Characteristics of Solenoid Valve

Q : Air flow rate [$\text{dm}^3/\text{min}(\text{ANR})$].

The dm^3 (cubic decimeter) in the SI system may be expressed by L(liter). $1\text{dm}^3=1\text{L}$.

Standard condition: Air under condition temperature 20°C , absolute pressure 0.1MPa ($=100\text{kPa}=1\text{bar}$), relative humidity 65%.

C: Sonic conductance [$\text{dm}^3/(\text{s}\cdot\text{bar})$]

b: Critical pressure ratio [-]

P_1 : Upstream pressure [MPa]

P_2 : Downstream pressure [MPa]

t: Temperature [$^\circ\text{C}$]

Note) The formula for subsonic flow is that of an elliptic approximate curve.

Figure 1 is the flow characteristic diagram. For more information, please see Energy Saving Programs by SMC.

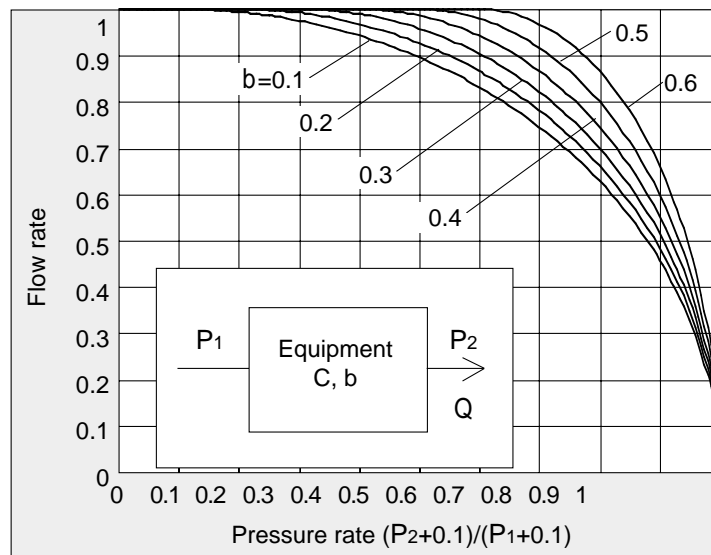


Figure 1 Flow rate characteristic diagram

Flow Characteristics of Solenoid Valve

(How to Express Flow Characteristics)

(2) Test method

Pipe the test equipment to the test circuit shown in Figure 2. Keep the upstream pressure at a certain constant level above 0.3MPa. First measure the maximum flow rate in saturation. Then, measure the flow rate, upstream pressure and downstream pressure each at 80%, 60%, 40% and 20% points of the flow rate. Calculate the sonic conductance C from the maximum flow rate. Also, substitute other data for variables in the formula for subsonic flow and obtain the critical pressure rate b by averaging the critical pressure rates at those points.

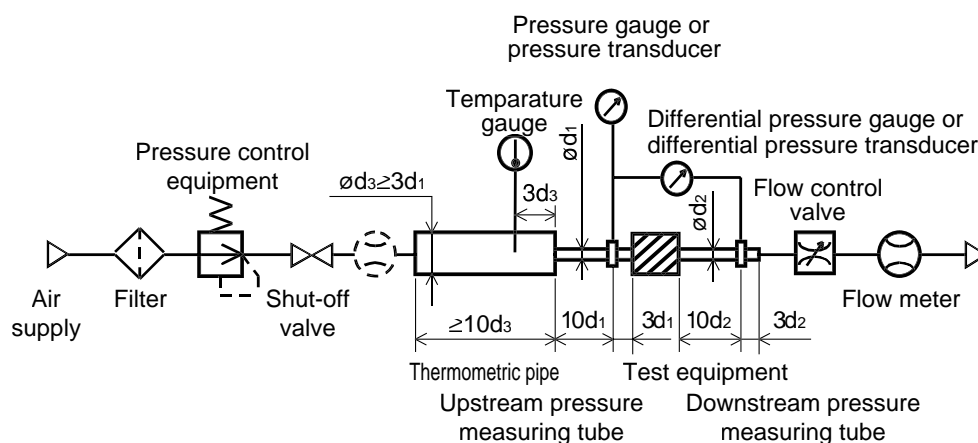


Figure 2 Test circuit of ISO6358:1989 and JIS B 8390:2000

2.2 Flow coefficient Cv factor

The flow coefficient Cv factor is defined with the following formula in the U.S. standard ANSI/(NFPA)T3.21.3: 1990: Pneumatic fluid power - Flow rating test procedure and reporting method - For fixed orifice components

$$C_v = \frac{Q}{114.5 \sqrt{\frac{\Delta P (P_2 + P_a)}{T_1}}}$$

ΔP : Pressure drop between static pressure output ports [bar]

P_1 : Pressure at upstream output port [bar gauge]

P_2 : Pressure at downstream output port [bar gauge]: $P_2 = P_1 - \Delta P$

Q : Flow rate [dm³/s standard atmosphere]


P_a : Atmospheric pressure [bar absolute]


T_1 : Upstream absolute temperature [K]


Test conditions are $P_1 + P_a = 6.5 \pm 0.2$ bar absolute, $T_1 = 297 \pm 5$ K, $0.07 \text{ bar} \leq \Delta P \leq 0.14$ bar.

This concept is similar to the effective area in ISO6958:1989, which is described to be applicable only if the pressure drop is so small compared with the upstream pressure that air compression is negligible.

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, be sure to observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

 **Caution** : Operator error could result in injury or equipment damage.

 **Warning** : Operator error could result in serious injury or loss of life.

 **Danger** : In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – Recommendations for the application of equipment to transmission and control systems

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

Warning

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.

1. Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions.
2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc. (Bleed air into the system gradually to create back-pressure.)

4. Contact SMC if the product is to be used in any of the following conditions:

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, press applications, or safety equipment.
3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.

Design

⚠ Warning**1. Actuator drive**

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

2. Intermediate stopping

When a 3 position closed center valve is used to stop a cylinder at an intermediate position, accurate stopping of the piston in a predetermined position is not possible due to the compressibility of air.

Furthermore, since valves and cylinders are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended length of time. Contact SMC if it is necessary to hold a stopped position for an extended time.

3. Effect of back pressure when using a manifold

Use caution when valves are used on a common exhaust manifold, as actuator malfunction due to back pressure may occur.

Special caution is necessary when driving an air operated valve or single acting cylinder, or when using a 3 position exhaust center valve. Since there is a possibility of malfunction due to exhaust from other actuators, use EXH block plates to divide the exhaust, or take other measures, when there may be an adverse effect from back pressure.

4. Holding of pressure (including vacuum)

Since valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a pressure vessel.

5. Cannot be used as an emergency shutoff valve, etc.

The valves presented in this catalog are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

6. Maintenance space

The installation should allow sufficient space for maintenance activities (removal of valve, etc.).

7. Release of residual pressure

Provide a residual pressure release function for maintenance purposes. Special consideration should be given to the release of residual pressure between the valve and cylinder in the case of a 3 position closed center type valve.

8. Vacuum applications

When a valve is used for vacuum switching, etc., take measures against the suction of external dust or other contaminants from vacuum pads and exhaust ports, etc. Moreover, an external pilot type valve should be used in this case. Contact SMC in the case of an internal pilot type valve.

9. Double solenoid applications

When first using a double solenoid type, the actuator may operate in an unexpected direction depending on the valve's switch position. Take appropriate measures to prevent potential danger caused by actuator operation.

10. Ventilation

When using valves in a sealed control panel, install a vent so that the pressure inside the control panel will not rise due to exhaust air, and heat generated by the valves will not be trapped.

Selection

⚠ Warning**1. Confirm the specifications.**

The products presented in this catalog are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to specifications.)

Contact SMC when using a fluid other than compressed air (including vacuum).

2. Extended periods of continuous energization

Contact SMC if valves will be continuously energized for extended periods of time, or the energized time exceeds the de-energized time.


⚠ Caution**1. Momentary energization**

If a double solenoid valve will be operated with momentary energization, it should be energized for at least 0.1 second.

However, depending on the secondary load conditions, it should be energized until the cylinder reaches the stroke end position, as there is a possibility of malfunction otherwise.

2. Leakage voltage

Particularly when using a C-R element (surge voltage suppressor) for the protection of a switching element, take note that leakage voltage will increase due to leakage current flowing through the C-R element. Therefore, select circuits and elements to limit the amount of residual leakage voltage to the following value. Also, when there is a reset malfunction due to leakage voltage, installation of a bleeder resistor is recommended. Contact SMC for details on bleeder resistors.

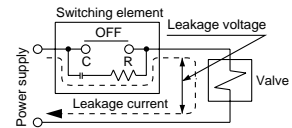

With DC coil: 3% or less of rated voltage

3. Low temperature operation

Appropriate measures should be taken to avoid solidification or freezing of drainage and moisture at low temperatures.

4. Operation for air blowing

When using a solenoid valve for air blow, use an external pilot type. Take note that when internal pilots and external pilots are used on the same manifold, the pressure drop caused by the air blowing can have an effect on the internal pilot type valves.

Moreover, when compressed air within the pressure range of the established specifications is supplied to the external pilot port, and a double solenoid valve is used for air blowing, the solenoids should normally be energized when air is being blown.

5. Mounting orientation

The mounting orientation is unrestricted.

Be sure to read before handling.

Mounting

⚠ Warning

1. If air leakage increases or equipment does not operate properly, stop operation of the valve.

At the time of mounting and maintenance, etc., connect the compressed air and power supplies, and perform appropriate function and leakage tests to confirm that the unit is mounted properly.

2. Instruction manual

Mount and operate the product after reading the manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

3. Painting and coating

Warnings or specifications printed or pasted on the product should not be erased, removed or covered up.

Consult SMC if paint is to be applied to resinous parts, as this may have an adverse effect due to the paint solvent.

Wiring

⚠ Caution

1. Applied voltage

When electric power is connected to the solenoid valve, be careful to apply the proper voltage. Improper voltage may cause malfunction or coil damage.

2. Confirm the connections.

After completing the wiring, confirm that the connections are correct.

Lubrication

⚠ Caution

1. Lubrication

- 1) The valve has been lubricated for life at the factory, and does not require any further lubrication.
- 2) In the event that it is lubricated, use Class 1 turbine oil (without additives), ISO VG32.
However, once lubrication is applied it must be continued, as the original lubricant may be lost leading to malfunction.

Piping

⚠ Caution


1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of sealant tape

When connecting pipes and fittings, etc., be sure that chips from the pipe threads and sealing material do not get inside the valve.

Furthermore, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

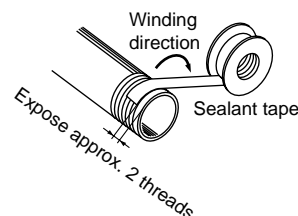

3. When using closed center valves

When using closed center type valves, check carefully to be sure there are no air leaks from the piping between the valves and cylinders.

4. Tightening of fittings

When connecting fittings, etc., to valves, tighten as indicated below.

1) M5 type

1. When using SMC fittings, follow the guidelines below.

M5: After tightening by hand, tighten an additional 1/6 turn with a tightening tool. However, if miniature fittings are used, tighten an additional 1/4 turn with a tightening tool after tightening by hand. For fittings with gaskets in 2 locations, e.g., universal elbow or universal tee, tighten an additional 1/2 turn.

Note) If fittings are over-tightened, air leakage may result due to breaking of fitting threads or deformation of the gaskets. However, if fittings are not tightened sufficiently, loosening of the threads and air leakage may occur.

2. When fittings other than SMC fittings are used, follow the instructions of the respective fitting manufacturer.

2) Rc threads

Follow the provided tightening torque levels below.

Connection thread	Proper tightening torque N·m
Rc 1/8	7 to 9
Rc 1/4	12 to 14
Rc 3/8	22 to 24
Rc 1/2	28 to 30

5. Connection of piping to products

When connecting piping to a product, refer to its instruction manual to avoid mistakes regarding the supply port, etc.

1 = n·m

Air Supply**⚠ Warning****1. Use clean air.**

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

⚠ Caution**1. Install air filters.**

Install air filters close to valves at their upstream side. A filtration degree of 5µm or less should be selected.

2. Install an air dryer, after-cooler or water separator, etc.

Air that contains excessive drainage may cause malfunction of valves and other pneumatic equipment. Take measures by installing an air dryer, after-cooler or water separator, etc.

3. If excessive carbon powder is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon powder is generated by the compressor, it may adhere to the inside of valves and cause malfunction.

Refer to SMC's "Air Cleaning Equipment" catalog for further details on compressed air quality mentioned above.

Operating Environment**⚠ Warning****1. Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water, steam, or where there is direct contact with any of these.****2. Products with IP65 and IP67 enclosures (based on IEC529) are protected against dust and water, however, these products cannot be used in the water.****3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids. Liquid filtration through the exhaust port of the silencer can cause damage to the valve.****4. Do not use in an explosive atmosphere.****5. Do not use in locations subject to vibration or impact. Confirm the specifications in the main section of this catalog.****6. Use a protective cover, etc., to shield valves from direct sunlight.****7. Shield valves from radiated heat generated by nearby heat sources.****8. Employ suitable protective measures in locations where there is contact with oil or welding spatter, etc.****Operating Environment****9. When solenoid valves are mounted in a control panel or are energized for extended periods of time, employ measures to radiate excess heat, so that temperatures remain within the valve specification range.****Maintenance****⚠ Warning****1. Perform maintenance procedures as shown in the instruction manual.**

If handled improperly, malfunction or damage of machinery or equipment may occur.

2. Removal of equipment and supply/exhaust of compressed air

When equipment is serviced, first confirm that measures are in place to prevent dropping of work pieces and run-away of equipment, etc. Then cut the supply pressure and power, and exhaust all compressed air from the system using its residual pressure release function.

Furthermore, in the case of 3 position closed center type valves, compressed air will remain between valves and cylinders, and must be exhausted similarly.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc., and then confirm that the equipment is operating normally.

3. Low frequency operation

Switch valves at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

4. Manual override operation

When the manual override is operated, connected equipment will be actuated. Confirm safety before operating.

⚠ Caution**1. Drain flushing**

Remove drainage from air filters regularly. (Refer to specifications.)

How to Find the Flow Rate (at air temperature of 20°C)

Subsonic flow when $P_1 + 0.1013 < 1.89 (P_2 + 0.1013)$

$$Q = 226S \sqrt{\Delta P (P_2 + 0.1013)}$$

Sonic flow when $P_1 + 0.1013 \geq 1.89 (P_2 + 0.1013)$

$$Q = 113S (P_1 + 0.1013)$$

Q: Air flow rate [L/min(ANR)]

S: Effective area (mm²)

ΔP : Pressure drop ($P_1 - P_2$) [MPa]

P1: Upstream pressure [MPa]

P2: Downstream pressure [MPa]

* Correction for different air temperatures

Multiply the flow rate calculated with the above formula by a coefficient from the table below.

Air temperature (°C)	-20	-10	0	10	30	40	50	60
Correction coefficient	1.08	1.06	1.04	1.02	0.98	0.97	0.95	0.94


Be sure to read before handling.
Refer to pages 101 through 104 for safety instructions and common precautions.

Warning

Manual override operation


Handle carefully, as connected equipment can be actuated through manual override operation.

Non-locking push type

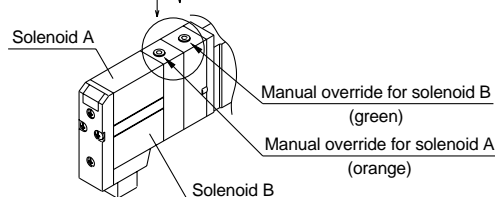

Slotted locking type (screwdriver operated)

After pushing down, turn in the direction of the arrow.
If it is not turned, it can be operated the same way as the non-locking type.

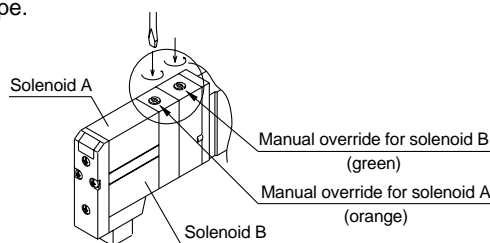

Caution

When locking the manual override on the screwdriver operated slotted locking type, be sure to push it down before turning.

Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

Caution

Exhaust restriction

Since the series SV is a type in which the pilot valve exhaust joins the main valve exhaust inside the valve, care must be taken so that the piping from the exhaust port is not restricted.

Caution

Series SV used as a 3 port valve

Using a 5 port valve as a 3 port valve

Series SV valves can be used as normally closed (N.C.) or normally open (N.O.) 3 port valves by closing one of the cylinder ports (A or B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3 port valve is required.


Plug position		Port B	Port A
Actuation		N.C.	N.O.
Number of solenoids	Single		
	Double		

Caution


Light/Surge voltage suppressor

Solenoid valves have no polarity.
Light/surge voltage suppressor

Single solenoid type




Double solenoid, 3 position type

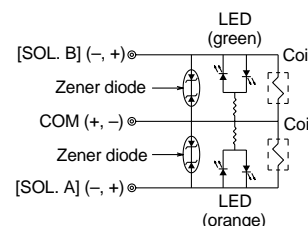


Surge voltage suppressor

Single solenoid type




Double solenoid, 3 position type

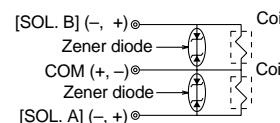

Caution

Light indication

When equipped with light and surge voltage suppressor, the indicator light window turns orange when solenoid A is energized, and it turns green when solenoid B is energized.

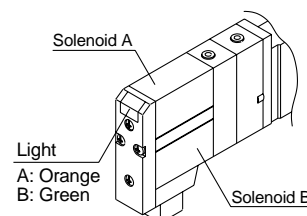


Be sure to read before handling.

Refer to pages 101 through 104 for safety instructions and common precautions.

⚠ Caution

Connector entry directions

Connector entry directions for D-sub connectors and flat ribbon cables can be changed. To change the connector's entry direction, press the levers on both sides of the connector, take it off, and change the direction as shown in the drawing. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

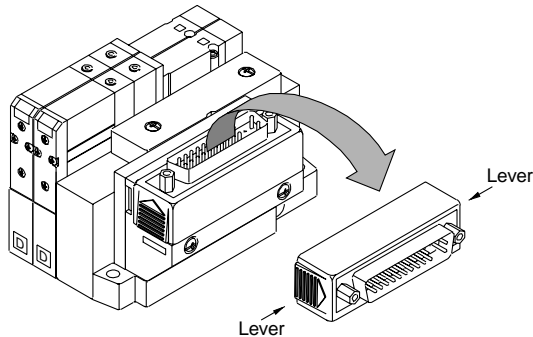


⚠ Caution

How to order manifolds

The letter "S" or "D" is indicated on manifold blocks for series SV as shown below. This indication refers to the type substrate assembly (single wiring or double wiring) inside the manifold blocks.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification (D). In this case, single and double valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification (S) and double wiring specification (D) on a manifold specification sheet. (Note that double, 3 or 4 position valves cannot be used for manifolds blocks with single wiring specification (S).)

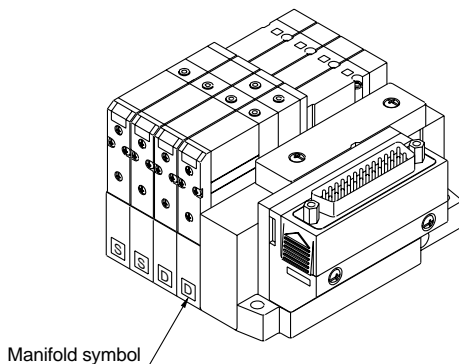

⚠ Caution

One-touch fittings

1. Tube attachment/detachment for One-touch fittings

1) Attaching of tube

- ① Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, there is the danger that the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Also allow some extra length in the tube.
- ② Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- ③ After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

2) Detaching of tube

- ① Push in the release button sufficiently, and push the collar evenly at the same time.
- ② Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- ③ When the removed tube is to be used again, cut off the end or portion that was connected before reusing it as it may have become worn. If the grabbing or connecting portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.

⚠ Caution

Other tube brands

1. When using other than SMC brand tubes, confirm that the following specifications are satisfied with respect to the outside diameter tolerance of the tube.

- | | |
|----------------------|---|
| 1) Nylon tube | within $\pm 0.1\text{mm}$ |
| 2) Soft nylon tube | within $\pm 0.1\text{mm}$ |
| 3) Polyurethane tube | within $+0.15\text{mm}$ or less
within -0.2mm or less |

Do not use tubes which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

⚠ Caution

Substrate assemblies inside manifolds

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

Be sure to read before handling.
Refer to pages 101 through 104 for safety instructions and common precautions.

Serial wiring EX500/EX250/EX120 Precautions

⚠ Warning

1. These products are intended for use in general factory automation equipment.

Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.

2. Do not use in explosive atmospheres, environments with inflammable gases, or corrosive environments.

This can cause injury or fire, etc.

3. Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by personnel with specialized knowledge.

There is a danger of electrocution, injury or fire, etc.

4. Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.

5. Do not rebuild these products, as there is a danger of injury and damage.

⚠ Caution

1. Read the instruction manual carefully, strictly observe the precautions and operate within the range of the specifications.

2. Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction, etc.

3. In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause malfunction, damage to the unit, electrocution or fire, etc.

4. Do not touch connector terminals or internal substrates when current is being supplied. There is a danger of malfunction, damage to the unit or electrocution if connector terminals or internal substrates are touched when current is being supplied.

Be sure that the power supply is OFF when adding or removing manifold valves or input blocks, etc., or when connecting or disconnecting connectors.

5. Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.

6. Keep wire scraps and other extraneous material from getting inside these products. This can cause fire, failure or malfunction, etc.

7. Give consideration to the operating environment depending on the type of enclosure being used.

To achieve IP65 protection, provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of input units, input blocks, SI units and manifold valves, etc. Provide a cover or other protection for applications in which there is constant exposure to water.

8. Use the proper tightening torques.

There is a possibility of damaging threads if tightening exceeds the tightening torque range.

⚠ Caution

9. Provide adequate protection when operating in locations such as the following:

- Where noise is generated by static electricity, etc.
- Where there is a strong electric field
- Where there is a danger of exposure to radiation
- When in close proximity to power supply lines

10. When these products are installed in equipment, provide adequate protection against noise by using noise filters, etc.

11. Since these products are components that are used after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.

12. Do not remove the name plate.

13. Perform periodic inspections and confirm normal operation. It may otherwise be impossible to guarantee safety due to unexpected malfunction or erroneous operation.

Power Supply Safety Instructions

⚠ Caution

1. Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for input and control units).

2. Use the following UL approved products for DC power supply combinations.

- (1) Controlled voltage current circuit conforming to UL508
Circuit uses the secondary coil of an isolated transformer as the power supply, satisfying the following conditions.
 - Max. voltage (with no load): 30Vrms (42.4V peak) or less
 - Max. current: ① 8A or less (including shorts), and
② When controlled by a circuit protector (fuse, etc.) with the following rating

No-load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Over 20 [V] to 30 [V]	100
	Peak voltage value

- (2) A circuit (class 2 circuit) with maximum 30Vrms (42.4V peak) or less, and a power supply consisting of a class 2 power supply unit conforming to UL1310, or a class 2 transformer conforming to UL1585

Cable Safety Instructions

⚠ Caution

1. Be careful of mis-wiring. This can cause malfunction, damage and fire in the unit.

2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high voltage lines. Otherwise, this can cause malfunction.

3. Check wiring insulation, as defective insulation can cause damage to the unit due to excessive voltage or current.

4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.

World Wide SMC Support...

United States Branch Offices For a branch office near you call: 1-800-SMC-SMC1 (762-7621)

SMC Corporation of America (Atlanta)
1440 Lakes Parkway, Suite 600
Lawrenceville, GA 30043
TEL: (770) 624-1940
FAX: (770) 624-1943

SMC Corporation of America (Austin)
9101 Wall Street, Suite 1030
Austin, TX 78754
TEL: (512) 926-2646
FAX: (512) 926-7055

SMC Corporation of America (Boston)
Zero Centennial Drive
Peabody, MA 01960
TEL: (978) 326-3600
FAX: (978) 326-3700

SMC Corporation of America (Charlotte)
5029-B West W.T. Harris Blvd.
Charlotte, NC 28269
TEL: (704) 597-9292
FAX: (704) 596-9561

SMC Corporation of America (Chicago)
27725 Diehl Road
Warrenville, IL 60555
TEL: (630) 393-0080
FAX: (630) 393-0084

SMC Corporation of America (Cincinnati)
4598 Olympic Blvd.
Erlanger, KY 41018
TEL: (859) 647-5600
FAX: (859) 647-5609

SMC Corporation of America (Cleveland)
2305 East Aurora Rd., Unit A-3
Twinsburg, OH 44087
TEL: (330) 963-2727
FAX: (330) 963-2730

SMC Corporation of America (Dallas)
1301 W. Beltline, Ste. 119
Carrollton, TX 75006
TEL: (972) 446-9554
FAX: (972) 446-5931

SMC Corporation of America (Denver)
4910 Fox Street, Unit C
Denver, CO 80216
TEL: 303 293 9322
FAX: 303 293 9376

SMC Corporation of America (Detroit)
2990 Technology Drive
Rochester Hills, MI 48309
TEL: (248) 299-0202
FAX: (248) 293-3333

SMC Corporation of America (Houston)
9001 Jameel, Suite 180
Houston, TX 77040
TEL: (713) 460-0762
FAX: (713) 460-1510

SMC Corporation of America (L.A.)
14191 Myford Road
Tustin, CA 92780
TEL: (714) 669-1701
FAX: (714) 669-1715

SMC Corporation of America (Milwaukee)
16850 W. Victor Road
New Berlin, WI 53151
TEL: (262) 827-0080
FAX: (262) 827-0092

SMC Corporation of America (Mnpls.)
990 Lone Oak Road, Suite 162
Eagan, MN 55121
TEL: (952) 943-1299
FAX: (952) 943-1614

SMC Corporation of America (Nashville)
5000 Linbar Drive, Suite 297
Nashville, TN 37211
TEL: (615) 331-0020
FAX: (615) 331-9950

SMC Corporation of America (New Jersey)
Corporate Park 111, 580 Howard Avenue
Somerset, NJ 08873
TEL: 732 537 0120
FAX: 732 537 0121

SMC Corporation of America (Phoenix)
2001 W. Melinda Lane
Phoenix, AZ 85027
TEL: (623) 492-0908
FAX: (623) 492-9493

SMC Corporation of America (Portland)
14107 N.E. Airport Way
Portland, OR 97230
TEL: (503) 252-9299
FAX: (503) 252-9253

SMC Corporation of America (Richmond)
4701 Cox Rd.
Richmond, VA 23060
TEL: (804) 527-0500
FAX: (804) 527-2100

SMC Corporation of America (Rochester)
245 Summit Point Drive
Henrietta, NY 14467
TEL: (716) 321-1300
FAX: (716) 321-1865

SMC Corporation of America (San Diego)
13771 Danielson Street, Suite D
Poway, CA 92064
TEL: (858) 679 1903
FAX: (858) 679 1904

SMC Corporation of America (S.F.)
85 Nicholson Lane
San Jose, CA 95134
TEL: (408) 943-9600
FAX: (408) 943-9111

SMC Corporation of America (Seattle)
19115 W. Valley Hwy., Suite H-100
Kent, WA 98032
TEL: (425) 251 6955
FAX: (425) 251 6801

SMC Corporation of America (St. Louis)
4130 Rider Trail North
Earth City, MO 63045
TEL: (314) 209-0080
FAX: (314) 209-0085

SMC Corporation of America (Tampa)
8507-H Benjamin Road
Tampa, FL 33634
TEL: (813) 243-8350
FAX: (813) 243-8621

Canadian Branch Offices

SMC Pneumatics (Canada) Ltd. (Toronto)
6768 Financial Drive
Mississauga, ON L5N 7J6
TEL: (905) 812-0400
FAX: (905) 812-8686

SMC Pneumatiques (Canada) Ltd. (Montreal)
8495 Dalton Drive
Township of Mount-Royal, PQ H4T 1V5
TEL: (514) 733-9595
FAX: (514) 733-1771

SMC Pneumatiques (Canada) Ltd. (Quebec)
3260 Rue Watt - Local 112
Ste-Foy, PQ G1X 4T5
TEL: (418) 654-1997
FAX: (418) 654-1998

SMC Pneumatics (Canada) Ltd. (Vancouver)
Annacis Business Park
730 Eaton Way - Unit 2
Delta, BC V3M 6J9
TEL: (604) 517-1646
FAX: (604) 517-1647

SMC Pneumatics (Canada) Ltd. (Windsor)
2870 Jefferson Blvd. - Unit 1
Windsor, ON N8T 3L2
TEL: (519) 944-0555
FAX: (519) 944-1870

Europe

ENGLAND
SMC Pneumatics (U.K.) Ltd.
GERMANY
SMC Pneumatik GmbH
ITALY
SMC Italia SpA
FRANCE
SMC Pneumatique SA
HOLLAND
SMC Controls BV
SWEDEN
SMC Pneumatics Sweden AB
SWITZERLAND
SMC Pneumatik AG
AUSTRIA
SMC Pneumatik GmbH
SPAIN
SMC España, S.A.
IRELAND
SMC Pneumatics (Ireland) Ltd.

ROMANIA
SMC Pneumatics (Romania) Ltd.
RUSSIA
SMC Pneumatik LLC
NORWAY
SMC Pneumatics Norway A/S
DENMARK/LATVIA/LITHUANIA
SMC Pneumatik A/S

Asia

JAPAN
SMC Corporation
KOREA
SMC Pneumatics Korea Co., Ltd.
CHINA
SMC (China) Co., Ltd.
HONG KONG
SMC Pneumatics (Hong Kong) Ltd.
SINGAPORE
SMC Pneumatics (S.E.A.) Pte. Ltd.
PHILIPPINES
SMC Pneumatics (Philippines), Inc.
MALAYSIA
SMC Pneumatics (S.E.A.) Sdn. Bhd.
TAIWAN
SMC Pneumatics (Taiwan) Co., Ltd.
THAILAND
SMC Thailand Ltd.
INDIA
SMC Pneumatics (India) Pvt., Ltd.

North America

MEXICO
SMC Pneumatics (Mexico) S.A. de C.V.

South America

ARGENTINA
SMC Argentina S.A.
CHILE
SMC Pneumatics (Chile) Ltda.

Oceania

AUSTRALIA
SMC Pneumatics (Australia) Pty. Ltd.
NEW ZEALAND
SMC Pneumatics (N.Z.) Ltd.

SMC offers the same quality and engineering expertise in many other pneumatic components

Valves

Directional Control Valves
Manual Valves
Mufflers
Exhaust Cleaners
Quick Exhaust Valves

Valves

Proportional Valves
Mechanical Valves
Miniature Valves
Fluid Valves

Cylinders/Actuators

Compact Cylinders
Miniature Cylinders
Rodless Cylinders
Rotary Actuators
Pneumatic Grippers

Vacuum

Vacuum Ejectors
Vacuum Accessories

Instrumentation

Pneumatic Positioners
Pneumatic Transducers

Air Preparation Equipment

Filters-Regulators-Lubricators
Coalescing Filters
Micro Mist Separators

Fittings

Air Fittings

SMC Corporation of America

3011 N. Franklin Rd Indianapolis, IN 46226
Tel: (317) 899-4440 • FAX: (317) 899-3102
<http://www.smcusa.com>

SMC Pneumatics (Canada) Ltd.

6768 Financial Drive, Mississauga, Ontario L5N 7J6
Tel: (905) 812-0400 • FAX: (905) 812-8686
<http://www.smcpcanada.com>

All reasonable efforts to ensure the accuracy of the information detailed in this catalog were made at the time of publishing. However, SMC can in no way warrant the information herein contained as specifications are subject to change without notice.