# 3 Port Air Operated Valve

# Series VGA342



**Specifications** Operating style Air operated style NC/NO (Changeable) Actuation style Return style Air+Spring Fluid Air Operating pressure range 0.2 to 0.9MPa Same as operating pressure Pilot pressure Ambient and fluid temperature Max 50°C Not required (Use turbin oil class 1 ISOVG32 if lubricating) Lubrication Impact/Vibration resistance (1) 150/50 m/s<sup>2</sup>

V□A

S□A

Note 1) Impact resistance: No malfunction occurs on the test using dropping impact tester, to axis and right angle directions of main valve each time when energized and deenergized. (Value in the initial stage.)

S□A V□A

Vibration resistance: No malfunction occurs on the test with from 45 to 1000Hz, one sweep, to axis and right angl directions of main valve each time when energized and

VH

## de-energized. (Value in the initial stage.) VM/VR

N.O.

# **Precautions**


Be sure to read before handling. Refer to p.0-33 to 0-36 for Safety Instructions and common precautions.

## Caution

JIS symbol

N.C.

#### 1)Change of fluid passage

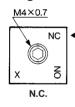



Please note that the pressure in the valve should be exhausted when changing the fluid passage.

Loosen the hexagon socket head cap screw M4X0.7. Rotate the NC/NO switching plate and adjust the desired passage NO/NC to ◀ symbol on the adapter plate. However, X symbol at the corner is not applicable. For the piping, follow to the table below.

#### **Pipina**

<u>ba</u>						
Fluid Port passage	Р	А	R			
N.C.	Supply side	Secondary side	EXH side (2 port: Plug)			
N.O.	EXH side (2 port: Plug)	Secondary side	Supply side			


#### **2**Others

M5 size hole at the left side of the adopter plate is bleed port for spool valve. Do not plug or tighten it.

#### **Effective Area**

Port size		Rc(PT) 1/2	Rc(PT) 3/4	Rc(PT)1
Effective area (mm²)	P→A	140	185	210
	A→R	145	195	235
Cultartar	P→A	7.8	10.3	11.7
Cv factor	A→R	8.1	10.8	13.1

### **How to Order**

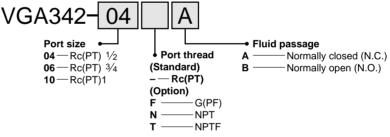

#### **Dimensions**

