



Allowable lateral load increased by 6.6 times * Compared with the CXSM series, 50 mm stroke



Short pitch mounting is possible.


Cylinders can be installed adjacent to each other. Mounting interval: 0 to 15 mm*¹

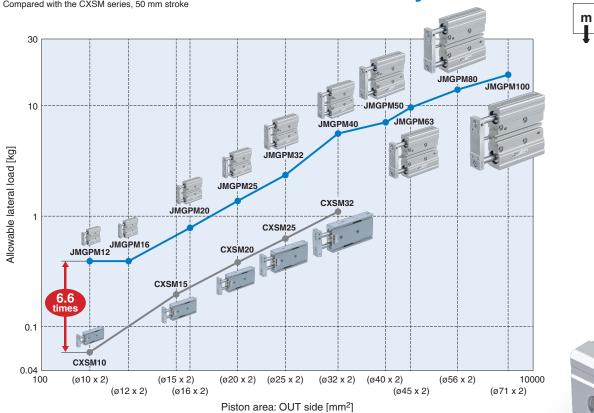

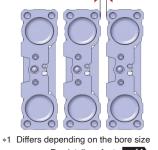

For details, refer to p. 11.


Internal structure

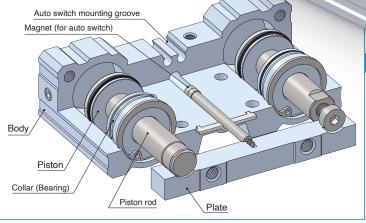

Series Variations

Model	Bearing	Bore size	Stroke [mm]	Cushion	Piston speed	Port size	Mounting direction									
JMGP		ø12 (ø10 x 2)	10, 20, 30, 50, 100			M3 x 0.5										
		ø16 (ø12 x 2)	10, 20, 30, 50, 100			IVI3 X U.5										
	Slide bearing -	Slide bearing	Slide bearing	Slide bearing	ø20 (ø16 x 2)	20 20 50 100 150										
					Slide bearing	Slide bearing	Slide bearing	Slide bearing	Slide bearing	Slide bearing Ø32 ø40	ø25 (ø20 x 2)	20, 30, 50, 100, 150		50 to 300 mm/s	M5 x 0.8	-
10000											ø32 (ø25 x 2)		Rubber bumper	50 10 500 mm/s		Top Bottom
											ø40 (ø32 x 2)		on both ends			Rear
and		ø50 (ø40 x 2)	25 50 100 150 200			1/8 (Rc, NPT, G)	near									
Co and		ø63 (ø45 x 2)	25, 50, 100, 150, 200			(1.0, 1.1.1, 0.)										
		ø80 (ø56 x 2)			50 to 250 mm/o	1/4										
		ø100 (ø71 x 2)			50 to 250 mm/s	(Rc, NPT, G)										




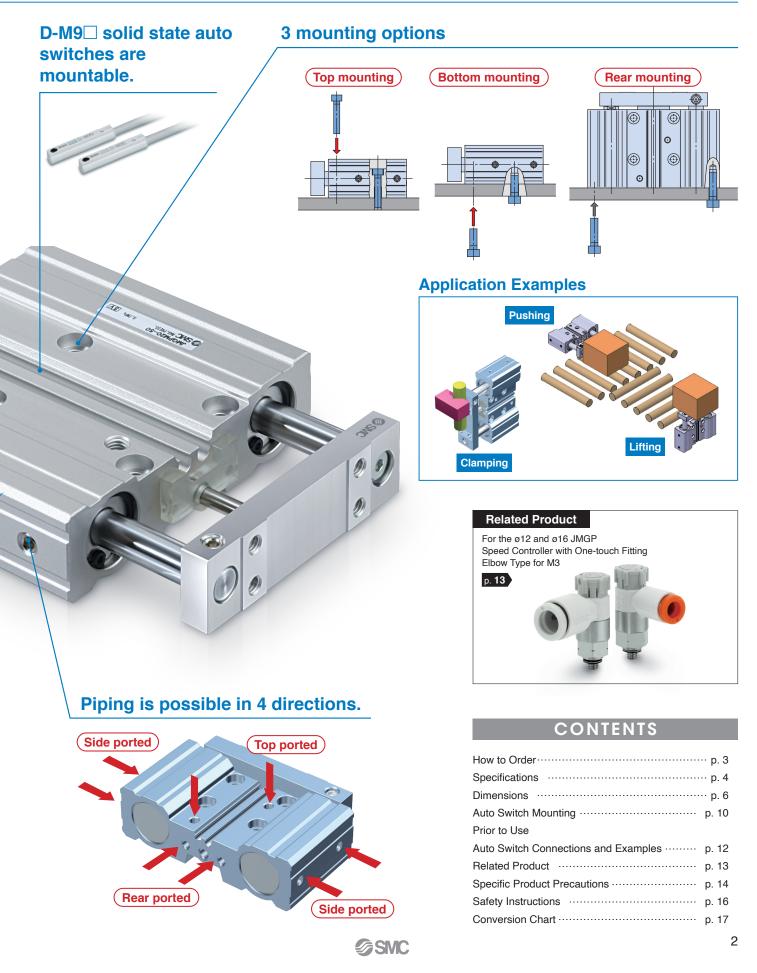

Dual Rod Cylinder

JMGP Series ø12, ø16, ø20, ø25, ø32, ø40, ø50, ø63, ø80, ø100



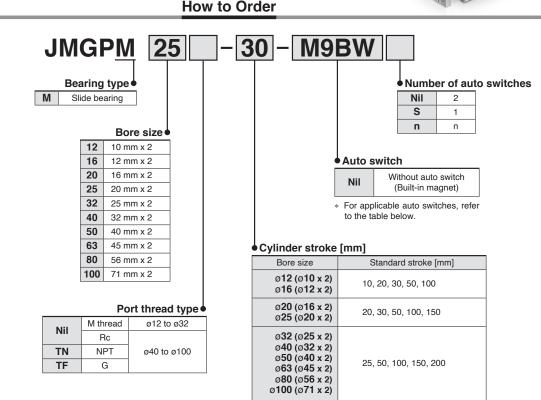

* Refer to page 4 for intermediate strokes.

* Solid state auto switches marked with a "O" are produced upon receipt of order.

Applicable Auto Switches/Refer to the Web Catalog for further information on auto switches.

			ight		l	oad voltag	le	Auto swit	ch model	Lead	wire I	ength	[m]															
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	DC		AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applicat	Applicable load												
				3-wire (NPN)		5 V,		M9NV	M9N				0	0	IC circuit													
÷				3-wire (PNP)		12 V		M9PV	M9P				0	0	IC circuit													
switch																2-wire		12 V	1	M9BV	M9B	•			0	0	_	
auto s		1		3-wire (NPN)		5 V,	1	M9NWV	M9NW	•			0	0	IC circuit	_ .												
	Diagnostic indication (2-color indicator)	Grommet	Yes	3-wire (PNP)	24 V	12 V	-	M9PWV	M9PW				0	0		Relay, PLC												
state				2-wire		12 V	1	M9BWV	M9BW				0	0	_	. 20												
lid		1		3-wire (NPN)		5 V,	1	M9NAV*1	M9NA*1	0	0		0	0	IC circuit													
S	Water resistant (2-color indicator)			3-wire (PNP)	12			M9PAV*1	M9PA*1	0	0		0	0														
	(2-color indicator)			2-wire		12 V		M9BAV*1	M9BA*1	0	0		0	0	_													

*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance.

Please contact SMC regarding water-resistant types with the above model numbers.

* Lead wire length symbols:

- 0.5 m..... Nil (Example) M9NW 1 m..... M (Example) M9NWM
- 3 m..... L (Example) M9NWL (Example) M9NWZ
- 5 m..... Z

* For details on auto switches with pre-wired connectors, refer to the Web Catalog.

* Auto switches are shipped together with the product but do not come assembled.

Dual Rod Cylinder JMGP Series



Specifications

Bore size	Ø 12 (Ø10 x 2)	ø 16 (ø12 x 2)	ø 20 (016 x 2)	Ø 25 (020 x 2)	Ø 32 (025 x 2)	Ø 40 (032 x 2)	ø 50 (040 x 2)	Ø 63 (045 x 2)	Ø 80 (056 x 2)	Ø 100 (071 x 2)		
Action	Double acting											
Fluid	Air											
Proof pressure					1.05	MPa						
Max. operating pressure	0.7 MPa											
Min. operating pressure					0.15	MPa						
Ambient and fluid temperatures					5 to	60°C						
Piston speed*1, *2	50 to 300 mm/s 50 to 250 mm/s											
Cushion				Rubbe	er bumpe	r on bot	n ends					
Lubrication				Not	required	d (Non-lu	ibe)					
Stroke length tolerance +1.5 mm												
1 Max. speed with no load												

*2 Depending on the system configuration selected, the specified speed may not be satisfied.

Manufacturing of Intermediate Strokes

Description	Spacer installation type Spacers are installed in the standard · Stroke can be modified in 5 mm inc				
Part no.	Refer to the standard model numbers	S.			
	ø12 (ø10 x 2)	5 to 05			
	ø16 (ø12 x 2)	5 to 95			
Applicable stroke	ø20 (ø16 x 2)	E 40 1 4 E			
	ø25 (ø20 x 2)	5 to 145			
	ø32 (ø25 x 2)				
[mm]	ø40 (ø32 x 2)	1			
	ø50 (ø40 x 2)	5 to 195			
	ø63 (ø45 x 2)	5 10 195			
	ø80 (ø56 x 2)				
	ø100 (ø71 x 2)				
Example	Part no.: JMGPM20-45 A 5 mm width spacer is ins dimension is 77.5 mm.	stalled in the JMGPM20-50. The C			

Refer to pages 10 and 11 for cylinders with auto switches.

Symbol Rubber bumper

- \cdot Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height
- · Minimum Stroke for Auto Switch Mounting
- · Operating Range
- · Auto Switch Mounting

Theoretical Output

					C	UT		IN	
						} ►	-	<u>}</u>	[N]
Bore	Rod size	Operating	Piston area		Oper	ating pro	essure [MPa]	
size	[mm]	direction	[mm ²]	0.2	0.3	0.4	0.5	0.6	0.7
ø12	6	OUT	157	31	47	63	79	94	110
(ø10 x 2)	0	IN	101	20	30	40	50	60	70
ø 16	6	OUT	226	45	68	90	113	136	158
(Ø 12 x 2)	0	IN	170	34	51	68	85	102	119
ø 20	8	OUT	402	80	121	161	201	241	281
(Ø16 x 2)	°	IN	302	60	90	121	151	181	211
ø 25	10	OUT	628	126	188	251	314	377	440
(Ø 20 x 2)		IN	471	94	141	188	236	283	330
ø 32	12	OUT	982	196	295	393	491	589	687
(Ø 25 x 2)		IN	756	151	227	302	378	453	529
ø 40	16	OUT	1608	322	483	643	804	965	1126
(Ø 32 x 2)		IN	1206	241	362	483	603	724	844
ø 50	18	OUT	2513	503	754	1005	1257	1508	1759
(Ø 40 x 2)		IN	2004	401	601	802	1002	1203	1403
ø 63	20	OUT	3181	636	954	1272	1590	1909	2227
(Ø 45 x 2)	20	IN	2553	511	766	1021	1276	1532	1787
ø 80	25	OUT	4926	985	1478	1970	2463	2956	3448
(Ø 56 x 2)	25	IN	3944	789	1183	1578	1972	2367	2761
ø 100	30	OUT	7918	1584	2376	3167	3959	4751	5543
(Ø 71 x 2)	30	IN	6505	1301	1951	2602	3252	3903	4553

Weight

								[kg]
Bore size				Stroke	e [mm]			
[mm]	10	20	25	30	50	100	150	200
ø12 (ø10 x 2)	0.09	0.12	-	0.14	0.19	0.30	-	-
ø16 (ø12 x 2)	0.10	0.13	-	0.15	0.20	0.32	-	—
Ø20 (Ø16 x 2)	—	0.21	—	0.25	0.33	0.53	0.72	—
ø25 (ø20 x 2)	-	0.28	-	0.33	0.43	0.68	0.92	—
Ø32 (Ø25 x 2)	—	—	0.60	—	0.77	1.11	1.44	1.78
ø40 (ø32 x 2)	-	-	0.80	-	1.07	1.62	2.16	2.70
ø50 (ø40 x 2)	—	—	1.27	—	1.63	2.36	3.09	3.82
ø63 (ø45 x 2)	_	-	1.60	-	2.03	2.89	3.74	4.60
ø80 (ø56 x 2)	—	—	2.81	—	3.47	4.79	6.12	7.44
ø100 (ø71 x 2)	—	-	4.48	-	5.40	7.22	9.05	10.87

* Theoretical output [N] = Pressure [MPa] x Piston area [mm²]



JMGP Series

Allowable Rotational Torque of Plate

		Torque: T [N·m]
(-	\bigcirc	\bigcirc

								[N·m]
Bore size				Stroke	e [mm]			
Dore size	10	20	25	30	50	100	150	200
ø12 (ø10 x 2)	0.13	0.10	_	0.08	0.06	0.04	_	_
ø16 (ø12 x 2)	0.14	0.11	_	0.09	0.07	0.04	_	_
ø 20 (ø16 x 2)	_	0.27	_	0.22	0.16	0.10	0.07	_
ø 25 (ø 20 x 2)	_	0.54	_	0.45	0.34	0.21	0.15	-
ø 32 (ø 25 x 2)	_	_	0.93	_	0.66	0.42	0.31	0.24
ø40 (ø32 x 2)	_	_	2.18	-	1.59	1.03	0.77	0.61
ø50 (ø40 x 2)	_	_	3.41	-	2.56	1.70	1.27	1.02
ø63 (ø45 x 2)	_	_	5.09	_	3.86	2.60	1.96	1.57
ø80 (ø56 x 2)	_		8.48	_	6.56	4.52	3.45	2.79
ø100 (ø71 x 2)	_	_	13.54	-	10.72	7.56	5.84	4.76


Non-rotating Accuracy of Plate




Non-rotating accuracy θ when retracted and when no load is applied should be not more than the values shown in the table.

Bore size	Non-rotating accuracy θ
ø 12 (ø 10 x 2)	
ø16 (ø12 x 2)	±0.07°
ø 20 (ø 16 x 2)	
ø 25 (ø20 x 2)	
ø 32 (ø25 x 2)	±0.06°
ø 40 (ø32 x 2)	
ø 50 (ø 40 x 2)	±0.05°
ø 63 (ø 45 x 2)	±0.05
ø 80 (ø56 x 2)	±0.04°
ø100 (ø71 x 2)	±0.04

Plate End Deflection

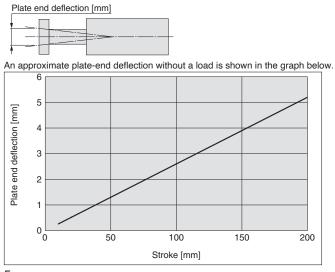


Allowable Lateral Load

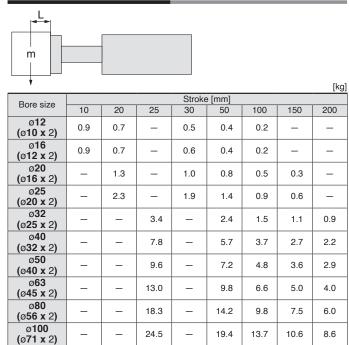


* Lateral load above is the value when eccentric distance L = 0 mm.

Allowable Kinetic Energy

With Rubber Bumper

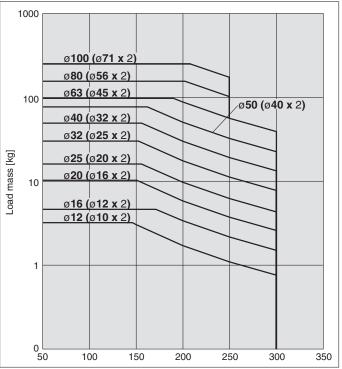



Dual Rod Cylinder JMGP Series Bore Size Ø12 (Ø10 x 2), Ø16 (Ø12 x 2) Standard: JMGPM 0) Ζ WA + Stroke/2 \odot \odot × \odot A 4 x YY depth YL Bottom view 7 WA + Stroke/2 $4 \times \emptyset OA$ through 4 x ØOB counterbore depth OL 4 x MM depth ML L 2 x P (Plug) $(\overline{\mathbf{O}})$ Ó ⊕ ٢ (**OL**) -0 ò \odot €7 4 x NN through \odot Ъ PΕ A œ т 0 $\times \supset$ \vdash 2 x **P** (Plug) (\bigcirc) \bigcirc Q Q 2 x **P** Θ Ο 2 x P (Plug) GA GB Q JC PD FA FB S Κ J C + Stroke G A + Stroke [mm] С D FA FB G GA GB н JC κ L MM ML NN Bore size Standard stroke Α J ø**12** 33 24.5 6 6.5 2 17 8.5 8.5 M3 x 0.5 7.5 M2.5 x 0.45 11 5.5 58 1.5 11 (ø10 x 2) 10, 20, 30, 50, 100 ø**16** 33 24.5 6 6.5 2 18 11 5.5 64 9 3 9 11 M4 x 0.7 10 M3 x 0.5 (ø12 x 2) OL Ρ PD PE PW Q R s т U Х YΥ YL z OA OB VA WA Bore size ø**12** M3 x 0.5 3.4 6.5 2.5 6 16 18.5 8 26 14 49.5 39 52 10.2 23 M4 x 0.7 6 4.2 (ø10 x 2) ø**16** M3 x 0.5 M4 x 0.7 3.4 6.5 2 6.5 16 18.5 8 28 14 53 42 57 10.2 24 6 4.3 (ø12 x 2)

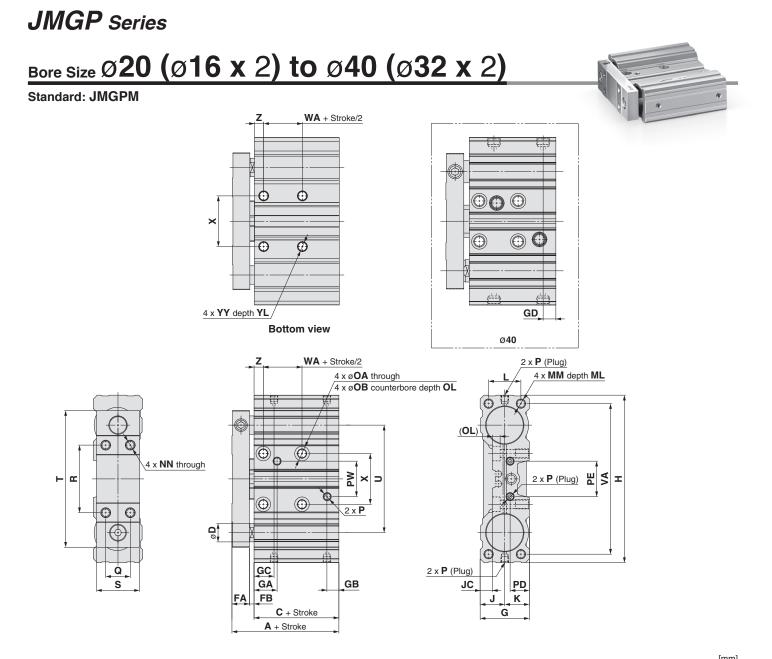

			_		· · · ·																			-
Bore size		andard	A	с	D	FA	FB	G		GA		GB	GC	GD	н	J	JC	к	L	N	лм	ML	N	IN
	SI	troke	_						Nil	TN	TF													
ø 20 (ø16 x 2)	20,	30, 50	38	27.5	8	7.5	3	22	12.5	-	-	7.5	11	-	83	11	3	11	14	M4	x 0.7	10	M4 :	x 0.7
ø 25 (ø 20 x 2)	100	0, 150	39.	5 28	10	8.5	3	26	12	-	-	7.5	11	_	93	13	4.5	13	17	M5	x 0.8	12.5	M5 :	x 0.8
ø 32 (ø 25 x 2)	25, 5	50, 100	44.	5 30	12	11.5	3	32	15	-	-	7.5	13	_	109	16	8	16	21	M	6 x 1	15	M6	5 x 1
ø 40 (ø 32 x 2)	150	0, 200	54	37	16	13	4	41	19	.5	21	12	17.5	9	120	20.5	4	20.5	27	M8 :	x 1.25	20	M6	6 x 1
					Р						PW	1			1		Ĩ							
Bore size	OA	OB	OL		F																			
			UL	NII	Т	J	TE	PD	PE	NII			Q	R	S	T	U	VA	WA	Х	YY	·	YL	Z
	•	05	UL	Nil	TI	N 1	ΓF	PD	PE	Nil	TN	-	Q	R	S	Т	U	VA	WA	X	YY	'	YL	Z
ø 20 (ø16 x 2)	4.3	8	3.5	Nil M5 x 0.8			TF -	PD 7.5	PE 19	Nil 21			- Q 10	R 36	S 18	т 66	U 54	VA 75	WA 15.9	X 29	ҮҮ М5 х		YL 7.5	Z 4.5
					3 –						TN	TF					_					0.8		
(ø16 x 2) ø 25	4.3	8	3.5	M5 x 0.	3 -		-	7.5	19	21		TF -	10	36	18	66	54	75	15.9	29	M5 x	0.8	7.5	4.5
(ø16 x 2) ø25 (ø20 x 2) ø32	4.3 4.3	8	3.5	M5 x 0.4 M5 x 0.4	3 -	· · ·	-	7.5 9.5	19 22	21 22 23		- TF	10 12 16	36	18 22	66 75	54 60	75 84	15.9 12.7	29 31	M5 x M5 x	0.8	7.5	4.5 4.5

SMC

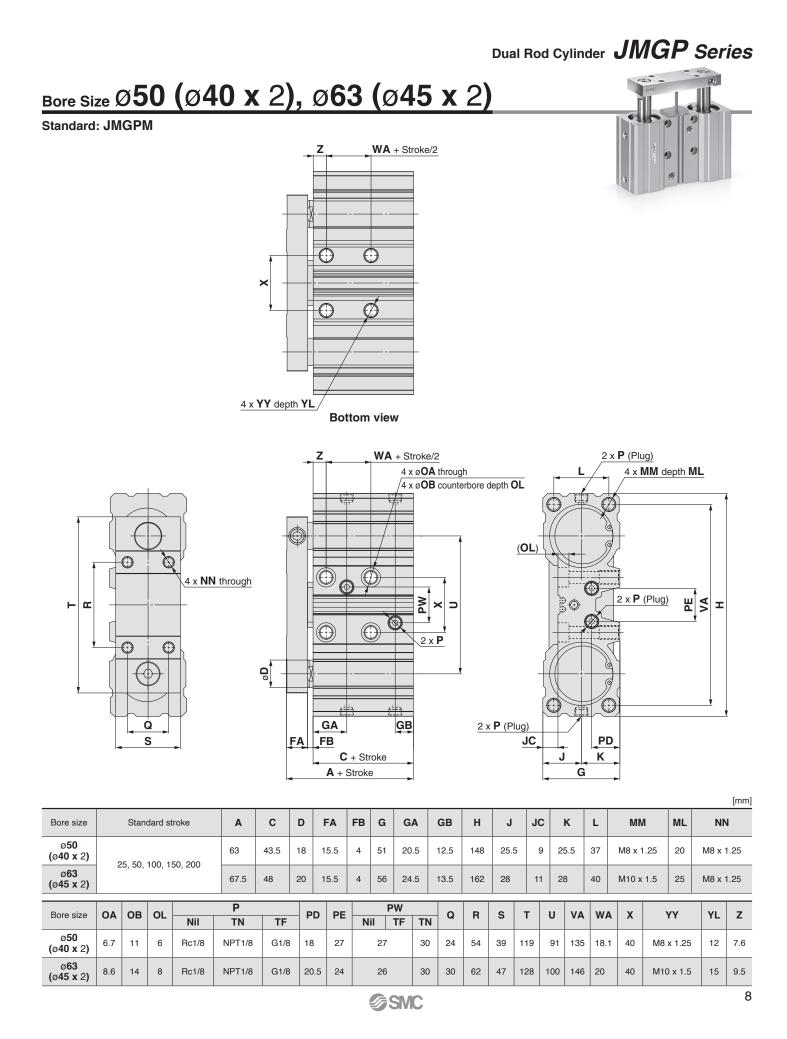

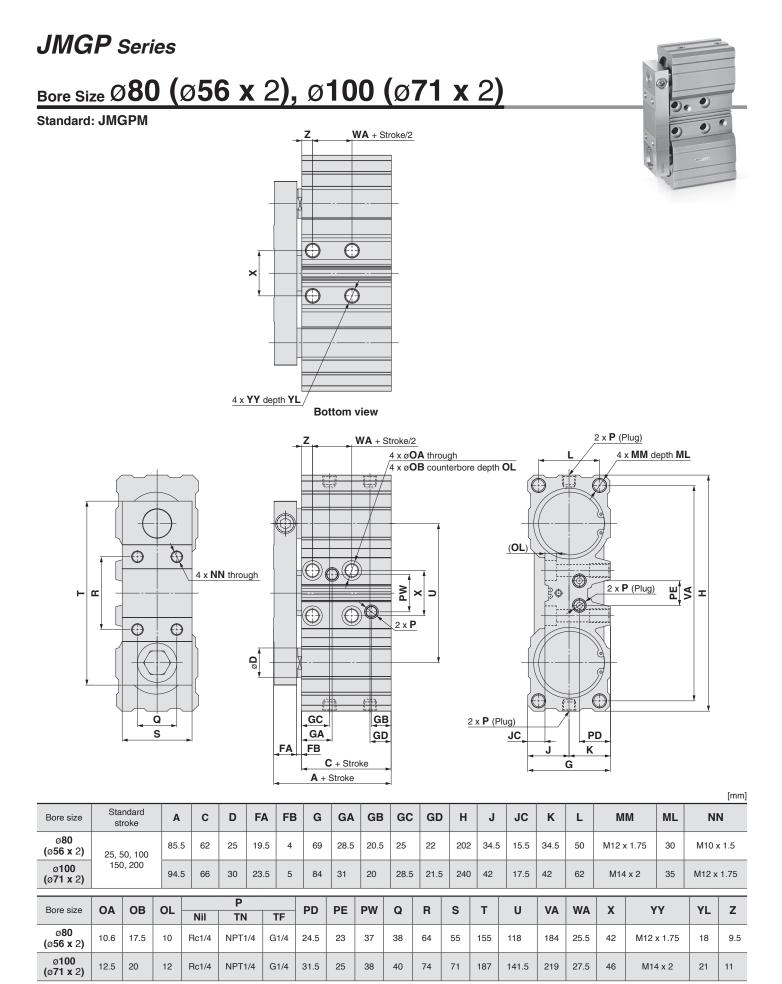



SMC

JMGP Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height

D-M9^{//}M9[/]V D-M9[/]W/M9[/]WV D-M9[/]A/M9[/]AV

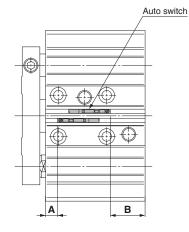

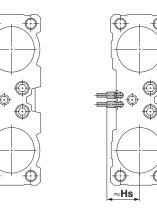

Auto Switch Proper Mounting Position [mm] D-M9□ D-M9□V Auto switch model D-M9⊟W D-M9⊟WV D-M9 D-M9 AV Bore size Α В ø12 (ø10 x 2) 10.0 25 ø16 (ø12 x 2) 2.5 10.0 ø20 (ø16 x 2) 9.5 6.0 ø25 (ø20 x 2) 9.5 6.5 ø32 (ø25 x 2) 9.5 8.5 ø40 (ø32 x 2) 16.5 8.5 ø50 (ø40 x 2) 8.5 23.0 ø63 (ø45 x 2) 8.5 27.5 ø80 (ø56 x 2) 85 41.5 ø100 (ø71 x 2) 7.5 46.5

Auto switch model	D-M9⊡V D-M9⊡WV D-M9⊡AV
Bore size	Hs
ø12 (ø10 x 2)	14.0
ø 16 (ø 12 x 2)	14.0
ø 20 (ø 16 x 2)	14.0
ø 25 (ø 20 x 2)	14.0
ø 32 (ø 25 x 2)	_
ø 40 (ø 32 x 2)	23.5
ø 50 (ø 40 x 2)	-
ø 63 (ø 45 x 2)	-
ø 80 (ø 56 x 2)	_
ø100 (ø71 x 2)	-

* Adjust the auto switch after confirming the operating conditions in the actual setting.

Minimum Stroke for Auto Switch Mounting

										[mm]
Auto switch model	Number of				Bore	size				
Auto switch model	auto switches	ø12 (ø10 x 2)	Ø16 (Ø12 x 2) Ø20 (Ø16 x 2)	ø 25 (ø20 x 2)	ø 32 (ø25 x 2)	ø40 (ø32 x 2)	ø50 (ø40 x 2)	ø63 (ø45 x 2)	ø80 (ø56 x 2)	ø100 (ø71 x 2)
D-M9⊡V	1				!	5			*	
	2				:	5				
D-M9	1		5* ¹					5		
	2	10* ¹				10				
D-M9⊡W	1				5	*2				
	2	10* ²				10				
D-M9□WV	1				5	*2				
D-M9□AV	2				1	0				
D-M9⊡A	1				5	*2				
	2				10)* ²				

*1 Confirm that it is possible to secure the min. bending radius of 10 mm of the auto switch lead wire before use.

*2 Confirm that it is possible to securely set the auto switch(es) within the range of indicator green light ON range before use.

For the in-line entry type, also consider *1 shown above.

Operating Range

										[mm]	
Auto switch model	Bore size										
	ø12 (ø10 x 2)	ø16 (ø12 x 2)	ø20 (ø16 x 2)	ø25 (ø20 x 2)	ø32 (ø25 x 2)	ø40 (ø32 x 2)	ø50 (ø40 x 2)	ø63 (ø45 x 2)	ø80 (ø56 x 2)	ø100 (ø71 x 2)	
D-M9=/M9=V D-M9=W/M9=WV D-M9=A/M9=AV	3.5	3	4	4	4	4	4	4	4	4	

* Values which include hysteresis are for reference purposes only. They are not a guarantee (assuming approximately ±30% dispersion) and may change substantially depending on the ambient environment.




JMGP Series


Auto Switch Mounting

Caution on Proximity Installation

When cylinders are adjacent to one another as shown in the figure below, provide a space between them of at least, the amount shown in the table below.

If the space is not sufficient, the magnets in adjacent cylinders may cause the auto switches to malfunction.

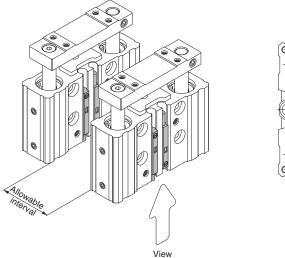

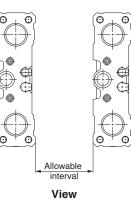


	[mm]
Bore size	Allowable interval
ø12 (ø10 x 2)	15
ø16 (ø12 x 2)	15
ø 20 (ø 16 x 2)	15
ø 25 (ø20 x 2)	10
ø 32 (ø25 x 2)	5
ø 40 (ø32 x 2)	0
ø 50 (ø 40 x 2)	0
ø 63 (ø 45 x 2)	0
ø 80 (ø 56 x 2)	0
ø 100 (ø 71 x 2)	0



Prior to Use Auto Switch Connections and Examples

Sink Input Specifications

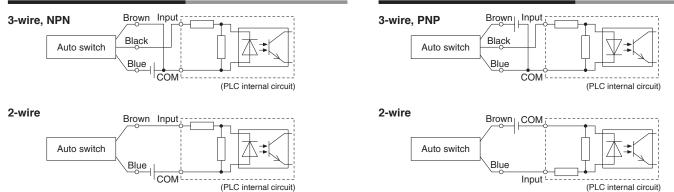

Source Input Specifications


Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.

Examples of AND (Series) and OR (Parallel) Connections


When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid. Depending on the operating environment, the product may not operate properly.

3-wire AND connection for NPN output


(Using relays)

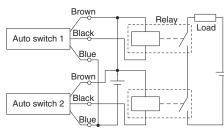


3-wire AND connection for PNP output (Using relays)

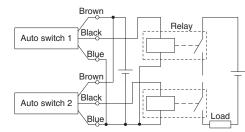


2-wire AND connection

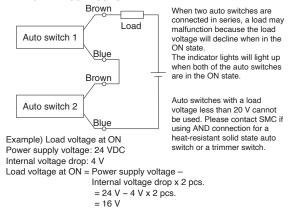


(Performed with auto switches only)

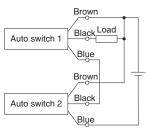


(Performed with auto switches only) Brown

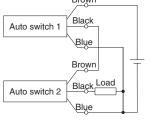


2-wire OR connection

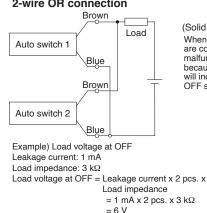

3-wire OR connection for NPN output

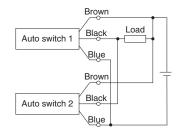

3-wire OR connection for PNP output

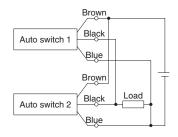

(Solid state)

OFF state.

When two auto switches

are connected in parallel. malfunction may occur

because the load voltage

will increase when in the

(Reed)

Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.

Related Product

For the Ø12 and Ø16 JMGP

Speed Controller with One-touch Fitting

Elbow Type for M3 AS12 1F-M3-A-X790

Metric size (Color: Light gray)

Metric size

Free flow

Controlled flow

Free flow

Controlled flow

* C and b values are for controlled flow with the needle fully open and

Flow Rate and Sonic Conductance

Model

Tubing O.D.

C values: Sonic conductance dm³/(s·bar)

b values: Critical pressure ratio

free flow with the needle fully closed.


Specifications

Fluid	Air				
Proof pressure	1.5 MPa				
Max. operating pressure	1 MPa				
Min. operating pressure	0.1 MPa				
Ambient and fluid temperatures	-5 to 60°C (No freezing)				
Applicable tubing material	Nylon, Soft nylon, Polyurethane FEP, PFA				

*1 Use caution at the max. operating pressure when using soft nylon or polyurethane tubing. (Refer to the Web Catalog for details.)

How to Order F - M3 - 06 A - X790 AS 1 2 0 1 Body size Push-lock type Port size 1 M3 x 0.5 M3 M3 x 0.5

Type 🜢 Control type*1 Meter-out



Applicable tubing O.D.

- *1 Metric size: Light gray Inch size: Orange Use ø1/8" tubing. *2
- Only polyurethane tubing is *3 applicable for ø2.


Needle Valve/Flow Rate Characteristics

AS1201F-M3-0

ø2, ø3.2, ø4, ø6 0.07

> 0.07 0.3

> > 0.2

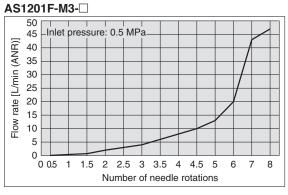

Dimensions

2

0

1

Elbow


Meter-in


Meter-out: Gray

Meter-in: Light blue

*1 Meter-out and meter-in types can be visually

identified by the color of the knob.

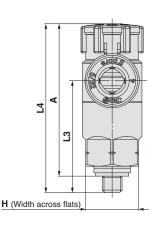

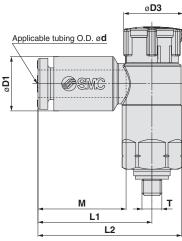

Metric Size/Inch Size														[mm]	
Model	d	т	н	D1	D3	L1	L2	L3	L4*1		A*2		м	Weight	
Woder	u	•			03	L .		LJ	Unlocked	Locked	Unlocked	Locked	IVI	[g]	
AS12□1F-M3-02A-X790	2	M3 x 0.5		5.8		15.8	20.3						11.9		
AS12D1F-M3-23A-X790	3.2]		7.2		17.2	21.7	16.9						5
AS12□1F-M3-04A-X790	4		8	8.2	8.2 10.4 9.4	17.2	21.7		- 26.5 25	05.4	23.5	22.4	13.3		
AS12D1F-M3-06A-X790	6		°	10.4		18.6	23.1	16.5		23.4	23.5			6	
AS12□1F-M3-01A-X790	1/8"		7.2 8.2		17.2	17.2 21.7 1	16.9						5		
AS1201F-M3-03A-X790	5/32"			8.2		17.2	21.7	10.9						5	

Reference dimensions *1

*2 Reference dimensions of threads after installation



Orange)







JMGP Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.


Mounting

A Warning

1. Never place your hands or fingers between the plate and the body.

Be very careful to prevent your hands or fingers from getting

caught in the gap between the cylinder body and the plate when air is applied.

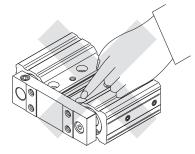

▲ Caution

1. Use cylinders within the piston speed range.

An orifice is set for this cylinder, but the piston speed may exceed the operating range if the speed controller is not used. If the cylinder is used outside the operating speed range, it may cause damage to the cylinder and shorten the service life. Adjust the speed by installing the speed controller and use the cylinder within the limited range.

2. Pay attention to the operating speed when the product is mounted vertically.

When using the product in the vertical direction, if the load factor is large, the operating speed can be faster than the control speed of the speed controller (i.e. quick extension).

In such cases, it is recommended to use a dual speed controller.

3. Do not scratch or gouge the sliding portion of the piston rod.


Damaged seals, etc., will result in leakage or malfunction.

4. Do not dent or scratch the mounting surface of the body and the plate.

The flatness of the mounting surface may not be maintained, which would cause an increase in sliding resistance.

5. Make sure that the cylinder mounting surface has a flatness of 0.05 mm or less.

If the flatness of the workpieces and brackets mounted on the plate is not appropriate, sliding resistance may increase. If it is difficult to maintain a flatness of 0.05 mm or less, put a thin shim ring (provided by the customer) between the plate and the workpiece mounting surface to prevent the sliding resistance from increasing.

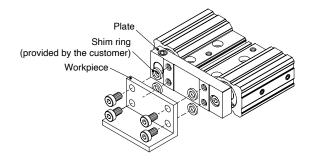

Mounting


6. Be sure that the piston rods are retracted when

mounting workpieces on the plate.

If workpieces are mounted on the plate when the piston rods are extended, it can lead to distortion of the piston rods, resulting in a malfunction.

7. Rear of cylinder

For rear mounting, make a hole to the mounting base of the customer for hexagon socket head cap screws.

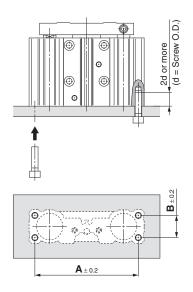

Bore size	A [mm]	B [mm]	Hexagon socket head cap screw
ø 12 (ø 10 x 2)	52	11	M3 x 0.5
ø 16 (ø 12 x 2)	57	11	M4 x 0.7
ø 20 (ø 16 x 2)	75	14	M4 x 0.7
ø 25 (ø20 x 2)	84	17	M5 x 0.8
ø 32 (ø 25 x 2)	98	21	M6 x 1.0
ø 40 (ø32 x 2)	107	27	M8 x 1.25
ø 50 (ø 40 x 2)	135	37	M8 x 1.25
ø 63 (ø 45 x 2)	146	40	M10 x 1.5
ø 80 (ø 56 x 2)	184	50	M12 x 1.75
ø 100 (ø 71 x 2)	219	62	M14 x 2

8. Depending on the system configuration selected, the specified speed may not be satisfied.

Other

This product should not be used as a stopper.



JMGP Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

Piping

ACaution

Depending on the operating conditions, piping port positions can be changed by using a plug. When switching the plugged port, check for the air leakage. If small air leakage is detected, order the plugs below, and reassemble it.

Plug Part Number

Bore size	Part number	Port thread type	Quantity*1	
ø12 (ø10 x 2) ø16 (ø12 x 2)	P-M3	МЗ	8	
ø20 (ø16 x 2) ø25 (ø20 x 2) ø32 (ø25 x 2)	P-M5	M5	8	
ø 40 (ø32 x 2)	P-R1	Rc1/8	8	
ø 50 (ø 40 x 2)	P-N1	NPT1/8	8	
ø 63 (ø 45 x 2)	P-G1	G1/8	8	
-00 (-50 - 0)	P-R2	Rc1/4	8	
ø80 (ø56 x 2) ø100 (ø71 x 2)	P-N2	NPT1/4	8	
5100 (511 X L)	P-G2	G1/4	8	

*1 1 set includes 8 pieces.

In addition, when reassembling the replacement plug, apply grease slightly to the whole circumference of the female thread of the port.(M3, M5, and G threads)

Use SMC's recommended grease. Grease pack part number: GR-S-010 (10 g)


M3, M5, Rc port, NPT port

Use the correct tightening torques listed below.

Connection thread (plug) size	Proper tightening torque [N·m]	Dimension "a"
M3	0.65 to 0.75	-
M5	3.2 to 3.8	-
1/8	3.5 to 5.5	1 mm or less
1/4	6.5 to 12	1 mm or less

G port

Screw in the plug to the surface of the body (dimension "a" in the drawing) by checking visually instead of using the tightening torque shown above.



▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- -*1) ISO 4414: Pneumatic fluid power - General rules relating to systems. Caution: Caution indicates a hazard with a low level of risk which, I if not avoided, could result in minor or moderate injury. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements) Marning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury. ISO 10218-1: Manipulating industrial robots - Safety. etc. **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury. ____ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ **A** Warning Caution 1. The compatibility of the product is the responsibility of the 1. The product is provided for use in manufacturing industries. person who designs the equipment or decides its The product herein described is basically provided for peaceful use in manufacturing industries. specifications. If considering using the product in other industries, consult SMC beforehand Since the product specified here is used under various operating conditions, and exchange specifications or a contract if necessary. its compatibility with specific equipment must be decided by the person who If anything is unclear, contact your nearest sales branch. designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance Limited warranty and Disclaimer/ of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously **Compliance Requirements** review all specifications of the product referring to its latest catalog The product used is subject to the following "Limited warranty and Disclaimer" and information, with a view to giving due consideration to any possibility of "Compliance Requirements". equipment failure when configuring the equipment. Read and accept them before using the product. 2. Only personnel with appropriate training should operate machinery and equipment. Limited warranty and Disclaimer The product specified here may become unsafe if handled incorrectly. The 1. The warranty period of the product is 1 year in service or 1.5 years after assembly, operation and maintenance of machines or equipment including the product is delivered, whichever is first.*2) our products must be performed by an operator who is appropriately trained Also, the product may have specified durability, running distance or and experienced. replacement parts. Please consult your nearest sales branch. 3. Do not service or attempt to remove product and machinery/ 2. For any failure or damage reported within the warranty period which is clearly our equipment until safety is confirmed. responsibility, a replacement product or necessary parts will be provided. 1. The inspection and maintenance of machinery/equipment should only be This limited warranty applies only to our product independently, and not to any performed after measures to prevent falling or runaway of the driven other damage incurred due to the failure of the product. objects have been confirmed. 3. Prior to using SMC products, please read and understand the warranty terms 2. When the product is to be removed, confirm that the safety measures as and disclaimers noted in the specified catalog for the particular products. mentioned above are implemented and the power from any appropriate *2) Vacuum pads are excluded from this 1 year warranty. source is cut, and read and understand the specific product precautions A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. of all relevant products carefully. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad 3. Before machinery/equipment is restarted, take measures to prevent or failure due to the deterioration of rubber material are not covered by the limited warranty. unexpected operation and malfunction. Compliance Requirements 4. Contact SMC beforehand and take special consideration of 1. The use of SMC products with production equipment for the manufacture of safety measures if the product is to be used in any of the weapons of mass destruction (WMD) or any other weapon is strictly prohibited. following conditions. 2. The exports of SMC products or technology from one country to another are 1. Conditions and environments outside of the given specifications, or use governed by the relevant security laws and regulations of the countries involved outdoors or in a place exposed to direct sunlight. in the transaction. Prior to the shipment of a SMC product to another country, 2. Installation on equipment in conjunction with atomic energy, railways, air assure that all local rules governing that export are known and followed. navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press /▲ Caution applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog. SMC products are not intended for use as instruments for legal 3. An application which could have negative effects on people, property, or metrology. animals requiring special safety analysis. Measurement instruments that SMC manufactures or sells have not been 4. Use in an interlock circuit, which requires the provision of double interlock qualified by type approval tests relevant to the metrology (measurement) laws for possible failure by using a mechanical protective function, and of each country. Therefore, SMC products cannot be used for business or periodical checks to confirm proper operation. certification ordained by the metrology (measurement) laws of each country.

UNIT CONVERSIONS

	unit	conversion	result		unit	conversion	result
length	m	x 3.28	ft	pressure	MPa	x 145	psi
	mm	x 0.04	in		kPa	÷ 6.895	psi
mass	g	x 0.04	oz	temperature	°C	x1.8 then add 32	°F
volume	cm ³	÷ 16.387	in ³	torque	N∙m	x 0.738	ft-lb
	L	x 61.024	in ³	force	Ν	÷ 4.448	lbf
speed	mm/s	÷ 25.4	in/s	flow	L/min	÷ 28.317	cfm

SMC

SNC Automation • Controls • Process

Leading global pneumatics and industrial automation components manufacturer dedicated to sustainable factory automation.

Serving industries semiconductor, food & packaging, life science, automotive, machine tool, process, natural resource, and general needs for automation, controls, and process.

Global Presence


- 532 Sales Offices in 83 Countries
- Production Facilities in 29 Countries and Regions
- Technical Centers in Japan, the U.S., Europe, and China

Extensive Product Line

- 12,000 Basic Models with over 700,000 variations
 - Actuators
 - Sensors & Switches
 - Connectors
 - Process Gas
 - Electrical Products
 - Vacuum

- Temperature Control
- Valves
- Air Preparation
- Static Control
- Chemical Handling
- Specialty Products

U.S. & Canadian Sales Offices

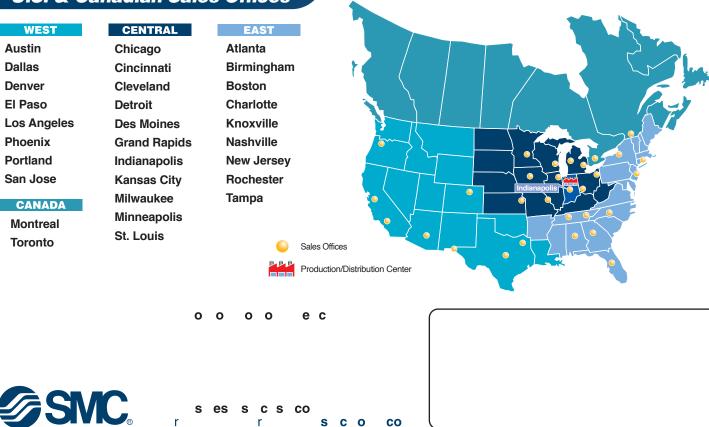



North American Support

- 30 North American Locations
- Configure, Validate, and Download 3D & 2D CAD Models from www.smcusa.com/products/
- 2.6m sqft US headquarters of Engineering, Production, Central Distribution and Administrative Space

© 2022 SMC Corporation of America, All Rights Reserved.

All reasonable efforts to ensure the accuracy of the information detailed in this catalog were made at the time of publishing. However, SMC can in no way warrant the information herein contained as specifications are subject to change without notice