5 Port Solenoid Valve

Series VFR2000/3000/4000/5000/6000

Rubber Seal

Seri	es Variation	ıs		\(\rightarrow\)	* 2 position single type Passage: $4/2 \rightarrow 5/3$ (A/B \rightarrow EA/EB)			[Option]										
	Series	Sonic conductance* C [dm3/(s.bar)]	Type of actuation	Voltage	Electr	ical entry	With light/surge voltage suppressor (Option)	Manual override										
	VFR2000 Plug-in type Non plug-in type	1/8, 1/4: 3.0	2 position single		Plug-in Conduit terminal (F) Non plug-in Grommet (G) Conduit terminal (T) L plug connector (L)	Grommet terminal (E) DIN terminal (D, Y) M plug connector (M)	□ With light/surge voltage suppressor • Plug-in type Conduit terminal (FZ) • Non plug-in type Grommet terminal (TZ) DIN terminal (DZ, YZ) L plug connector (LZ) M plug connector (MZ) □ With surge voltage suppressor • Non plug-in type Grommet (GS) Note) Surge voltage suppressor is equipped midway on the lead wire for grommet type.		SJ SY SV SYJ SZ VP4 S0700 VQ									
Base Mounted	VFR3000 Plug-in type Non plug-in type P.1251 VFR4000 Plug-in type Non plug-in type P.1274 VFR5000 Plug-in type Non plug-in type Non plug-in type P.1297	1/4: 7.5 3/8: 8.7 3/8,1/2: 14 3/8: 18 1/2: 23 3/4: 25	(A)(B) 4 2 5 1 3 (B)(P)(B) 2 position double (A)(B) 4 2 (A)(B) 4 2 (A)(B) 3 position closed center (A)(B) 4 2 (A)(B) 4 2 (A)(B) 5 1 3 (A)(B) 3 position exhaust center (A)(B) 4 2 (A)(B) 4 2 (A)(B) 5 1 3 (A)(B) 3 position pressure center (A)(B) 4 2 (A)(B) 4 3 (A)(B) 4 3 (A)(B) 4 4 2 (A)(B)(B) 4 4 2 (A)	(Standard) 100 VAC ⁵⁰ /60 Hz 200 VAC ⁵⁰ /60 Hz 24 VDC (Option) 110 to 120 V ⁵⁰ /60 Hz 220 VAC ⁵⁰ /60 Hz 240 VAC ⁵⁰ /60 Hz 12 VDC	Non plug-in Grommet (G) Conduit terminal (T) Plug-in Conduit terminal (E) Plug-in Grommet terminal (E) Plug-in Conduit terminal (F)	(VFR3□10/4□10) DIN terminal (D) (VFR3□40/4□40) Grommet terminal (E) DIN terminal (D, Y)	□ With light/surge voltage suppressor • Plug-in type Conduit terminal (FZ) • Non plug-in type (VFR3□10/4□10) DIN terminal (DZ) Grommet terminal (EZ) Conduit terminal (TZ) □ With surge voltage suppressor • Non plug-in type (VFR3□40/4□40) Grommet (GS)	Non-locking push type Non-locking push type A (Extended) Locking type B (Tool required) Locking type C (Lever)	VQ4 VQ5 VQC VQZ SQ VFS VFR VQ7									
	VFR6000 Plug-in type Non plug-in type P.1312	3/4: 41 1: (Effective area 191 mm²)												Non plug-in Grommet terminal (E)	DIN terminal (D)		Non-locking push type	

Series VFR2000/3000/4000/5000/6000

Manifold Variations

			Base Mounte	d Plug-in Type	
		VFR2000 P.1240	VFR3000 P.1259	VFR4000 P.1282	VFR5000 P.1303
	With multi-connector				
Manifold	With terminal block	0 30		2,00	O. S. C.
	With D-sub connector				
	In dividual OUD access				
ţs.	Individual SUP spacer Individual EXH spacer				
Par	SUP block disk		•		
on	EXH block disk		•		
pti	Throttle valve spacer	•	•	•	•
O P	Interface regulator	•	•	•	•
ifol	Blanking plate	•	•	•	•
Manifold Option Parts	Air release valve spacer	•	•	•	-
	SUP stop valve spacer	• (1)	•		

Note 1) Used with the manifold base. Please contact SMC for details. Note 2) There is no manifold base in Series VFR6000.

With exhaust cleaner

- Plug-in type, Non plug-in type
 High noise reduction effect: 35 dB or more
- Collects oil mist: collecting rate 99.9% or more
- Piping work is reduced.

With control unit Note)

Plug-in type, Non plug-in type

- Filter, regulator, pressure switch and air release valve in one unit
- Piping work eliminated

Note) There is no option with control unit in Series VFR5000.



			Base Mounted N	lon Plug-in Type	
		VFR2000 P.1241	VFR3000 P.1260	VFR4000 P.1283	VFR5000 P.1304
	Common electrical entry • Grommet terminal				
Manifold	DIN terminal				
4	Individual electrical entry • Grommet • Grommet terminal • Conduit terminal • DIN terminal • L plug connector Note) • M plug connector Note)		000	200	
ote) Se	eries VFR2000 only				
10	Individual SUP spacer	•	•	•	•
arts	Individual EXH spacer	•	•	•	•
Manifold Option Parts	SUP block disk	•	•	•	•
	EXH block disk	•	•	•	•
	Throttle valve spacer	•	•	•	•
	Interface regulator	•	•	•	•
nif	Blanking plate	•	•	•	•
Иa	Air release valve spacer	•	•	•	

Note 1) Used with the manifold base. Please contact SMC for details. Note 2) There is no manifold base in Series VFR6000.

SUP stop valve spacer

With exhaust cleaner

- Plug-in type, Non plug-in type
 High noise reduction effect: 35 dB or more
- Collects oil mist: collecting rate 99.9% or more

(1)

• Piping work is reduced.

With control unit Note)

Plug-in type, Non plug-in type

- Filter, regulator, pressure switch and air release valve in one unit
- Piping work eliminated

Note) There is no option with control unit in Series VFR5000.



SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Series VFR2000





Note) Applicable only for DIN terminal and plug-in types. For details, refer to "How to Order".





Non plug-in type

JIS Symbol

2 position	3 position
Single	Closed center
(A)(B) 4 2 5 1 3 (EA)(P)(EB)	(A)(B) 4 2 1 1 5 1 3 (EA/(P)(EB)
Double	Exhaust center
(A)(B) 4 2 5 1 3 (EA)(P)(EB)	(A)(B) 4 2 5 1 3 (EA)(P)(EB)
	Pressure center
	(A)(B) 4 2 2 5 1 3 (EA)(P)(EB)

Standard Specifications

	Fluid				Air	
Suc	Operating	2 position singl	le/3 position	0.2 to 0.9 MPa		
∃i	pressure range	2 position of	louble		0.1 to 0.9 MPa	
iji iji	Ambient and flui	id temperatui	re	-10 to 50	°C (No freezing. Refer to page 5.)	
specifications	Lubrication				Not required (1)	
g	Manual override				Non-locking push type	
Valve	Mounting orienta	ation			Unrestricted	
al	Shock/Vibration	resistance			300/50 m/s ^{2 (2)}	
	Enclosure			Dustproof		
દ	Coil rated voltag	е		100, 200 VAC (50/60 Hz), 24 VDC		
真	Allowable voltag	e fluctuation	1	-15 to -10% of rated voltage		
<u>is</u>	Apparent power	(AC) (3)	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz		
룺	Apparent power	(AO)	Holding	3.4 VA (2.	1 W)/50 Hz, 2.3 VA (1.5 W)/60 Hz	
spe	Power consump	tion (DC) ⁽³⁾			1.8 W	
≟				Plug-in type	Conduit terminal	
Electricity specifications	Electrical entry			Non plug-in type	Grommet, Grommet terminal Conduit terminal, DIN terminal L plug connector, M plug connector	

Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz.

Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type	External pilot Note)				
Manual override	Non-locking push type A (Extended), Locking type B (Tool required), Looking type C (Lever)				
Cail rated valtage	110 to 120, 220, 240 VAC 50/60 Hz				
Coil rated voltage	12 VDC				
Porting specifications	Bottom ported				
Option	With light/surge voltage suppressor				



Note) Operating pressure: 0 to 0.9 MPa

Pilot pressure: 2 position single/3 position 0.2 to 0.9 MPa

2 position double 0.1 to 0.9 MPa

Model

Type of actuation		Model			Flow characteristics (1)						(2)		(0)		
				Port size	1 -	→ 4/2 (P → A/	(B)	4/2 → 5/3 (A/B → EA/EB)			Max. operating	Response	Mass		
		Plug-in Non plug-		Rc	C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	cycle (Hz)	time (kg)			
E	Single	VFR2100	VFR2110	1/8	2.5	0.18	0.58	3.0	0.27	0.70	10	20 or less	0.34		
2 position	Single VFR2100 VFH	VFR2100	VFH2100	VFH2100	VFKZIIU	1/4	2.8	0.24	0.62	3.0	0.27	0.70	10 200	20 01 1688	(0.32)
ĕ	Double VFR2200	VFR2200 VFR2210	1/8	2.4	0.21	0.56	3.1	0.28	0.74	10	20 or less	0.42			
N	Double	VFR2200	VFR2210	1/4	2.6	0.27	0.62	3.1	0.28	0.74	10	20 01 1688	(0.44)		
	Closed	VEDOSOO	VFR2310	1/8	1.3	0.45	0.36	1.4	0.46	0.41	5	30 or less	0.43		
<u> </u>	center	VFR2300	VFH2310	1/4	1.3	0.45	0.36	1.4	0.46	0.41	3	30 01 1688	(0.45)		
position	Exhaust	VFR2400 VFR2410	1/8	0.79	0.53	0.24	3.1 [0.89]	0.24 [0.51]	0.74 [0.27]	-	20 or loss	0.43			
l g	center	VFR2400	VFh2410	1/4	0.79	0.53	0.24	3.1 [0.89]	0.24 [0.51]	0.74 [0.27]	5	30 or less	(0.45)		
က	Pressure	VFR2500	VFR2510	1/8	2.8 [0.65]	0.24 [0.60]	0.68 [0.21]	0.89	0.53	0.27	_	00 1	0.43		
	center	VFh2500	VFN2510	1/4	3.2 [0.75]	0.26 [0.55]	0.73 [0.23]	0.89	0.53	0.27	5	30 or less	(0.45)		



Note 1) []: Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor) Note 4) For VFR2 \square 00- \square FZ- $^{01}_{02}$, (): VFR2 \square 10- \square DZ- $^{01}_{02}$




5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in



Note) Electrical entry and light/surge voltage suppressor: D/DZ/DO/DOZ,Y/YZ/YO/YOZ, F,FZ only



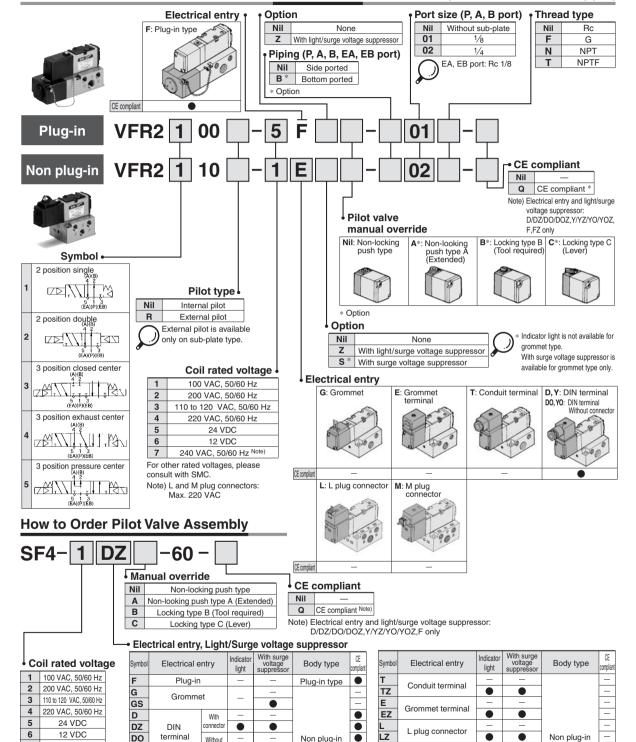

Non plug-in

type

•

•

M

LO

LOZ

MZ

МО

MOZ

L plug connector (Without connector)

M plug connector

M plug connector

(Without connector)

DO

DOZ

YΖ

YO

YOZ

DIN

terminal

(DIN43650B)

7 240 VAC, 50/60 Hz Note)

For other rated voltages

please consult with SMC.

Max. 220 VAC

Note) L and M plug connectors:

Without

connecto

With

connecto


Without

connecto

type

Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

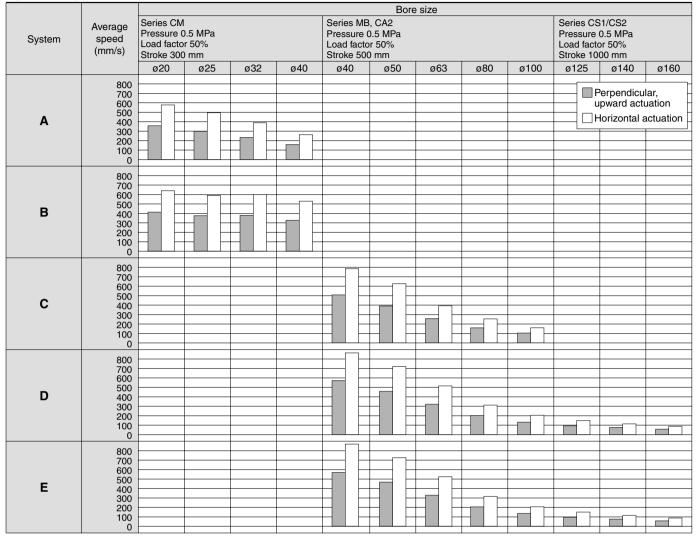




- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

System Components

System	Solenoid valve	Speed controller	Silencer	Tube bore x Length
А	•	AS2000-01 (S = 2.5 mm ²)	AN110-01 (S = 35 mm ²)	T0425 x 1 m
В	Series VFR2000	AS3000-02 (S = 12 mm ²)	AN110-01 (S = 35 mm ²)	T0604 x 1 m
С	Rc 1/8	AS3000-02 AN110-01 (S = 12 mm²) (S = 35 mm²)		T0806 x 1 m
D	Series VFR2000	AS4000-02 (S = 21 mm ²)	AN110-01 (S = 35 mm ²)	T1075 x 1 m
Е	Rc 1/4	AS4000-02 (S = 21 mm ²)	AN110-01 (S = 35 mm ²)	T1209 x 1 m


How to Order Sub-plate Assembly

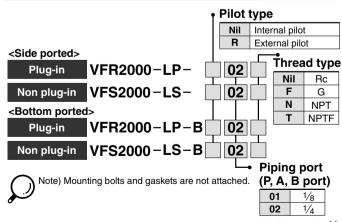

EA, EB port: Rc 1/8


5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Construction

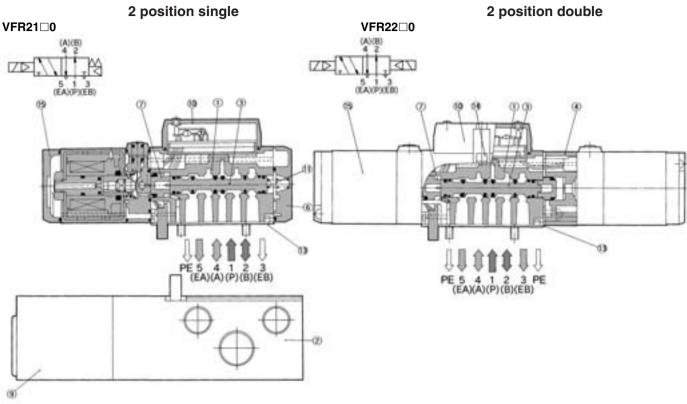

3 position closed center/exhaust center/pressure center



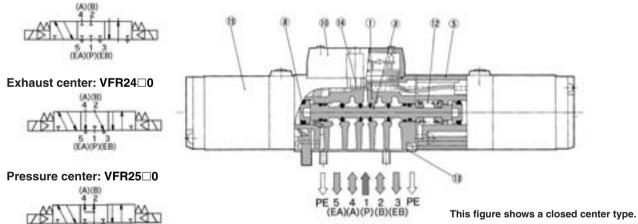

Component Parts

No.	Description	Material	Note						
1	Body	Aluminum die-casted	Platinum silver						
2	Sub-plate	Aluminum die-casted	Platinum silver						
3	Spool valve	Aluminum, NBR							
4	Adapter plate	Aluminum die-casted	Platinum silver						
5	Adapter plate	Aluminum die-casted	Platinum silver						
6	End plate	Resin	Black						

(EA)(P)(EB)

Component Parts

No.	Description	Material	Note							
7	Piston	Resin								
8	Piston	Resin								
9	Junction cover	Resin								
10	Light cover assembly	Resin								
11	Spool spring	Stainless steel								
12	Return spring	Stainless steel								

Replacement Parts

No.	Description	Matarial	Part no.					
INO.	Description	Material	VFR21□0	VFR22□0	VFR23□0/24□0/25□0			
13	Gasket	NBR	AXT624-20-2	AXT624-20-2	AXT624-20-2			
14	Hexagon socket head screw	Steel	AXT624-26 (M3 x 31)	AXT624-26 (M3 x 31)	AXT624-26 (M3 x 31)			
15	Pilot valve assembly	_	Refer to "How to Order Pilot Valve Assembly" on page 1233.					
_	Sub-plate assembly	_	Refer to "How to Order Sub-plate Assembly" on page 1234.					



SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ


SQ

VFS


VFR

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR2100-□F-01

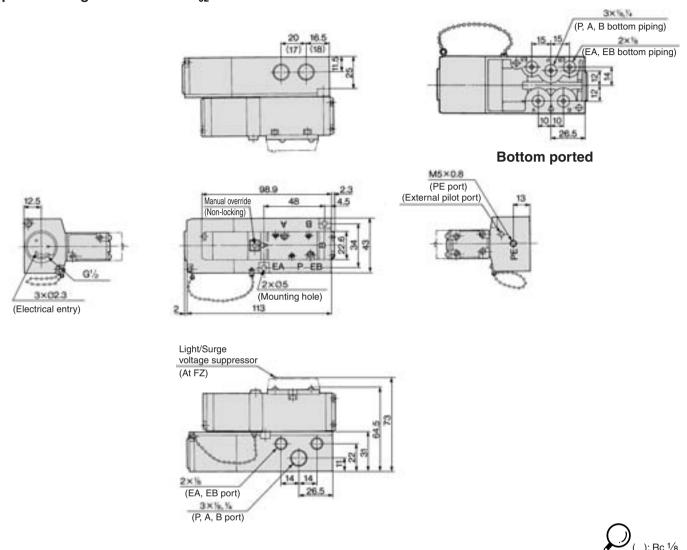





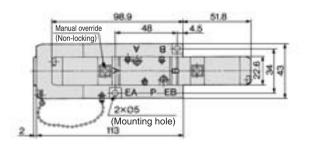


* Other dimensions are the same as the single type.

- 3 position closed center: VFR2300- \Box F- $^{01}_{02}$ 3 position exhaust center: VFR2400- \Box F- $^{01}_{02}$ 3 position pressure center: VFR2500- \Box F- $^{01}_{02}$

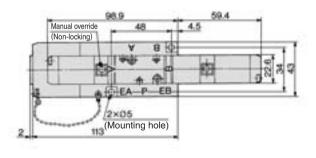


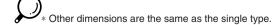


Non Plug-in: 2 Position Single

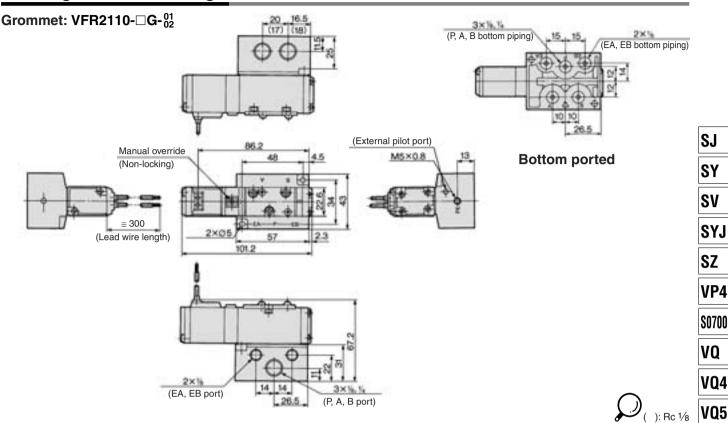


Grommet terminal: VFR2110-□E-01

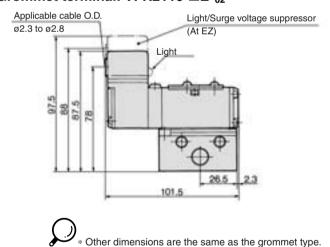

Conduit terminal: VFR2110-□T-01

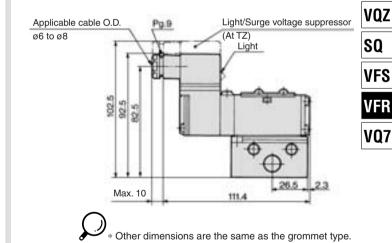


DIN terminal: VFR2110- \square_{Y-02}^{D-01}

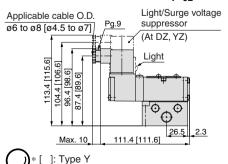


Other dimensions are the same as

the grommet type.

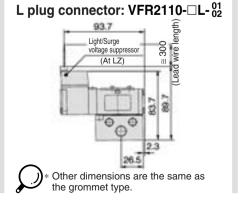


M plug connector: VFR2110-□M-01

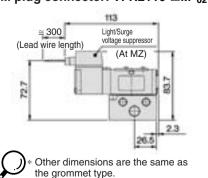





VQC


Non Plug-in: 2 Position Double

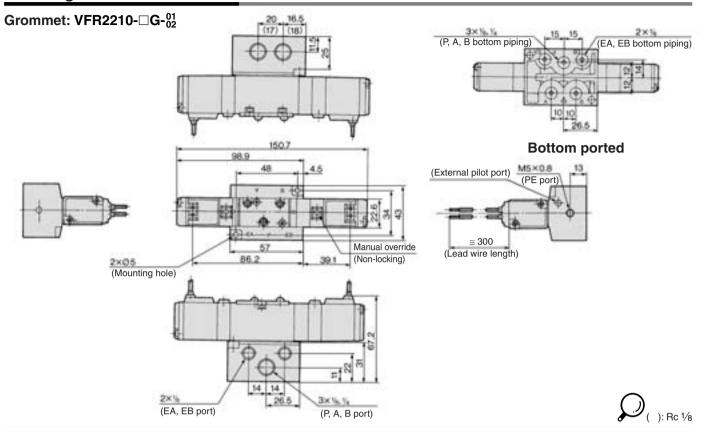


* Other dimensions are the same as the grommet type.

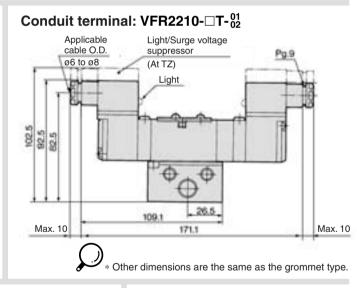


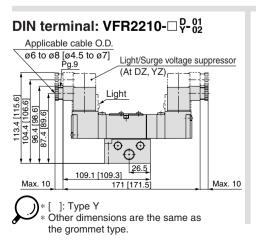

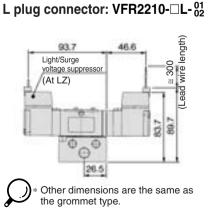

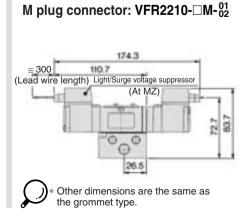


Non Plug-in: 3 Position Closed Center/Exhaust Center/Pressure Center

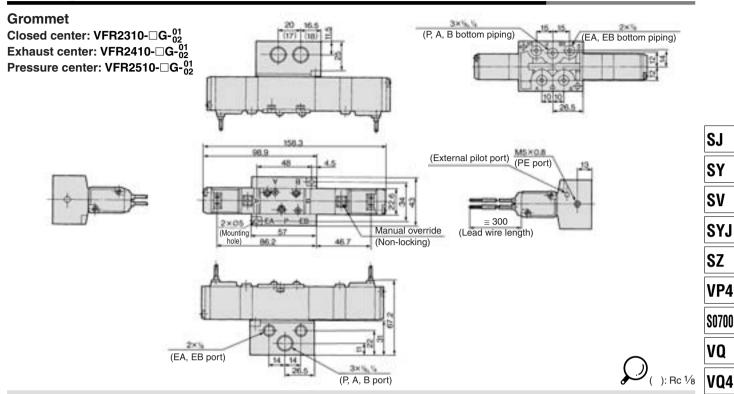

Grommet terminal


Closed center: VFR2310-□E-01 Exhaust center: VFR2410-□E-01

Pressure center: VFR2510
E-01

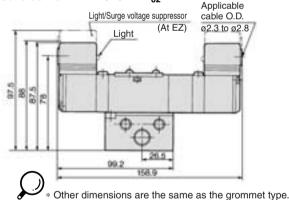

Conduit terminal


Closed center: VFR2310-□T-01 Exhaust center: VFR2410-□T-01 Pressure center: VFR2510- \Box T-01

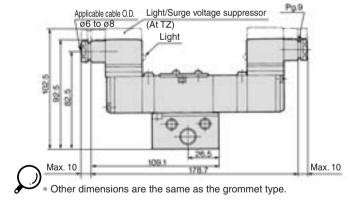

DIN terminal


Closed center: VFR2310-□_VD-01 Exhaust center: VFR2410- $\square_{Y=02}^{1-01}$ Pressure center: VFR2510- $\square_{Y=02}^{0-01}$

the grommet type.

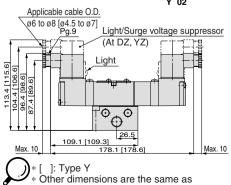

L plug connector


Closed center: VFR2310-□L-01 Exhaust center: VFR2410- L-01 Pressure center: VFR2510-\(\sigma\)L-\(\frac{01}{02}\)

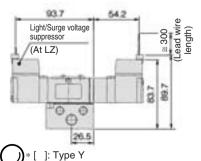

Other dimensions are the same as the grommet type.

M plug connector

Closed center: VFR2310-□M-01 Exhaust center: VFR2410-□M-01 Pressure center: VFR2510- \square M-01

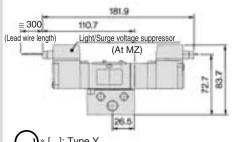

]: Type Y Other dimensions are the same as the grommet type.



VQ5

VQC

VQZ

SQ

VFS

VFR

Manifold Specifications

Manifold Specifications

Base model	Wiring	Porting specifications	Port	size	Stations	Applicable	
Dase model	vviilig	A, B port	P, EA, EB	A, B	Otations	valve model	
Diva in tuno	With terminal block				2 to 15		
Plug-in type VV5FR2-01□(-Q)	• With multi-connector • With D-sub connector				2 to 8	VFR2□00-□F(-Q)	
Non plug-in type VV5FR2-10(-Q)	Grommet Grommet terminal Conduit terminal DIN terminal L plug connector M plug connector	Note) Side/Bottom	1/4	1/8, 1/4 C6, C8	2 to 15	VFR2 10-□G VFR2□10-□E VFR2□10-□T VFR2□10-□D(-Q) VFR2□10-□L VFR2□10-□M	

Note) Side ported and bottom ported cannot be taken at the same time.

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations, one-piece junction cover)

VV5FR2-01T1-061-02 (-Q) 1 set (Manifold base part no.) *VFR2100-5FZ (-Q) 3 sets (2 position single part no.) *VFR2200-5FZ (-Q) ----- 2 sets (2 position double part no.) *VVFS2000-10A 1 set (Blanking plate assembly part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type: 6 stations

VV5FR2-10-061-01 (-Q) 1 set (Manifold base part no.) *VFR2110-5D (-Q) 5 sets (2 position single part no.) *VFR2410-5D (-Q) ----- 1 set (3 position exhaust part no.) *VVFS2000-R-01-2 ----- 1 set (Individual EXH spacer part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet

Option

CE compliant

Nil

F

т

CE compliant

Thread type


G

NPT

NPTF

Plug-in Type: With Terminal Block

Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

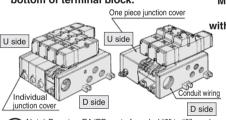

Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate. Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".

Note) P port or EA/EB port of symbol "3" to "8" can be

individual port, its symbol is "1".

individual port with block plate. Therefore, if using


individual SUP spacer or individual EXH spacer for

VV5FR2-01T 1 CE compliant Series VFR2000 Symbol *2, Manifold Porting CE compliant Passage *1 Plug-in type Thread type P EA. EB A, B with terminal block Port size *2, *3 Nil Rc Com-Symbol P, EA, EB Junction cover Common mon 2 **Bottom** 1/8 Individual junction N NPT Nil 3 * Side Com-1/4 cover 02 mon **NPTF** 4 **Bottom** One-piece junction One-touch C₆ 5 Indiv-Side 1/4 fitting for ø6 Common idual 6 Bottom One-touch Stations 7 C8 Side Indivfitting for ø8 02 2 stations 8 * idual Bottom Mixed * Option

Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

Master connection of power and solenoid valves.

Quick wiring permits ease of installation.

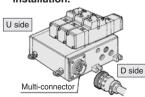

Series VFR2000 Manifold Plug-in type with multi-connector Connector mounting direction •

D Side mounting U side mounting

Junction cover One-niece junction cover Stations •

15 | 15 stations

8 stations

02 2 stations

Symbol *2, *3 Passage *1 Symbo

A, B Side Com-Common 2 * mon Bottom 3 Side Com-Individual 4 * mon Bottom * Indiv-5 Side 6 * idual Bottom Side

Port size *2, *3 Symbol P, EA, EB 01 02

7 * Indiv-Individual idual 8 * Bottom Option

A. B 1/8 1/4 One-touch C6 fitting for ø6 One-touch C8 fitting for ø8

Mixed

*1 When an individual passage is used, P, EA and EB ports will be bottom ported.

*2 For bottom ported, A/B port size is 1/8 (Symbol 01) only. *3 Symbol "1" is only applicable to One-touch fittings (C6, C8)

*1 When an individual passage is used, P, EA and EB ports will be bottom ported. *2 For bottom ported, A/B port size is 1/8 (Symbol 01) only


*3 Symbol "1" is only applicable to One-touch fittings (C6, C8).



5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series VFR2000

Note) Electrical entry and light/surge voltage suppressor: D/DZ/DO/DOZ,Y/YZ/YO/YOZ, F.FZ only

[Option]

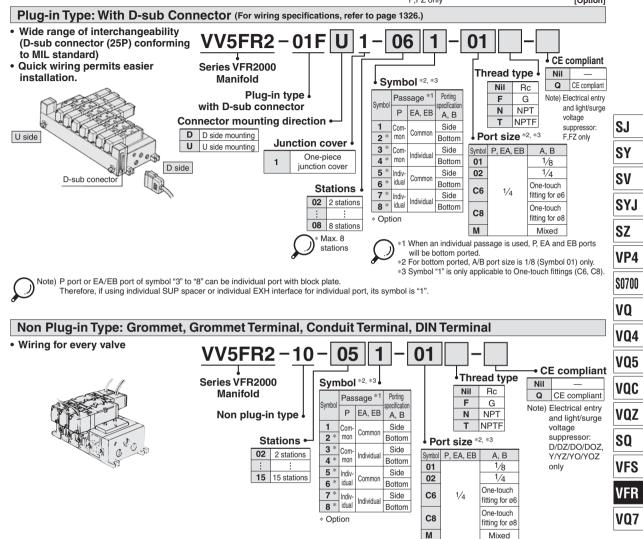

- *1 When an individual passage is used, P, EA and EB ports will be bottom ported.
- *2 For bottom ported, A/B port size is 1/8 (Symbol 01) only
- *3 Symbol "1" is only applicable to One-touch fittings (C6, C8).

Note) P port or EA/EB port of symbol "3" to "8" can be individual port with block plate. Therefore, if using individual SUP spacer or individual EXH spacer for individual port, its symbol is "1".

Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.

	Body type		Plug-in type	Non plug-in type
	6	Rc1/8	VVFS2000-P-01-1	VVFS2000-P-01-2
L	Part	Rc1/4	VVFS2000-P-02-1	VVFS2000-P-02-2





Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type		Plug-in type	Non plug-in type
9.	Rc ¹ /8	VVFS2000-R-01-1	VVFS2000-R-01-2
Part	Rc1/4	VVFS2000-R-02-1	VVFS2000-R-02-2





SUP block disk

When supplying manifold with more than two different kinds of pressure, high and low, insert a block disk in between stations subjected to different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT625-12A	

EXH block disk

When valve exhaust affects the other stations in the circuit, insert EXH block disk in between stations to separate valve exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	AXT625-12A	



Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.

Body type	Plug-in type	Non plug-in type	
Part no.	VVFS2000-20A-1	VVFS2000-20A-2	






Interface regulator

Interface regulator set on the manifold block can regulate pressure for each valve. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF2000-00-P-1	ARBF2000-00-P-2

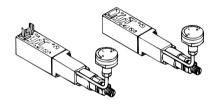

Air release valve spacer

Valve VFR21□0 (single) can be used as air release valve by combining with release valve spacer.


Body type	Plug-in type	Non plug-in type			
Part no.	VVFS2000-24A-1 ^L _R	VVFS2000-24A-2 R			
Note) L: U side mount R: D side mount					

SUP stop valve spacer Note)

If SUP stop valve spacer is set, valve can be removed for maintenance without stopping air pressure supply for other valves.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS2000-37A-1	VVFS2000-37A-2

(Height will be 23.2 mm higher.)

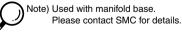

Blanking plate


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS2000-10A	

Manifold Option


With control unit Plug-in/Non Plug-in type

- Filter, regulation valve, pressure switch and air release valve all combine to form one unit.
- · Piping processes are eliminated.

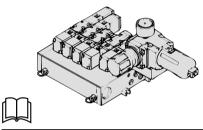


For details, refer to page 1247.


Manifold/Plug-in Type

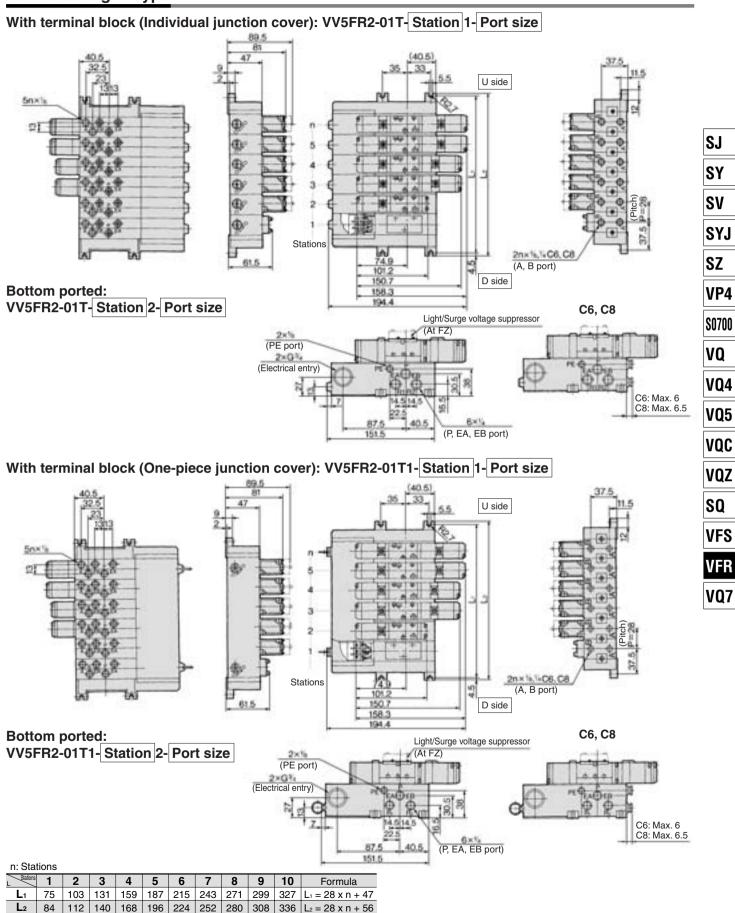

1243


Manifold/Plug-in Type

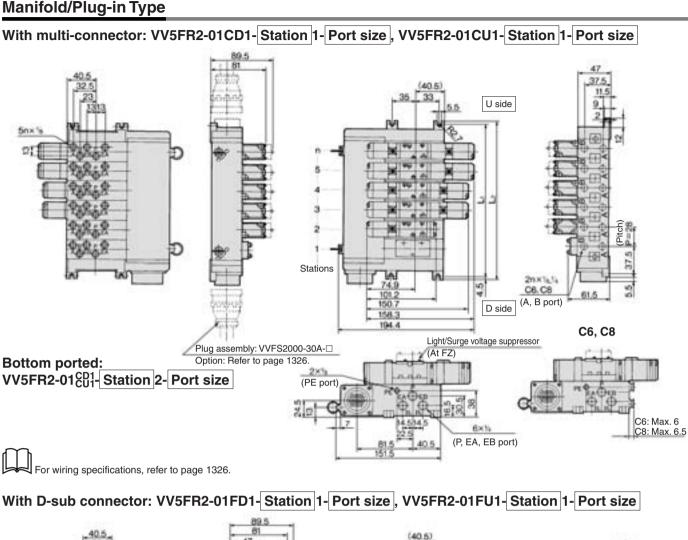

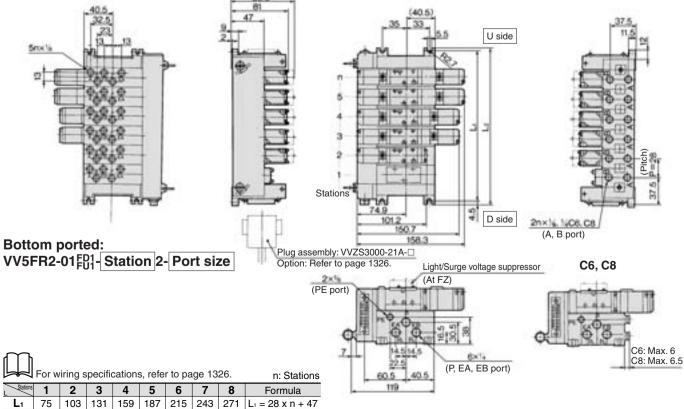

84 112 140 168 196 224 252 280 L₂ = 28 x n + 56

Manifold/Non plug-in type: VV5FR2-10-Station 1-Port size

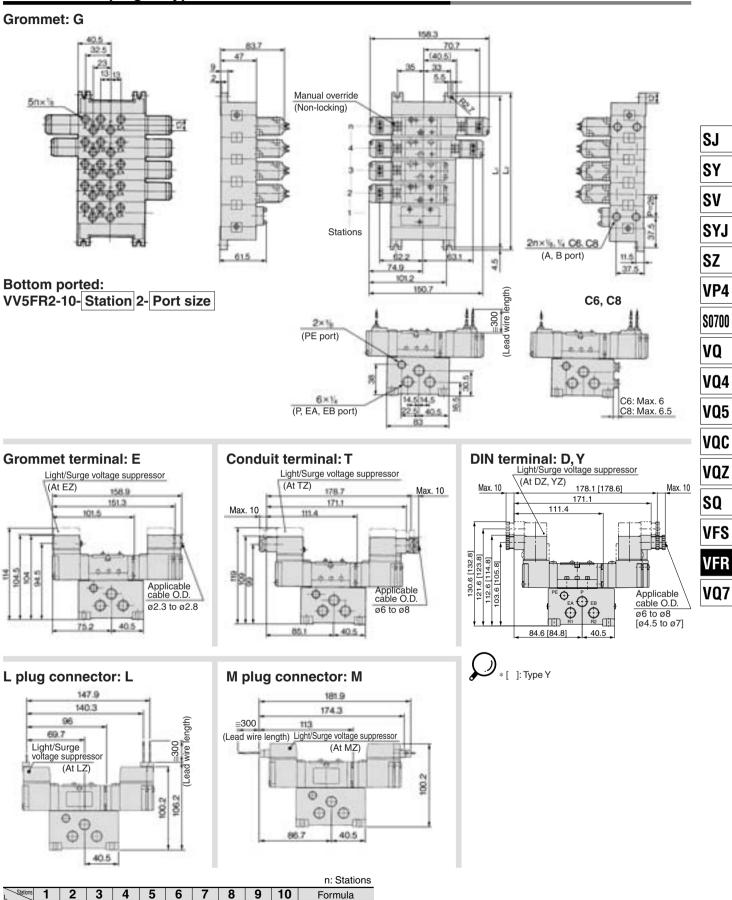

327 L₁ = 28 x n + 47

336 L₂ = 28 x n + 56

75 | 103 | 131 | 159

84

187 215 243

112 140 168 196 224 252


271 | 299

280 308


Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type

Individual SUP spacer:


VVFS2000-P- $_{02}^{01}$ -1 (Plug-in type) VVFS2000-P- $_{02}^{01}$ -2 (Non plug-in type)

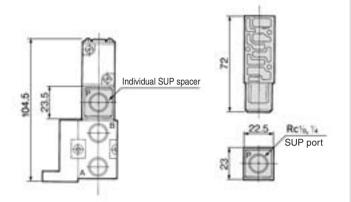

Throttle valve spacer: VVFS2000-20A-1 (Plug-in type) VVFS2000-20A-2 (Non plug-in type)

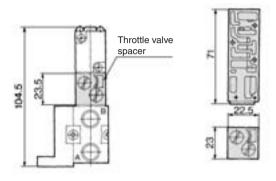


Individual EXH spacer: VVFS2000-R- $_{02}^{01}$ -1 (Plug-in type) VVFS2000-R- $_{02}^{01}$ -2 (Non plug-in type)

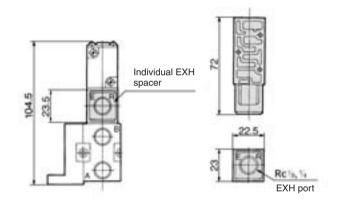


ARBF2000-00-P-1 (Plug-in type) ARBF2000-00-P-2 (Non plug-in type)


Interface regulator

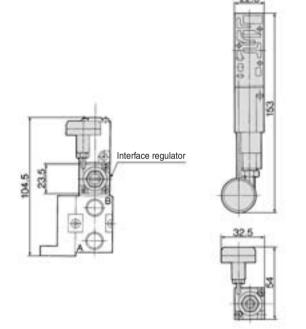

SUP block disk: AXT625-12A EXH block disk: AXT625-12A

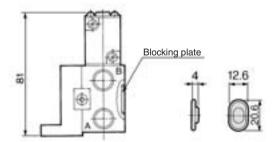

Release valve spacer VVFS2000-24A-1^R_L (Plug-in type) VVFS2000-24A-2^R_L (Non plug-in type)

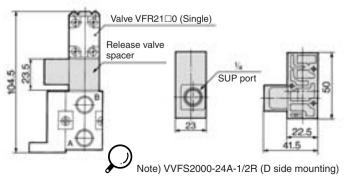

Manifold with Control Unit

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.



Plug-in type



Non plug-in type

⚠ Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR2-01□(-Q)		Non plug-in type: VV5FR2-10(-Q)	
Wiring	With terminal block With multi-connector With D-sub connector		Grommet, Grommet terminal Conduit terminal, DIN terminal L plug connector, M plug connector	
Applicable valve model	VFR2□00-□F(-Q)		VFR2□10-□G, VFR2□10-□E VFR2□10-□T,VFR2□10-□DY(-Q) VFR2□10-□L,VFR2□10-□M	
Porting		Common SUP, Common EXH		
specifications	A, B port	Side: Rc ¹ / ₈ , ¹ / ₄ , C6, C8, Bottom: Rc ¹ / ₈ (Option)		
Rc	P, EA, EB port	Side: Rc ¹ / ₄ , Bottom: Rc ¹ / ₈ (Option)		
Stations	2 to 15 s	stations * (With multi-connector/D-sub connector: 2 to 8 stations)		

* Including station of control unit

Control Unit Specifications

Air filter (With auto-drain/With manual drain)			
Filtration degree 5 μm			
Regulator			
Set pressure	0.05 to 0.85 MPa		
(Outlet pressure)	0.00 10 0.00 1111 4		
Pressure switch			
Set pressure	0.1 to 0.6 MPa		
range: OFF	0.1 to 0.0 Wil a		
Differential	0.08 MPa		
Contact	1a		
Indicator light	LED (RED)		
Max. switch	2 VA AC, 2 W DC		
capacity	2 VA AC, 2 W DC		
Max. operating	24 VAC, DC or less: 50 mA		
current	100 VAC, DC: 20 mA		
Inside voltage	Inside voltage 4 V or less		
drop			
Air release valve	Air release valve (Single only)		
Operating	0.2 to 0.9 MPa		
pressure range 0.2 to 0.9 MPa			

Control Unit/Option

<plug-in type=""> VVFS2000-24A-1R (D side mounting) VVFS2000-24A-1L (U side mounting)</plug-in>			
VVFS2000-24A-2R (D side mounting)			
VVFS2000-24A-2L (U side mou			
IS1000P-2-1			
For filter regulator	MP2-2		
For pressure switch	MP3-2		
For air release valve	AXT625-18A		
111511-	5B		
	VVF\$2000-24A-1R (D VVF\$2000-24A-1L (U <non plug-in="" type=""> VVF\$2000-24A-2R (D VVF\$2000-24A-2L (U I\$1000P-2-1 For filter regulator For pressure switch For air release valve</non>		

Note 1) Refer to "Manifold Option" on page 1246.
Note 2) Pressure switch cannot be

mounted later on non plug-in type.

SJ

SY SV

SYJ

SZ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ

VFS

VFR

How to Order [Option] 08 1 10 VV5FR2 -01 Series VFR2000 **CE** compliant Manifold Nil CE compliant Base model • Note) Electrical entry and light/surge Connector voltage suppressor: Junction Symbol Electrical entry mounting D/DZ/DO/DOZ,Y/YZ/YO/YOZ, cover direction F,FZ only 01T Plug-in type Stacking type Air release valve coil rating terminal block 01T1 Integrated type Nil 01CD1 Plug-in type D side Integrated type 100 VAC 50/60 Hz multi-connector 1 01CU1 U side 5 24 VDC 01FD1 Plug-in type D side Integrated type 01FU1 D-sub connector U side For other rated voltages, please consult with SMC. 10 Non plug-in type Control unit type Symbol NII MP AP M Α G F С Ε Control equipment Stations • Air release valve 02 2 stations Air filter regulator with manual drain Air filter regulator with auto-drain 15 Note) 15 stations Pressure switch • Note) • 01CD1, 01CU1, Blanking plate (Air release valve) 01FD1, 01FU1: Blanking plate (Filter regulator) Max. 8 stations Blanking plate (Pressure switch) • 01T, 01T1, 10: Max. 15 stations Required stations 2 stations • Including station station of control unit Note) Control unit is D side mounting only Symbol *2, *3 Thread type Porting Passage *1 specifications Symbol Nil Rc Р EA. EB (A. B) F G Side N NPT Common Common 2 **Bottom** NPTF т 3 Side Common Individual 4 * **Bottom** Port size *2, *3 5 Side Individual Common Symbol P, EA, EB A, B 6 * Bottom 01 1/8 7 Side Individual Individual 02 1/4 8 * Bottom C6 1/4 One-touch fitting for ø6 * Option C8 One-touch fitting for ø8 * 1 When an individual passage is used, P, EA and EB ports will be bottom ported.



Note) The individual specification of the P port in the composition symbol marks 3 to 8 or EA, EB ports should be taken as individual port using a block plate. Therefore, if an individual port is taken using a single SUP spacer of option or a single EXH spacer, the composition symbol mark is "1".

M

How to Order Manifold Assembly

01) only

fittings (C6, C8).

<Example> Plug-in type with terminal block

the solenoid valve, etc.

VV5FR2-01T1-091-02-MP5 (-Q) 1 set (Manifold base part no.) *VFR2100-5FZ (-Q) ----- 5 sets (2 position single part no.) *VFR2200-5FZ (-Q) ······ 2 sets (2 position double part no.) ▶The asterisk denotes the symbol for assembly. Prefix it to the part nos. of

* 2 For bottom ported, A/B port size is 1/8 (Symbol

* 3 Symbol "1" is only applicable to One-touch

The 1st and 2nd station are used for control unit mounting.

When ordering, specify the part nos. in order from the 3rd. station in the D side When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type

VV5FR2-10-071-01-M5 (-Q) 1 set (Manifold base part no.) *VFR2110-5D (-Q) ----- 5 sets (2 position single part no.)

Note) Electrical entry and light/surge voltage suppressor: D/DZ/DO/DOZ,Y/YZ/YO/YOZ,


The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

The 1st and 2nd station are used for control unit mounting.


When ordering, specify the part nos. in order from the 3rd. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



Manifold with Control Unit: Plug-in Type/Non Plug-in Type

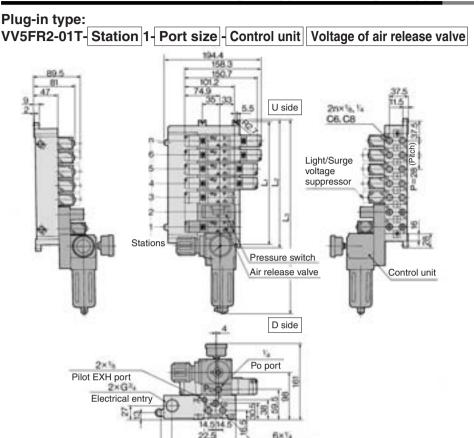


Example for manifold

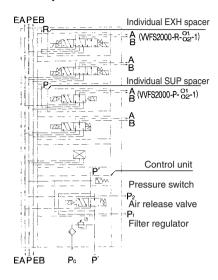

Non plug-in type:

VV5FR2-10- Station 1- Port size - Control unit | Voltage of air release valve

(P, EA, EB port)

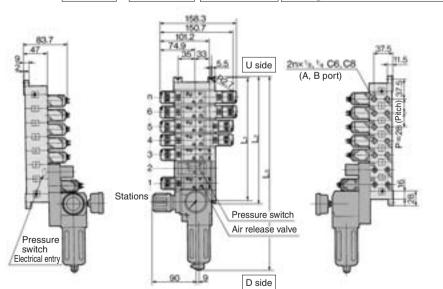


Po port

(P, EA, EB port)

Pilot EXH port

Example for manifold

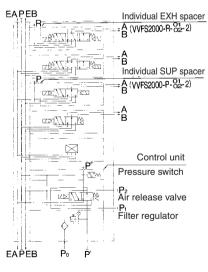

L	3	4	5	6	7	8	9	10	Formula
Lı	131	159	187	215	243	271	299	327	$L_1 = 28 \times n + 47$
L ₂	140	168	196	224	252	280	308	336	$L_2 = 28 \times n + 56$
L ₃ (MP)	278	306	334	362	390	418	446	474	$L_3 = 28 \times n + 194$
L ₃ (AP)	319.5	347.5	375.5	403.5	431.5	459.5	487.5	515.5	L ₃ = 28 x n + 235.5

n. Stations

SJ SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC


VQZ

SQ

VFS

VFR

Manifold Base Construction — Plug-in Type, Non Plug-in Type

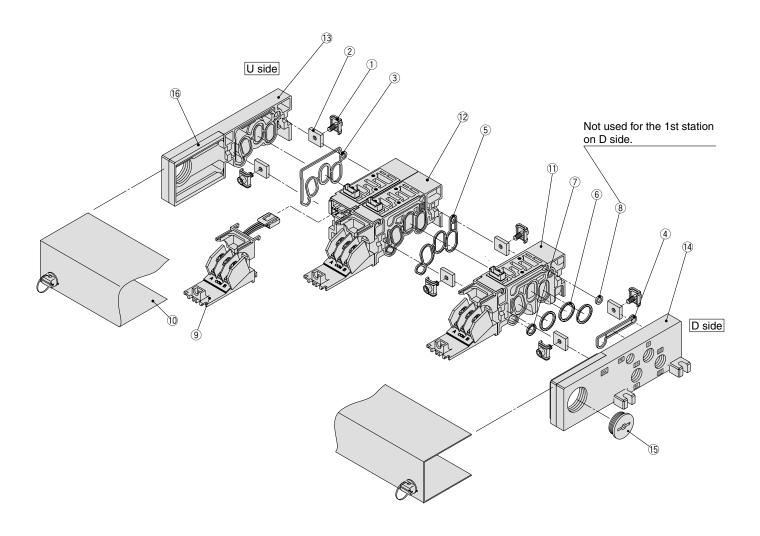

- * Manifold Base/Construction: Plug-in type with terminal block (01T1).
- For increasing the manifold bases, please order the manifold block assembly number of the principle number assembly ① and ②. For plug-in type: The manifold base with terminal stand (integrated with a junction cover) is required with the ① junction cover assembly.
- Manifold base is consisted of the junction of 2 and 3 station bases.

Example) $\begin{tabular}{lllllllllllllllllllllllllllllllllll$							
<5 stations (Odd number)>	[2 sta	tions	2 sta	tions	1 station	
<6 stations (Even number> [2 sta	tions	2 sta	tions	1 station	1 station	

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Replacement I	Parts
---------------	-------

No.	Description	Material		Part no.		
1	Connection fitting assembly	Steel plate		AXT625-4-1A		
2	Connection fitting B	Steel plate		AXT625-5		
3	Gasket A	NBR		AXT625-17		
4	Gasket B	NBR		AXT625-16		
5	Gasket	HNBR		VVFS2000-32-1H		
6	O-ring	NBR		18 x 15 x 1.5		
7	O-ring	NBR		10.5 x 7.5 x 1.5		
8	O-ring	NBR		8 x 5 x 1.5		
	Adapter plate	Resin	For 01	AXT625-6		
	Adapter plate assembly		For 01T	AXT625-28-13A		
9	Adapter plate assembly	_	For 01T1	(Terminal section with adapter plate and lead wire assembly)		
9		Resin	For 01C	AXT625-28-1		
	Adapter plate		For 01F	VVF2000-26-6		
			For 01S□	AXT625-6		
			For 01	AXT625-7A		
			For 01T	AXT625-28-3A		
10	Junction cover assembly		For 01T1	AXT625-28-7A-Stations		
10	ounction cover assembly	_	For 01C			
			For 01F	VVF2000-26-5A-Stations		
			For 01S□	AZ738-10A-Stations		
	Rubber plug	NBR	For 01	AXT333-12		
15	. •	NOIT	For O1S (1)	AXT625-22		
	Plug	_	For 01W	EXP22S		
16	Guard	Resin	For 01 (1)	AXT625-28-4		

Replacement Parts: Sub Assembly

No.	Description	Part no.	Component parts	Applicable manifold base
		AXT625-01A-1/2(-B) Note)	Manifold block ①, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧, Junction cover ⑩, Adapter plate ⑨, Pin housing, Guide, Insert plug lead wire	
11	Manifold block assembly (for 1 station)	AXT625-20A- ₂ (-B) Note)	Manifold block ①, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧, Junction cover ⑩, Adapter plate assembly (with terminal) ⑨, Pin housing, Guide	Plug-in type With terminal block
	(ioi i station)	AXT625-10A- ₂ (-B) Note)	Manifold block ①, Metal joint ①, ②, O-ring ⑥, ⑦, ⑧	Non plug-in type
		AXT625-01A2- ¹ ₂ Note)	Manifold block ②, Metal joint ①, ②, Gasket ⑤, Junction cover ⑩, Adapter plate ⑨, Pin housing, Guide, Insert plug lead wire	Plug-in type With attachment plug lead wire
12	Manifold block assembly (for 2 stations)	AXT625-20A2- ¹ ₂ Note)	Manifold block ②, Metal joint ①, ②, Gasket ⑤, Junction cover ⑩, Adapter plate assembly (with terminal) ⑨, Pin housing, Guide	Plug-in type With terminal block
	(IOI 2 Stations)	AXT625-10A2- ¹ ₂ Note)	Manifold block ①, Metal joint ①, ②, Gasket ⑤	Non plug-in type
		AXT625-2A	End plate (U) ③, Metal joint ①, ②, Gasket A ③, Guard ⑥	Plug-in type With attachment plug lead wire
13	End plate (U side) assembly	AXT625-2A-20	End plate (U) ③, Metal joint ①, ②, Gasket A ③, Guard ⑥	Plug-in type With terminal block
		AXT625-2A-10	End plate (U) ③, Metal joint ①, ②, Gasket A ③	Non plug-in type
		AXT625-3A	End plate (D) (4), Metal joint (1), (2), Gasket B (4), Guard (6), Steel ball	Plug-in type With attachment plug lead wire
14	End plate (D side) assembly	AXT625-3A-20	End plate (D) (4), Metal joint (1), (2), Gasket B (4), Guard (6), Steel ball	Plug-in type With terminal block
		AXT625-3A-10	End plate (D) (4), Metal joint (1), (2), Gasket B (4), Steel ball	Non plug-in type

SMC

SJ

SY SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC VQZ

SQ

VFS

VFR

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Series VFR3000





Note) Applicable only for DIN terminal and plug-in types.

(Details→P 1319)

plug-in types. For details, refer to "How to Order".

Details→P.1319)





Non plug-in type

JIS Symbol

2 position	3 position		
Single	Closed center		
(A)(B) 4 2 5 1 3 (EA)(P)(EB)	(A)(B) 4 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
Double	Exhaust center		
(A)(B) 4 2 5 1 3 (EA)(P)(EB)	(A)(B) 4 2 5 1 3 (EA)(P)(EB)		
,	Pressure center		
	(A)(B) 4 2 5 1 3 (EA)(P)(EB)		

Standard Specifications

	Fluid				Air	
Su	Operating	2 position single/3 position		0.2 to 0.9 MPa		
뎙	pressure range	2 position do	uble		0.1 to 0.9 MPa	
ä	Ambient and flui	d temperature		−10 to 50°C	(No freezing. Refer to page 5.)	
C <u>i</u>	Lubrication				Not required (1)	
specifications	Manual override			N	lon-locking push type	
ė,	Mounting orientation				Unrestricted	
Valve	Shock/Vibration resistance			300/50 m/s ^{2 (2)}		
>	Enclosure			Dustproof		
SI	Coil rated voltag	е		100, 200 VAC (50/60 Hz), 24 VDC		
읉	Allowable voltag	e fluctuation		-15 to -10% of rated voltage		
iji i	Apparent power (AC) (3)			5.6 VA/50 Hz, 5.0 VA/60 Hz		
bec	Apparent power (AC)		Holding	3.4 VA (2.1	W)/50 Hz, 2.3 VA (1.5 W)/60 Hz	
S	Power consumption (DC) (3)		1.8 W			
iż.				Plug-in type	Conduit terminal	
Electricity specifications	뒿 Electrical entry			Non plug-in	Grommet, Grommet terminal	
ú				type	Conduit terminal, DIN terminal	

Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-nergized states every once for each condition.

(Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz.

Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

	<u> </u>			
Pilot type		External pilot Note)		
Manual Main valve		Direct manual override		
override	Pilot valve	Non-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)		
Cail rated	roltono.	110 to 120, 220, 240 VAC 50/60 Hz		
Coil rated voltage		12 VDC		
Porting specifications		Bottom ported		
Option		With light/surge voltage suppressor		



Note) Operating pressure: 0 to 0.9 MPa

Pilot pressure: 2 position single/3 position 0.2 to 0.9 MPa

2 position double 0.1 to 0.9 MPa

Model

	Model					Flow characteristics (1)						Max. (2)	
Ty	/pe of			Port size	1 –	→ 4/2 (P → A/	(B)	4/2 → 5/3 (A/B → EA/EB)			operating Cycle (Hz)	Response	Mass
actuation		Plug-in	Plug-in Non plug-in		C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv		time (ms)	(kg)
E	Single VFR310	VED210	VFR311□	1/4	7.5	0.38	1.9	7.5	0.34	1.9	5	20 or loss	0.61 (0.64)
l ∺		Single VFR310	VFR310	VFR314□	3/8	8.4	0.39	2.2	8.7	0.38	2.2	5	30 or less
ğ	od Nouble VFR320□	VED220	VFR321□	1/4	7.1	0.41	1.9	7.4	0.40	1.9	5		0.71 (0.74)
2		VFR320U	VFR324□	3/8	7.9	0.36	2.0	8.6	0.37	2.2			<0.69>
	Closed VEDOCO	Closed	VFR331□	1/4	6.8	0.40	1.8	6.3	0.38	1.6	3	50 or less	0.72
<u> </u>	center	VFR330□	VFR334□	3/8	7.2	0.39	1.9	6.5	0.40	1.7	٥	50 or less	(0.75) <0.71>
position	Exhaust VEDO 40	VFR341□	1/4	6.5	0.42	1.7	7.9 [3.4]	0.41 [0.47]	2.0 [0.96]	_	50 av lasa	0.72 (0.75)	
g center	VFR340□	VFR344□	3/8	6.9	0.42	1.8	9.5 [3.4]	0.39 [0.46]	2.4 [0.96]	3 50 0	50 or less	<0.71>	
က	Ø D	VFR350□	VFR351□	1/4	7.6 [2.4]	0.33 [0.48]	1.9 [0.69]	6.1	0.36	1.5		50	0.72
center	VFR350	VFR354□	3/8	9.3 [2.4]	0.34 [0.47]	2.2 [0.69]	6.5	0.41	1.7	3	50 or less	(0.75) <0.71>	

Note 1) []: Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor) Note 4) For VFR3□00-□FZ-‰, (): VFR3□10-DZ□-‰, < >: VFR3□40-□G-‰

SJ

SY SV

SYJ

SZ

8Z

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ


VFS

VFR

How to Order

Note) Electrical entry and light/surge voltage suppressor: D/DZ/DO/DOZ,Y/YZ/YO/YOZ, F,FZ only




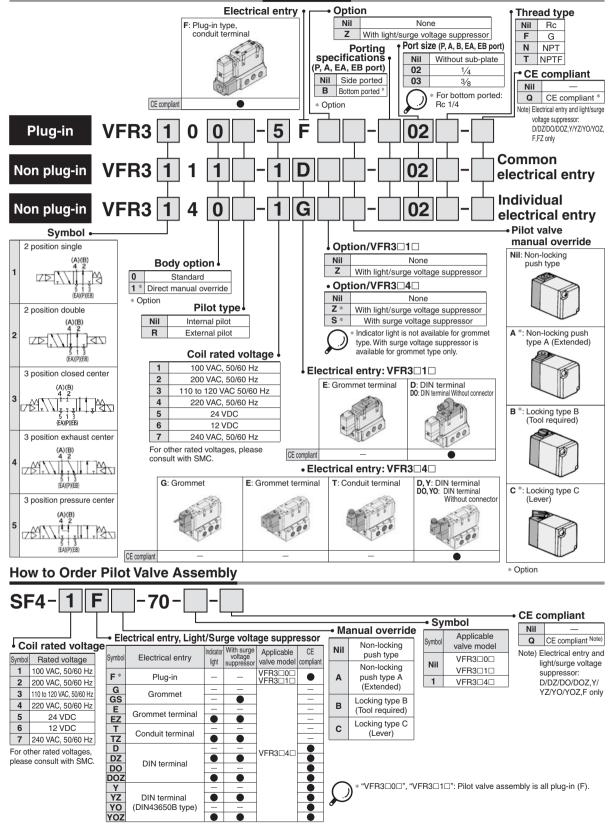

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Use as a guide for selection.
Please confirm the actual conditions with SMC
Sizing Program.

Cylinder Speed Chart

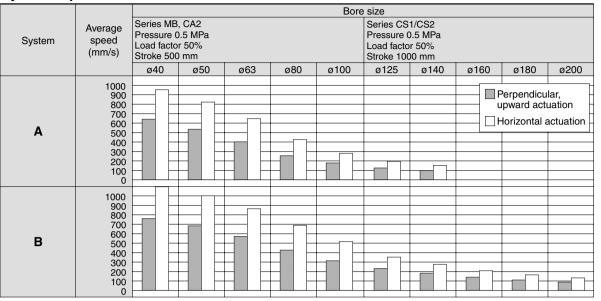




- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

System Components

System	Solenoid valve	Speed controller	Silencer	SPG (Steel pipe) dia. x Length
А	Series VFR3000 Rc ^{1/} 4	AS4000-02 (S = 24 mm ²)	AN200-02 (S = 35 mm ²)	6A x 1 m
В	Series VFR3000 Rc ³ /8	AS420-03 (S = 73 mm ²)	AN300-03 (S = 60 mm ²)	10A x 1 m

How to Order Sub-plate Assembly

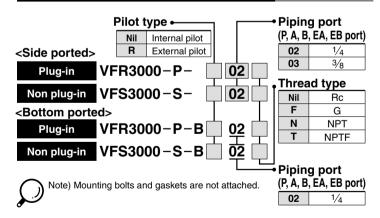

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ

SQ


VFS

VFR


Construction

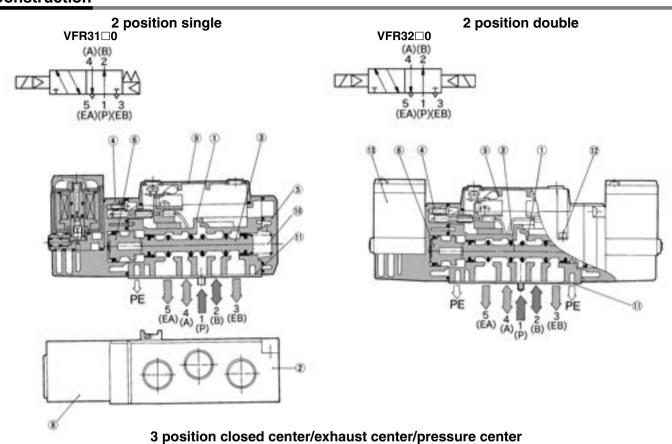


Closed center: VFR33□0

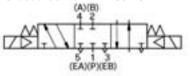


Exhaust center: VFR34□0

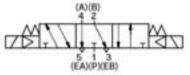

Pressure center: VFR35□0

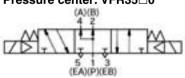

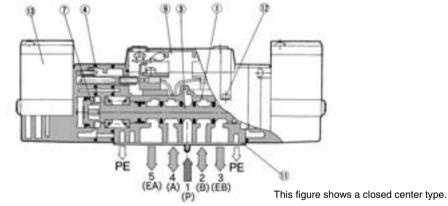

Component Parts

No.	Description	Material	Note							
6	Piston	Resin								
7	Piston	Resin								
8	Junction cover	Resin								
9	Light cover	Resin								
10	Return spring	Stainless steel								

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Resin	Black
5	End plate	Resin	Black


Replacement Parts


NIa	Description	Matarial	Description		
No.		Material	VFR31□□	VFR32□□	VFR33□□/34□□/35□□
11	Gasket	NBR	VFR3000-26-4	VFR3000-26-4	VFR3000-26-4
12	Hexagon socket head screw	Steel	AXT632-3 (M3 x 32)	AXT632-3 (M3 x 32)	AXT632-3 (M3 x 32)
13	Pilot valve assembly	1	Refer to "How to Order Pilot Valve Assembly" on page 1252.		
_	Sub-plate assembly	1	Refer to "How to Order Sub-plate Assembly" on page 1253.		





Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center


2 position single: VFR310⁰₁-□FZ

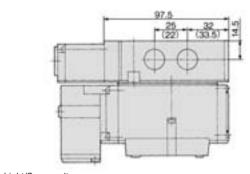

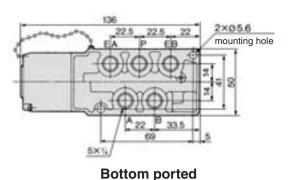

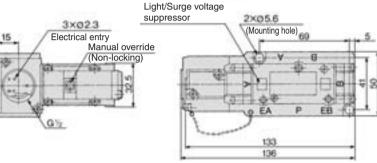


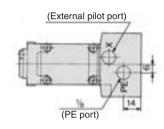

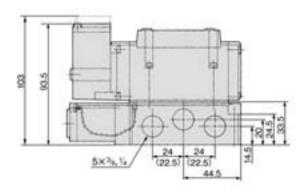


): Rc 1/4

2 position single: VFR320⁰₁-□FZ

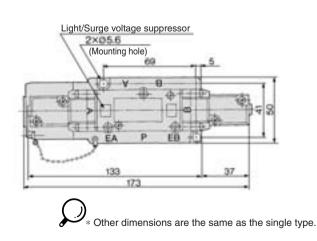

3 position closed center: VFR330 ¹-□FZ 3 position exhaust center: VFR340¹-□FZ 3 position pressure center: VFR350¹-□FZ

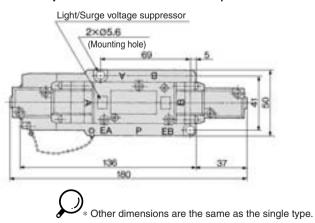

SJ

SY SV

SYJ

SZ

VP4

\$0700

VQ VQ4

VQ5


VQC VQZ

SQ


VFS

VFR

Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

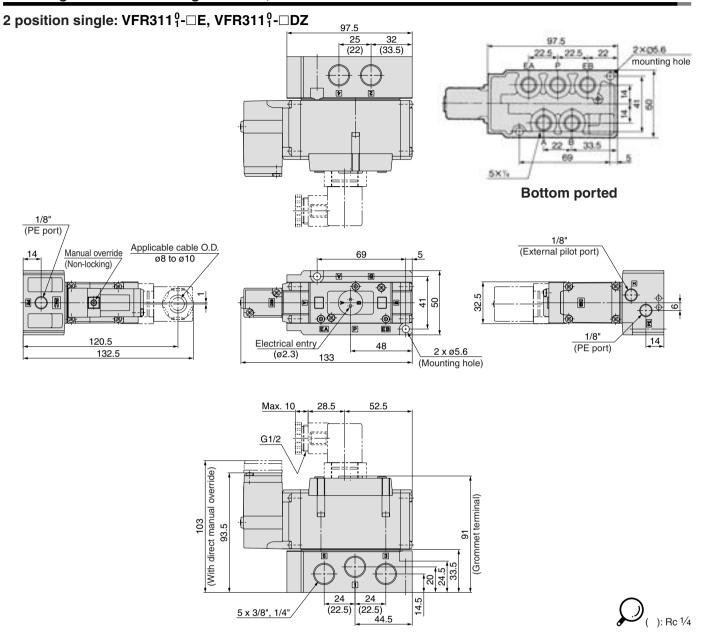


2 position double: VFR321⁰₁-□E, VFR321⁰₁-□DZ

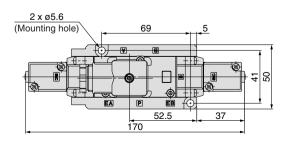

* Other dimensions are the same as the single type.

3 position closed center: VFR331⁰₁-□E, VFR341⁰₁-□DZ 3 position exhaust center: VFR341⁰₁-□E, VFR341⁰₁-□DZ 3 position pressure center: VFR351⁰₁-□E, VFR351⁰₁-□DZ

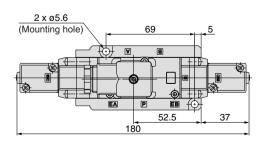


* Other dimensions are the same as the single type.




Non Plug-in: 2 Position Single


2 position single: VFR314⁰₁-□G

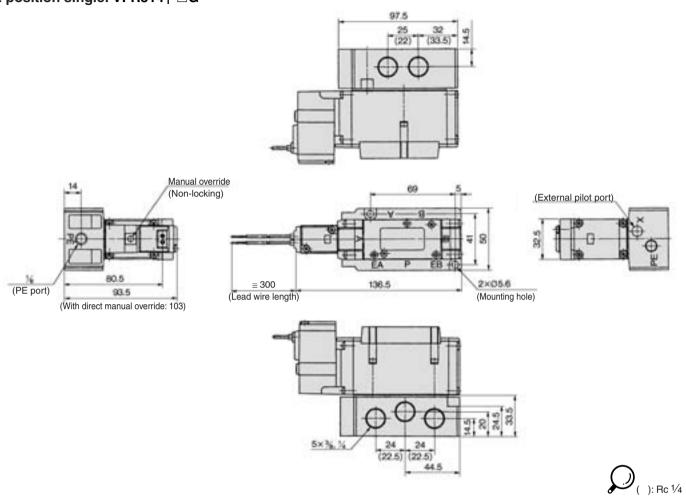


E: Grommet terminal

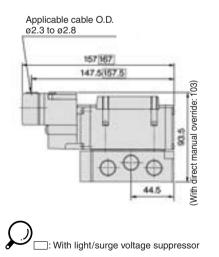

T: Conduit terminal

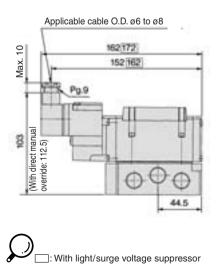

D, Y: DIN terminal

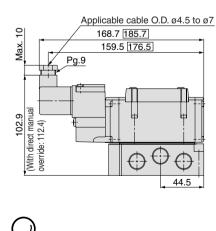

:With light/surge voltage suppressor

SMC

SY

SJ

SV SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ


VFS


VFR

Non Plug-in: 2 Position Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position double: VFR324 1-□G 3 position closed center: VFR334 1-□G

3 position exhaust center: VFR344⁰₁-□G 3 position pressure center: VFR354⁰₁-□G

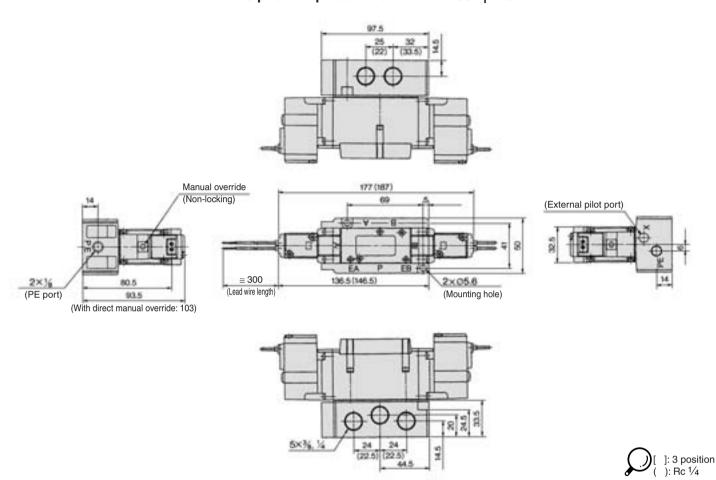

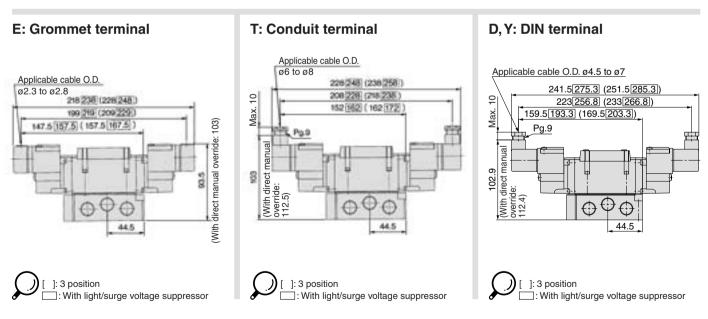

Manifold Specifications

Manifold Specifications

Base mounted	Wiring	Porting specifications A, B port	Port P, EA, EB	size A, B	Stations	Applicable valve model
	With terminal block	A, B port	I, LA, LD	А, Б	2 to 10	valve model
Plug-in type VV5FR3-01□(-Q)	With multi-connector With D-sub connector				2 to 8	VFR3□00-□F(-Q)
Non plug-in type VV5FR3-10(-Q)	Grommet terminal DIN terminal	Side/Bottom	Note) 1/2	¹ / ₄ , ³ / ₈ C8. C10		VFR3□1□-□E VFR3□1□-□D(-Q)
Non plug-in type VV5FR3-40(-Q) Grommet Grommet terminal Conduit terminal DIN terminal				C8, C10	2 to 10	VFR3□4□-□G VFR3□4□-□E VFR3□4□-□T VFR3□4□-□D(-Q)

Note) If silencer is mounted to EA/EB port, use silencer "AN403-04" (O.D. ø27).

How to Order Manifold Assembly

<Example> Plug-in type with terminal block: 6 stations

VV5FR3-01T-061-02 (-Q) 1 set (Manifold base part no.)
, , , , , , , , , , , , , , , , , , , ,
*VFR3100-5FZ (-Q) ······ 3 sets (2 position single part no.)
*VFR3200-5FZ (-Q) 2 sets (2 position double part no.)
*VVFS3000-10A ········ 1 set (Blanking plate)
The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type: 6 stations

VV5FR3-10-061-03 (-Q) ········· 1 set1 set (Manifold base part no.)
*VFR3110-5D (-Q) ······ 5 sets (2 position single part no.)
*VFR3410-5D (-Q) 1 set (3 position exhaust center part no.)
*VVFS3000-R-03-2 ······ 1 set (Individual EXH spacer part no.)
The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ


VFS


VFR


VQ7


Plug-in Type: With Terminal Block

 Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block, corresponding lead wires from power source can be wired at the bottom of terminal block.

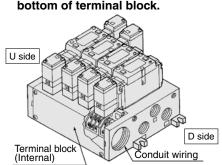

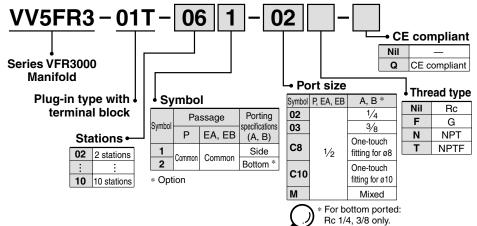

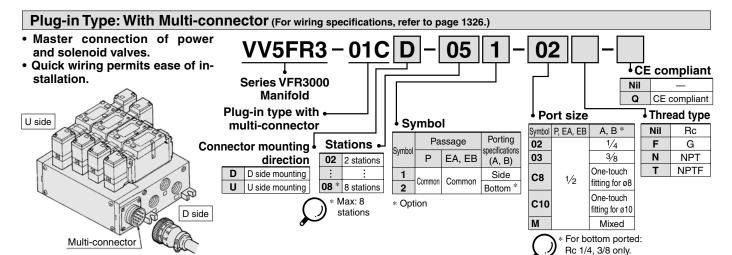

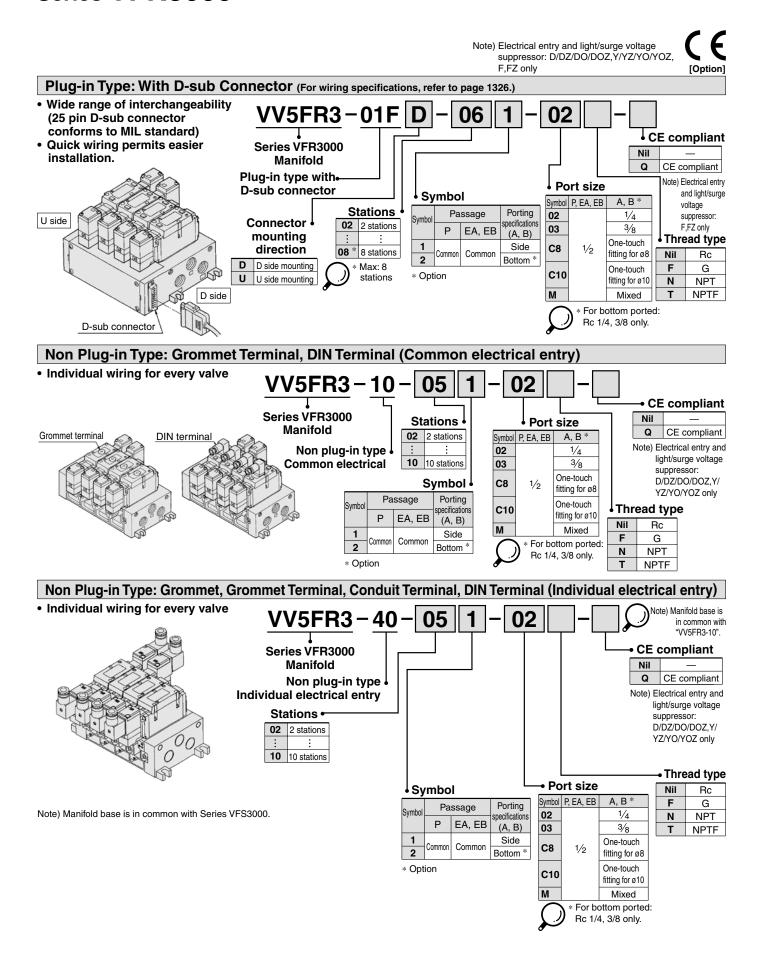


Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.


Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-P-03-1	VVFS3000-P-03-2

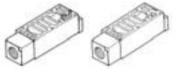

Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-R-03-1	VVFS3000-R-03-2

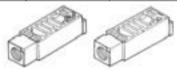

SUP block disk

When supplying manifold with more than two different pressures, high and low, insert a block disk in between stations subjected to different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT636-1A	

EXH block disk

When valve exhaust affects the other stations on the circuit, insert EXH block disk in between stations to separate valve exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	AXT636-1A	




Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-20A-1	VVFS3000-20A-2



Interface regulator

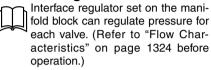

Body	type	Plug-in type	Non plug-in type
P po regu	rt lation	ARBF3050-00-P-1	ARBF3050-00-P-2
A po regu	rt lation	ARBF3050-00-A-1	ARBF3050-00-A-2
B po regu	rt lation	ARBF3050-00-B-1	ARBF3050-00-B-2



SUP stop valve spacer

If SUP stop valve spacer is set, valve can be removed for maintenance without stopping air pressure supply for other valves.


Body type	Plug-in type	Non plug-in type	
Part no.	VVFS3000-37A-1	VVFS3000-37A-2	
	(Height will be 27.5 mm higher		



Blanking plate

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS3000-10A	
$\overline{}$		

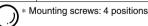

Manifold Option

With exhaust cleaner

Plug-in type/Non plug-in type

- Valve exhaust noise dampening: 35 dB or more.
- Collects oil mist: collecting rate 99.9% or more
- Piping process reduced.



For details, refer to page 1266.

With control unit

Plug-in type/Non plug-in type

- Filter, regulation valve, pressure switch and air release valve are all combined to form one unit.
- Piping processes are eliminated.



For details, refer to page 1269.

SJ

SY SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC VQZ


SQ

VFS

VFR


Manifold: Plug-in Type

With terminal block: VV5FR3-01T-Station 1- Port size

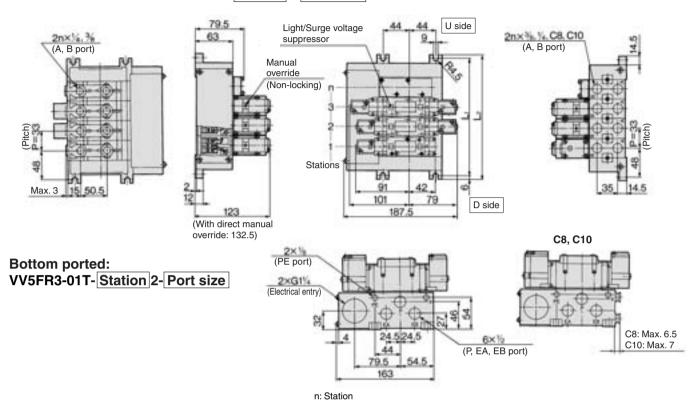


L Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	129	162	195	228	261	294	327	360	393	$L_1 = 33 \times n + 63$
L ₂	141	174	207	240	273	306	339	372	405	L ₂ = 33 x n + 75

With multi-connector: VV5FR3-01CD-Station 1- Port size, VV5FR3-01CU-Station 1- Port size

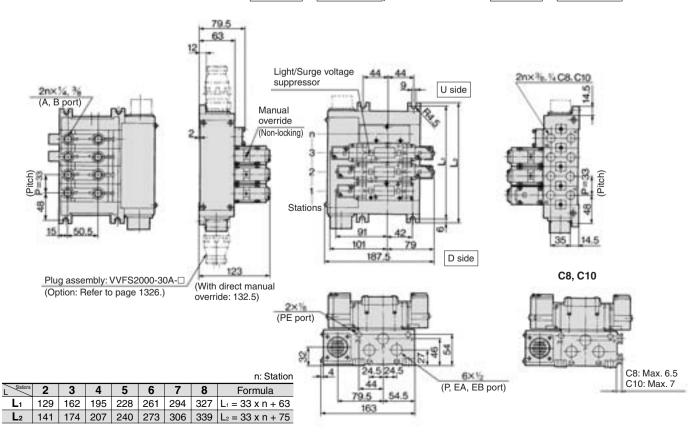

Manifold: Plug-in Type

With D-sub connector: VV5FR3-01FD-Station 1-Port size, VV5FR3-01FU-Station 1-Port size

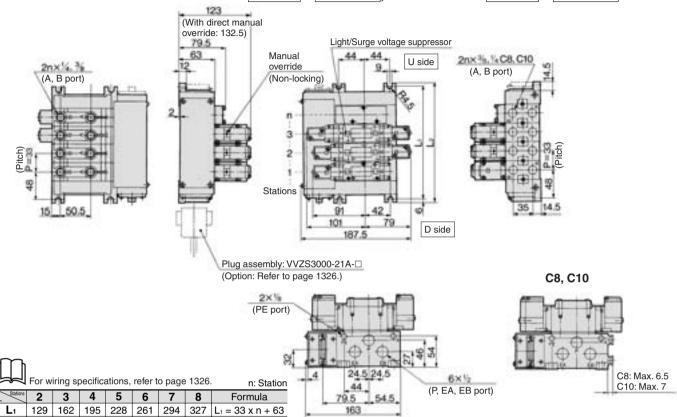

Manifold: Non Plug-in Type


174 207


141

240 273

306 339 L₂ = 33 x n + 75

VV5FR3-10- Station 1- Port size

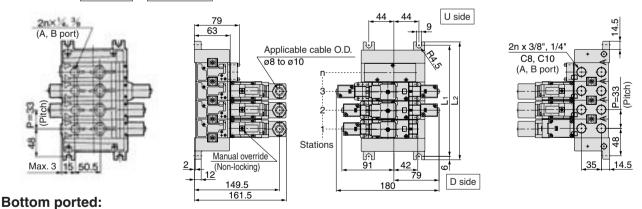

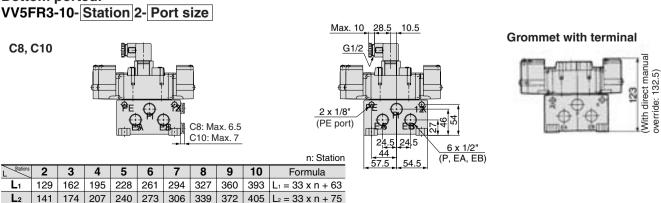

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ


SQ


VFS

VFR

Manifold: Plug-in Type

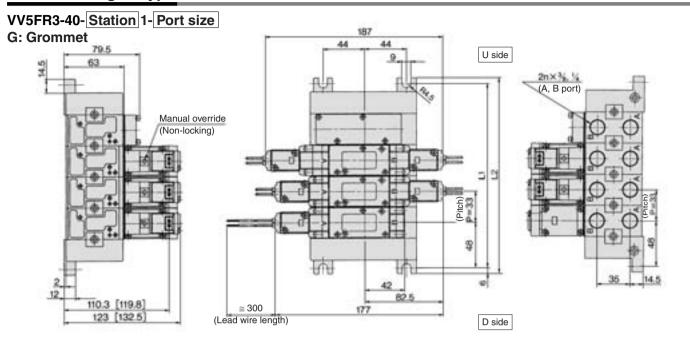

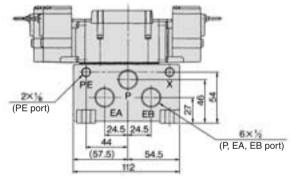


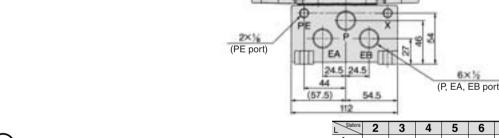




L Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	129	162	195	228	261	294	327	360	393	$L_1 = 33 \times n + 63$
L ₂	141	174	207	240	273	306	339	372	405	$L_2 = 33 \times n + 75$

E: Grommet terminal 228 248 115.5 125 93.5 103.5 105.5 115.5 Applicable cable O.D. ø2.3 to ø2.8 (132.5) 23 : With light/surge voltage suppressor

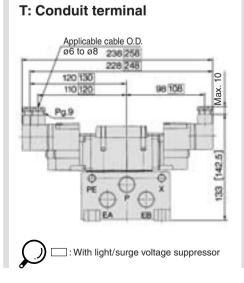


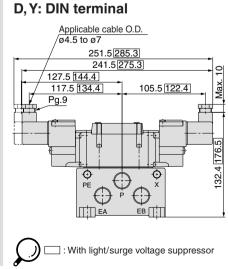


n: Station

Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type


Individual SUP spacer: VVFS3000-P-03-1 (Plug-in type) VVFS3000-P-03-2 (Non plug-in type)

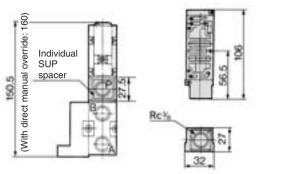

Individual EXH spacer: VVFS3000-R-03-1 (Plug-in type) VVFS3000-R-03-2 (Non plug-in type)

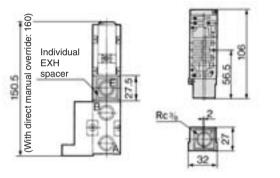


SUP/EXH block disk: AXT636-1A

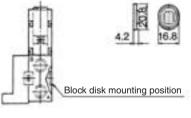





Throttle valve spacer: VVFS3000-20A-1 (Plug-in type) VVFS3000-20A-2 (Non plug-in type)

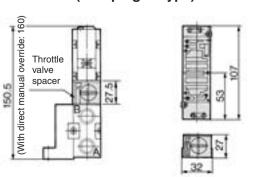


Interface regulator/P port regulation: ARBF3050-00-P-1 (Plug-in type) ARBF3050-00-P-2 (Non plug-in type)

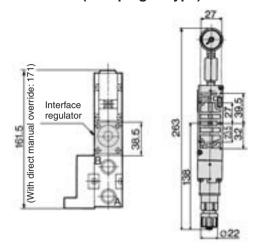

Interface regulator/A port regulation: ARBF3050-00-A-1 (Plug-in type) ARBF3050-00-A-2 (Non plug-in type)

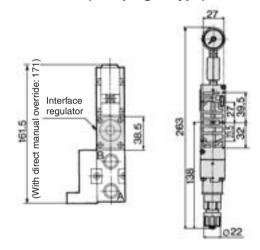

Interface regulator/B port regulation: ARBF3050-00-B-1 (Plug-in type) ARBF3050-00-B-2 (Non plug-in type)

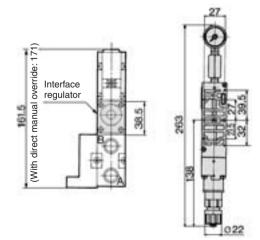

SJ

SY SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ


SQ


VFS

VER VQ7


Manifold with Exhaust Cleaner

- Serves to protect working environment.
- Valve exhaust noise dampening: 35 dB or more.
- Collection rate of drainage and oil mist: 99.9% or more
- · Piping work is reduced.

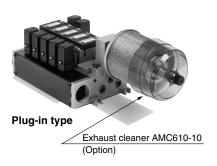

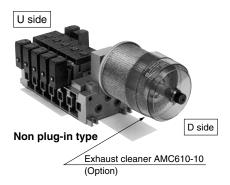

Manifold Specifications Plug-in type: VV5FR3-01□(-Q) Non plug-in type: VV5FR3-10(-Q) Non plug-in type: VV5FR3-40(-Q) Manifold With terminal block DIN terminal Grommet, Grommet terminal With multi-connector Wiring Conduit terminal, DIN terminal Grommet terminal With D-sub connector Applicable VFR3□1□-□D(-Q) VFR3□4□-□G, VFR3□4□-□E VFR3□0□-□F(-Q) valve model VFR3□1□-□E VFR3□4□-□T. VFR3□4□-□D(-Q) Porting Common SUP, Common EXH Side: Rc ¹/₄, ³/₈, C8, C10 Bottom: Rc ¹/₄, ³/₈ (Option) specifications A, B port Rc Side: Rc 1/2 EXH port: Rc 1 P port **Stations** 2 to 10 stations (With multi-connector/D-sub connector: 2 to 8 stations)

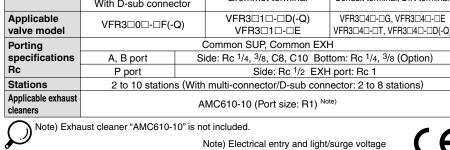

How to Order F,FZ only [Option] VV5FR3 06 03 Series VFR3000 Thread type CE compliant Manifold Nil Rc Base type/ Q CE compliant Ν NPT **Electrical entry** Note) Flectrical entry and

01T	Plug-in type with terminal block				
01C	Plug-in type with multi-connector				
01F	Plug-in type with D-sub connector				
10	Non plug-in type Common electrical entry				
40	Non plug-in type Individual electrical entry				

Connector mounting direction

Symbol	With connector	Applicable base		
Nil	None	01T, 10, 40		
D	D side mounting	01C. 01F		
U	U side mounting	010,016		

00	O Side O	side mounting						
Port size								
Symbol	P, EA, EB	A, B*						
02		1/4						
03		3/8						
C8	1/2	One-touch fitting for ø8						
C10		One-touch fitting for ø10						
М		Mixed						

suppressor: D/DZ/DO/DOZ,Y/YZ/YO/YOZ,

NPTF

Exhaust cleaner

mounting direction

Exhaust cleaner

mounting direction CD D side D side mounting CII II side II side mounting light/surge voltage

YZ/YO/YOZ,F,FZ

suppressor: D/D7/D0/D07 Y/

only

Т

Stations | Symbol

	02	2 stations				
	:	:				
	10 Note)	10 stations				
Note) • Base 01T/10/40: 2 to 10 stations						
- Doos 010/01E	0 to 0 ot	otiono				

Symbol	Pa	ssage	Porting specifications	
Symbol	Р	EA, EB	(A, B)	
1	Camman	Common	Side	
2	Common	Common	Bottom *	

* For bottom ported: Rc 1/4, 3/8

* Option

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations)

VV5FR3-01T-061-03-CD (-Q) ····· 1 set (Manifold base part no.) *VFR3100-5FZ (-Q) 3 sets (2 position single part no.) *VFR3200-5FZ (-Q) 2 sets (2 position double part no.) *VVFS3000-10A 1 set (Blanking plate assembly part no.) *AMC610-10 1 set (Exhaust cleaner part no.) → The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

△\Caution

When using an exhaust cleaner, mount it downwards.

<Example> Non plug-in type: 6 stations

\(\(\text{V}\)\(\text{TPD0.40.0C4.00.0H.}\(\text{O}\) \(\text{dc.t.}\(\text{Maccifold bear work we}\)
VV5FR3-10-061-03-CU (-Q) ······· 1 set (Manifold base part no.)
*VFR3110-5E (-Q) 3 sets (2 position single part no.)
*VFR3210-5E (-Q) 2 sets (2 position double part no.)
*VVFS3000-10A 1 set (Blanking plate assembly part no.)
*AMC610-10 ······ 1 set (Exhaust cleaner part no.)
The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.


When ordering, specify the part nos. in order from the 1st. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



Base 01C/01F: 2 to 8 stations

Refer to Best Pneumatics No. 6 for Exhaust Cleaner details.

Manifold with Exhaust Cleaner: Plug-in Type/Non Plug-in Type

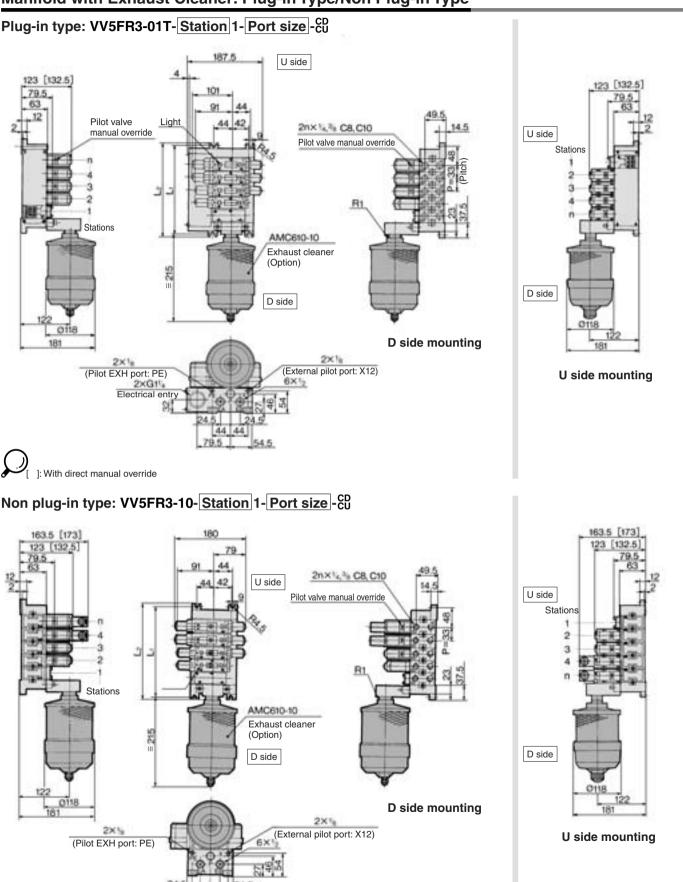

360 | 393 | L₁ = 33 x n + 63 141 174 207 240 273 306 339 372 405 L₂ = 33 x n + 75

n: Station

Formula

6

294 327

129 162

SMC

]: With direct manual override

195 228 261 8

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS


VFR


VQ7

1267

Manifold with Exhaust Cleaner: Non Plug-in Type

Non plug-in type: VV5FR3-40-Station 1-Port size -CU

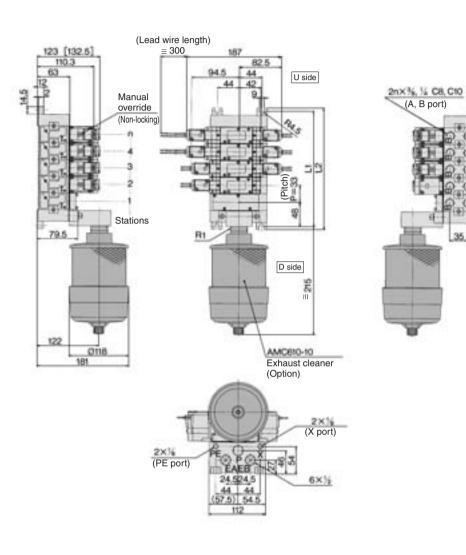

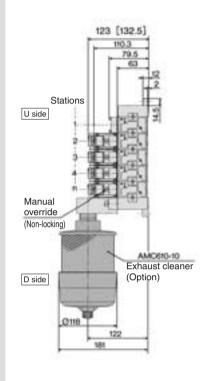


[]: With direct manual override

											II. Station
Ĺ	Stations	2	3	4	5	6	7	8	9	10	Formula
	L ₁	129	162	195	228	261	294	327	360	393	$L_1 = 33 \times n + 63$
	L ₂	141	174	207	240	273	306	339	372	405	$L_2 = 33 \times n + 75$

Manifold with Control Unit -

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.

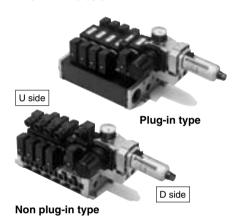

⚠ Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR3-01□(-Q)		Non plug-in type: VV5FR3-10(-Q)	Non plug-in type: VV5FR3-40(-Q)		
Wiring	With terminal block With multi-connector With D-sub connector		DIN terminal Grommet terminal	Grommet, Grommet terminal Conduit terminal, DIN terminal		
Applicable valve model	VFR3□0□-□F(-Q)		VFR3□1□-□D(-Q) VFR3□1□-□E	VFR3□4□-□G, VFR3□4□-□E VFR3□4□-□T, VFR3□4□-□ ^D _Y (-Q)		
Douting	Common SUP, Common EXH					
Porting specifications	A, B port Si		ide: Rc ¹ / ₄ , ³ / ₈ , C ₈ , C ₁₀ Bottom: Rc ¹ / ₄ , ³ / ₈ (Option)			
specifications	P, EA, EB port		Side: Rc ¹ / ₂			
Stations	2 to 10 (With multi-connector/D-sub connector: 2 to 8) *					

* Including station of control unit

Control Unit Specifications

	<u> </u>					
Air filter (With auto-drain/With manual drain)						
Filtration degree	5 μm					
Regulator						
Set pressure	0.05 to 0.85 MPa					
(Outlet pressure)	0.05 to 0.65 MPa					
Pressure switch						
Set pressure range: OFF	0.1 to 0.6 MPa					
Differential	0.08 MPa					
Contact	1a					
Indicator light	LED (RED)					
Max. switch capacity	2 VA AC, 2 W DC					
Max. operating	24 VAC, DC or less: 50 mA					
current	100 VAC, DC: 20 mA					
Inside voltage drop	4 V or less					
Air release valve	(Single only)					
Operating	0.2 to 0.9 MPa					
pressure range	0.2 to 0.9 MFa					

Control Unit/Option

Air release	<plug-in type=""> VVFS3000-24A-1R (D side mounting)</plug-in>					
valve spacer	<non plug-in="" type=""> VVFS3000-24A-2R (D side mounting)</non>					
Pressure (2) switch	IS1000P-2-1					
Diametria a	For filter regulator	MP2-3				
Blanking plate	For pressure switch	MP3-2				
piate	For air release valve	VVFS3000-24A-10				
Filter element	INA-13-8	54-12-5B				

Note 1) Combining valve "VFR31□□" (single) and release valve spacer makes it possible to use this as an air

release valve.

Note 2) Pressure switch cannot be mounted later on non plug-in type.

VQC

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ


VQ4

VQ5

VQZ

SQ VFS

VFR

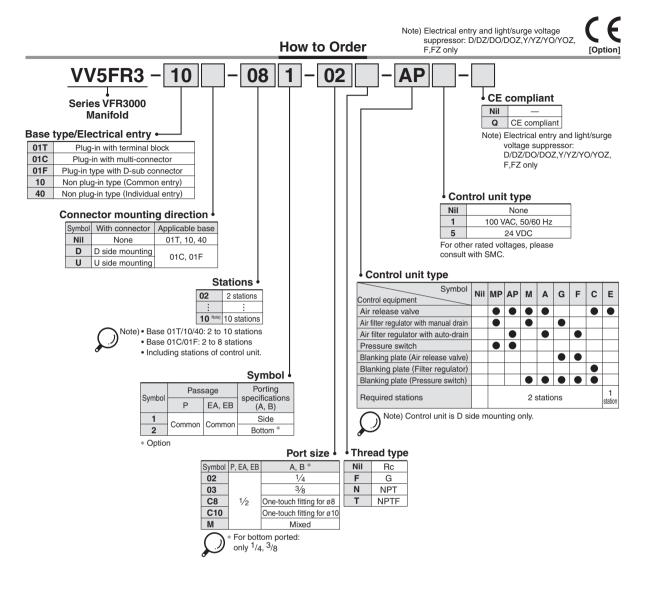

How to Order Manifold Assembly

<Example> Plug-in type with terminal block

The 1st and 2nd station are used for control unit mounting.

When ordering, specify the part nos. in order from the 3rd. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type

VV5FR3-10-061-03-A5 (-Q) 1 set (Manifold base part no.)

*VFR3110-5D (-Q) 4 sets (2 position single part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


The 1st and 2nd station are used for control unit mounting. When ordering, specify the part nos. in order from the 3rd. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Manifold with Control Unit: Plug-in Type/Non Plug-in Type

Plug-in type: **Example for manifold** VV5FR3-01T- Station 1- Port size -AP Voltage of air release valve Individual EXH spacer A(VVFS3000-R-03-1) B EAPEB 91 Individual SUP spacer A (VVFS3000-P-03-1) B 2nx %, % C8, C10 Pilot valve manual override U side SJ SY Light Control unit SV Pressure switch Z.W Pressure switch Air release valve ØEN, M P₂ Air release valve SYJ Filter regulator 190: -MP) SZ D side EA PEB VP4 **S0700** (Po port) (External pilot port) VQ VQ4 (Pilot EXH port: PE) VQ5 2XGT Electrical entry VQC]: With direct manual override VQZ

Non plug-in type:


VV5FR3-10- Station 1- Port size -AP Voltage of air release valve

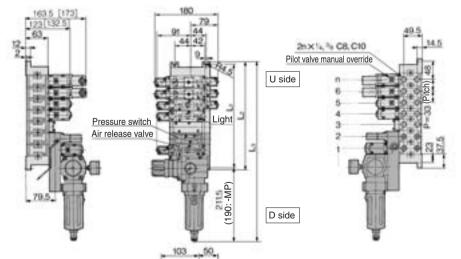

(Po port)
(External pilot port)

SMC

Example for manifold

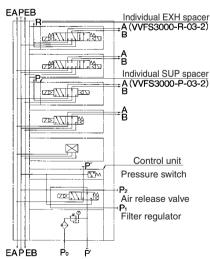

Stations	3	4	5	6	7	8	9	10	Formula
L ₁	162	195	228	261	294	327	360	393	$L_1 = 33 \times n + 63$
L ₂	174	207	240	273	306	339	372	405	$L_2 = 33 \times n + 75$
L ₃ (MP)	363	396	429	462	495	528	561	594	L ₃ = 33 x n + 264
L ₃ (AP)	384.5	417.5	450.5	483.5	516.5	549.5	582.5	615.5	$L_3 = 33 \times n + 285.5$

l: With direct manual override

(Pilot EXH port: PE)

1271

n: Station


SQ


VFS

VFR

Manifold with Control Unit: Non Plug-in Type

Non plug-in type: VV5FR3-40-Station 1-Port size -AP Voltage of air release valve

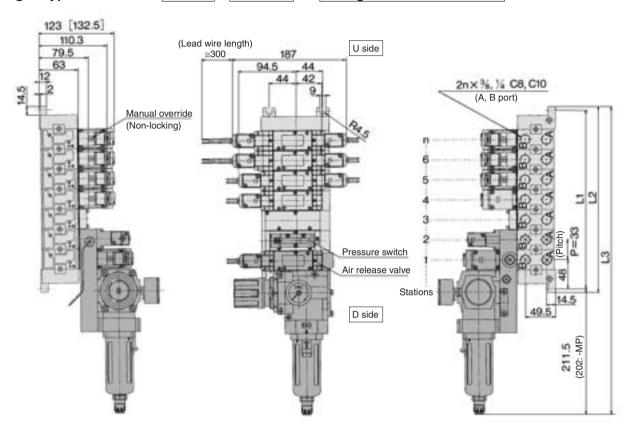


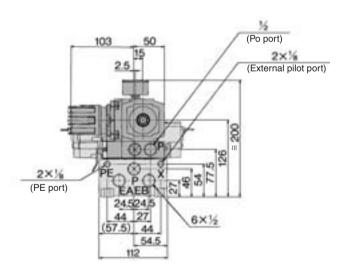

n: Station


Stations	3	4	5	6	7	8	9	10	Formula
L ₁	162	195	228	261	294	327	360	393	$L_1 = 33 \times n + 63$
L ₂	174	207	240	273	306	339	372	405	L ₂ = 33 x n + 75
L ₃ (MP)	363	396	429	462	495	528	561	594	L ₃ = 33 x n + 264
L ₃ (AP)	384.5	417.5	450.5	483.5	516.5	549.5	582.5	615.5	L ₃ = 33 x n + 285.5



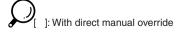



Manifold Base Construction: Plug-in Type/Non Plug-in Type

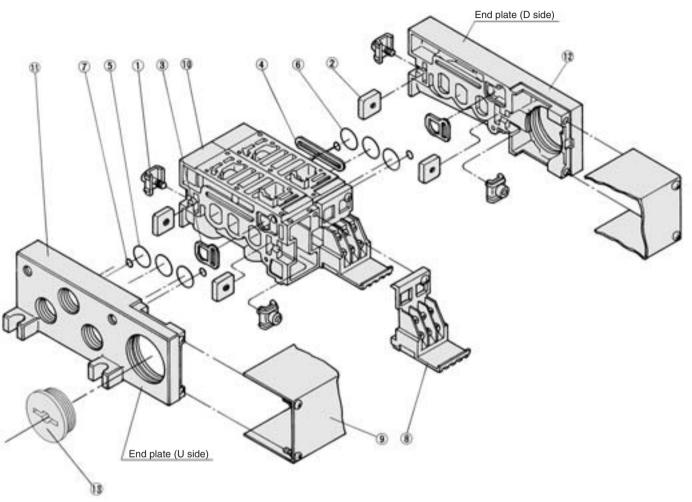


Replacement Parts

No.	Description	Material	Part no.				
1	Connection fitting A	Steel	VVFS3000-5-1A				
2	Connection fitting B	Steel	VVFS3000-5-2				
3	Gasket	NBR	VVFS3000-7-1				
4	Gasket	NBR	VVFS3000-8				
5	O-ring	NBR	19.8 x 16.6 x 1.6 (for end plate)				
6	O-ring	NBR	20 x 16 x 2 (for manifold block)				
7	O-ring	NBR	6.2 x 3 x 1.6				
8	Terminal assembly	_	VVFS3000-6A				
9	Junction cover assembly	_	For 01T VVFS3000-4A-Stations				
13	Rubber plug	NBR	AXT336-9				

Replacement Parts: Sub Assembl

	N
())	Note) Manifold Base/Construction: Plug-in type
الأحد	Note) Manifold Base/Construction: Plug-in type with terminal block.

No.	Description Assembly part no.		Component parts	Applicable manifold base
10	Note)	VVFS3000-1A-1-03 C8 C10	Manifold block ®, Terminal ®, Connection bracket ①, ②, Gasket ③, ④, O-ring ⑥, ⑦, Receptacle assembly	Plug-in type
10	Manifold block assembly	VVFS3000-1A-2-03 02 03 03 010	Manifold block (9), Connection bracket (1), (2), Gasket (3), (4), O-ring (6), (7)	Non plug-in type
11	End plate (U side) assembly	VVFS3000-2A-1	End plate (U) ①, Connection bracket ①, ②, Gasket ④, O-ring ⑤, ⑦	Plug-in type
"	End plate (O side) assembly	VVFS3000-2A-2	End plate (U) ①, Connection bracket ①, ②, Gasket ④, O-ring ⑤, ⑦	Non plug-in type
12	End plate (D side) assembly	VVFS3000-3A-1	End plate (D) 12, Connection bracket 1, 2, Gasket 3	Plug-in type
12	End plate (D side) assembly	VVFS3000-3A-2	End plate (D) 12, Connection bracket 1, 2, Gasket	Non plug-in type

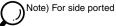

^{*} Contact SMC for CE-compliant products.



1273

SJ SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ

VFS

VFR

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Series VFR4000





Note) Applicable only for DIN terminal and plug-in types.

For details, refer to "How to Order".





Non plug-in type

JIS Symbol			
2 position	3 position		
Single	Closed center		
(A)(B)	(A)(B)		
(EA)(P)(EB)	4 2 5 1 3 (EA)(P)(EB)		
Double	Exhaust center		
(A)(B)	(A)(B)		
(EA)(P)(EB)	4 2 5 1 3 (EA)(P)(EB)		
	Pressure center		
	(A)(B) 4 2 2 1 3 1 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		

Standard Specifications

	iidaid Opoc					
	Fluid			Air		
suc	Operating 2 position sin		gle/3 position	0.2 to 0.9 MPa		
atic	pressure range	2 position double		0.	1 to 0.9 MPa	
fica	Ambient and fl	luid tempe	rature	-10 to 50°C (No	freezing. Refer to page 5.)	
specifications	Lubrication				Non-lube ⁽¹⁾	
	Manual overric	de		Non-le	ocking push type	
Valve	Mounting orie	ntation		l	Jnrestricted	
Val	Shock/Vibration	on resistan	ce	300/50 m/s ² (2)		
,	Enclosure			Dustproof		
us	Coil rated volta	age		100, 200 VAC (50/60 Hz), 24 VDC		
atio	Allowable volta	age fluctua	tion	−15 to −10% of rated voltage		
ifica	Apparent power	or (AC) (3)	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz		
эec	Apparent powe	ei (AC) ···	Holding	3.4 VA (2.1 W)/5	60 Hz, 2.3 VA (1.5 W)/60 Hz	
y s	Power consumption (DC) (3)				1.8 W	
icit				Plug-in type	Conduit terminal	
Electricity specifications	Electrical entry			Non plug-in type	Grommet, Grommet terminal Conduit terminal, DIN terminal	

Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Pilot type		External pilot Note)			
Manual	Main valve	Direct manual override			
override	Pilot valve	Non-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)			
Coil rated	voltogo	110 to 120, 220, 240 VAC 50/60 Hz			
Con rateu	voitage	12 VDC			
Porting specifications		Bottom ported			
Option		With light/surge voltage suppressor			

Note) Operating pressure: 2 position 0 to 0.9 MPa 3 position 0.15 to 0.9 MPa Pilot pressure: 2 position single 0.2 to 0.9 MPa 2 position double 0.1 to 0.9 MPa 3 position 0.5 x P + 0.1 to 0.9 MPa (P: Operating pressure)

Model

IVIO	Wodel												
	Model			Flow characteristics (2)					Max. ⁽³⁾	(4)	(5)		
Type of actuation				Port (1)		1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			Response	Mass (5)
		Plug-in	Non plug-in	size	C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	cycle (Hz)	time (ms)	(kg)
E	Cincle VED4	VED410	VFR411□	3/8	13	0.30	3.2	14	0.28	3.4	5	50 or less	1.10 (1.04)
position	Single	VFR410□	VFR414□	1/2	15	0.30	3.8	14	0.30	3.8	3	50 01 1655	<1.04>
ĕ	Double	le VFR420 □	VFR421□	3/8	14	0.31	3.4	14	0.26	3.4	5	50 or less	1.20 (1.16)
N			VFR424□	1/2	15	0.30	4.0	14	0.30	3.7	3	50 01 1655	<1.16>
	Closed	VED400	VFR431□	3/8	13	0.32	3.2	13	0.25	3.0	3	50 or less	1.20 (1.16)
<u> </u>	center	VFR430□	VFR434□	1/2	14	0.28	3.5	13	0.29	3.4	3	50 01 1655	<1.16>
position	Exhaust	VFR440□	VFR441□	3/8	13	0.31	3.2	14 [13]	0.32 [0.30]	3.6 [3.2]	,	70 or less	1.20 (1.16)
ĕ	center	VFR440	VFR444□	1/2	14	0.30	3.7	14 [13]	0.32 [0.30]	3.6 [3.2]	3	70 or less	<1.16>
က	Pressure	VED450	VFR451□	3/8	13 [5.0]	0.27 [0.42]	3.2 [1.3]	13	0.28	3.1		70 04 1000	1.20 (1.16)
		center VFR450	VFR454□	1/2	15 [5 3]	0 22 [0 42]	3 7 [1 5]	13	0.28	3.3	3	70 or less	(1.16)



Note 1) EA, EB port: Rc 3/8

Note 2) []: Normal position


Note 3) Min. operating frequency is once in 30 days.

Note 4) Based on dynamic performance test, JIS B 8375-1981. (0.5 MPa, Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 5) For VFR4 \square 00- \square FZ- $^{03}_{04}$, (): VFR4 \square 10- DZ \square - $^{03}_{04}$, < >: VFR4 \square 40- \square G- $^{03}_{04}$



5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

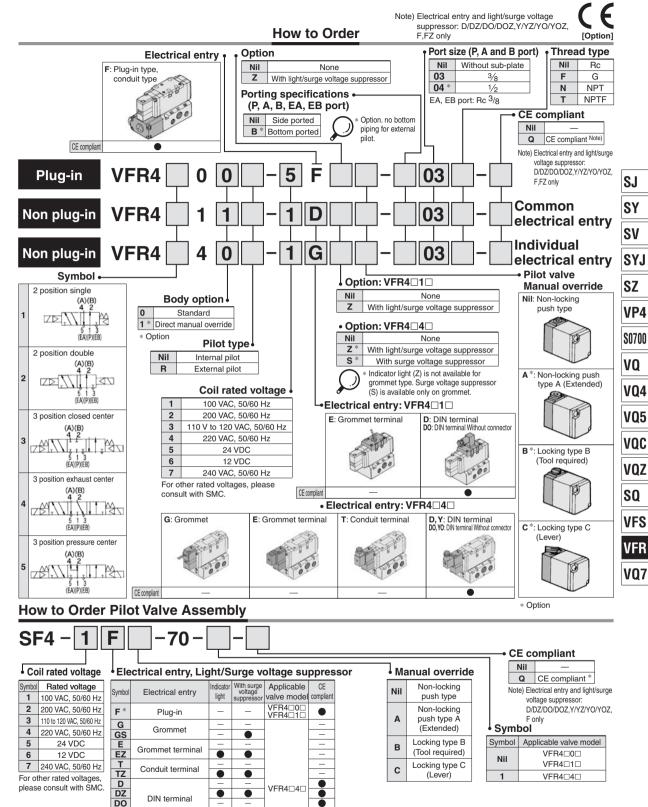

VFR4□0□, VFR4□1□: Pilot valve assembly is

all plug-in (F).


DOZ Y YZ

YO YOZ

DIN terminal (DIN43650B type)

Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

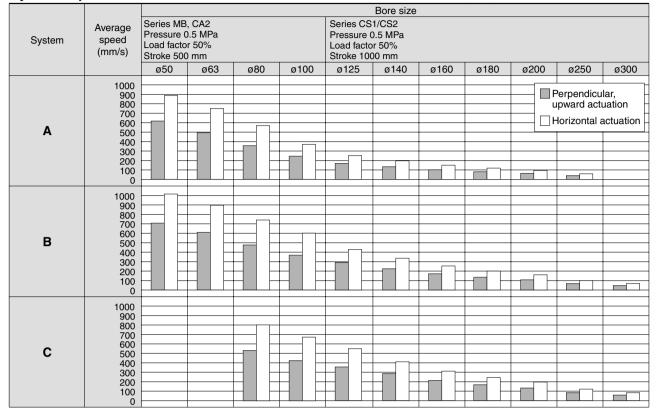




- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- \ast Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

System Components


System	Solenoid valve Speed controller Silencer		Silencer	SPG (Steel pipe) dia. x Length
A	Series VFR4000 Rc ^{3/} 8	AS4000-03 $(S = 21 \text{mm}^2)$	AN300-03 (S = 60mm ²)	10A x 1 m
В	Series VFR4000 Rc ^{3/} 8	AS420-03 (S = 73mm ²)	AN300-03 (S = 60mm ²)	10A x 1 m
С	Series VFR4000 Rc ¹ / ₂	AS420-04 (S = 97mm²)	AN400-04 (S = 90mm ²)	15A x 1 m

How to Order Sub-plate Assembly

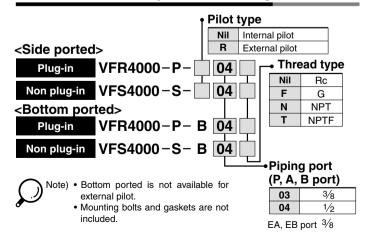




Construction

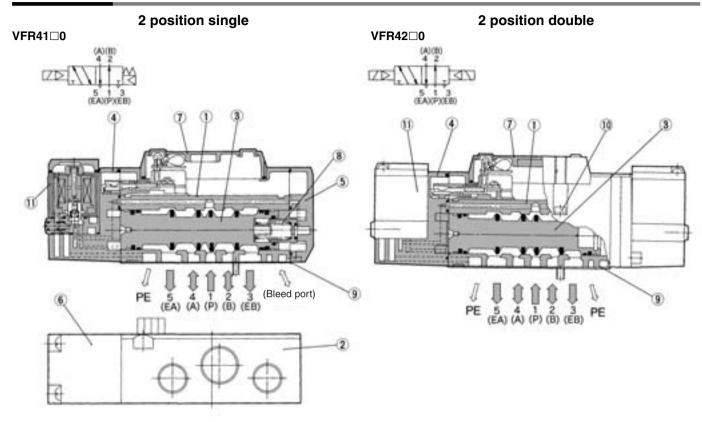

3 position closed center/exhaust center/pressure center




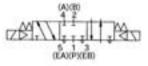


Exhaust center: VFR44□0



Pressure center: VFR45□0

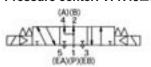

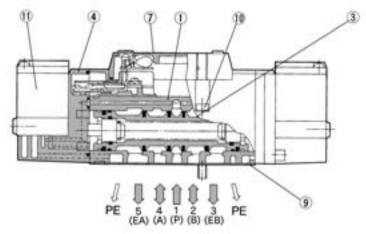

This figure shows a closed center type.

Component Parts

component and								
No.	Description	Material	Note					
1	Body	Aluminum die-casted	Platinum silver					
2	Sub-plate	Aluminum die-casted	Platinum silver					
3	Spool valve	Aluminum, NBR						
4	Adapter plate	Resin	Black					

Component Parts

No.	Description	Material	Note
5	End plate	Resin	Black
6	Junction cover	Resin	
7	Light cover	Resin	
8	Spool spring	Stainless steel	

Replacement Parts

Nia	Description	Material	Part no.				
No.	Description	Material	VFR41□□	VFR42□□	VFR43□□/44□□/45□□		
9	Gasket	NBR	VFR4000-32-3	VFR4000-32-3	VFR4000-32-3		
10	Hexagon socket head screw	Steel	AXT335-1-11 (M4 x 40)	AXT335-1-11 (M4 x 40)	AXT335-1-11 (M4 x 40)		
11	Pilot valve assembly	 Refer to "How to Order Pilot Valve Assembly" on page 1275. 					
_	Sub-plate assembly		Refer to "How to Order Sub-plate Assembly" on page 1276.				



SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ


SQ


VFS


VFR

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR410⁰₁-□F

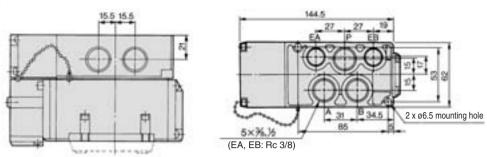

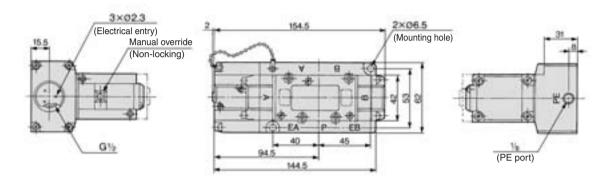

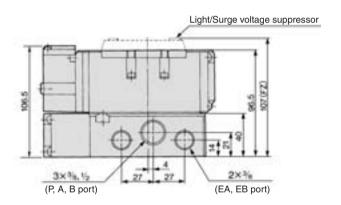


2 position double: VFR420⁰₁-□F

3 position closed center: VFR430⁰₁-□F


3 position exhaust center: VFR440 1-□F

3 position pressure center: VFR450⁰₁-□F

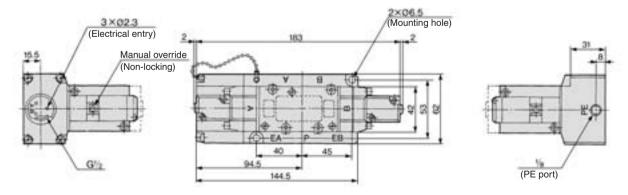

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series VFR4000


Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

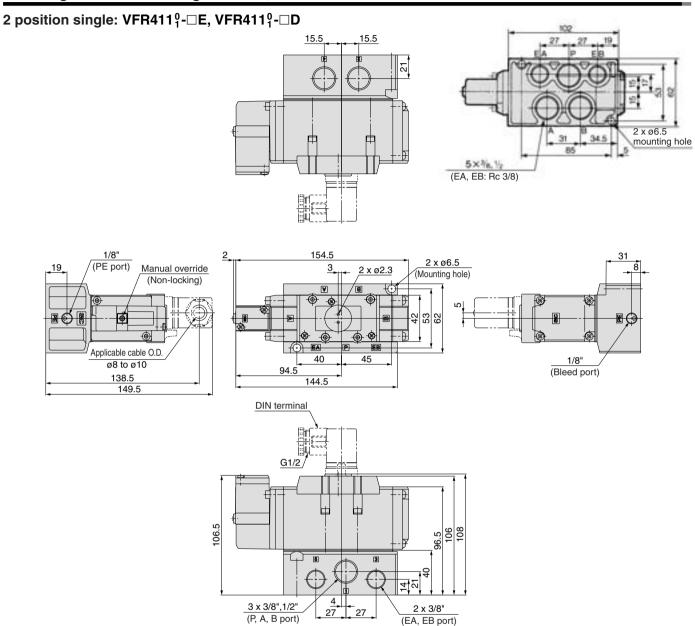


2 position double: VFR421 1-□E, VFR421 1-□D

3 position closed center: VFR431⁰₁-□E, VFR431⁰₁-□D 3 position exhaust center: VFR441⁰₁-□E, VFR441⁰₁-□D

3 position pressure center: VFR451 1-□E, VFR451 1-□D

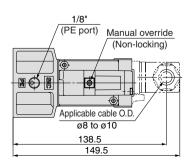

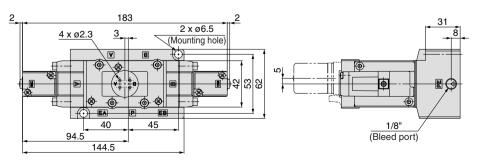

* Other dimensions are the same as the single type.



SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ

SQ

VFS

VFR


Non Plug-in: 2 Position Single

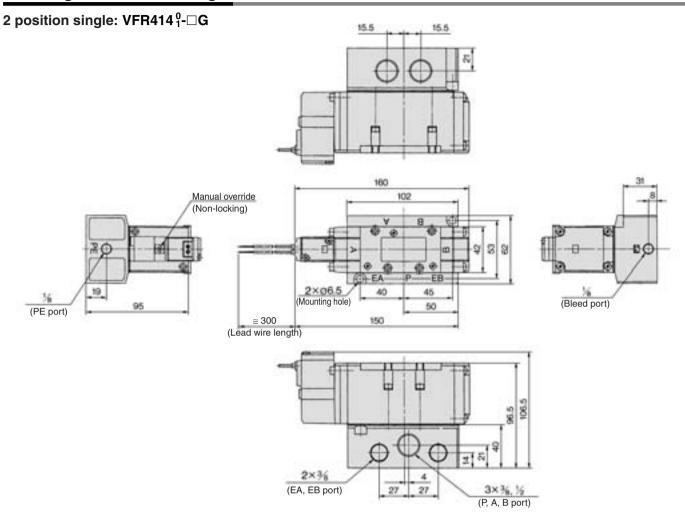


Applicable cable O.D. ø2.3 to ø2.8

: With light/surge voltage suppressor

E: Grommet terminal

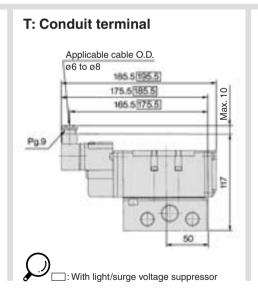

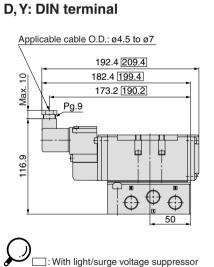


Non Plug-in: 2 Position Double, 3 Position Closed Center/Exhaust Center/Pressure Center


2 position double: VFR424⁰₁-□G 3 position closed center: VFR434⁰₁-□G


on position exhaust center: VFR44410 - □G

on pressure center: VFR4541-□G

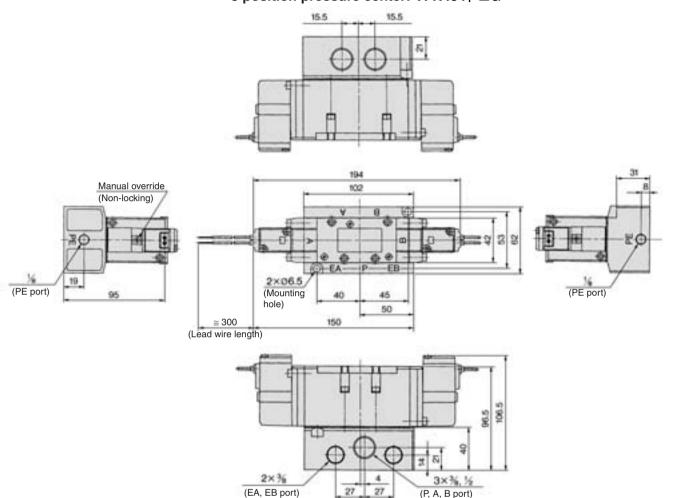

E: Grommet terminal Applicable cable O.D. ø2.3 to ø2.8 235 [255] 216 236 106.5 50 : With light/surge voltage suppressor

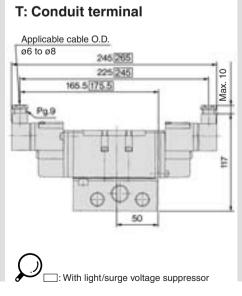

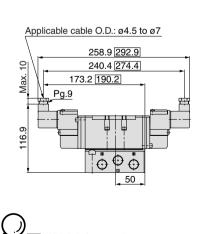

D: DIN terminal

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7

: With light/surge voltage suppressor

Manifold Specifications

Manifold Specifications

Base model	Wiring	Porting specifications	tions Port size		Stations	Applicable
Dase model	vviring	A, B port	P, EA, EB	A, B	Stations	valve model
Plug-in type	With terminal block				2 to 10	
VV5FR4-01□(-Q)	With multi-connector			3/8, 1/2	0.4- 0	VFR4□0□-□F(-Q)
VV3FN4-01□(-Q)	With D-sub connector				2 to 8	
Non plug-in type	 Grommet terminal 					VFR4□1□-□E
VV5FR4-10(-Q)	DIN terminal	Side/Bottom	1/2			VFR4□1□-□D(-Q)
	Grommet				2 to 10	VFR4□4□-□G
Non plug-in type	 Grommet terminal 					VFR4□4□-□E
VV5FR4-40(-Q)	 Conduit terminal 					VFR4□4□-□T
	 DIN terminal 					VFR4□4□-□D(-Q)

How to Order Manifold Assembly

<Example> Plug-in type with terminal block: 6 stations

VV5FR4-01T-061-03 (-Q) ··········· 1 set (Manifold base part no.)

*VFR4100-5FZ (-Q) ··········· 3 sets (2 position single part no.)

*VFR4200-5FZ (-Q) ··········· 2 sets (2 position double part no.)

*VVFS4000-10A ············ 1 set (Blanking plate assembly part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

<Example> Non plug-in type: 6 stations

Valve arrangement is counted from the D side.


When ordering, specify the part nos. in order from the 1st. station in the D side.


When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



Plug-in Type: With Terminal Block


 Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

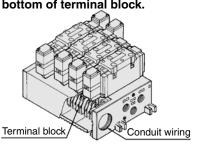


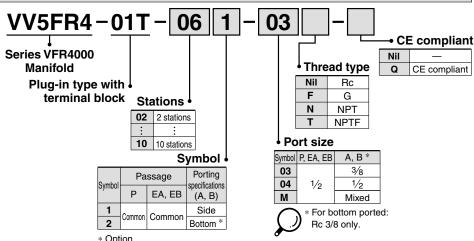


Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)

Master connection of power and solenoid valves.

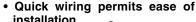

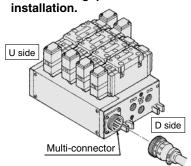

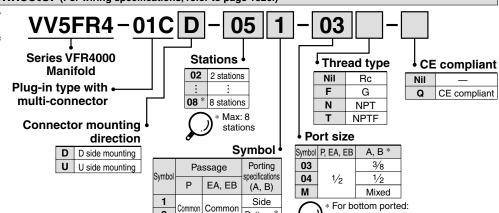


Bottom

Rc 3/8 only.

2

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

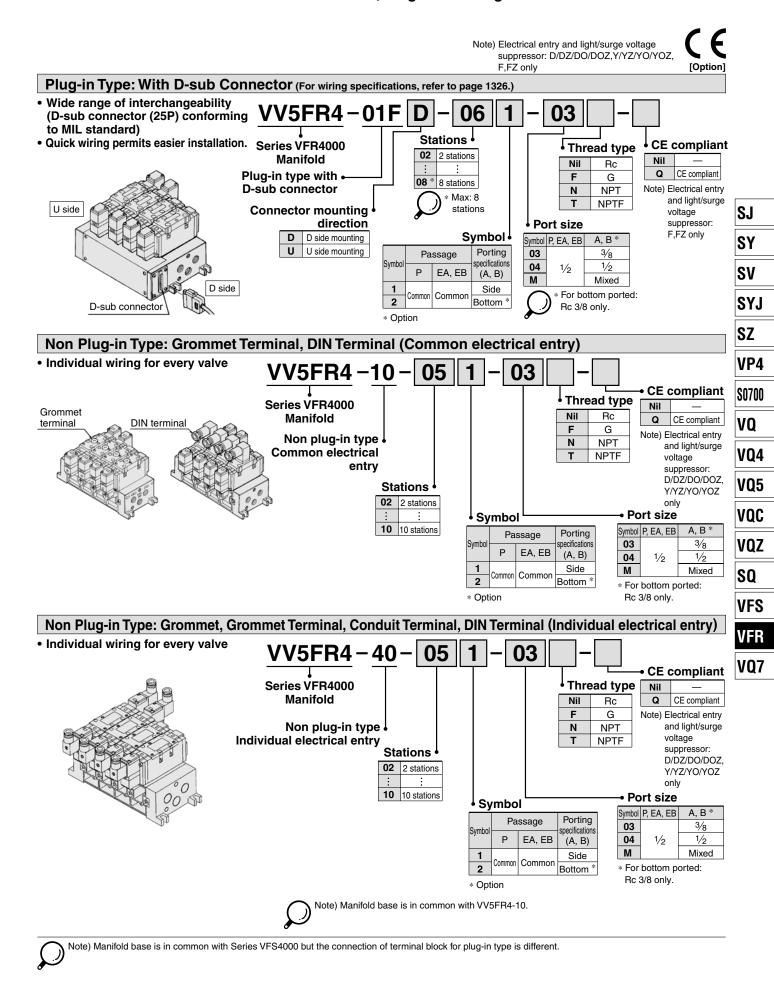



Manifold/Option Parts Assembly

Individual SUP spacer

Setting individual SUP spacer on the manifold block enables individual SUP port for each valve.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-P-03-1	VVFS4000-P-03-2



Individual EXH spacer

Setting individual EXH spacer on the manifold block enables individual EXH port for each valve.

Body type	Plug-in type	Non plug-in type		
Part no.	VVFS4000-R-04-1	VVFS4000-R-04-2		



SUP block disk

When supplying manifold with more than two different pressures, high and low, insert a block disk in between stations subjected to plug-in different pressures.

Body type	Plug-in type	Non plug-in type			
Part no.	AXT634-10A				

EXH block disk

When valve exhaust affects the other stations on the circuit, insert EXH block disk in between stations to separate valve exhaust.

Body type	Plug-in type	Non plug-in type			
Part no.	AXT634-11A				






EXH block disk

SUP block disk

Throttle valve spacer

Needle valve set on the manifold block can control cylinder speed by throttling exhaust.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS4000-20A-1	VVFS4000-20A-2

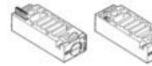


Interface regulator



Interface regulator set on the manifold block can regulate pressure for each valve. (Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF4050-00-P-1	ARBF4050-00-P-2
A port regulation	ARBF4050-00-A-1	ARBF4050-00-A-2
B port regulation	ARBF4050-00-B-1	ARBF4050-00-B-2

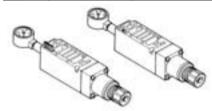

Blanking plate


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type		
Part no.	VVFS40	000-10A		

Manifold Option

With exhaust cleaner

- Valve exhaust noise dampening: 35 dB or more.
- Collects oil mist: collecting rate 99.9% or more
- · Piping process reduced.

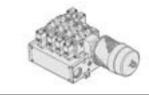


For details, refer to page 1289.

With control unit

Plug-in type/Non Plug-in type


- Filter, regulation valve, pressure switch and air release valve are all combined to form one unit.
- Piping processes are eliminated.

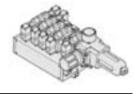




5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Manifold/Plug-in Type

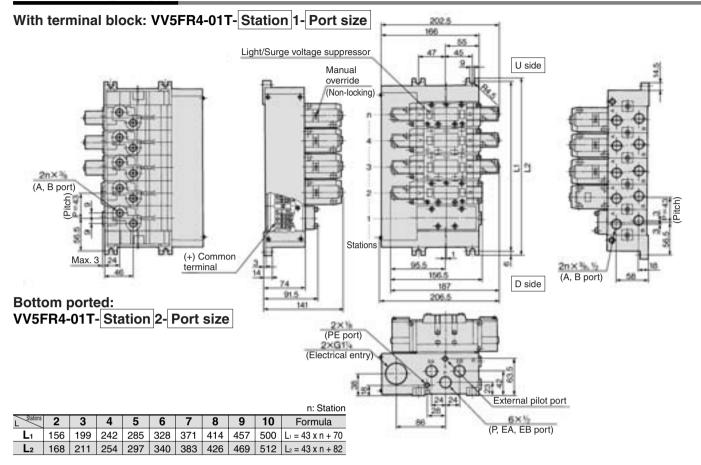

With multi-connector: VV5FR4-01CD-Station 1-Port size, VV5FR4-01CU-Station 1-Port size

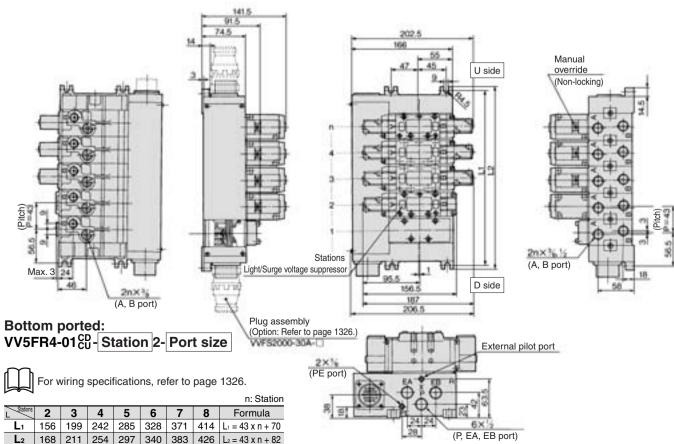

1285

SY

SJ

SV

SYJ SZ

VP4

S0700

VQ

VQ4

VQ5


VQC VQZ

SQ


VFS

VFR


Manifold/Plug-in Type

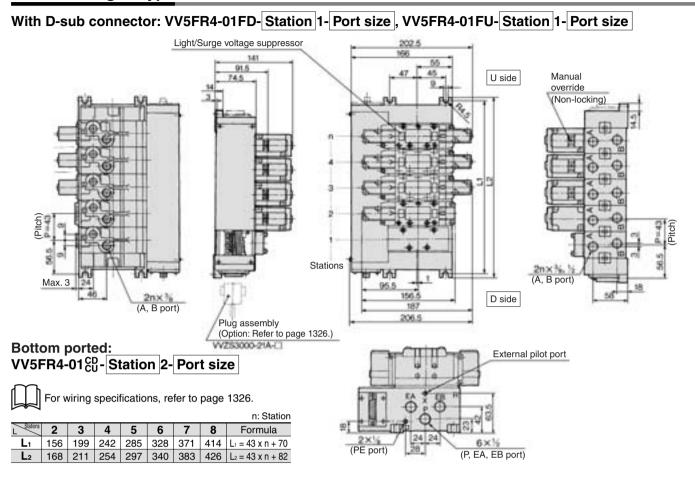

Manifold/Non Plug-in Type

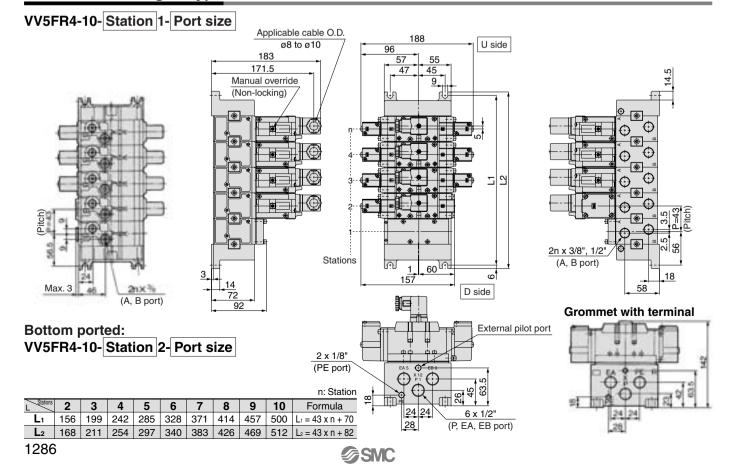


Manifold/Non Plug-in Type

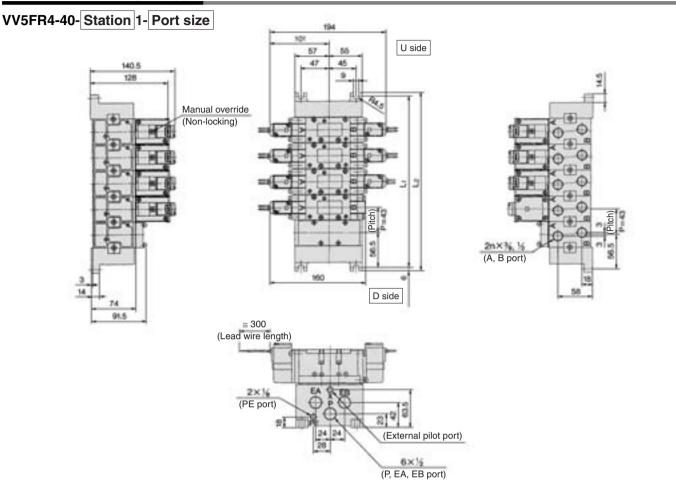


										n: Stations
Stations	2	3	4	5	6	7	8	9	10	Formula
L ₁	156	199	242	285	328	371	414	457	500	$L_1 = 43 \times n + 70$
L ₂	168	211	254	297	340	383	426	469	512	$L_2 = 43 \times n + 82$


E: Grommet terminal

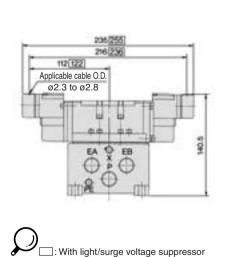

T: Conduit terminal

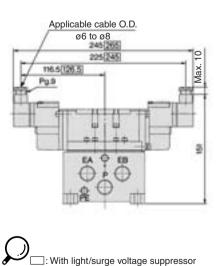

D, Y: DIN terminal

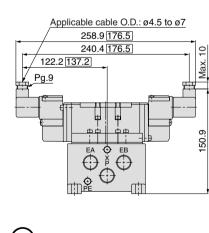



SJ SY

SV

SYJ

SZ

VP4

\$0700 **VQ**

VQ4

VQ5

VQC VQZ


SQ

VFS


VFR

Manifold/Option Parts Assembly: Plug-in Type/Non Plug-in Type


Individual SUP spacer: VVFS4000-P-03-1 (Plug-in type) VVFS4000-P-03-2 (Non plug-in type)

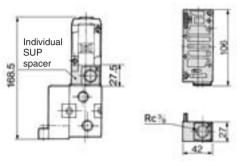


Individual EXH spacer: VVFS4000-R-04-1 (Plug-in type) VVFS4000-R-04-2 (Non plug-in type)

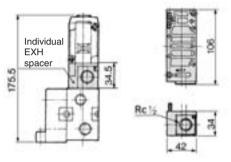


SUP block disk: AXT634-10A EXH block disk: AXT634-11A

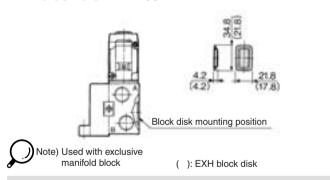


Throttle valve spacer: VVFS4000-20A-1 (Plug-in type) VVFS4000-20A-2 (Non plug-in type)

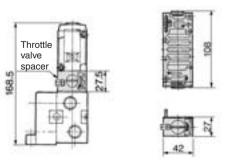


Interface regulator/P port regulation: ARBF4050-00-P-1 (Plug-in type) ARBF4050-00-P-2 (Non plug-in type)

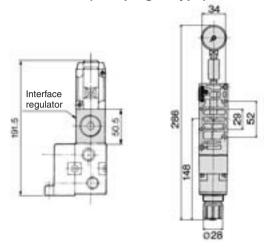

Interface regulator/A port regulation: ARBF4050-00-A-1 (Plug-in type) ARBF4050-00-A-2 (Non plug-in type)

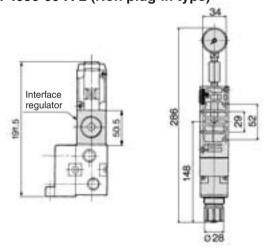

Interface regulator/B port regulation: ARBF4050-00-B-1 (Plug-in type) ARBF4050-00-B-2 (Non plug-in type)

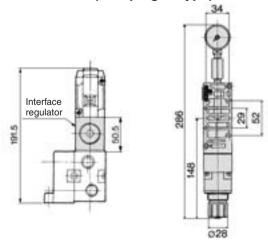

Dimensions: FZ type dimensions of direct manual style are also the same.




Manifold with Exhaust Cleaner

- Serves to protect working environment.
- Valve exhaust noise dampening: 35 dB or more.
- Collection rate of drainage and oil mist: 99.9% or more.
- Piping work is reduced.

Manifold Specifications

Manifold	Plug-in type: VV5FR4-01□(-Q)		Non plug-in type: VV5FR4-10(-Q)	Non plug-in type: VV5FR4-40(-Q)		
Wiring	With terminal block With multi-connector With D-sub connector		DIN terminal Grommet terminal	Grommet, Grommet terminal, Conduit terminal, DIN terminal		
Applicable valve model	VFR4□0□-□F(-Q)		VFR4□1□-□D(-Q) VFR4□1□-□E	VFR4□4□-□G, VFR4□4□-□E VFR4□4□-□T, VFR4□4□-□D(-Q)		
Doubling	Common SUP, Common EXH					
Porting specifications	A, B port		Side: 3/8, 1/2 Bottom	n: ³ / ₈ (Option)		
specifications	P port	P port Side: 1/2 EXH 1 11/2				
Stations	2 to 10 stations (With multi-connector/D-sub connector: 2 to 8 stations)					
Applicable exhaust cleaners	AMC610-10 (Port size: R 1), AMC810-14 (Port size: R 1 ¹ / ₂) (1)					

Note 1) Use "AMC810-14" when used with 5 or more stations or in high frequency. Exhaust cleaner "AMC610-10" and "AMC810-14" are not attached.

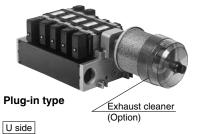

Exhaust cleaner (Option)

Non plug-in type

Plug-in type 01T with terminal block Plug-in type 01C with multi-connector Plug-in type 01F D side with D-sub connector Non plug-in type 10 Common electrical entry Non plug-in type 40 Individual electrical entry

How to Order

Series VFR4000

Manifold

Base type/Electrical entry

Connector mounting direction

Symbol	With connector	Applicable base
Nil	None	01T, 10, 40
D	D side mounting	01C, 01F
U	U side mounting	UIC, UIF

Stations

Stations				
02	2 stations			
:	:			
10 Note)	10 stations			



Note) Electrical entry and light/sur suppressor: D/DZ/DO/DOZ F,FZ only 06

Symbol

rge voltage Z,Y/YZ/YO/YOZ,	1000	7
	[Opt	ion

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ

SQ

VFS


VFR

VQ7

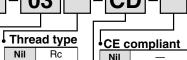

F		G			Q	CE compliant
N		NPT		ľ	Note) El	ectrical entry and
Т		NPTF		l		ht/surge voltage
		ust clear	D/	ippressor: /DZ/DO/DOZ,Y/Y YO/YOZ,F,FZ		
	ı	Exhaust cl	ean	er	or	nly

	Qvmhal	=/ii.aaot o.oa.ioi							
	Syllibol	mounting direction							
	CD	D side	D side mounting						
	CU	U side	U side mounting						
	* Please indicate								
	(./) size or port size of								
(<i></i>	exhaust cleaner.							

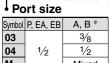



		•			
Symbol	Pa	ssage	Porting specifications		
Syllibol	_	- A - E - D	(A, B)		
	P	EA, EB	(A, D)		
1	Camman	Camman	Side		
2	Common	Common	Bottom *		
* Opt	ion				

How to Order Manifold Assembly

<Example> Plug-in type with terminal block (6 stations)

VV5FR4-01T-061-03-CD (-Q)····· 1 set (Manifold base part no.)
*VFR4100-5FZ (-Q) 3 sets (2 position single part no.)
*VFR4200-5FZ (-Q) 2 sets (2 position double part no.)
*VVFS4000-10A ························ 1 set (Blanking plate assembly part no.)
*AMC610-10 ······ 1 set (Exhaust cleaner part no.)
The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

When using an exhaust cleaner, mount it downwards.

<Example> Non plug-in type: 6 stations

VV5FR4-10-061-03	-CU (-Q) ······ 1 set (Manifold base part no.)
*VFR4110-5E (-Q) ··	3 sets (2 position single part no.)
*VFR4210-5E (-Q) ··	2 sets (2 position double part no.)
*VVFS4000-10A	1 set (Blanking plate assembly part no.)
*AMC810-14	1 set (Exhaust cleaner part no.)
→ The asterisk denotes	the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.


When entry of part numbers becomes complicated, indicate on the manifold specification sheet.




Refer to Best Pneumatics No. 6 for Exhaust Cleaner details.





Manifold with Exhaust Cleaner: Plug-in Type/Non Plug-in Type

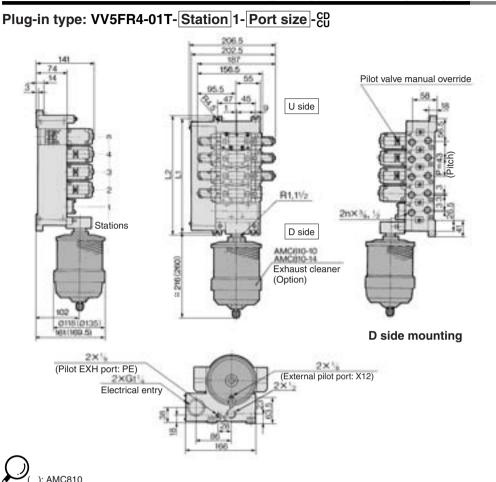


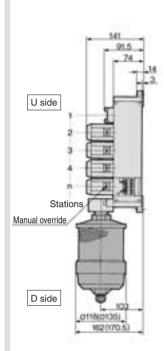

U side mounting

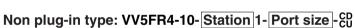

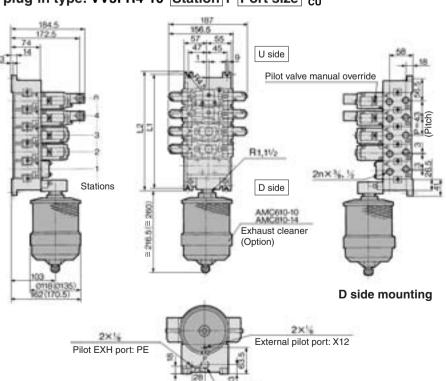

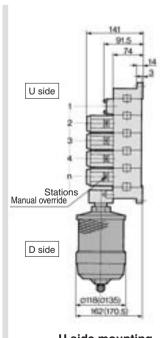

U side mounting


 Number of the control of the contr





5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Manifold with Exhaust Cleaner: Non Plug-in Type

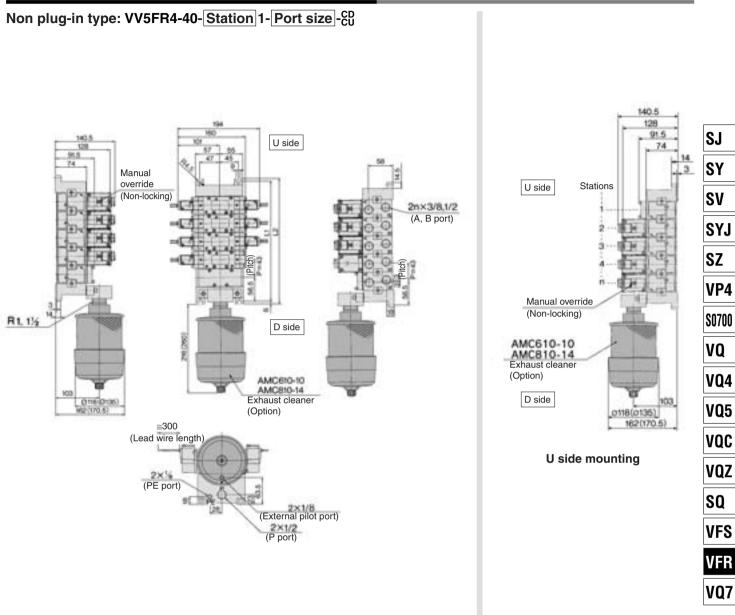


): AMC810

										n: Station
L Stations	2	3	4	5	6	7	8	9	10	Formula
Lı	156	199	242	285	328	371	414	457	500	$L_1 = 43 \times n + 70$
L ₂	168	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82

Manifold with Control Unit

- Control unit (Filter, Regulator, Pressure switch, Air release valve) are all standardized to the one unit, and can be mounted on the manifold base without any attachments.
- Piping processes are eliminated.

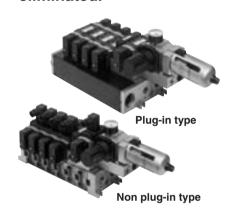

⚠ Caution

Air filter with auto-drain or manual drain must be mounted with the air filter at the bottom.

Manifold Specifications

Manifold	Plug-in type: VV5FR4-01	□(-Q)	Non plug-in type: VV5FR4-10(-Q)	Non plug-in type: VV5FR4-40(-Q)			
Wiring	With terminal block With multi-connector With D-sub connector		DIN terminal Grommet terminal	Grommet, Grommet terminal, Conduit terminal, DIN terminal			
Applicable valve model	VFR4□0□-□F(-Q)		VFR4□1□-□D(-Q) VFR4□1□-□E	VFR4□4□-□G, VFR4□4□-□E VFR4□4□-□T, VFR4□4□-□D(-Q)			
Douting		(Common SUP, Common EXI	4			
Porting specifications	A, B port		Side: 3/8,1/2, Bottom: 3/8				
specifications	P, EA, EB port	Side: 1/2					
Stations	2 to 10	(With	multi-connector/D-sub conne	ector: 2 to 8) *			



* Including station of control unit

Control Unit Specifications

	•
Air filter (With aut	o-drain/With manual drain)
Filtration degree	5 μm
Regulator	
Set pressure	0.05 to 0.05 MDo
(Outlet pressure)	0.05 to 0.85 MPa
Pressure switch	
Set pressure	0.1 to 0.6 MPa
range: OFF	0.1 to 0.6 MPa
Differential	0.08 MPa
Contact	1a
Indicator light	LED (RED)
Max. switch capacity	2 VA AC, 2 W DC
May anaustina	24 VAC, DC or less: 50 mA
Max. operating current	48 VAC, DC: 40 mA
current	100 VAC, DC: 20 mA
Inside voltage drop	4 V or less
Air release valve	(Single only)
Operating pressure range	0.2 to 0.9 MPa

Control Unit/Option


Air release valve spacer	<plug-in type=""> VVFS4000-24A-1R (D side mounting)</plug-in>					
	<non plug-in="" type=""> VVFS4000-24A-2R (D side mounting)</non>					
Pressure (2) switch	IS1000P-2-1					
Diamisina	For filter regulator	MP2-3				
Blanking	For pressure switch	MP3-2				
plate	For air release valve	VVFS4000-24A-10				
Filter element	11104-5B					



Note 1) Combining valve "VFR41□□" (single) and release valve spacer makes it possible to use this as an air release valve.

Note 2) Pressure switch cannot be mounted later on non plug-in type.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series VFR4000

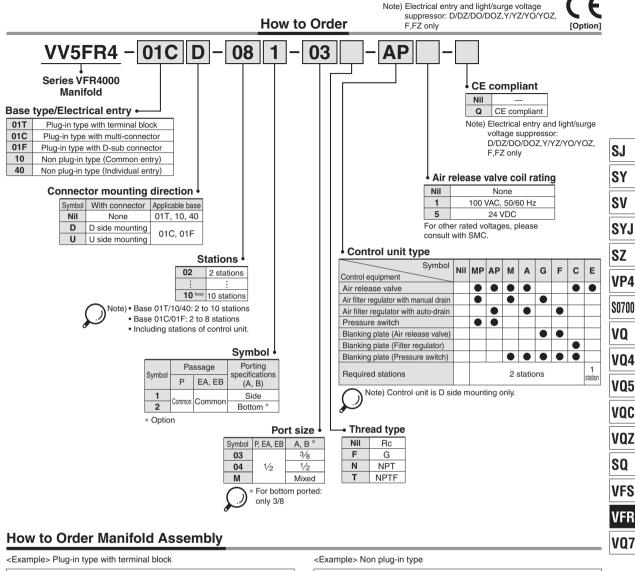

VV5FR4-01T-081-03-AP5 (-Q) ······ 1 set (Manifold base part no.) *VFR4100-5FZ (-Q) ------5 sets (2 position single part no.) *VFR4200-5FZ (-Q) -----2 sets (2 position double part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

The 1st and 2nd station are used for control unit mounting. When ordering, specify the part nos. in order from the 3rd. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

VV5FR4-10-061-03-A5 (-Q) 1 set (Manifold base part no.) *VFR4110-5D (-Q) ------5 sets (2 position single part no.) ➤ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


The 1st and 2nd station are used for control unit mounting. When ordering, specify the part nos. in order from the 3rd. station in the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

SMC


Manifold with Control Unit: Plug-in Type/Non Plug-in Type

Plug-in type:

VV5FR4-01T-Station 1-Port size -AP Voltage of air release valve

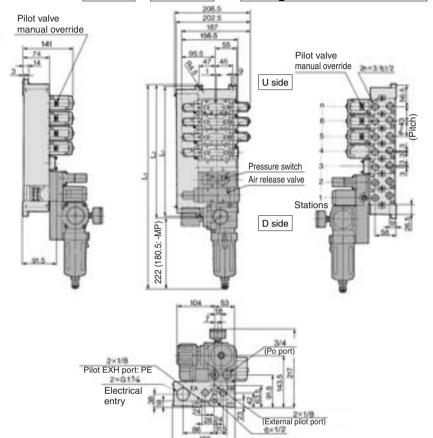


Example for manifold

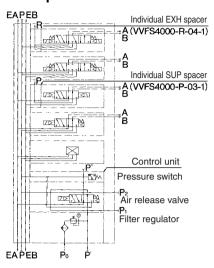

Non plug-in type:


VV5FR4-10- Station 1- Port size -AP Voltage of air release valve

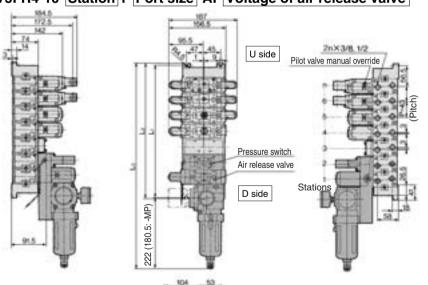

External pilot port

SMC

Example for manifold

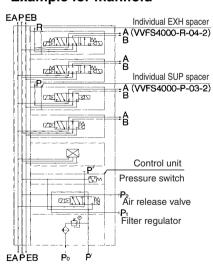


									n: Station
L Stations	3	4	5	6	7	8	9	10	Formula
L ₁	199	242	285	328	371	414	457	500	$L_1 = 43 \times n + 70$
L ₂	211	254	297	340	383	426	469	512	L ₂ = 43 x n + 82
L ₃ (MP)	385.5	428.5	471.5	514.5	557.5	600.5	643.5	686.5	L ₃ = 43 x n + 256.5
L ₃ (AP)	427	470	513	556	599	642	685	728	$L_3 = 43 \times n + 298$

1294

Pilot EXH port: PE

Manifold with Control Unit: Non Plug-in Type

Non plug-in type: VV5FR4-40-Station 1-Port size -AP Voltage of air release valve

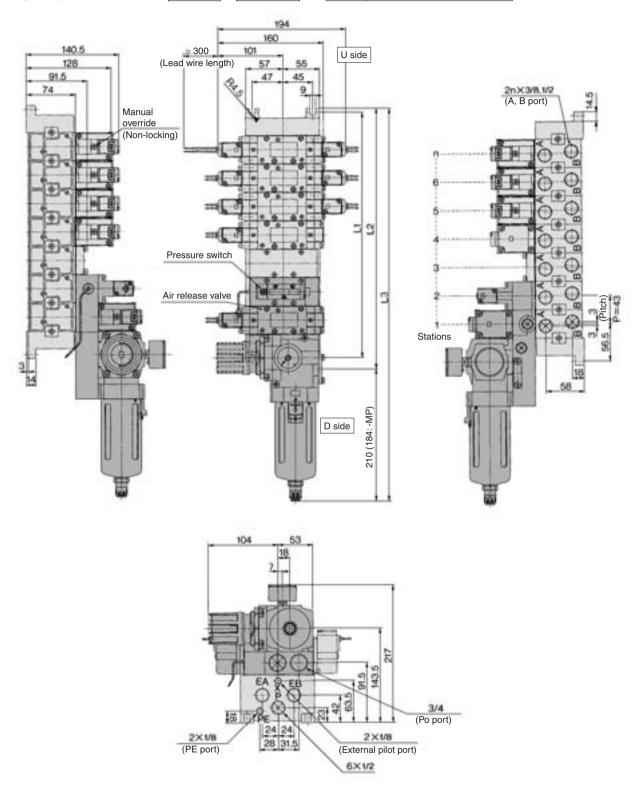

n: Station	
Formula	

1295

L Stations	3	4	5	6	7	8	9	10	Formula
L ₁	199	242	285	328	371	414	457	500	$L_1 = 43 \times n + 70$
L ₂	211	254	297	340	383	426	469	512	$L_2 = 43 \times n + 82$
L ₃ (MP)	385.5	428.5	471.5	514.5	557.5	600.5	643.5	686.5	L ₃ = 43 x n + 256.5
L ₃ (AP)	427	470	513	556	599	642	685	728	$L_3 = 43 \times n + 298$

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ

SQ

VFS

VFR

Manifold Base Construction: Plug-in Type/Non Plug-in Type

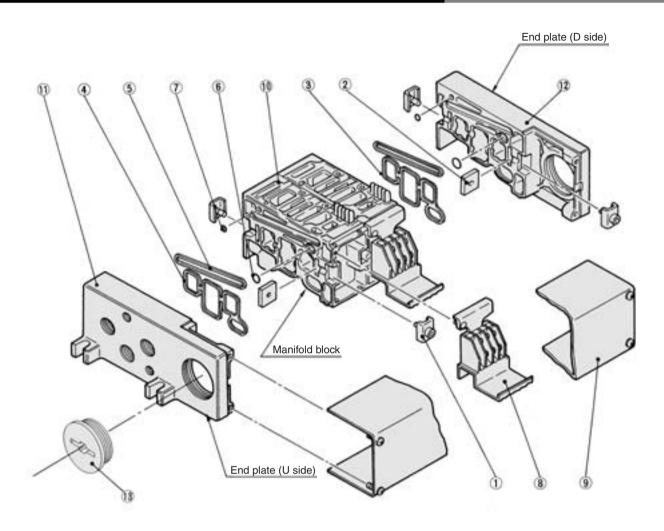

Replacement Parts

No.	Description	Material	Part no.		
1	Connection fitting A	Steel	VVF4000-5-1A		
2	Connection fitting B	Steel	VVF4000-5-2		
3	Gasket	NBR	VVF4000-7 (for end plate)		
4	Gasket	NBR	VVF4000-7-1 (for manifold block)		
5	Gasket	NBR	VVF4000-8		
6	O-ring	NBR	AS568-011		
7	O-ring	NBR	P-3		
8	Terminal assembly	_	VFR4000-14-1A		
9	Junction cover assembly	_	For 01T VVF4000-4A-Stations		
13	Rubber plug	NBR	AXT336-9		

Note) Manifold Base/Construction: Plug-in type with terminal block.

Replacement Parts: Sub Assembly

No.	Description	Assembly part no.	Component parts	Applicable manifold base	
10	Manifold block assembly Note)	VFR4000-19-1A-03	Manifold block ①, Terminal ②, Connection bracket ①, ②, Gasket ④, ⑤, O-ring ⑥, ⑦, Receptacle assembly	Plug-in type	
10	warmord block assembly	VFR4000-19-2A-03	$ \begin{tabular}{ll} \be$	Non plug-in type	
11	End plate (U side) assembly	VVF4000-2A-1	End plate (U) ①, Metal joint ①, ②	Plug-in type	
-''	End plate (O side) assembly	VVF4000-2A-2	End plate (U) ①, Metal joint ①, ②	Non plug-in type	
12	VVF4000-3A-1		End plate (D) $\textcircled{2}$, Connection bracket $\textcircled{1}$, $\textcircled{2}$, Gasket $\textcircled{3}$, $\textcircled{4}$, O-ring $\textcircled{6}$, $\textcircled{7}$	Plug-in type	
12	End plate (D side) assembly	VVF4000-3A-2	End plate (D) $\textcircled{2}$, Connection bracket $\textcircled{1}$, $\textcircled{2}$, Gasket $\textcircled{3}$, $\textcircled{5}$, O-ring $\textcircled{6}$, $\textcircled{7}$	Non plug-in type	



Note) For side ported



^{*} Contact SMC for CE-compliant products.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Series VFR5000





SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

vqc

VQZ

SQ

VFS

VFR

VQ7





Standard Specifications

	•							
	Fluid			Air				
Suc	Operating	2 position single	e/3 position	0.2 to 0.9 MPa				
li≓	pressure range	2 position double		0.1 to 0.9 MPa				
Ę	Ambient and flui	nbient and fluid temperature			-10 to 50°C (No freezing. Refer to page 5.)			
specification	Lubrication			Non-lube (1)				
	Manual override			Non	-locking push type			
\ e	Mounting orientation			Unrestricted				
Valve	Shock/Vibration resistance			300/50m/s ² (2)				
-	Enclosure			Dustproof				
us	Coil rated voltag	е		100, 200 VAC (50/60 Hz), 24 VDC				
atio	Allowable voltag	e fluctuation		-15 to -10% of rated voltage				
ij	Annarant nawar	(AC) (3)	Inrush	5.6 VA	/50 Hz, 5.0 VA/60 Hz			
sbe	Apparent power (AC) (3)		Holding	3.4 VA/50 Hz, 2.3 VA/60 Hz				
Electricity specifications	Power consumption (DC) (3)			1.8 W				
cti	Electrical entry			Plug-in type	Conduit terminal			
出	Lieunicai enn y			Non plug-in type	Grommet terminal, DIN terminal			

Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated. Note 3) At rated voltage Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial

direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

JIS Symbol							
2 position	3 position						
Single	Closed center						
(A)(B)	(A) (B)						
5 1 3 (EA)(P)(EB)	5 1 3 (EA) (P) (EB)						
Double	Exhaust center						
(A) (B) 4 2	(A) (B) 4 2						
5 1 3 (EA) (P) (EB)	5 1 3 (EA)(P)(EB)						
	Pressure center						
	(A)(B) 4 2						
	5 1 3 (EA) (P) (EB)						

Option Specifications

Pilot type		External pilot Note)			
Manual Main valve override Pilot valve		Direct manual override			
		Ion-locking push type A (Extended), Locking type B (Tool required), Locking type C (Lever)			
Coil rated voltage		110 to 120, 220, 240 VAC 50/60 Hz			
Con rated v	/oitage	12 VDC			
Porting specifications		Bottom ported			
Option		With light/surge voltage suppressor			
Note Operating processes					

Note) Operating pressure: 2 position 0 to 0.9 MPa 3 position 0.15 to 0.9 MPa

Pilot pressure: 2 position single 0.2 to 0.9 MPa 2 position double 0.1 to 0.9 MPa 3 position 0.3 x P + 0.1 to 0.9 MPa (P: Operating pressure)

Model

	T f	Мо	Model Flow characteristics (1)					Max. (2)	Response (3)	(4)													
	Type of actuation	Dlug in	Non	Port	$1 \rightarrow 4/2 \ (P \rightarrow A/B)$			$4/2 \rightarrow 5/3 \text{ (A/B} \rightarrow \text{EA/EB)}$			operating cycle	time	Mass ⁽⁴⁾ (kg)										
actuation		Plug-in	plug-in	size	C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	(Hz)	(ms)	(kg)										
			1510□ VFR511□	3/8	17	0.36	4.7	18	0.40	5.0	5	60 or less	1.77 (1.72)										
9	Single	VFR510□		1/2	20	0.28	5.2	23	0.32	6.2													
3				3/4	23	0.27	5.8	25	0.21	6.2													
3	Single VFR			3/8	16	0.37	4.6	18	0.41	5.1	5	60 or less	1.88 (1.83)										
c		VFR520□	□ VFR521□	1/2	20	0.27	5.2	23	0.32	6.1													
				3/4	23	0.26	5.8	25	0.20	6.1													
	011		/FR530□ VFR531□	3/8	15	0.38	4.1	16	0.31	4.3	3	80 or less	1.87 (1.82)										
	Closed			1/2	17	0.31	4.6	20	0.33	5.4													
	center			3/4	18	0.28	4.7	21	0.30	5.4													
1	- Fuhaust	VERSION VI	aust VFR540□	t VFR540□	VFR540□	ot						3/8	14	0.38	3.6	17 [16]	0.39 [0.35]	4.8 [4.3]			4.07		
1	center					/FR540□ VFR541□	1/2	17	0.29	4.6	21 [18]	0.31 [0.34]	5.6 [5.0]	3	80 or less	1.87							
3 position	5 Cerilei			3/4	18	0.29	4.6	23 [20]	0.27 [0.33]	5.9 [5.2]	1		(1.82)										
				3/8	16 [9.4]	0.39 [0.40]	4.2 [2.6]	17	0.36	4.5													
	Pressure	VFR550□	VFR551□	1/2	18 [9.7]	0.32 [0.45]	5.0 [2.9]	20	0.31	5.3	3	80 or less	1.87										
	center				""						500			3/4	19 [9 2]	0.35 [0.48]	5 4 [2 8]	21	0.29	5.6			(1.82)

Note 1) []: Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)


Note 4) For VFR5 \square 00- \square FZ-06, (): VFR5 \square 10- \square DZ-06




How to Order

Note) Electrical entry and light/surge voltage suppressor: D,DZ,F,FZ only



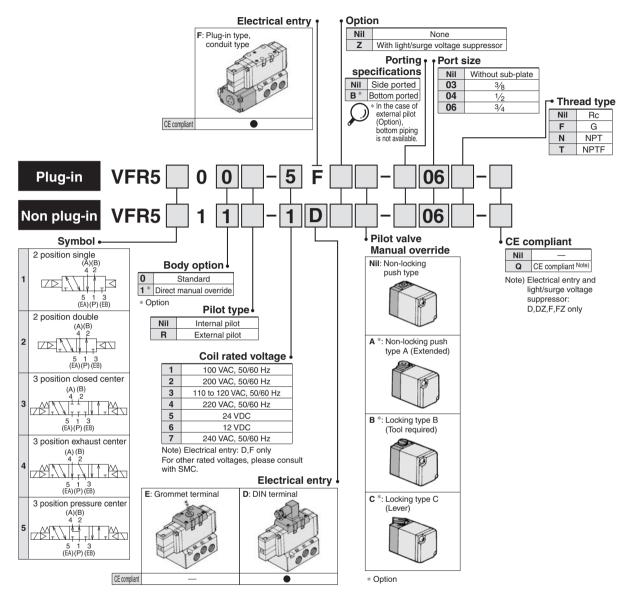


How to Order Pilot Valve Assembly

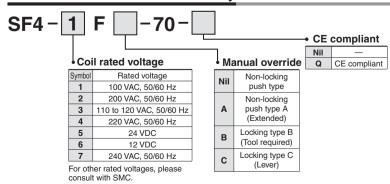

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in Series VFR5000

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

Cylinder Speed Chart

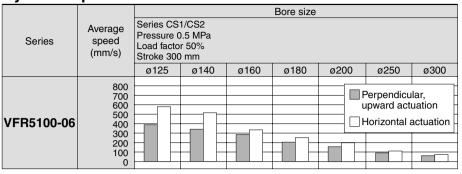


- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions

	Series CS1/CS2	
	Tube x Length SGP20A x 1 n	SGP20A x 1 m
VFR5110-06	Speed controller	AS500-06
	Silencer	AN500-06

How to Order Sub-plate Assembly

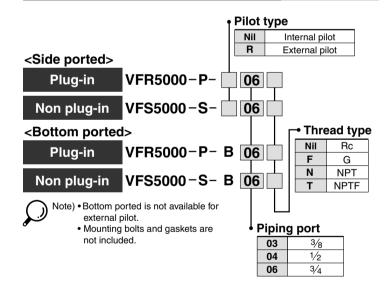

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC


VQZ

SQ


VFS

VFR

Construction

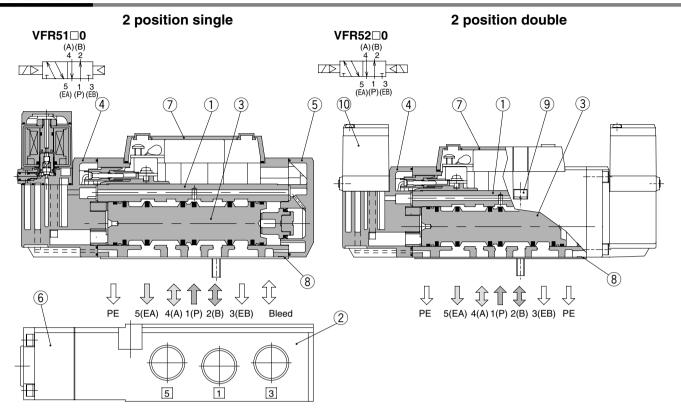

3 position closed center/exhaust center/pressure center

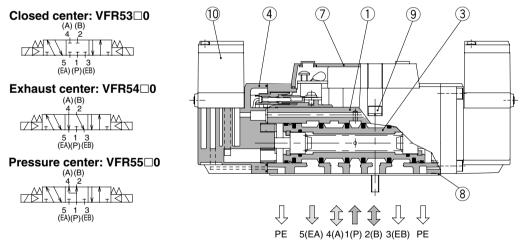

This figure shows a closed center type.

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Resin	Black


Component Parts


No.	Description	Material	Note
5	End plate	Resin	Black
6	Junction cover	Resin	Black
7	Light cover	Resin	
	_		1


Replacement Parts

Nie	D. a sainti a a	Matarial	Part no.		
No.	Description	Material	VFR51□□	VFR52□□	VFR53□□/54□□/55□□
8	Gasket	NBR	AXT627-10-1	AXT627-10-1	AXT627-10-1
9	Hexagon socket head screw	Steel	AXT627-42-1 (M5 x 50)	AXT627-42-1 (M5 x 50)	AXT627-42-1 (M5 x 50)
10	Pilot valve assembly	_	Refer to "How to Order Pilot Valve Assembly" on page 1298.		

Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

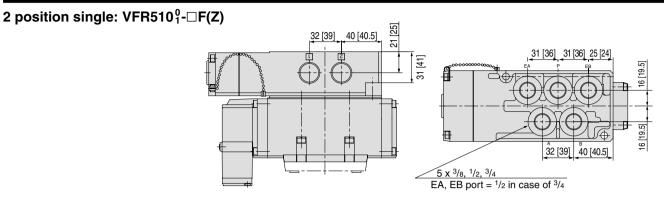

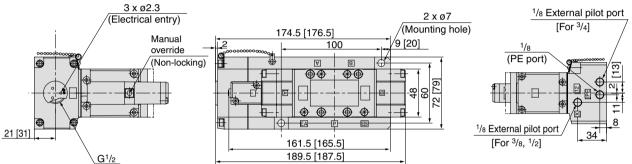

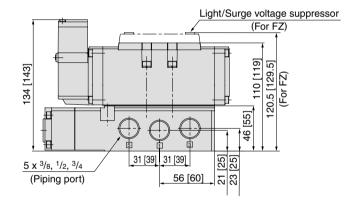

VFR

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ


VFS

VQ7 [] = 3/4

2 position double: VFR520⁰₁-□F(Z)

3 position closed center: VFR530⁰₁-□F(Z) 3 position exhaust center: VFR540⁰₁-□F(Z)


3 position pressure center: VFR550⁰₁-□F(Z)

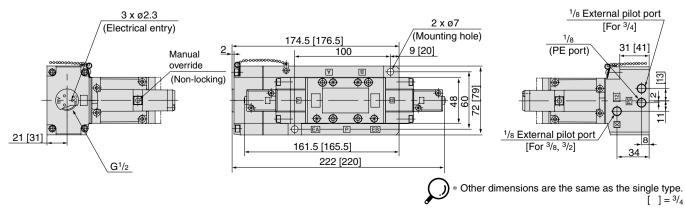

SMC

1301


Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

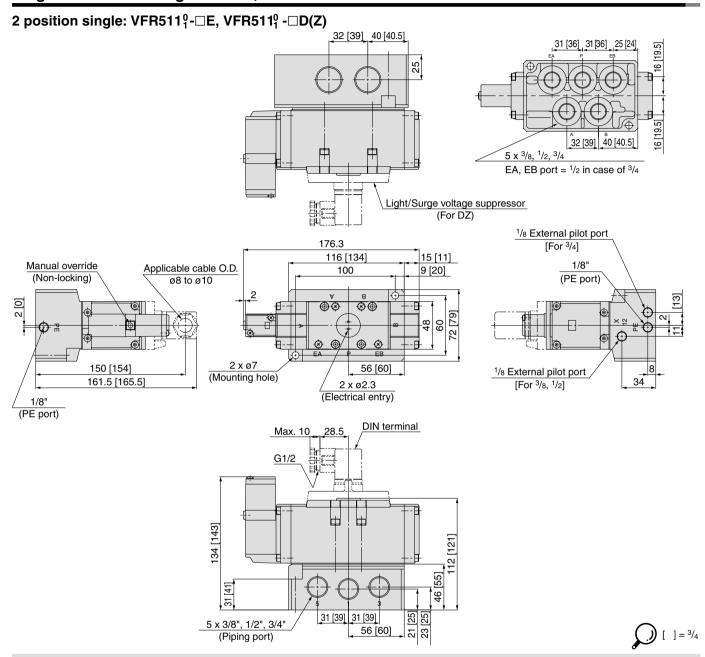

2 position double: VFR521⁰₁-□E, VFR521⁰₁-□D(Z)

1302

3 position closed center: VFR531⁰₁-□E, VFR531⁰₁-□D(Z) 3 position exhaust center: VFR541⁰₁-□E, VFR541⁰₁-□D(Z) 3 position pressure center: VFR551⁰₁-□E, VFR551⁰₁-□D(Z)

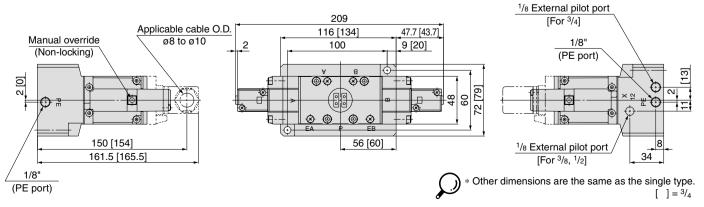

Manifold Specifications



Manifold Specifications

Base model	Wiring	Porting specifications	Port s	ize Rc	Stations	Applicable
Dase model	vviring	A, B port	P, EA, EB	A, B	Stations	valve model
Diversion to the second	• With terminal block				2 to 10	
Plug-in type VV5FR5-01□(-Q)	With multi-connector	Side/Bottom	3/4	1/2, 3/4	2 to 8	VFR5□0□-□F(-Q)
V VOFRO-UILI(-Q)	With D-sub connector					
Non plug-in type	• Grommet terminal				2 to 10	VFR5□1□-□E
VV5FR5-10(-Q)	 DIN terminal 				2 10 10	VFR5□1□-□D(-Q)

SJ

SY

SV

SYJ

SZ

3Z

VP4

VIT

S0700

VQ VQ4

VOE

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7

How to Order Manifold Assembly

Instruct by specifying the valves, blanking plate and manifold option parts assembly to be mounted on the manifold along with the manifold base model no.

<Example> Plug-in type with terminal block: 6 stations

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet

<Example> Non plug-in type: 6 stations

VV5FR5-10-061-04 (-Q) ·············· 1 set (Manifold part number)
*VFR5110-5D (-Q) 5 sets (2 position single)
*VFR5410-5D (-Q) ······· 1 set (3 position exhaust center)
*VVFS5000-R-04-2 ······· 1 set (Individual EXH spacer)
The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.


When ordering, specify the part nos. in order from the 1st. station in the D side.


When entry of part numbers becomes complicated, indicate on the manifold specification sheel

when entry of part numbers becomes complicated, indicate on the manifold specification sheet

Plug-in Type: With Terminal Block

 Since lead wires of solenoid valve are connected with the terminals on upper surface of terminal block corresponding lead wires from power source can be wired at the bottom of terminal block.

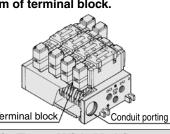

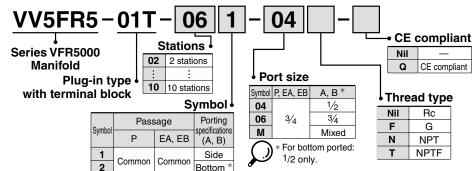


Plug-in Type: With Multi-connector (For wiring specifications, refer to page 1326.)


 Master connection of power and solenoid valves.

Quick wiring permits ease of installation.

Multi-connector

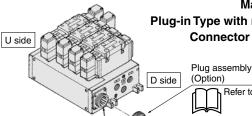



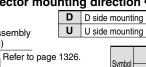

Stations


02 2 stations


: : :
08 * 8 stations

* Max: 8 stations

Passage Porting specifications (A, B)

Common Common Side Bottom*

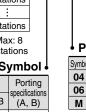

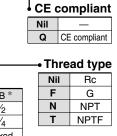


* Option



2

Note) Electrical entry and light/surge voltage suppressor for CE-compliant non plug-in type: D, DZ, F, FZ only



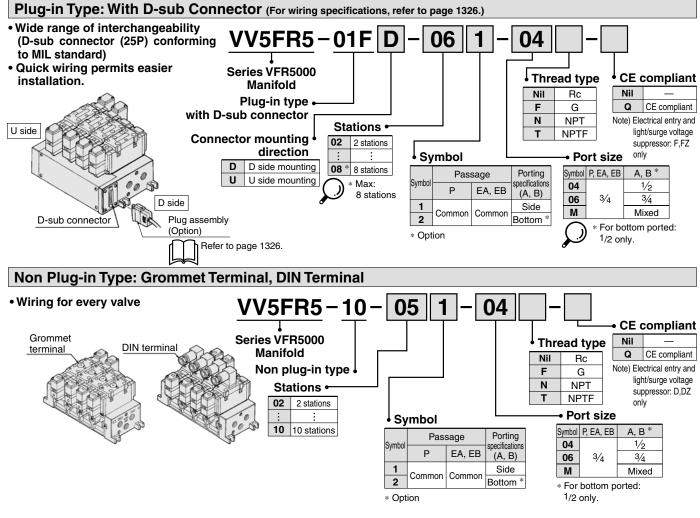



Note) Manifold base is common for Series VFS5000. Terminal block is not required.

Manifold/Option Parts Assembly

Individual SUP spacer

Supply port can be located at each valve individually after individual SUP spacer is mounted on manifold block.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-P-04-1	VVFS5000-P-04-2





Individual EXH spacer

Exhaust port can be located at each valve individually after individual EXH spacer is mounted on manifold block. (Common EXH type)

Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-R-04-1	VVFS5000-R-04-2





SUP block disk

When 2 or more pressures (high and low) are supplied to one manifold, insert a disk between the stations which are supplied different pressures.

Body type	Plug-in type	Non plug-in type
Part no.	AXT62	28-12A

EXH block disk

Use exhaust blocks to eliminate back flow to other stations. Use supply disks to operate two pressures on the same manifold.

Body type	Plug-in type	Non plug-in type
Part no.	AXT51	2-14-1A





EXH block disk SUP block disk

Throttle valve spacer

Mount interface speed control on manifold block. Cylinder speed can be controlled by metered out flow.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS5000-20A-1	VVFS5000-20A-2








Interface regulator

When interface regulator is mounted on manifold block, regulation to that valve is possible.

(Refer to "Flow Characteristics" on page 1324 before operation.)

Body type	Plug-in type	Non plug-in type
P port regulation	ARBF5050-00-P-1	ARBF5050-00-P-2
A port regulation	ARBF5050-00-A-1	ARBF5050-00-A-2
B port regulation	ARBF5050-00-B-1	ARBF5050-00-B-2

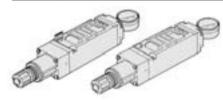

Blanking plate


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Body type	Plug-in type	Non plug-in type
Part no.	VVFS50	000-10A

Manifold Option

With exhaust cleaner Plug-in type/Non plug-in type

- High noise reduction effect: 35 dB or more
- Drainage and mist are collected (99.9% or more).
- Piping work is reduced.

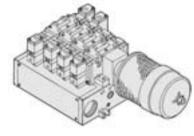



For details, refer to page 1308.

SJ

SY SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5


VQC VQZ

SQ

VFS

VFR

Manifold: Plug-in Type/Non Plug-in Type

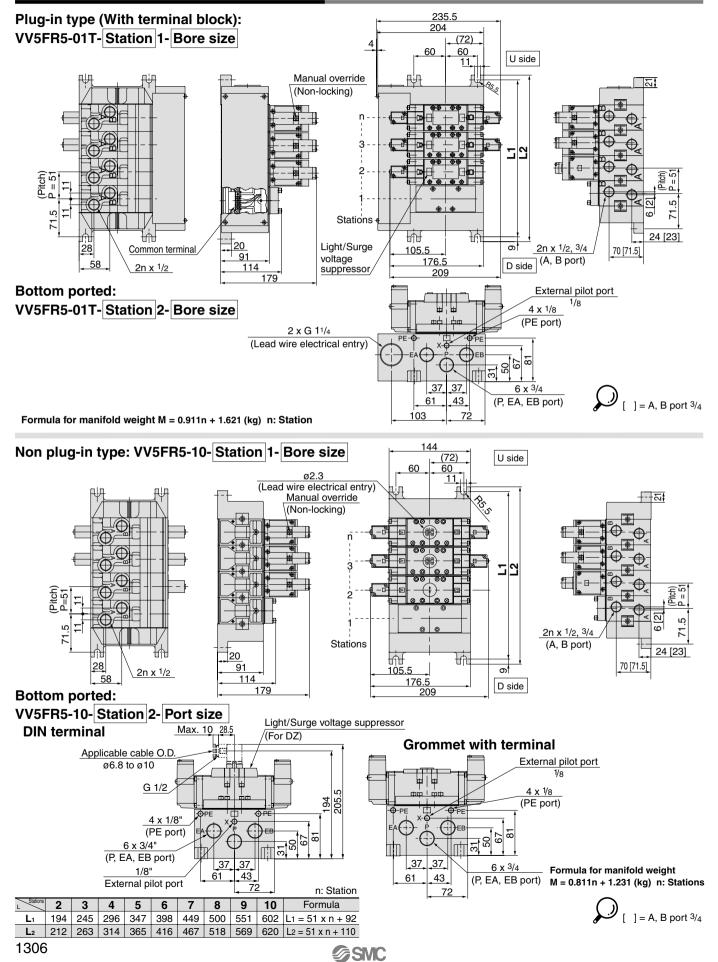

Manifold/Plug-in type: With Multi-connector/With D-sub connector Plug-in type/With multi-connector: VV5FR5-01CD-Station 1- Bore size, VV5FR5-01CU-Station 1- Bore size Light/Surge voltage suppressor Manual override 60 U side (Non-locking) 111<u>121</u> SJ SY 2 SV SYJ 71.5 2n x 1/2, 3/2 Stations SZ 7 (A, B port) \mathbb{H} 24 [23] 105.5 2n x 1/2 20 70 [71.5] 176.5 D side VP4 Plug assembly: VVFS2000-30A-□ External pilot port (Option: Refer to **S0700** page 1326.) VQ **Bottom ported:** 4 x ½ (PE port) VV5FR5-01^{CD}_{CU}-Station 2-Bore size VQ4 VQ5 _37 37 $6 \times \frac{3}{4}$ Formula for manifold weight M = 0.916n + 1.709 (kg) n: Stations $\bigcap_{[] = A, B \text{ port } 3/4}$ (P, EA, EB port) VQC * For wiring specifications, refer to page 1326. 103 VQZ Plug-in type/With D-sub connector: VV5FR5-01FD-Station 1-Bore size, VV5FR5-01FU-Station 1-Bore size SQ Light/Surge voltage suppressor 204 **VFS** U side Manual override **VFR** (Non-locking) **VQ7** 2 = 51 Stations 2n x 1/2, 3/4 1 (A, B port) 20 ∄ ়ু⊌ Plug assembly: 24 [23] 105.5 2n x 1/2 28 D side VVZS3000-21A-□ 70 [71.5] 58 (Option: Refer to page 1326.) External pilot port 4 x 1/8 **Bottom ported:** (PE port) VV5FR5-01FD - Station 2- Bore size 20 Formula for manifold weight M = 0.916n + 1.633 (kg) n: Stations 37 37 * For wiring specifications, refer to page 1326. n: Station

296

347 398

212 263 314 365 416 467 518 L2 = 51 x n + 110

449 | 500 | L₁ = 51 x n + 92

103


(P, EA, EB port)

Manifold with Exhaust Cleaner

- Protection of work environment
- Reduction of valve exhaust noise of 35 dB or more
- Drainage and mist are collected. (99.9% or more)
- Piping work is reduced.

Manifold Specifications

Manifold	Plug-in type: VV5FR5-01□(-Q)		Non plug-in type: VV5FR5-10(-Q)			
Wiring	With terminal block With multi-connector With D-sub connector		DIN terminal Grommet terminal			
Applicable valve model	VFR5□00-□F	(-Q)	VFR5□10-□D(-Q), VFR5□10-□E			
Dautina		Commo	n SUP/Common EXH			
Porting specifications	A, B port	Side: 1/2, 3/4, Bottom: 1/2 (Option)				
specifications	P port	Side: 3/4 EXH: 1 1/2				
Stations	2 to 10 ⁽¹⁾					
Applicable exhaust cleaners	AMC810-14 (Connecting port R 1 ¹ / ₂) ⁽²⁾					

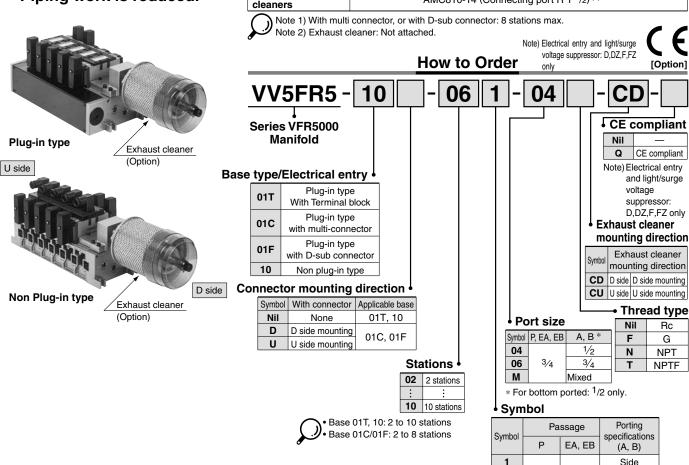

How to Order Manifold Assembly

Instruct by specifying the valves and blanking plate to be mounted on the manifold along with the manifold base model no.

<Example> Plug-in type with terminal block: 6 stations

VV5FR5-01T-061-04-CD 1 set (Manifold part no.) *VFR5100-5FZ 3 sets (2 position single part no.) *VFR5200-5FZ 2 sets (2 position double part no.) *VVFS5000-10A 1 set (Blanking plate assembly part no.) *AMC810-14 1 set (Exhaust cleaner part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.

When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

VV5FR5-10-061-04-CU

<Example> Non plug-in type: 6 stations

1 set (Manifold part no.) *VFR5110-5E 3 sets (2 position single part no.) *VFR5210-5E 2 sets (2 position double part no.) *VVFS5000-10A 1 set (Blanking plate assembly part no.) *AMC810-14 1 set (Exhaust cleaner part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Common

2

Commor

Bottom

Valve arrangement is counted from the D side.

When ordering, specify the part nos. in order from the 1st. station in the D side.


When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



When using exhaust cleaner, mount it downwards.




Manifold with Exhaust Cleaner: Plug-in Type/Non Plug-in Type

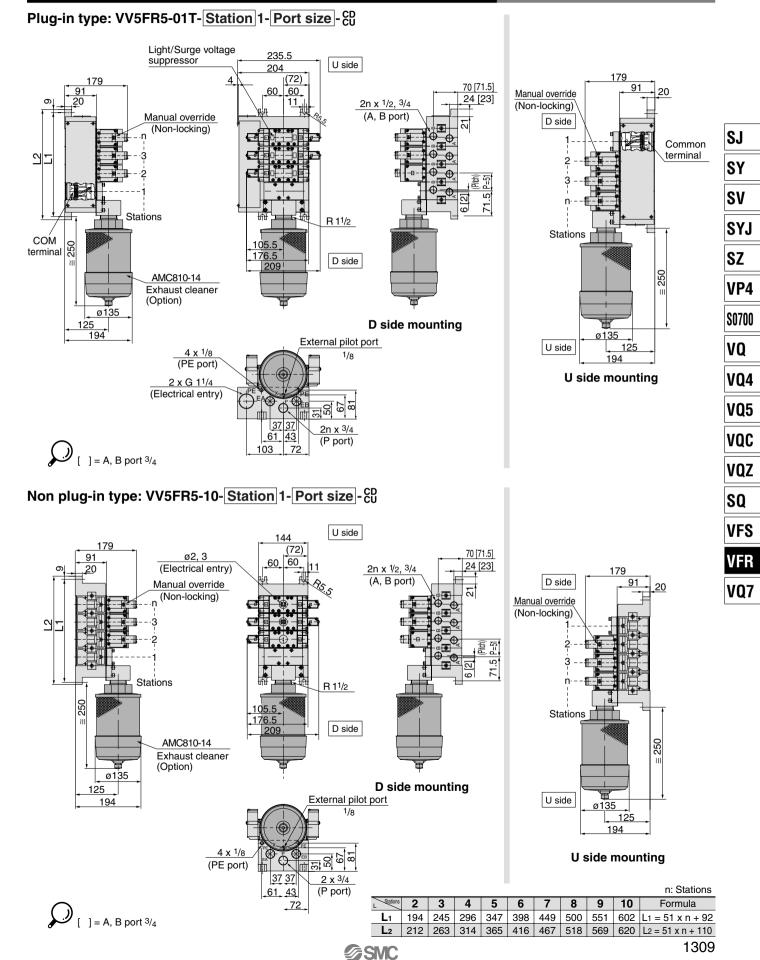


Manifold Option Parts Assembly/Plug-in Type, Non Plug-in Type


Individual SUP spacer VVFS5000-P-04-1 (Plug-in type) VVFS5000-P-04-2 (Non plug-in type)

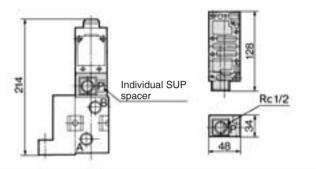


Individual EXH spacer VVFS5000-R-04-1 (Plug-in type) VVFS5000-R-04-2 (Non plug-in type)

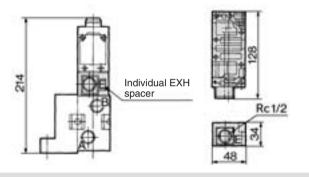


SUP block disk: AXT628-12A EXH block disk: AXT512-14-1A

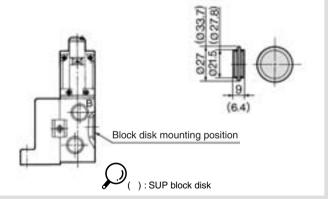


Throttle valve spacer VVFS5000-20A-1 (Plug-in type) VVFS5000-20A-2 (Non plug-in type)

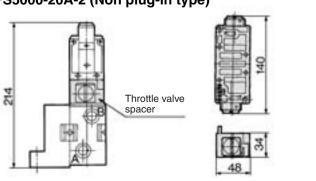



Interface regulator/P port regulation ARBF5050-00-P-1 (Plug-in type) ARBF5050-00-P-2 (Non plug-in type)

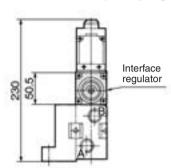

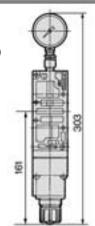



Interface regulator/A port regulation ARBF5050-00-A-1 (Plug-in type) ARBF5050-00-A-2 (Non plug-in type)

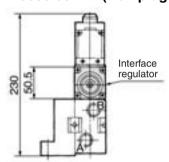

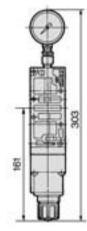


Interface regulator/B port regulation ARBF5050-00-B-1 (Plug-in type) ARBF5050-00-B-2 (Non plug-in type)

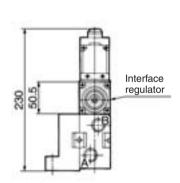

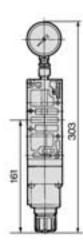

Manifold Base Construction: Plug-in Type/Non Plug-in Type

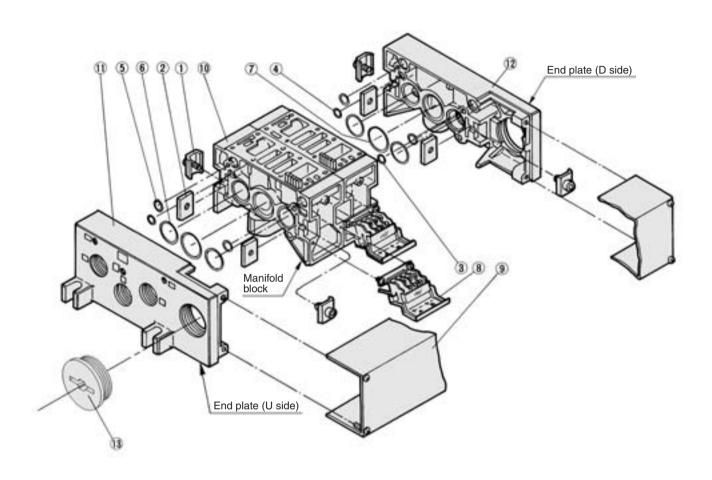

Replacement Parts

net	neplacement Faits								
No.	Description	Material	Part no.						
1	Connection fitting A	Steel plate	AXT628-6-1A						
2	Connection fitting B	Steel plate	AXT628-6-2						
3	O-ring	NBR	AS568-006						
4	O-ring	NBR	AS568-010						
5	O-ring	NBR	AS568-013						
6	O-ring	NBR	AS568-022						
7	O-ring	NBR	AS568-026						
8	Terminal block assembly	_	VFR5000-21-1A						
9	Junction cover assembly	For 01T	VVFS5000-4A-Stations						
13	Rubber plug	NBR	AXT336-9						

 When requiring replacement manifold stations, order replacement parts assembly no. ①: manifold block assembly part.
 For plug-in type: The manifold base with terminal stand (integrated with a junction cover) is required with the ② junction cover assembly.

Replacement Parts: Sub Assembly

Ν	lote) Manifold	Base/Construction	: Plug-in type	e with termina	al block.

		•		P
No.	Description	Assembly part no.	Component parts	Applicable manifold base
10	Manifold block assembly	VFR5000-20-1A-04 Manifold block ®, O-ring ③, ④, ⑤, ⓒ		Plug-in type
		VVFS5000-1A-2-06	Manifold block ①, Metal joint ①, ②, O-ring ③, ④, ⑤, ⑥, ⑦	Non plug-in type
11	End plate (U side) assembly	VVFS5000-2A-1	End plate (U) ①, Metal joint ①, ②	Plug-in type
- ' '	End plate (O side) assembly	VVFS5000-2A-2	End plate (U) ①, Metal joint ①, ②	Non plug-in type
12	End plate (D side) assembly	VVFS5000-3A-1	End plate (D) 12, Metal joint 1, 2, O-ring 3, 4, 5, 6, 7	Plug-in type
12 En	Ellu plate (D side) assembly	VVFS5000-3A-2	End plate (D) ①, Metal joint ①, ②, O-ring ③, ④, ⑤, ⑥, ⑦	Non plug-in type

 $[\]ast$ Contact SMC for CE-compliant products.



SV

SJ

O V

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ

VFS

VFR

5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in

Series VFR6000





Plug-in type



Non plug-in type

JIS Symbol

olo cyllibol		
2 position	3 position	
Single	Closed center	
(A)(B)	(A)(B)	
4 2	4 2	
5 1 3 (EA)(P)(EB)	5 1 3 (EA)(P)(EB)	
Double	Exhaust center	
(A)(B) 4 2 5 1 3	(A) (B) 4 2 5 1 3 (EA)(P)(EB)	
(EA)(P)(EB)	Pressure center	
	(A) (B) 4 2 5 1 3 (EA)(P)(EB)	

∕!\ Caution

When double solenoid is used, spool valve should be mounted horizontally. If there are vibrations, spool valve should be mounted perpendicular to the vibration direction.

Standard Specifications

	aara opoomo					
2	Fluid				Air	
Ö	Operating	2 position sing	le/3 position	0.2 to 0.9 MPa		
cat	pressure range 2 position double		0	.1 to 0.9 MPa		
ij	Ambient and fluid temperature			−10 to 50°C (No	o freezing. Refer to page 5.)	
specifications	Lubrication				Non-lube (1)	
S O	Manual override		Non-	locking push type		
Valve	Shock/Vibration resistance		300/50m/s ² (2)			
>	Enclosure			Dustproof		
SLI	Coil rated voltag	е		100, 200 VAC (50/60 Hz), 24 VDC		
gi.	Allowable voltag	e fluctuation		−15 to −10% of rated voltage		
⊨ij	Annount nower	(AC) (3)	Inrush	5.6 VA/50 Hz, 5.0 VA/60 H		
Spe	Apparent power (AC) (3) Holding		3.4 VA/50 Hz, 2.3 VA/60 Hz			
Electricity specifications	Power consumption (DC) (3)		1.8 W			
Ē	To atmice I ambus		·	Plug-in type	Conduit terminal	
#	Electrical entry			Non plug-in type	Grommet terminal, DIN terminal	

Note 1) Use turbine oil Class 1 (ISO VG32), if lubricated.

Note 3) At rated voltage

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition.

(Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Option Specifications

Main valve manual override	Direct manual override			
Cail rated valtage	110 to 120, 220, 240 VAC 50/60 Hz			
Coil rated voltage	12 VDC			
Option	With light/surge voltage suppressor			

Model

Type of		Model		Port		Flow (cterist	ics ⁽¹⁾	FA/FR)	(2) Max.	(3) Response	(4)
ac	tuation	Plug-in	Non plug-in	size	C [dm ³ / (s·bar)]	h	. ,	C [dm ³ / (s·bar)]	- (-	Cv	operating cycle (Hz)	time (ms)	Mass (kg)
position	Single	VFR610□	VFR611□	3/4	40	0.12	9.1	41	0.15	9.6	2	100 or less	4.73 (4.56)
2 pos	Double	VFR620□	VFR621□	3/4	40	0.14	9.2	41	0.17	9.7	2	100 or less	4.78 (4.61)
Ë	Closed center	VFR630□	VFR631□	3/4	39	0.17	9.3	39	0.15	9.3	1	150 or less	4.72 (4.55)
position	Exhaust center	VFR640□	VFR641□	3/4	38	0.14	8.9	42 [40]	0.12 [0.15]	9.6 [9.4]	1	150 or less	4.72 (4.55)
က	Pressure center	VFR650□	VFR651□	3/4	38 [20]	0.10 [0.44]	8.7 [5.7]	40	0.16	9.3	1	150 or less	4.72 (4.55)

Т	pe of	Model		Model		Port	
	tuation	Plug-in	Non plug-in size		Fffective area (mm		Effective area (mm²)
position	Single	VFR610□	VFR611□	1	191		
2 pos	Double	VFR620□	VFR621□	1	191		
	Closed center	VFR630□	VFR631□	1	180		
position	Exhaust center	VFR640□	VFR641□	1	$P \rightarrow A$, B: 178 A, B \rightarrow EA, EB: 212 Normal position: 193		
8	Pressure center	VFR650□	VFR651□	1	$P \rightarrow A$, B: 183 Normal position: 82 A, B \rightarrow EA, EB: 199		



Note 1) []: Denotes the normal position.

Note 2) Min. operating frequency is once in 30 days.

Note 3) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 4) For VFR6 \square 00- \square FZ-06, (): VFR6 \square 10- \square DZ-06



5 Port Pilot Operated Solenoid Valve Rubber Seal, Plug-in/Non Plug-in



Note) Electrical entry and light/surge voltage suppressor: D,DZ,F,FZ only



SJ SY

SV SYJ

SZ

VP4

S0700

VO

V04

VQ5

VQC


VQZ

SQ


VFS

VFR

VQ7

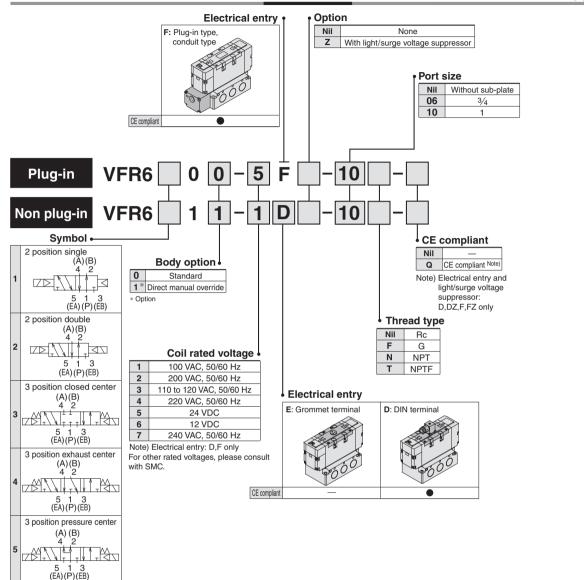

How to Order Pilot Valve Assembly

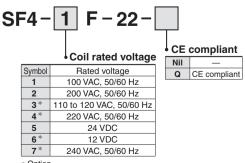

Option


For other rated voltages, please consult with SMC.



Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC

Sizing Program.

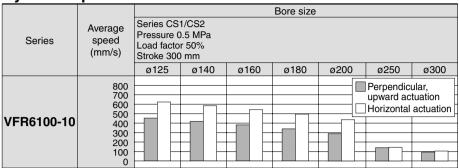




- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%


Conditions

	Series CS1/CS2	
	Tube x Length	SGP25A x 1 m
VFR6110-10	Speed controller	AS600-10
	Silencer	AN600-10


How to Order Sub-plate Assembly

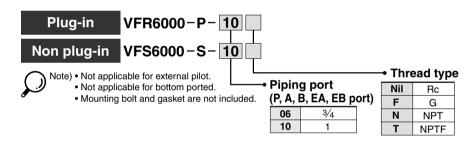

Construction

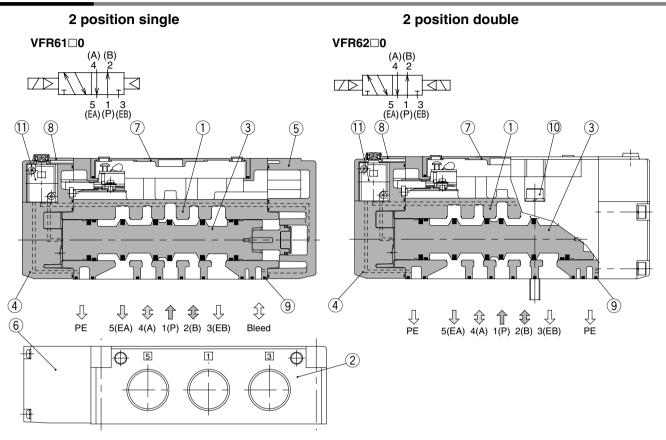

3 position closed center/exhaust center/pressure center

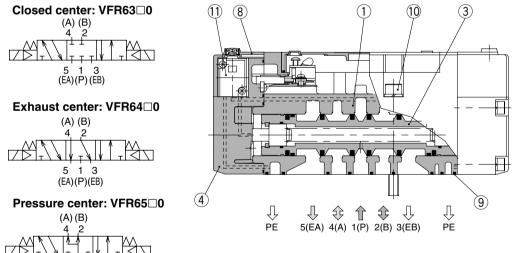

This figure shows a closed center type.

Component Parts

5 1 3 (EA)(P)(EB)

No.	Description	Material	Note
1	Body	Aluminum die-casted	Platinum silver
2	Sub-plate	Aluminum die-casted	Platinum silver
3	Spool valve	Aluminum, NBR	
4	Adapter plate	Aluminum die-casted	Black

Component Parts

No.	Description	Material	Note
5	End plate	Aluminum die-casted	Black
6	Junction cover	Resin	Black
7	Light cover	Resin	
8	Pilot valve cover	Resin	Black

Replacement Parts

No.	Description	Matarial		Part no.				
	Description	Material	VFR61□□	VFR62□□	VFR63□□/64□□/65□□			
9	Gasket	NBR	VFS6000-15	VFS6000-15	VFS6000-15			
10	Hexagon socket head screw	Steel	M8 x 80	M8 x 80	M8 x 80			
11	Pilot valve assembly	_	Refer to "How to Order Pilot Valve Assembly" on page 1313.					

SJ

SY

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR


Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR610⁰₁-□F(Z) 5 x ³/4, 1 22.5 22.5 (Piping port) 27 261 146 3 x ø2.3 117 (Electrical entry) 90 22 -PEEA EB PE Manual override (Non-locking) 170 4 x ø9 (Mounting hole) Light/Surge voltage suppressor 186 (For FZ) 163.5 52.5 45 1/8 (Bleed port) (Double, 3 position: PE port) 69.5 (PE port)

2 position double: VFR620 ⁰₁-□F(Z)

3 position closed center: VFR630 ⁰₁-□F(Z) 3 position exhaust center: VFR640 ⁰₁-□F(Z)


3 position pressure center: VFR650⁰₁-□F(Z)

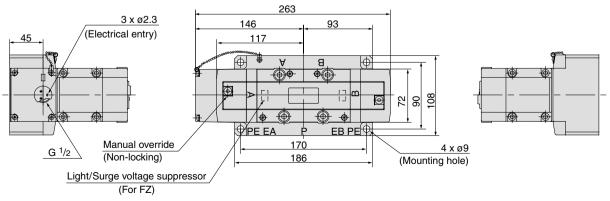





Non Plug-in: 2 Position Single/Double, 3 Position Closed Center/Exhaust Center/Pressure Center

2 position single: VFR611⁰₁-□E, VFR611⁰₁-□D(Z)

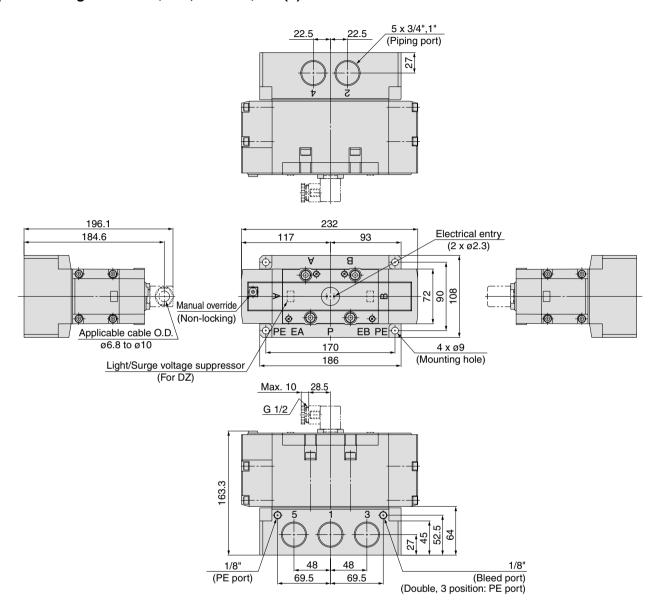

2 position double: VFR621⁰₁-□E, VFR621⁰₁-□D(Z) 3 position closed center: VFR631⁰₁-□E, VFR631⁰₁-□D(Z) 3 position exhaust center: VFR641⁰₁-□E, VFR641⁰₁-□D(Z) 3 position pressure center: VFR651⁰₁-□E, VFR651⁰₁-□D(Z)

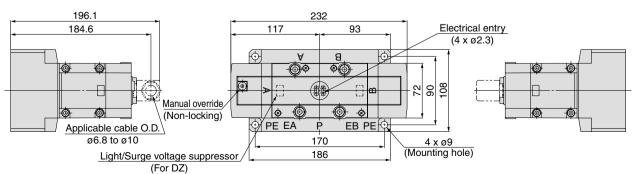

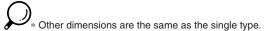



SJ

SY SV

SYJ

SZ

02

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ


VFS

VFR

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in

Series VFR2000



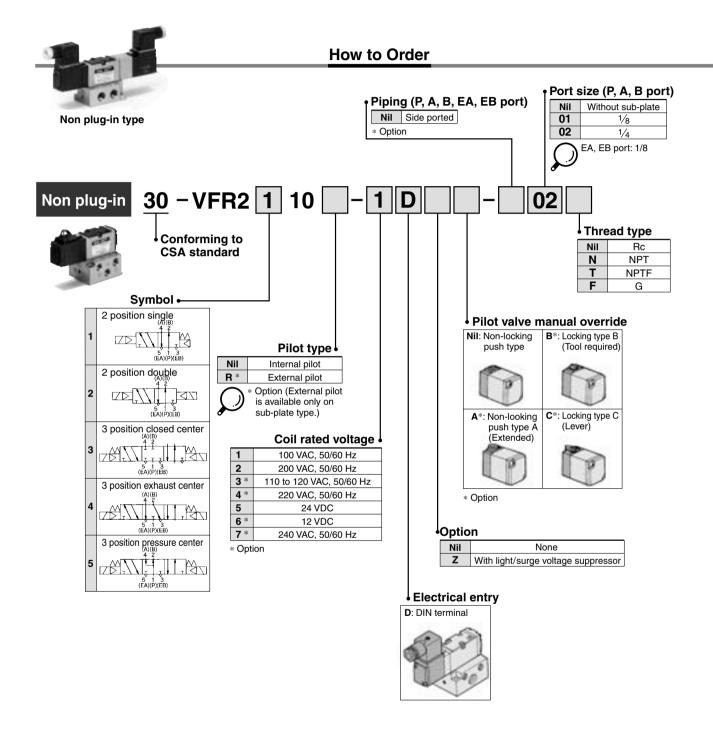


A Refer to the standard product for product specifications, dimensions and model selection procedures.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in

Series VFR3000



How to Order

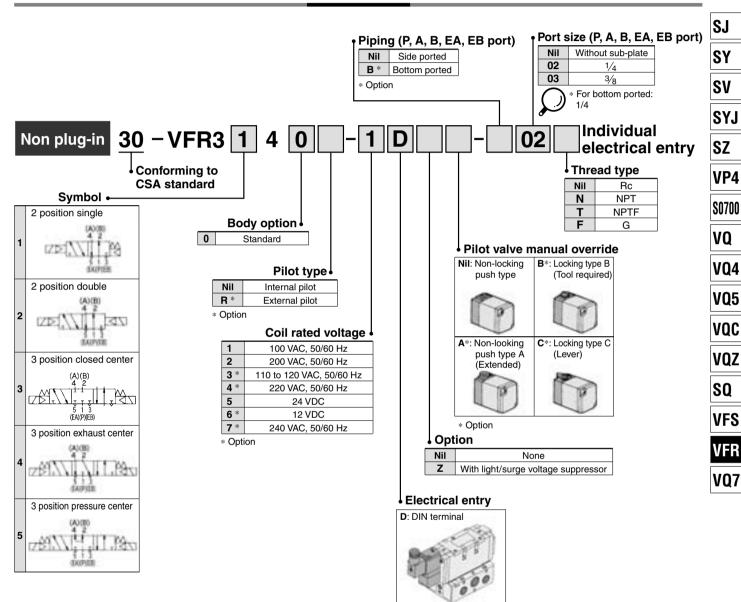


 $igap \Lambda$ Refer to the standard product for product specifications, dimensions and model selection procedures.

5 Port Pilot Operated Solenoid Valve Rubber Seal, Non Plug-in

Series VFR4000



How to Order

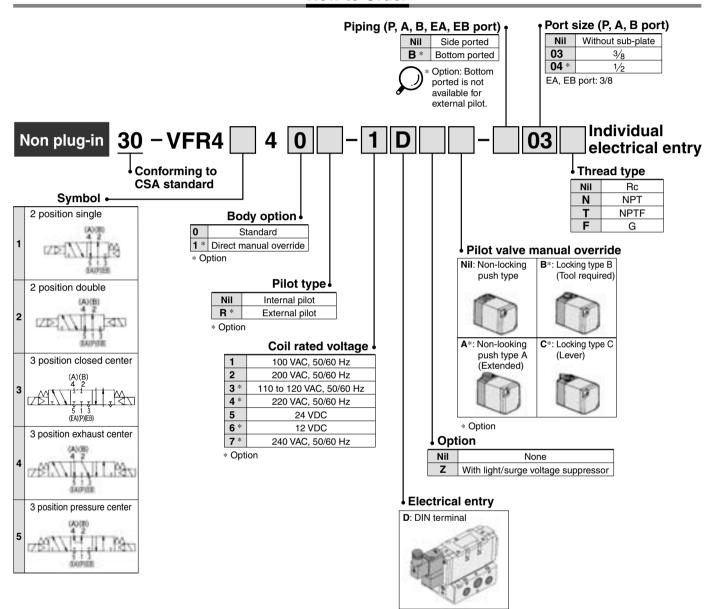

A Refer to the standard product for product specifications, dimensions and model selection procedures.




Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.


Plug-in type (With terminal block)

Series VFR2000/3000/4000

• If you remove the junction cover ① on the subplate, you will see the plug-in terminal block 2 attached to the inside of sub-plate.

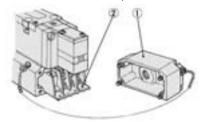

· The following markings are on the terminal block. Connect with corresponding power side.

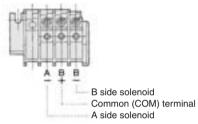

- Although "A-", "B+" and "B-" marks are indicated on the terminal block, this can be used as either +COM" or "-COM".
- Applicable terminal:


VFR2000, VFR3000: 1.25-3, 1.25-3S,

1.25Y-3N 1.25Y-3S

VFR4000: 1.25-3.5M, 1.25Y-3L, 1.25Y-3M


Series VFR5000

• Remove junction cover for sub-plate ①, depress levers 3 of terminal block assembly 2, pull out terminal block assembly.

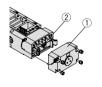



· Terminal block assembly is marked as below. Connect it to power supply side.

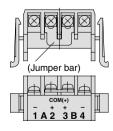


Terminal block marking	A- (1)	B+ (3)	B- (4)
VFR510□	A side	СОМ	
VFR520□	A side	СОМ	B side
VFR540□ 5	A side	СОМ	B side

Lead Wire Connection


- Terminal block assembly can be used as "+" and common regardless of markings. Do not remove jumper bar because it is used for common connection
- Applicable terminal. 1.25-4, 1.25-4M

Series VFR6000

 If you remove the junction cover ① on the subplate, you will see the plug-in terminal block 2 attached to the inside of sub-plate.

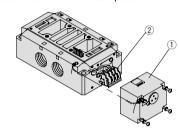

· Terminal block assembly is wired like the following figure. Connect it to each power supply side.

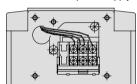

Left	Center	Right
A side	СОМ	
A side	СОМ	B side
A side	СОМ	B side
	A side	Left Center A side COM A side COM A side COM

- Can be used as either "+COM" or "-COM".
- · Applicable terminal: 1.25-4, 1.25-4M

Non plug-in type Series VFR2000

Series VFR3000/4000 (VFR3□40/4□40)

· Type G: Lead wire comes directly from the solenoid part. Connect it with the power source. Grommet with DC voltage surge voltage suppressor has polarity. Connect red lead wire to + (positive) side and black to - (negative) side.

Surge voltage suppressor							
DC	AC						
Red (+) Black (-)	Varistor						

• Type E, T, D, Y: In the case of DIN terminal block and terminal block, there is no polarity of positive [+] and negative [-]. Connect no. 1 and no. 2 terminals with corresponding power side.

terminal

block

[1∰2

DII	DIN terminal block						
Ground	1-4						

With

Applicable cable O.D.

Type T: Ø6 to Ø8 mm

Type E: ø2.3 to ø2.8 mm

Type D (Series VFR2000): ø6 to ø8 mm Type D (Series VFR3000/4000): ø4.5 to ø7 mm

Type Y: ø4.5 to ø7 mm

Applicable crimp terminal

Type E, T: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S (Round shape or Y shape crimp terminal cannot be used for Type D.)

Series VFR3000/4000/5000/6000 (VFR3□10/4□10)


DIN terminal block type

 Male pin terminal of DIN terminal block of solenoid valves are wired as shown below. Connect to corresponding terminal on the connector.



Terminai no.	Internal wiring				
1	SOL. A side				
2	SOL. B side				
3	COM				
+	Ground				

- Can be used as either "+COM" or "-COM".
- Applicable cable Cross section of the wire: 0.5 to 1.5 mm² Cable O.D.: ø8 to ø10
- Applicable crimp terminal shown below.

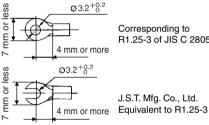

Corresponding to R1.25-3 of JIS C 2805


J.S.T. Mfg. Co., Ltd.


 Proper tightening torque of the connector Connector set screw 0.5 to 0.6 N·m Terminal screw 0.5 to 0.6 N·m

 Incorrect connection of "COM terminal" (DIN terminal no. 3) can cause damage on power source circuit.

Terminal block type

Remove cover ① over terminal block 2 attached to the inside of body. Connect with corresponding power side. For a style with light and surge voltage suppressor, straightly pull out the light and surge voltage suppressor substrate 3 and then connect them.

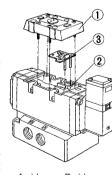

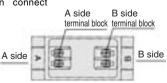

 Applicable terminal: VFR3000: 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S VFR4000: 1.25-3.5M, 1.25Y-3L, 1.25Y-3M VFR5000/6000: 1.25-3.5M, 1.25-3L, 1.25-3M



SYJ

SJ

SY

SV

SZ

VP4

S0700

VQ V04

VQ5

vqc VQZ

SQ

VFS

VFR




Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

∧ Caution


Attaching and Detaching Connectors

- 1. To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- 2. To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

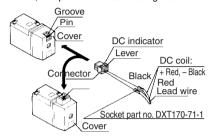

Attaching and Detaching **Lead Wires with Sockets**

Peel 3.2 to 3.7 mm of the tip of lead wire, enter the core wires neatly into a socket and crimp it with a special crimp tool. Be careful so that the cover of lead wire does not enter into the crimping part.

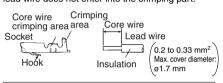


Attaching and Detaching **Lead Wires with Sockets**

1. Attaching

Insert the sockets into the square holes of the connector (with + and - indication) and, continue to push the sockets all the way in until the lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

2. Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

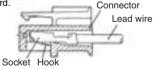


Light/Surge Voltage Suppressor


Refer to table 1 for "Series VFR2000 Plug-in type". "VFR3□ 0.0 VFR4□ 0.0 type of Series VFR3000/4000" and "VFR5000/6000", and table 2 for "Series VFR2000 Non plug-in type" and "VFR3□40, VFR4□40 type of Series VFR3000/4000".


Series VFR2000 Plug-in type Non plug-in type (VFR2□00) (VFR2□10) Light/Surge voltage suppressor Light/Surge voltage suppressor Light/Surge oltage suppressor Series VFR3000, 4000 Non plug-in type Plug-in type Non plug-in type (VFR3□40/4□40)

(VFR3□00/4□00)

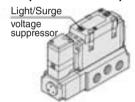


(VFR3□10/4□10)

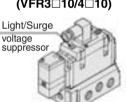

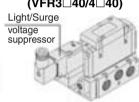

Series VFR5000/6000

Plug-in type (VFR5□00/6□00)

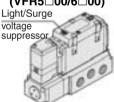

Non plug-in type (VFR5□10/6□10)

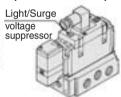


Table (1) Series VFR2000 (VFR2□00) Series VFR3000/4000 (VFR3 = 0/4 = 0) Series VFR5000/6000

Volt	tage	Light/Surge voltage suppressor
AC	Single solenoid	SOL.A A Varistor COM
AC	Double solenoid	SOL.A SOL.B SOL.B Varistor COM
24 VDC	Single solenoid	SOL.A A Varistor COM
or less	Double solenoid	SOL.A A B SOL.B Varistor Varistor COM

Table (2) Series VFR2000 (VFR2□10)

Series VFR3000/4000 (VFR3 040/4 040) Voltage Light/Surge voltage suppressor SOL. A or SOL. B AC Varistor SOL . A or SOL. B 24 VDC or less

Light/Surge voltage suppressor is not available for grommet type.

For grommet type with surge voltage suppressor, refer to page 1321.

Plug Connector Lead Wire Length

Standard length is 300 mm, but the following lengths are also available.

How to Order Connector Assembly

DXT170-80-

Symbol	Lead wire with socket	Note
Nil	Sockets (2 pcs.) only	Without lead wire
1	Blue (2 pcs.)	For 100 VAC
2	Red (2 pcs.)	For 200 V AC
3	Gray (2 pcs.)	Other VAC
4	Red: + Black: -	For DC

Lead wire length

Symbol	Lead wire lengtr
Syllibol	(L mm)
Nil	300
6	600
10	1000
15	1500
20	2000
25	2500
30	3000

How to Order

Include the connector assembly part number together with the part number for the plug connector's solenoid valve without a connector.

<Example> For lead wire length 2000 mm VFR2210-5MO-02 3 pcs. DXT170-80-4A-20 6 pcs.






Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

⚠ Caution

Plugging one of the cylinder ports (A or B) enables use as a normally closed (N.C.) or normally open (N.O.) 3 port valve.

It is convenient when 3 port valve is needed on a manifold, etc., but it can't be used in special applications such as using as a non-leakage valve. Use it with the exhaust port leaving open.

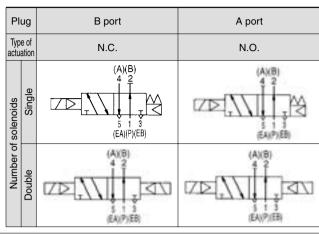

How to Exchange Solenoid Valves, Pilot Valve Assemblies

Used as a 3 Port Valve


How to exchange solenoid valves


- Loosen set screw and take solenoid valve out vertically, otherwise it may cause damage to the solenoid valve. Never remove valve at an angle.
- When mounting solenoid valve on to the base, plug pin assembly (base-side) into receptacle assembly (body-side) vertically.


Tightening Torque for Mounting Bolt

Model	Thread	Tightening torque		
Pilot valve assembly	M3 (2 pcs.)	0.6 N⋅m		
VFR2000	M3 (3 pcs.)	0.9 N⋅m		
VFR3000	M3 (3 pcs.)	1.1 N·m		
VFR4000	M4 (4 pcs.)	1.4 N·m		
VFR5000	M5 (4 pcs.)	2.8 N·m		
VFR6000	M8 (4 pcs.)	16 N⋅m		

Note) For more information about the procedure, refer to the instruction manual.

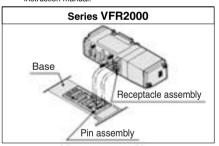

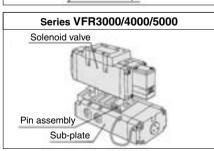


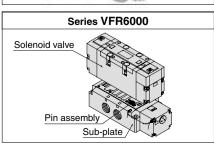



How to exchange pilot valve assemblies

 Possible to exchange pilot valve assemblies like the following figures.

Note) Do not change the rated voltage.

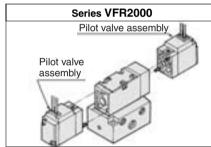

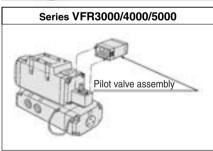

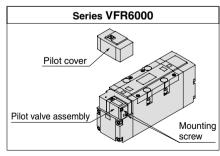

Change Direction of DIN Connector/Cable Entry

 Unscrew retaining screw, pull off outer cover, rotate connector block through 180°. Replace cover and tighten screw.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matter 44 to 47.

SJ

SY

SV

SYJ

SZ

VP4

S0700

VO

VQ4

VQ5

VQC

VQZ SQ

VFS

VFR



Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

Interface Regulator

⚠ Caution

Specifications

Interface regulator	ARBF2000	AR	ARBF3050		ARBF4050		ARBF5050			
Applicable solenoid valve series	VFR2000	VF	VFR3000		VFR4000		VFR5000			
Regulating port	Р	Α	В	Р	Α	В	Р	Α	В	Р
Maximum operating pressure				1.0 N	IPa (1)				
Set pressure range	0.05 to 0.83 MPa			0	.1 to (1 88.0	MРа ((2)		
Ambient and fluid temperature		−5 to 60°C (No freezing) (3)								
Port size for connection of pressure gauge	M5 x 0.8	M5 x 0.8 Rc ½								
Weight (kg)	0.16		0.46 0.72 0.8			0.83				
Effective area at supply side (mm ²) $P \rightarrow A$	5.5	21	18.5	11	35	31	26	44	38	32
S at $P_1 = 0.7 \text{ MPa/P}_2 = 0.5 \text{ MPa} P \rightarrow B$	5.1	18.5	22	12	31	31	24	38	40	31
Effective area at exhaust side (mm ²) $A \rightarrow EA$	12		40		55		90			
S at $P_2 = 0.5 \text{ MPa}$ B \rightarrow EI	11		36			45			77	

Note 1) Maximum operating pressure of solenoid valve is 0.9 MPa.


- Note 2) Set the pressure within operating pressure range of solenoid valve.
- Note 3) Solenoid valve: Max. 50°C
- Note 4) Synthesized effective area with 2 position. Note 5) • Operate an interface regulator only by applying pressure from the "P" port of the base, ex-
 - To combine a pressure center valve and the A and B port pressure reduction interface regulator, use the ARBF3000, ARBF4000, or the ARBF5000 model.

cept when using it as a reverse pressure valve.

- To combine a reverse pressure valve and an interface regulator, use the ARBF3000, ARBF4000, or the ARBF5000 model. The P port pressure reduction cannot be used.
- When combining a double check valve and an interface regulator, use a manifold or subplate as a basis, and stack them in the following order; the perfect spacer → the interface regulator → the valve.
- When a closed center valve is combined with the interface regulator's A, B port regulation, note that it cannot be used for intermediate stops of a cylinder because there is leakage from relief port on the regulator.


Flow Characteristics (P ightarrow A) (Condition: Inlet pressure 0.7 MPa when 2 position solenoid valve is mounted.)

JIS Symbol

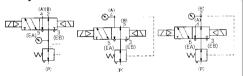


P port regulation A port regulation B port regulation


ARBF2000-00-P

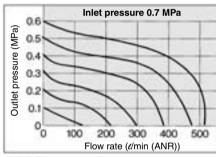


ARBF3050-00-P

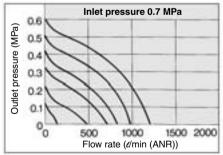


ARBF3050-00-A

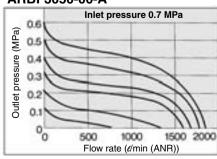


ARBF4050-00-P

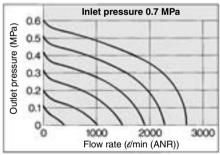


ARBF4050-00-A

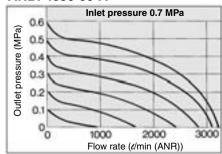

ARBF5050-00-P

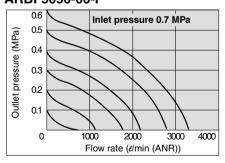

ARBF5050-00-A

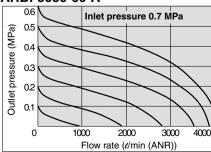



Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

Lead Wire Connection

⚠ Caution

Type 01T with Terminal Block

Series VFR2000


 Remove junction cover of manifold, exposing terminal block attached to the manifold block. Lead wires from solenoid valve are connected with the terminals on upper side of terminal block. (On the terminal block, lead wire is connected with both A and B sides of solenoid valve in accordance with the corresponding markings A and B on the block.)

Connect each lead wire of power side corresponding to respective solenoid valve on the lower terminal block.

Terminal block wiring specifications is in accordance with COM.

Terminal block marking	A –	B +	В-
VFR2100	A side	СОМ	
VFR2200	A side	СОМ	B side
VFR2 ³ ₄ 00	A side	СОМ	B side

- Applicable terminal:
 1.25-3, 1.25-3S, 1.25Y-3N, 1.25Y-3S
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR2000 can be used as either "+COM" or "-COM".

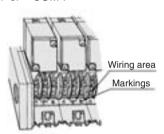

Series VFR4000										
Terminal block marking Model	A –	B +	B –							
VFR4100	A side	СОМ								
VFR4200	A side	СОМ	B side							
VFR4 ³ ₄ 00	A side	СОМ	B side							

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR4000 can be used as either "+COM" or "-COM".

Series VFR5000										
Terminal block marking Model	A –	B +	В-							
VFR5100	A side	СОМ								
VFR5200	A side	СОМ	B side							
VFR5 ³ 400	A side	СОМ	B side							

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "B+" and "B-" marks are indicated on the terminal block, VFR5000 can be used as either "+COM" or "-COM".

Series VFR3000										
Terminal block marking Model	A –	COM +	B –							
VFR3100	A side	СОМ								
VFR3200	A side	сом	B side							
VFR3400	A side	СОМ	B side							

- Applicable terminal: 1.25-3.5M, 1.25Y-3L, 1.25-3M
- Although "A-", "COM+" and "B-" marks are indicated on the terminal block, VFR3000 can be used as either "+COM" or "-COM".

SJ
۷۶

SV

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5 VQC

VQZ

SQ

VFS

VFR



Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.


Lead Wire Connection


Manifold/Plug-in Type

Type 01C Circular Connector

Series VFR2000/3000/4000/5000

- When multi-connector is used, mass-termination between power supply side and solenoid valve can be done. This saves the wiring connection labor.
- Wire connection specifications
 Lead wire for both solenoid A and B sides in manifold are connected to connector terminal as COM specifications.

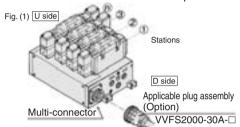

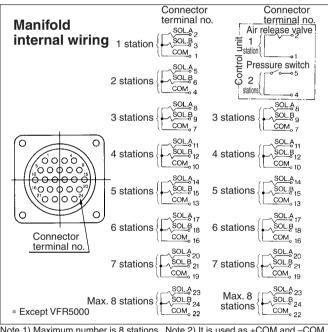

Note 1) Maximum number is 8 stations. Note 2) It is used as +COM and -COM. Note 3) Station numbers are started from D side although connector is mounted

Applicable Plug Assembly (Option)

Assembly part no.	Cable length	Component parts
VVFS2000-30A-1	1.5 m	
VVFS2000-30A-2	3 m	Plug 206837-1 1 pc.
VVFS2000-30A-3	5 m	Cable clamp 206138-1 1 pc.
VVFS2000-30A-4 *	7 m	Socket 66101-2 24 pcs.
VVFS2000-30A-5 *	10 m	Cable VCTF 24 cores x 0.75 mm ²
VVFS2000-30A-6 *	15 m	made by Tyco Electronics AMP K.K.
VVFS2000-30A-7 *	20 m	

^{*} Option


Cable Color List of Each Terminal No.


Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13
Lead wire color	Orange	Orange	Black	Black	Green	Green	Re	d Red	Blue	Blue	Yellow	Yellow	Brown
Dot marking	_	Yes	_	Yes	_	Yes	_	- Yes	s -	Yes	_	Yes	_
Terminal no.	14	15	16	17	7 1	8 1	19	20	21	22	23		24
Lead wire color	Brown	White	Whit	e Pin	ık Pi	nk G	ray	Gray	Sky blue	Sky blue	Light gre	en Lig	ht green
Dot marking	Yes	l —	Yes	; _	- Ye	es -	_	Yes	_	Yes	_	,	Yes

Type 01F D-sub Connector

Series VFR2000/3000/4000/5000

- MIL standard type D connector (Terminal: 25 pins) has wide exchangeability and saves wiring labor.
- Wire connection specifications
 Lead wire for both solenoid A and B sides in manifold are connected to connector terminal as COM specifications.

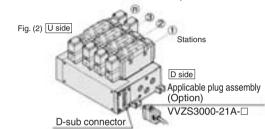

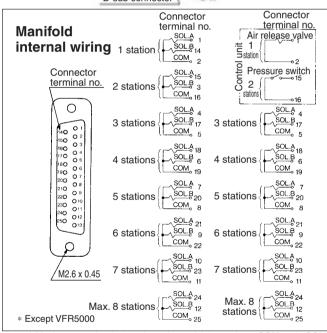

Note 1) Maximum number is 8 stations. Note 2) It is used as +COM and -COM. Note 3) Station numbers are started from D side although connector is mounted

Applicable Plug Assembly (Option)

	9	<u> </u>
Assembly part no.	Cable length	Component parts
VVZS3000-21A-1	1.5 m	
VVZS3000-21A-2	3 m	
VVZS3000-21A-3	5 m	Plug MIL standard type D connector
VVZS3000-21A-4 *	8 m	Number of terminals: 25 pins
VVZS3000-21A-5 *	10 m	Cable: 25 cores x 0.3 mm ²
VVZS3000-21A-6 *	15 m	
VVZS3000-21A-7 *	30 m	
VVZS3000-21A-8 *	20 m	

^{*} Option

Cable Color List of Each Terminal No.

Terminal no.	1	2	3	4	5		6	7	8	9	10	11	12
Lead wire color	Black	Brown	Rec	l Oran	ge Yell	w P	ink	Blue	Purple	Gray	White	White	Yellow
Dot marking	_	_	-	-	- -	- -	- [_	White	Black	Black	Red	Red
Terminal no.	13	14	15	16	17	18	19	20) 21	22	23	24	25
Lead wire color	Orango	Vallow	Pink	Rlua	Purnla	Grav	Orano	n Ro	d Brow	m Pin	k Grav	Black	White
Leau wife color	Olaliye	ICHOW	I IIIIN	Diuc	i uipic	uiay	Viuni	je i te	u Diov	արա	κιωια	Diaoit	