
# Vacuum Ejector

# Series ZM



- Built-in suction filter and silencer
- Air supply valve for generating a vacuum
- Vacuum release valve (equipped with a flow volume adjustment valve)
- Vacuum pressure switch (solid state, diaphragm)

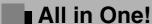

All tubing, wiring, indicators, and adjustment functions have been eliminated from the side surfaces, thus enabling assembly and maintenance while linked to a manifold.

- EXH system CommonSUP system Common, Individual

Maximum air suction volume increased by 40% Maximum vacuum pressure –84 kPa

The suction volume has been increased by 40% through the adoption of a two-stage nozzle construction.

- Compact and lightweight 15.5 mm width, 400 g (full system)
- Air operated type


Two-stage nozzle construction The suction volume increase by the two-stage nozzle Vacuum pressure First stage nozzle diffuser performance Second stage nozzle diffuser performance Suction flow rate Suction volume increase

### Series ZM Applications

Fields: Semiconductor and electrical, automobile assembly, food and medical equipment, and various types of manufacturing and assembly equipment

Machines: Robotic hand/material handling, automotive assembling machines, automatic transfer equipment, pick and place, printing machinery

Functions: Vacuum adsorption transfer, vacuum adsorption retention, vacuum generated air flow

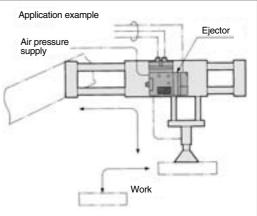

ZA ZX

ZR

ZM

ZMA

ZQ ZH

ZU

ZL

ZY **ZF** 

**ZP** 

SP

ZCUK

**AMJ** AMV

**AEP** 


HEP

Equipment

# **Vacuum Ejector** With Valve and Switch

# Series ZM

Note) CE compliant: For DC only.

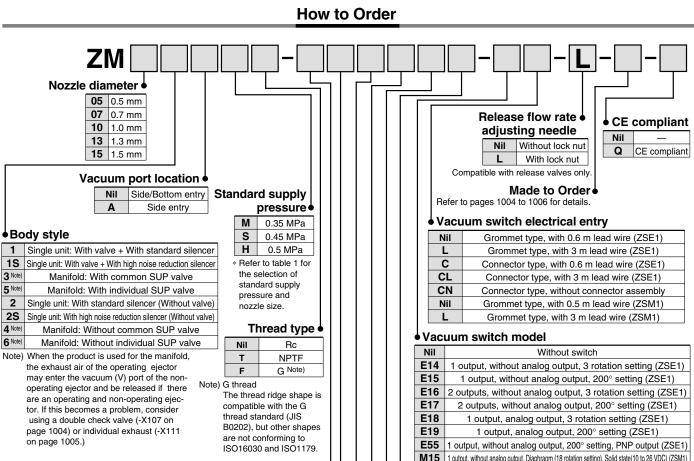

### Supply valve/Release valve combination

| J   | Supply valve (N.C.)  |  |  |  |
|-----|--|--|--|--|
| K   | Supply valve (N.C.), and release valve                                   |  |  |  |
| Α   | Supply valve (N.O.)  |  |  |  |
| В   | Supply valve (N.O.), and release valve                                   |  |  |  |
| P3  | Air operated valve (supply valve), Port size connection M3 x 0.5         |  |  |  |
| P5  | Air operated valve (supply valve), Port size connection M5 x 0.8         |  |  |  |
| Q3  | Air operated valve (supply/release valve), Port size connection M3 x 0.5 |  |  |  |
| Q5  | Air operated valve (supply/release valve), Port size connection M5 x 0.8 |  |  |  |
| Nil | Without valve  |  |  |  |

\* As the double solenoid specifications, -X126 and -X135 are available as a special order. (Refer to page 1006.)

When selecting air operated valves, there will be no symbol specified for "pilot valves", "solenoid valve rated voltage", "electrical entry", "light/surge voltage suppressor" and "manual override"

#### Pilot valve •

| Nil | DC: 1 W (With indicator light: 1.05 W)   |                      |
|-----|--|----------------------|
| Υ   | DC: 0.45 W (With indicator light: 0.5 W) | Solenoid valve rated |

\* Only 24 VDC and 12 VDC are applicable to 0.45 W.

|         |                            | CE compliant |
|---------|----------------------------|--------------|
| 1 Note) | 100 VAC 50/60 Hz           | -            |
| 3 Note) | 110 VAC 50/60 Hz           | _            |
| 5       | 24 VDC                     | •            |
| 6       | 12 VDC                     | •            |
| V       | 6 VDC                      | •            |
| S       | 5 VDC                      | •            |
| R       | 3 VDC                      | •            |
| Nil     | Air operated/Without valve | _            |
|         |                            |              |

Note) CE compliant products are not available for "1" and "3".

| Nil | Without switch   |  |  |  |  |
|-----|--|--|--|--|--|
| E14 | 1 output, without analog output, 3 rotation setting (ZSE1)   |  |  |  |  |
| E15 | 1 output, without analog output, 200° setting (ZSE1)   |  |  |  |  |
| E16 | 2 outputs, without analog output, 3 rotation setting (ZSE1)  |  |  |  |  |
| E17 | 2 outputs, without analog output, 200° setting (ZSE1)  |  |  |  |  |
| E18 | 1 output, analog output, 3 rotation setting (ZSE1)   |  |  |  |  |
| E19 | 1 output, analog output, 200° setting (ZSE1)   |  |  |  |  |
| E55 | 1 output, without analog output, 200° setting, PNP output (ZSE1)                                   |  |  |  |  |
| M15 | 1 output, without analog output, Diaphragm (18 rotation setting), Solid state(10 to 26 VDC) (ZSM1) |  |  |  |  |
| M21 | 1 output, without analog output, Diaphragm (18 rotation setting), Reed (AC/DC 100 VAC)(ZSM1)       |  |  |  |  |

## Manual override

| Nil | Non-locking push type |
|-----|-----------------------|
| В   | Locking slotted type  |

#### Light/Surge voltage suppressor

| Nil | None                                |
|-----|-------------------------------------|
| Z   | With light/surge voltage suppressor |
| S   | With surge voltage suppressor       |
|     |                                     |

\* S is not available for AC.

DC voltage (with surge voltage suppressor)

If the polarity is incorrect at DC (surge voltage suppressor), diode or switching element may be damaged.

### Electrical entry

| G   | Grommet type, with 0.3 m lead wire (applicable to DC)  |  |  |  |  |  |
|-----|--|--|--|--|--|--|
| Н   | Grommet type, with 0.6 m lead wire (applicable to DC)  |  |  |  |  |  |
| L   | L plug connector, with 0.3 m lead wire                 |  |  |  |  |  |
| LN  | L plug connector, without lead wire (applicable to DC) |  |  |  |  |  |
| LO  | L plug connector, without connector (applicable to DC) |  |  |  |  |  |
| Nil | Air operated/Without valve                             |  |  |  |  |  |

#### Combination of Nozzle Diameter and Standard Supply Pressure

| Combination of McLeic Planteto, and Ctandard Cupply 1 1000ard |                 |                             |                |  |  |  |
|---|-----------------|-----------------------------|----------------|--|--|--|
| Nozzle  | Standa          | tandard supply pressure MPa |                |  |  |  |
| diameter  | <b>M</b> (0.35) | <b>S</b> (0.45)             | <b>H</b> (0.5) |  |  |  |
| 0.5 mm  | _               | _                           | 0              |  |  |  |
| 0.7 mm  |                 | _                           | 0              |  |  |  |
| 1.0 mm  | 0               | _                           | 0              |  |  |  |
| 1.3 mm  | 0               | 0                           | 0              |  |  |  |
| 1.5 mm  | _               | 0                           |                |  |  |  |
|   |                 |                             |                |  |  |  |



voltage


ZX Table (1) How to Order Connector for Solid State Switch • Without lead wire (A connector and 4 sockets) ............. ZS-20-A ZR ZM Lead wire length ZMA Note) If ordering switch with 5 m lead wire, specify both switch Nil 0.6 m and lead wire with connector part numbers. 30 3 m **ZO** \* ZS-20-5A-50 .....1 pc. 50 5 m ZH Table (2) How to Order Connector for Supply Valve and Vacuum Release Valve ZU **⚠** Caution **VJ10-36-1A-**(Applicable to 100 VAC only) When using AC, the DC solenoids are ZL operated via a rectifier. Therefore, when using this type, make sure to combine the ZY□ VJ10-36-3A-(Applicable to 110 VAC only) connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other types of malfunctions. VJ10-20-4A-(Applicable to DC only)  $\mathsf{ZP}\square$ Lead wire length Note) If ordering a valve with 600 mm or longer SP Nil 300 mm lead wire, indicate the valve without connector and connector assembly. 600 mm Ex.) Lead wire length: 1000 mm 10 1000 mm ZCUK 15 1500 mm \* VJ10-36-1A-10 ......2 pcs. 20 2000 mm AMJ 25 2500 mm 3000 mm AMV **How to Order AEP** ZM – Nozzle diameter Standard supply pressure Body style HEP <Without valve> Related Equipment M 0.35 MPa (Double diffuser) (Except nozzles diameter "05" and "15" type) 05 2 For single unit 0.5 mm S 0.45 MPa (Single diffuser) (Nozzle diameter "13" and "15" only) 07 0.7 mm For manifold, common SUP **H** 0.5 MPa (Double diffuser) (Except nozzles diameter "15" type) For Manifold, individual SUP 10 1.0 mm 6 13 1.3 mm <With valve> **15** 1.5 mm For single unit 3 For manifold, common SUP For manifold, individual SUP **Quick Delivery/Model** <With valve/Single unit> <Without valve/Single unit> ZM052H ZM051H-K5LZ (-Q) ● ZM131H-K5LZ (-Q) ZM072H ZM051H-K5LZ-E15 (-Q) ● ZM131H-K5LZ-E15 (-Q) ■ ZM102H ● ZM071H-K5LZ (-Q) ● ZM131M-K5LZ (-Q) ■ ZM132H ZM071H-K5LZ-E15 (-Q) ● ZM131M-K5LZ-E15 (-Q)

ZM101H-K5LZ (-Q)ZM101H-K5LZ-E15 (-Q)


ZA



# JIS Symbol

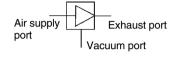

# **Ejector System Circuit**

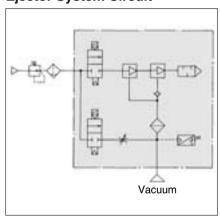

# Made to Order (Refer to pages 1004 to 1006 for details.)

# Model

| Nozzle dia.<br>ø (mm) | Model  | Standar<br><b>H</b> | d supply  <br><b>M</b> | oressure<br><b>S</b> | Maximum suction flow rate (ℓ/min (ANR)) | Air consumption (ℓ/min (ANR)) | Diffuser construction |
|-----------------------|--------|---------------------|------------------------|----------------------|---|-------------------------------|-----------------------|
| 0.5                   | ZM05□H |                     |                        |                      | 15                                      | 17                            |                       |
| 0.7                   | ZM07□H | 0.5 MPa             |                        |                      | 30                                      | 30                            |                       |
| 1.0                   | ZM10□H | 0.5 IVII a          | _                      | _                    | 50                                      | 60                            | Double                |
| 1.3                   | ZM13□H |                     |                        |                      | 66                                      | 90                            | diffuser              |
| 0.7                   | ZM07□M |                     |                        |                      | 23                                      | 33                            | amacoi                |
| 1.0                   | ZM10□M | _                   | 0.35 MPa               | _                    | 38                                      | 60                            |                       |
| 1.3                   | ZM13□M |                     |                        |                      | 44                                      | 85                            |                       |
| 1.3                   | ZM13□S |                     |                        | 0.45 MPa             | 37                                      | 88                            | Single                |
| 1.5                   | ZM15□S |                     |                        | U.45 IVII a          | 45                                      | 110                           | diffuser              |

# **Vacuum Ejector Specifications**

| Fluid                       |               | Air  |  |  |  |
|-----------------------------|---------------|--|--|--|--|
| Maximum operating pressure  |               | 0.7 MPa  |  |  |  |
| Maximum vacuum pressure     |               | – 84 kPa   |  |  |  |
| Supply proceure range       | Without valve | 0.2 to 0.55 MPa  |  |  |  |
| Supply pressure range       | With valve    | 0.25 to 0.55 MPa                                       |  |  |  |
| Operating temperature range | Without valve | 5 to 60 °C   |  |  |  |
| Operating temperature range | With valve    | 5 to 50 °C   |  |  |  |
| Air supply valve            |               | Main valve ——— Poppet                                  |  |  |  |
| Vacuum release valve        |               | Pilot valve ——— VJ114, VJ324M                          |  |  |  |
| Vacuum pressure switch      |               | Electronic — ZSE1-00-                                  |  |  |  |
|                             |               | Diaphragm ——— ZSM1-0 ———                               |  |  |  |
| Suction filter              |               | Filteration degree: 30 µm, Material: PE (Polyethylene) |  |  |  |

# **Valve Specifications**

| How to operate           | Pilot type   |
|--------------------------|--|
| Main valve               | NBR poppet   |
| Effective area           | 3 mm <sup>2</sup>  |
| Cv factor                | 0.17   |
| Operating pressure range | 0.25 to 0.7 MPa  |
| Electrical entry         | Plug connector, Grommet (available on DC)                                      |
| Max. operating frequency | 5 Hz   |
| Voltage                  | 24/12/6/5/3 VDC, 100/110 VAC (50/60 Hz)  |
| Power consumption        | DC: 1 W (With light: 1.05 W), 100 VAC: 1.4 W (1.45 W), 110 VAC: 1.45 W (1.5 W) |


# Mass

|                    |                |      |       |      | (kg)  |
|--------------------|----------------|------|-------|------|-------|
| Model              | Without switch | -E□□ | -E□□L | -M□□ | -M□□L |
| <b>Z</b> M□□2□     | 0.17           | 0.21 | 0.26  | 0.27 | 0.32  |
| ZM□□4□             | 0.17           | 0.21 | 0.26  | 0.27 | 0.32  |
| <b>ZM</b> □□6□     | 0.17           | 0.21 | 0.26  | 0.27 | 0.32  |
| ZM 🗆 1 🗆 - J 🗆 🗆   |                |      |       |      |       |
| <b>Z</b> M□□3□-J□□ | 0.24           | 0.28 | 0.33  | 0.34 | 0.39  |
| <b>Z</b> M□□5□-J□□ |                |      |       |      |       |
| ZM 🗆 1 🗆 - K 🗆 🗆   |                |      |       |      |       |
| ZM□□3□-K□□         | 0.25           | 0.29 | 0.34  | 0.35 | 0.4   |
| <b>ZM</b> □□5□-K□□ |                |      |       |      |       |
| ZM 🗆 1 🗆 - A 🗆 🗆   |                |      |       |      |       |
|                    | 0.25           | 0.29 | 0.34  | 0.35 | 0.4   |
| <b>ZM</b> □□5□-A□□ |                |      |       |      |       |
| <b>ZM</b> □□1□-B□□ |                |      |       |      |       |
| <b>ZM</b> □□3□-B□□ | 0.26           | 0.3  | 0.35  | 0.36 | 0.41  |
| <b>ZM</b> □□5□-B□□ |                |      |       |      |       |
| ZM 🗆 🗆 🗕 - 🖁 🗆     | 0.24           | 0.28 | 0.33  | 0.34 | 0.39  |

| Stations | -04R/L | -04B  | -06R/L | -06B  | -SR/L | -SB   |
|----------|--------|-------|--------|-------|-------|-------|
| 1        | 0.209  | 0.219 | 0.219  | 0.229 | 0.239 | 0.269 |
| 2        | 0.214  | 0.224 | 0.224  | 0.234 | 0.244 | 0.274 |
| 3        | 0.219  | 0.229 | 0.229  | 0.239 | 0.249 | 0.279 |
| 4        | 0.224  | 0.234 | 0.234  | 0.244 | 0.254 | 0.284 |
| 5        | 0.229  | 0.239 | 0.239  | 0.249 | 0.259 | 0.289 |
| 6        | 0.234  | 0.244 | 0.244  | 0.254 | 0.264 | 0.294 |
| 7        | 0.239  | 0.249 | 0.249  | 0.259 | 0.269 | 0.299 |
| 8        | 0.244  | 0.254 | 0.254  | 0.264 | 0.274 | 0.304 |
| 9        | 0.249  | 0.259 | 0.259  | 0.269 | 0.279 | 0.309 |
| 10       | 0.254  | 0.264 | 0.264  | 0.274 | 0.284 | 0.314 |



# Construction: ZM□1□-K□L-E□

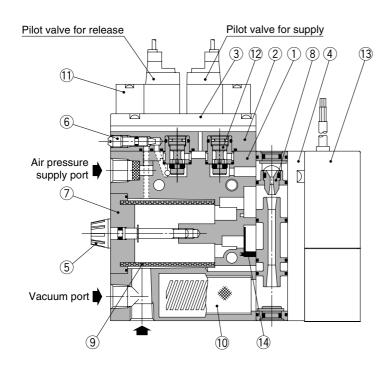

### **Component Parts**

| No. | Description   | Material                   | Note   |
|-----|---------------|----------------------------|--|
| 1   | Body          | Aluminum die-casted        |  |
| 2   | Valve cover   | Zinc die-casted or resin   |  |
| 3   | Adapter plate | Zinc die-casted            |  |
| 4   | Cover         | Zinc die-casted            | Without switch: ZM-HCA,<br>With switch: ZM-HCB |
| 5   | Tension bolt  | Stainless steel/Polyacetal |  |

### **Replacement Parts**

| No. | Description                        | Material                        | Part no.                       |  |
|-----|------------------------------------|---------------------------------|--------------------------------|--|
| 6   | Release flow rate adjusting needle | Brass/Electroless nickel plated | ZM-NA (With lock nut: ZM-ND-L) |  |
| 7   | Filter cover assembly              | _                               | ZM-FCB-0                       |  |
| 8   | Diffuser assembly                  | _                               | ZM□□0□-0                       |  |
| 9   | Suction filter                     | Polyethylene                    | ZM-SF                          |  |
| 10  | Silencer assembly                  | Silencer assembly —             |                                |  |
| 11  | Pilot valve                        | _                               | VJ114-□□□□                     |  |
| 12  | Poppet valve assembly              | _                               | ZMA-PV2-0                      |  |
|     |                                    |                                 | ZSE1-00-□□                     |  |
| 13  | Vacuum pressure switch             | _                               | ZSM1-015                       |  |
|     |                                    |                                 | ZSM1-021                       |  |
| 14  | Check valve                        | NBR                             | ZM-CV                          |  |
|     |                                    |                                 |                                |  |

# 

Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

# **⚠** Caution

Selection and sizing of Series ZM
Refer to the Vacuum Equipment Model
Selection on pages 825 to 843.

# Operation of an ejector equipped with a valve

When the air supply pilot valve is turned ON, air flows to the diffuser assembly, and a vacuum is created.

When the pilot valve for releasing the vacuum is turned ON, air flows to the vacuum port side, immediately causing a release in the vacuum. The release speed can be adjusted by regulating the flow volume adjustment screw.

When the supply valve is turned OFF, the atmospheric pressure causes the air to flow back from the silencer, thus releasing the vacuum. However, in order to properly release a vacuum, a vacuum release valve must be used.

### **Operating environment**

Because the filter cover is made of polycarbonate, do not use it with or expose it to following chemicals: paint thinner, carbon tetrachloride, chlorofrom, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkalinic), etc. Also, do not expose it to direct sunlight.

Furthermore, avoid use in direct sunlight.

# Release flow rate adjusting screw

Turning the vacuum release flow rate adjusting screw 4 full turns from the fully closed position renders the valve fully open. Do not turn more than four times since turning excessively may cause the screw fall off.

In order to prevent the screw from loosening and falling out, the release flow rate adjusting needle with lock nut is also available.

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL ZY□

ZF□ ZP□

SP

ZCUK

AMJ


AMV AEP

HEP


# Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa

# ZM05□H

#### **Exhaust Characteristics**

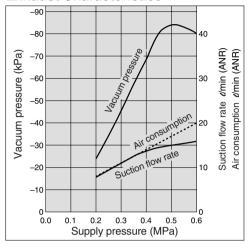


Flow Characteristics

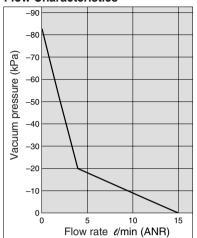


# ZM07□H

# **Exhaust Characteristics**

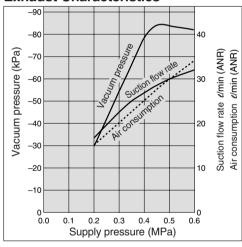


**Flow Characteristics** 

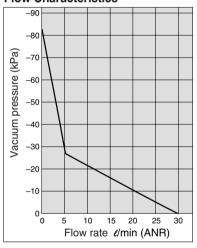


# ZM10□H

**Exhaust Characteristics** 

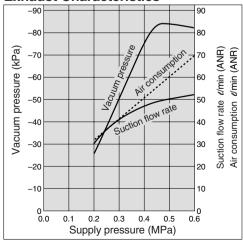


**Flow Characteristics** 

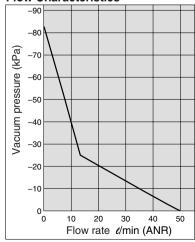


# Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa

# ZM13□H

# **Exhaust Characteristics**

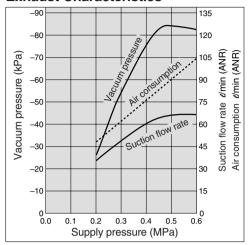


Flow Characteristics

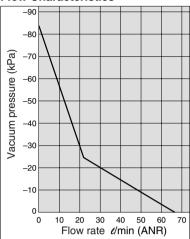


# Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: S ... 0.45 MPa

# ZM13□S

#### **Exhaust Characteristics**

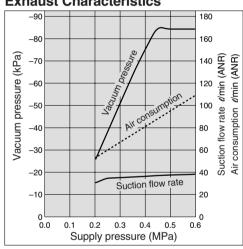


#### **Flow Characteristics**

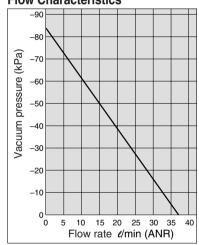


### ZM15□S

### **Exhaust Characteristics**

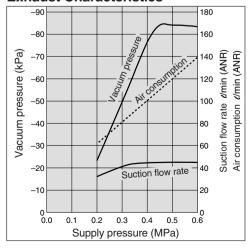

#### Flow Characteristics

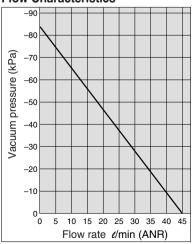



ZΑ

ZX

ZR

ZM

ZMA

**ZO** 

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

**ZCUK** 

AMJ

AMV


**AEP** 

HEP


# Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: M ... 0.35 MPa

# ZM07□M


#### **Exhaust Characteristics**

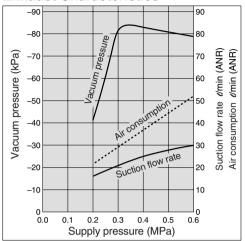

#### Flow Characteristics

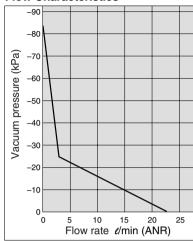

## How to Read Flow Characteristics Graph

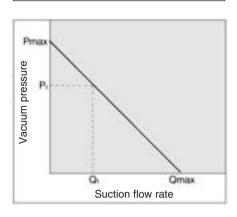

Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard supply pressure.

In graph, Pmax is max. vacuum pressure and Qmax is max. suction flow. The values are specified according to catalog use.

Changes in vacuum pressure are expressed in the order below.


- 1. When ejector suction port is covered and made airtight, suction flow is 0 and vacuum pressure is at maximum value (Pmax).
- 2. When suction port is opened gradually, air can flow through (air leakage), suction flow increases, but vacuum pressure decreases (condition P<sub>1</sub> and Q<sub>1</sub>).
- When suction port is opened further, suction flow moves to maximum value (Qmax), but vacuum pressure is near 0 (atmospheric pressure).

When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0.


When ventilative or leaky work must be adsorbed, please note that vacuum pressure will not be high.

# ZM10□M

#### **Exhaust Characteristics**

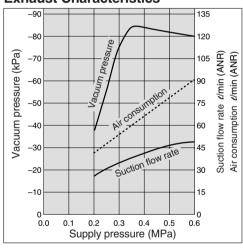


### Flow Characteristics

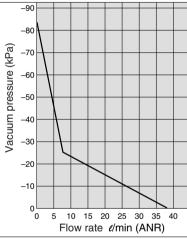


# ZM13□M

#### **Exhaust Characteristics**

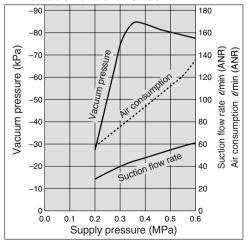

#### Flow Characteristics

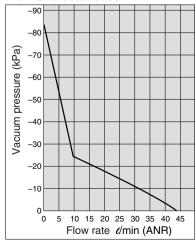

ZA

ZX

ZR ZM

ZMA

ZQ

ZH

ZU

ZL ZY

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

# Vacuum Pressure Switch/Solid State Switch (ZSE), Diaphragm Switch (ZSM)


#### Vacuum Switch

| Model                       | ZSE1-00-14  | ZSE1-00-15          | ZSE1-00-16           | ZSE1-00-17            | ZSE1-00-18  | ZSE1-00-19            | ZSE1-00-55                  | ZSM1-015                           | ZSM1-021                                      |
|-----------------------------|---|---------------------|----------------------|-----------------------|-------------|-----------------------|-----------------------------|------------------------------------|---|
| Sensor type                 |   | 1 2021 00 00        |                      | nragm                 |             |                       |                             |                                    |   |
| Switch                      |   |                     | ı                    | Electronic circu      | it          |                       |                             | Solid state                        | Reed  |
| Set pressure range          |   |                     |                      | 0 to -101 kPa         |             |                       |                             | –27 to -                           | -80 kPa                                       |
| Hysteresis                  | 1 to 10% of the set pr  | essure (Changeable) | 3% full span         | or less (Fixed)       | 1 to 10% c  | of the set pressure ( | Changeable)                 | Max. 15 kPa                        | Max. 20 kPa                                   |
| Repeatability               |   |                     | ±1                   | % full span or le     | ess         |                       |                             | ±10%                               | or less                                       |
| Temperature characteristics |   |                     | ±3                   | % full span or le     | ess         |                       |                             | ±5%                                | F.S.  |
| Operating voltage           |   |                     | 12 to 24 V           | DC (Ripple ±10        | )% or less) |                       |                             | 4.5 to 28 VDC                      | 100 VAC/VDC                                   |
| ON-OFF output               |   |                     | NPN open o           | collector 30 V,       | Max. 80 mA  |                       | PNP open collector<br>80 mA | Open collector<br>28 V, Max. 40 mA |   |
| Setting points              | 1 p   | oint                | 2 pc                 | oints                 |             | 1 point               |                             | 1 point                            |   |
| Operation indicator light   | Lights up   | when ON             | Lights ON (Output 1: | Red, Output 2: Green) | Lights up   | when ON               | Lights up when ON (Red)     | Lights up                          | when ON                                       |
| Setting trimmer             | 3 rotations   | 200 degrees         | 3 rotations          | 200 degrees           | 3 rotations | 200 de                | egrees                      | 18 rot                             | tations                                       |
| <b>Current consumption</b>  | 17 mA or less (When 24 VDC is ON) 25 mA or less (When 24 VDC is ON) 17 mA or less (When 24 VDC is ON) |                     |                      |                       |             |                       |                             |                                    |   |
| Max. current                |   |                     |                      |                       |             |                       |                             |                                    | 24 V or less:50 mA<br>48 V:40 mA, 100 V:20 mA |
| Max. operating pressure     |   |                     |                      | 0.2 MPa               |             |                       |                             | 0.5                                | MPa   |

<sup>\*</sup> When using ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.


# Solid State Switch (ZSE)

#### Circuit/Connection

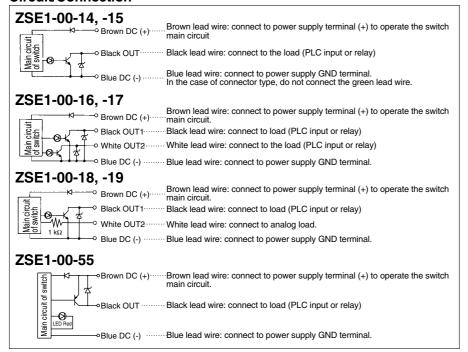

# Diaphragm Switch (ZSM)

#### Solid State Switch: ZSM1-015

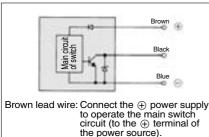


the power source).
Connect the load (to the Black lead wire: input or output relay of the PLC).

Connect the ⊝ power supply (to the GND terminal of the Blue lead wire:

power supply).


#### Reed Switch: ZSM1-021

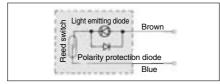

#### Contact protection box

The switch does not have a built-in contact protection circuit. Use this box if an induction load is applied or if the lead wire is longer than 5 meters.

#### **Internal Circuit of Contact Protection Box**

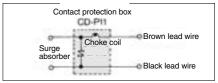




### How to Set the Pressure

- The ON pressure is set with the pressure setting trimmer. The high pressure/high vacuum pressure can be set turning it clockwise.
- When setting, use a flat head screw driver which fits the groove in the trimmer, and turn it gently with your fingertips.


#### 

- Hysteresis can be set using the hysteresis setting trimmer. The setting is increased by turning it clockwise, and the range is 1 to 10% of the set pressure range.
- When the hysteresis setting trimmer is moved after setting the ON pressure, it must be set again.

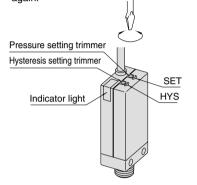


#### ZSE1(L)-□□-16/-17

- OUT1 (black lead wire, red LED) can be set with the pressure setting trimmer 1 (SET1).
- OUT2 (white lead wire, green LED) can be set with the pressure setting trimmer 2 (SET2).

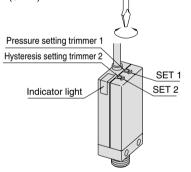

• When using the switch to confirm correct adsorption, the vacuum pressure is set to the minimum value to reliably adsorb. If the value is set below the minimum, the switch will be turned ON even when adsorption has failed or is insufficient. If the pressure is set too high, the switch may not turn ON even though it may adsorb correctly.

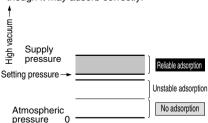


## **⚠** Caution

Observe the following precautions for setting the vacuum pressure: Use your fingertips to gently turn the screwdriver. Do not use a screwdriver with a large grip or with a tip that does not fit into the trimmer groove because this could damage the groove.

### Hysteresis

Hysteresis is the difference in pressure when the output signal is ON and OFF. The pressure to be set is the ON pressure.


It turns ON at the set pressure.

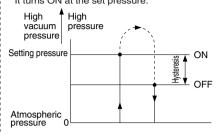

#### **How to Use Connector**


## 1. Attaching and detaching connectors

- When assembling the connector to the switch housing, push the connector straight onto the pins until the level locks into the housing slot.
- When removing the connector from the switch housing, push the lever down to unlock it from the slot and then withdraw the connector straight off of the pins.

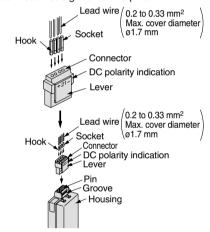

2. Crimping of lead wires and sockets
Strip 3.2 to 3.7 mm of the lead wire ends, insert each stripped wire into a socket and crimp contact it using special crimping tool. Be careful that the outer insulation of the lead wires does not interfere with the socket contact part.

(Crimping tool: DXT170-75-1)

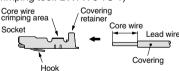


# Attaching and detaching of socket to connector with lead wire

Attaching

Insert the sockets into the square holes of the connector (with +, 1, 2, – indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (about 1 mm). If the socket will be used again, first spread the hook outward.

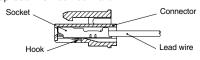

ZA

ZX

<u>Z</u>n

ZM ZMA

ZQ

711

ZH

ZU ZL

ZY□

ZF□ ZP□


SP

ZCUK

AMJ


AMV AEP

HEP

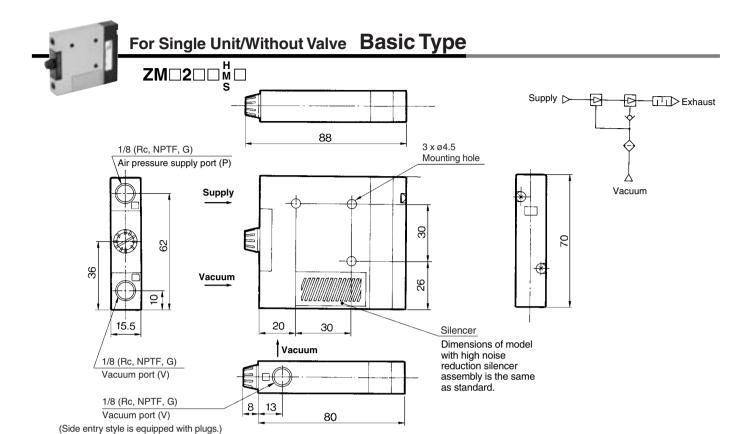

# <Components> For Single Unit/Without Valve Basic Type with Switch Supply D Exhaust 111 1/8 (Rc, NPTF, G) 3 x ø4.5 Mounting hole Air pressure supply port (P) Vacuum Supply 30 62 36 Vacuum 56 Silencer <u>15.5</u> Dimensions of model with high noise reduction silencer 20 30 1/8 (Rc, NPTF, G) Vacuum assembly is the same as standard. Vacuum port (V) 103 13 1/8 (Rc, NPTF, G) 80 Vacuum port (V) (Side entry style is equipped with plugs.)


# Vacuum Ejector With Valve and Switch Series ZM

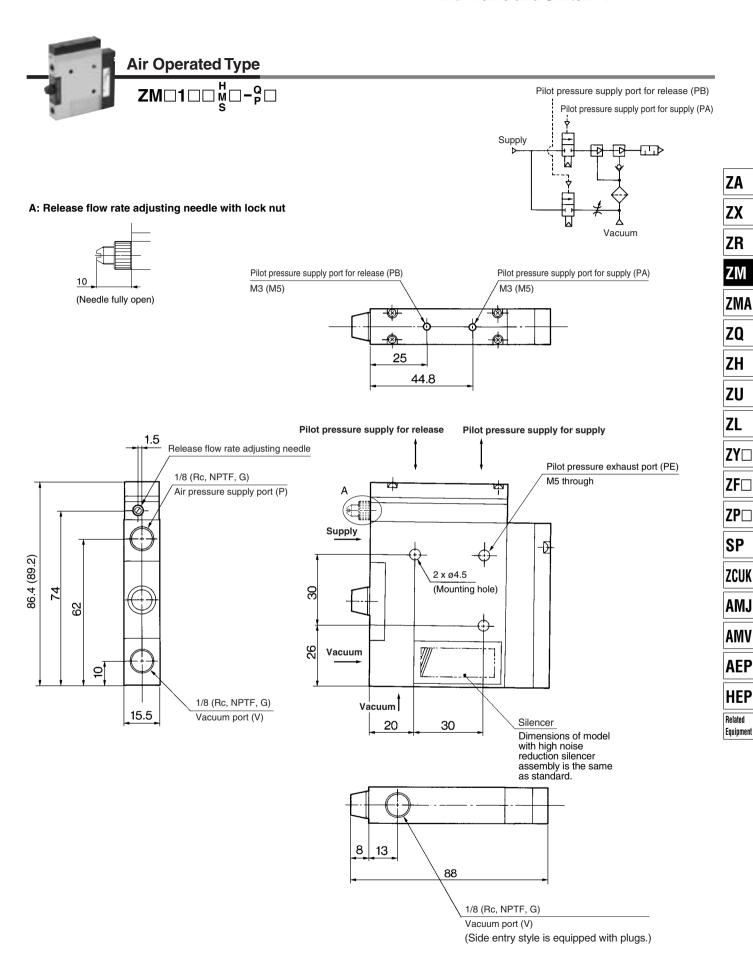




# <Components>


# For Single Unit/With Valve Basic Type with Switch and Valve

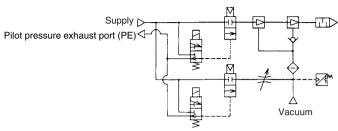

### A: Release flow rate adjusting needle with lock nut



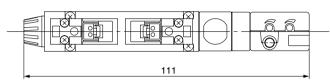

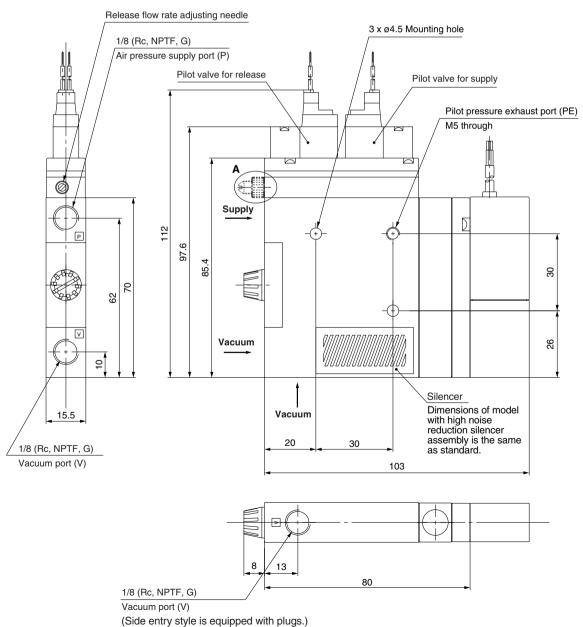

(Side entry style is equipped with plugs.)


# Vacuum Ejector With Valve and Switch Series ZM




# Single/With Air Supply Valve (N.O.) and Vacuum Release Valve


# Components> Basic Type with Valve




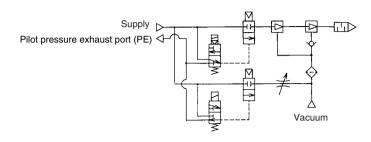


# A: Release flow rate adjusting needle with lock nut

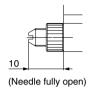

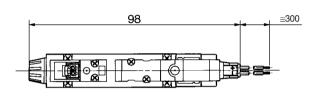

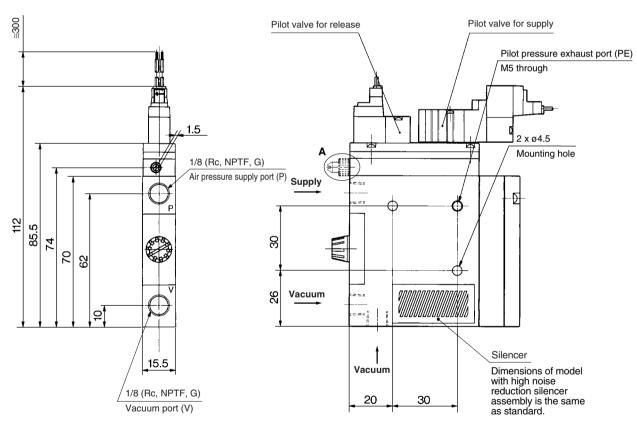

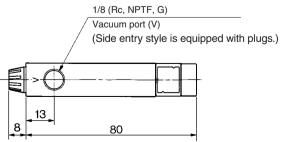

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□ ZP□

SP

ZCUK

AMJ


AMV

AEP

HEP

# **Manifold Specifications: Series ZZM**



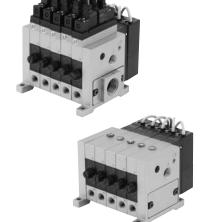

## **Manifold Specifications**

| Manifold style                           | Stacking                          |
|--|-----------------------------------|
| Common air pressure supply port (P)*     | 1/4 (Rc, NPTF, G)                 |
| Individual air pressure supply port (P)* | 1/8 (Rc, NPTF, G)                 |
| Common exhaust port (EXH)                | 1/2, 3/4                          |
| Common exhaust port (EAH)                | (Rc, NPTF, G)                     |
| Common exhaust port (EXH) location       | Right side/Left side/Both sides** |
| Max. number of stations                  | Max.10 stations                   |
| Silencer                                 | ZZM-SA (With bolts)               |

<sup>\*</sup> The common air pressure supply port (P) and individual air pressure supply port (P) can be mounted together.


\*\* Right and left sides are viewed from the front side of vacuum port (V).

## **Maximum Ejector Stations**

| Ejector model  Manifold model | ZM053<br>ZM054 | ZM073<br>ZM074 | ZM103<br>ZM104 | ZM133<br>ZM134 | ZM153<br>ZM154 |
|-------------------------------|----------------|----------------|----------------|----------------|----------------|
| ZZM Stations —   R L          | 10             | 8              | 5              | 4              | 3              |
| ZZM Stations — □B             | 10             | 10             | 8              | 6              | 5              |

<sup>\*</sup> Effective area of external silencer is 160 mm2.

# **How to Order Ejector Manifold**

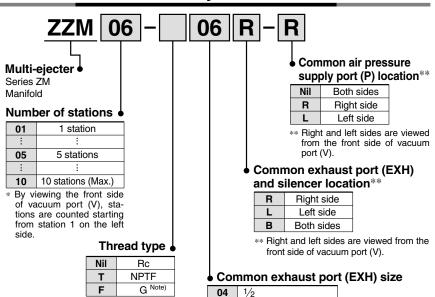

The asterisk (\*) indicates the ejector model no. below the manifold base no. Prefix it to the vacuum ejector part numbers to be mounted. When it is not added, products are shipped separately.

3/4

S

Silencer for ZZM

(Compatible with -X111)

(ZZM-SA) Without exhaust port


#### Example)

ZZM06-06R ..... 1 pc. \* ZM103H-J5LZ (-Q) ...... 3 pcs. \* ZM133H-J5LZ (-Q) ...... 3 pcs

Note) G thread
The thread ridge
shape is compatible
with the G thread
standard (JIS B0202),


but other shapes are not conforming to ISO16030 and ISO

# Vacuum Ejector With Valve and Switch Series ZM

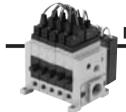


# Manifold

# ZZM Number of ejectors — Common EXH port | Port location

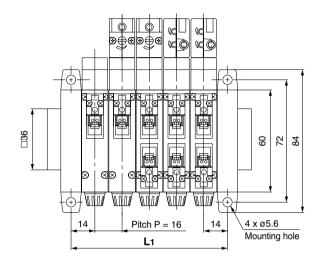

## A: Release flow rate adjusting needle with lock nut

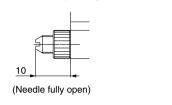

ZH ZU

ZA

ZX

ZR

ZM

ZMA

ZQ

ZL

ZY□

ZP□

ZF□

SP

ZCUK


AMJ

AMV AEP

HEP

| 1/8 (Rc, NPTF, G) Individual air pressure supply port (P) |                                  | 1/4 (Rc, NPTF, G)   |
|---|----------------------------------|---|
|   | Right 1/2, 3/4 (Rc, NPTF, G)     | 1/4 (Rc, NPTF, G)  Common air pressure supply port (P)  2 x M5  Common pilot pressure exhaust port (PE) |
|   | Common exhaust port (EXH) 91 114 |   |


|            |         |         |         |          |          |          |          |          |          | (mm)     |
|------------|---------|---------|---------|----------|----------|----------|----------|----------|----------|----------|
| L Stations | 1       | 2       | 3       | 4        | 5        | 6        | 7        | 8        | 9        | 10       |
| L1         | 28 ±1.5 | 44 ±1.5 | 60 ±1.5 | 76 ±1.5  | 92 ±1.5  | 108 ±2.0 | 124 ±2.0 | 140 ±2.0 | 156 ±2.0 | 172 ±2.0 |
| L2         | 40 ±1.5 | 56 ±1.5 | 72 ±1.5 | 88 ±1.5  | 104 ±1.5 | 120 ±2.0 | 136 ±2.0 | 152 ±2.0 | 168 ±2.0 | 184 ±2.0 |
| L3         | 56 ±1.5 | 72 ±1.5 | 88 ±1.5 | 104 ±1.5 | 120 ±1.5 | 136 ±2.0 | 152 ±2.0 | 168 ±2.0 | 184 ±2.0 | 200 ±2.0 |

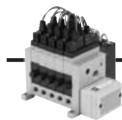

## <Components>


# Manifold/With Silencer Manifold with Silencer Dedicated for Manifold

ZZM Number of ejectors—S Silencer location

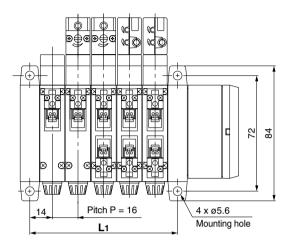


## A: Release flow rate adjusting needle with lock nut



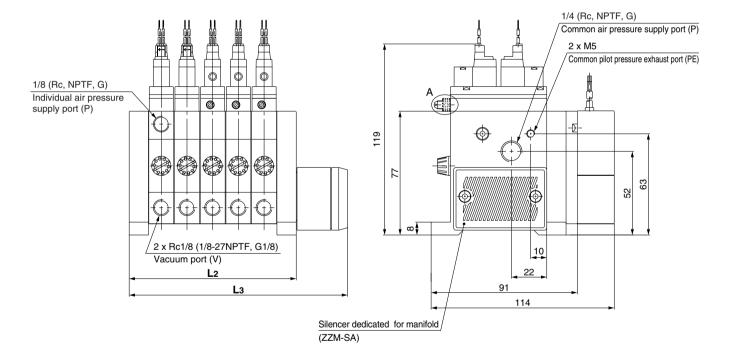

Vacuum port electrical entry (In the case of side entry/With plug at the bottom)

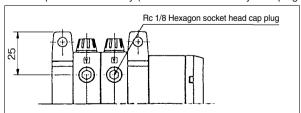


(mm)

| L Stations     | 1       | 2       | 3        | 4        | 5        | 6        | 7        | 8        | 9        | 10       |
|----------------|---------|---------|----------|----------|----------|----------|----------|----------|----------|----------|
| L <sub>1</sub> | 28 ±1.5 | 44 ±1.5 | 60 ±1.5  | 76 ±1.5  | 92 ±1.5  | 108 ±2.0 | 124 ±2.0 | 140 ±2.0 | 156 ±2.0 | 172 ±2.0 |
| L2             | 40 ±1.5 | 56 ±1.5 | 72 ±1.5  | 88 ±1.5  | 104 ±1.5 | 120 ±2.0 | 136 ±2.0 | 152 ±2.0 | 168 ±2.0 | 184 ±2.0 |
| L3             | 72 ±1.5 | 88 ±1.5 | 104 ±1.5 | 120 ±1.5 | 136 ±1.5 | 152 ±2.0 | 168 ±2.0 | 184 ±2.0 | 200 ±2.0 | 216 ±2.0 |



# Vacuum Ejector With Valve and Switch Series ZM

# **Component Parts for Manifold**

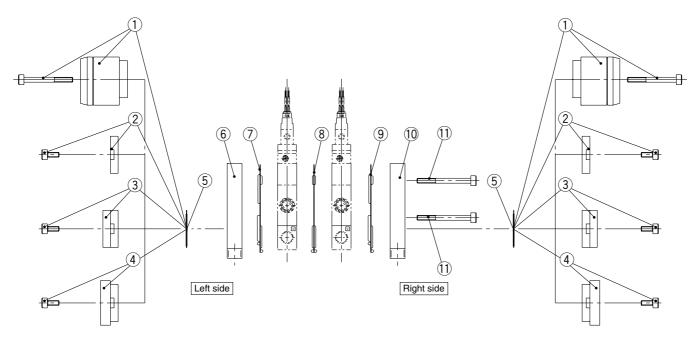

(1)

| Stations | Manifold part no. | Clamp rod part no. |
|----------|-------------------|--------------------|
| 1        | ZZM01             | ZZM-CR-01          |
| 2        | ZZM02             | ZZM-CR-02          |
| 3        | ZZM03             | ZZM-CR-03          |
| 4        | ZZM04             | ZZM-CR-04          |
| 5        | ZZM05             | ZZM-CR-05          |
| 6        | ZZM06             | ZZM-CR-06          |
| 7        | ZZM07             | ZZM-CR-07          |
| 8        | ZZM08-            | ZZM-CR-08          |
| 9        | ZZM09-            | ZZM-CR-09          |
| 10       | ZZM10-            | ZZM-CR-10          |
|          |                   |                    |

(2)

| <del>(-)</del>    |           |       |           |       |          |       |                |       |
|-------------------|-----------|-------|-----------|-------|----------|-------|----------------|-------|
| Manifold nort no  | Adapter A |       | Adapter B |       | Silencer |       | Blanking plate |       |
| Manifold part no. | Left      | Right | Left      | Right | Left     | Right | Left           | Right |
| ZZM04R            |           | 0     |           |       |          |       | 0              |       |
| ZZM               | 0         |       |           |       |          |       |                | 0     |
| ZZM 04B           | 0         | 0     |           |       |          |       |                |       |
| ZZM□□-□06R-□      |           |       |           | 0     |          |       | 0              |       |
| ZZM 06L           |           |       | 0         |       |          |       |                | 0     |
| ZZM               |           |       | 0         | 0     |          |       |                |       |
| ZZM□□-□SR-□       |           |       |           |       |          | 0     | 0              |       |
| ZZM SL-           |           |       |           |       | 0        |       |                | 0     |
| ZZM□□-□SB-□       |           |       |           |       | 0        | 0     |                |       |
| ZZM00             |           |       |           |       |          |       | 0              | 0     |

3)

| (3) |           |                         |            |                             |
|-----|-----------|-------------------------|------------|-----------------------------|
| No. | Model     | Description             | Quantity   | Note                        |
| 1   | ZZM-SA    | Silencer assembly       | *          |                             |
| 2   | ZZM-BP    | Blanking plate assembly | *          |                             |
| 3   | ZZM-ADA-□ | Adapter A assembly      | *          | Note 1)                     |
| 4   | ZZM-ADB-□ | Adapter B assembly      | *          | Note 1)                     |
| 5   | ZZM-GE    | Gasket E                | 2          |                             |
| 6   | ZZM-EPL-□ | End plate L             | 1          | Note 1)                     |
| 7   | ZZM-GBL   | Gasket BL               | 1          |                             |
| 8   | ZZM-GBB   | Gasket BB               | Station: 1 |                             |
| 9   | ZZM-GBR   | Gasket BR               | 1          |                             |
| 10  | ZZM-EPR-□ | End plate R             | 1          |                             |
| 11  | ZZM-CR-□□ | Clamp rod               | 1          | Refer to Table (1). Note 2) |

<sup>\*</sup> The used quantity varies depending on the part number. Note 1) 

: Symbol corresponding to the port thread type.

Note 2) 2pcs. are included in one set.

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU ZL

ZY□ ZF□

ZP□

SP

ZCUK AMJ

AMV

AEP

HEP

Equipment

# **Made to Order Specifications 1**



Please contact SMC for detailed specifications, dimensions, and delivery.



1 Double Check Valve/For Manifold

Single: ZM | Nozzle diameter | Body **Valve** Voltage Electrical entry Supply pressure CE compliant

Double check valve


When a manifold is used, the exhaust that is discharged to the silencer could flow out to the vacuum port (V) side. To reduce this, a check valve is used.



# ⚠ Warning

- 1. It cannot be used for maintaining a vacuum.
- 2. Use a vacuum release valve. (Compatible with valve K and B types only.) (The workpiece cannot be released without a vacuum release valve.)
- 3. Compatible with the manifold specifications only.

# Construction

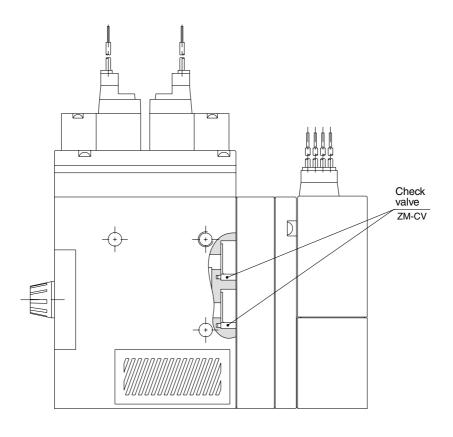



# Made to Order Specifications 2



Please contact SMC for detailed specifications, dimensions, and delivery.



ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

**AEP** 

HEP

Related Equipment

2 With Individual Exhaust Spacer

Single: ZM | Nozzle diameter Body Supply pressure **CE** compliant

Individual exhaust spacer

When using an individual ejector in a clean room, the exhaust can be discharged outside of the clean room by attaching an individual exhaust spacer. (The spacer can also be installed when using a manifold. Please contact SMC for mounting dimensions.)

\* It is possible to manufacture it with a valve and a switch.



# **⚠** Caution

To connect a pipe to the exhaust port, do not use an elbow joint because it creates resistance and prevents the system from attaining a sufficient vacuum.


When the product is used to prevent the manifold exhaust intrusion, exhaust intrusion may occur if exhaust pipes are put

When this special product is used for all manifold stations, the following part number can be used.





## Construction

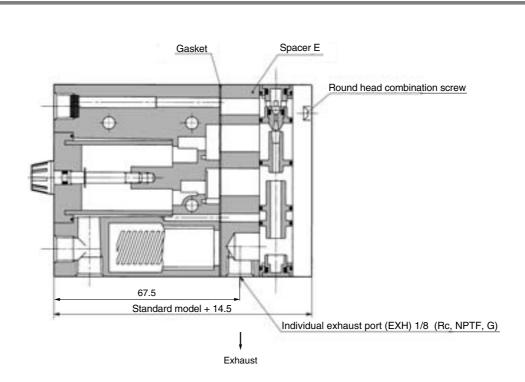

# Made to Order Specifications 3



Please contact SMC for detailed specifications, dimensions, and delivery.

3 Double Solenoid Supply Valve

Single: ZM | Nozzle diameter Body Supply pressure Valve Voltage **Electrical entry** X126 **CE** compliant

**♦**Double solenoid supply valve

With release valve (Valve K type only) -X126 -X135 Without release valve (Valve J type only)

This is an air supply pilot valve that is made with double solenoids.

\* It is possible to manufacture it with a switch.



# Construction

