

# Electric Grippers



Step Motor (Servo/24 VDC)

- **With drop prevention function**  
(Self-lock mechanism is provided for all series.)  
Gripping force of the workpieces is maintained when stopped or restarted. The workpieces can be removed with manual override.
- **Compact body sizes and long stroke variations**  
Gripping force equivalent to the widely used air grippers is available.
- **Possible to set position, speed and force.** (64 points)
- **Energy-saving product**  
Power consumption reduced by self-lock mechanism.
- **With gripping check function**  
Identify workpieces with different dimensions/detect mounting and removal of the workpieces.

## Z Type (2 fingers)

Compact and light, various gripping forces

Series **LEHZ**



Size	Stroke/ both sides [mm]	Gripping force [N]	
		Basic	Compact
10	4	6 to 14	2 to 6
16	6		3 to 8
20	10	16 to 40	11 to 28
25	14		
32	22	52 to 130	—
40	30	84 to 210	—

## ZJ Type (2 fingers)

With dust cover (Equivalent to IP50)  
3 types of cover material (Finger portion only)



Series **LEHZJ**

Size	Stroke/ both sides [mm]	Gripping force [N]	
		Basic	Compact
10	4	6 to 14	3 to 6
16	6		4 to 8
20	10	16 to 40	11 to 28
25	14		

## F Type (2 fingers)

Can hold various types of workpieces with a long stroke.

Series **LEHF**



Size	Stroke/ both sides [mm]	Gripping force [N]
10	16 (32)	3 to 7
20	24 (48)	11 to 28
32	32 (64)	48 to 120
40	40 (80)	72 to 180

( ): Long stroke

## S Type (3 fingers)

Can hold round workpieces.

Series **LEHS**



Size	Stroke/ diameter [mm]	Gripping force [N]	
		Basic	Compact
10	4	2.2 to 5.5	1.4 to 3.5
20	6	9 to 22	7 to 17
32	8	36 to 90	—
40	12	52 to 130	—

Step Motor (Servo/24 VDC)

Controller/Driver

▶ **Step data input type**  
Series **LECP6**

- 64 points positioning
- Input using controller setting kit or teaching box



▶ **Programless type**  
Series **LECP1**

- 14 points positioning
- Control panel setting



▶ **Pulse input type**  
Series **LECPA**



# Series **LEH**



CAT.ES100-77E

# Electric Gripper 2-Finger Type


Series LEHZ/Size: 10, 16, 20, 25, 32, 40

Series LEHZJ/Size: 10, 16, 20, 25

Series LEHF/Size: 10, 20, 32, 40


## ● Compact and lightweight Various gripping forces

Weight: **165 g**  
(LEHZ10)

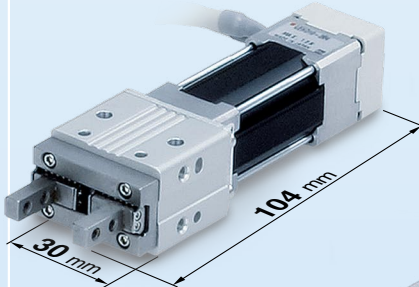

Compact

Weight: **135 g**  
(LEHZ10L)

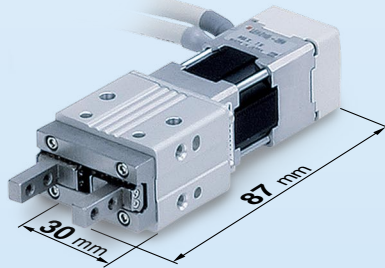


## ● Sealed-construction dust cover (Equivalent to IP50)


- Prevents machining chips, dust, etc., from getting inside
- Prevents spattering of grease, etc.

## ● 3 types of cover material (Finger portion only)


- Chloroprene rubber (black): Standard
- Fluororubber (black): Option
- Silicone rubber (white): Option

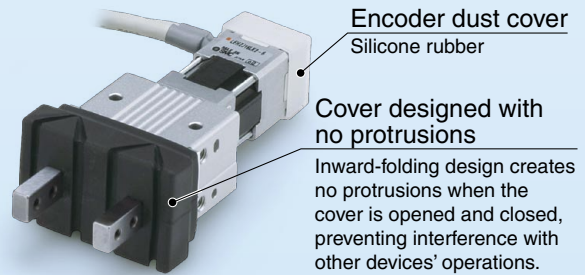


### Finger options

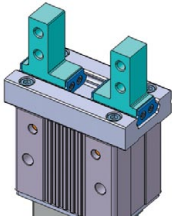

Side tapped mounting

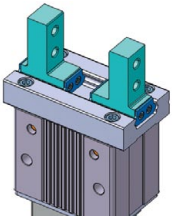

Through-hole in opening/  
closing direction

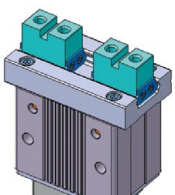


Flat fingers

### Series LEHZ

Manual override  
screw

For opening and closing the fingers  
(when power supply is turned off)

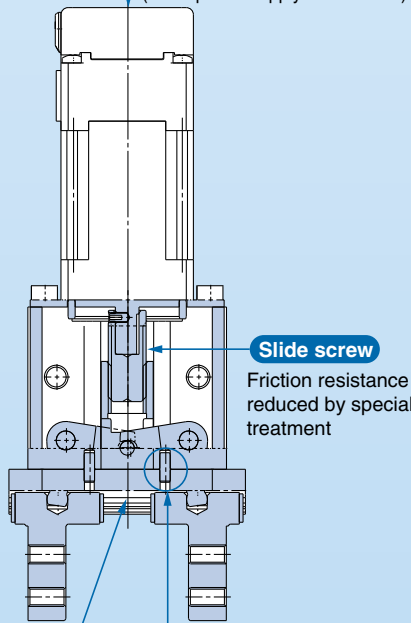

Linear guide


Linear guide misalignment prevention

Misalignment of the linear guide is prevented with 2 positioning pins.

### Series LEHZJ

Manual override  
screw

For opening and closing the fingers  
(when power supply is turned off)

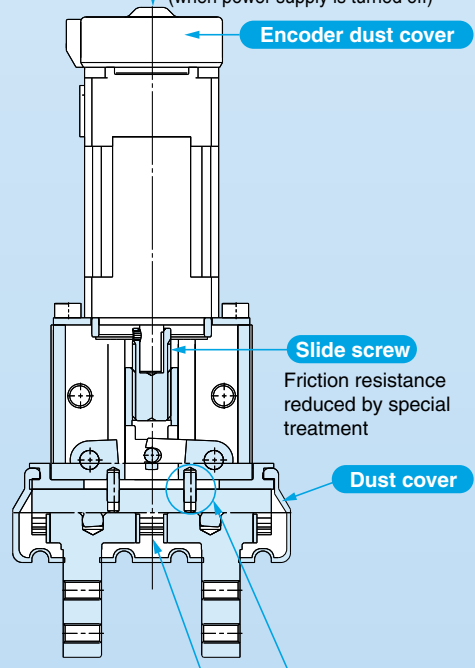

Linear guide

Linear guide misalignment prevention

Misalignment of the linear guide is prevented with 2 positioning pins.

# Electric Gripper 3-Finger Type

Series **LEHS**/Size: 10, 20, 32, 40

● Can hold various types of workpieces with a long stroke.

Stroke:  
Max. **40 mm**




Long stroke  
Stroke:  
Max. **80 mm**




● Can hold round workpieces.

Weight: **185 g**  
(LEHS10)

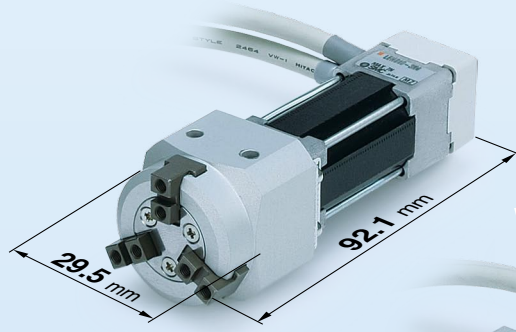

Compact  
Weight: **150 g**  
(LEHS10L)

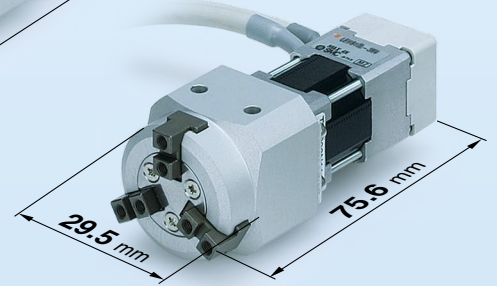


## Series LEHF

Manual override screw/Both sides

For opening and closing the fingers (when power supply is turned off)

Slide screw

Friction resistance reduced by special treatment

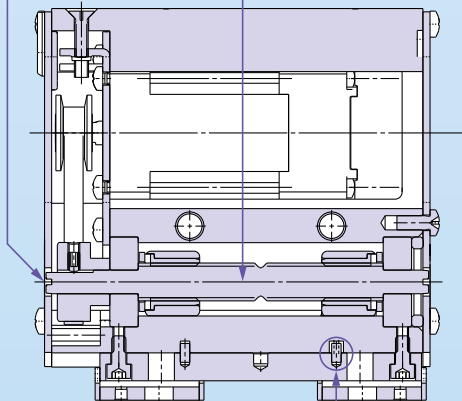

Linear guide



Linear guide misalignment prevention

Misalignment of the linear guide is prevented with 2 positioning pins.

## Series LEHS

Manual override screw

For opening and closing the fingers (when power supply is turned off)

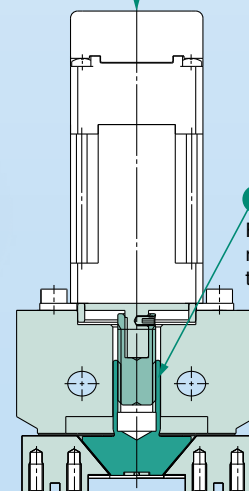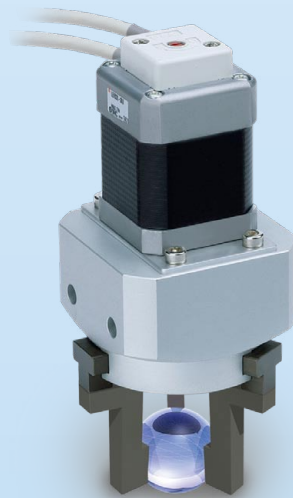

Slide screw

Friction resistance reduced by special treatment


With wedge cam structure

Compact and large gripping force can be obtained through the wedge cam structure.


## <Mounting Variations>

### Series LEHZ/LEHZJ


**A** When using the thread on the side of the body

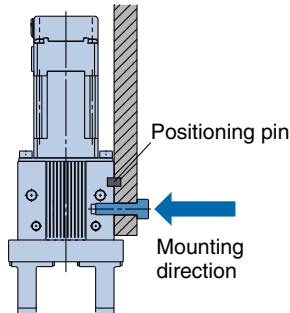

**B** When using the thread on the mounting plate

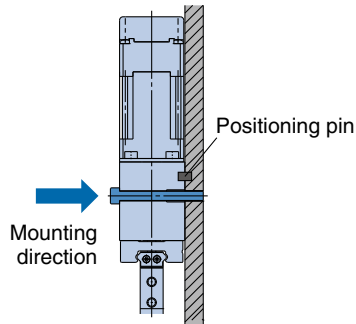


**C** When using the thread on the back of the body

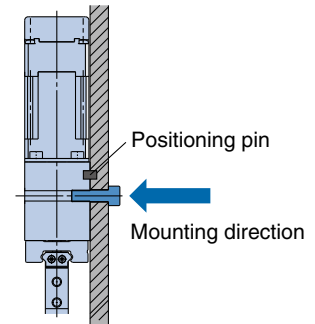


### Series LEHF


**A** When using the thread on the body

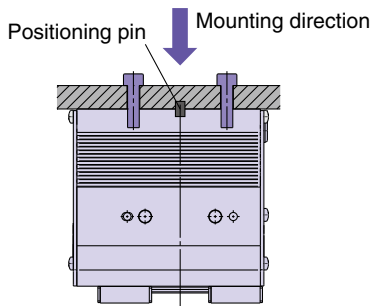

**B** When using the thread on the mounting plate

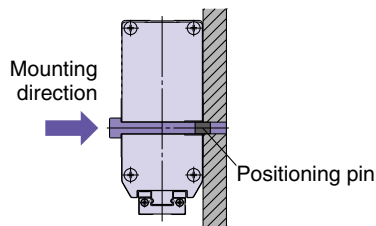


**C** When using the thread on the back of the body

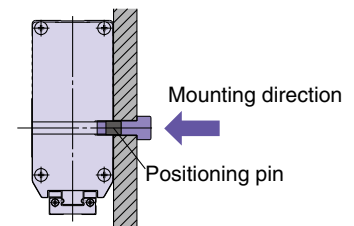


### Series LEHS

**A** When using the thread on the mounting plate

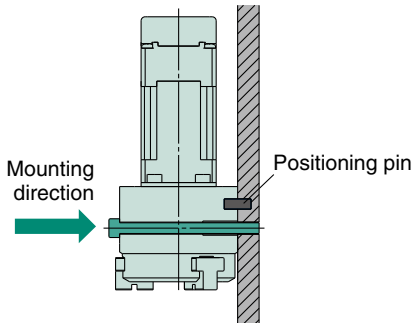


**B** When using the thread on the back of the body

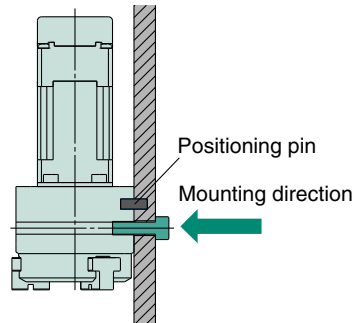


## Motor cable mounting direction can be selected.


### Series LEHZ/LEHZJ

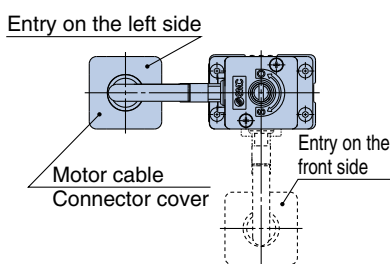

### Series LEHS



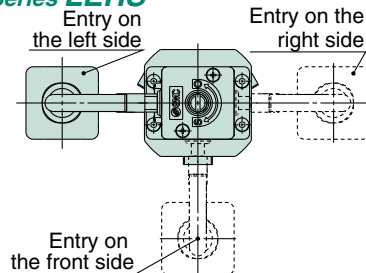


### Series LEHF

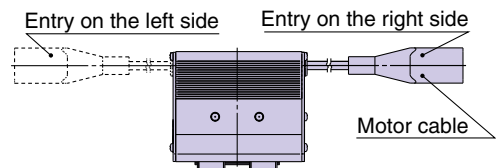


Application Examples

Gripping of components that are easily deformed or damaged

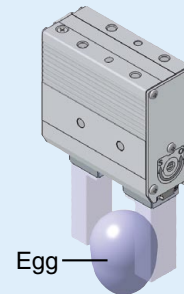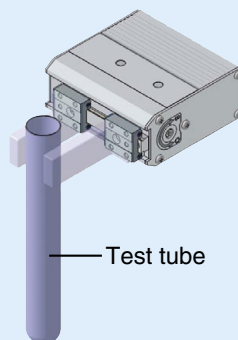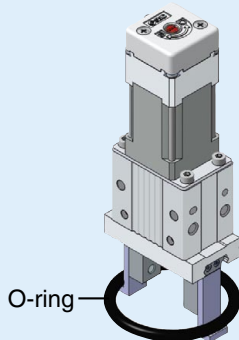


Speed and gripping force control and positioning

Alignment and selection of randomly lined parts

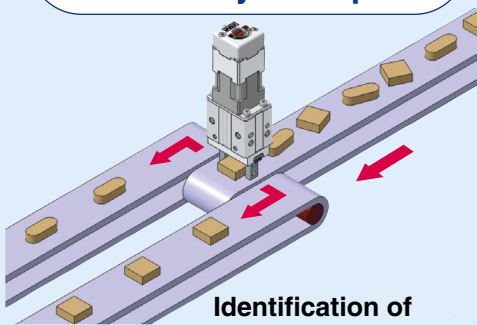


Identification of workpieces with different dimensions

Gripping in a narrow space



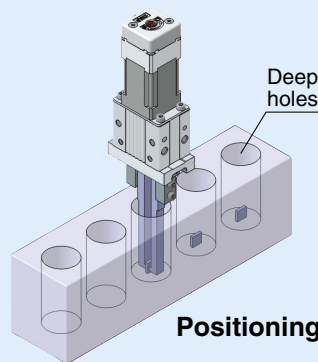


Soft touch/ High frequency

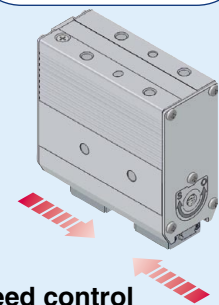

Speed control and positioning (Minimum stroke)

Gripping of cylindrical and spherical parts

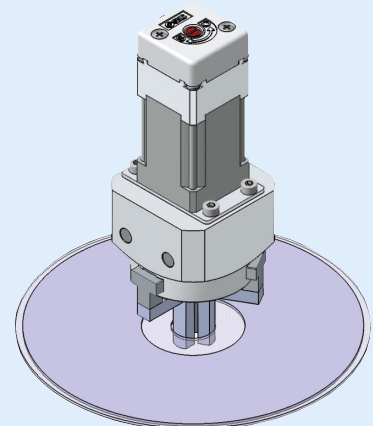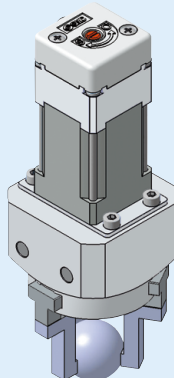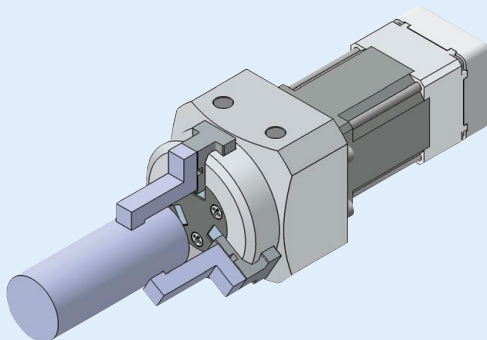

Speed and gripping force control

# Step Data Input Type Series LECP6

## Simple Setting to Use Straight Away

### Easy Mode for Simple Setting



If you want to use it right away, select "Easy Mode."

Step motor  
(Servo/24 VDC)  
LECP6



#### <When a PC is used> Controller setting software

- Step data setting, test operation, move jog and move for the constant rate can be set and operated on one screen.

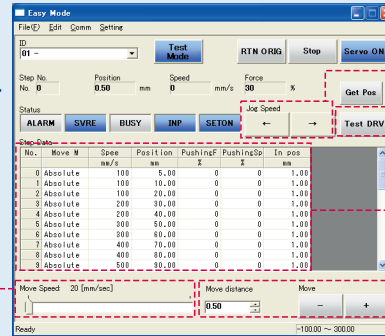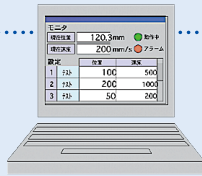

Setting of jog and speed of the constant rate

Move jog

Start testing

Step data setting


Move for the constant rate

#### <When a TB (teaching box) is used>

- Simple screen without scrolling promotes ease of setting and operating.
- Pick up an icon from the first screen to select a function.
- Set up the step data and check the monitor on the second screen.




#### Example of setting the step data

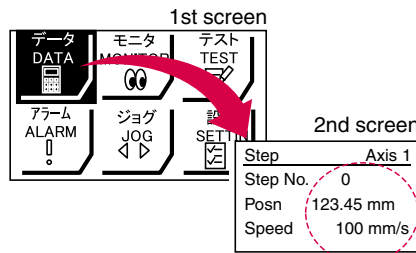

It can be registered by "SET" after entering the values.

#### Example of checking the operation status

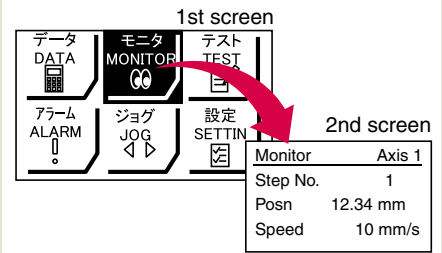

Operation status can be checked.

#### Teaching box screen

- Data can be set with position and speed. (Other conditions are already set.)

Step	Axis 1
Step No.	0
Posn	50.00 mm
Speed	200 mm/s




Step	Axis 1
Step No.	1
Posn	80.00 mm
Speed	100 mm/s

## Gateway Unit Series LEC-G


- Unit linking the LECP6 series and Fieldbus network
- Two methods of operation

Step data input: Operate using preset step data in the controller.

Numerical data input: The actuator operates using values such as position and speed from the PLC.

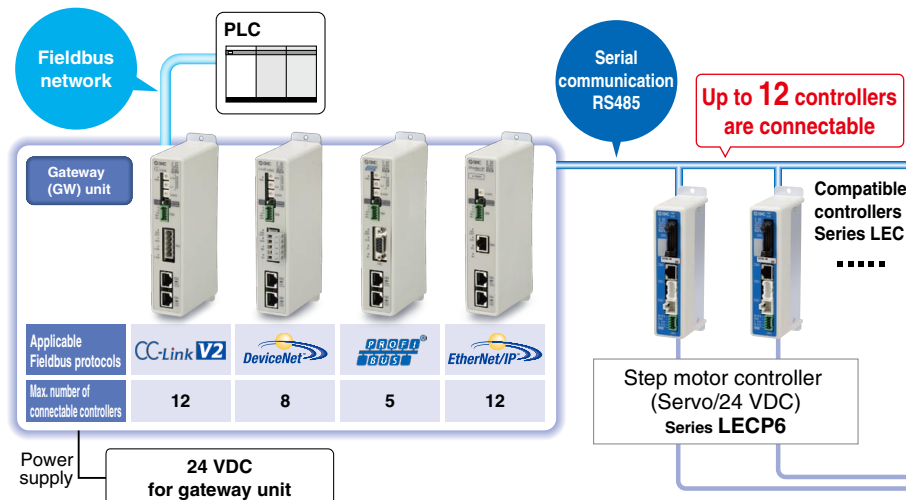

#### Compatible electric actuators

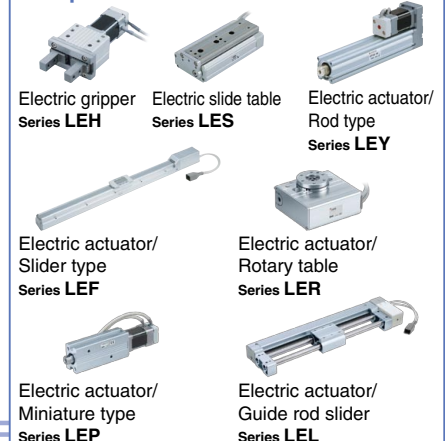


## ◎ Normal Mode for Detailed Setting

Select normal mode when detailed setting is required.

- Step data can be set in detail.
- Parameters can be set.
- Signals and terminal status can be monitored.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.

### <When a PC is used> Controller setting software

- Step data setting, parameter setting, monitor, teaching, etc., are indicated in different windows.

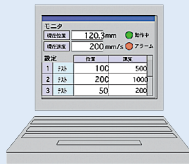

**Step data setup window**

No.	Move M	Speed	Position	Accel	Decel	Pushing
		mm/s	mm	mm/s <sup>2</sup>	mm/s <sup>2</sup>	Z
0	Absolute	100	5.00	2000	2000	
1	Absolute	100	10.00	2000	2000	
2	Absolute	100	20.00	2000	2000	
3	Absolute	200	20.00	2000	2000	
4	Absolute	200	40.00	2000	2000	
5	Absolute	300	50.00	2000	2000	
6	Absolute	300	60.00	2000	2000	
7	Absolute	400	70.00	2000	2000	
8	Absolute	400	80.00	2000	2000	
9	Absolute	500	90.00	2000	2000	
10	Absolute	500	100.00	2000	2000	

**Parameter setup window**

Item	Value
Controller ID	
ID pattern	
ACU/DEC pattern	Trapezoid-motion
Max. speed	200
Stroke(+)	-200
Max. accel	
Max. ACU/DEC	
Def. In position	0
ORIS offset	0
Max. force	
Para. protect	1: Disable/StepIn
Enable SW	Disable
Unit name	

**Monitoring window**

Controller Status	Monitor
Type No.	LCP
Unit name	
Step No.	3
Position	1.00
Speed	0
Force	30
Target Posn	4.00

**Teaching window**

JOG Control  
Return to ORIS / Stop  
JOG  
More distance  
Speed: 5 [mm/sec]

### <When a TB (teaching box) is used>

- Multiple step data can be stored in the teaching box, and transferred to the controller.
- Continuous test operation by up to 5 step data.

### Teaching box screen

- Each function (step data setting, test, monitor, etc.) can be selected from the main menu.

**Main menu screen**

- Menu
- Axis 1
- Step data
- Parameter
- Test

**Step data setup screen**

- Step
- Axis 1
- Step No. 0
- Movement MOD

**Test screen**

- Test DRV
- Axis 1
- Step No. 1
- Posn 123.45 mm
- Stop

**Monitoring screen**

- Out mon
- Axis 1
- BUSY[ ]
- SVRE[●]
- SETON[ ]


## The actuator and controller are provided as a set. (They can be ordered separately.)

Confirm that the combination of the controller and the actuator is correct.


<Check the following before use.>

- ① Check the actuator label for model number. This matches the controller.
- ② Check Parallel I/O configuration matches (NPN or PNP).

Actuator

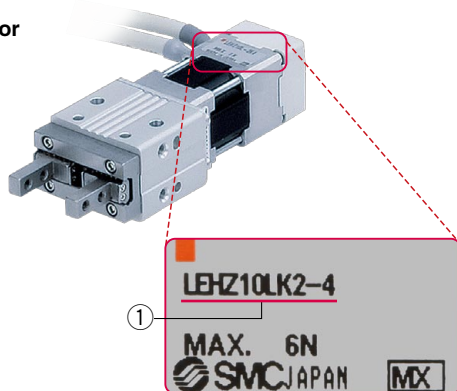

Controller

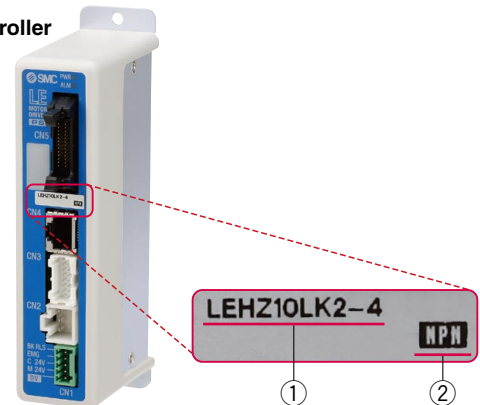

# Programless Type Series LECP1

## No programming


Capable of setting up an electric actuator operation without using a PC or teaching box



Step motor (Servo/24 VDC) LECP1

### ① Setting position number

Setting a registered number for the stop position  
Maximum 14 points

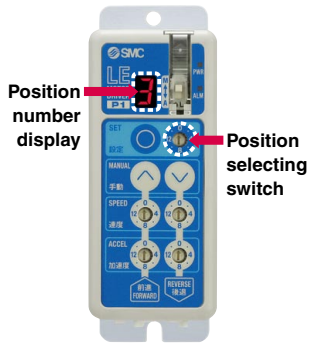


### ② Setting a stop position

Moving the actuator to a stop position using FORWARD and REVERSE buttons




### ③ Registration

Registering the stop position using SET button




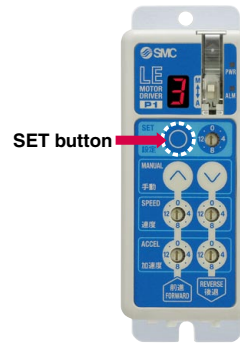


### Speed/Acceleration 16-level adjustment

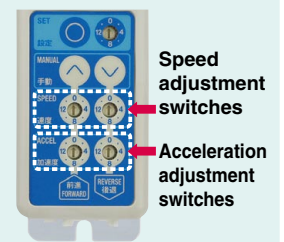

# Pulse Input Type Series LECPA

- A driver that uses pulse signals to allow positioning at any position. The actuator can be controlled from the customers' positioning unit.

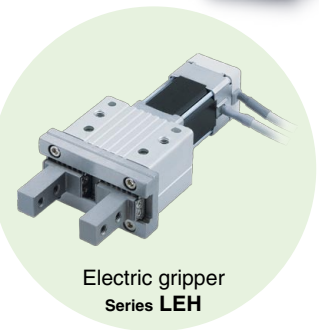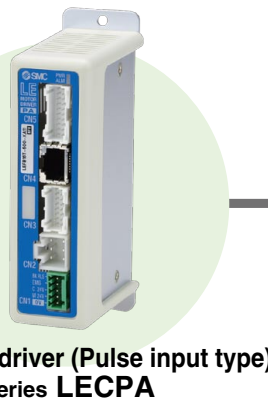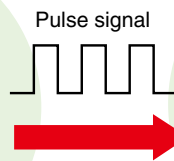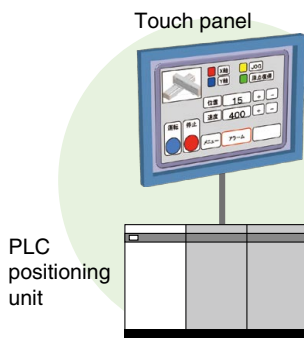

- Return-to-origin command signal  
Enables automatic return-to-origin action.
- With force limit function (Pushing force/Gripping force operation available)  
Pushing force/Positioning operation possible by switching signals.



## Function

Item	Step data input type LECP6	Programless type LECP1	Pulse input type LECPA
Step data and parameter setting	<ul style="list-style-type: none"> <li>Input from controller setting software (PC)</li> <li>Input from teaching box</li> </ul>	<ul style="list-style-type: none"> <li>Select using controller operation buttons</li> </ul>	<ul style="list-style-type: none"> <li>Input from controller setting software (PC)</li> <li>Input from teaching box</li> </ul>
Step data "position" setting	<ul style="list-style-type: none"> <li>Input the numerical value from controller setting software (PC) or teaching box</li> <li>Input the numerical value</li> <li>Direct teaching</li> <li>JOG teaching</li> </ul>	<ul style="list-style-type: none"> <li>Direct teaching</li> <li>JOG teaching</li> </ul>	<ul style="list-style-type: none"> <li>No "position" setting required</li> <li>Position and speed set by pulse signal</li> </ul>
Number of step data	64 points	14 points	—
Operation command (I/O signal)	Step No. [IN*] input ⇒ [DRIVE] input	Step No. [IN*] input only	Pulse signal
Completion signal	[INP] output	[OUT*] output	[INP] output

## Setting Items

TB: Teaching box PC: Controller setting software


Item	Contents	Easy mode		Normal mode	Step data input type LECP6	Pulse input type LECPA	Programless type LECP1*		
		TB	PC	TB/PC					
Step data setting (Excerpt)	Movement MOD	Selection of "absolute position" and "relative position"		△	●	●	Set at ABS/INC	Fixed value (ABS)	
	Speed	Transfer speed		●	●	●	Set in units of 1 mm/s	Select from 16-level	
	Position	[Position]: Target position [Pushing]: Pushing start position		●	●	●	Set in units of 0.01 mm	No setting required Direct teaching JOG teaching	
	Acceleration/Deceleration	Acceleration/deceleration during movement		●	●	●	Set in units of 1 mm/s <sup>2</sup>	Select from 16-level	
	Pushing force	Rate of force during pushing operation		●	●	●	Set in units of 1%	Set in units of 1%	Select from 3-level (weak, medium, strong)
	Trigger LV	Target force during pushing operation		△	●	●	Set in units of 1%	Set in units of 1%	No setting required (same value as pushing force)
	Pushing speed	Speed during pushing operation		△	●	●	Set in units of 1 mm/s	Set in units of 1 mm/s	No setting required
	Moving force	Force during positioning operation		△	●	●	Set to 100%	Set to (Different values for each actuator)%	
	Area output	Conditions for area output signal to turn ON		△	●	●	Set in units of 0.01 mm	Set in units of 0.01 mm	
In position	[Position]: Width to the target position [Pushing]: How much it moves during pushing		△	●	●	Set to 0.5 mm or more (Units: 0.01 mm)	Set to (Different values for each actuator) or more (Units: 0.01 mm)		
Parameter setting (Excerpt)	Stroke (+)	+ side limit of position		×	×	●	Set in units of 0.01 mm	Set in units of 0.01 mm	
	Stroke (-)	- side limit of position		×	×	●	Set in units of 0.01 mm	Set in units of 0.01 mm	
	ORIG direction	Direction of the return to origin can be set.		×	×	●	Compatible	Compatible	Compatible
	ORIG speed	Speed during return to origin position		×	×	●	Set in units of 1 mm/s	Set in units of 1 mm/s	No setting required
	ORIG ACC	Acceleration during return to origin position		×	×	●	Set in units of 1 mm/s <sup>2</sup>	Set in units of 1 mm/s	
Test	JOG			●	●	●	Continuous operation at the set speed can be tested while the switch is being pressed.	Continuous operation at the set speed can be tested while the switch is being pressed.	Hold down MANUAL button (⊙) for uniform sending (speed is specified value)
	MOVE			×	●	●	Operation at the set distance and speed from the current position can be tested.	Operation at the set distance and speed from the current position can be tested.	Press MANUAL button (⊙) once for sizing operation (speed, sizing amount are specified values)
	Return to ORIG			●	●	●	Compatible	Compatible	Compatible
	Test drive	Operation of the specified step data		●	●	● (Continuous operation)	Compatible	Not compatible	Compatible
	Forced output	ON/OFF of the output terminal can be tested.		×	×	●	Compatible	Compatible	
Monitor	DRV mon	Current position, speed, force and the specified step data can be monitored.		●	●	●	Compatible	Compatible	Not compatible
	In/Out mon	Current ON/OFF status of the input and output terminal can be monitored.		×	×	●	Compatible	Compatible	
ALM	Status	Alarm currently being generated can be confirmed.		●	●	●	Compatible	Compatible	Compatible (display alarm group)
	ALM Log record	Alarm generated in the past can be confirmed.		×	×	●	Compatible	Compatible	
File	Save/Load	Step data and parameter can be saved, forwarded and deleted.		×	×	●	Compatible	Compatible	Not compatible
Other	Language	Can be changed to Japanese or English.		●	●	●	Compatible	Compatible	

△: Can be set from TB Ver. 2.\*\* (The version information is displayed on the initial screen)


\* Programless type LECP1 cannot be used with the teaching box and controller setting kit.

## System Construction/General Purpose I/O

● **Electric gripper**

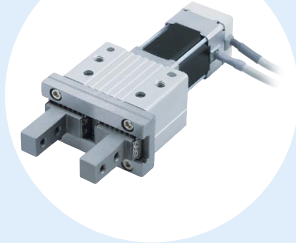


Provided by customer

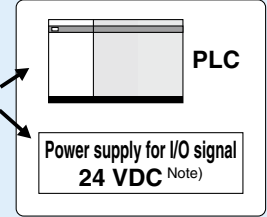

● **I/O cable** Pages 61, 73

Controller type	Part no.
LECP6	LEC-CN5-□
LECP1 (Programless)	LEC-CK4-□

● **Controller\*** Page 54

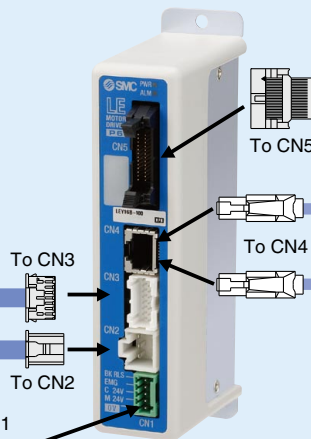

**Programless type**  
**LECP1**  
Page 68

Provided by customer

**Power supply for controller**  
**24 VDC** (Note)

Note) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

● **Power supply plug** Page 55  
(Accessory)  
<Applicable cable size>  
AWG20 (0.5 mm<sup>2</sup>)

Note) The teaching box, controller setting kit and Touch Operator Interface cannot be connected.

● **Actuator cable\*** Pages 61, 73

Controller type	Standard cable	Robotic cable
LECP6 (Step data input type)	LE-CP-□-S	LE-CP-□
LECP1 (Programless type)	LE-CP-□-S	LE-CP-□

● **Touch Operator Interface (Provided by customer)**

GP4501T/GP3500T

Manufactured by Digital Electronics Corp.

**Pro-face**  
for the best interface



Cockpit parts can be downloaded free via the Pro-face website. Using cockpit parts makes adjustment from the Touch Operator Interface possible.

The \* mark: Can be included in the "How to Order" for the actuator.

### Option

● **Teaching box** Page 63

(With 3 m cable)

Part no.: LEC-T1-3JG□




● **Controller setting kit** Page 62

Controller setting kit

(Communication cable, conversion unit and USB cable are included.)

Part no.: LEC-W2

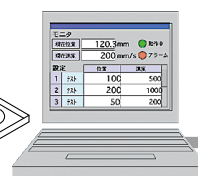

PC


● **Communication cable**  
(3 m)

● **USB cable**  
(A-miniB type)  
(0.3 m)


Note) Cannot be used with the programless type (LECP1).

## System Construction/Pulse Signal

● Electric gripper

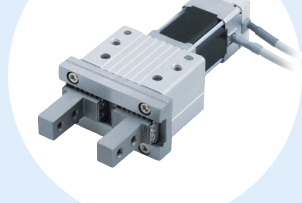


Provided by customer

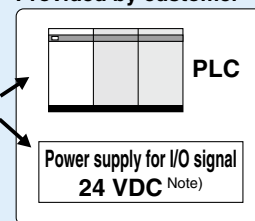

Note) When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

● Driver\* Page 74

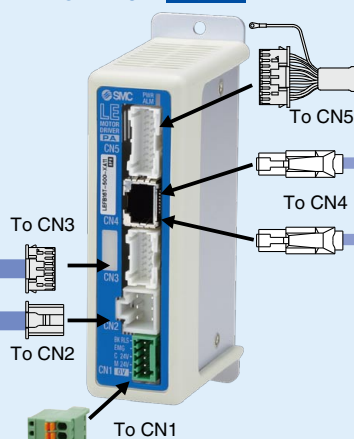

● I/O cable Page 80

Driver type	Part no.
LECPA	LEC-CL5-□

Provided by customer

Power supply for driver  
24 VDC (Note)

Note) When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

● Power supply plug (Accessory)  
<Applicable cable size>  
AWG20 (0.5 mm<sup>2</sup>)

● Actuator cable\* Page 79

Driver type	Standard cable	Robotic cable
LECPA (Pulse input type)	LE-CP-□-S	LE-CP-□

The \* mark: Can be included in the "How to Order" for the actuator.

### Option

● Teaching box Page 82

(With 3 m cable)

Part no.: LEC-T1-3JG□



● Controller setting software Page 81


Communication cable (With conversion unit) and USB cable are included.

Part no.: LEC-W2



Communication cable


Or

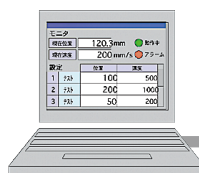

PC

● USB cable (A-miniB type)

# System Construction/Fieldbus Network

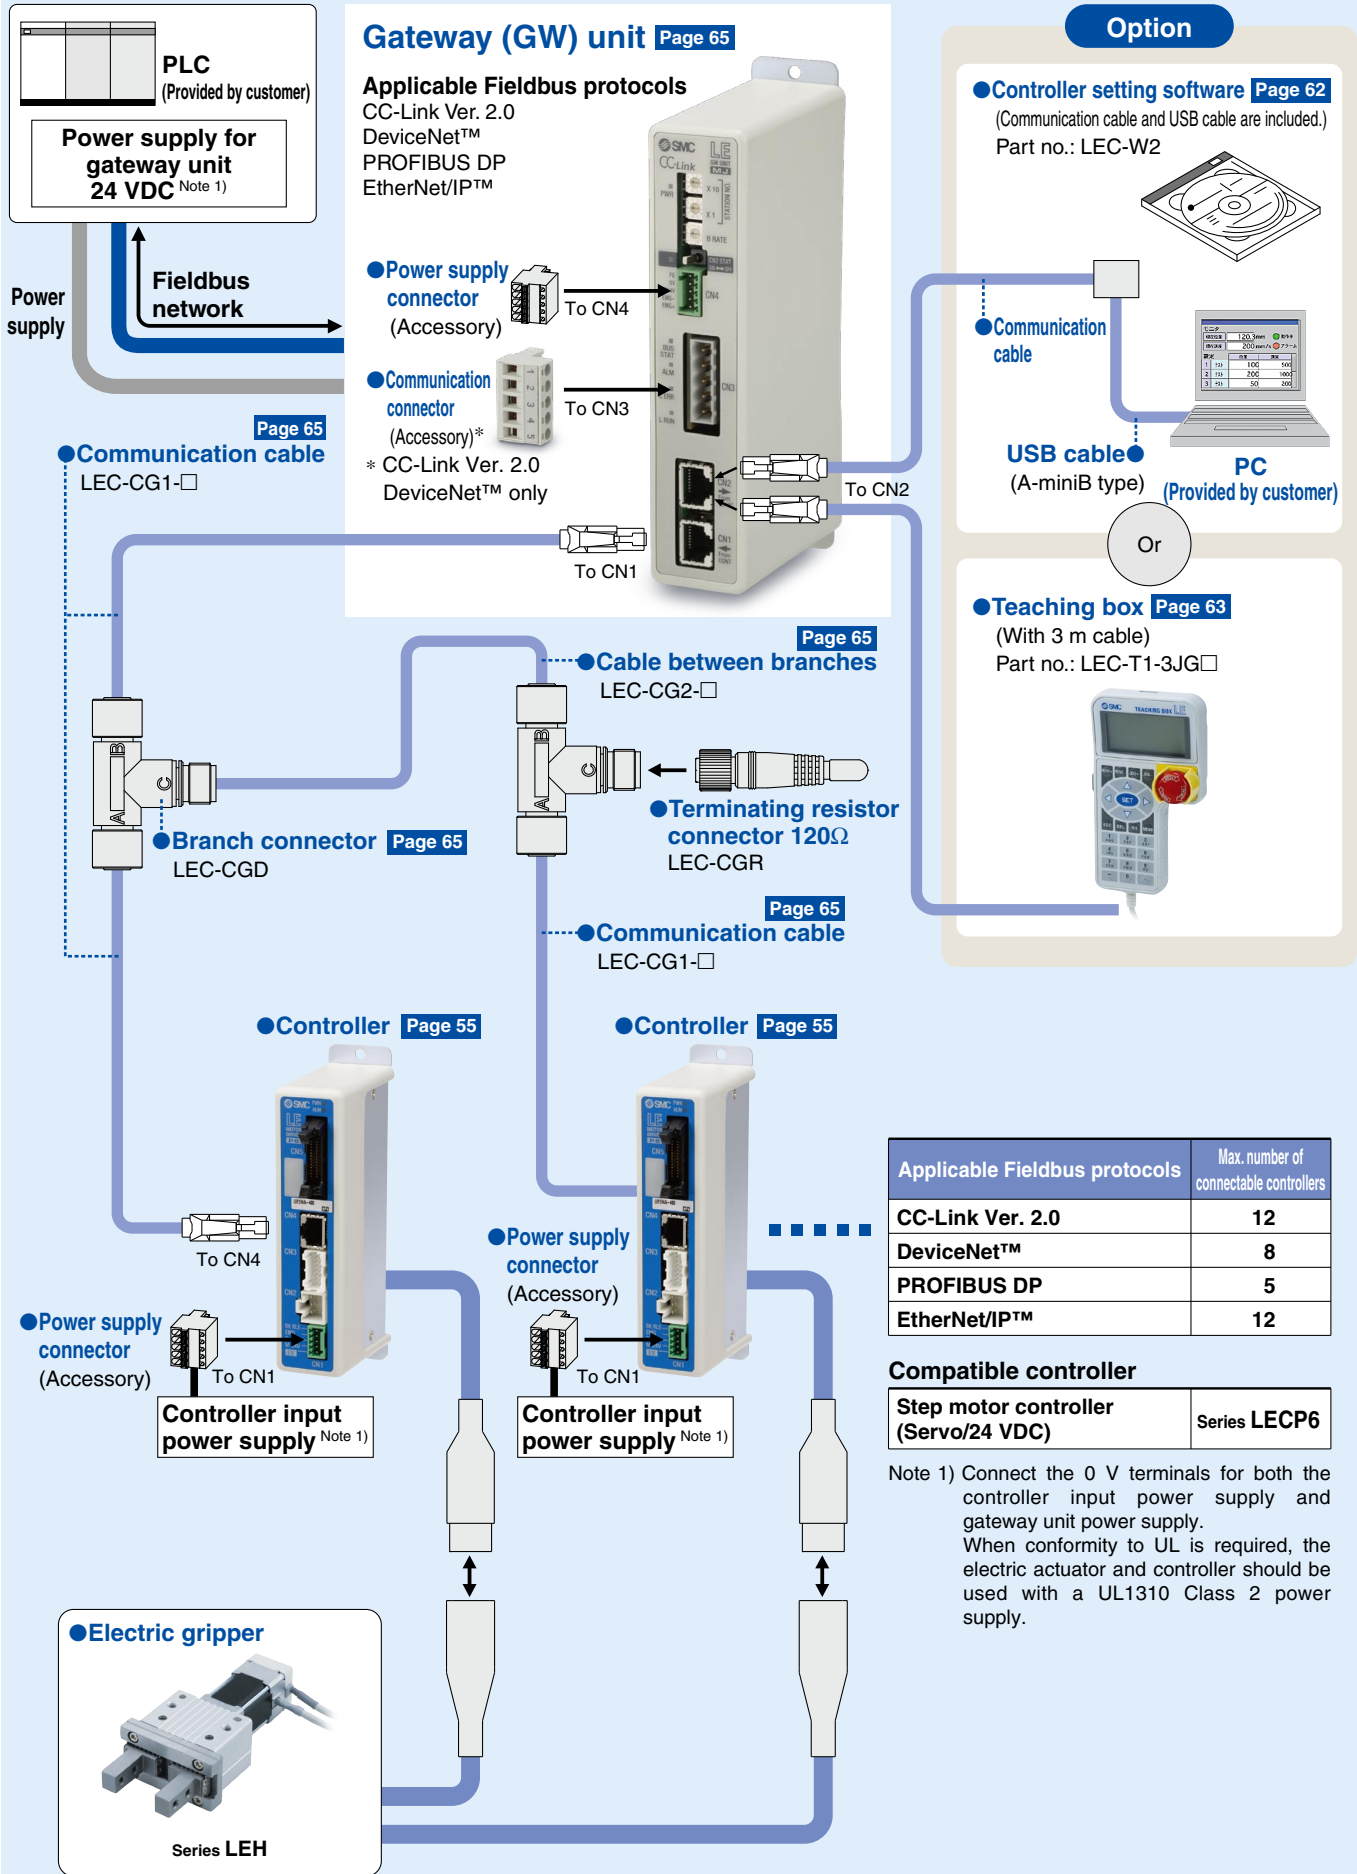

# SMC Electric Actuators

## Slider Type

Step Motor (Servo/24 VDC)

Servo Motor (24 VDC)

AC Servo Motor



CAT.ES100-87

### Ball screw drive Series LEFS

Clean room compatible



#### Series LEFS

Size	Max. work load (kg)	Stroke (mm)
16	10	Up to 400
25	20	Up to 600
32	45	Up to 800
40	60	Up to 1000

### Belt drive Series LEFB



#### Series LEFB

Size	Max. work load (kg)	Stroke (mm)
16	1	Up to 1000
25	5	Up to 2000
32	14	Up to 2000

### Ball screw drive Series LEFS


Clean room compatible



#### Series LEFS

Size	Max. work load (kg)	Stroke (mm)
25	20	Up to 600
32	45	Up to 800
40	60	Up to 1000

### Belt drive Series LEFB

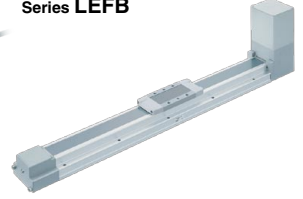

#### Series LEFB

Size	Max. work load (kg)	Stroke (mm)
25	5	Up to 2000
32	15	Up to 2500
40	25	Up to 3000


## High Rigidity Slider Type

AC Servo Motor



CAT.ES100-104


### Ball screw drive Series LEJS

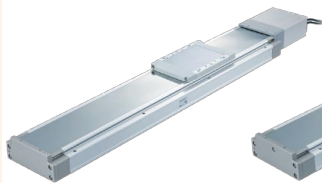

#### Series LEJS

Size	Max. work load (kg)	Stroke (mm)
40	55	200 to 1200
63	85	300 to 1500

### Belt drive Series LEJB

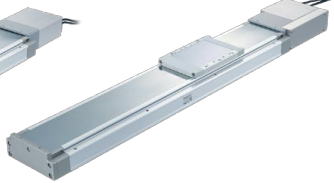

#### Series LEJB

Size	Max. work load (kg)	Stroke (mm)
40	20	200 to 2000
63	30	300 to 3000

## Guide Rod Slider

Step Motor (Servo/24 VDC)



CAT.ES100-101

### Belt drive Series LEL



#### Series LEL25M Sliding bearing

Size	Max. work load (kg)	Stroke (mm)
25	3	Up to 1000

#### Series LEL25L Ball bushing bearing

Size	Max. work load (kg)	Stroke (mm)
25	5	Up to 1000

## Rod Type

Step Motor (Servo/24 VDC)

Servo Motor (24 VDC)



CAT.ES100-83

### Basic type Series LEY

Dust/Drip proof compatible



#### Series LEY


Size	Pushing force (N)	Stroke (mm)
16	141	Up to 300
25	452	Up to 400
32	707	Up to 500
40	1058	Up to 500

### In-line motor type Series LEY□D

Dust/Drip proof compatible



### Guide rod type Series LEYG

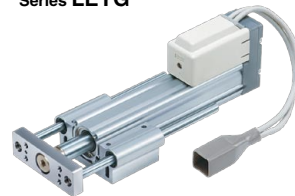

#### Series LEYG

Size	Pushing force (N)	Stroke (mm)
16	141	Up to 200
25	452	Up to 300
32	707	Up to 300
40	1058	Up to 300

### Guide rod type /In-line motor type Series LEYG□D



AC Servo Motor

### Basic type Series LEY

Dust/Drip proof compatible



#### Series LEY

Size	Pushing force (N)	Stroke (mm)
25	485	Up to 400
32	588	Up to 500

### In-line motor type Series LEY□D

Dust/Drip proof compatible



#### Series LEY

Size	Pushing force (N)	Stroke (mm)
25	485	Up to 400
32	736	Up to 500
63	1910	Up to 800


### Guide rod type Series LEYG



#### Series LEYG

Size	Pushing force (N)	Stroke (mm)
25	485	300
32	588	

### Guide rod type /In-line motor type Series LEYG□D

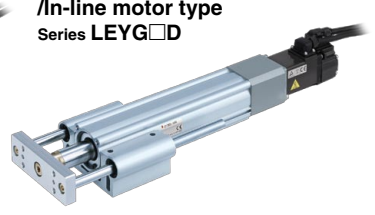

#### Series LEYG

Size	Pushing force (N)	Stroke (mm)
25	485	300
32	736	

# SMC Electric Actuators

## Slide Table

Step Motor (Servo/24 VDC)

Servo Motor (24 VDC)



CAT.ES100-78

### Compact type Series LES

#### Basic type/R type Series LES□R



Size	Max. work load (kg)	Stroke (mm)
8	1	30, 50, 75
16	3	30, 50 75, 100
25	5	30, 50, 75 100, 125, 150

#### Symmetrical type/L type Series LES□L



#### In-line motor type/D type Series LES□D



### High rigidity type Series LESH

#### Basic type/R type Series LESH□R



Size	Max. work load (kg)	Stroke (mm)
8	2	50, 75
16	6	50, 100
25	9	50, 100 150

#### Symmetrical type/L type Series LESH□L



#### In-line motor type/D type Series LESH□D



## Miniature

Step Motor (Servo/24 VDC)



CAT.ES100-92

### Rod type Series LEPY



Size	Max. work load (kg)	Stroke (mm)
6	1	25, 50, 75
10	2	

### Slide table type Series LEPS



Size	Max. work load (kg)	Stroke (mm)
6	1	25
10	2	50

## Rotary Table

Step Motor (Servo/24 VDC)



CAT.ES100-94

### Basic type Series LER



### High precision type Series LERH



#### Series LER

Size	Rotating torque (N·m)		Max. speed (°/s)	
	Basic	High torque	Basic	High torque
10	0.2	0.3	420	280
30	0.8	1.2		
50	6.6	10		

## Gripper

Step Motor (Servo/24 VDC)



CAT.ES100-77

### 2-finger type Series LEHZ



Size	Max. gripping force (N)		Stroke/both sides (mm)
	Basic	Compact	
10	14	6	4
16		8	6
20	40	28	10
25			14
32	130	—	22
40			30

### 2-finger type With dust cover Series LEHZJ



Size	Max. gripping force (N)		Stroke/both sides (mm)
	Basic	Compact	
10	14	6	4
16		8	6
20	40	28	10
25			14

### 2-finger type Long stroke Series LEHF



Size	Max. gripping force (N)	Stroke/both sides (mm)	
		Basic	Compact
10	7	16 (32)	—
20	28	24 (48)	
32	120	32 (64)	—
40	180	40 (80)	

### 3-finger type Series LEHS



Size	Max. gripping force (N)		Stroke/both sides (mm)
	Basic	Compact	
10	5.5	3.5	4
20	22	17	6
32	90	—	8
40	130	—	12

Note) ( ): Long stroke

# Controller/Driver

## Controller

**Step data input type**  
For step motor  
Series **LECP6**



**Control motor**  
Step motor  
(Servo/24 VDC)

**Step data input type**  
For servo motor  
Series **LECA6**



**Control motor**  
Servo motor  
(24 VDC)

**Programless type**  
Series **LECP1**



**Control motor**  
Step motor  
(Servo/24 VDC)

## Driver

**Pulse input type**  
Series **LECPA**



**Control motor**  
Step motor  
(Servo/24 VDC)

## Gateway Unit

**Fieldbus-compatible gateway (GW) unit**  
Series **LEC-G**



Applicable Fieldbus protocols



Max. number of connectable controllers

12

8

5

12

# Driver

## AC Servo Motor Driver

**Pulse input type/  
Positioning type**  
Series **LECSA**  
(Incremental type)



**Control motor**  
AC servo motor  
(100/200/400 W)

**Pulse input type**  
Series **LECSB**  
(Absolute type)



**Control motor**  
AC servo motor  
(100/200/400 W)

**CC-Link direct input type**  
Series **LECSA**  
(Absolute type)



**Control motor**  
AC servo motor  
(100/200/400 W)


**SSCNET III type**  
Series **LECSS**  
(Absolute type)



**Control motor**  
AC servo motor  
(100/200/400 W)

## Series Variations

### Electric Gripper 2-Finger Type *Series LEHZ/LEHZJ/LEHF*

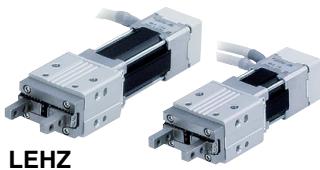

LEHZ



LEHZJ With dust cover




LEHF

Series	Size	Opening/closing stroke both sides (mm)	Gripping force [N]		Opening/closing speed (mm/s)	Controller /Driver series	Reference page
			Basic	Compact			
LEHZ	10	4	6 to 14	2 to 6	5 to 80	Series LECP6	Page 1
	16	6		3 to 8			
	20	10	16 to 40	11 to 28	5 to 100		
	25	14	—	5 to 120			
	32	22	52 to 130				
40	30	84 to 210	—				
LEHZJ	10	4	6 to 14	3 to 6	5 to 80	Series LECP1 Series LECPA	Page 15
	16	6		4 to 8			
	20	10	16 to 40	11 to 28	5 to 100		
	25	14					
LEHF	10	16 (32) Note	3 to 7		5 to 80	Series LECPA	Page 27
	20	24 (48) Note	11 to 28				
	32	32 (64) Note	48 to 120		5 to 100		
	40	40 (80) Note	72 to 180				

Note ( ): Long stroke

### Electric Gripper 3-Finger Type *Series LEHS*

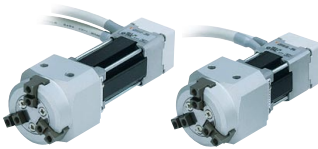

Series	Size	Opening/closing stroke both sides (mm)	Gripping force [N]		Opening/closing speed (mm/s)	Controller /Driver series	Reference page
			Basic	Compact			
LEHS	10	4	2.2 to 5.5	1.4 to 3.5	5 to 70	Series LECP6 Series LECP1 Series LECPA	Page 40
	20	6	9 to 22	7 to 17	5 to 80		
	32	8	36 to 90	—	5 to 100		
	40	12	52 to 130	—	5 to 120		

### Controller/Driver *LEC*



LECP6



LECP1



LECPA

Type	Series	Compatible motor	Power supply voltage	Parallel I/O		Number of positioning pattern points	Reference page
				Input	Output		
Step data input type	LECP6	Step motor (Servo/24 VDC)	24 VDC ±10%	11 inputs (Photo-coupler isolation)	13 outputs (Photo-coupler isolation)	64	Page 55
Programless type	LECP1	Step motor (Servo/24 VDC)	24 VDC ±10%	6 inputs (Photo-coupler isolation)	6 outputs (Photo-coupler isolation)	14	Page 68
Pulse input type	LECPA	Step motor (Servo/24 VDC)	24 VDC ±10%	5 inputs (Photo-coupler isolation)	9 outputs (Photo-coupler isolation)	—	Page 74



# INDEX

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1


LECPA

Specific Product Precautions

Step Motor (Servo/24 VDC)


## Step Motor (Servo/24 VDC) Type

### ◎ Electric Gripper 2-Finger Type Series LEHZ



Model Selection .....	Page 1
How to Order .....	Page 7
Specifications .....	Page 9
Construction .....	Page 10
Dimensions .....	Page 11
Finger Options .....	Page 14

### ◎ Electric Gripper 2-Finger Type/With Dust Cover Series LEHZJ

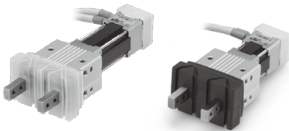


Model Selection .....	Page 15
How to Order .....	Page 21
Specifications .....	Page 23
Construction .....	Page 24
Dimensions .....	Page 25

### ◎ Electric Gripper 2-Finger Type Series LEHF



Model Selection .....	Page 27
How to Order .....	Page 31
Specifications .....	Page 33
Construction .....	Page 34
Dimensions .....	Page 35

### ◎ Electric Gripper 3-Finger Type Series LEHS

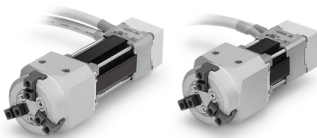


Model Selection .....	Page 40
How to Order .....	Page 43
Specifications .....	Page 45
Construction .....	Page 46
Dimensions .....	Page 47
Specific Product Precautions .....	Page 49

### ◎ Step Motor (Servo/24 VDC) Controller/Driver




Step Data Input Type/Series LECP6 .....	Page 55
Controller Setting Kit/LEC-W2 .....	Page 62
Teaching Box/LEC-T1 .....	Page 63
Gateway Unit/Series LEC-G .....	Page 65
Programless Controller/Series LECP1 .....	Page 68
Step Motor Driver/Series LECPA .....	Page 74
Controller Setting Kit/LEC-W2 .....	Page 81
Teaching Box/LEC-T1 .....	Page 82


# Model Selection

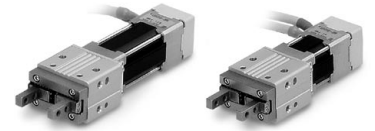

## Selection Procedure

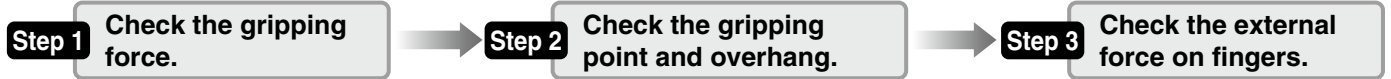

### Step 1 Check the gripping force.



#### Example

Workpiece mass: 0.1 kg

**Guidelines for the selection of the gripper with respect to workpiece mass**


- Although conditions differ according to the workpiece shape and the coefficient of friction between the attachments and the workpiece, select a model that can provide a gripping force of 10 to 20 times <sup>Note)</sup> the workpiece weight, or more.

Note) For details, refer to the calculation of required gripping force.

- If high acceleration or impact forces are encountered during motion, a further margin of safety should be considered.

Example) When it is desired to set the gripping force at 20 times or more above the workpiece weight.  
 Required gripping force  
 = 0.1 kg x 20 x 9.8 m/s<sup>2</sup> ≈ 19.6 N or more

#### LEHZ20

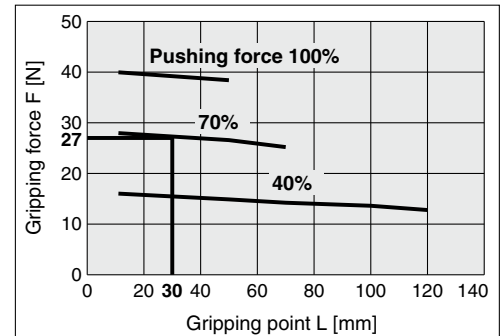

#### When the LEHZ20 is selected.

- A gripping force of 27 N is obtained from the intersection point of gripping point distance L = 30 mm and pushing force of 70%.
- Gripping force is 27.6 times greater than the workpiece weight, and therefore satisfies a gripping force setting value of 20 times or more.


Pushing force: 70%

Pushing force is one of the values of step data that is input into the controller.

Gripping point distance: 30 mm

Pushing speed: 30 mm/sec


#### LEHZ20

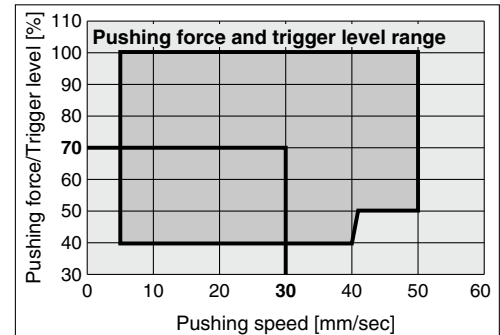

- Pushing speed is satisfied at the point where 70% of the pushing force and 30 mm/sec of the pushing speed cross.

Note) Confirm the pushing speed range from the determined pushing force [%].

### Calculation of required gripping force

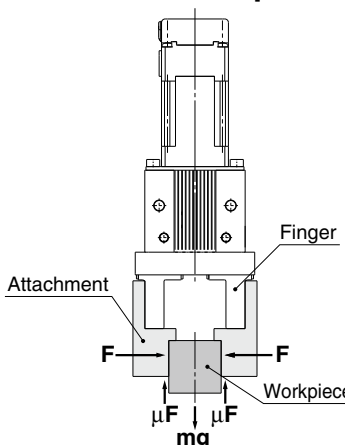

When gripping a workpiece as in the figure to the left, and with the following definitions,  
**F**: Gripping force (N)  
**μ**: Coefficient of friction between the attachments and the workpiece  
**m**: Workpiece mass (kg)  
**g**: Gravitational acceleration (= 9.8 m/s<sup>2</sup>)  
**mg**: Workpiece weight (N)

the conditions under which the workpiece will not drop are  
 $2 \times \mu F > mg$

Number of fingers

and therefore,  $F > \frac{mg}{2 \times \mu}$

With "a" representing the margin, "F" is determined by the following formula:

$$F = \frac{mg}{2 \times \mu} \times a$$

#### "Gripping force at least 10 to 20 times the workpiece weight"

The "10 to 20 times or more of the workpiece weight" recommended by SMC is calculated with a margin of "a" = 4, which allows for impacts that occur during normal transportation, etc.

When $\mu = 0.2$	When $\mu = 0.1$
$F = \frac{mg}{2 \times 0.2} \times 4 = 10 \times mg$	$F = \frac{mg}{2 \times 0.1} \times 4 = 20 \times mg$

10 x Workpiece weight

20 x Workpiece weight

<Reference> Coefficient of friction  $\mu$  (depends on the operating environment, contact pressure, etc.)

Coefficient of friction $\mu$	Attachment - Material of workpieces (guideline)
0.1	Metal (surface roughness Rz3.2 or less)
0.2	Metal
0.2 or more	Rubber, Resin, etc.

- Note) • Even in cases where the coefficient of friction is greater than  $\mu = 0.2$ , for reasons of safety, select a gripping force which is at least 10 to 20 times greater than the workpiece weight, as recommended by SMC.  
 • If high acceleration or impact forces are encountered during motion, a further margin should be considered.

**Selection Procedure**


**Step 1 Check the gripping force: Series LEHZ**

● **Indication of gripping force**


The gripping force shown in the graphs below is expressed as “F”, which is the gripping force of one finger, when both fingers and attachments are in full contact with the workpiece as shown in the figure below.

● Set the workpiece gripping point “L” so that it is within the range shown in the figure below.

**External Gripping State**

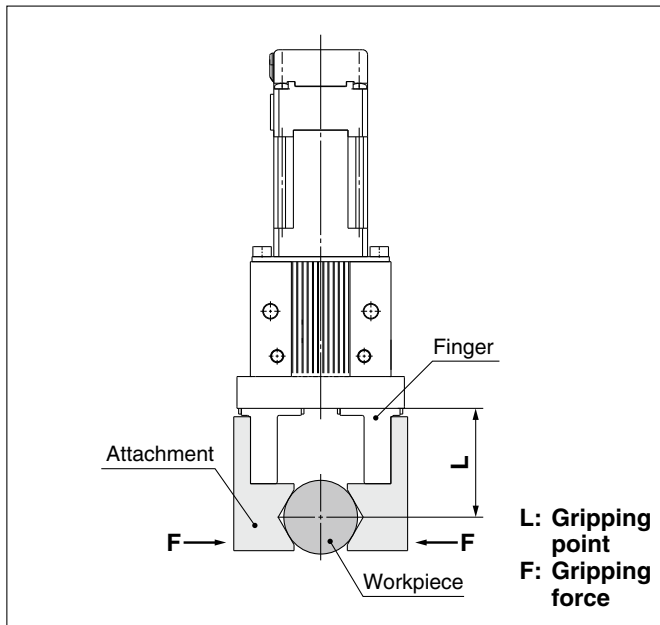


**Internal Gripping State**

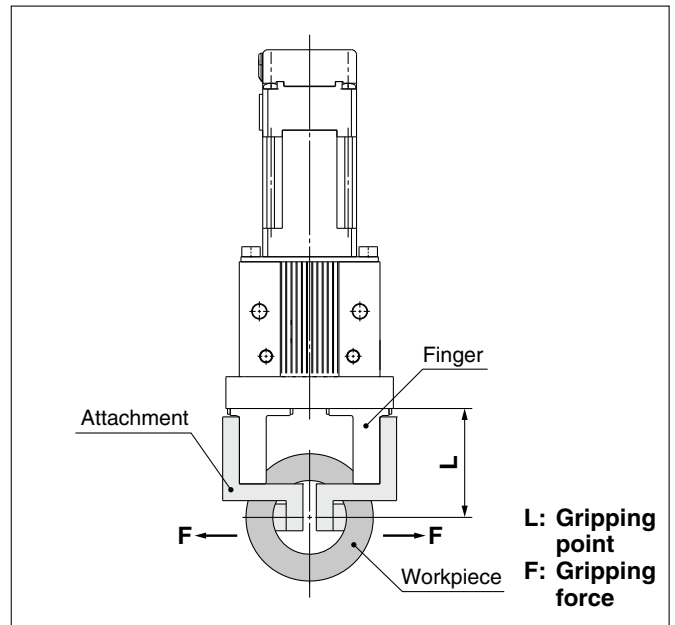


**Basic**

\* Pushing force is one of the values of step data that is input into the controller.

**LEHZ10**

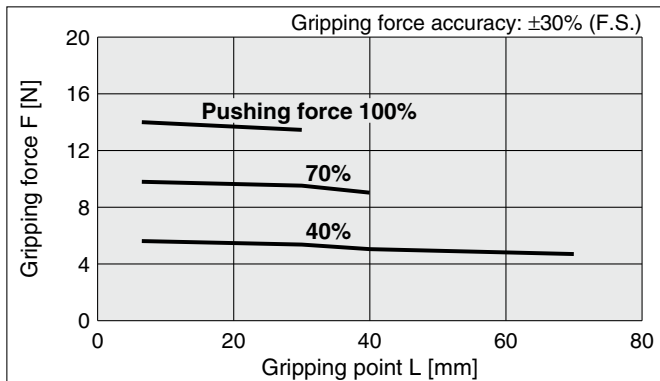


**LEHZ16**

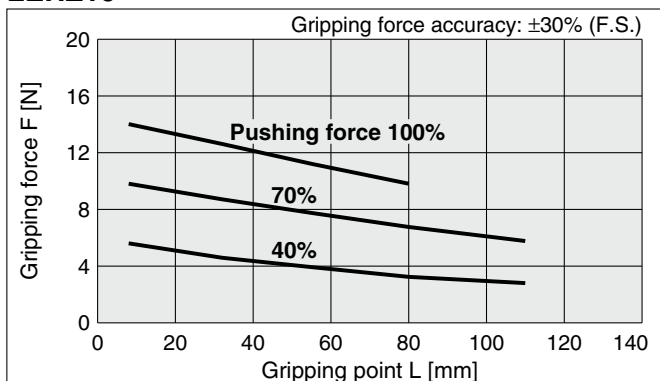


**Compact**

\* Pushing force is one of the values of step data that is input into the controller.

**LEHZ10L**

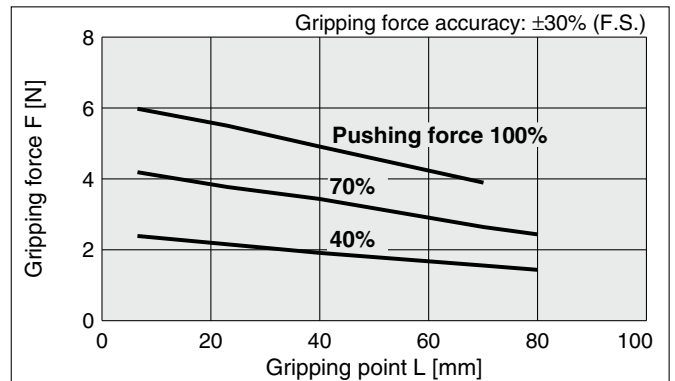

**LEHZ16L**

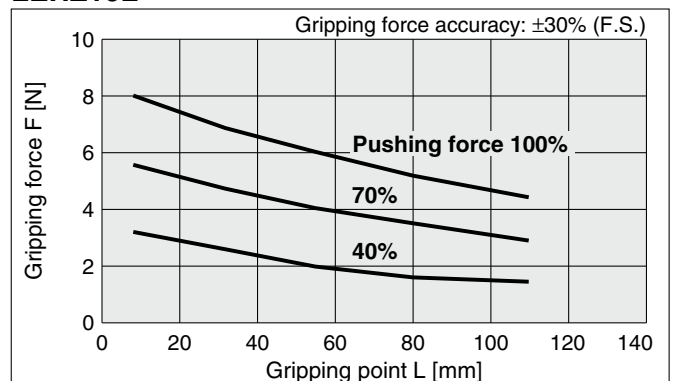

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

# Series LEHZ


## Selection Procedure

### Step 1 Check the gripping force: Series LEHZ


#### Basic

\* Pushing force is one of the values of step data that is input into the controller.


##### LEHZ20

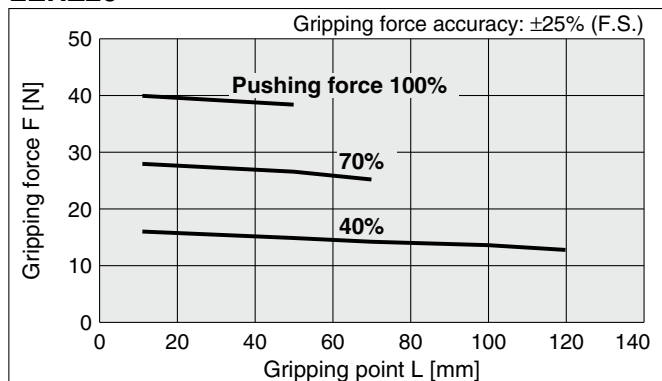


##### LEHZ25

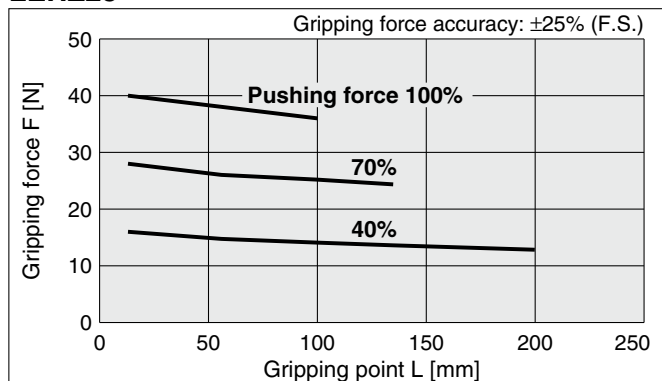

##### LEHZ32

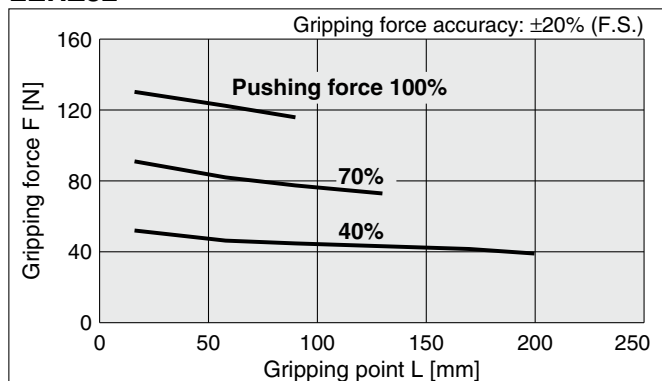


##### LEHZ40

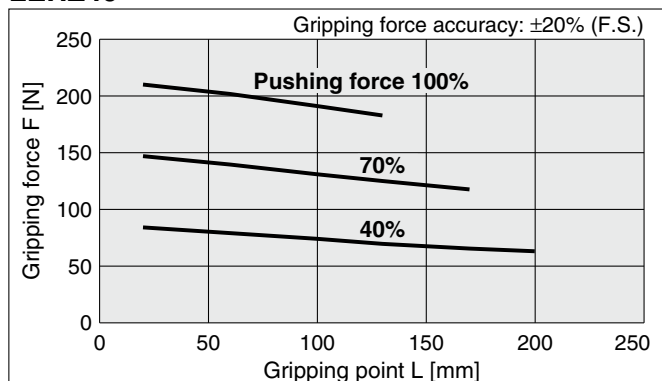


#### Compact

\* Pushing force is one of the values of step data that is input into the controller.

##### LEHZ20L

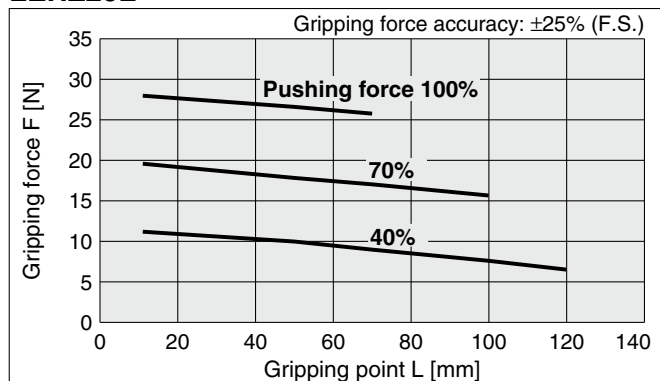

##### LEHZ25L

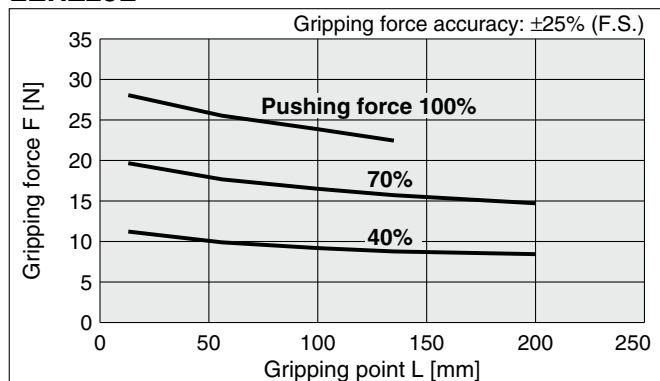


### Selection of Pushing Speed

● Set the [Pushing force] and the [Trigger LV] within the range shown in the figure below.

#### Basic




#### Compact

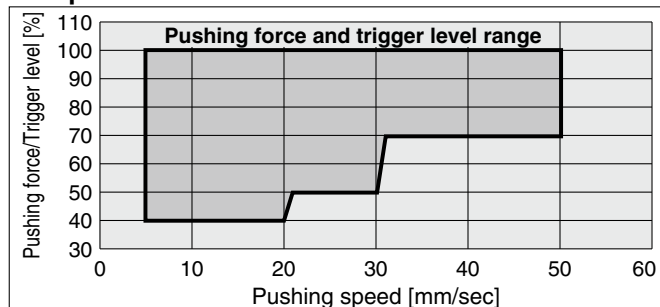


## Step 2 Check the gripping point and overhang: Series LEHZ

- Decide the gripping position of the workpiece so that the amount of overhang "H" stays within the range shown in the figure below.
- If the gripping position is out of the limit, it may shorten the life of the electric gripper.

**External Gripping State**

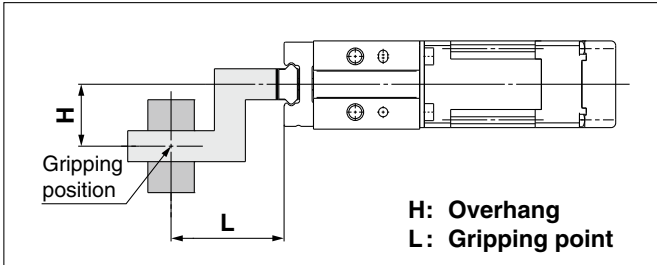


**Internal Gripping State**

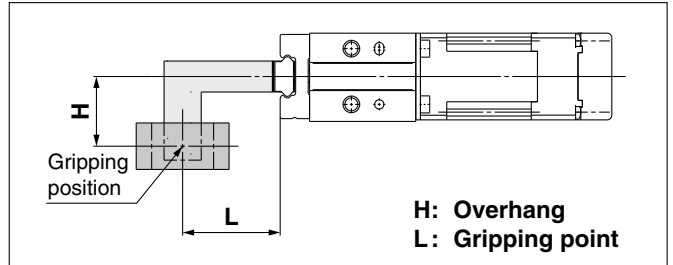

### Basic

\* Pushing force is one of the values of step data that is input into the controller.


#### LEHZ10

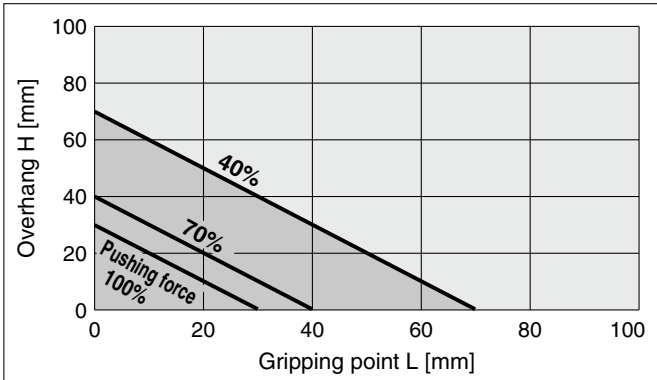


### Compact

\* Pushing force is one of the values of step data that is input into the controller.


#### LEHZ10L

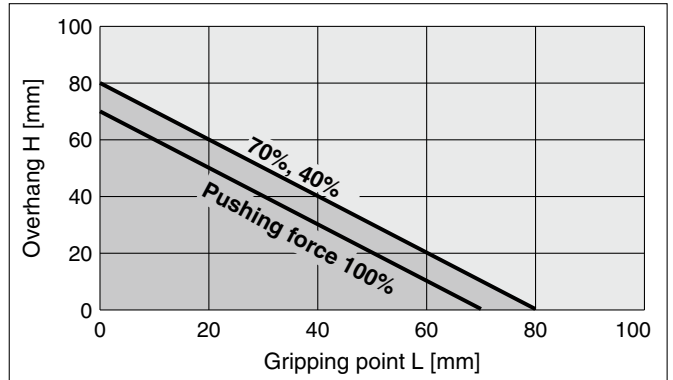


#### LEHZ16

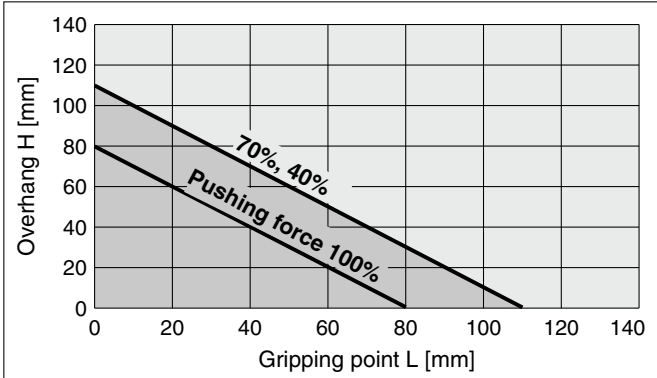


#### LEHZ16L

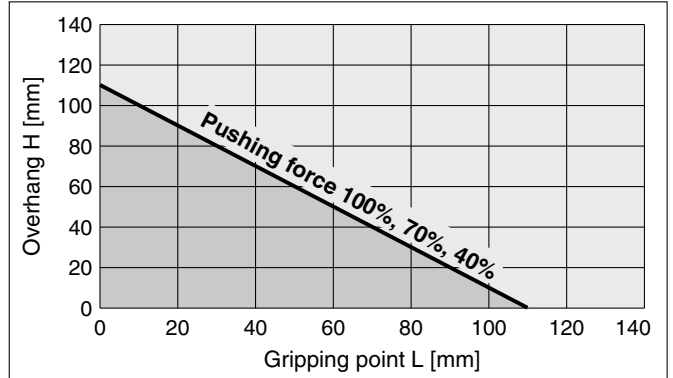

#### LEHZ20

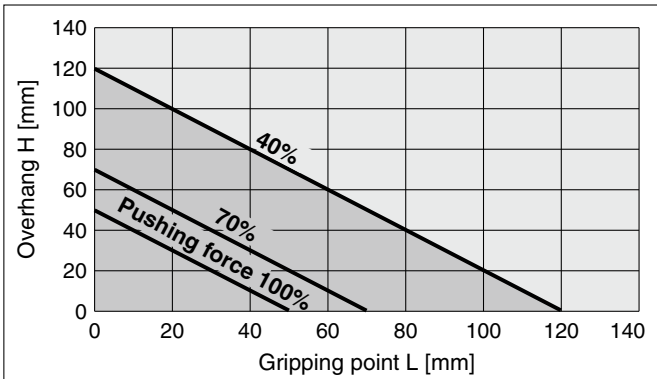

#### LEHZ20L

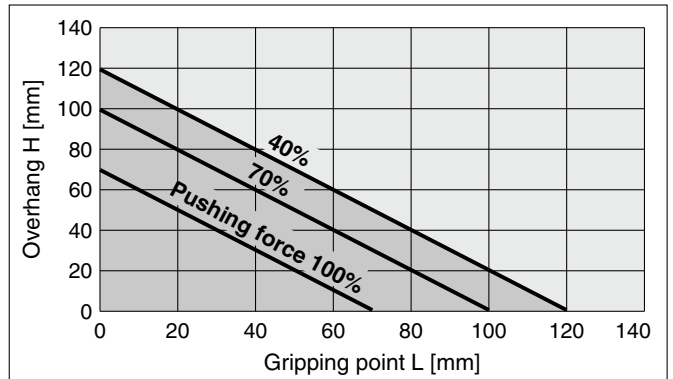

# Series LEHZ


## Selection Procedure

### Step 2 Check the gripping point and overhang: Series LEHZ


#### Basic

\* Pushing force is one of the values of step data that is input into the controller.


##### LEHZ25

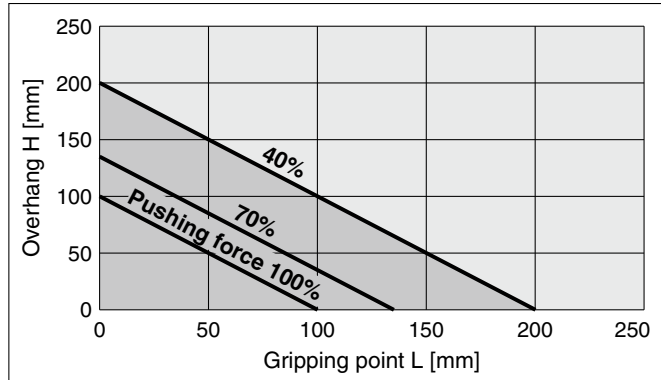

##### LEHZ32

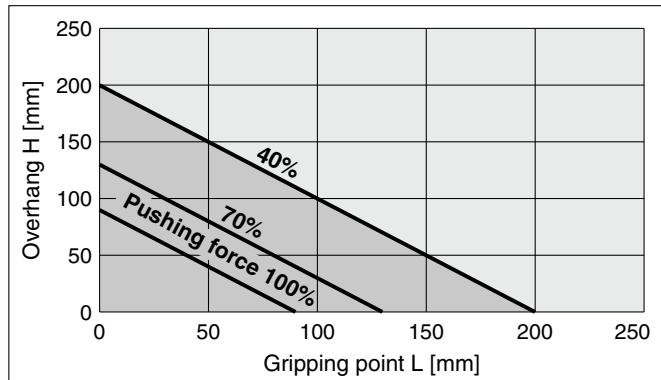


##### LEHZ40

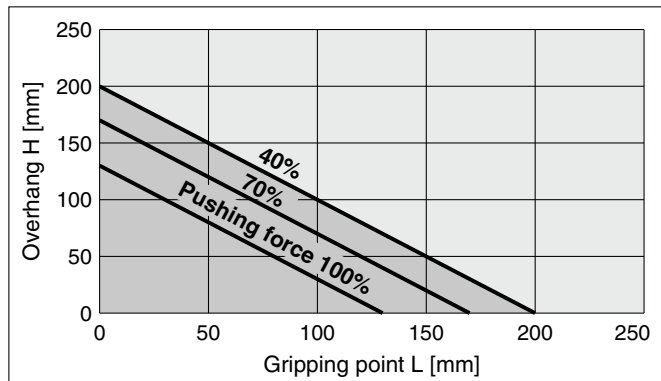


#### Compact

\* Pushing force is one of the values of step data that is input into the controller.

##### LEHZ25L

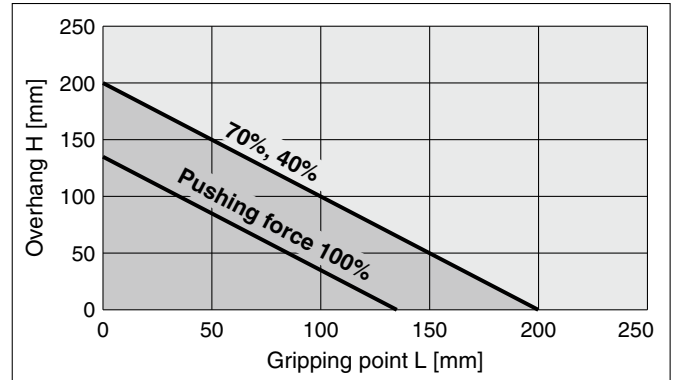

**Step 3** Check the external force on fingers: **Series LEHZ**

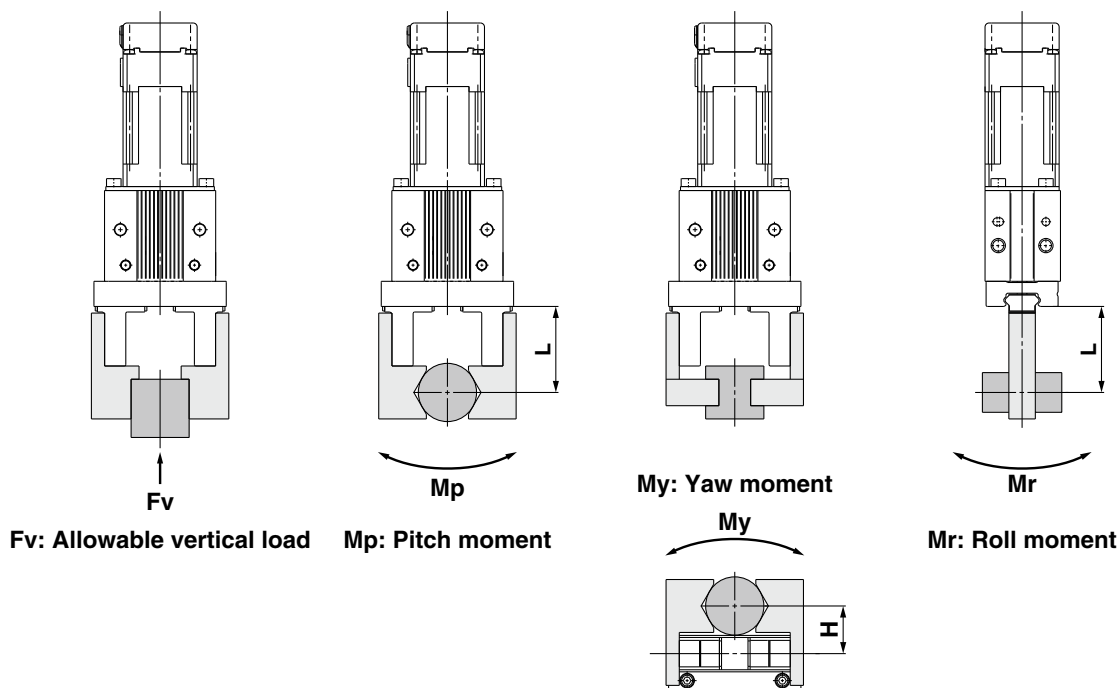

H, L: Distance to the point at which the load is applied (mm)

Model	Allowable vertical load Fv [N]	Static allowable moment		
		Pitch moment: Mp [N·m]	Yaw moment: My [N·m]	Roll moment: Mr [N·m]
LEHZ10(L)K2-4	58	0.26	0.26	0.53
LEHZ16(L)K2-6	98	0.68	0.68	1.36
LEHZ20(L)K2-10	147	1.32	1.32	2.65
LEHZ25(L)K2-14	255	1.94	1.94	3.88
LEHZ32(L)K2-22	343	3	3	6
LEHZ40(L)K2-30	490	4.5	4.5	9

Note) Values for load in the table indicate static values.

Calculation of allowable external force (when moment load is applied)	Calculation example
$\text{Allowable load } F \text{ (N)} = \frac{M \text{ (Static allowable moment) (N·m)}}{L \times 10^{-3} \text{ (*)}}$ <p>(* Constant for unit conversion)</p>	<p>When a static load of <math>f = 10 \text{ N}</math> is operating, which applies pitch moment to point <math>L = 30 \text{ mm}</math> from the LEHZ16K2-6 guide. Therefore, it can be used.</p> $\text{Allowable load } F = \frac{0.68}{30 \times 10^{-3}} = 22.7 \text{ (N)}$ <p><b>Load <math>f = 10 \text{ (N)} &lt; 22.7 \text{ (N)}</math></b></p>

# Electric Gripper 2-Finger Type


Step Motor (Servo/24 VDC)

# Series LEHZ

## LEHZ10, 16, 20, 25, 32, 40



### How to Order

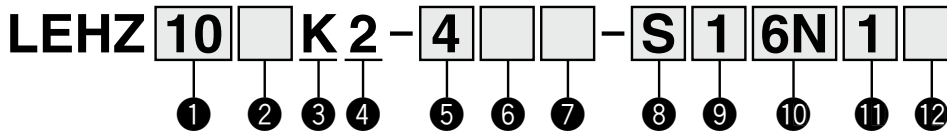

#### ① Size

10
16
20
25
32
40

#### ② Motor size

Nil	Basic
L (Note)	Compact

Note) Size: 10, 16, 20, 25 only


#### ③ Lead

K	Basic
---	-------


#### ④ 2-finger type

#### Finger options


Nil: Basic  
(Tapped in opening/closing direction)

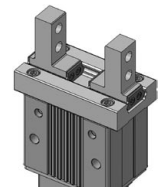


A: Side tapped mounting

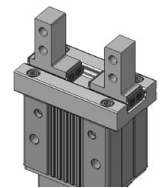

B: Through-hole in opening/closing direction

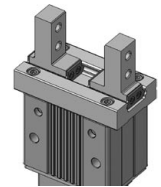

C: Flat fingers

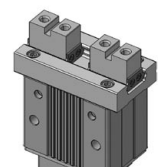


#### ⑤ Stroke [mm]

Stroke/both sides	Size
4	10
6	16
10	20
14	25
22	32
30	40

#### ⑥ Finger options

Nil	Basic (Tapped in opening/closing direction)
A	Side tapped mounting
B	Through-hole in opening/closing direction
C	Flat fingers

#### ⑦ Motor cable entry

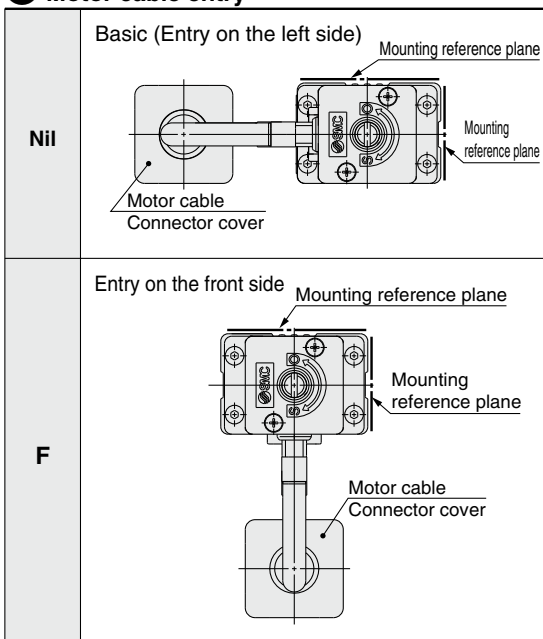

#### ⚠ Caution

##### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

##### [UL-compliant products]


When conformity to UL is required, the electric actuator and controller/driver should be used with a UL1310 Class 2 power supply.

### The actuator and controller/driver are sold as a package.

Confirm that the combination of the controller/driver and the actuator is correct.

<Check the following before use.>

- ① Check the actuator label for model number. This matches the controller/driver.
- ② Check Parallel I/O configuration matches (NPN or PNP).

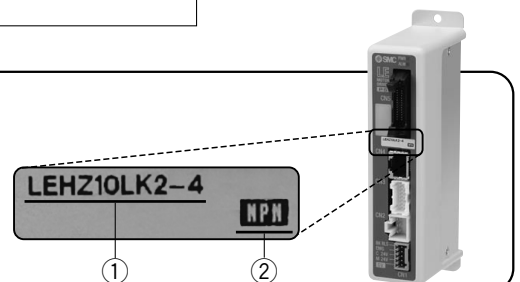

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>



# Electric Gripper 2-Finger Type *Series LEHZ*



## 8 Actuator cable type\*

Nil	Without cable
S	Standard cable
R	Robotic cable (Flexible cable)

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

## 9 Actuator cable length [m]

Nil	Without cable
1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

\* Produced upon receipt of order (Robotic cable only)  
Refer to the specifications Note 3) on page 9.

## 10 Controller/Driver type\*

Nil	Without controller/driver	
6N	LECP6 (Step data input type)	NPN
6P		PNP
1N	LECP1 (Programless type)	NPN
1P		PNP
AN	LECPA (Pulse input type)	NPN
AP		PNP

\* For details about controllers/driver and compatible motors, refer to the compatible controllers/driver below.

## 11 I/O cable length [m]\*1

Nil	Without cable
1	1.5
3	3*2
5	5*2

\*1 When "Without controller/driver" is selected for controller/driver types, I/O cable cannot be selected. Refer to page 61 (For LECP6), page 73 (For LECP1) or page 80 (For LECPA) if I/O cable is required.




\*2 When "Pulse input type" is selected for controller/driver types, pulse input usable only with differential. Only 1.5 m cables usable with open collector.

## 12 Controller/Driver mounting

Nil	Screw mounting
D	DIN rail mounting*

\* DIN rail is not included. Order it separately.  
(Refer to page 56.)

## Compatible Controllers/Driver

Type	Step data input type	Programless type	Pulse input type
			
Series	LECP6	LECP1	LECPA
Features	Value (Step data) input Standard controller	Capable of setting up operation (step data) without using a PC or teaching box	Operation by pulse signals
Compatible motor	Step motor (Servo/24 VDC)	Step motor (Servo/24 VDC)	
Maximum number of step data	64 points	14 points	—
Power supply voltage	24 VDC		
Reference page	Page 55	Page 68	Page 74

## Specifications



Model		LEHZ10	LEHZ16	LEHZ20	LEHZ25	LEHZ32	LEHZ40
Opening/closing stroke (Both sides)		4	6	10	14	22	30
Gripping force [N] <small>Note 1) Note 3)</small>	Basic	6 to 14		16 to 40		52 to 130	84 to 210
	Compact	2 to 6	3 to 8	11 to 28		—	—
Opening and closing speed/ Pushing speed [mm/s] <small>Note 2) Note 3)</small>		5 to 80/5 to 50		5 to 100/5 to 50		5 to 120/5 to 50	
Drive method		Slide screw + Slide cam					
Finger guide type		Linear guide (No circulation)					
Repeatability [mm] <small>Note 4)</small>		±0.02					
Repeated length measurement accuracy [mm] <small>Note 5)</small>		±0.05					
Finger backlash/ both sides [mm] <small>Note 6)</small>		0.5 or less				1.0 or less	
Impact/Vibration resistance [m/s <sup>2</sup> ] <small>Note 7)</small>		150/30					
Max. operating frequency [C.P.M]		60					
Operating temperature range [°C]		5 to 40					
Operating humidity range [%RH]		90 or less (No condensation)					
Weight [g]	Basic	165	220	430	585	1120	1760
	Compact	135	190	365	520	—	—
Motor size		□20		□28		□42	
Motor type		Step motor (Servo/24 VDC)					
Encoder		Incremental A/B phase (800 pulse/rotation)					
Rated voltage [V]		24 VDC ±10%					
Power consumption/ Standby power consumption when operating [W] <small>Note 8)</small>	Basic	11/7		28/15		34/13	36/13
	Compact	8/7		22/12		—	—
Max. instantaneous power consumption [W] <small>Note 9)</small>	Basic	19		51		57	61
	Compact	14		42		—	—

Note 1) Gripping force should be from 10 to 20 times the workpiece weight. Positioning force should be 150% when releasing the workpiece. Gripping force accuracy should be ±30% (F.S.) for LEHZ10/16, ±25% (F.S.) for LEHZ20/25 and ±20% (F.S.) for LEHZ32/40.

Note 2) Pushing speed should be set within the range during pushing (gripping) operation. Otherwise, it may cause malfunction. The opening/closing speed and pushing speed are for both fingers. The speed for one finger is half this value.

Note 3) The speed and force may change depending on the cable length, load and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)

Note 4) Repeatability means the variation of the gripping position (workpiece position) when the gripping operation is repeatedly performed by the same sequence for the same workpiece.

Note 5) Repeated length measurement accuracy means dispersion (value on the controller monitor) when the workpiece is repeatedly held in the same position.

Note 6) There will be no influence of backlash during pushing (gripping) operation. Make the stroke longer for the amount of backlash when opening.

Note 7) Impact resistance: No malfunction occurred when the gripper was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)

Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. Test was performed in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)


Note 8) The power consumption (including the controller) is for when the gripper is operating.

The standby power consumption when operating is for when the gripper is stopped in the set position during operation, including the energy saving mode when gripping.


Note 9) The maximum instantaneous power consumption (including the controller) is for when the gripper is operating. This value can be used for the selection of the power supply.

## How to Mount


a) When using the thread on the side of the body

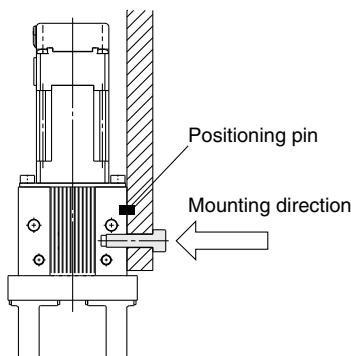

b) When using the thread on the mounting plate

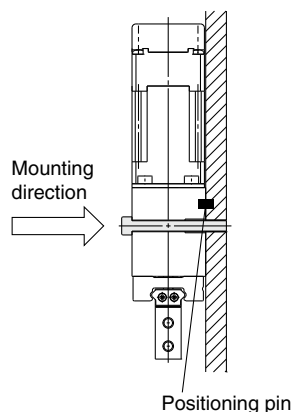


c) When using the thread on the back of the body

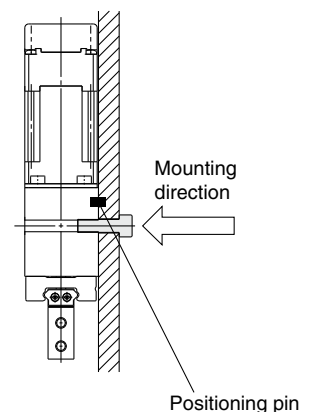

## Construction





### Series LEHZ

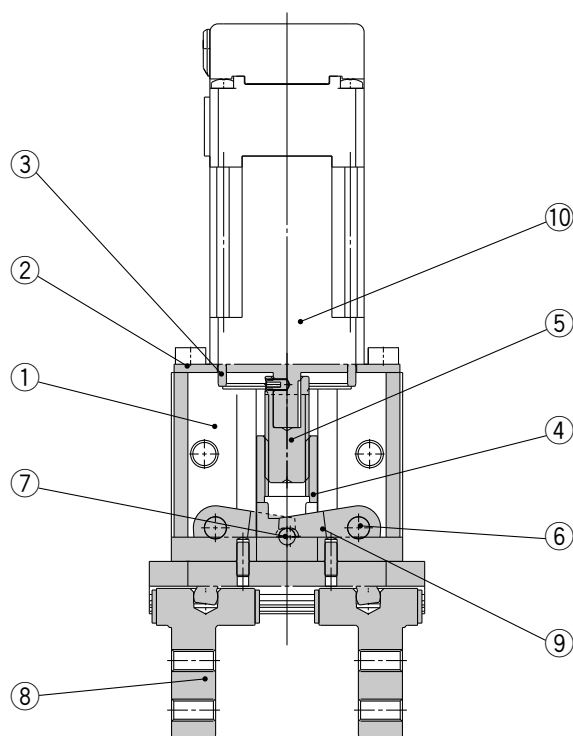

### Component Parts

No.	Description	Material	Note
1	<b>Body</b>	Aluminum alloy	Anodized
2	<b>Motor plate</b>	Aluminum alloy	Anodized
3	<b>Guide ring</b>	Aluminum alloy	
4	<b>Slide nut</b>	Stainless steel	Heat treatment + Special treatment
5	<b>Slide bolt</b>	Stainless steel	Heat treatment + Special treatment
6	<b>Needle roller</b>	High carbon chromium bearing steel	
7	<b>Needle roller</b>	High carbon chromium bearing steel	
8	<b>Finger assembly</b>	—	
9	<b>Lever</b>	Special stainless steel	
10	<b>Step motor (Servo/24 VDC)</b>	—	

### Replacement Parts ⑧ Finger Assembly

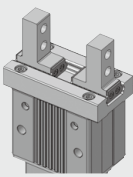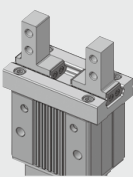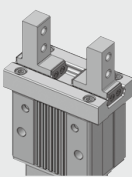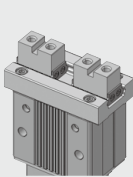Size	Basic (Nil)	Side tapped mounting (A)	Through-hole in opening/ closing direction (B)	Flat fingers (C)
				
10	MHZ-A1002	MHZ-A1002-1	MHZ-A1002-2	MHZ-A1002-3
16	MHZ-A1602	MHZ-A1602-1	MHZ-A1602-2	MHZ-A1602-3
20	MHZ-A2002	MHZ-A2002-1	MHZ-A2002-2	MHZ-A2002-3
25	MHZ-A2502	MHZ-A2502-1	MHZ-A2502-2	MHZ-A2502-3
32	MHZ-A3202	MHZ-A3202-1	MHZ-A3202-2	MHZ-A3202-3
40	MHZ-A4002	MHZ-A4002-1	MHZ-A4002-2	MHZ-A4002-3

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA


Specific Product Precautions

# Series LEHZ

## Dimensions


### LEHZ10(L)K2-4

Model	L	(L <sub>1</sub> )
LEHZ10K2-4□	103.8	(59.7)
LEHZ10LK2-4□	87.2	(43.1)

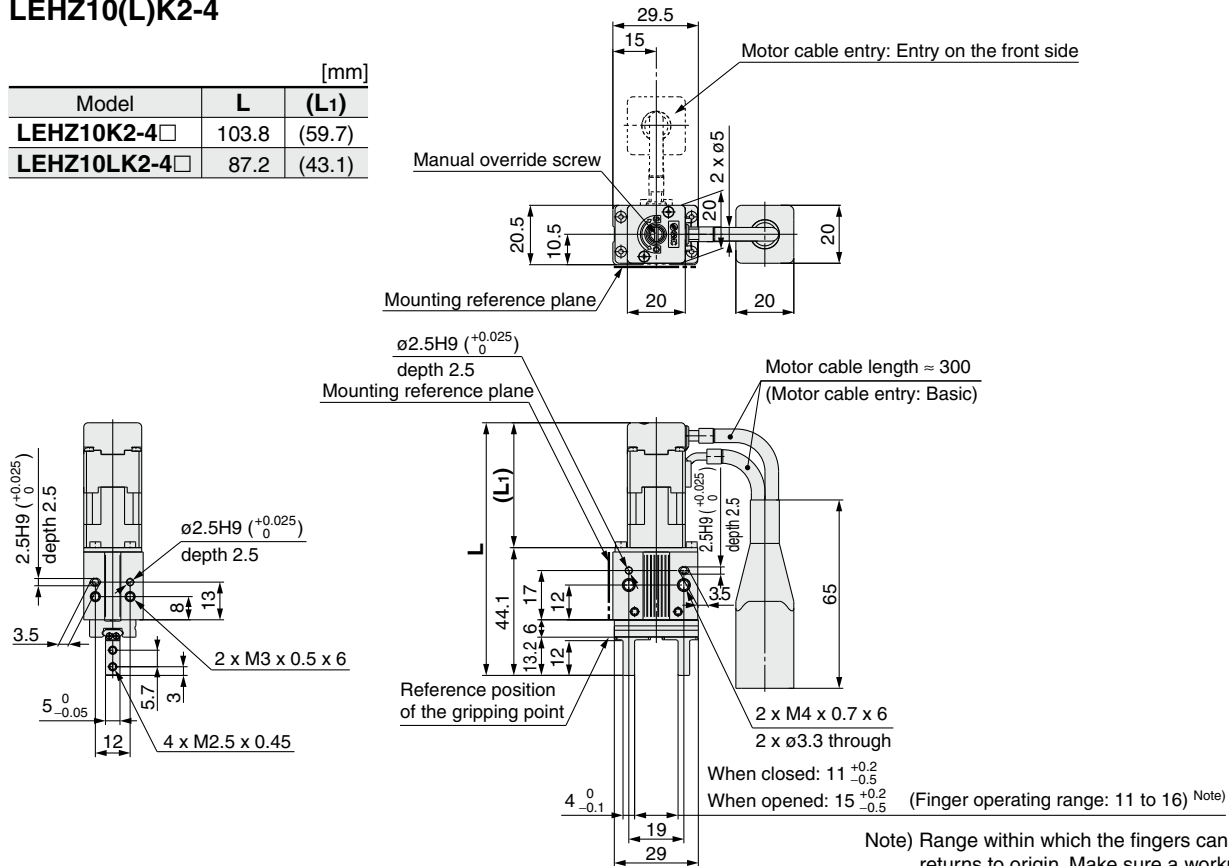

### LEHZ16(L)K2-6

Model	L	(L <sub>1</sub> )
LEHZ16K2-6□	112.8	(59.7)
LEHZ16LK2-6□	96.2	(43.1)

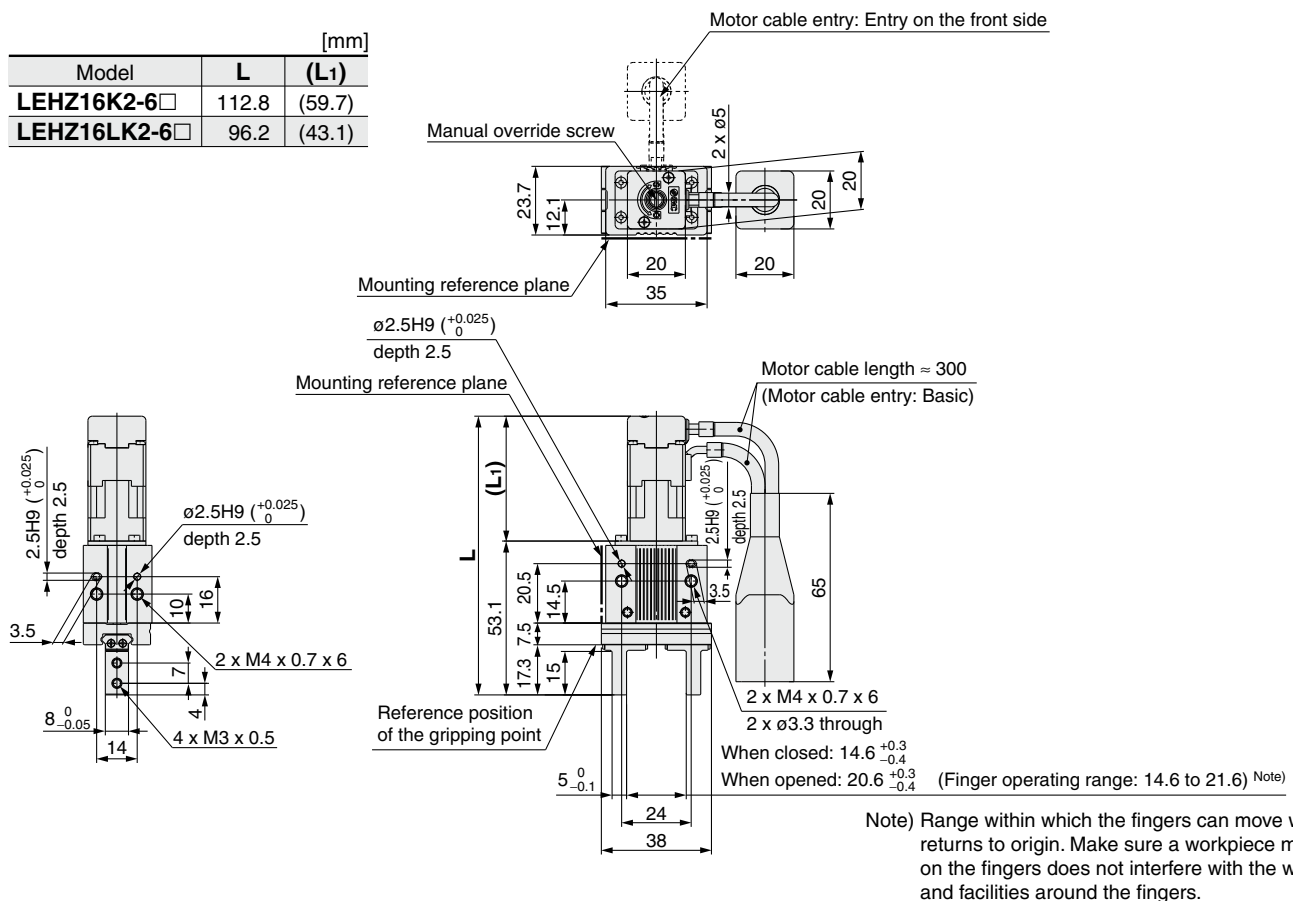


## Dimensions

### LEHZ20(L)K2-10

Model	L	(L1)
LEHZ20K2-10□	129.6	(61.8)
LEHZ20LK2-10□	115.6	(47.8)

[mm]

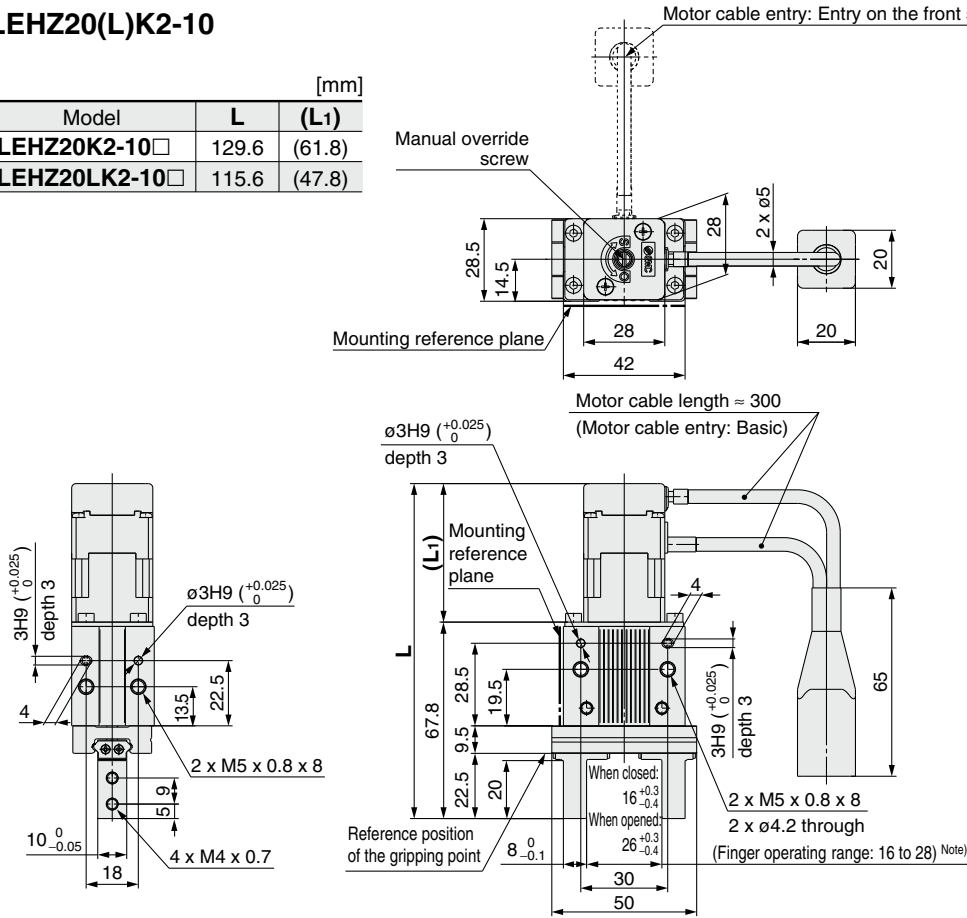


Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

### LEHZ25(L)K2-14

Model	L	(L1)
LEHZ25K2-14□	139.8	(61.8)
LEHZ25LK2-14□	125.8	(47.8)

[mm]

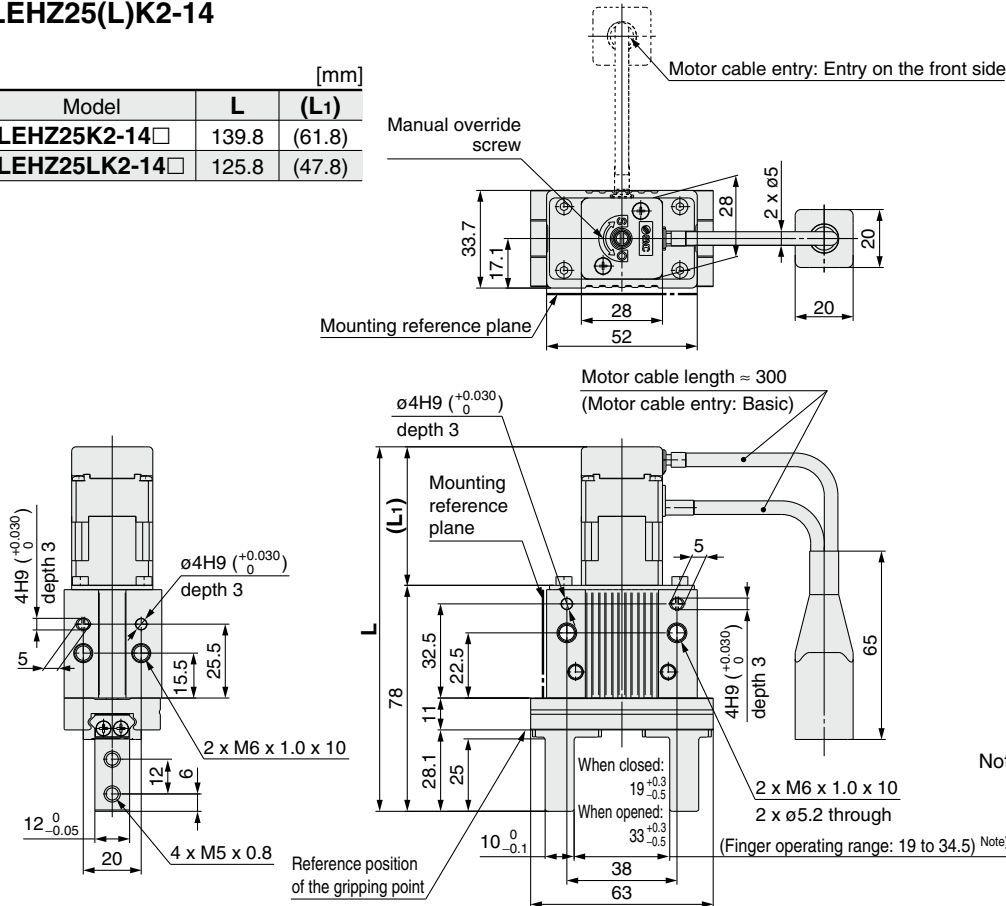


Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

# Series LEHZ


## Dimensions

### LEHZ32K2-22

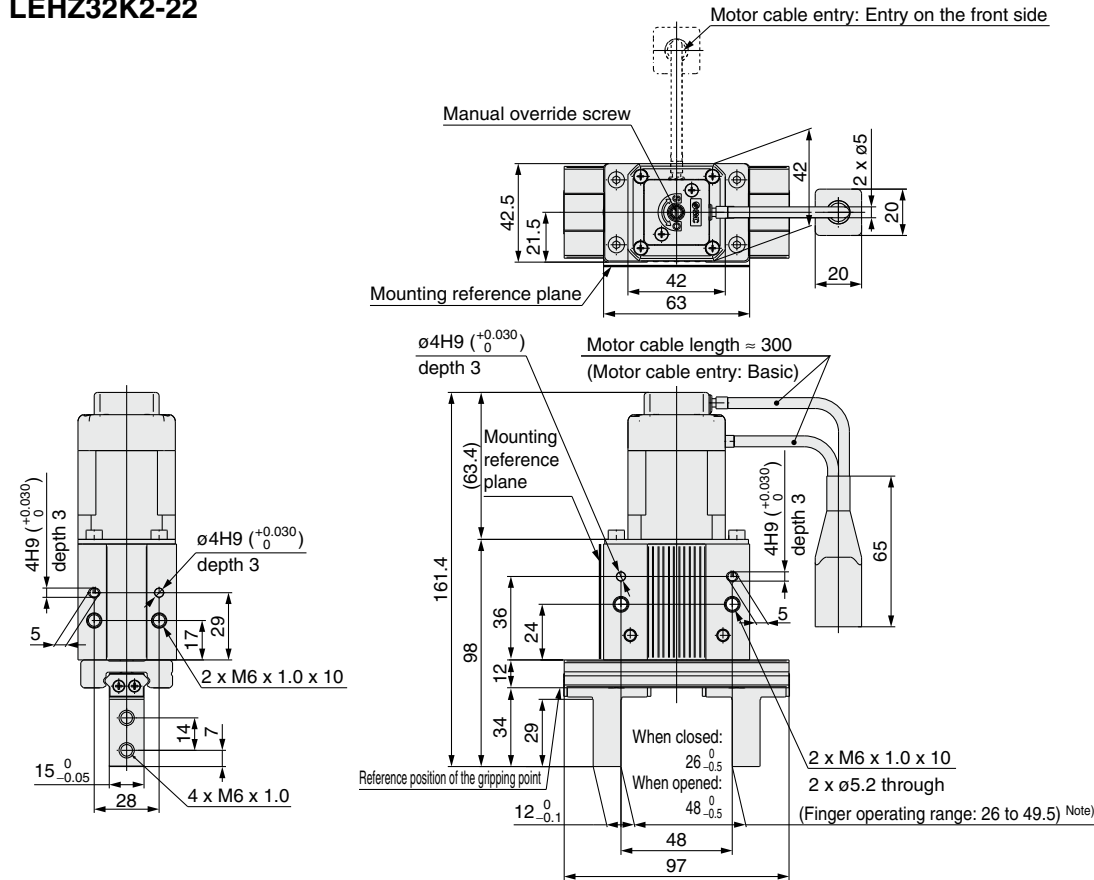

Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

### LEHZ40K2-30

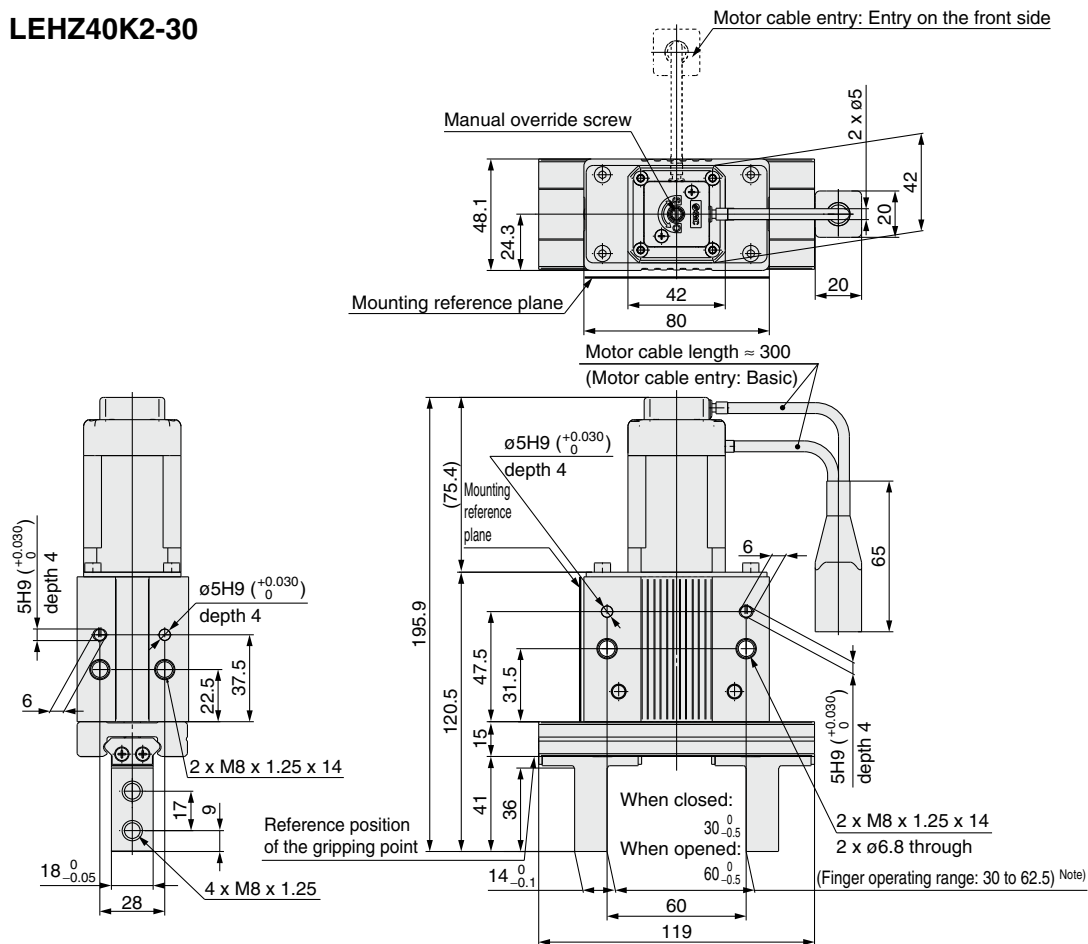


Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

# Series LEHZ


## Finger Options

### Side Tapped Mounting (A)

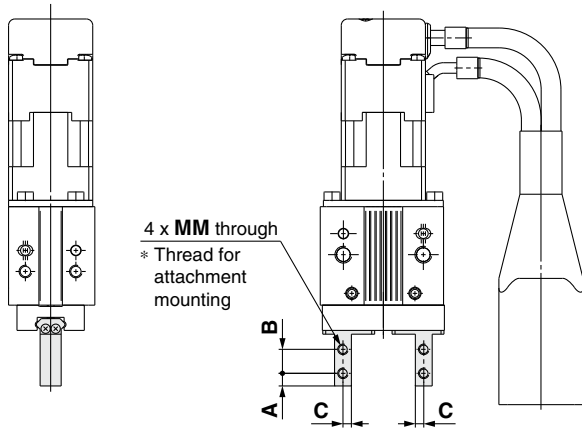


Model	A	B	C	MM
LEHZ10(L)K2-4A□	3	5.7	2	M2.5 x 0.45
LEHZ16(L)K2-6A□	4	7	2.5	M3 x 0.5
LEHZ20(L)K2-10A□	5	9	4	M4 x 0.7
LEHZ25(L)K2-14A□	6	12	5	M5 x 0.8
LEHZ32K2-22A□	7	14	6	M6 x 1
LEHZ40K2-30A□	9	17	7	M8 x 1.25

### Through-hole in Opening/Closing Direction (B)

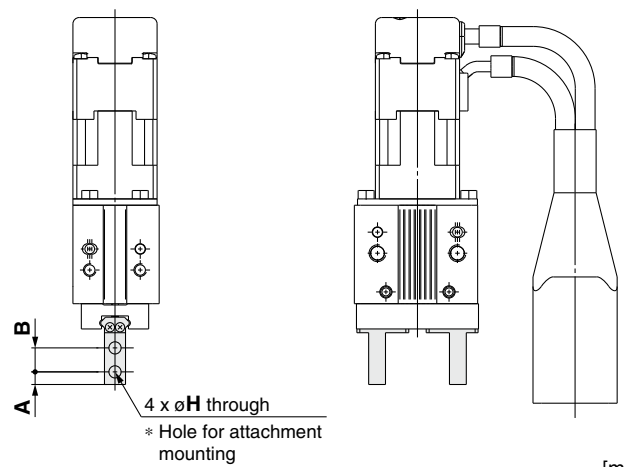

Model	A	B	H
LEHZ10(L)K2-4B□	3	5.7	2.9
LEHZ16(L)K2-6B□	4	7	3.4
LEHZ20(L)K2-10B□	5	9	4.5
LEHZ25(L)K2-14B□	6	12	5.5
LEHZ32K2-22B□	7	14	6.6
LEHZ40K2-30B□	9	17	9

### Flat Fingers (C)

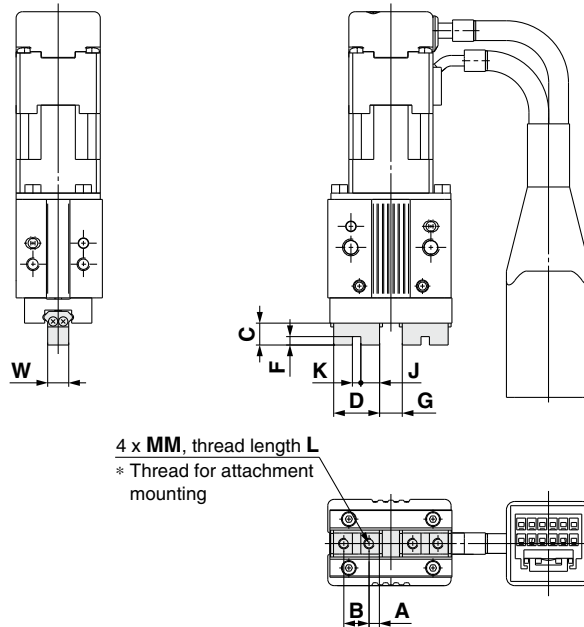

Model	A	B	C	D	F	G		J	K	MM	L	W	Weight (g)
						When opened	When closed						
LEHZ10K2-4C□	2.45	6	5.2	10.9	2	5.4 <sup>0</sup> <sub>-0.2</sub>	1.4 <sup>0</sup> <sub>-0.2</sub>	4.45	2H9 <sup>+0.025</sup> <sub>0</sub>	M2.5 x 0.45	5	5 <sup>0</sup> <sub>-0.05</sub>	165
LEHZ10LK2-4C□						135							
LEHZ16K2-6C□	3.05	8	8.3	14.1	2.5	7.4 <sup>0</sup> <sub>-0.2</sub>	1.4 <sup>0</sup> <sub>-0.2</sub>	5.8	2.5H9 <sup>+0.025</sup> <sub>0</sub>	M3 x 0.5	6	8 <sup>0</sup> <sub>-0.05</sub>	220
LEHZ16LK2-6C□						190							
LEHZ20K2-10C□	3.95	10	10.5	17.9	3	11.6 <sup>0</sup> <sub>-0.2</sub>	1.6 <sup>0</sup> <sub>-0.2</sub>	7.45	3H9 <sup>+0.025</sup> <sub>0</sub>	M4 x 0.7	8	10 <sup>0</sup> <sub>-0.05</sub>	430
LEHZ20LK2-10C□						365							
LEHZ25K2-14C□	4.9	12	13.1	21.8	4	16 <sup>0</sup> <sub>-0.2</sub>	2 <sup>0</sup> <sub>-0.2</sub>	8.9	4H9 <sup>+0.030</sup> <sub>0</sub>	M5 x 0.8	10	12 <sup>0</sup> <sub>-0.05</sub>	575
LEHZ25LK2-14C□						510							
LEHZ32K2-22C□	7.3	20	18	34.6	5	25 <sup>0</sup> <sub>-0.2</sub>	3 <sup>0</sup> <sub>-0.2</sub>	14.8	5H9 <sup>+0.030</sup> <sub>0</sub>	M6 x 1	12	15 <sup>0</sup> <sub>-0.05</sub>	1145
LEHZ40K2-30C□	8.7	24	22	41.4	6	33 <sup>0</sup> <sub>-0.2</sub>	3 <sup>0</sup> <sub>-0.2</sub>	17.7	6H9 <sup>+0.030</sup> <sub>0</sub>	M8 x 1.25	16	18 <sup>0</sup> <sub>-0.05</sub>	1820

Model Selection

LEHZ

LEHZJ

Step Motor (Servo24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions


# Model Selection



## Selection Procedure



### Step 1 Check the of gripping force.



#### Example

Workpiece mass: 0.1 kg

#### Guidelines for the selection of the gripper with respect to workpiece mass

- Although conditions differ according to the workpiece shape and the coefficient of friction between the attachments and the workpiece, select a model that can provide a gripping force of 10 to 20 times <sup>Note)</sup> the workpiece weight, or more.


Note) For details, refer to the calculation of required gripping force.

- If high acceleration or impact forces are encountered during motion, a further margin of safety should be considered.

Example) When it is desired to set the gripping force at 20 times or more above the workpiece weight.

Required gripping force  
= 0.1 kg x 20 x 9.8 m/s<sup>2</sup> ≈ 19.6 N or more

#### LEHZJ20

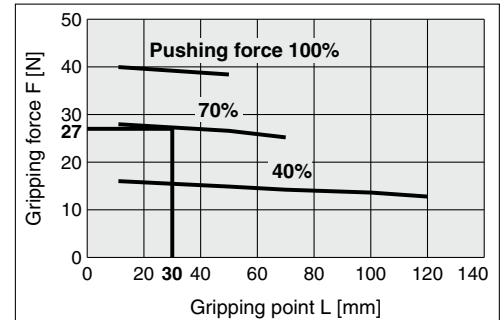

#### When the LEHZJ20 is selected.

- A gripping force of 27 N is obtained from the intersection point of gripping point distance L = 30 mm and pushing force of 70%.
- Gripping force is 27.6 times greater than the workpiece weight, and therefore satisfies a gripping force setting value of 20 times or more.


Pushing force: 70%

Pushing force is one of the values of step data that is input into the controller.

Gripping point distance: 30 mm

Pushing speed: 30 mm/sec


#### LEHZJ20

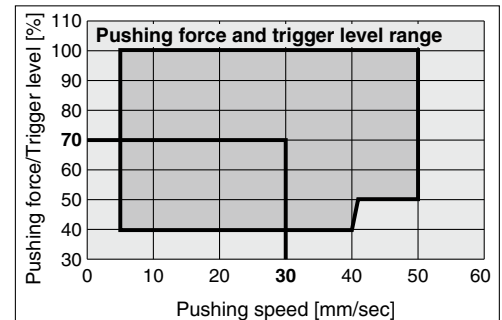

- Pushing speed is satisfied at the point where 70% of the pushing force and 30 mm/sec of the pushing speed cross.

Note) Confirm the pushing speed range from the determined pushing force [%].

### Calculation of required gripping force

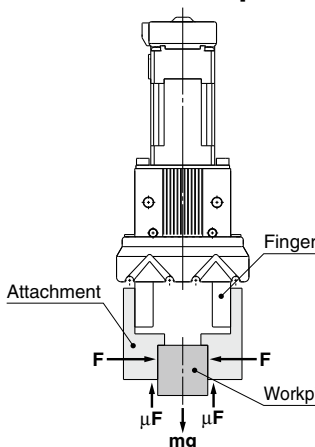

When gripping a workpiece as in the figure to the left, and with the following definitions,

- F: Gripping force (N)
- μ: Coefficient of friction between the attachments and the workpiece
- m: Workpiece mass (kg)
- g: Gravitational acceleration (= 9.8 m/s<sup>2</sup>)
- mg: Workpiece weight (N)

the conditions under which the workpiece will not drop are

$$2 \times \mu F > mg$$

and therefore,  $F > \frac{mg}{2 \times \mu}$

With "a" representing the margin, "F" is determined by the following formula:

$$F = \frac{mg}{2 \times \mu} \times a$$

#### "Gripping force at least 10 to 20 times the workpiece weight"

- The "10 to 20 times or more of the workpiece weight" recommended by SMC is calculated with a margin of "a" = 4, which allows for impacts that occur during normal transportation, etc.

When μ = 0.2	When μ = 0.1
$F = \frac{mg}{2 \times 0.2} \times 4 = 10 \times mg$	$F = \frac{mg}{2 \times 0.1} \times 4 = 20 \times mg$

10 x Workpiece weight

20 x Workpiece weight

<Reference> Coefficient of friction μ (depends on the operating environment, contact pressure, etc.)

Coefficient of friction μ	Attachment – Material of workpieces (guideline)
0.1	Metal (surface roughness Rz3.2 or less)
0.2	Metal
0.2 or more	Rubber, Resin, etc.

- Note) • Even in cases where the coefficient of friction is greater than μ = 0.2, for reasons of safety, select a gripping force which is at least 10 to 20 times greater than the workpiece weight, as recommended by SMC.  
• If high acceleration or impact forces are encountered during motion, a further margin should be considered.



**Selection Procedure**


**Step 1 Check the gripping force: Series LEHZJ**

● **Indication of gripping force**


The gripping force shown in the graphs below is expressed as “F”, which is the gripping force of one finger, when both fingers and attachments are in full contact with the workpiece as shown in the figure below.

● Set the workpiece gripping point “L” so that it is within the range shown in the figure below.

**External Gripping State**

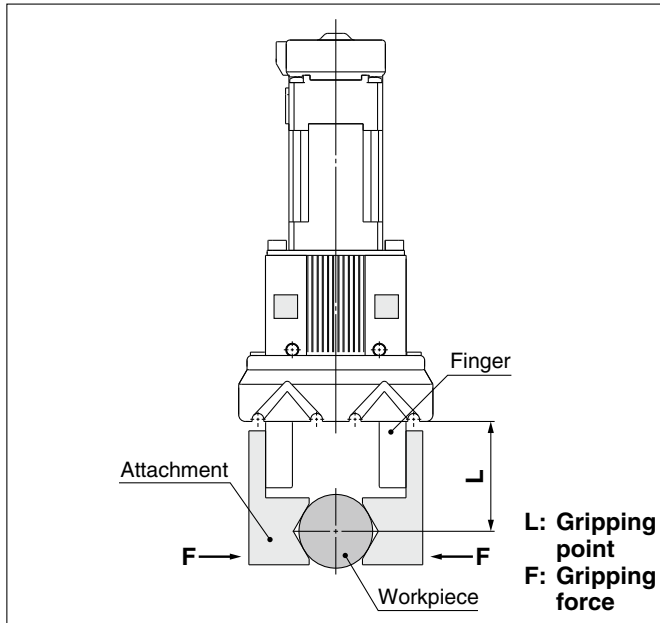


**Internal Gripping State**

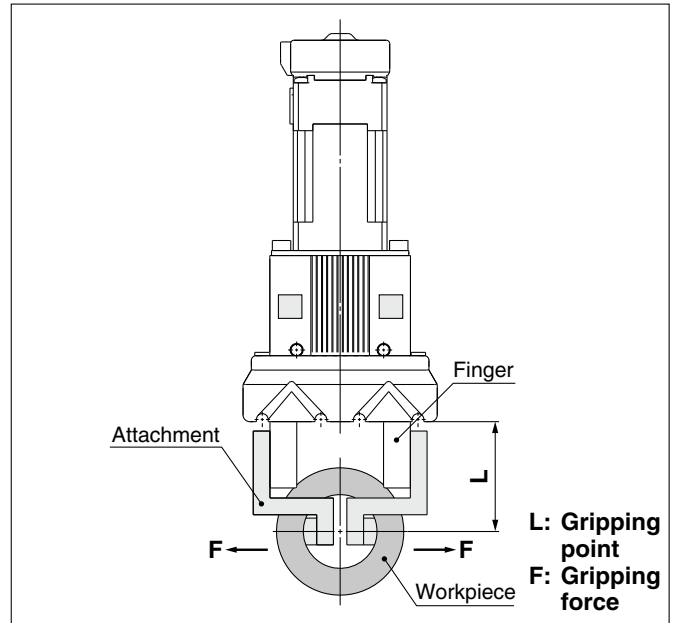


\* Pushing force is one of the values of step data that is input into the controller.

**Basic**

**LEHZJ10**

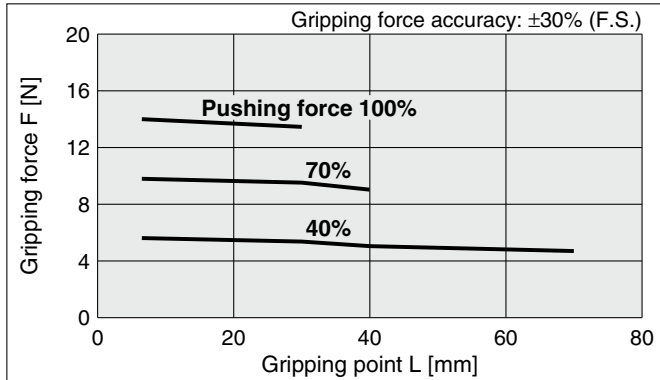


**LEHZJ16**

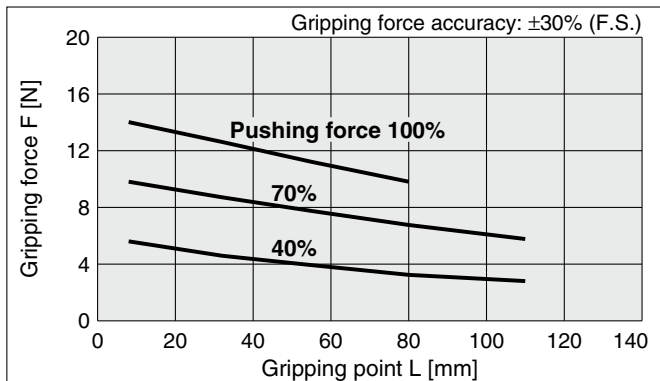


**Compact**

**LEHZJ10L**

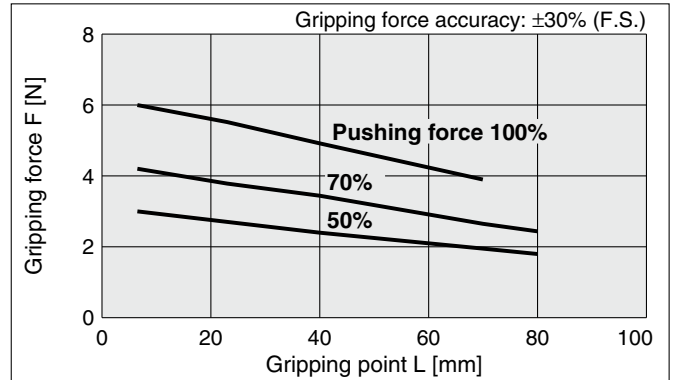

**LEHZJ16L**

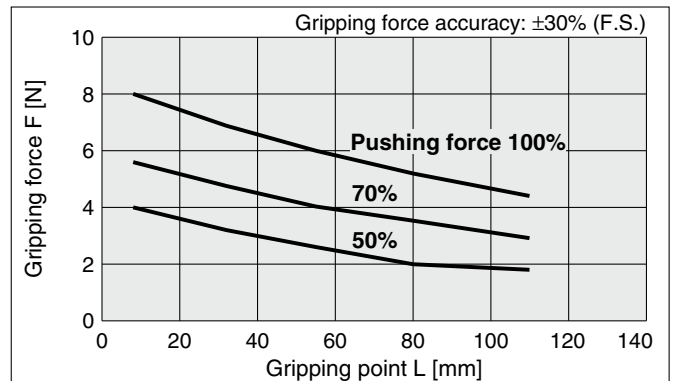

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

# Series LEHZJ


## Selection Procedure

### Step 1 Check the gripping force: Series LEHZJ


#### Basic

\* Pushing force is one of the values of step data that is input into the controller.

##### LEHZJ20

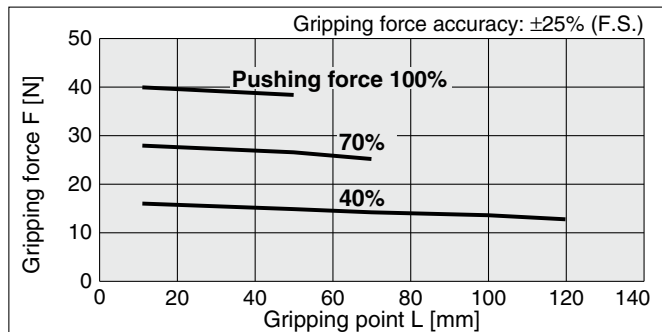


##### LEHZJ25

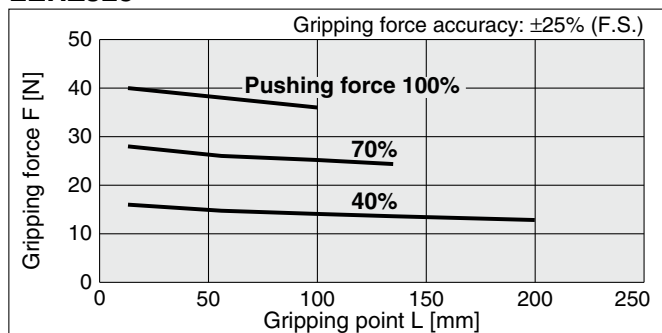


#### Compact

\* Pushing force is one of the values of step data that is input into the controller.

##### LEHZJ20L

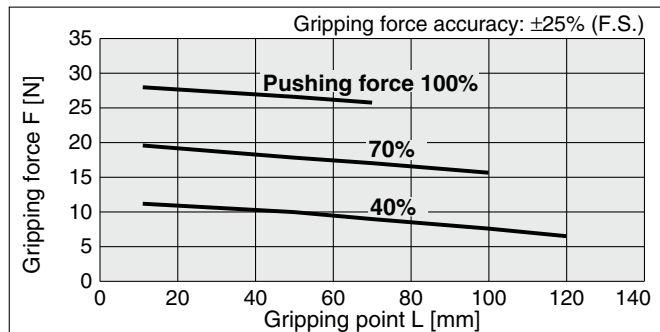


##### LEHZJ25L

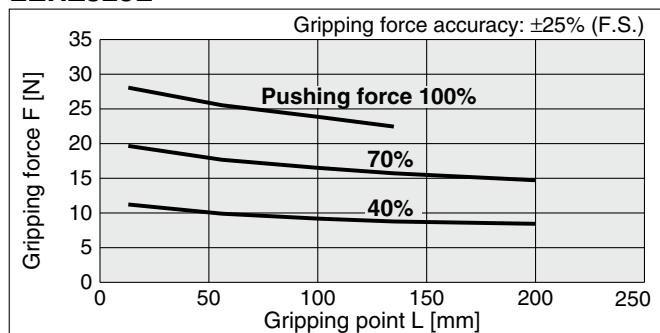

## Selection of Pushing Speed


● Set the [Pushing force] and [Trigger level] within the range shown in the figure below.

#### Basic

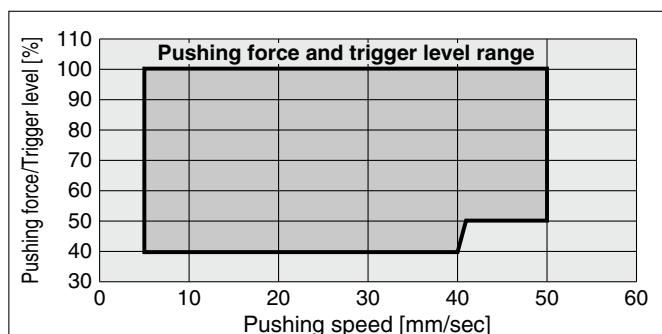


#### Compact

##### LEHZJ10L, LEHZJ16L


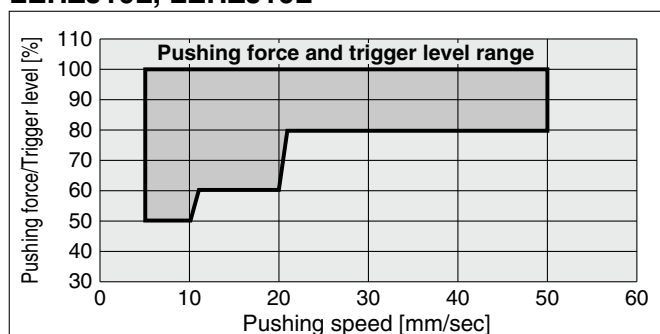


##### LEHZJ20L, LEHZJ25L



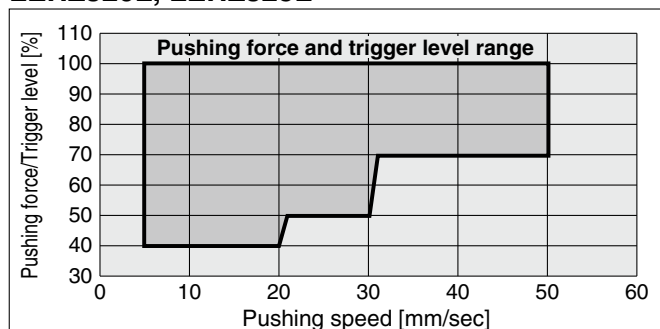


## Step 2 Check the gripping point and overhang: Series LEHZJ




- Decide the gripping position of the workpiece so that the amount of overhang "H" stays within the range shown in the figure below.
- If the gripping position is out of the limit, it may shorten the life of the electric gripper.

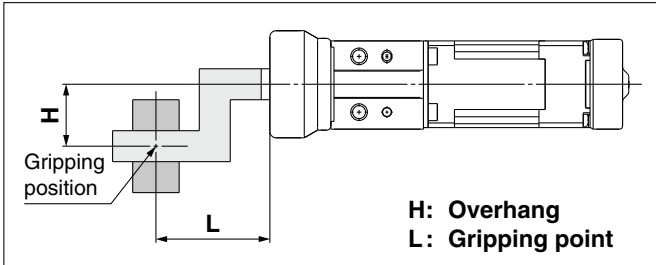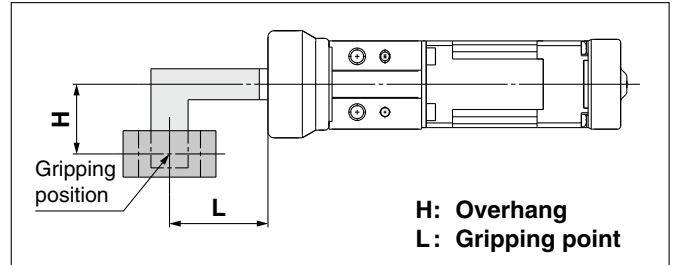**External Gripping State**

**Internal Gripping State**

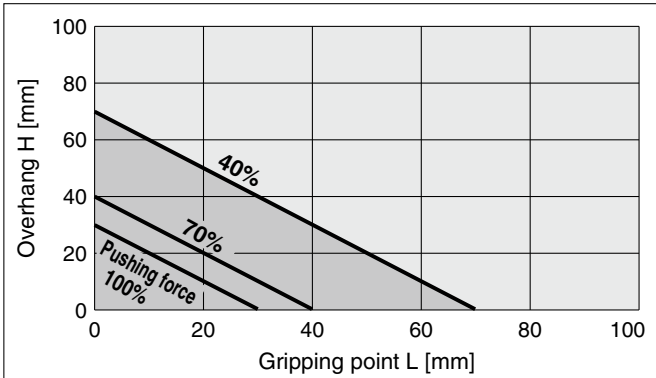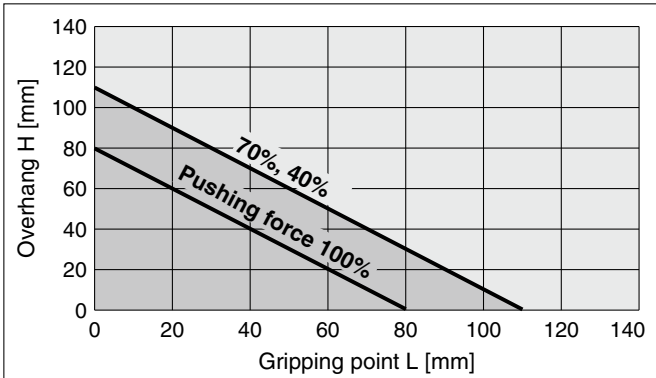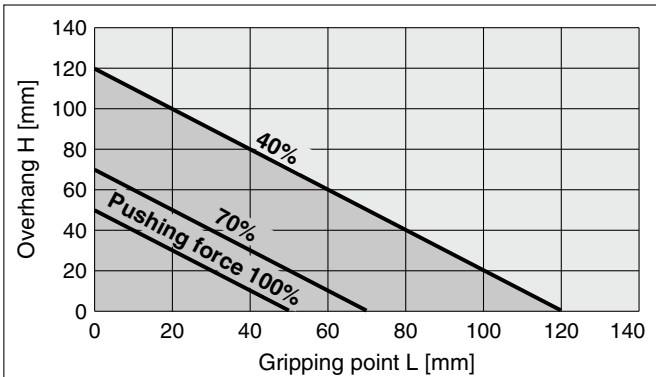**Basic**

\* Pushing force is one of the values of step data that is input into the controller.

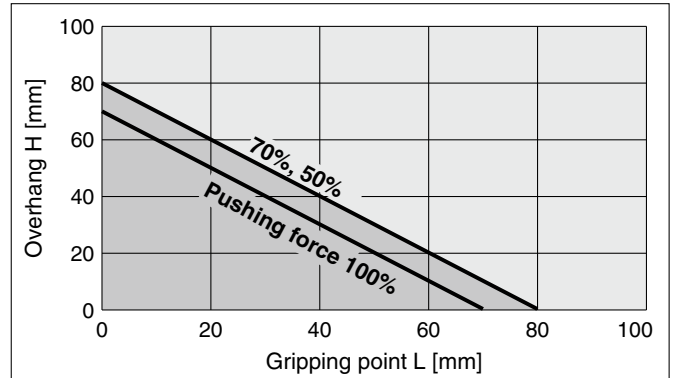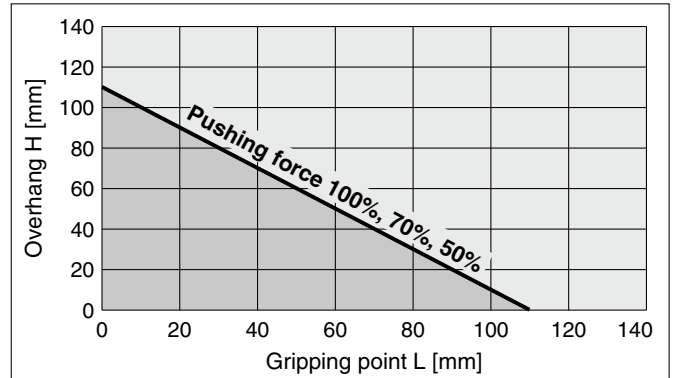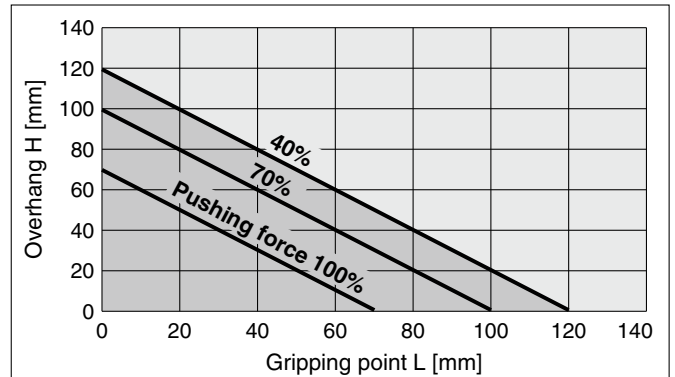**LEHZJ10**

**LEHZJ16**

**LEHZJ20**

**Compact**

\* Pushing force is one of the values of step data that is input into the controller.

**LEHZJ10L**

**LEHZJ16L**

**LEHZJ20L**


# Series LEHZJ


## Selection Procedure

### Step 2 Check the gripping point and overhang: Series LEHZJ

#### Basic

\* Pushing force is one of the values of step data that is input into the controller.


#### LEHZJ25

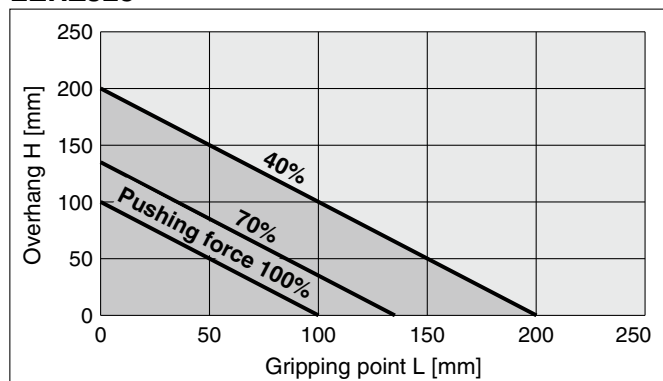


#### Compact

\* Pushing force is one of the values of step data that is input into the controller.

#### LEHZJ25L

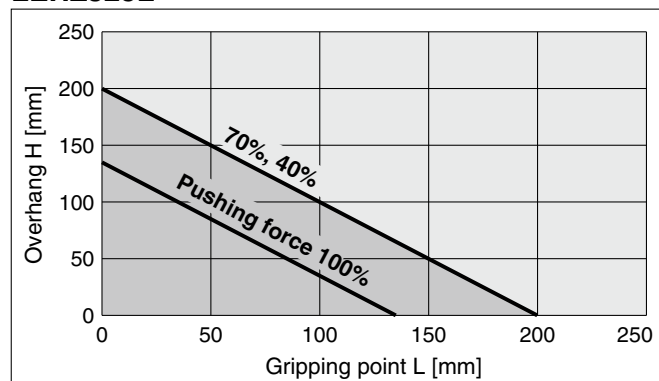

**Step 3** Check the external force on fingers: **Series LEHZJ**

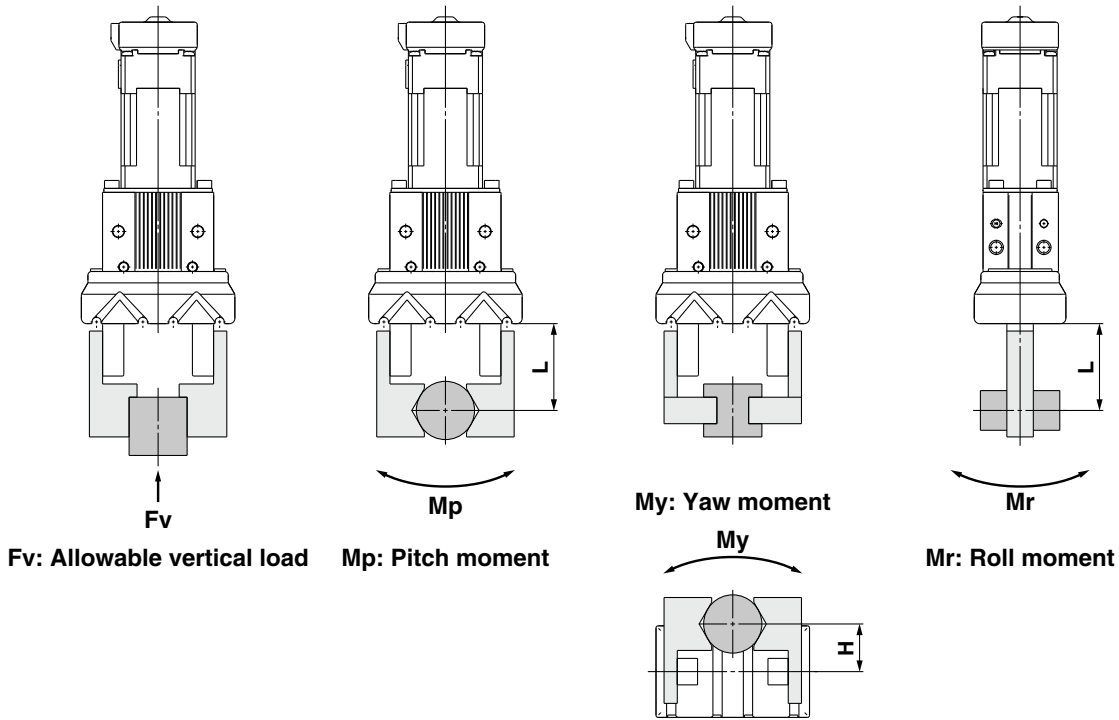

H, L: Distance to the point at which the load is applied (mm)

Model	Allowable vertical load $F_v$ [N]	Static allowable moment		
		Pitch moment: $M_p$ [N·m]	Yaw moment: $M_y$ [N·m]	Roll moment: $M_r$ [N·m]
<b>LEHZJ10(L)K2-4</b>	58	0.26	0.26	0.53
<b>LEHZJ16(L)K2-6</b>	98	0.68	0.68	1.36
<b>LEHZJ20(L)K2-10</b>	147	1.32	1.32	2.65
<b>LEHZJ25(L)K2-14</b>	255	1.94	1.94	3.88

Note) Values for load in the table indicate static values.

Calculation of allowable external force (when moment load is applied)	Calculation example
$\text{Allowable load } F \text{ (N)} = \frac{M \text{ (Static allowable moment) (N·m)}}{L \times 10^{-3} *}$ <p>(* Constant for unit conversion)</p>	<p>When a static load of <math>f = 10</math> N is operating, which applies pitch moment to point <math>L = 30</math> mm from the LEHZJ16K2-6 guide. Therefore, it can be used.</p> $\text{Allowable load } F = \frac{0.68}{30 \times 10^{-3}}$ $= 22.7 \text{ (N)}$ <p><b>Load <math>f = 10</math> (N) &lt; 22.7 (N)</b></p>

# Electric Gripper 2-Finger Type/With Dust Cover

Step Motor (Servo/24 VDC)

## Series LEHZJ

LEHZJ10, 16, 20, 25



### How to Order

LEHZ J 10 [ ] K 2 - 4 [ ] [ ] - S 1 6N 1 [ ]

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑬

#### ① Dust cover

J	With dust cover
---	-----------------

#### ② Size

10
16
20
25

#### ③ Motor size

Nil	Basic
L	Compact

#### ④ Lead

K	Basic
---	-------

#### ⑤ 2-finger type


#### ⑥ Stroke [mm]

Stroke/both sides	Size
4	10
6	16
10	20
14	25

#### ⑦ Dust cover type

Nil	Chloroprene rubber (CR)
K	Fluororubber (FKM)
S	Silicone rubber (Si)

#### ⑧ Motor cable entry

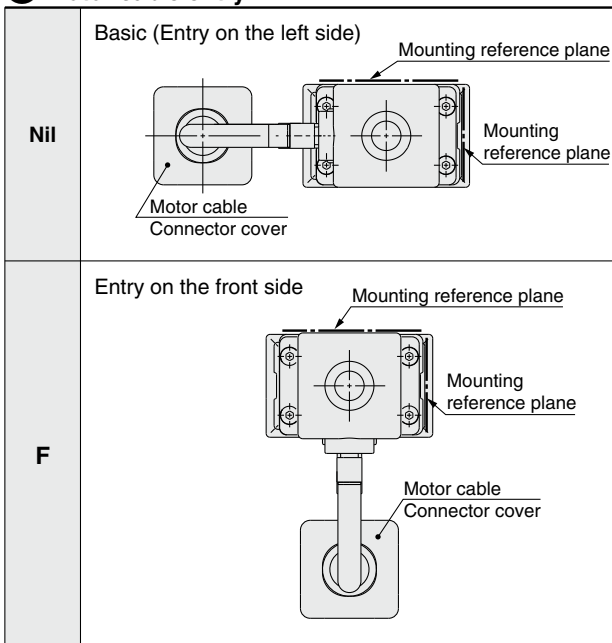

#### ⚠ Caution

##### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

##### [UL-compliant products]


When conformity to UL is required, the electric actuator and controller/driver should be used with a UL1310 Class 2 power supply.

### The actuator and controller/driver are sold as a package.

Confirm that the combination of the controller/driver and the actuator is correct.

#### <Check the following before use.>

- ① Check the actuator label for model number. This matches the controller/driver.
- ② Check Parallel I/O configuration matches (NPN or PNP).

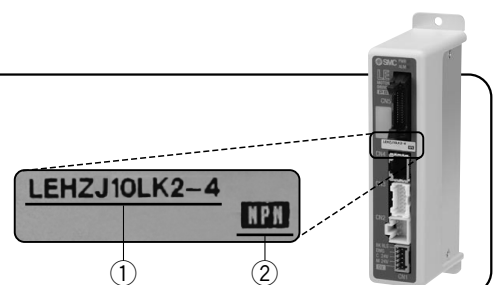

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

# Electric Gripper 2-Finger Type/With Dust Cover *Series LEHZJ*



Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

## 9 Actuator cable type\*

Nil	Without cable
<b>S</b>	Standard cable
<b>R</b>	Robotic cable (Flexible cable)

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

## 10 Actuator cable length [m]

Nil	Without cable
<b>1</b>	1.5
<b>3</b>	3
<b>5</b>	5
<b>8</b>	8*
<b>A</b>	10*
<b>B</b>	15*
<b>C</b>	20*

\* Produced upon receipt of order (Robotic cable only)  
Refer to the specifications Note 3) on page 23.

## 11 Controller/Driver type\*

Nil	Without controller/driver	
<b>6N</b>	<b>LECP6</b> (Step data input type)	NPN
<b>6P</b>		PNP
<b>1N</b>	<b>LECP1</b> (Programless type)	NPN
<b>1P</b>		PNP
<b>AN</b>	<b>LECPA</b> (Pulse input type)	NPN
<b>AP</b>		PNP

\* For details about controllers/driver and compatible motors, refer to the compatible controllers/driver below.

## 12 I/O cable length [m]\*1

Nil	Without cable
<b>1</b>	1.5
<b>3</b>	3*2
<b>5</b>	5*2

\*1 When "Without controller/driver" is selected for controller/driver types, I/O cable cannot be selected. Refer to page 61 (For LECP6), page 73 (For LECP1) or page 80 (For LECPA) if I/O cable is required.




\*2 When "Pulse input type" is selected for controller/driver types, pulse input usable only with differential. Only 1.5 m cables usable with open collector.

## 13 Controller/Driver mounting

Nil	Screw mounting
<b>D</b>	DIN rail mounting*

\* DIN rail is not included. Order it separately.  
(Refer to page 56.)

## Compatible Controllers/Driver

Type	Step data input type 	Programless type 	Pulse input type 
<b>Series</b>	<b>LECP6</b>	<b>LECP1</b>	<b>LECPA</b>
<b>Features</b>	Value (Step data) input Standard controller	Capable of setting up operation (step data) without using a PC or teaching box	Operation by pulse signals
<b>Compatible motor</b>	Step motor (Servo/24 VDC)	Step motor (Servo/24 VDC)	
<b>Maximum number of step data</b>	64 points	14 points	—
<b>Power supply voltage</b>	24 VDC		
<b>Reference page</b>	Page 55	Page 68	Page 74

## Specifications




Model		LEHZJ10	LEHZJ16	LEHZJ20	LEHZJ25
Opening/closing stroke (Both sides)		4	6	10	14
Gripping force [N] <small>Note 1) Note 3)</small>	Basic	6 to 14		16 to 40	
	Compact	3 to 6	4 to 8	11 to 28	
Opening and closing speed/Pushing speed [mm/s] <small>Note 2) Note 3)</small>		5 to 80/5 to 50		5 to 100/5 to 50	
Drive method		Slide screw + Slide cam			
Finger guide type		Linear guide (No circulation)			
Repeatability [mm] <small>Note 4)</small>		±0.02			
Repeated length measurement accuracy [mm] <small>Note 5)</small>		±0.05			
Finger backlash/both sides [mm] <small>Note 6)</small>		0.5 or less			
Impact/Vibration resistance [m/s <sup>2</sup> ] <small>Note 7)</small>		150/30			
Max. operating frequency [C.P.M]		60			
Operating temperature range [°C]		5 to 40			
Operating humidity range [%RH]		90 or less (No condensation)			
Weight [g]	Basic	170	230	440	610
	Compact	140	200	375	545
Motor size		□20		□28	
Motor type		Step motor (Servo/24 VDC)			
Encoder		Incremental A/B phase (800 pulse/rotation)			
Rated voltage [V]		24 VDC ±10%			
Power consumption/Standby power consumption when operating [W] <small>Note 8)</small>	Basic	11/7		28/15	
	Compact	8/7		22/12	
Max. instantaneous power consumption [W] <small>Note 9)</small>	Basic	19		51	
	Compact	14		42	

- Note 1) Gripping force should be from 10 to 20 times the workpiece weight. Positioning force should be 150% when releasing the workpiece. Gripping force accuracy should be ±30% (F.S.) for LEHZJ10/16 and ±25% (F.S.) for LEHZJ20/25.
- Note 2) Pushing speed should be set within the range during pushing (gripping) operation. Otherwise, it may cause malfunction. The opening/closing speed and pushing speed are for both fingers. The speed for one finger is half this value.
- Note 3) The speed and force may change depending on the cable length, load and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)
- Note 4) Repeatability means the variation of the gripping position (workpiece position) when the gripping operation is repeatedly performed by the same sequence for the same workpiece.
- Note 5) Repeated length measurement accuracy means dispersion (value on the controller monitor) when the workpiece is repeatedly held in the same position.
- Note 6) There will be no influence of backlash during pushing (gripping) operation. Make the stroke longer for the amount of backlash when opening.
- Note 7) Impact resistance: No malfunction occurred when the gripper was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)  
Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. Test was performed in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)
- Note 8) The power consumption (including the controller) is for when the gripper is operating.  
The standby power consumption when operating is for when the gripper is stopped in the set position during operation, including the energy saving mode when gripping.
- Note 9) The maximum instantaneous power consumption (including the controller) is for when the gripper is operating. This value can be used for the selection of the power supply.

## How to Mount


a) When using the thread on the side of the body

Foreign matter protection seal (included)  
\* Refer to the operation manual for details.

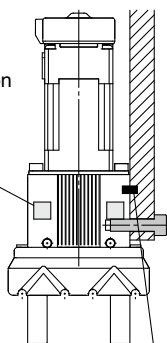


Positioning pin

b) When using the thread on the mounting plate



Positioning pin

c) When using the thread on the back of the body




Positioning pin



## Construction

### Series LEHZJ

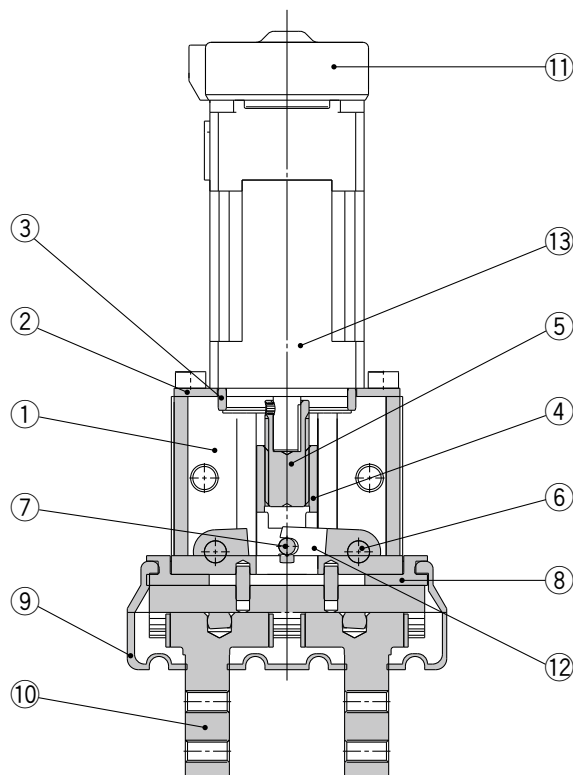

## Component Parts

No.	Description	Material	Note
1	Body	Aluminum alloy	Anodized
2	Motor plate	Aluminum alloy	Anodized
3	Guide ring	Aluminum alloy	
4	Slide nut	Stainless steel	Heat treatment + Special treatment
5	Slide bolt	Stainless steel	Heat treatment + Special treatment
6	Needle roller	High carbon chromium bearing steel	
7	Needle roller	High carbon chromium bearing steel	
8	Body plate	Aluminum alloy	Anodized
9	Dust cover	CR	Chloroprene rubber
		FKM	Fluororubber
		Si	Silicone rubber
10	Finger assembly	—	
11	Encoder dust cover	Si	Silicone rubber
12	Lever	Special stainless steel	
13	Step motor (Servo/24 VDC)	—	

## Replacement Parts

No.	Description		LEHZJ10	LEHZJ16	LEHZJ20	LEHZJ25
9	Dust cover	Material				
		CR	MHZJ2-J10	MHZJ2-J16	MHZJ2-J20	MHZJ2-J25
		FKM	MHZJ2-J10F	MHZJ2-J16F	MHZJ2-J20F	MHZJ2-J25F
	Si	MHZJ2-J10S	MHZJ2-J16S	MHZJ2-J20S	MHZJ2-J25S	
10	Finger assembly		MHZJ-A1002	MHZJ-A1602	MHZJ-A2002	MHZJ-A2502

\* The dust cover is a consumable part. Please replace as necessary.

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA


Specific Product Precautions

# Series LEHZJ

## Dimensions


### LEHZJ10(L)K2-4

Model	L	(L1)
LEHZJ10K2-4□	109.8	(62.7)
LEHZJ10LK2-4□	93.2	(46.1)

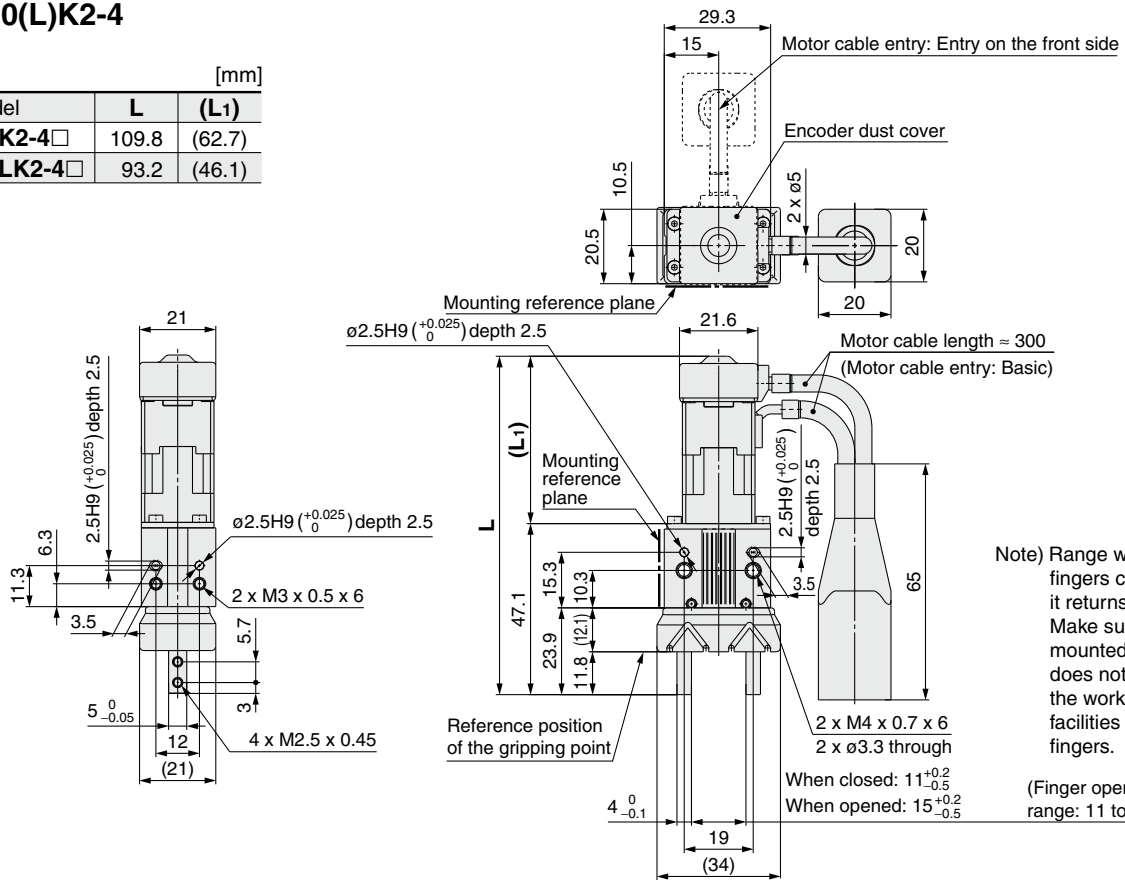

### LEHZJ16(L)K2-6

Model	L	(L1)
LEHZJ16K2-6□	118.6	(62.7)
LEHZJ16LK2-6□	102	(46.1)

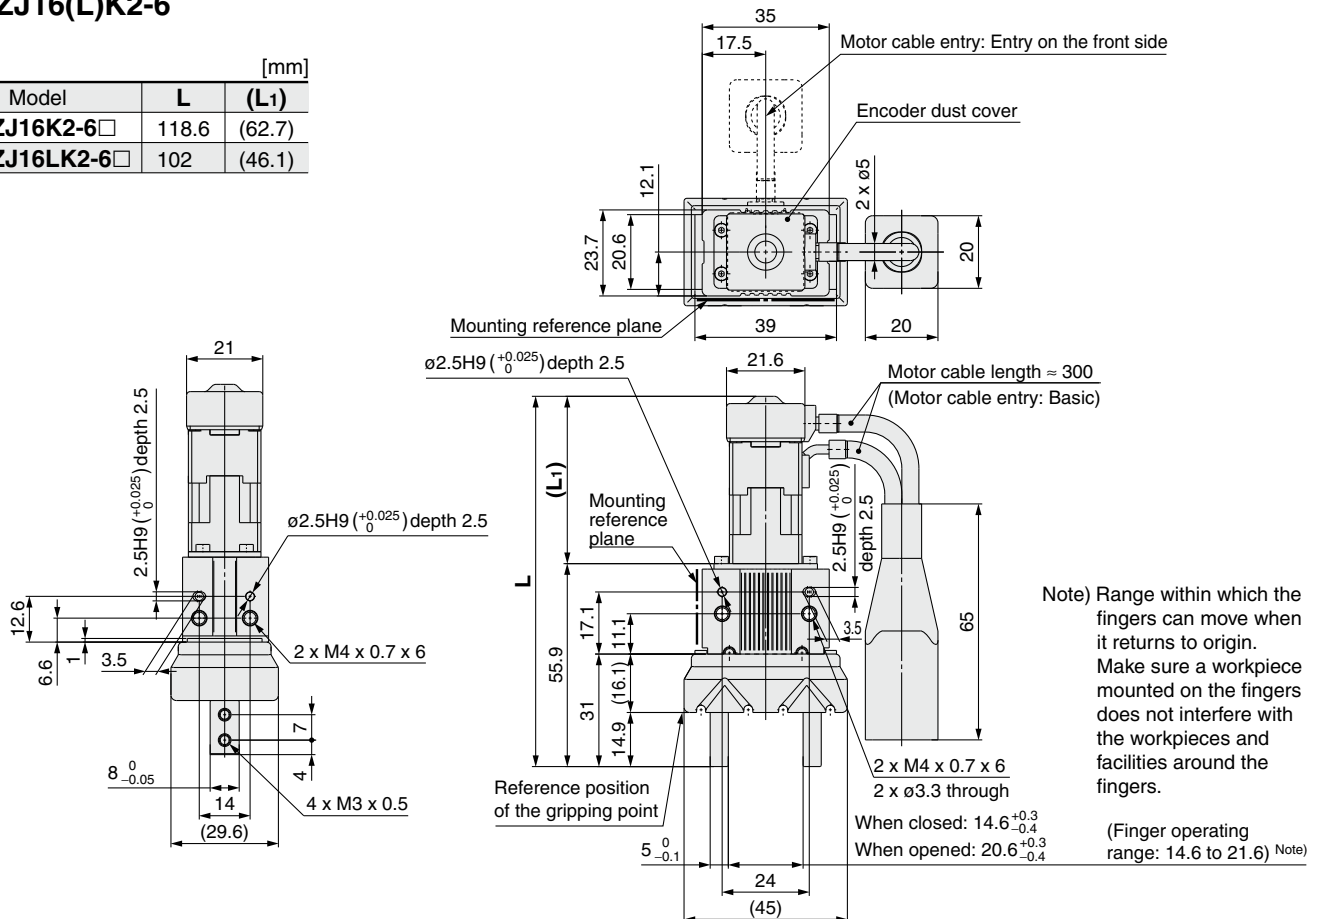


## Dimensions

### LEHZJ20(L)K2-10

Model	L	(L1)
LEHZJ20K2-10□	135.7	(64.8)
LEHZJ20LK2-10□	121.7	(50.8)


[mm]

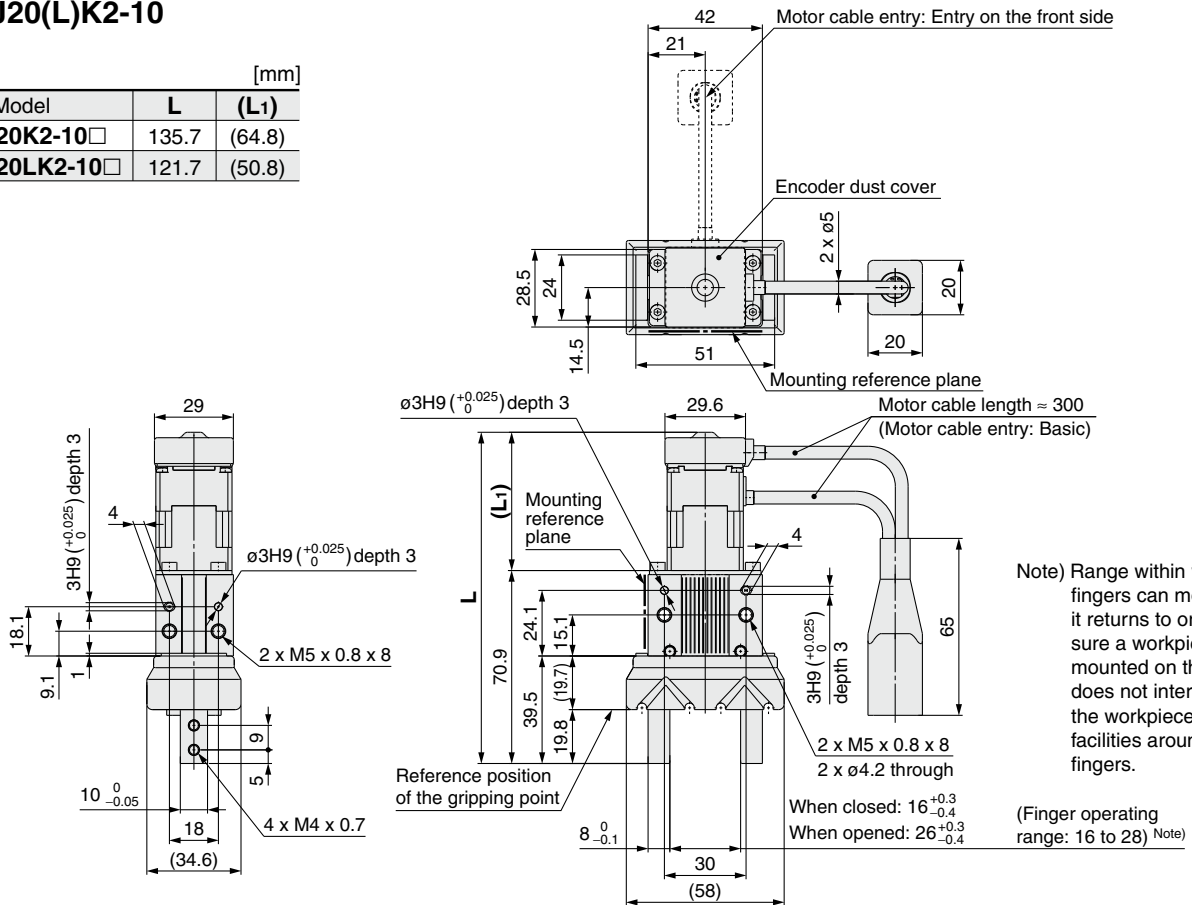

### LEHZJ25(L)K2-14

Model	L	(L1)
LEHZJ25K2-14□	146.7	(64.8)
LEHZJ25LK2-14□	132.7	(50.8)

[mm]

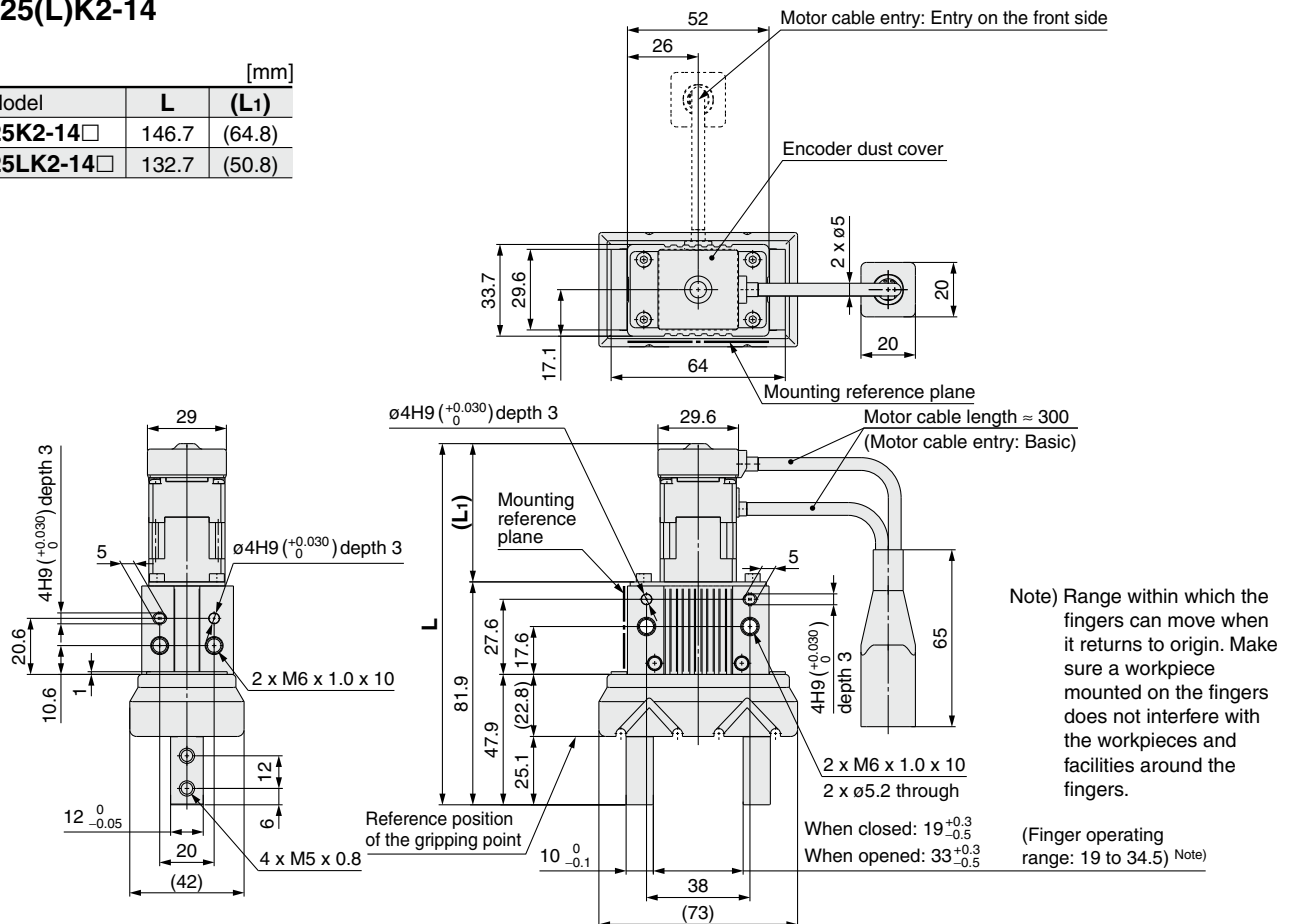

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1


LECPA

Specific Product Precautions


# Model Selection



## Selection Procedure

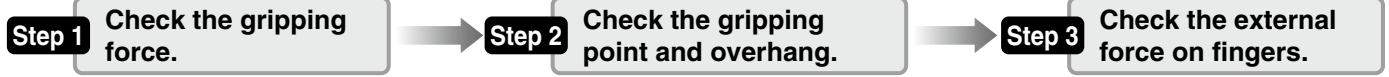

### Step 1 Check the gripping force.



#### Example

Workpiece mass: 0.1 kg

#### Guidelines for the selection of the gripper with respect to workpiece mass

- Although conditions differ according to the workpiece shape and the coefficient of friction between the attachments and the workpiece, select a model that can provide a gripping force of 10 to 20 times <sup>Note)</sup> the workpiece weight, or more.


Note) For details, refer to the model selection illustration.

- If high acceleration or impact forces are encountered during motion, a further margin of safety should be considered.

Example) When it is desired to set the gripping force at 20 times or more above the workpiece weight.

Required gripping force  
= 0.1 kg x 20 x 9.8 m/s<sup>2</sup> ≈ 19.6 N or more

#### LEHF20

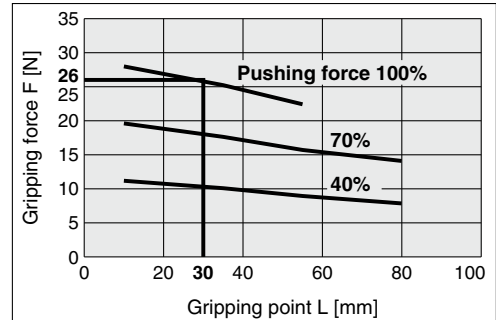

#### When the LEHF20 is selected.


- A gripping force of 26 N is obtained from the intersection point of gripping point distance L = 30 mm and pushing force of 100%.
- Gripping force is 26.5 times greater than the workpiece weight, and therefore satisfies a gripping force setting value of 20 times or more.

Pushing force: 100%

Gripping point distance: 30 mm

Pushing speed: 20 mm/sec


#### LEHF20

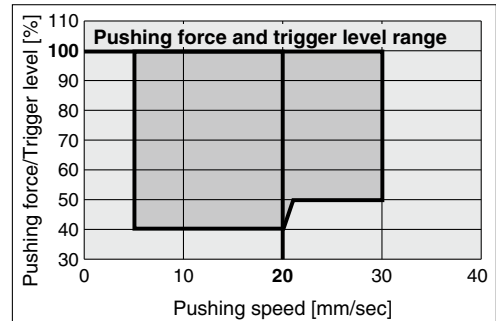

- Pushing speed is satisfied at the point where 100% of the pushing force and 20 mm/sec of the pushing speed cross.

Note) Confirm the pushing speed range from the determined pushing force [%].

### Calculation of required gripping force

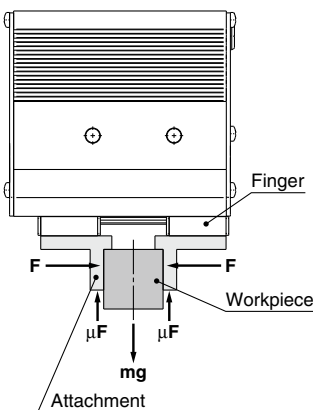

When gripping a workpiece as in the figure to the left, and with the following definitions,

- F: Gripping force (N)
- μ: Coefficient of friction between the attachments and the workpiece
- m: Workpiece mass (kg)
- g: Gravitational acceleration (= 9.8 m/s<sup>2</sup>)
- mg: Workpiece weight (N)

the conditions under which the workpiece will not drop are  $2 \times \mu F > mg$

Number of fingers

and therefore,  $F > \frac{mg}{2 \times \mu}$

With "a" representing the margin, "F" is determined by the following formula:

$$F = \frac{mg}{2 \times \mu} \times a$$

#### "Gripping force at least 10 to 20 times the workpiece weight"

- The "10 to 20 times or more of the workpiece weight" recommended by SMC is calculated with a margin of "a" = 4, which allows for impacts that occur during normal transportation, etc.

When $\mu = 0.2$	When $\mu = 0.1$
$F = \frac{mg}{2 \times 0.2} \times 4 = 10 \times mg$	$F = \frac{mg}{2 \times 0.1} \times 4 = 20 \times mg$
↑ 10 x Workpiece weight	↑ 20 x Workpiece weight

<Reference> Coefficient of friction μ (depends on the operating environment, contact pressure, etc.)

Coefficient of friction μ	Attachment - Material of workpieces (guideline)
0.1	Metal (surface roughness Rz3.2 or less)
0.2	Metal
0.2 or more	Rubber, Resin, etc.

- Note) • Even in cases where the coefficient of friction is greater than  $\mu = 0.2$ , for reasons of safety, select a gripping force which is at least 10 to 20 times greater than the workpiece weight, as recommended by SMC.  
• If high acceleration or impact forces are encountered during motion, a further margin should be considered.


**Selection Procedure**

**Step 1 Check the gripping force: Series LEHF**


● **Indication of gripping force**

Gripping force shown in the graphs below is expressed as “F”, which is the gripping force of one finger, when both fingers and attachments are in full contact with the workpiece as shown in the figure below.


- Set the workpiece gripping point “L” so that it is within the range shown in the figure below.

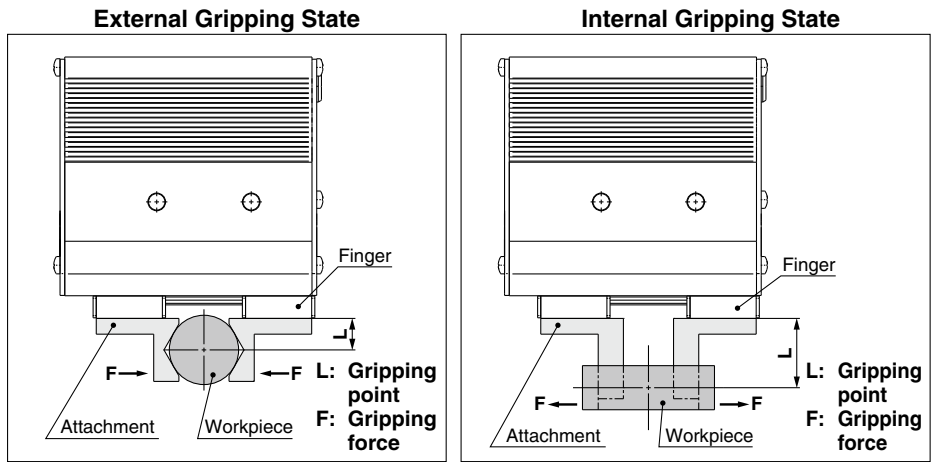


**LEHF10**

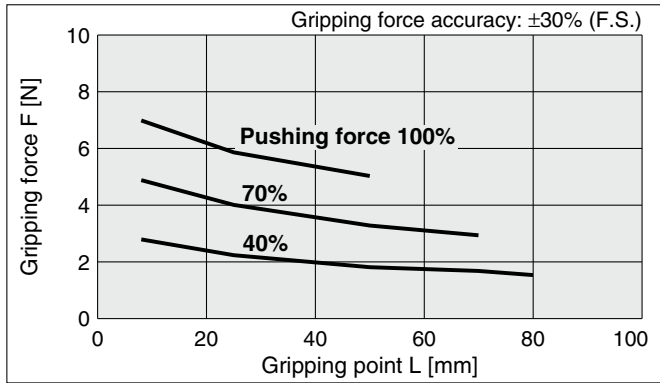


**LEHF40**

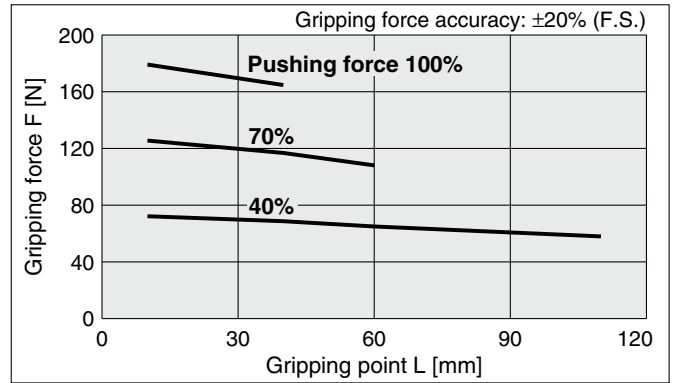

**LEHF20**

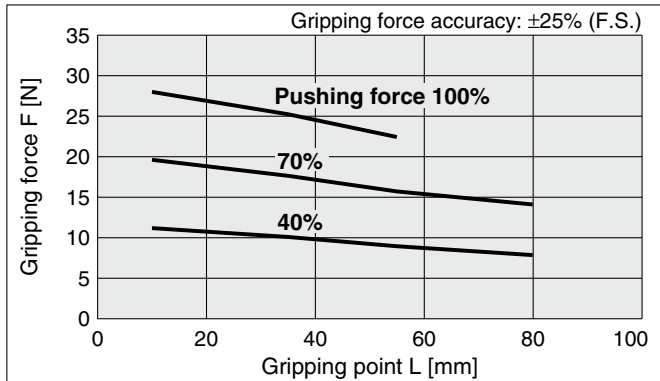


**LEHF32**

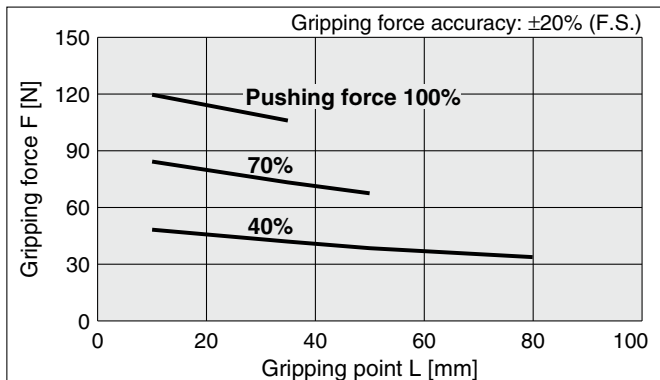

**Selection of Pushing Speed**

- Set the [Pushing force] and the [Trigger LV] within the range shown in the figure below.

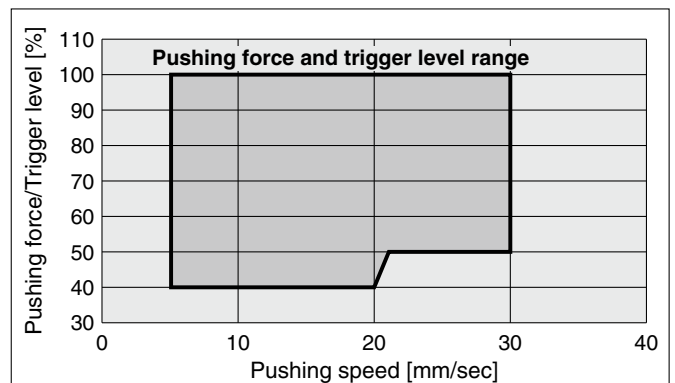

\* Pushing force is one of the values of step data that is input into the controller.


# Series LEHF

## Selection Procedure


### Step 2 Check the gripping point and overhang: Series LEHF

- Decide the gripping position of the workpiece so that the amount of overhang "H" stays within the range shown in the figure below.
- If the gripping position is out of the limit, it may shorten the life of the electric gripper.


External Gripping State

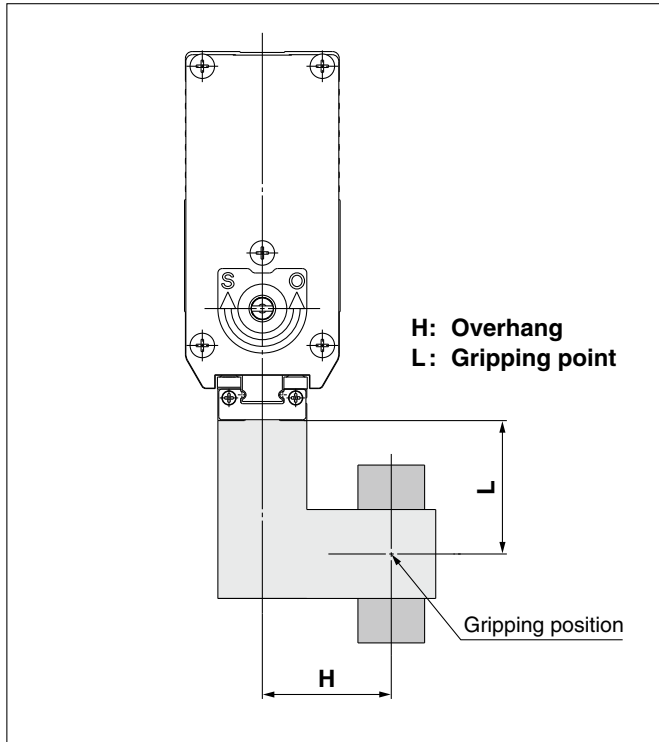


Internal Gripping State

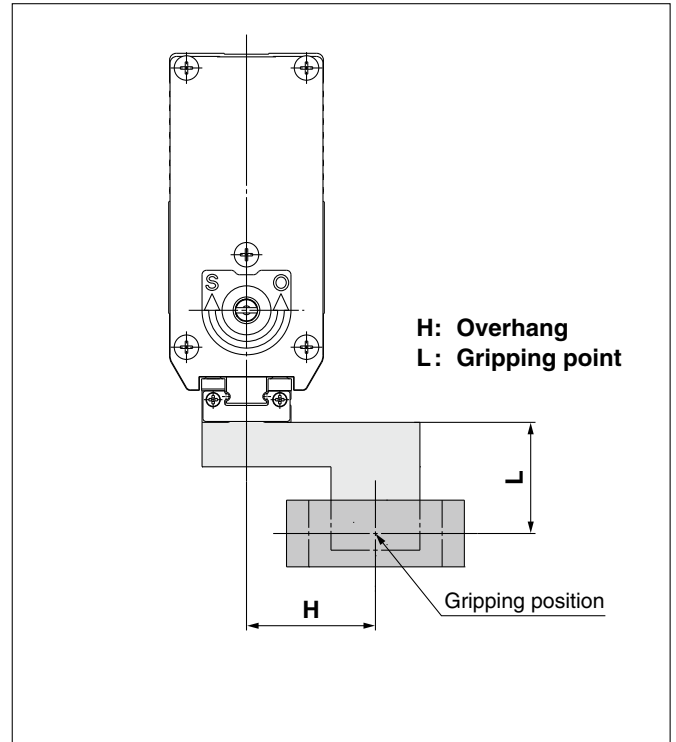


LEHF10

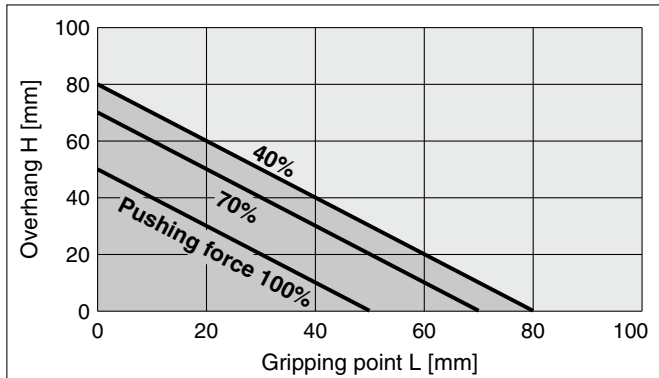


LEHF20

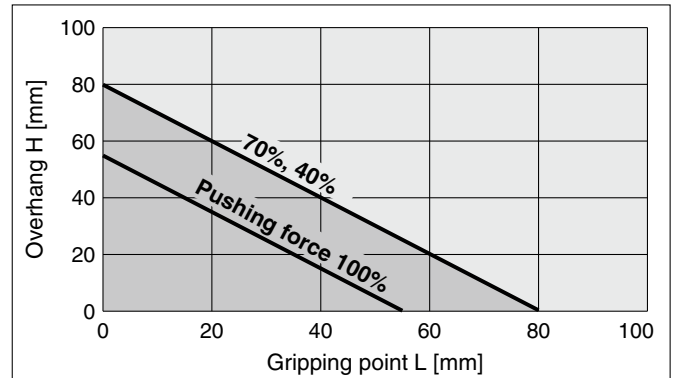

LEHF32

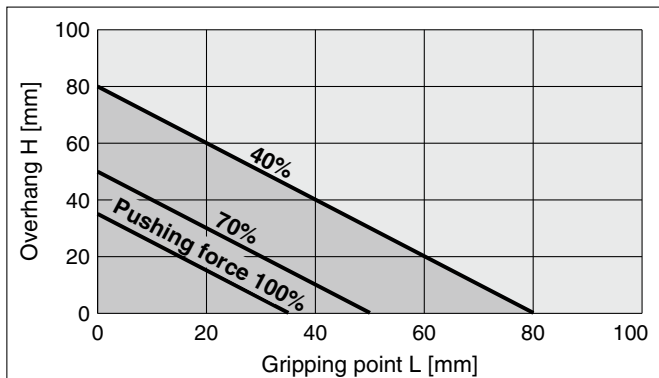


LEHF40

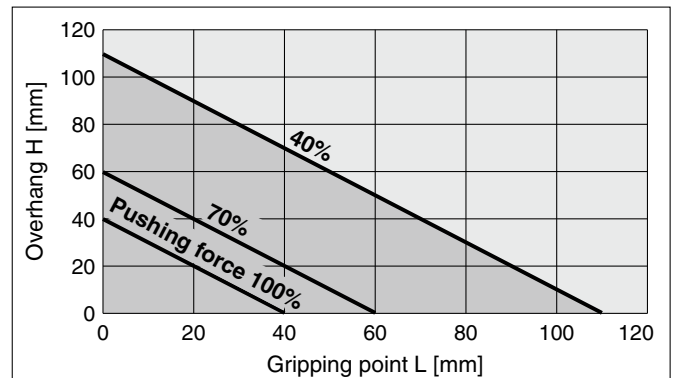

\* Pushing force is one of the values of step data that is input into the controller.

**Step 3** Check the external force on fingers: **Series LEHF**

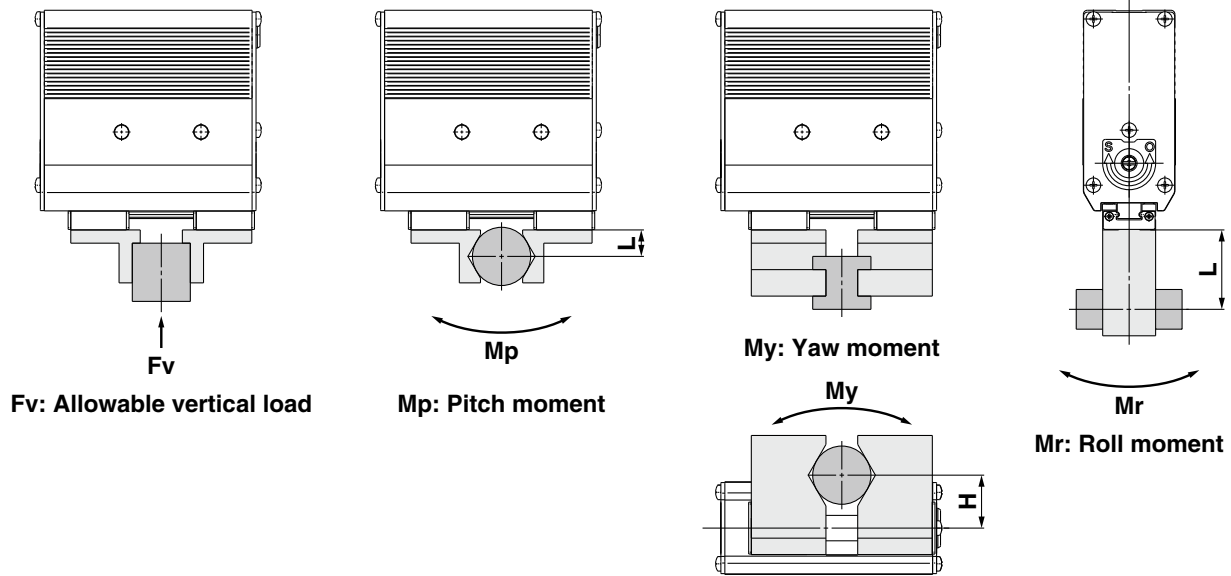

H, L: Distance to the point at which the load is applied (mm)

Model	Allowable vertical load Fv [N]	Static allowable moment		
		Pitch moment: Mp [N·m]	Yaw moment: My [N·m]	Roll moment: Mr [N·m]
LEHF10K2-□	58	0.26	0.26	0.53
LEHF20K2-□	98	0.68	0.68	1.4
LEHF32K2-□	176	1.4	1.4	2.8
LEHF40K2-□	294	2	2	4

Note) Values for load in the table indicate static values.

Calculation of allowable external force (when moment load is applied)	Calculation example
$\text{Allowable load } F \text{ (N)} = \frac{\text{M (Static allowable moment) (N·m)}}{L \times 10^{-3} *}$ <p>(* Constant for unit conversion)</p>	<p>When a static load of f = 10 N is operating, which applies pitch moment to point L = 30 mm from the LEHF20K2-□ guide. Therefore, it can be used.</p> $\text{Allowable load } F = \frac{0.68}{30 \times 10^{-3}}$ $= 22.7 \text{ (N)}$ <p>Load f = 10 (N) &lt; 22.7 (N)</p>

# Electric Gripper 2-Finger Type


Step Motor (Servo/24 VDC)

# Series LEHF

## LEHF10, 20, 32, 40



### How to Order

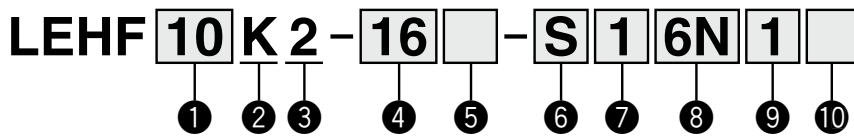

#### ① Size

10
20
32
40

#### ② Lead


<b>K</b>	Basic
----------	-------

#### ③ 2-finger type

#### ④ Stroke [mm]

Stroke/both sides		Size
Basic	Long stroke	
<b>16</b>	<b>32</b>	10
<b>24</b>	<b>48</b>	20
<b>32</b>	<b>64</b>	32
<b>40</b>	<b>80</b>	40

#### ⑤ Motor cable entry

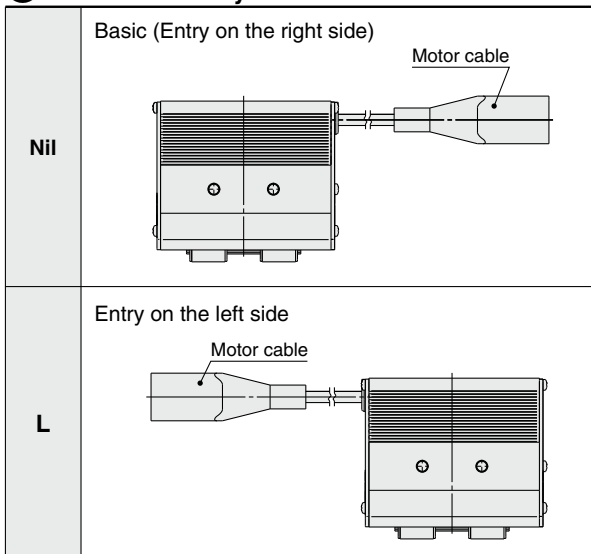

#### ⚠ Caution

##### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

##### [UL-compliant products]


When conformity to UL is required, the electric actuator and controller/driver should be used with a UL1310 Class 2 power supply.

### The actuator and controller/driver are sold as a package.

Confirm that the combination of the controller/driver and the actuator is correct.

#### <Check the following before use.>

- ① Check the actuator label for model number. This matches the controller/driver.
- ② Check Parallel I/O configuration matches (NPN or PNP).

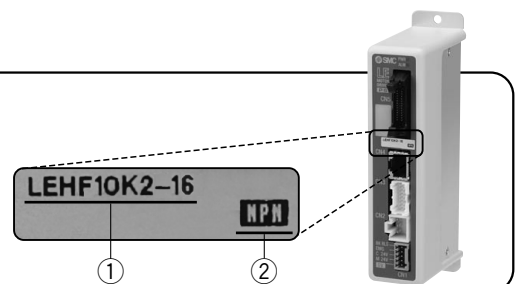

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>





Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

## 6 Actuator cable type\*

Nil	Without cable
<b>S</b>	Standard cable
<b>R</b>	Robotic cable (Flexible cable)

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

## 7 Actuator cable length [m]

Nil	Without cable
<b>1</b>	1.5
<b>3</b>	3
<b>5</b>	5
<b>8</b>	8*
<b>A</b>	10*
<b>B</b>	15*
<b>C</b>	20*

\* Produced upon receipt of order (Robotic cable only)  
Refer to the specifications Note 3) on page 23.

## 8 Controller/Driver type\*

Nil	Without controller/driver	
<b>6N</b>	<b>LECP6</b> (Step data input type)	NPN
<b>6P</b>		PNP
<b>1N</b>	<b>LECP1</b> (Programless type)	NPN
<b>1P</b>		PNP
<b>AN</b>	<b>LECPA</b> (Pulse input type)	NPN
<b>AP</b>		PNP

\* For details about controllers/driver and compatible motors, refer to the compatible controllers/driver below.

## 9 I/O cable length [m]\*1

Nil	Without cable
<b>1</b>	1.5
<b>3</b>	3*2
<b>5</b>	5*2

\*1 When "Without controller/driver" is selected for controller/driver types, I/O cable cannot be selected. Refer to page 61 (For LECP6), page 73 (For LECP1) or page 80 (For LECPA) if I/O cable is required.




\*2 When "Pulse input type" is selected for controller/driver types, pulse input usable only with differential. Only 1.5 m cables usable with open collector.

## 10 Controller/Driver mounting

Nil	Screw mounting
<b>D</b>	DIN rail mounting*

\* DIN rail is not included. Order it separately.  
(Refer to page 56.)

## Compatible Controllers/Driver

Type	Step data input type 	Programless type 	Pulse input type 
Series	<b>LECP6</b>	<b>LECP1</b>	<b>LECPA</b>
Features	Value (Step data) input Standard controller	Capable of setting up operation (step data) without using a PC or teaching box	Operation by pulse signals
Compatible motor	Step motor (Servo/24 VDC)	Step motor (Servo/24 VDC)	
Maximum number of step data	64 points	14 points	—
Power supply voltage	24 VDC		
Reference page	Page 55	Page 68	Page 74

## Specifications



Model		LEHF10	LEHF20	LEHF32	LEHF40		
Actuator specifications	Opening/closing stroke (Both sides)	Basic	16	24	32	40	
		Long stroke	32	48	64	80	
	Gripping force [N]	Note 1) Note 3)		3 to 7	11 to 28	48 to 120	72 to 180
	Opening and closing speed/Pushing speed [mm/s]	Note 2) Note 3)		5 to 80/5 to 20	5 to 100/5 to 30		
	Drive method	Slide screw + Belt					
	Finger guide type	Linear guide (No circulation)					
	Repeatability [mm]	Note 4)		±0.05			
	Repeated length measurement accuracy [mm]	Note 5)		±0.05			
	Finger backlash/both sides [mm]	Note 6)		1.0 or less			
	Impact/Vibration resistance [m/s <sup>2</sup> ]	Note 7)		150/30			
	Max. operating frequency [C.P.M]	60					
	Operating temperature range [°C]	5 to 40					
	Operating humidity range [%RH]	90 or less (No condensation)					
	Weight [g]	Basic	340	610	1625	1980	
Long stroke		370	750	1970	2500		
Electric specifications	Motor size	□20	□28	□42			
	Motor type	Step motor (Servo/24 VDC)					
	Encoder	Incremental A/B phase (800 pulse/rotation)					
	Rated voltage [V]	24 VDC ±10%					
	Power consumption/Standby power consumption when operating [W]	Note 8)		11/7	28/15	34/13	36/13
	Max. instantaneous power consumption [W]	Note 9)		19	51	57	61

Note 1) Gripping force should be from 10 to 20 times the workpiece weight. Positioning force should be 150% when releasing the workpiece. Gripping force accuracy should be ±30% (F.S.) for LEHF10, ±25% (F.S.) for LEHF20 and ±20% (F.S.) for LEHF32/40.

Note 2) Pushing speed should be set within the range during pushing (gripping) operation. Otherwise, it may cause malfunction. The opening/closing speed and pushing speed are for both fingers. The speed for one finger is half this value.

Note 3) The speed and force may change depending on the cable length, load and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)

Note 4) Repeatability means the variation of the gripping position (workpiece position) when the gripping operation is repeatedly performed by the same sequence for the same workpiece.

Note 5) Repeated length measurement accuracy means dispersion (value on the controller monitor) when the workpiece is repeatedly held in the same position.

Note 6) There will be no influence of backlash during pushing (gripping) operation. Make the stroke longer for the amount of backlash when opening.

Note 7) Impact resistance: No malfunction occurred when the gripper was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)

Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. Test was performed in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)


Note 8) The power consumption (including the controller) is for when the gripper is operating.

The standby power consumption when operating is for when the gripper is stopped in the set position during operation, including the energy saving mode when gripping.


Note 9) The maximum instantaneous power consumption (including the controller) is for when the gripper is operating. This value can be used for the selection of the power supply.

## How to Mount


a) When using the thread on the body

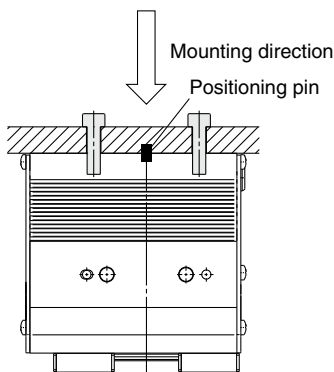

b) When using the thread on the mounting plate

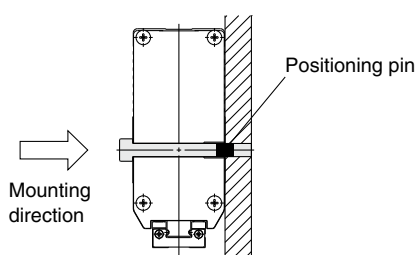


c) When using the thread on the back of the body

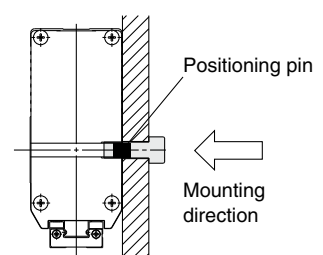

**Construction**

**Series LEHF**

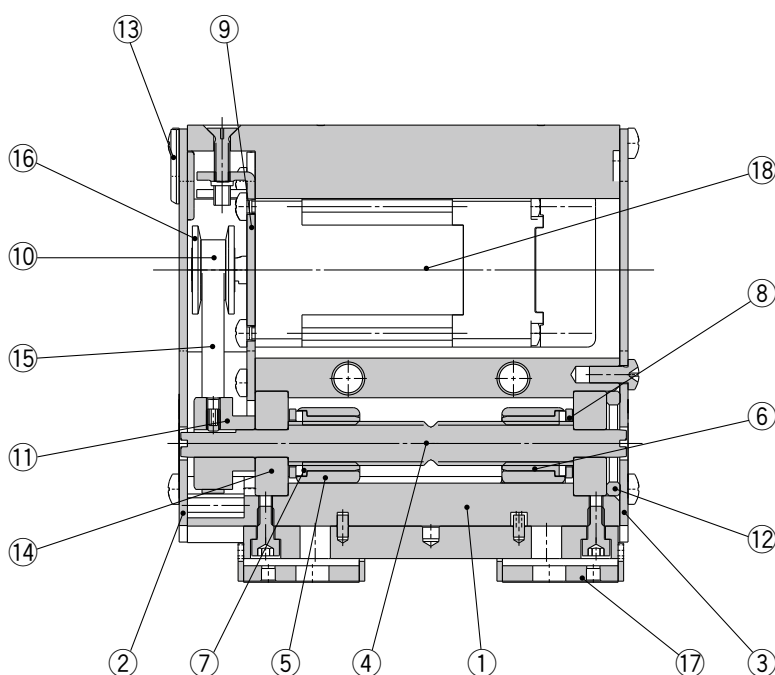

**Component Parts**

No.	Description	Material	Note
1	<b>Body</b>	Aluminum alloy	Anodized
2	<b>Side plate A</b>	Aluminum alloy	Anodized
3	<b>Side plate B</b>	Aluminum alloy	Anodized
4	<b>Slide shaft</b>	Stainless steel	Heat treatment + Special treatment
5	<b>Slide bushing</b>	Stainless steel	
6	<b>Slide nut</b>	Stainless steel	Heat treatment + Special treatment
7	<b>Slide nut</b>	Stainless steel	Heat treatment + Special treatment
8	<b>Fixed plate</b>	Stainless steel	
9	<b>Motor plate</b>	Carbon steel	
10	<b>Pulley A</b>	Aluminum alloy	
11	<b>Pulley B</b>	Aluminum alloy	
12	<b>Bearing stopper</b>	Aluminum alloy	
13	<b>Rubber bushing</b>	NBR	
14	<b>Bearing</b>	—	
15	<b>Belt</b>	—	
16	<b>Flange</b>	—	
17	<b>Finger assembly</b>	—	
18	<b>Step motor (Servo/24 VDC)</b>	—	

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA


Step Motor (Servo/24 VDC)

Specific Product Precautions

# Series LEHF


## Dimensions

### LEHF10K2-16: Basic

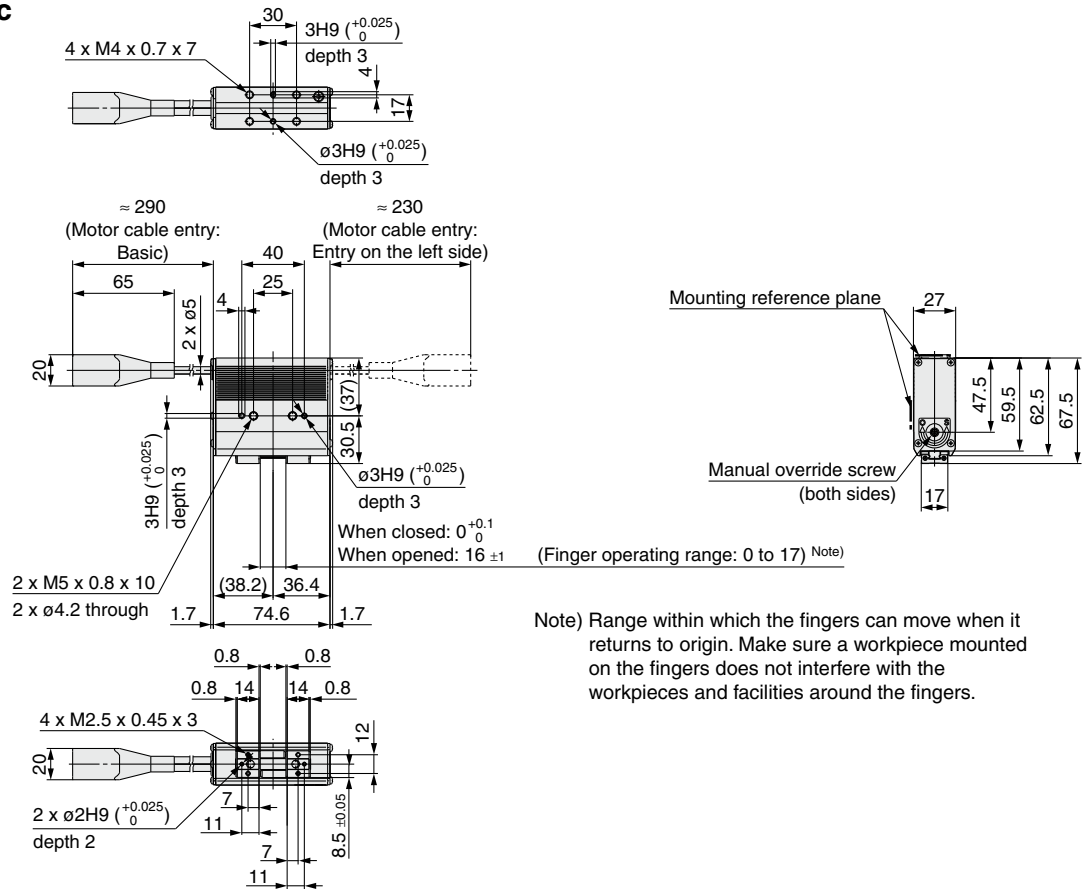

Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.


### LEHF10K2-32: Long Stroke

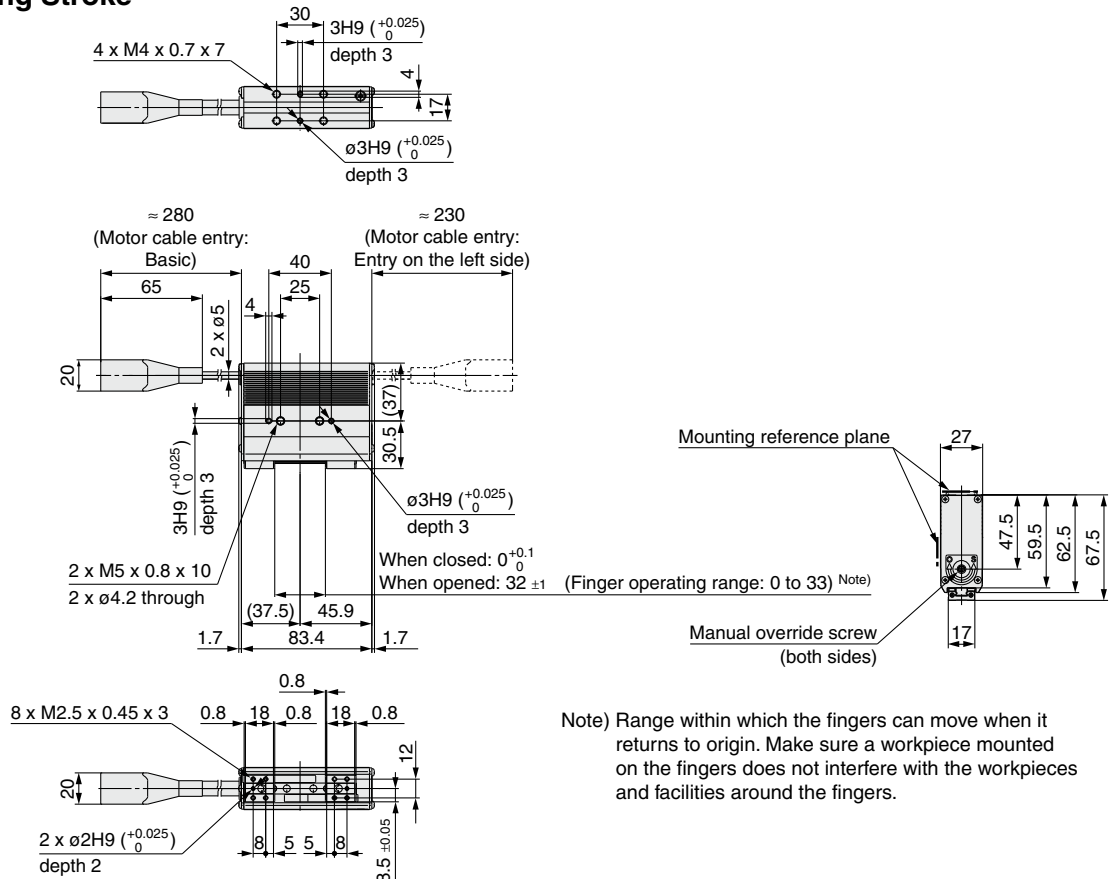

Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.


## Dimensions

### LEHF20K2-24: Basic

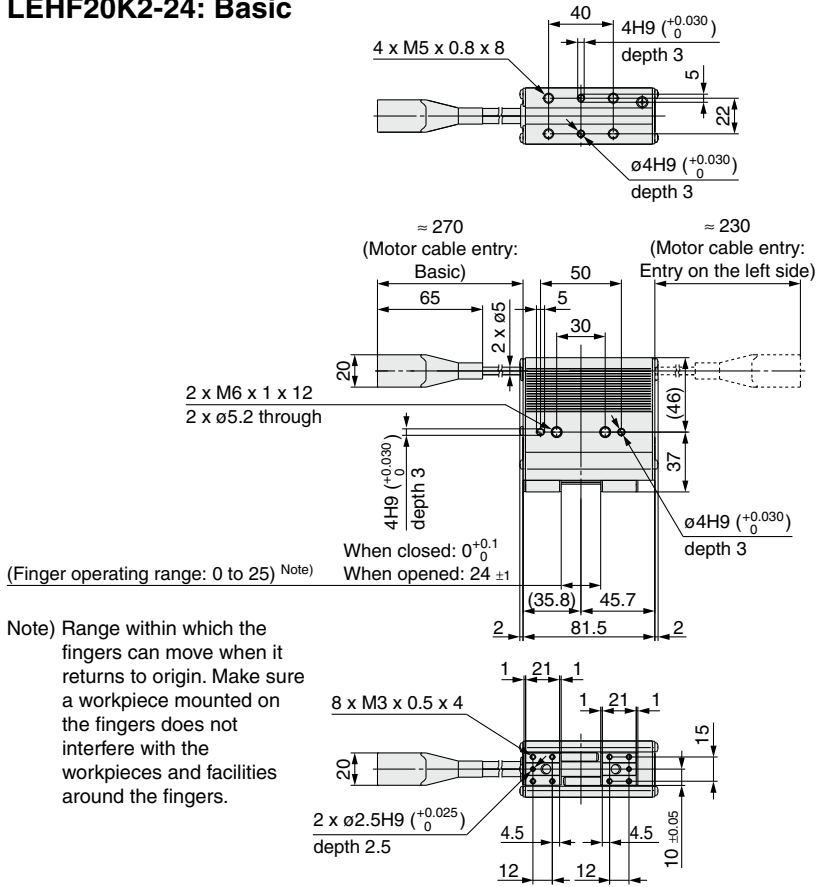


(Finger operating range: 0 to 25) <sup>Note</sup>

**Note)** Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

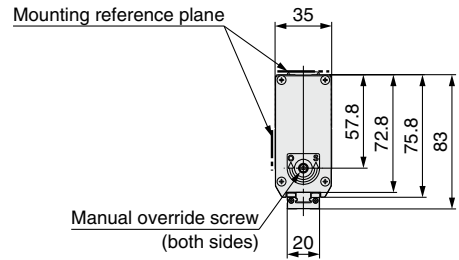


### LEHF20K2-48: Long Stroke

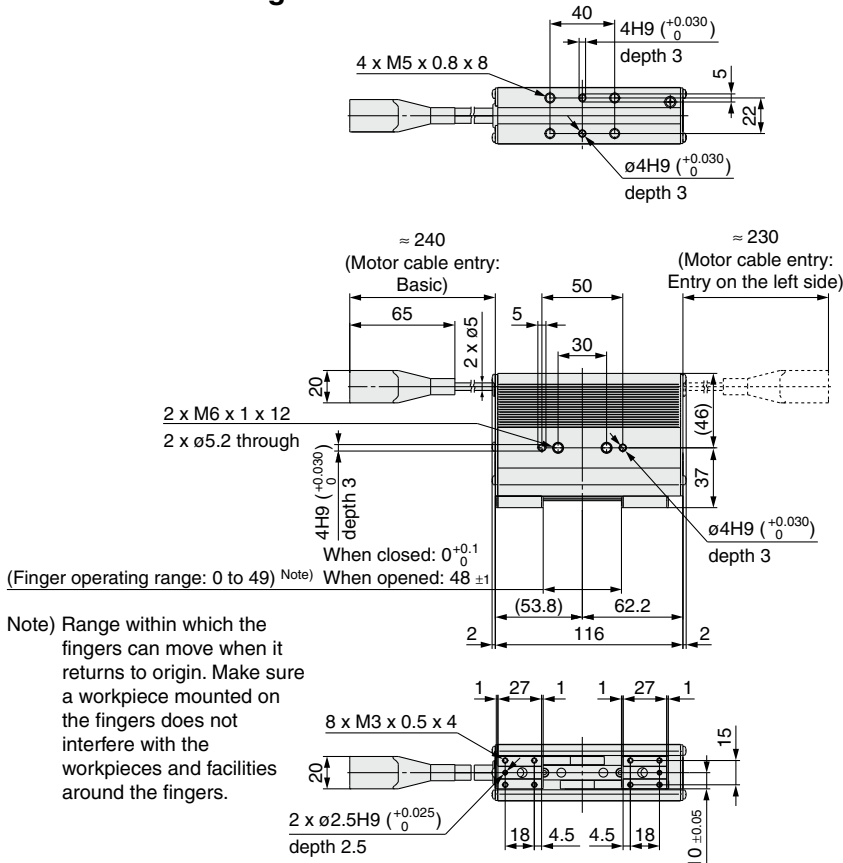

(Finger operating range: 0 to 49) <sup>Note</sup>


**Note)** Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

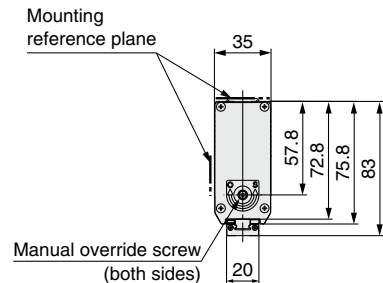


# Series LEHF

## Dimensions

### LEHF32K2-32: Basic

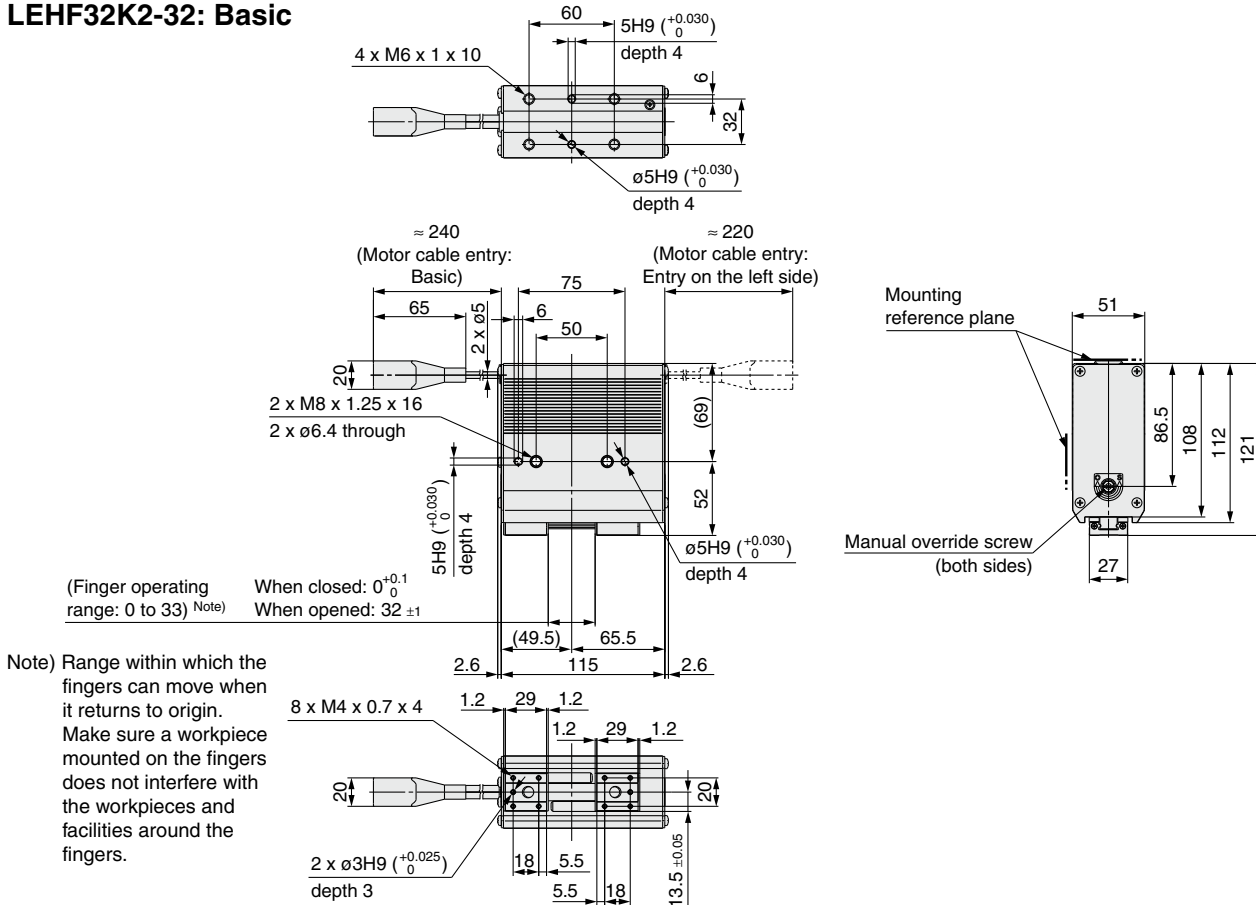


### LEHF32K2-64: Long Stroke

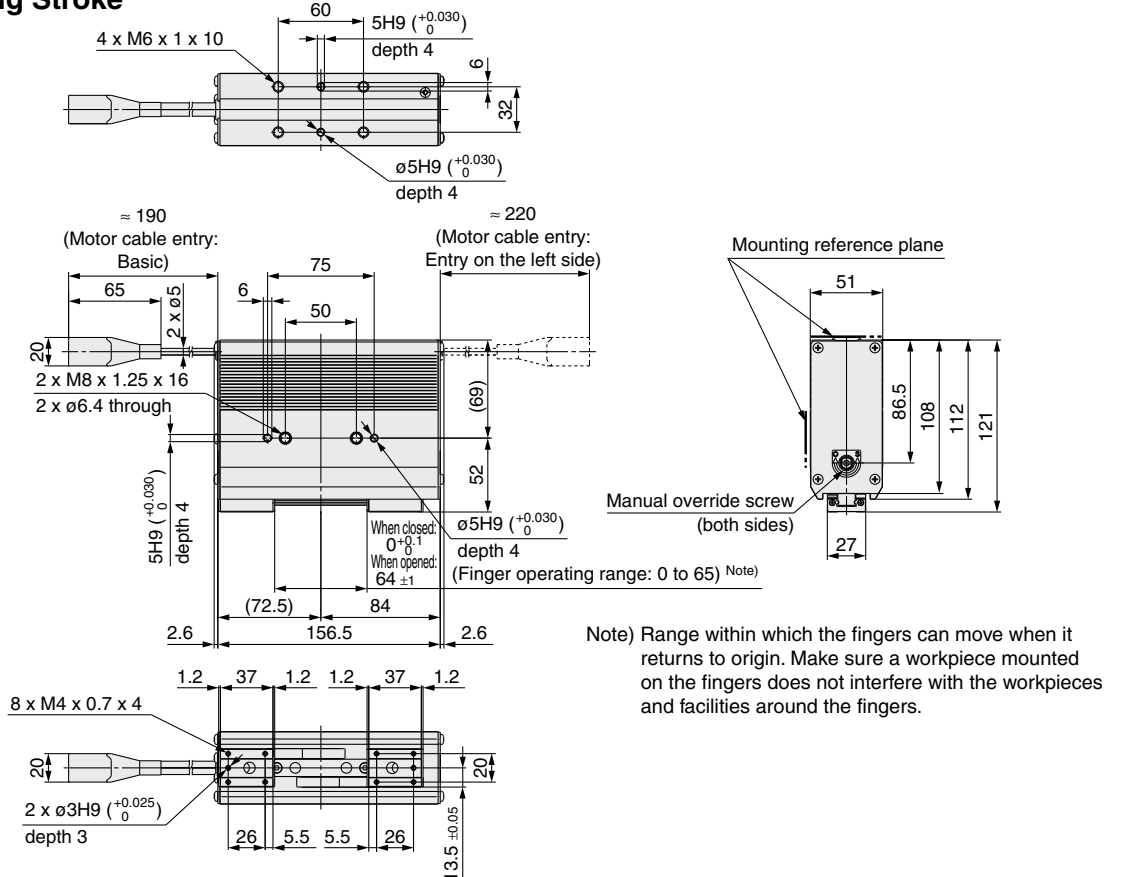


## Dimensions

### LEHF40K2-40: Basic

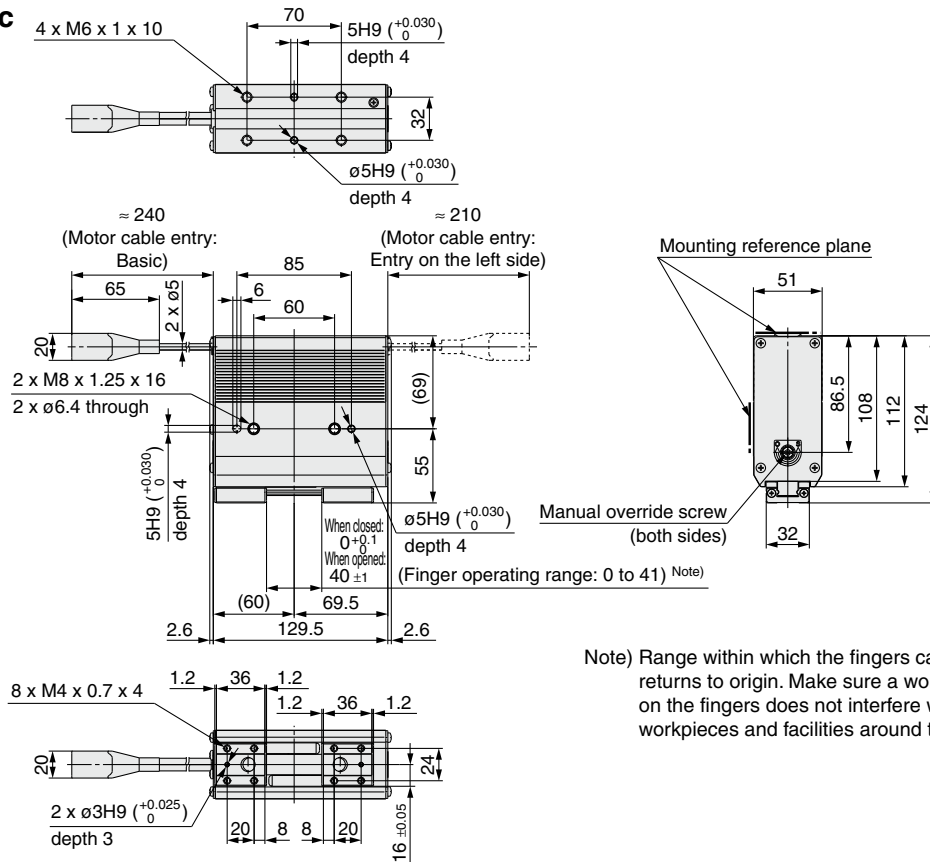

*Note*) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

### LEHF40K2-80: Long Stroke

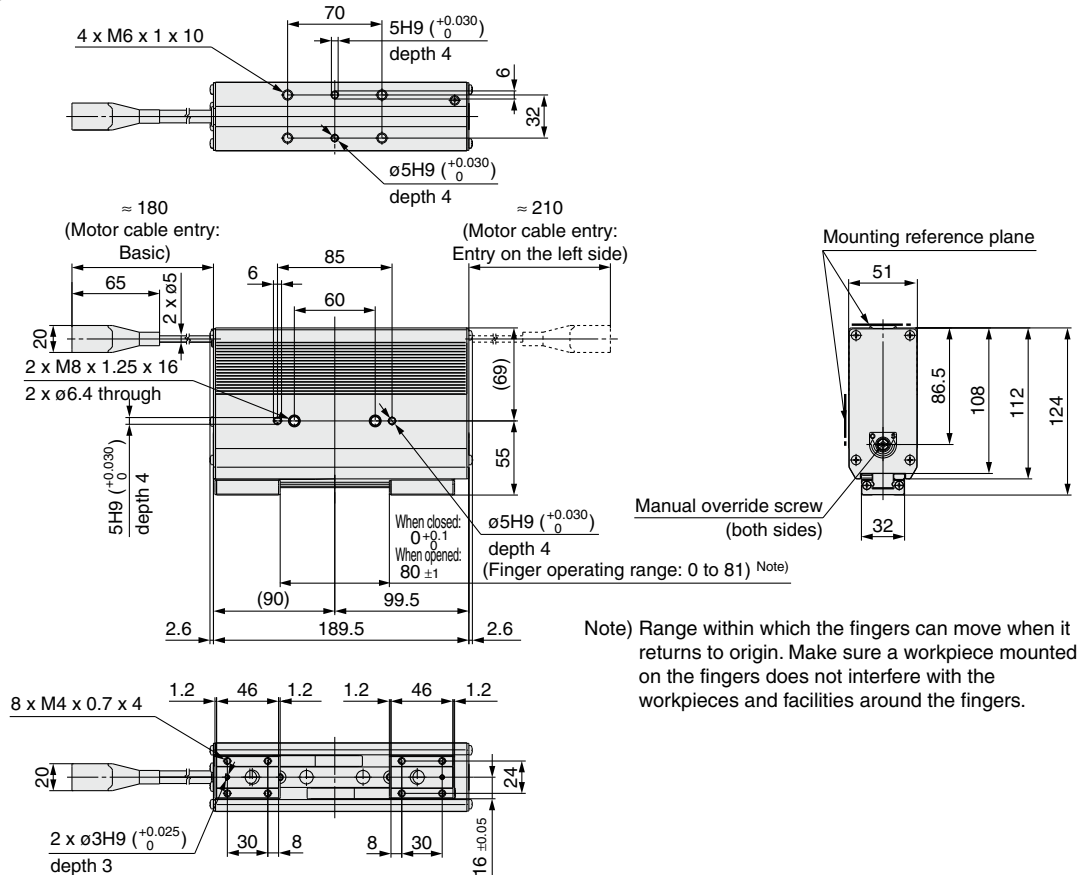

*Note*) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6


LEC-G

LECP1

LECPA


Specific Product Precautions

# Model Selection

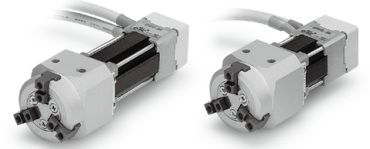

## Selection Procedure

**Step** Check the gripping force.



**Example**

Workpiece mass: 0.1 kg

**Guidelines for the selection of the gripper with respect to workpiece mass**

- Although conditions differ according to the workpiece shape and the coefficient of friction between the attachments and the workpiece, select a model that can provide a gripping force of 7 to 13 times <sup>Note)</sup> the workpiece weight, or more.


Note) For details, refer to the calculation of required gripping force.

- If high acceleration or impact forces are encountered during motion, a further margin of safety should be considered.

Example) When it is desired to set the gripping force at 13 times or more above the workpiece weight.

Required gripping force  
 $= 0.1 \text{ kg} \times 13 \times 9.8 \text{ m/s}^2 \approx 12.7 \text{ N}$  or more

**LEHS20**

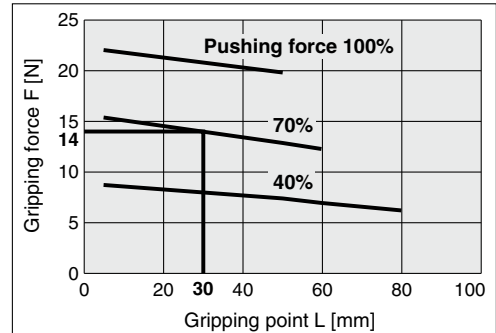

**When the LEHS20 is selected.**


- A gripping force of 14 N is obtained from the intersection point of gripping point distance L = 30 mm and pushing force of 70%.
- Gripping force is 14 times greater than the workpiece weight, and therefore satisfies a gripping force setting value of 13 times or more.

Pushing force: 70%

Gripping point distance: 30 mm

Pushing speed: 30 mm/sec


**LEHS20**

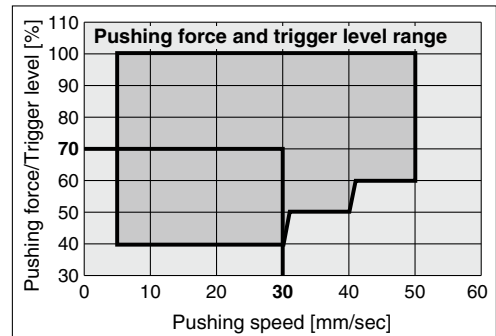

- Pushing speed is satisfied at the point where 70% of the pushing force and 30 mm/sec of the pushing speed cross.

Note) Confirm the pushing speed range from the determined pushing force [%].

### Calculation of required gripping force

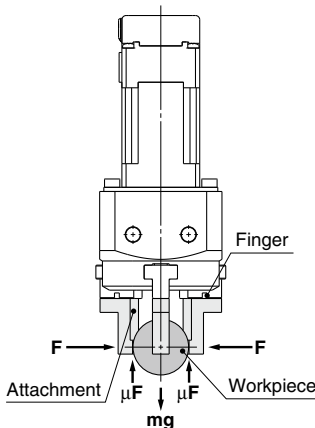

When gripping a workpiece as in the figure to the left, and with the following definitions,

- F: Gripping force (N)
- $\mu$ : Coefficient of friction between the attachments and the workpiece
- m: Workpiece mass (kg)
- g: Gravitational acceleration (= 9.8 m/s<sup>2</sup>)
- mg: Workpiece weight (N)

the conditions under which the workpiece will not drop are

$$3 \times \mu F > mg$$

Number of fingers

and therefore,  $F > \frac{mg}{3 \times \mu}$

With "a" representing the margin, "F" is determined by the following formula:

$$F = \frac{mg}{3 \times \mu} \times a$$

**"Gripping force at least 7 to 13 times the workpiece weight"**

The "7 to 13 times or more of the workpiece weight" recommended by SMC is calculated with a margin of "a" = 4, which allows for impacts that occur during normal transportation, etc.

When $\mu = 0.2$	When $\mu = 0.1$
$F = \frac{mg}{3 \times 0.2} \times 4 = 6.7 \times mg$	$F = \frac{mg}{3 \times 0.1} \times 4 = 13.3 \times mg$

7 x Workpiece weight

13 x Workpiece weight

<Reference> Coefficient of friction  $\mu$  (depends on the operating environment, contact pressure, etc.)

Coefficient of friction $\mu$	Attachment - Material of workpieces (guideline)
0.1	Metal (surface roughness Rz3.2 or less)
0.2	Metal
0.2 or more	Rubber, Resin, etc.

Note) • Even in cases where the coefficient of friction is greater than  $\mu = 0.2$ , for reasons of safety, select a gripping force which is at least 7 to 13 times greater than the workpiece weight, as recommended by SMC.

• If high acceleration or impact forces are encountered during motion, a further margin should be considered.

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions



# Series LEHS

## Selection Procedure


### Step Check the gripping force: Series LEHS

#### • Indication of gripping force



The gripping force shown in the graphs on page 42 is expressed as "F", which is the gripping force of one finger, when three fingers and attachments are in full contact with the workpiece as shown in the figure below.

- Set the workpiece gripping point "L" so that it is within the range shown in the figure below.


External Gripping State

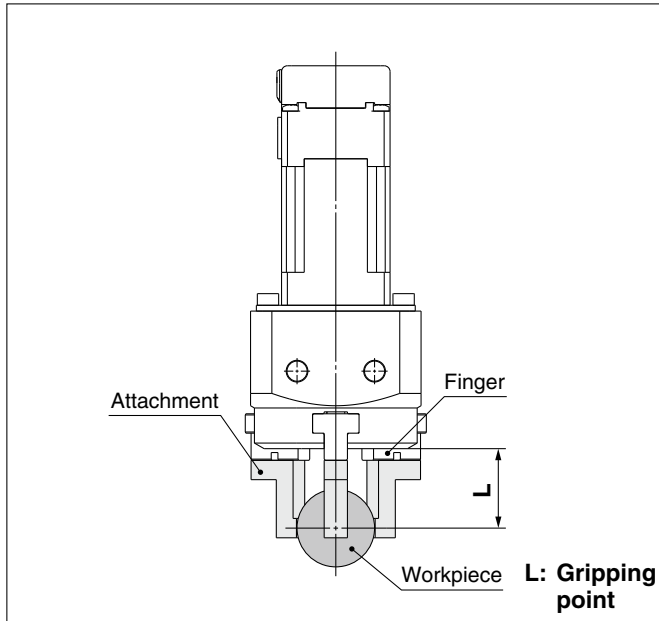

Internal Gripping State

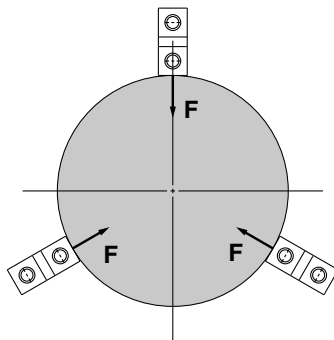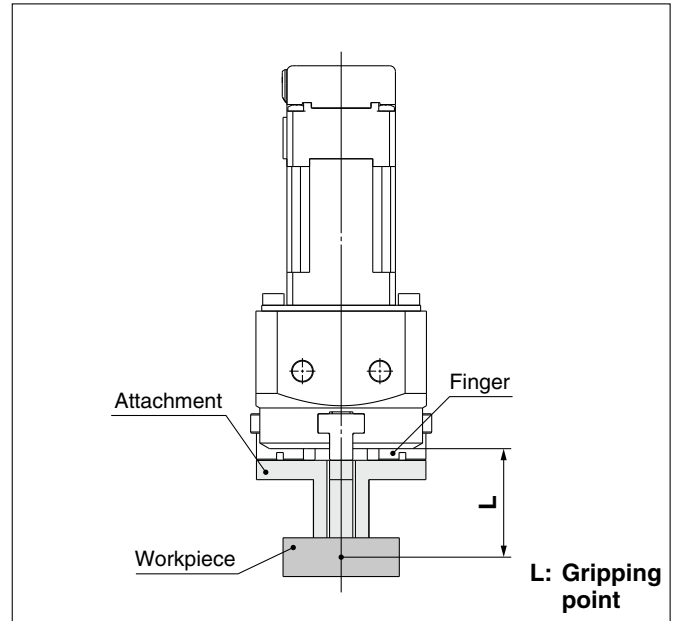

F: Gripping force

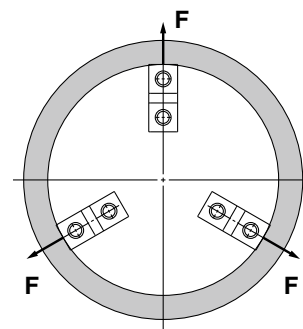


F: Gripping force

## Step Check the gripping force: Series LEHS


### Basic

\* Pushing force is one of the values of step data that is input into the controller.


#### LEHS10

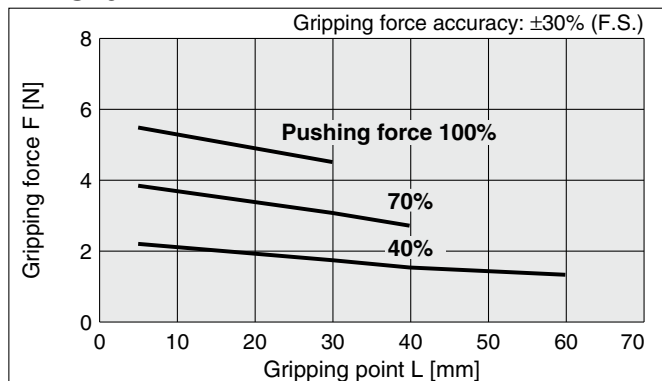


#### LEHS20

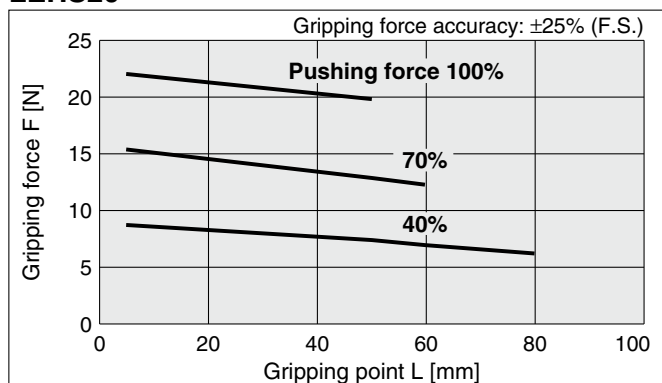

#### LEHS32

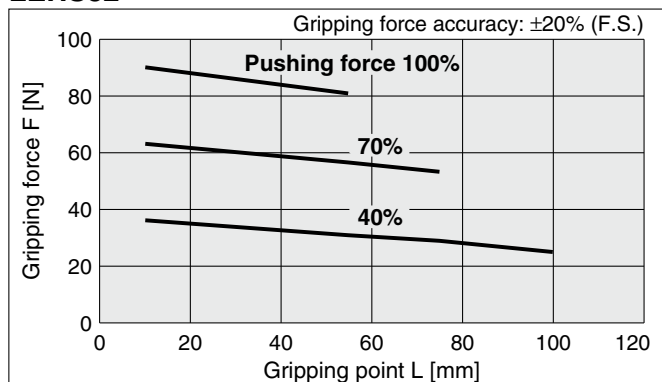


#### LEHS40

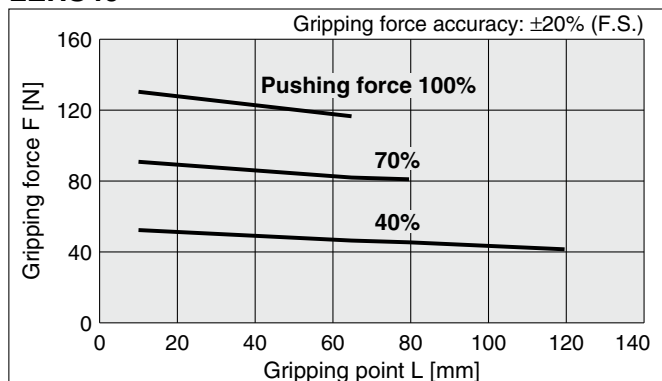


### Compact

\* Pushing force is one of the values of step data that is input into the controller.

#### LEHS10L

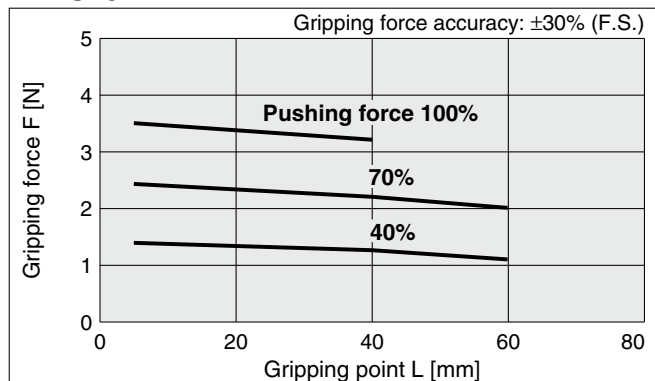


#### LEHS20L

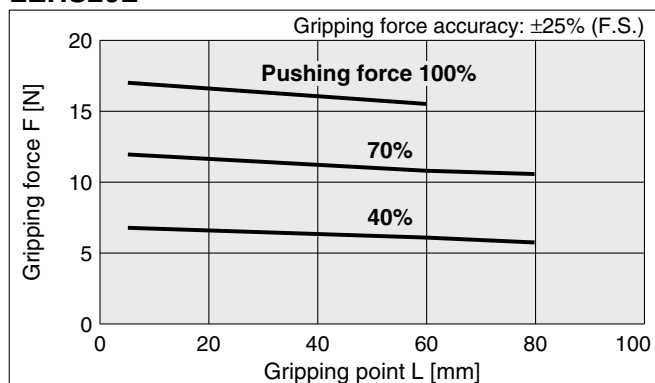


### Selection of Pushing Speed

● Set the [Pushing force] and the [Trigger LV] within the range shown in the figure below.

#### Basic

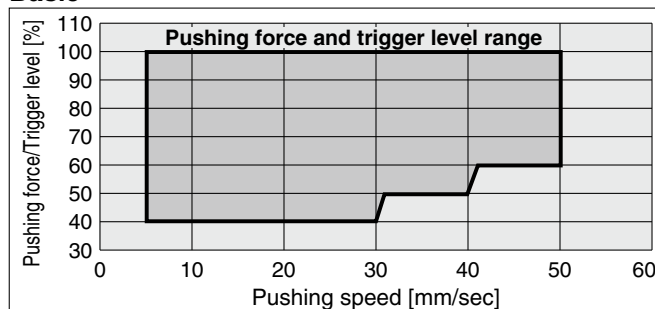

#### Compact

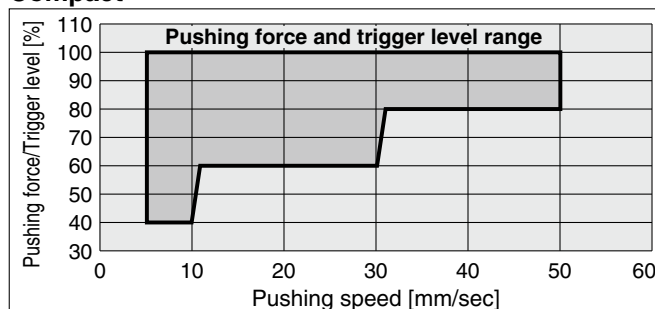

# Electric Gripper 3-Finger Type


Step Motor (Servo/24 VDC)

# Series LEHS

## LEHS10, 20, 32, 40



### How to Order

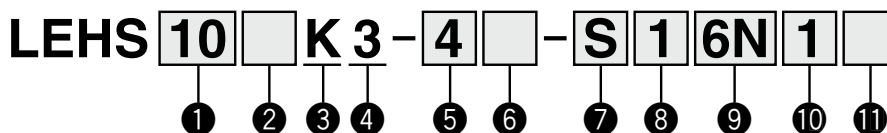

#### 1 Size

10
20
32
40

#### 2 Motor size

Nil	Basic
L (Note)	Compact

Note) Size: 10, 20 only

#### 3 Lead


K	Basic
---	-------

#### 4 3-finger type

#### 5 Stroke [mm]

Stroke/diameter	Size
4	10
6	20
8	32
12	40

#### 6 Motor cable entry

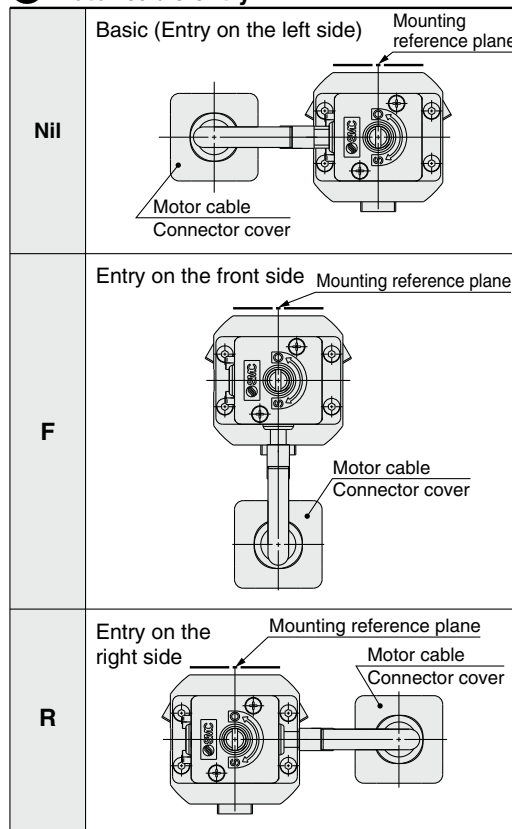

#### ⚠ Caution

##### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

##### [UL-compliant products]


When conformity to UL is required, the electric actuator and controller/driver should be used with a UL1310 Class 2 power supply.

#### The actuator and controller/driver are sold as a package.

Confirm that the combination of the controller/driver and the actuator is correct.

##### <Check the following before use.>

- ① Check the actuator label for model number. This matches the controller/driver.
- ② Check Parallel I/O configuration matches (NPN or PNP).

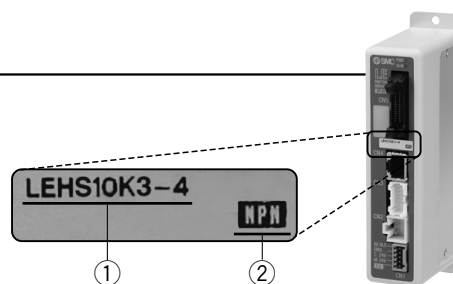

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>



## 7 Actuator cable type\*

Nil	Without cable
S	Standard cable
R	Robotic cable (Flexible cable)

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

## 8 Actuator cable length [m]

Nil	Without cable
1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

\* Produced upon receipt of order (Robotic cable only)  
Refer to the specifications Note 3) on page 45.

## 9 Controller/Driver type\*

Nil	Without controller/driver	
6N	LECP6 (Step data input type)	NPN
6P		PNP
1N	LECP1 (Programless type)	NPN
1P		PNP
AN	LECPA (Pulse input type)	NPN
AP		PNP

\* For details about controllers/driver and compatible motors, refer to the compatible controllers/driver below.

## 10 I/O cable length [m]\*1

Nil	Without cable
1	1.5
3	3*2
5	5*2

\*1 When "Without controller/driver" is selected for controller/driver types, I/O cable cannot be selected. Refer to page 61 (For LECP6), page 73 (For LECP1) or page 80 (For LECPA) if I/O cable is required.




\*2 When "Pulse input type" is selected for controller/driver types, pulse input usable only with differential. Only 1.5 m cables usable with open collector.

## 11 Controller/Driver mounting

Nil	Screw mounting
D	DIN rail mounting*

\* DIN rail is not included. Order it separately.  
(Refer to page 56.)

## Compatible Controllers/Driver

Type	Step data input type 	Programless type 	Pulse input type 
Series	LECP6	LECP1	LECPA
Features	Value (Step data) input Standard controller	Capable of setting up operation (step data) without using a PC or teaching box	Operation by pulse signals
Compatible motor	Step motor (Servo/24 VDC)	Step motor (Servo/24 VDC)	
Maximum number of step data	64 points	14 points	—
Power supply voltage	24 VDC		
Reference page	Page 55	Page 68	Page 74

## Specifications



Model		LEHS10	LEHS20	LEHS32	LEHS40
Opening/closing stroke (diameter)		4	6	8	12
Gripping force [N] <small>Note 1) Note 3)</small>	Basic	2.2 to 5.5	9 to 22	36 to 90	52 to 130
	Compact	1.4 to 3.5	7 to 17	—	—
Opening and closing speed/ Pushing speed [mm/s] <small>Note 2) Note 3)</small>		5 to 70/ 5 to 50	5 to 80/ 5 to 50	5 to 100/ 5 to 50	5 to 120/ 5 to 50
Drive method		Slide screw + Wedge cam			
Repeatability [mm] <small>Note 4)</small>		±0.02			
Repeated length measurement accuracy [mm] <small>Note 5)</small>		±0.05			
Finger backlash/dia. [mm] <small>Note 6)</small>		0.5 or less			
Impact/Vibration resistance [m/s <sup>2</sup> ] <small>Note 7)</small>		150/30			
Max. operating frequency [C.P.M]		60			
Operating temperature range [°C]		5 to 40			
Operating humidity range [%RH]		90 or less (No condensation)			
Weight [g]	Basic	185	410	975	1265
	Compact	150	345	—	—
Motor size		□20	□28	□42	
Motor type		Step motor (Servo/24 VDC)			
Encoder		Incremental A/B phase (800 pulse/rotation)			
Rated voltage [V]		24 VDC ±10%			
Power consumption/ Standby power consumption when operating [W] <small>Note 8)</small>	Basic	11/7	28/15	34/13	36/13
	Compact	8/7	22/12	—	—
Max. instantaneous power consumption [W] <small>Note 9)</small>	Basic	19	51	57	61
	Compact	14	42	—	—

Note 1) Gripping force should be from 7 to 13 times the workpiece weight. Positioning force should be 150% when releasing the workpiece. Gripping force accuracy should be ±30% (F.S.) for LEHS10, ±25% (F.S.) for LEHS20 and ±20% (F.S.) for LEHS32/40.

Note 2) Pushing speed should be set within the range during pushing (gripping) operation. Otherwise, it may cause malfunction. The opening/closing speed and pushing speed are for both fingers. The speed for one finger is half this value.

Note 3) The speed and force may change depending on the cable length, load and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)

Note 4) Repeatability means the variation of the gripping position (workpiece position) when the gripping operation is repeatedly performed by the same sequence for the same workpiece.

Note 5) Repeated length measurement accuracy means dispersion (value on the controller monitor) when the workpiece is repeatedly held in the same position.

Note 6) There will be no influence of backlash during pushing (gripping) operation. Make the stroke longer for the amount of backlash when opening.

Note 7) Impact resistance: No malfunction occurred when the gripper was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)


Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. Test was performed in both an axial direction and a perpendicular direction to the lead screw. (Test was performed with the gripper in the initial state.)

Note 8) The power consumption (including the controller) is for when the gripper is operating. The standby power consumption when operating is for when the gripper is stopped in the set position during operation, including the energy saving mode when gripping.


Note 9) The maximum instantaneous power consumption (including the controller) is for when the gripper is operating. This value can be used for the selection of the power supply.

## How to Mount


a) Mounting A type  
(when using the thread on the mounting plate)

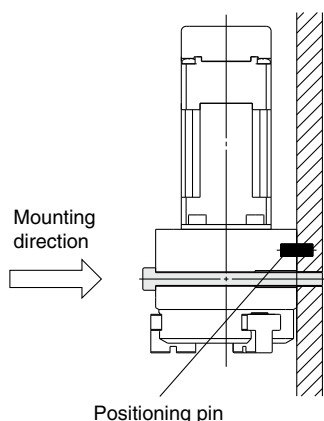

b) Mounting B type  
(when using the thread on the back of the body)

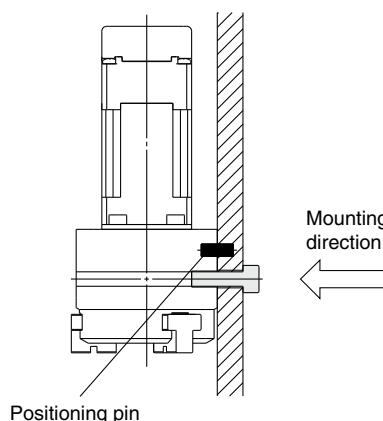

## Construction

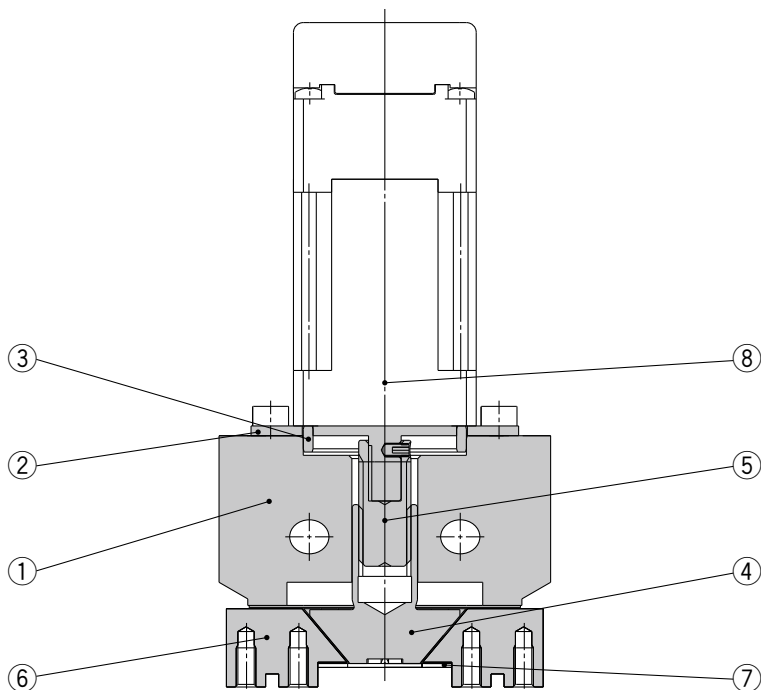

### Component Parts

No.	Description	Material	Note
1	<b>Body</b>	Aluminum alloy	Anodized
2	<b>Motor plate</b>	Aluminum alloy	Anodized
3	<b>Guide ring</b>	Aluminum alloy	
4	<b>Slide cam</b>	Stainless steel	Heat treatment + Special treatment
5	<b>Slide bolt</b>	Stainless steel	Heat treatment + Special treatment
6	<b>Finger</b>	Carbon steel	Heat treatment + Special treatment
7	<b>End plate</b>	Stainless steel	
8	<b>Step motor (Servo/24 VDC)</b>		

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA


Specific Product Precautions

# Series LEHS



## Dimensions

### LEHS10(L)K3-4

Model	L	(L1)
LEHS10K3-4	89.1	(59.6)
LEHS10LK3-4	72.6	(43.1)

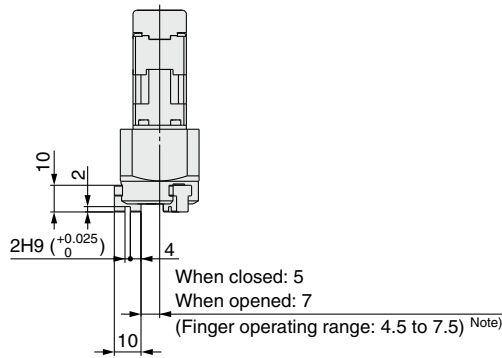


Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

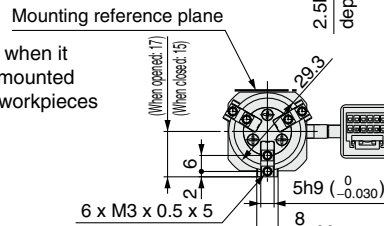
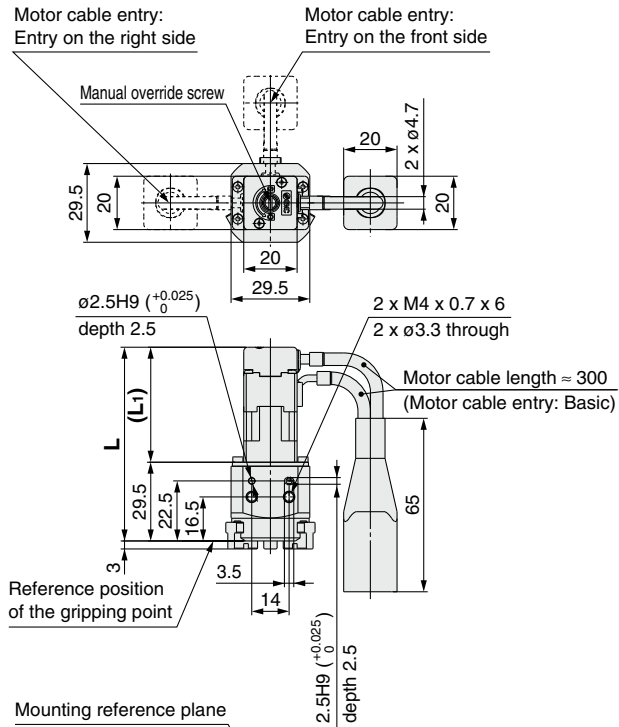


### LEHS20(L)K3-6

Model	L	(L1)
LEHS20K3-6	98.8	(61.8)
LEHS20LK3-6	84.8	(47.8)

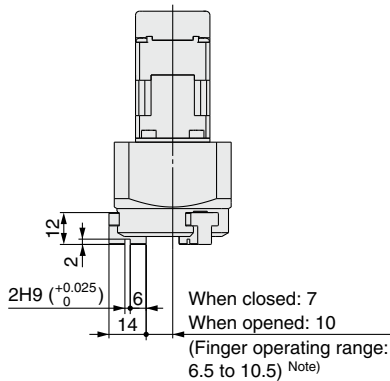


Note) Range within which the fingers can move when it returns to origin. Make sure a workpiece mounted on the fingers does not interfere with the workpieces and facilities around the fingers.

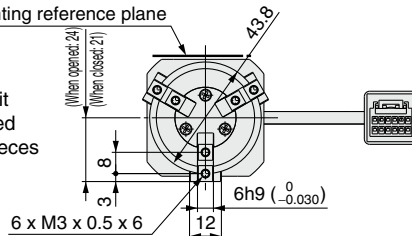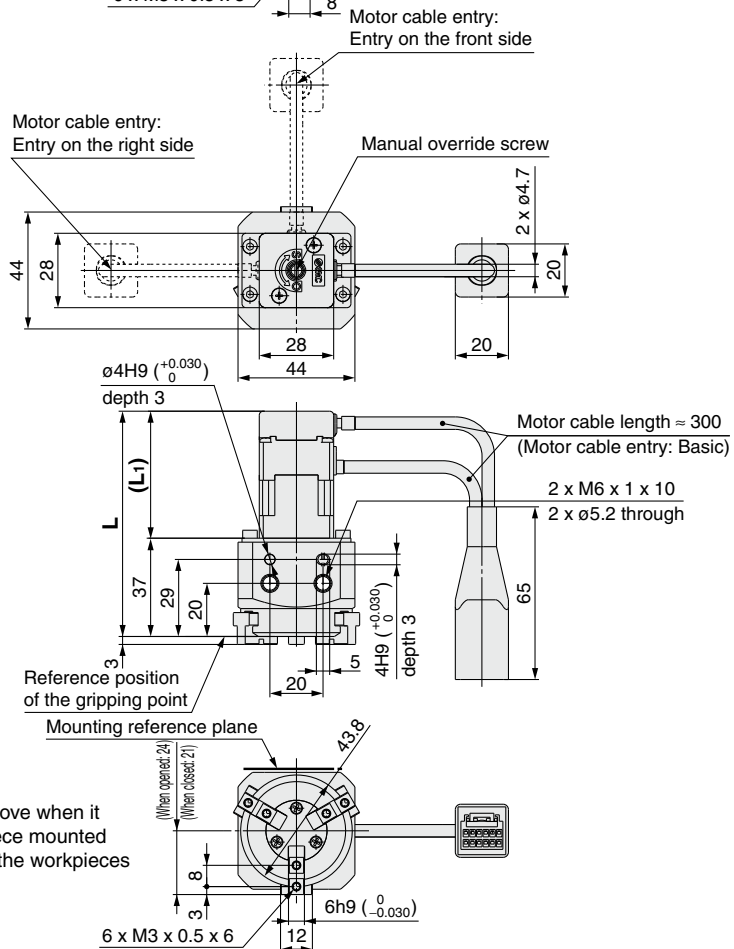


## Dimensions

### LEHS32K3-8

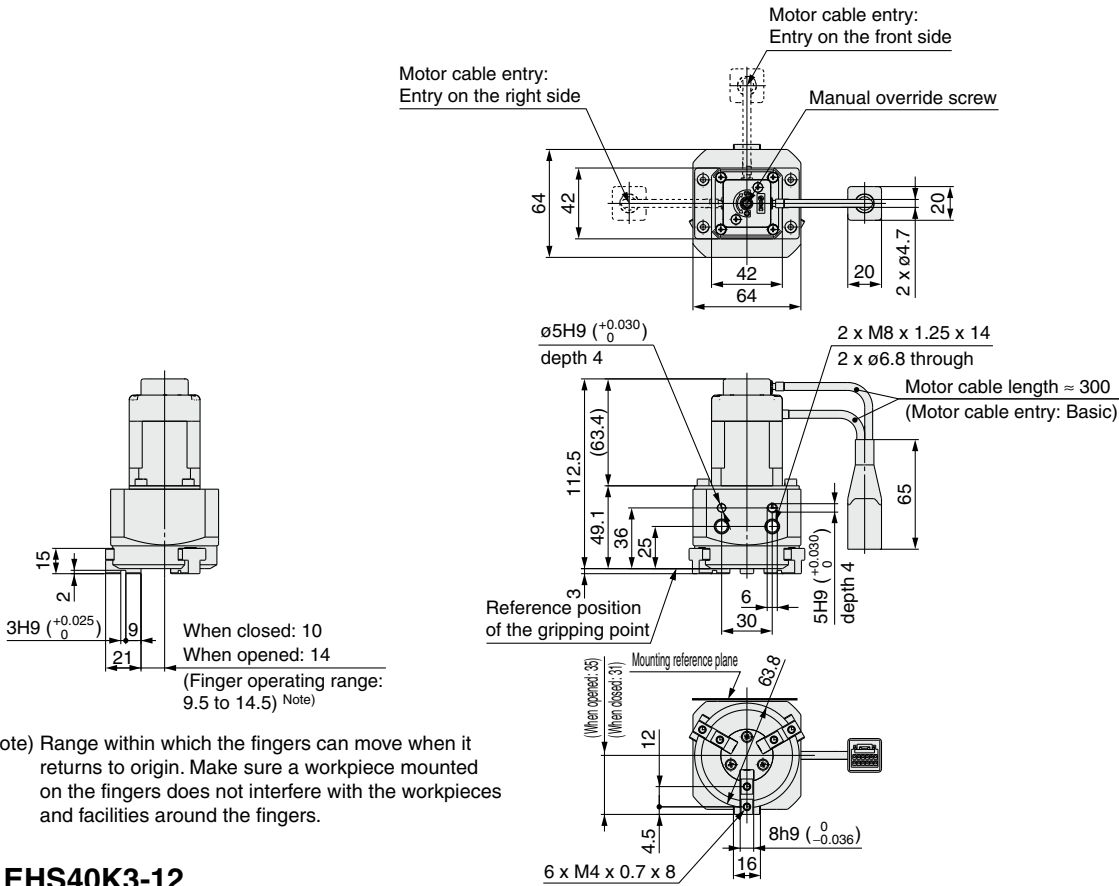

### LEHS40K3-12

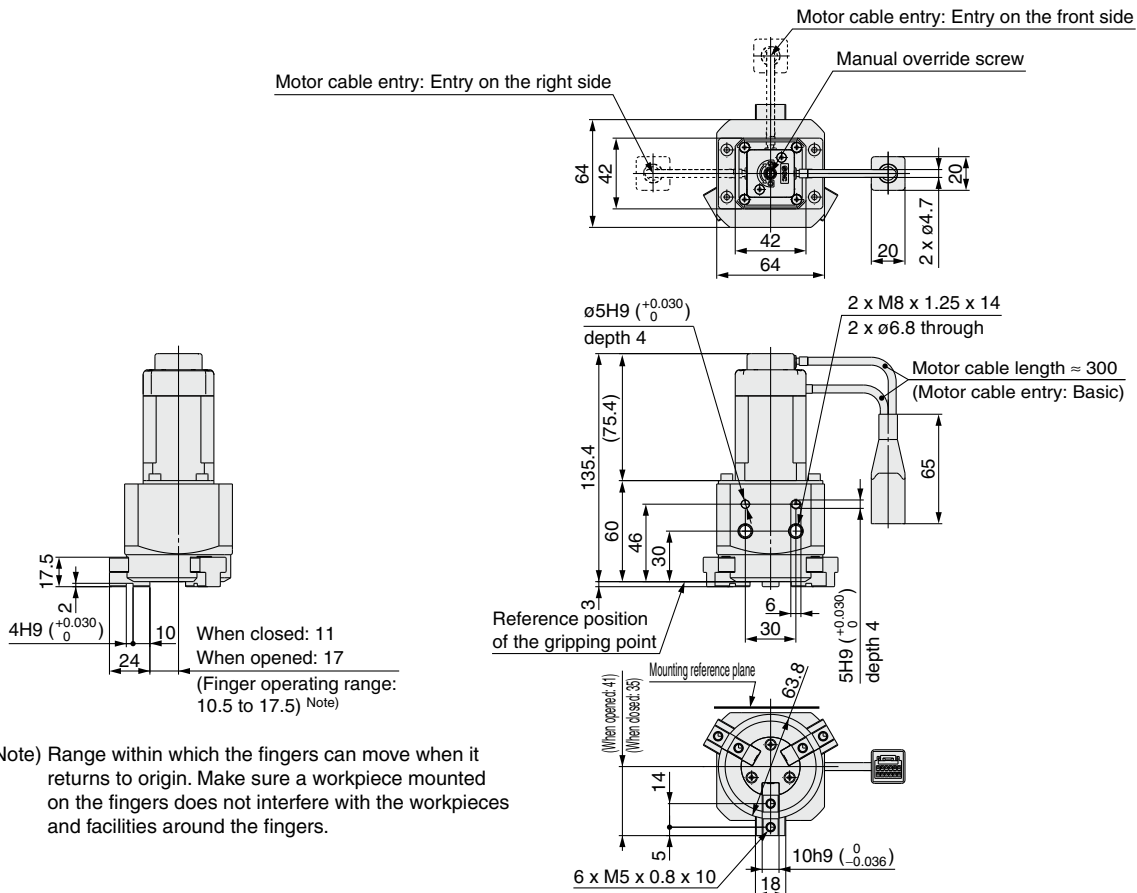





# Series LEH Electric Grippers/ Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.  
Please download it via our website, <http://www.smcworld.com>


## Design/Selection

### Warning

#### 1. Keep the specified gripping point.

If the specified gripping range is exceeded, excessive moment is applied to the sliding part of the finger, which may have an adverse affect on the life of the product.

L: Gripping point  
H: Overhang

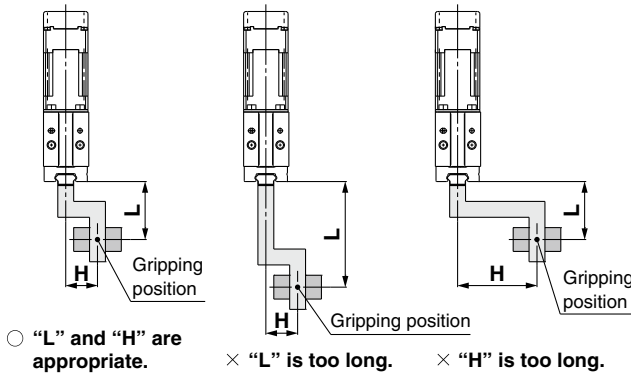


#### 2. Design the attachment to be lightweight and short.

A long and heavy attachment will increase inertia force when the product is opened or closed, which causes play on the finger. Even if the gripping point of the attachment is within a specified range, design it to be short and lightweight as possible.

For a long or large workpiece, select a model of a larger size or use two or more grippers together.

#### 3. Provide a runoff space for attachment when a workpiece is extremely thin or small.

Without a runoff space, the product cannot perform stable gripping, and the displacement of a workpiece or gripping failure can result.

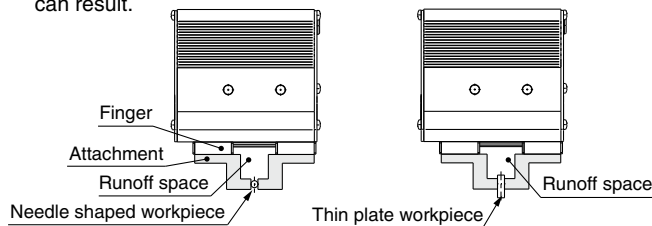

#### 4. Select the model that allows for gripping force in relation to the workpiece weight, as appropriate.

The selection of inappropriate model can cause dropping of a workpiece. Gripping force should be from 10 to 20 times (LEHZ, LEHF) or 7 to 13 times (LEHS) of the workpiece weight.

#### Gripping Force Accuracy

LEHZ(J)10(L)	LEHZ(J)16(L)	LEHZ(J)20(L)	LEHZ(J)25(L)	LEHZ32	LEHZ40
±30% (F.S.)		±25% (F.S.)		±20% (F.S.)	
LEHF10	LEHF20	LEHF32	LEHF40		
±30% (F.S.)		±25% (F.S.)		±20% (F.S.)	
LEHS10(L)	LEHS20(L)	LEHS32	LEHS40		
±30% (F.S.)		±25% (F.S.)		±20% (F.S.)	

#### 5. Do not use the product in applications where excessive external force (including vibration) or impact force is applied to it.

It may lead to breakage or galling, which causes operation failure. Do not apply impact and vibration outside of the specifications.

#### 6. Select the model that allows for opening and closing width relative to a workpiece.

The selection of an inappropriate model will cause gripping at unexpected positions due to variable opening and closing width of the product and the diameter of a workpiece the product can handle. It is also necessary to make a larger stroke to overcome backlash created when the product will open after gripping.

## Mounting

### Warning

#### 1. Do not drop or hit the gripper to avoid scratching and denting the mounting surfaces.

Even slight deformation can cause the deterioration of accuracy and operation failure.

#### 2. When mounting the attachment, use screws with adequate length and tighten them with adequate torque within the specified torque range.

Tightening the screws with a higher torque than recommended may cause malfunction, whilst the tightening with a lower torque can cause the displacement of the mounting position or in extreme conditions the actuator could become detached from its mounting position.

#### Mounting of Attachment to Finger

The attachment should be mounted at the torque specified in the following table by screwing the bolt into the finger mounting female thread and hole.

#### <Series LEHZ>

Model	Bolt	Max. tightening torque [N·m]
LEHZ(J)10(L)	M2.5 x 0.45	0.3
LEHZ(J)16(L)	M3 x 0.5	0.9
LEHZ(J)20(L)	M4 x 0.7	1.4
LEHZ(J)25(L)	M5 x 0.8	3.0
LEHZ32	M6 x 1	5.0
LEHZ40	M8 x 1.25	12.0

#### <Series LEHF>

Model	Bolt	Max. tightening torque [N·m]
LEHF10	M2.5 x 0.45	0.3
LEHF20	M3 x 0.5	0.9
LEHF32	M4 x 0.7	1.4
LEHF40	M4 x 0.7	1.4

#### <Series LEHS>

Model	Bolt	Max. tightening torque [N·m]
LEHS10(L)	M3 x 0.5	0.9
LEHS20(L)	M3 x 0.5	0.9
LEHS32	M4 x 0.7	1.4
LEHS40	M5 x 0.8	3.0



# Series LEH Electric Grippers/ Specific Product Precautions 2


Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.  
Please download it via our website, <http://www.smcworld.com>

Model Selection

## Mounting


### Mounting of Electric Gripper, Series LEHZ/LEHZJ

When using the thread on the side of the body

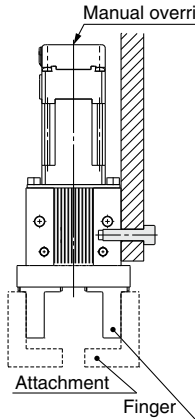


Model	Bolt	Max. tightening torque [N·m]	Max. screw-in depth L [mm]
LEHZ(J)10(L)	M3 x 0.5	0.9	6
LEHZ(J)16(L)	M4 x 0.7	1.4	6
LEHZ(J)20(L)	M5 x 0.8	3.0	8
LEHZ(J)25(L)	M6 x 1	5.0	10
LEHZ32	M6 x 1	5.0	10
LEHZ40	M8 x 1.25	12.0	14

When using the thread on the mounting plate



Model	Bolt	Max. tightening torque [N·m]
LEHZ(J)10(L)	M3 x 0.5	0.9
LEHZ(J)16(L)	M3 x 0.5	0.9
LEHZ(J)20(L)	M4 x 0.7	1.4
LEHZ(J)25(L)	M5 x 0.8	3.0
LEHZ32	M5 x 0.8	3.0
LEHZ40	M6 x 1	5.0


When using the thread on the back of the body



Model	Bolt	Max. tightening torque [N·m]	Max. screw-in depth L [mm]
LEHZ(J)10(L)	M4 x 0.7	1.4	6
LEHZ(J)16(L)	M4 x 0.7	1.4	6
LEHZ(J)20(L)	M5 x 0.8	3.0	8
LEHZ(J)25(L)	M6 x 1	5.0	10
LEHZ32	M6 x 1	5.0	10
LEHZ40	M8 x 1.25	12.0	14

### Mounting of Electric Gripper, Series LEHS


When using the thread on the mounting plate

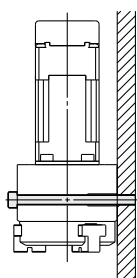

Model	Bolt	Max. tightening torque [N·m]
LEHS10(L)	M3 x 0.5	0.9
LEHS20(L)	M5 x 0.8	3.0
LEHS32	M6 x 1	5.0
LEHS40	M6 x 1	5.0


### Mounting of Electric Gripper, Series LEHF

When using the thread on the body

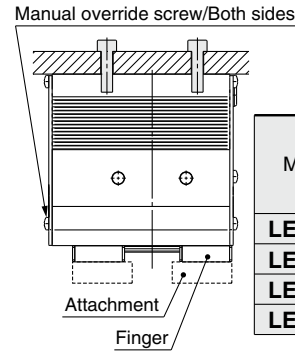


Model	Bolt	Max. tightening torque [N·m]	Max. screw-in depth L [mm]
LEHF10	M4 x 0.7	1.4	7
LEHF20	M5 x 0.8	3.0	8
LEHF32	M6 x 1	5.0	10
LEHF40	M6 x 1	5.0	10

When using the thread on the mounting plate



Model	Bolt	Max. tightening torque [N·m]
LEHF10	M4 x 0.7	1.4
LEHF20	M5 x 0.8	3.0
LEHF32	M6 x 1	5.0
LEHF40	M6 x 1	5.0

When using the thread on the back of the body

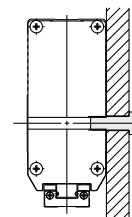

Model	Bolt	Max. tightening torque [N·m]	Max. screw-in depth L [mm]
LEHF10	M5 x 0.8	3.0	10
LEHF20	M6 x 1	5.0	12
LEHF32	M8 x 1.25	12.0	16
LEHF40	M8 x 1.25	12.0	16

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

Step Motor (Servo/24 VDC)



# Series LEH Electric Grippers/ Specific Product Precautions 3

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.  
Please download it via our website, <http://www.smcworld.com>

## Mounting

### Warning

#### 3. Tighten the electric gripper mounting screws to the specified torque.

Tightening to a torque greater than the specified range may cause malfunction, and insufficient tightening may cause displacement.

#### 4. When fixing the attachment to the finger, avoid applying excessive torque to the finger.

Play or deteriorated accuracy can result.

#### 5. The mounting face has holes and slots for positioning. Use them for accurate positioning of the electric gripper if required.

#### 6. When a workpiece is to be removed when it is not energized, open or close the finger manually or remove the attachment beforehand.

When the product is operated with the manual override screws, check the position of the manual override screws of the product, and leave necessary space. Do not apply excessive torque to the manual override screws that could lead to damage and malfunction of the product.

#### 7. When gripping a workpiece, keep a gap in the horizontal direction to prevent the load from concentrating on one finger, to allow for workpiece misalignment.

For the same purpose, when moving a workpiece for alignment by the product, minimize the friction resistance created by the movement of the workpiece. The finger can be displaced, play or breakage.


#### 8. Perform adjustment and confirmation to ensure there is no external force applied to the finger.

If the finger is subject to repetitive lateral load or impact load, it can cause play or breakage and the lead screw can get stuck, which results in operation failure. Allow a clearance to prevent the workpiece or the attachment from hitting gripper product at the end of the stroke.

#### 1) Stroke end when fingers are open

○ With clearance


× Without clearance

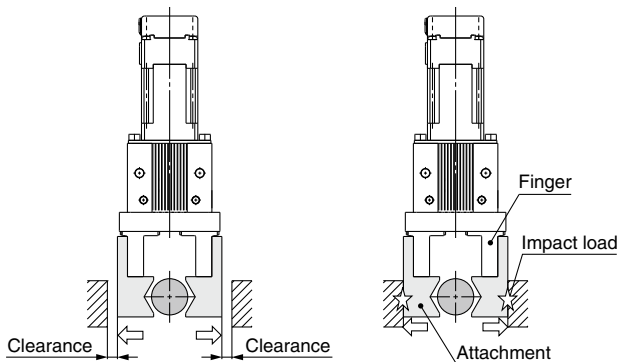


#### 2) Stroke end when gripper is moving

○ With clearance

× Without clearance

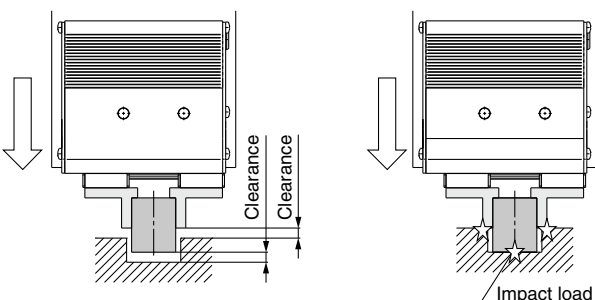

#### 3) When turning over

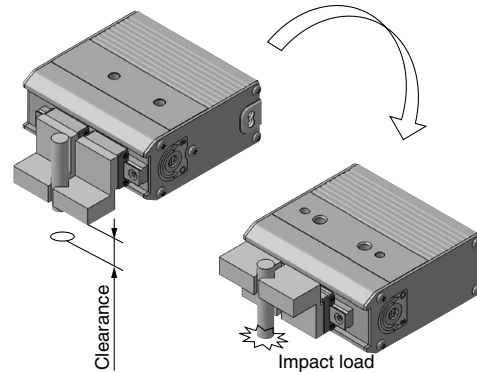


#### 9. Adjust the gripping point so that an excessive force will not be applied to the fingers when inserting a workpiece.

In particular, during a trial run, operate the product manually or at a low speed and check that the safety is assured without impact.

○ Aligned

× Not aligned

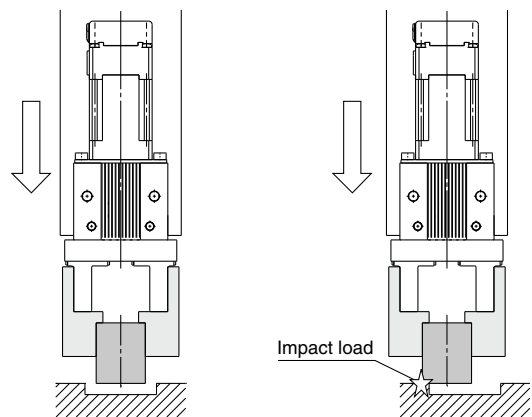

## Handling

### Caution

#### 1. The parameters of the stroke and the opening/closing speed are for both fingers.

The stroke and the opening/closing speed for one finger is half a set parameter.

#### 2. When gripping a workpiece by the product, be sure to set to the pushing operation.

Also, do not hit the workpiece to the finger and attachment in positioning operation or in the range of positioning operation.

Otherwise, the lead screw can get caught and cause operation failure. However, if the workpiece cannot be gripped in pushing operation (such as a plastically deformed workpiece, rubber component, etc.), you can grip it in positioning operation with consideration to the elastic force of the workpiece. In this case, keep the driving speed for impact specified in item 3 on page 52.

When the operation is interrupted by a stop or temporary stop, and a pushing operation instruction is output just after operation is restarted, the operating direction will vary depending on the start position.



# Series LEH Electric Grippers/ Specific Product Precautions 4

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.

Please download it via our website, <http://www.smcworld.com>

Model Selection

## Handling

### Caution

#### 3. Keep the following driving speed range for pushing operation.

- LEHZ/LEHZJ: 5 to 50 mm/s
- LEHF10: 5 to 20 mm/s
- LEHF20/32/40: 5 to 30 mm/s
- LEHS: 5 to 50 mm/s

Operation at the speed outside of the range can get the lead screw caught and cause operation failure.

#### 4. There is no backlash effect in pushing operation.

The return to origin is done by pushing operation.

The finger position can be displaced by the effect of the backlash during the positioning operation.

Take the backlash into consideration when setting the position.

#### 5. Do not change the setting of energy saving mode.

When pushing (gripping) operation is continued, the heat generated by the motor can cause operation failure.

This is due to the self-lock mechanism in the lead screw, which makes the product keep the gripping force. To save the energy in this situation where the product is to be standby or continue to grip for extended periods of time, the product will be controlled to reduce current consumption (to 40% automatically after it has gripped a workpiece once). If there is the reduction of gripping force seen in the product after a workpiece has been gripped and deformed over certain amount of time, contact SMC separately.

#### 6. INP output signal

##### 1) Positioning operation

When the product comes within the set range by step data [In position], the INP output signal will turn on.

Initial value: Set to [0.50] or higher.

##### 2) Pushing operation

When the effective force exceeds step data [Trigger LV], the INP output signal will turn on.

Use the product within the specified range of [Pushing force] and [Trigger LV].

a) To ensure that the gripper holds the workpiece with the set [Pushing force], it is recommended that the [Trigger LV] be set to the same value as the [Pushing force].

b) When the [Pushing force] and [Trigger LV] are set less than the specified range, the INP output signal will turn on from the pushing start position.

##### <INP output signal in the controller version>

##### ● SV0.8 or more

Although the product automatically switches to the energy saving mode (reduced current) after pushing operation is completed, the INP output signal remains ON.

##### ● SV0.7 or less

a. When [Trigger LV] is set to 40% (when the value is the same as the energy saving mode)

Although the product automatically switches to the energy saving mode (reduced current) after pushing operation is completed, the INP output signal remains ON.

b. When [Trigger LV] is set higher than 40%

The product is turned on after pushing operation is completed, but INP output signal will turn off when current consumption is reduced automatically in energy saving mode.

#### 7. When releasing a workpiece, set the positioning force to 150%.

If the torque is too small when a workpiece is gripped in pushing operation, the product can have galling and become unable to release the workpiece.

#### 8. If the finger has galling due to operational setting error, etc., open and close the finger manually.

When the workpiece is removed by manual operation, check the position of the manual override of the product, and allow a necessary space. At that time, be careful not to apply excessive torque to the manual override, which causes breakage and malfunction.

#### 9. Self-lock mechanism

The product keeps a gripping force due to the self-lock mechanism in the lead screw. Also, it will not operate in opposite direction even when external force is applied during gripping a workpiece.

##### <Type of Stops, Cautions>

##### 1) All the power supplies to the controller are shut off.

When the power supply is turned on to restart operation, the controller will be initialized, and the product can drop a workpiece due to a motor magnetic pole detective operation. (It means that there is finger motions of partial strokes by the phase detection of motor after power supply is turned on.) Remove the workpiece before restarting operation.

##### 2) "EMG (stop)" of the CN1 of the controller is shut off.

##### When using the stop switch on the teaching box;

It is not necessary to remove a workpiece beforehand because a motor magnetic pole detective operation will not occur when the power supply is turned on to restart operation. An alarm can take place when operation is restarted from stop.

##### 3) "M24V (motor driving power supply)" of the CN1 of the controller is shut off.

It is not necessary to remove a workpiece beforehand because a motor magnetic pole detective operation will not occur when the power supply is turned on to restart operation.

An alarm can take place when stop is activated during operation or operation is restarted from stop.

#### 10. Return to origin

1) It is recommended to set the directions of return to origin and workpiece gripping to the same direction.

If they are set opposite, there can be backlash, which worsens the measurement accuracy significantly.

2) If the direction of return to origin is set to CW (Internal gripping); If the return to origin is performed with the product only, there can be significant deviation between different actuators. Use a workpiece to set return to origin.

3) If the return to origin is performed by using a workpiece; The stroke (operation range) will be shortened. Recheck the value of step data.

4) If basic parameters (Origin offset) are used; When the return to origin is set with [Origin offset], it is necessary to change the current position of the product. Recheck the value of step data.

#### 11. In pushing (gripping) operation, set the product to a position of at least 0.5 mm away from a workpiece. (This position is referred to as a pushing start position.)

If the product is set to the same position as a workpiece, the following alarms may be generated and operation may become unstable.

##### a. "Posn failed" alarm is generated.

The product cannot reach a pushing start position due to variation in the width of workpieces.

##### b. "Pushing ALM" alarm is generated.

The product is pushed back from a pushing start position after starting to push.

#### 12. When mounting the product, keep a 40 mm or longer diameter for bends in the cable.

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

## Maintenance

### Warning

#### 1. When the product is to be removed, check it has not been gripping a workpiece.

There is a risk of dropping the workpiece.

# Controller/Driver

Step Data Input Type .....Page 55

Gateway Unit .....Page 65



Step Motor (Servo/24 VDC)  
**Series LECP6**



**Series LEC-G**

Programless Type .....Page 68

Pulse Input Type .....Page 74



Step Motor (Servo/24 VDC)  
**Series LECP1**



Step Motor (Servo/24 VDC)  
**Series LECPA**

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

Step Motor (Servo/24 VDC)

LECP6

LEC-G

LECP1

LECPA


Specific Product Precautions

# Controller (Step Data Input Type) Step Motor (Servo/24 VDC) Series **LECP6**



## How to Order

**⚠ Caution**  
**[CE-compliant products]**  
 EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.  
**[UL-compliant products]**  
 When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

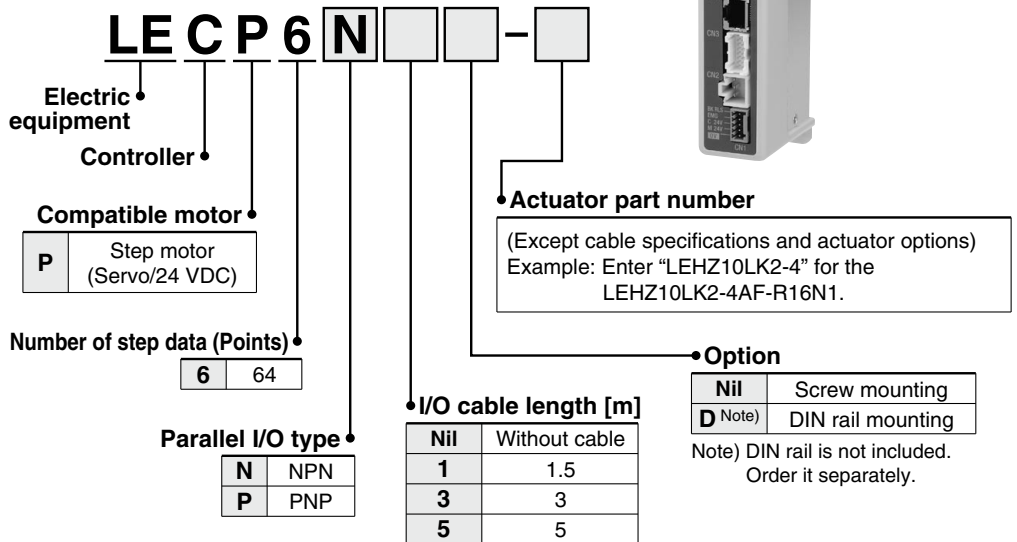


\* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

### The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- ① Check that actuator label for model number. This matches the controller.
- ② Check Parallel I/O configuration matches (NPN or PNP).

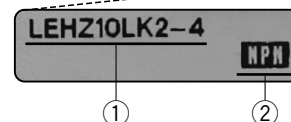

\* Refer to the operation manual for using the products. Please download it via our website. <http://www.smcworld.com>

## Specifications

### Basic Specifications

Item	Specifications
<b>Compatible motor</b>	Step motor (Servo/24 VDC)
<b>Power supply</b> <small>Note 1)</small>	Power voltage: 24 VDC $\pm 10\%$ Current consumption: 3 A (Peak 5 A) <small>Note 2)</small> [Including motor drive power, control power, stop, lock release]
<b>Parallel input</b>	11 inputs (Photo-coupler isolation)
<b>Parallel output</b>	13 outputs (Photo-coupler isolation)
<b>Compatible encoder</b>	Incremental A/B phase (800 pulse/rotation)
<b>Serial communication</b>	RS485 (Modbus protocol compliant)
<b>Memory</b>	EEPROM
<b>LED indicator</b>	LED (Green/Red) one of each
<b>Lock control</b>	Forced-lock release terminal <small>Note 3)</small>
<b>Cable length [m]</b>	I/O cable: 5 or less Actuator cable: 20 or less
<b>Cooling system</b>	Natural air cooling
<b>Operating temperature range [°C]</b>	0 to 40 (No freezing)
<b>Operating humidity range [%RH]</b>	90 or less (No condensation)
<b>Storage temperature range [°C]</b>	-10 to 60 (No freezing)
<b>Storage humidity range [%RH]</b>	90 or less (No condensation)
<b>Insulation resistance [MΩ]</b>	Between the housing and SG terminal 50 (500 VDC)
<b>Weight [g]</b>	150 (Screw mounting) 170 (DIN rail mounting)


Note 1) Do not use the power supply of "inrush current prevention type" for the controller power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


Note 3) Applicable to non-magnetizing lock.

## How to Mount

### a) Screw mounting (LECP6□□-□) (Installation with two M4 screws)

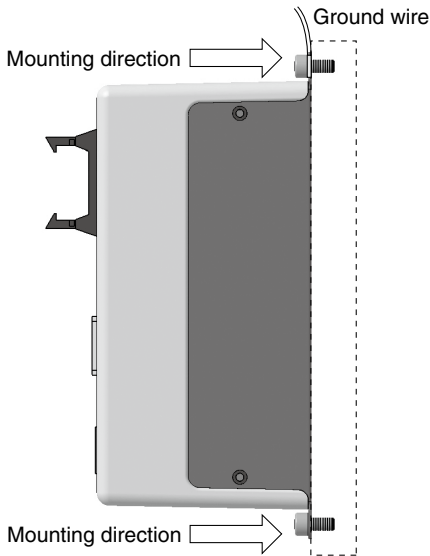


### b) DIN rail mounting (LECP6□□D-□) (Installation with the DIN rail)

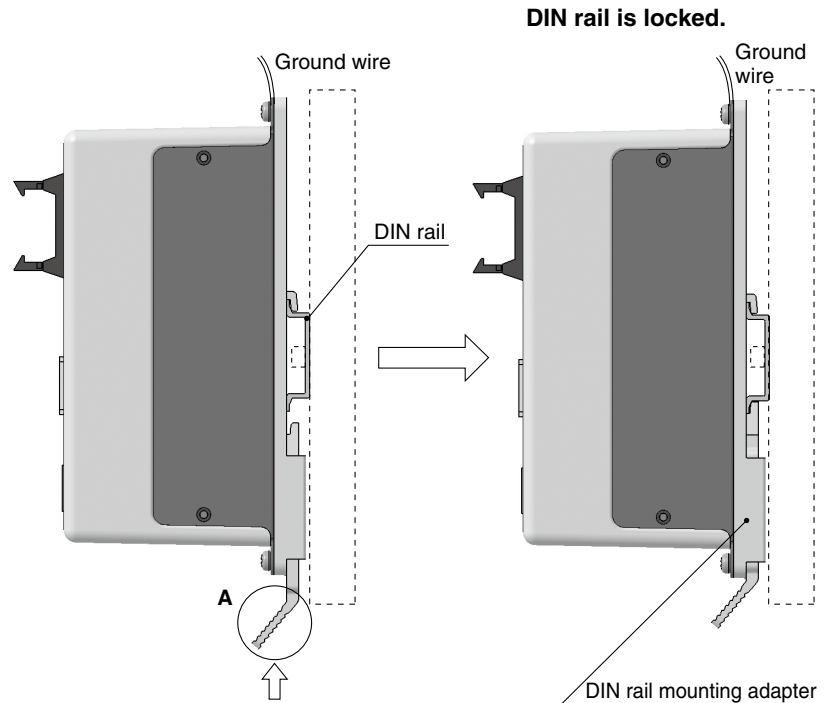

Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

### DIN rail AXT100-DR-□

\* For □, enter a number from the "No." line in the table below.  
Refer to the dimensions on page 57 for the mounting dimensions.

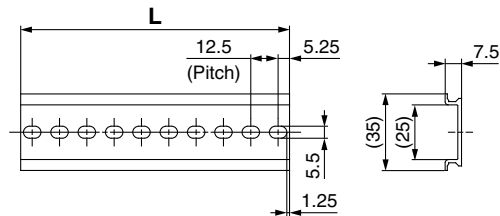

### L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
<b>L</b>	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
<b>L</b>	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

### DIN rail mounting adapter LEC-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterwards.

Model  
Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1


LECPA

Specific Product  
Precautions


# Series LECP6

## Dimensions

### a) Screw mounting (LECP6□□-□)

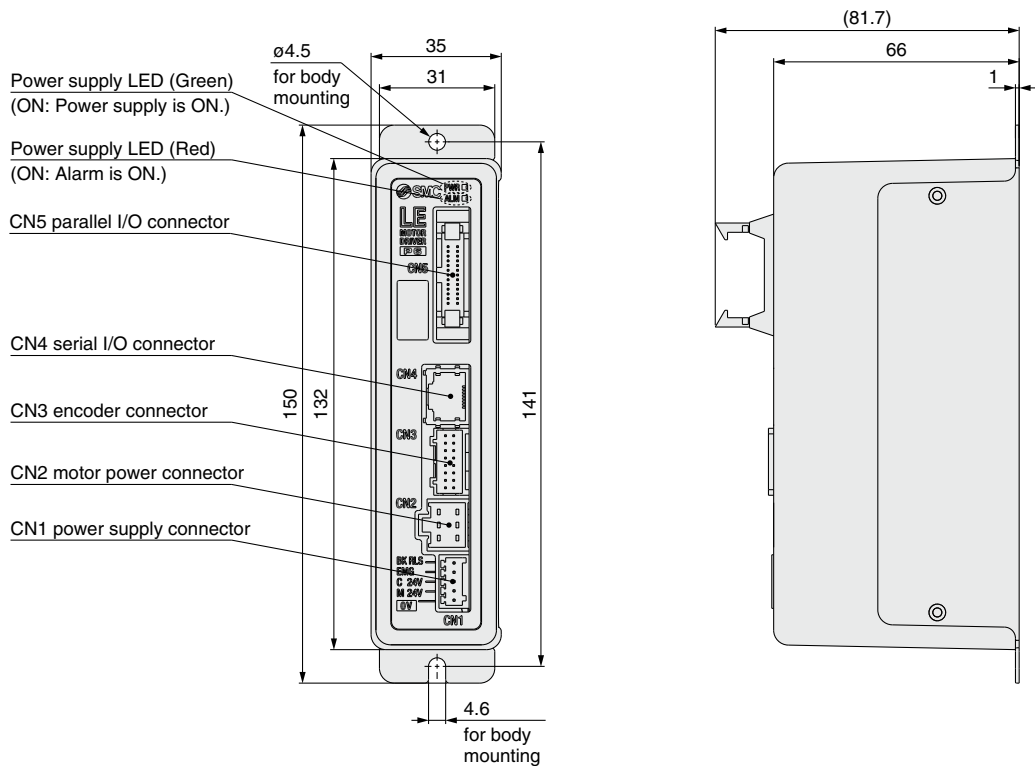

### b) DIN rail mounting (LECP6□□D-□)

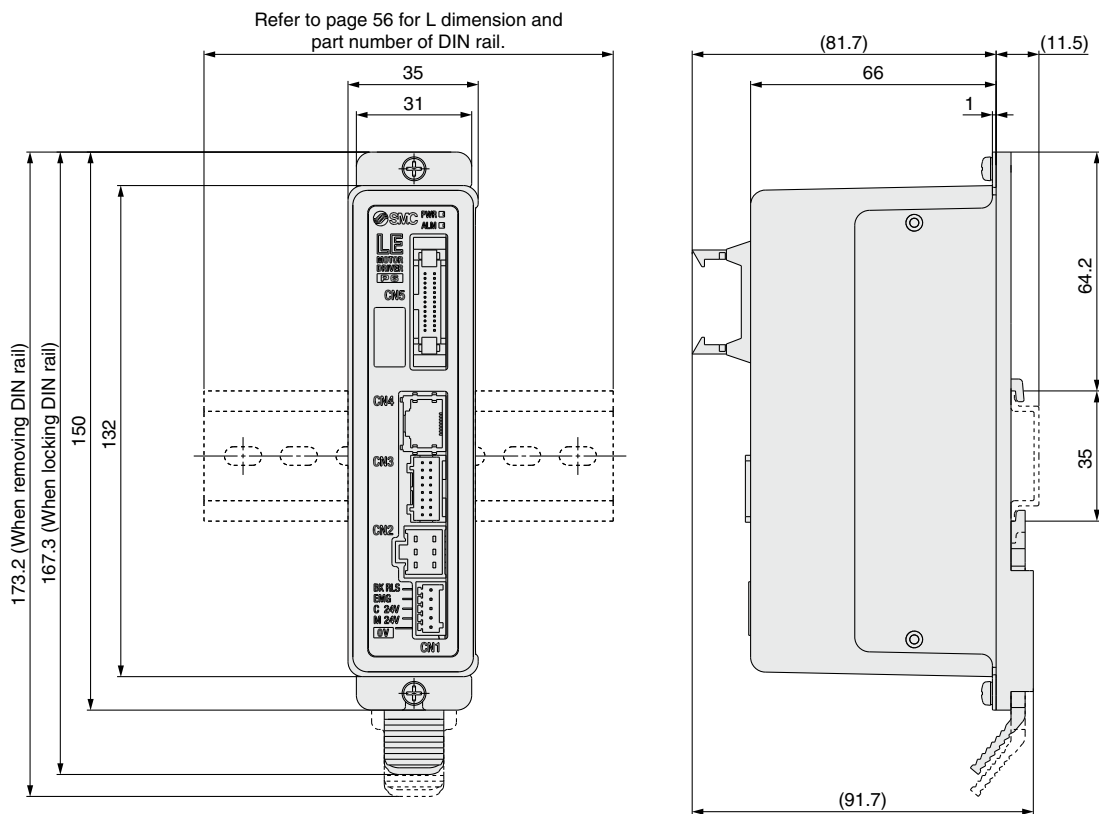




## Wiring Example 1

**Power Supply Connector: CN1** \* Power supply plug is an accessory.

Power supply plug for LECP6

**CN1 Power Supply Connector Terminal for LECP6** (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M24V terminal/C24V terminal/EMG terminal/BK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) supplied to the controller
C24V	Control power supply (+)	Control power supply (+) supplied to the controller
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

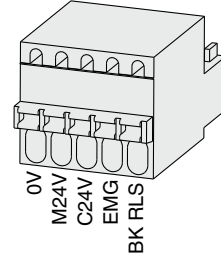


## Wiring Example 2


**Parallel I/O Connector: CN5** \* When you connect a PLC, etc., to the CN5 parallel I/O connector, please use the I/O cable (LEC-CN5-□).  
\* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

Wiring diagram

LECP6N□□-□ (NPN)

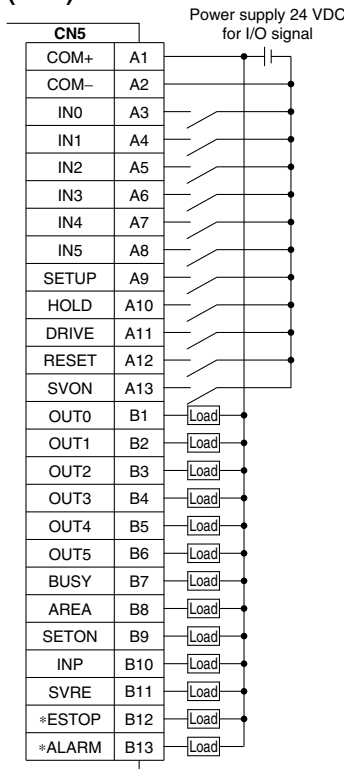

LECP6P□□-□ (PNP)

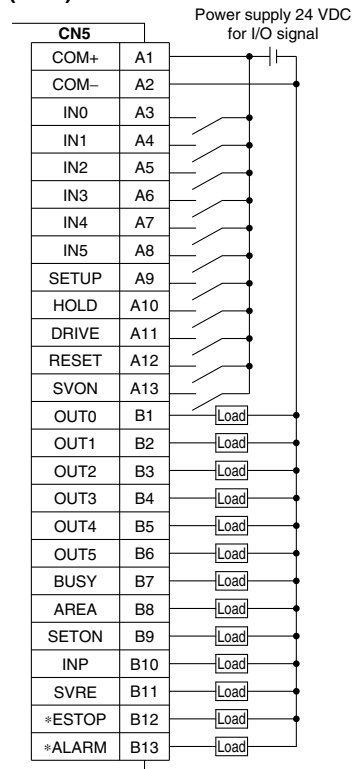

### Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
IN0 to IN5	Step data specified Bit No. (Input is instructed in the combination of IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Operation is temporarily stopped
DRIVE	Instruction to drive
RESET	Alarm reset and operation interruption
SVON	Servo ON instruction

### Output Signal

Name	Details
OUT0 to OUT5	Outputs the step data no. during operation
BUSY	Outputs when the actuator is moving
AREA	Outputs within the step data area output setting range
SETON	Outputs when returning to origin
INP	Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)
SVRE	Outputs when servo is on
*ESTOP (Note)	Not output when EMG stop is instructed
*ALARM (Note)	Not output when alarm is generated

Note) Signal of negative-logic circuit ON (N.C.)

Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA


Specific Product Precautions

## Step Data Setting

### 1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

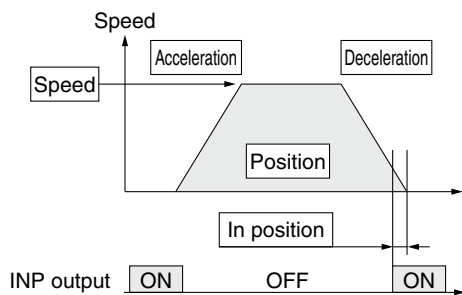

- ⊙: Need to be set.
- : Need to be adjusted as required.
- : Setting is not required.


#### Step Data (Positioning)

Necessity	Item	Details
⊙	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
⊙	Speed	Transfer speed to the target position
⊙	Position	Target position
○	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
○	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
⊙	Pushing force	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)
—	Trigger LV	Setting is not required.
—	Pushing speed	Setting is not required.
○	Moving force	Max. torque during the positioning operation (No specific change is required.)
○	Area 1, Area 2	Condition that turns on the AREA output signal.
○	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.

### 2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

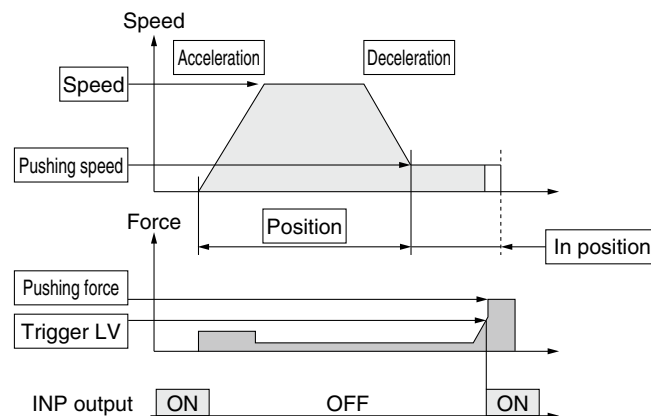


- ⊙: Need to be set.
- : Need to be adjusted as required.

#### Step Data (Pushing)

Necessity	Item	Details
⊙	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
⊙	Speed	Transfer speed to the pushing start position
⊙	Position	Pushing start position
○	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
○	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
⊙	Pushing force	Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator.
⊙	Trigger LV	Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less.
○	Pushing speed	Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator.
○	Moving force	Max. torque during the positioning operation (No specific change is required.)
○	Area 1, Area 2	Condition that turns on the AREA output signal.
⊙	In position	Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on.


## Signal Timing

### Return to Origin

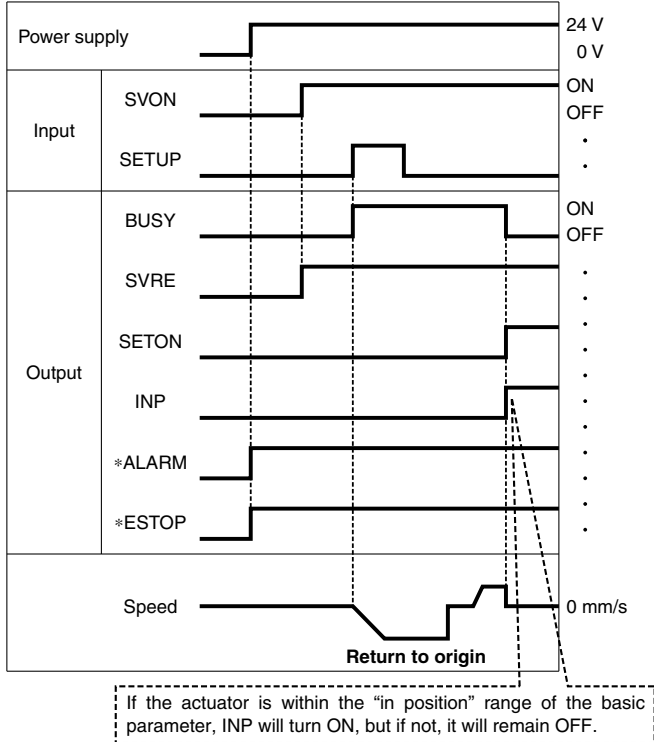


\*"ALARM" and "\*ESTOP" are expressed as negative-logic circuit.

### Positioning Operation

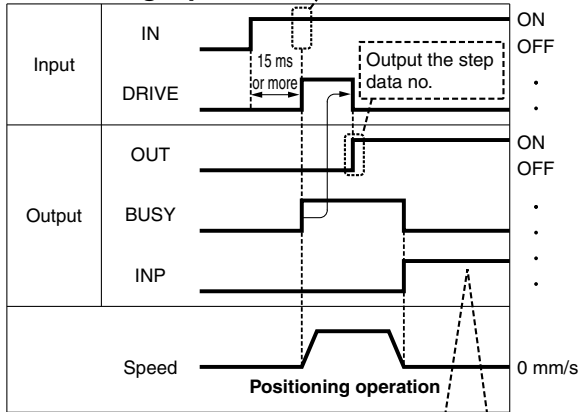


\* "OUT" is output when "DRIVE" is changed from ON to OFF.  
(When power supply is applied, "DRIVE" or "RESET" is turned ON or "\*ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

### HOLD

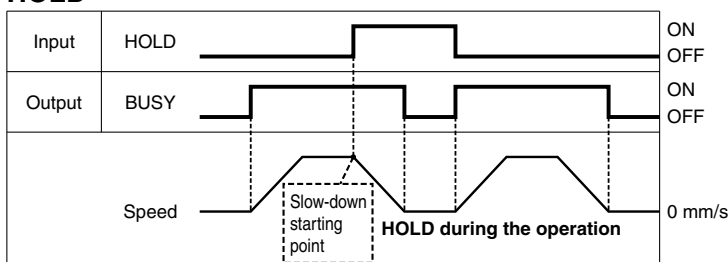


\* When the actuator is in the positioning range in the pushing operation, it does not stop even if HOLD signal is input.

### Pushing Operation

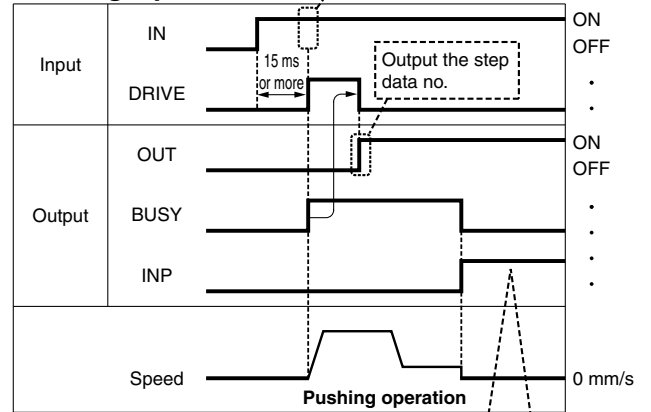

### Reset

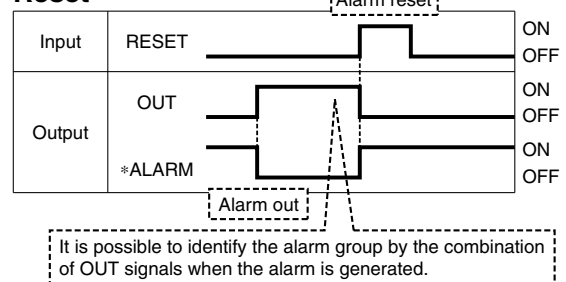

\* "ALARM" is expressed as negative-logic circuit.

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

# Series LECP6

## Options: Actuator Cable, I/O Cable

### Actuator cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

\* Produced upon receipt of order  
(Robotic cable only)


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-<sup>1</sup>/<sub>5</sub> / Cable length: 1.5 m, 3 m, 5 m

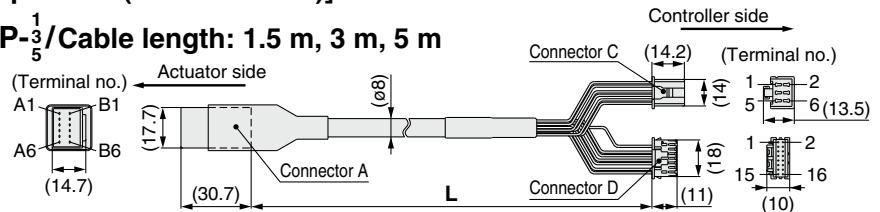

LE-CP-<sup>8B</sup>/<sub>AC</sub> / Cable length: 8 m, 10 m, 15 m, 20 m  
(\* Produced upon receipt of order)

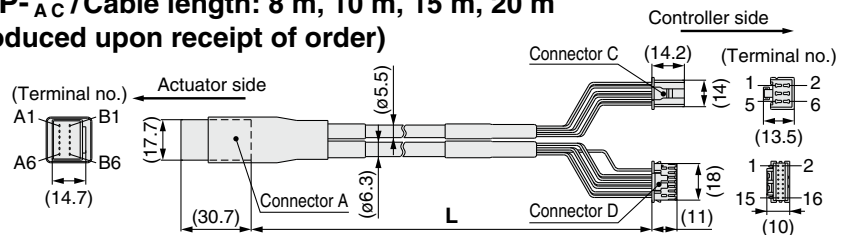

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
$\bar{A}$	A-1	Red	1
B	B-2	Orange	6
$\bar{B}$	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
$\bar{A}$	B-5	Red	7
A	A-5	Black	6
$\bar{B}$	B-6	Orange	9
B	A-6	Black	8
		—	3


### I/O cable

LEC-CN5-1

Cable length (L) [m]

1	1.5
3	3
5	5

\* Conductor size: AWG28

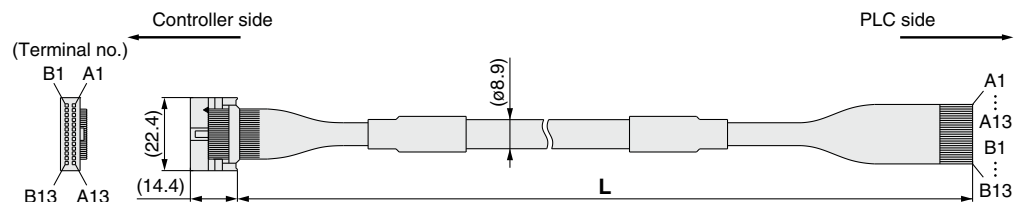

Connector pin No.	Insulation color	Dot mark	Dot color
A1	Light brown	■	Black
A2	Light brown	■	Red
A3	Yellow	■	Black
A4	Yellow	■	Red
A5	Light green	■	Black
A6	Light green	■	Red
A7	Gray	■	Black
A8	Gray	■	Red
A9	White	■	Black
A10	White	■	Red
A11	Light brown	■ ■	Black
A12	Light brown	■ ■	Red
A13	Yellow	■ ■	Black


Connector pin No.	Insulation color	Dot mark	Dot color
B1	Yellow	■ ■	Red
B2	Light green	■ ■	Black
B3	Light green	■ ■	Red
B4	Gray	■ ■	Black
B5	Gray	■ ■	Red
B6	White	■ ■	Black
B7	White	■ ■	Red
B8	Light brown	■ ■ ■	Black
B9	Light brown	■ ■ ■	Red
B10	Yellow	■ ■ ■	Black
B11	Yellow	■ ■ ■	Red
B12	Light green	■ ■ ■	Black
B13	Light green	■ ■ ■	Red
—		Shield	

# Controller Setting Kit/LEC-W2

## How to Order

**LEC-W2**

Controller setting kit  
(Japanese and English are available.)

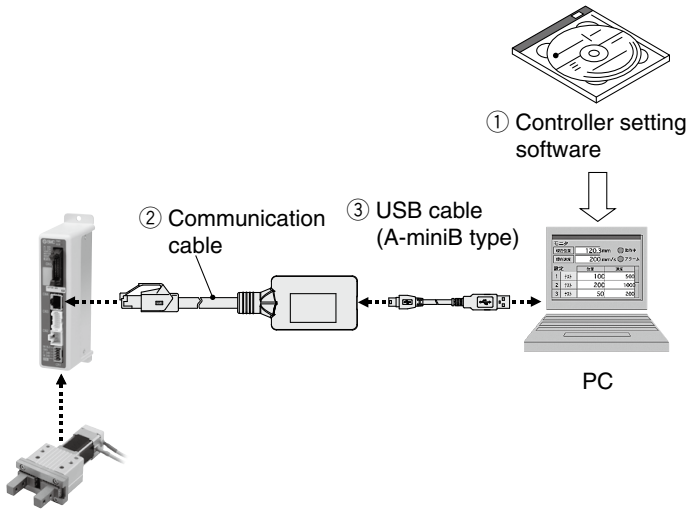

## Contents

- ① Controller setting software (CD-ROM)
- ② Communication cable (With conversion unit)
- ③ USB cable  
(Cable between the PC and the conversion unit)

## Compatible Controller/Driver

Step motor controller (Servo/24 VDC) Series **LECP6**  
 Step motor driver (Pulse input type) Series **LECPA**


## Hardware Requirements

OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

\* Windows® and Windows®7 are registered trademarks of Microsoft Corporation in the United States.  
 \* Refer to SMC website for version update information, <http://www.smcworld.com>

## Screen Example


Easy mode screen example

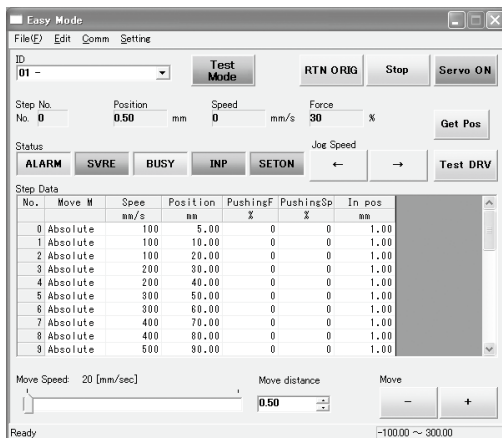

### Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and testing of the drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

Normal mode screen example

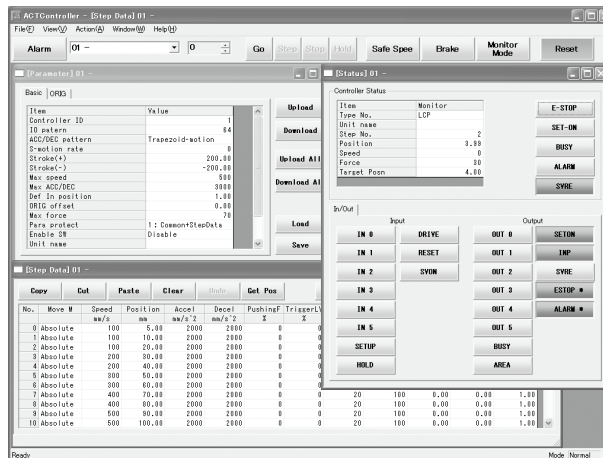

### Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.



## How to Order

**LEC-T1-3 J G**

Teaching box

Cable length [m]  
3 3

Initial language

J	Japanese
E	English

\* The displayed language can be changed to English or Japanese.

Enable switch

Nil	None
S	Equipped with enable switch

\* Interlock switch for jog and test function

Stop switch

G	Equipped with stop switch
---	---------------------------

### Standard functions

- Chinese character display
- Stop switch is provided.

### Option

- Enable switch is provided.

## Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

### [CE-compliant products]

The EMC compliance of the teaching box was tested with the LECP6 series step motor controller (servo/24 VDC) and an applicable actuator.


### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

## Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor


### Menu Operations Flowchart

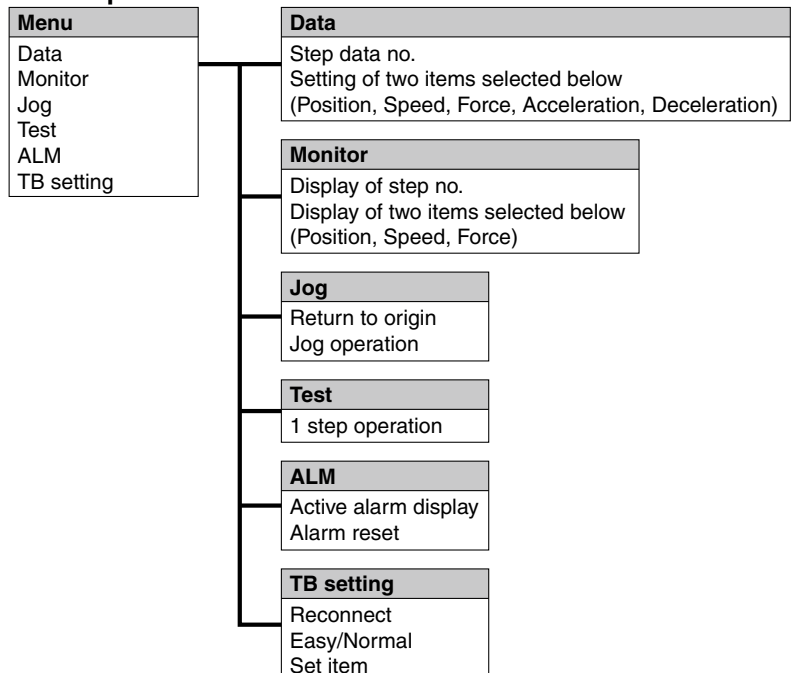


**Normal Mode**

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	<ul style="list-style-type: none"> <li>• Jog operation/Constant rate movement</li> <li>• Return to origin</li> <li>• Test drive (Specify a maximum of 5 step data and operate.)</li> <li>• Forced output (Forced signal output, Forced terminal output)</li> </ul>
Monitor	<ul style="list-style-type: none"> <li>• Drive monitor</li> <li>• Output signal monitor</li> <li>• Input signal monitor</li> <li>• Output terminal monitor</li> <li>• Input terminal monitor</li> </ul>
ALM	<ul style="list-style-type: none"> <li>• Active alarm display (Alarm reset)</li> <li>• Alarm log record display</li> </ul>
File	<ul style="list-style-type: none"> <li>• Data saving Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file).</li> <li>• Load to controller Loads the data which is saved in the teaching box to the controller which is being used for communication.</li> <li>• Delete the saved data.</li> </ul>
TB setting	<ul style="list-style-type: none"> <li>• Display setting (Easy/Normal mode)</li> <li>• Language setting (Japanese/English)</li> <li>• Backlight setting</li> <li>• LCD contrast setting</li> <li>• Beep sound setting</li> <li>• Max. connection axis</li> <li>• Distance unit (mm/inch)</li> </ul>
Reconnect	• Reconnection of axis

**Menu Operations Flowchart**

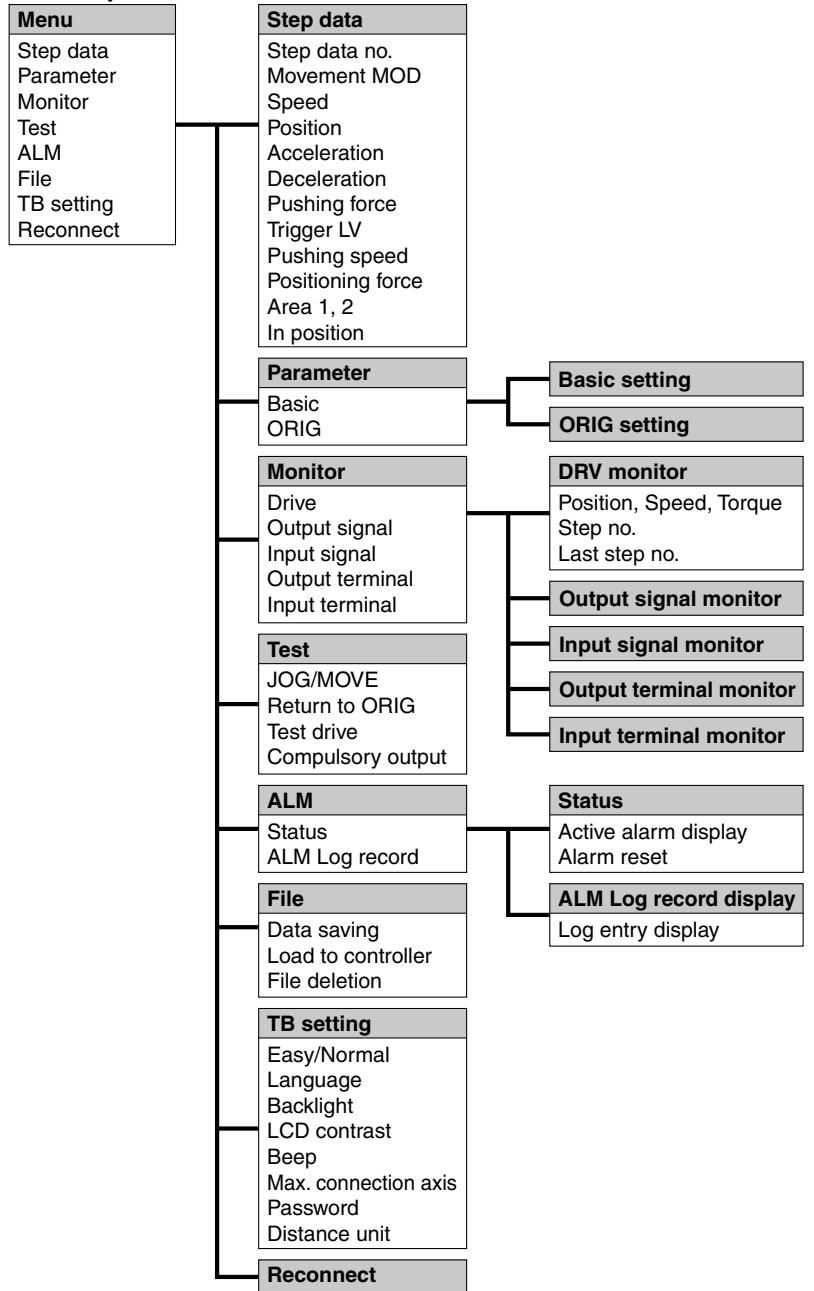

**Dimensions**

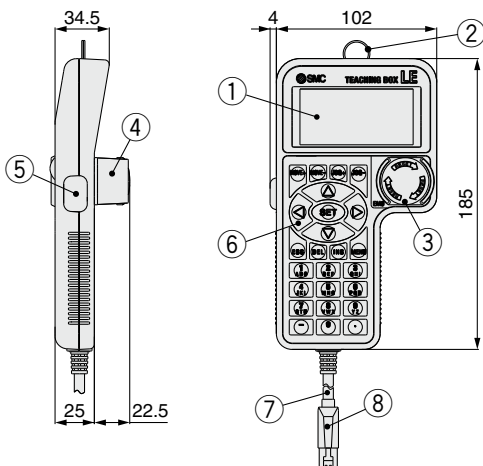


No.	Description	Function
1	<b>LCD</b>	A screen of liquid crystal display (with backlight)
2	<b>Ring</b>	A ring for hanging the teaching box
3	<b>Stop switch</b>	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	<b>Stop switch guard</b>	A guard for the stop switch
5	<b>Enable switch (Option)</b>	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	<b>Key switch</b>	Switch for each input
7	<b>Cable</b>	Length: 3 meters
8	<b>Connector</b>	A connector connected to CN4 of the controller

Model Selection  
 LEHZ  
 LEHZJ  
 Step Motor (Servo24 VDC)  
 LEHF  
 LEHS  
 LEC6  
 LEC-G  
 LEC1  
 LECPA  
 Specific Product Precautions

# Gateway Unit

# Series LEC-G

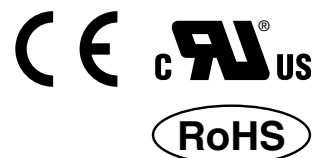

## How to Order

**⚠ Caution**  
**[CE-compliant products]**  
 EMC compliance was tested by combining the electric actuator LE series and the controller LEC series.  
 The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.  
**[UL-compliant products]**  
 When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

### Gateway unit LEC-G MJ2

#### Applicable Fieldbus protocols

<b>MJ2</b>	CC-Link Ver. 2.0
<b>DN1</b>	DeviceNet™
<b>PR1</b>	PROFIBUS DP
<b>EN1</b>	EtherNet/IP™

#### Mounting

<b>Nil</b>	Screw mounting
<b>D (Note)</b>	DIN rail mounting

Note) DIN rail is not included.  
Order it separately.




### Cable LEC-CG 1-L

#### Cable type

<b>1</b>	Communication cable
<b>2</b>	Cable between branches

#### Cable length

<b>K</b>	0.3 m
<b>L</b>	0.5 m
<b>1</b>	1 m

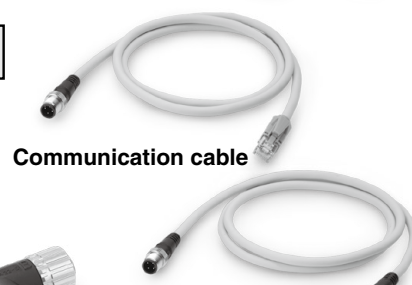

### Branch connector LEC-CGD

#### Branch connector



#### Cable between branches

### Terminating resistor LEC-CGR

## Specifications

Model		LEC-GMJ2□	LEC-GDN1□	LEC-GPR1□	LEC-GEN1□	
<b>Communication specifications</b>	<b>Applicable system</b>	<b>Fieldbus Version</b> Note 1)	CC-Link Ver. 2.0	DeviceNet™ Release 2.0	PROFIBUS DP V1	EtherNet/IP™ Release 1.0
	<b>Communication speed [bps]</b>		156 k/625 k/2.5 M /5 M/10 M	125 k/250 k/500 k	9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 M	10 M/100 M
	<b>Configuration file</b> Note 2)		—	EDS file	GSD file	EDS file
	<b>I/O occupation area</b>		4 stations occupied (8 times setting) Input 896 points 108 words Output 896 points 108 words	Input 200 bytes Output 200 bytes	Input 57 words Output 57 words	Input 256 bytes Output 256 bytes
	<b>Power supply for communication</b>	<b>Power supply voltage [V]</b> Note 6)	—	11 to 25 VDC	—	—
		<b>Internal current consumption [mA]</b>	—	100	—	—
	<b>Communication connector specifications</b>		Connector (Accessory)	Connector (Accessory)	D-sub	RJ45
<b>Terminating resistor</b>		Not included	Not included	Not included	Not included	
<b>Power supply voltage [V]</b> Note 6)		24 VDC±10%				
<b>Current consumption [mA]</b>	<b>Not connected to teaching box</b>	200				
	<b>Connected to teaching box</b>	300				
<b>EMG output terminal</b>		30 VDC 1A				
<b>Controller specifications</b>	<b>Applicable controllers</b>	Series LECP6, Series LECA6				
	<b>Communication speed [bps]</b> Note 3)	115.2 k/230.4 k				
	<b>Max. number of connectable controllers</b> Note 4)	12	8 Note 5)	5	12	
<b>Accessories</b>		Power supply connector, communication connector		Power supply connector		
<b>Operating temperature range [°C]</b>		0 to 40 (No freezing)				
<b>Operating humidity range [%RH]</b>		90 or less (No condensation)				
<b>Storage temperature range [°C]</b>		-10 to 60 (No freezing)				
<b>Storage humidity range [%RH]</b>		90 or less (No condensation)				
<b>Weight [g]</b>		200 (Screw mounting), 220 (DIN rail mounting)				

Note 1) Please note that the version is subject to change.

Note 2) Each file can be downloaded from the SMC website, <http://www.smcworld.com>

Note 3) When using a teaching box (LEC-T1-□), set the communication speed to 115.2 kbps.

Note 4) A communication response time for 1 controller is approximately 30 ms.

Refer to "Communication Response Time Guideline" for response times when several controllers are connected.


Note 5) For step data input, up to 12 controllers connectable.

Note 6) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.



## Communication Response Time Guideline

Response time between gateway unit and controllers depends on the number of controllers connected to the gateway unit. For response time, refer to the graph below.

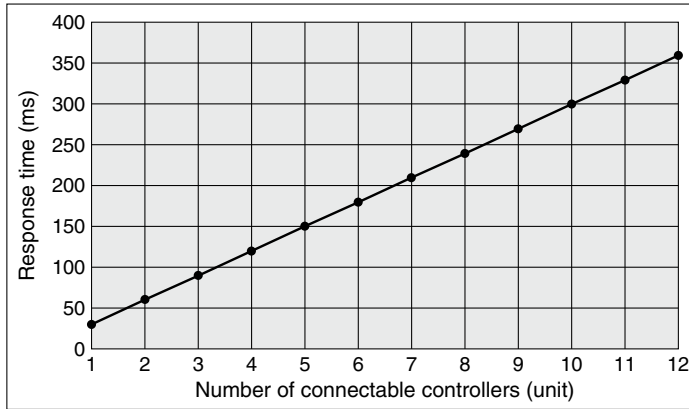


\* This graph shows delay times between gateway unit and controllers. Fieldbus network delay time is not included.


## Dimensions

### Screw mounting (LEC-G□□)


#### Applicable Fieldbus protocol: CC-Link Ver. 2.0

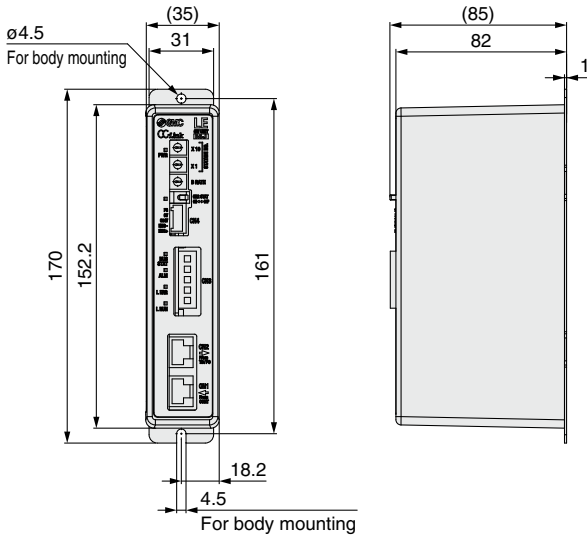


#### Applicable Fieldbus protocol: DeviceNet™

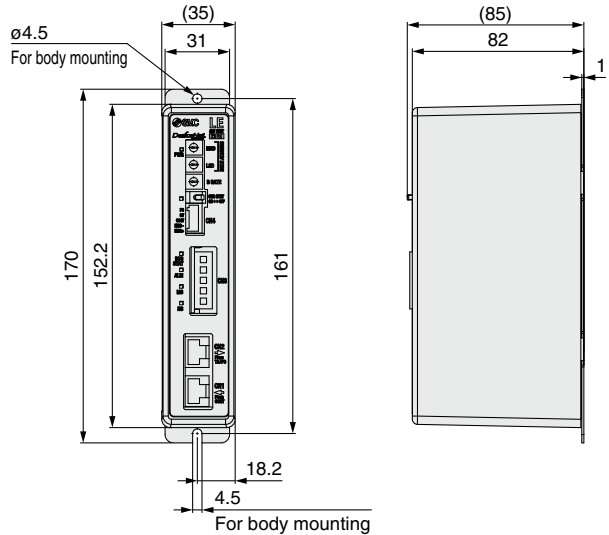

#### Applicable Fieldbus protocol: PROFIBUS DP

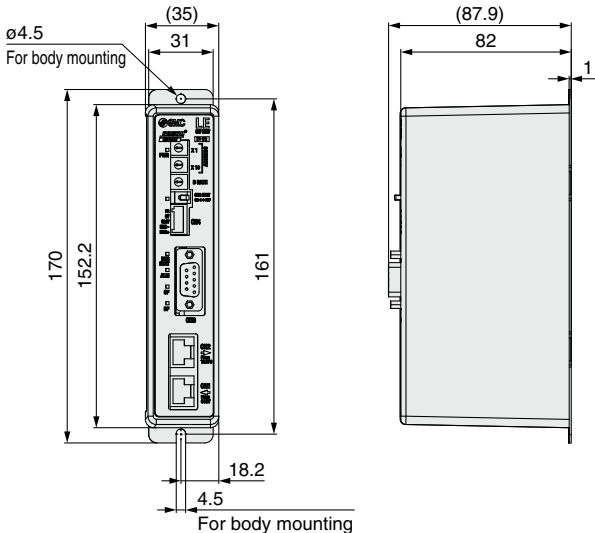

#### Applicable Fieldbus protocol: EtherNet/IP™

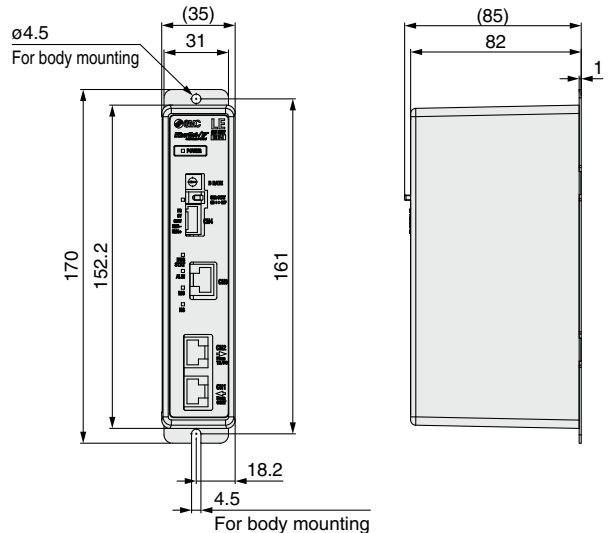


■ Trademark DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.

# Series LEC-G


## Dimensions

### DIN rail mounting (LEC-G□□□D)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

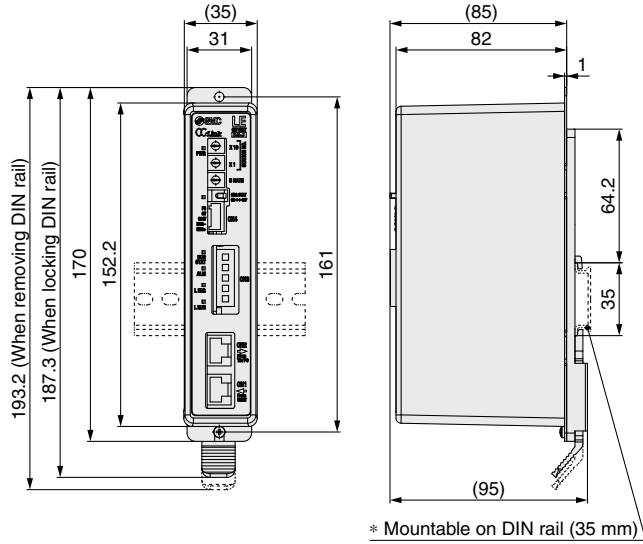


Applicable Fieldbus protocol: DeviceNet™

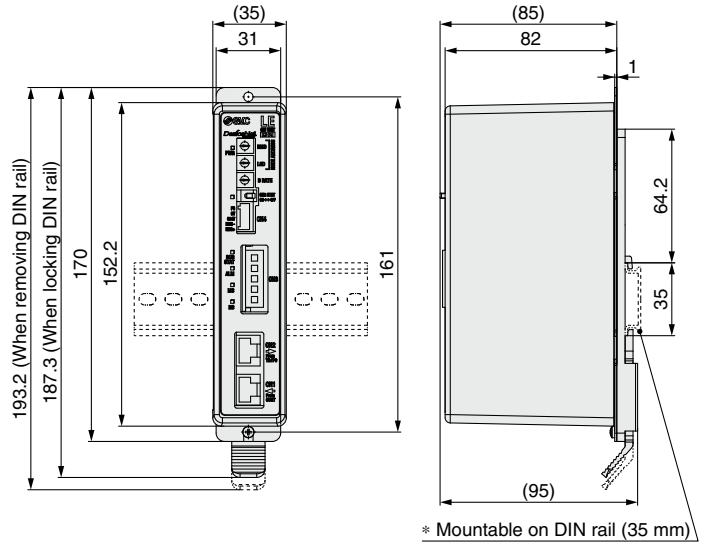

Applicable Fieldbus protocol: PROFIBUS DP

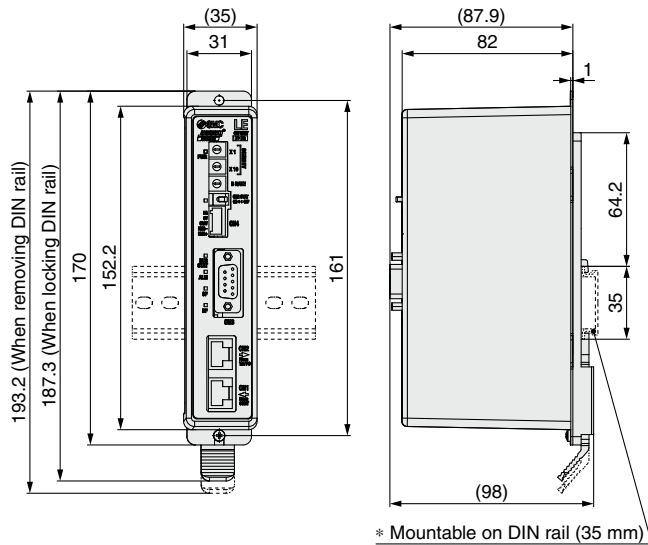


Applicable Fieldbus protocol: EtherNet/IP™

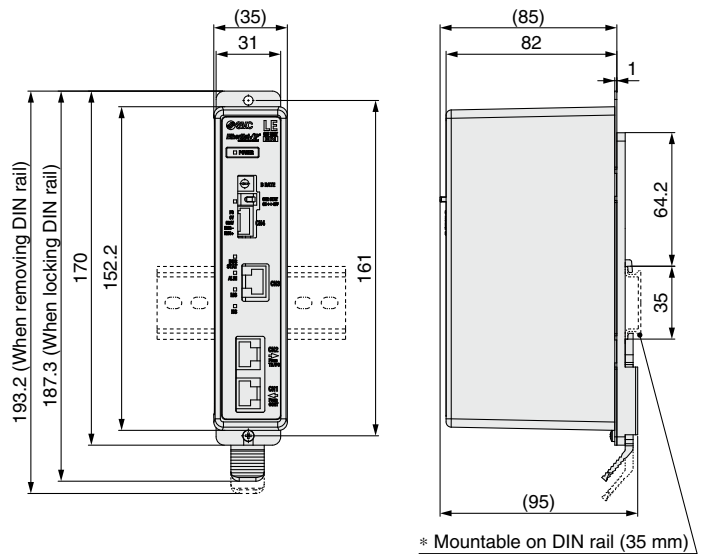

### DIN rail

#### AXT100-DR-□

\* For □, enter a number from the "No." line in the table below. Refer to the dimensions above for the mounting dimensions.

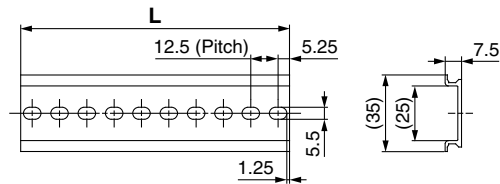

#### L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

■Trademark DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.

# Programless Controller Series **LECP1**



Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

## How to Order

**LECP1N1** - **LEHZ10LK2-4**

- Controller**
- Compatible motor**
  - P** Step motor (Servo/24 VDC)
- Number of step data (Points)**
  - 1** 14 (Programless)
- Parallel I/O type**
  - N** NPN
  - P** PNP
- Option**
  - Nil** Screw mounting
  - D** (Note) DIN rail mounting

Note) DIN rail is not included. Order it separately.
- I/O cable length [m]**

Nil	Without cable
<b>1</b>	1.5
<b>3</b>	3
<b>5</b>	5
- Actuator part number**

(Except cable specifications and actuator options)  
Example: Enter "LEHZ10LK2-4" for the LEHZ10LK2-4AF-R11N1.

\* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

**Caution**  
[CE-compliant products]  
EMC compliance was tested by combining the electric actuator LEH series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]  
When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

**The controller is sold as single unit after the compatible actuator is set.**  
Confirm that the combination of the controller and the actuator is correct.

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

## Specifications

### Basic Specifications

Item	LECP1
Compatible motor	Step motor (Servo/24 VDC)
Power supply <sup>Note 1)</sup>	Power supply voltage: 24 VDC ±10%, Max. current consumption: 3 A (Peak 5 A) <sup>Note 2)</sup> [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	14 points (Position number 1 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Serial communication	RS485 (Modbus protocol compliant)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
7-segment LED display <sup>Note 3)</sup>	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal <sup>Note 4)</sup>
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.

Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.




Decimal display      10      11      12      13      14      15  
Hexadecimal display      A      b      c      d      E      F

Note 4) Applicable to non-magnetizing lock.

# Series LECP1

## Controller Details

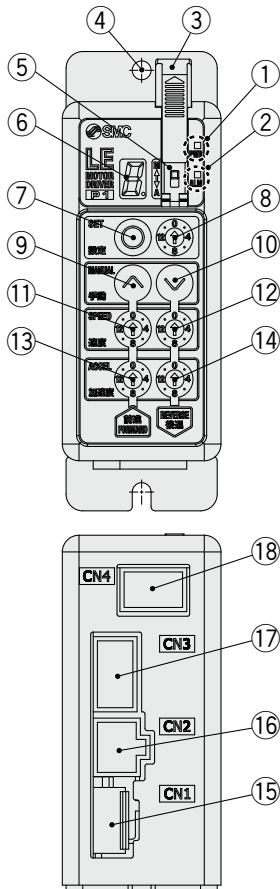


No.	Display	Description	Details
①	<b>PWR</b>	Power supply LED	Power supply ON/Servo ON : Green turns on Power supply ON/Servo OFF: Green flashes
②	<b>ALM</b>	Alarm LED	With alarm : Red turns on Parameter setting : Red flashes
③	—	Cover	Change and protection of the mode switch (Close the cover after changing switch)
④	—	FG	Frame ground (Tighten the bolt with the nut when mounting the controller. Connect the ground wire.)
⑤	—	Mode switch	Switch the mode between manual and auto.
⑥	—	7-segment LED	Stop position, the value set by ⑧ and alarm information are displayed.
⑦	<b>SET</b>	Set button	Decide the settings or drive operation in Manual mode.
⑧	—	Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).
⑨	<b>MANUAL</b>	Manual forward button	Perform forward jog and inching.
⑩		Manual reverse button	Perform reverse jog and inching.
⑪	<b>SPEED</b>	Forward speed switch	16 forward speeds are available.
⑫		Reverse speed switch	16 reverse speeds are available.
⑬	<b>ACCEL</b>	Forward acceleration switch	16 forward acceleration steps are available.
⑭		Reverse acceleration switch	16 reverse acceleration steps are available.
⑮	<b>CN1</b>	Power supply connector	Connect the power supply cable.
⑯	<b>CN2</b>	Motor connector	Connect the motor connector.
⑰	<b>CN3</b>	Encoder connector	Connect the encoder connector.
⑱	<b>CN4</b>	I/O connector	Connect I/O cable.

## How to Mount

Controller mounting shown below.


### 1. Mounting screw (LECP1□□-□)

(Installation with two M4 screws)

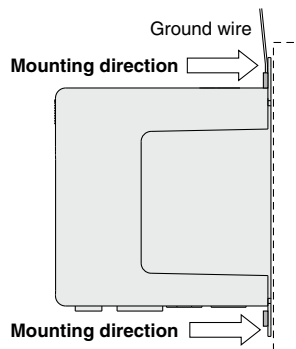

### 2. Grounding

Tighten the bolt with the nut when mounting the ground wire as shown below.

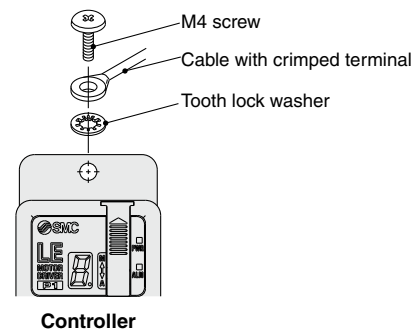


### ⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

#### Size

End width **L**: 2.0 to 2.4 [mm]  
End thickness **W**: 0.5 to 0.6 [mm]


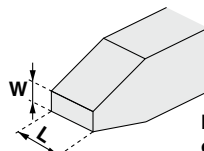


Magnified view of the end of the screwdriver

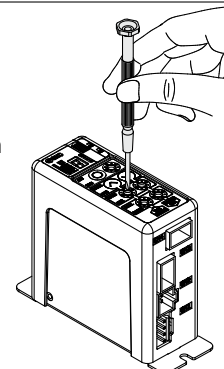


**Dimensions**

**Screw mounting (LEC□1□□-□)**

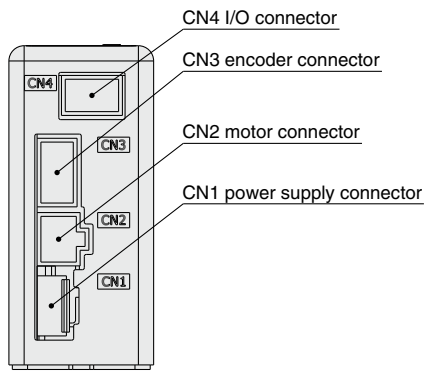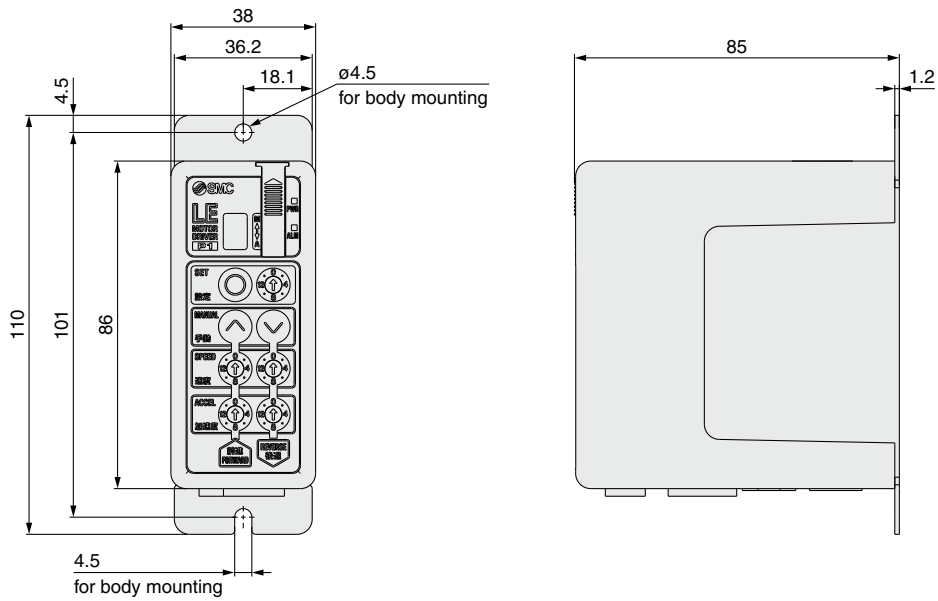

**DIN rail mounting (LEC□1□□D-□)**

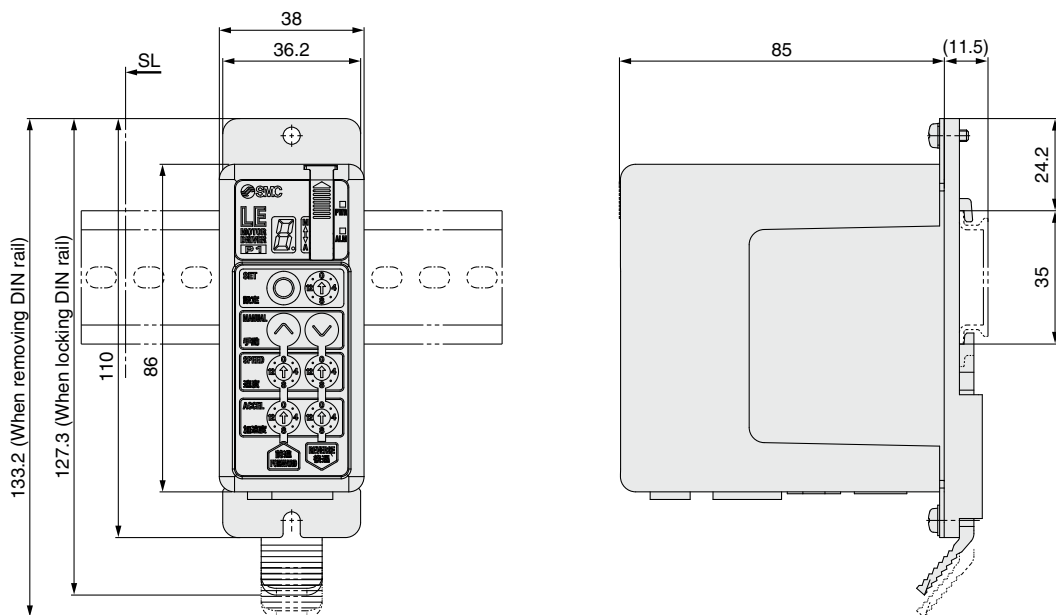

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

Step Motor (Servo/24 VDC)

# Series LECP1


## Wiring Example 1

**Power Supply Connector: CN1** \* When you connect a CN1 power supply connector, please use the power supply cable (LEC-CK1-1).  
\* Power supply cable (LEC-CK1-1) is an accessory.

### CN1 Power Supply Connector Terminal for LECP1

Terminal name	Cable color	Function	Details
0V	Blue	Common supply (-)	M24V terminal/C24V terminal/BK RLS terminal are common (-).
M24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller
C24V	Brown	Control power supply (+)	Control power supply (+) supplied to the controller
BK RLS	Black	Lock release (+)	Input (+) for releasing the lock


### Power supply cable for LECP1 (LEC-CK1-1)




## Wiring Example 2

**Parallel I/O Connector: CN4** \* When you connect a PLC, etc., to the CN4 parallel I/O connector, please use the I/O cable (LEC-CK4-□).  
\* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

### ■NPN

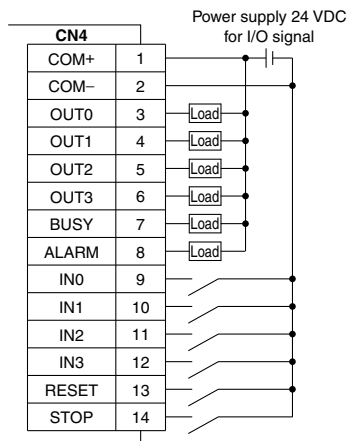

### ■PNP

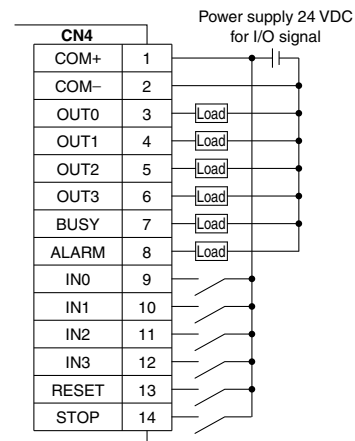

### Input Signal

Name	Details								
COM+	Connects the power supply 24 V for input/output signal								
COM-	Connects the power supply 0 V for input/output signal								
IN0 to IN3	<ul style="list-style-type: none"> <li>Instruction to drive (input as a combination of IN0 to IN3)</li> <li>Instruction to return to origin (IN0 to IN3 all ON simultaneously)</li> </ul> Example - (instruction to drive for position no. 5) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>IN3</th> <th>IN2</th> <th>IN1</th> <th>IN0</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> </tbody> </table>	IN3	IN2	IN1	IN0	OFF	ON	OFF	ON
IN3	IN2	IN1	IN0						
OFF	ON	OFF	ON						
RESET	Alarm reset and operation interruption During operation: deceleration stop from position at which signal is input (servo ON maintained) While alarm is active: alarm reset								
STOP	Instruction to stop (after maximum deceleration stop, servo OFF)								

### Output Signal

Name	Details								
OUT0 to OUT3	Turns on when the positioning or pushing is completed. (Output is instructed in the combination of OUT0 to 3.) Example - (operation complete for position no. 3) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>OUT3</th> <th>OUT2</th> <th>OUT1</th> <th>OUT0</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> </tbody> </table>	OUT3	OUT2	OUT1	OUT0	OFF	OFF	ON	ON
OUT3	OUT2	OUT1	OUT0						
OFF	OFF	ON	ON						
BUSY	Outputs when the actuator is moving								
*ALARM (Note)	Not output when alarm is active or servo OFF								

Note) Signal of negative-logic circuit (N.C.)

### Input Signal [IN0 - IN3] Position Number Chart ○: OFF ●: ON


Position number	IN3	IN2	IN1	IN0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●

### Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON

Position number	OUT3	OUT2	OUT1	OUT0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●


## Signal Timing

### (1) Return to Origin

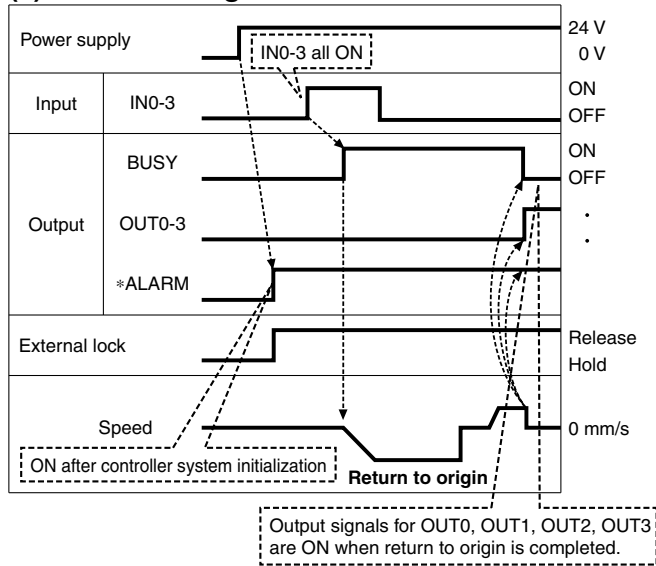


\* \*ALARM" is expressed as negative-logic circuit.


### (2) Positioning Operation

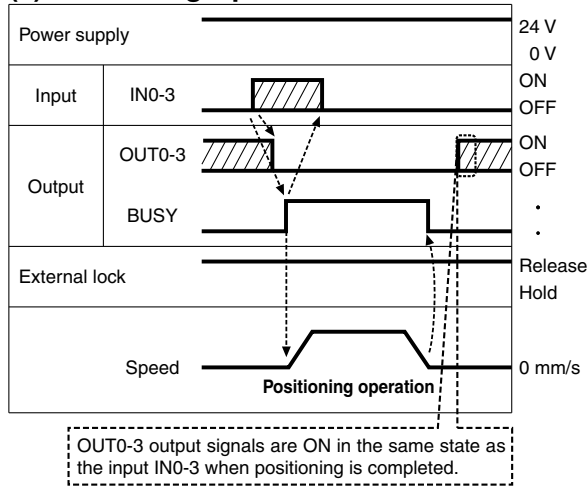


### (4) Stop by the STOP Signal

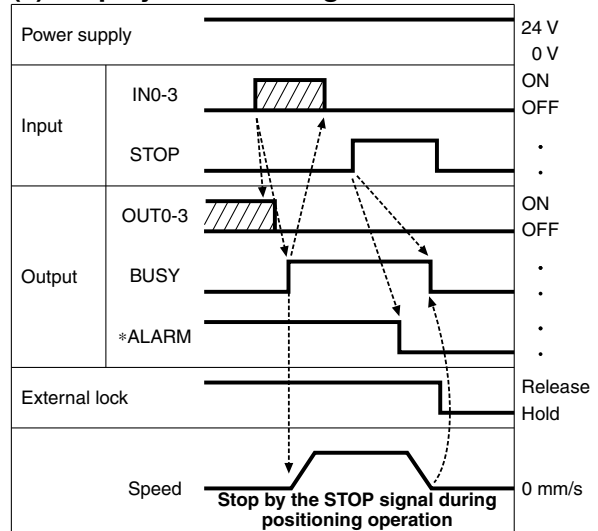

### (3) Cut-off Stop (Reset Stop)

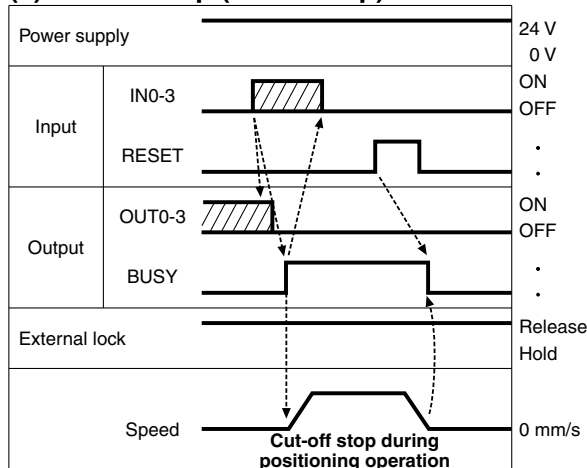

### (5) Alarm Reset

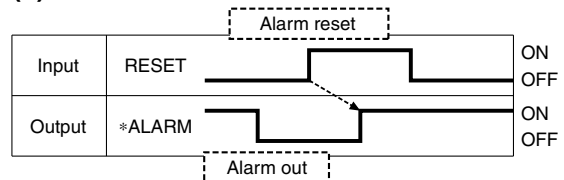

\* \*ALARM" is expressed as negative-logic circuit.

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

# Series LECP1

## Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

\* Produced upon receipt of order (Robotic cable only)


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-<sup>1</sup>/<sub>5</sub>/Cable length: 1.5 m, 3 m, 5 m

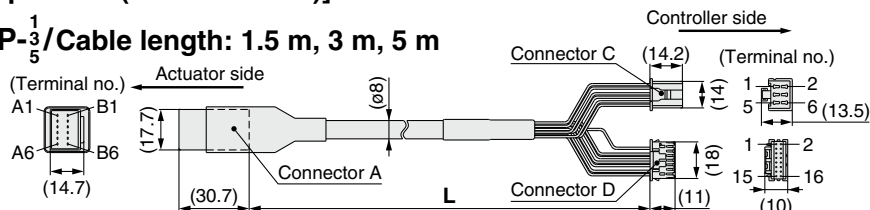

LE-CP-<sup>8B</sup>/<sub>AC</sub>/Cable length: 8 m, 10 m, 15 m, 20 m  
(\* Produced upon receipt of order)

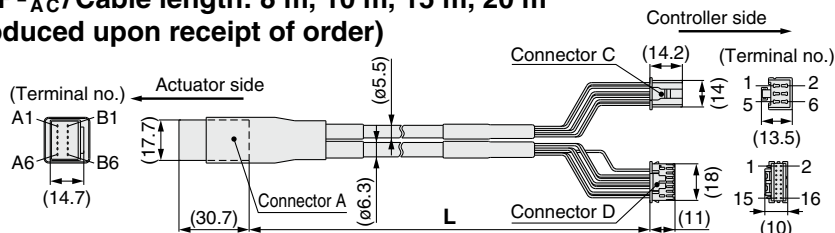


Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
		-	3

## Options

[Power supply cable]

LEC-CK1-1

Terminal name	Covered color	Function
0V	Blue	Common supply (-)
M24V	White	Motor power supply (+)
C24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)

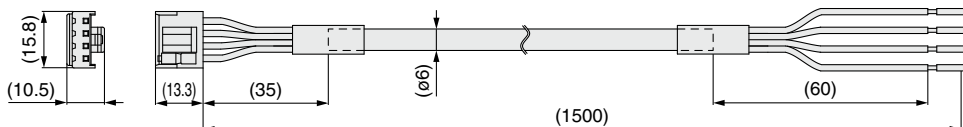


\* Conductor size: AWG20

[I/O cable]

LEC-CK4-

Cable length (L) [m]

1	1.5
3	3
5	5

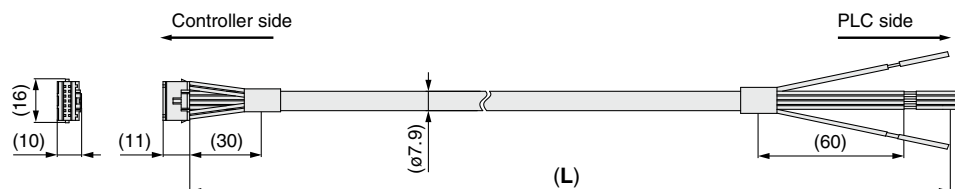

\* Conductor size: AWG26

Terminal no.	Insulation color	Dot mark	Dot color	Function
1	Light brown	■	Black	COM+
2	Light brown	■	Red	COM-
3	Yellow	■	Black	OUT0
4	Yellow	■	Red	OUT1
5	Light green	■	Black	OUT2
6	Light green	■	Red	OUT3
7	Gray	■	Black	BUSY

Terminal no.	Insulation color	Dot mark	Dot color	Function
8	Gray	■	Red	ALARM
9	White	■	Black	IN0
10	White	■	Red	IN1
11	Light brown	■ ■	Black	IN2
12	Light brown	■ ■	Red	IN3
13	Yellow	■ ■	Black	RESET
14	Yellow	■ ■	Red	STOP

\* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.



# Step Motor Driver Series **LECPA**



Model Selection

LEHZ

LEHZJ

Step Motor (Servo/24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

## How to Order

**LECP AN 1 - LEHZ10LK2-4**

### Driver type

<b>AN</b>	Pulse input type (NPN)
<b>AP</b>	Pulse input type (PNP)

### Driver mounting

<b>Nil</b>	Screw mounting
<b>D (Note)</b>	DIN rail mounting

Note) DIN rail is not included. Order it separately.

### I/O cable length [m]

Nil	None
<b>1</b>	1.5
<b>3</b>	3*
<b>5</b>	5*

\* Pulse input usable only with differential. Only 1.5 m cables usable with open collector.

### Actuator part number

(Except cable specifications and actuator options)  
Example: Enter "LEHZ10LK2-4" for the LEHZ10LK2-4AF-R1AN1.


\* When controller equipped type is selected when ordering the LE series, you do not need to order this driver.

### The driver is sold as single unit after the compatible actuator is set.

Confirm that the combination of the driver and the actuator is correct.

#### <Check the following before use.>

- Check the actuator label for model number. This matches the driver.
- Check Parallel I/O configuration matches (NPN or PNP).

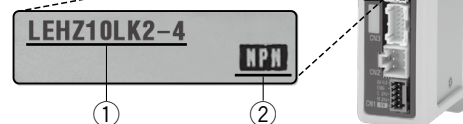

\* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

### ⚠ Caution

#### [CE-compliant products]

① EMC compliance was tested by combining the electric actuator LEH series and the LECPA series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

② For the LECPA series (step motor driver), EMC compliance was tested by installing a noise filter set (LEC-NFA). Refer to page 80 for the noise filter set. Refer to the LECPA Operation Manual for installation.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

## Specifications

Item	LECPA
<b>Compatible motor</b>	Step motor (Servo/24 VDC)
<b>Power supply</b> <small>Note 1)</small>	Power voltage: 24 VDC $\pm 10\%$ Maximum current consumption: 3 A (Peak 5 A) <small>Note 2)</small> [Including motor drive power, control power, stop, lock release]
<b>Parallel input</b>	5 inputs (Except photo-coupler isolation, pulse input terminal, COM terminal)
<b>Parallel output</b>	9 outputs (Photo-coupler isolation)
<b>Pulse signal input</b>	Maximum frequency: 60 kpps (Open collector), 200 kpps (Differential) Input method: 1 pulse mode (Pulse input in direction), 2 pulse mode (Pulse input in differing directions)
<b>Compatible encoder</b>	Incremental A/B phase (Encoder resolution: 800 pulse/rotation)
<b>Serial communication</b>	RS485 (Modbus protocol compliant)
<b>Memory</b>	EEPROM
<b>LED indicator</b>	LED (Green/Red) one of each
<b>Lock control</b>	Forced-lock release terminal <small>Note 3)</small>
<b>Cable length [m]</b>	I/O cable: 1.5 or less (Open collector), 5 or less (Differential) Actuator cable: 20 or less
<b>Cooling system</b>	Natural air cooling
<b>Operating temperature range [°C]</b>	0 to 40 (No freezing)
<b>Operating humidity range [%RH]</b>	90 or less (No condensation)
<b>Storage temperature range [°C]</b>	-10 to 60 (No freezing)
<b>Storage humidity range [%RH]</b>	90 or less (No condensation)
<b>Insulation resistance [MΩ]</b>	Between the housing and SG terminal: 50 (500 VDC)
<b>Weight [g]</b>	120 (Screw mounting), 140 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the driver power supply. When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.


Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.

Note 3) Applicable to non-magnetizing lock.


# Series **LECPA**

## How to Mount

**a) Screw mounting (LECPA□□-□)**  
(Installation with two M4 screws)

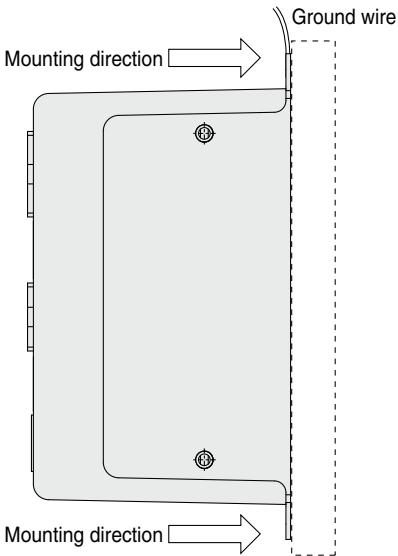

**b) DIN rail mounting (LECPA□□D-□)**  
(Installation with the DIN rail)

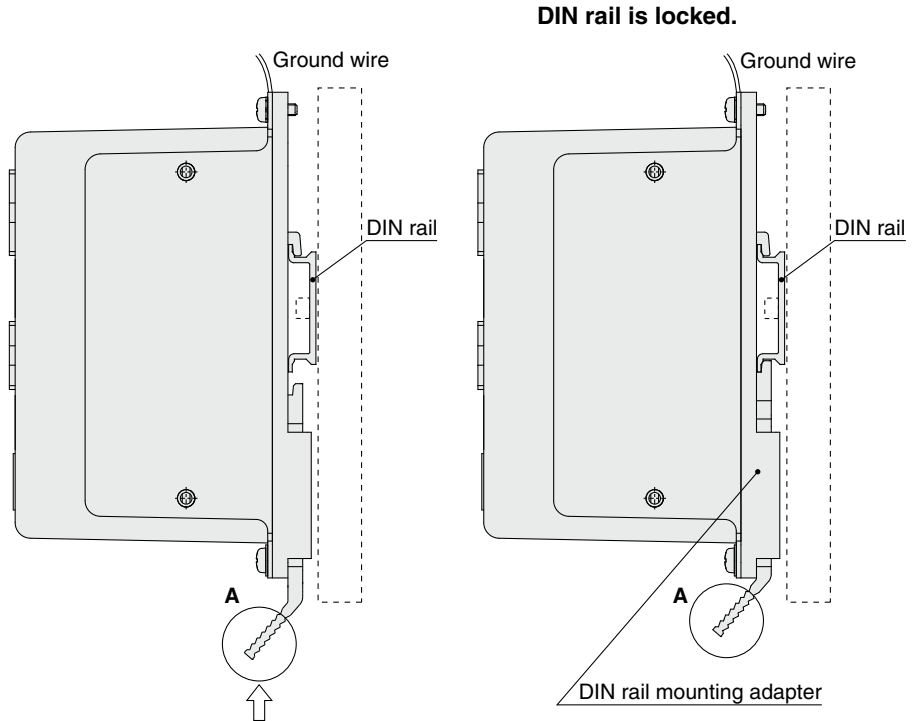


Hook the driver on the DIN rail and press the lever of section A in the arrow direction to lock it.

Note) The space between the drivers should be 10 mm or more.

### DIN rail AXT100-DR-□

\* For □, enter a number from the "No." line in the table below.  
Refer to the dimensions on page 76 for the mounting dimensions.

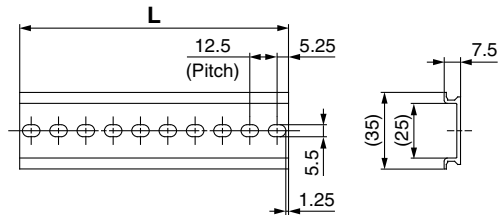

#### L Dimension [mm]


No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

### DIN rail mounting adapter LEC-2-D0 (with 2 mounting screws)


This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type driver afterwards.

## Dimensions

### a) Screw mounting (LECPA□□-□)

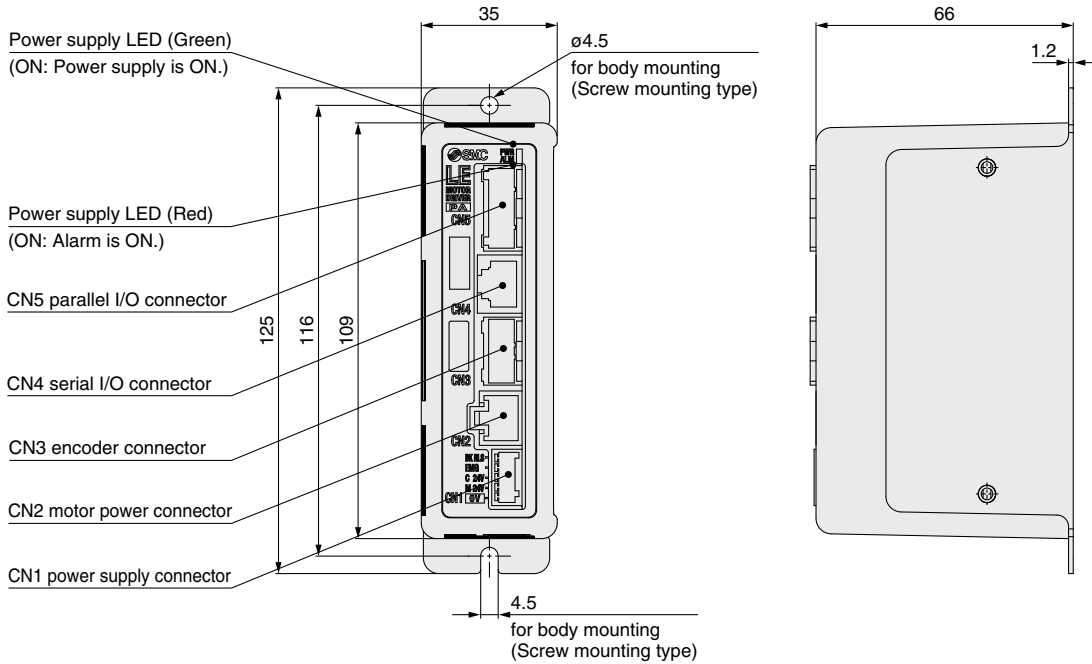

### b) DIN rail mounting (LECPA□□D-□)

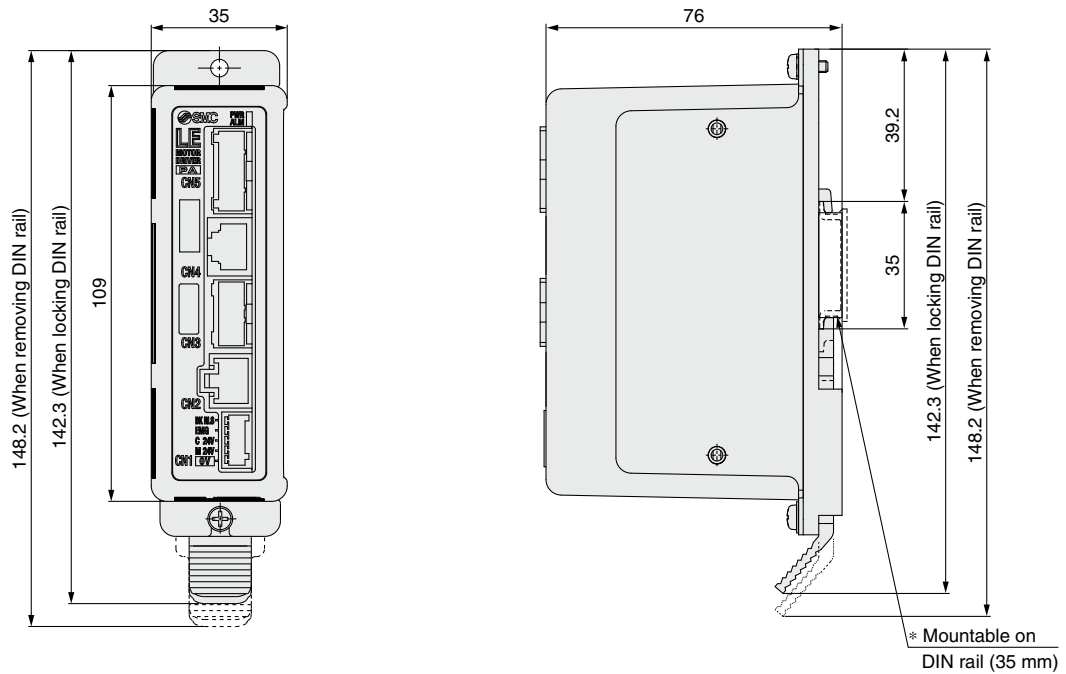


## Wiring Example 1

**Power Supply Connector: CN1** \* Power supply plug is an accessory.

**CN1 Power Supply Connector Terminal for LECPA** (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M24V terminal/C24V terminal/EMG terminal/ BK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) supplied to the driver
C24V	Control power supply (+)	Control power supply (+) supplied to the driver
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

**Power supply plug for LECPA**

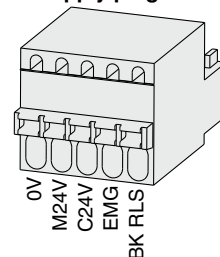

Model  
Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product  
Precautions


Step Motor (Servo/24 VDC)

# Series LECPA


## Wiring Example 2

**Parallel I/O Connector: CN5** \* When you connect a PLC, etc., to the CN5 parallel I/O connector, please use the I/O cable (LEC-CN5-□).  
 \* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

### LECPAN□□-□ (NPN)

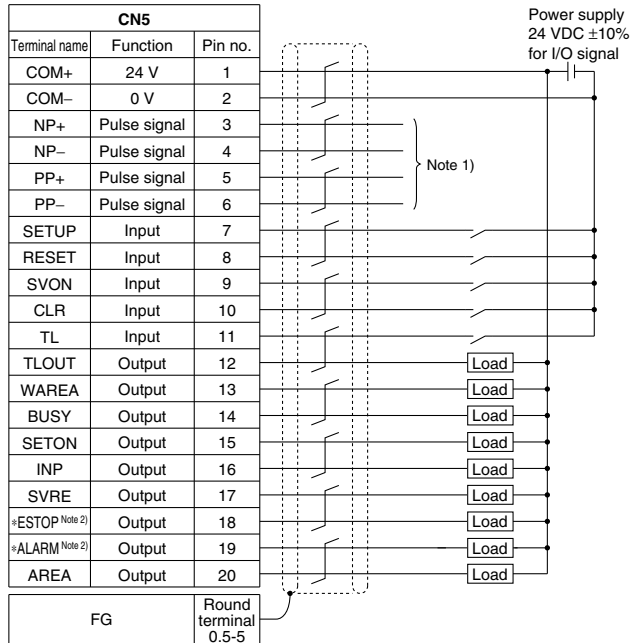

### LECPAP□□-□ (PNP)

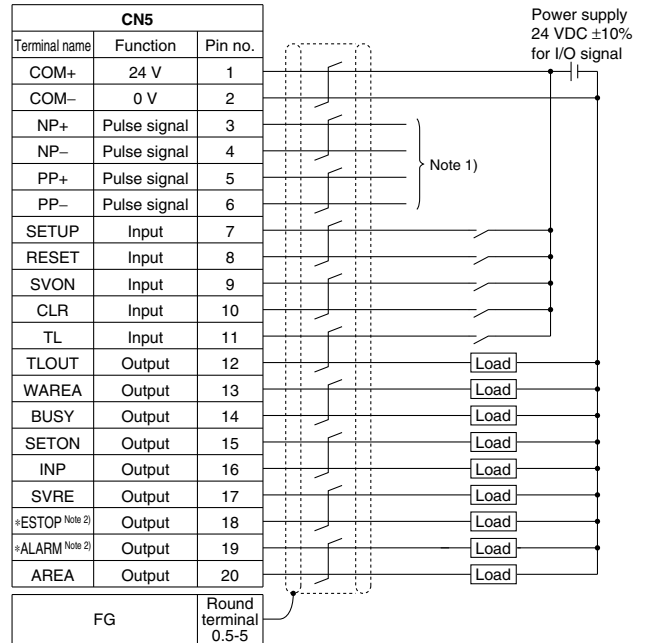

Note 1) For pulse signal wiring method, refer to "Pulse Signal Wiring Details".  
 Note 2) Output when the power supply of the driver is ON. (N.C.)

### Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
SETUP	Instruction to return to origin
RESET	Alarm reset
SVON	Servo ON instruction
CLR	Deviation reset
TL	Instruction to pushing operation


### Output Signal

Name	Details
BUSY	Outputs when the actuator is operating
SETON	Outputs when returning to origin
INP	Outputs when target position is reached
SVRE	Outputs when servo is on
*ESTOP <sup>Note 3)</sup>	Not output when EMG stop is instructed
*ALARM <sup>Note 3)</sup>	Not output when alarm is generated
AREA	Outputs within the area output setting range
WAREA	Outputs within W-AREA output setting range
TLOUT	Outputs during pushing operation


Note 3) Signal of negative-logic circuit ON (N.C.)

## Pulse Signal Wiring Details

### • Pulse signal output of positioning unit is differential output

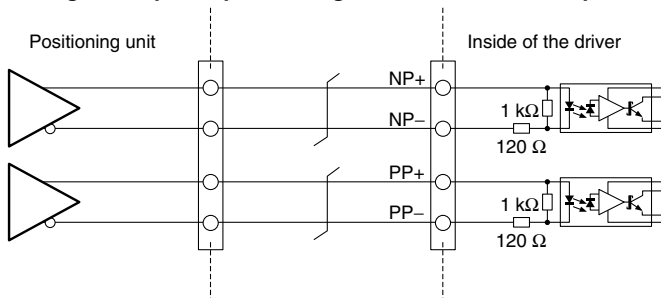

### • Pulse signal output of positioning unit is open collector output

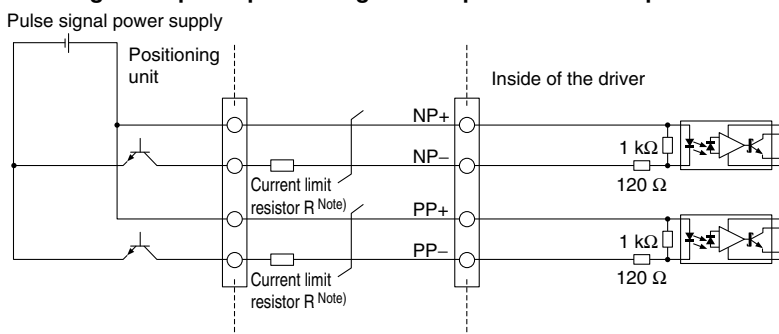


Note) Connect the current limit resistor R in series to correspond to the pulse signal voltage.

Pulse signal power supply voltage	Current limit resistor R specifications
24 VDC ±10%	3.3 kΩ ±5% (0.5 W or more)
5 VDC ±5%	390 Ω ±5% (0.1 W or more)


## Signal Timing

### Return to Origin

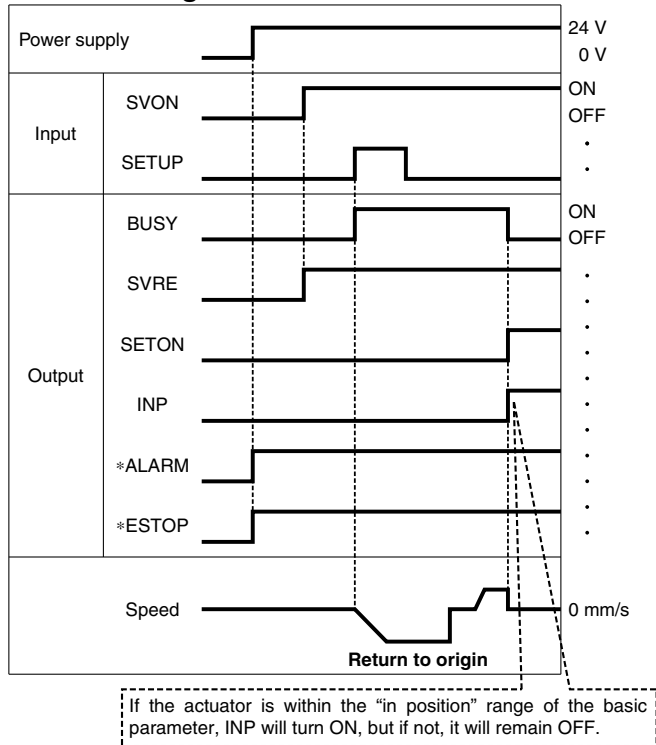


\*"ALARM" and "ESTOP" are expressed as negative-logic circuit.

### Positioning Operation

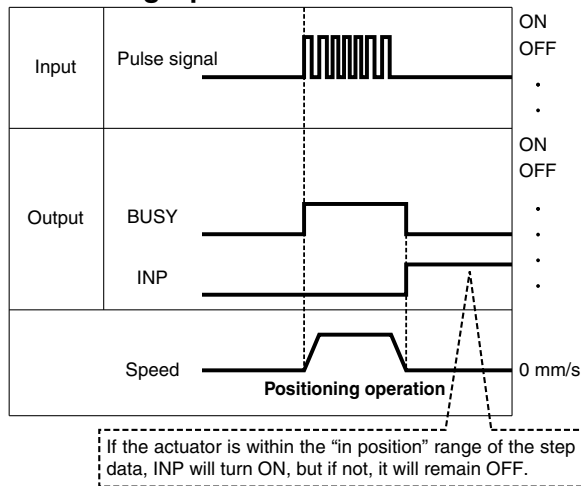


### Pushing Operation

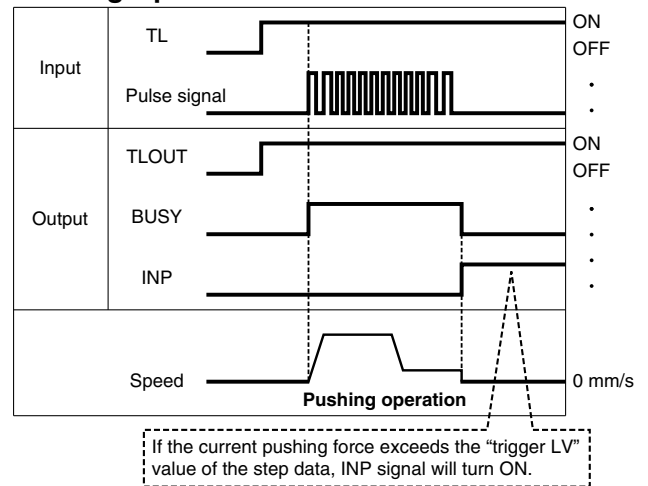

Note) If pushing operation is stopped when there is no pulse deviation, the moving part of the actuator may pulsate.

### Alarm Reset

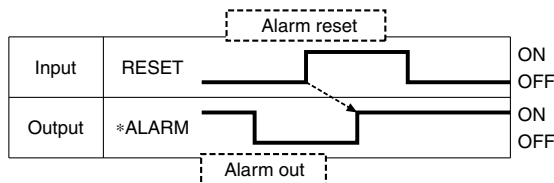

\*"ALARM" is expressed as negative-logic circuit.

Model Selection

LEHZ

LEHZJ

LEHF

LEHS

LECP6

LEC-G

LECP1

LECPA

Specific Product Precautions

# Series **LECPA**

## Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

**LE-CP-1-** 1 -  

Cable length (L) [m]


<b>1</b>	1.5
<b>3</b>	3
<b>5</b>	5
<b>8</b>	8*
<b>A</b>	10*
<b>B</b>	15*
<b>C</b>	20*

\* Produced upon receipt of order (Robotic cable only)


Cable type

<b>Nil</b>	Robotic cable (Flexible cable)
<b>S</b>	Standard cable

**LE-CP-<sup>1</sup>/<sub>3</sub>**/Cable length: 1.5 m, 3 m, 5 m

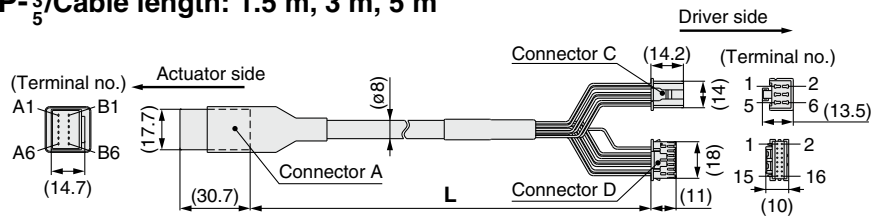

**LE-CP-<sup>8B</sup>/<sub>AC</sub>**/Cable length: 8 m, 10 m, 15 m, 20 m  
(\* Produced upon receipt of order)

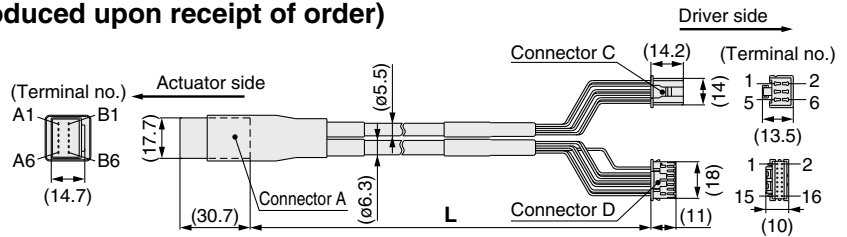

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
		-	3

**Options**


[I/O cable]

**LEC-C L5 - 1**

I/O cable type	
<b>L5</b>	For LECPA

I/O cable length (L)	
<b>1</b>	1.5 m
<b>3</b>	3 m*
<b>5</b>	5 m*

\* Pulse input usable only with differential. Only 1.5 m cables usable with open collector.

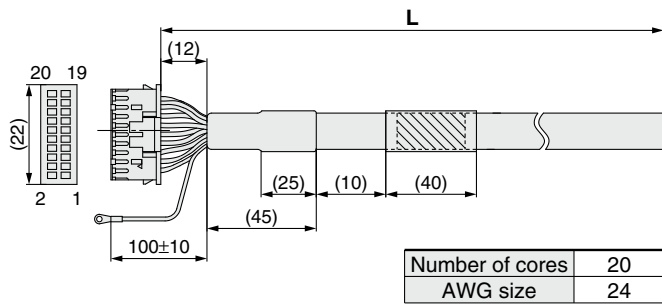

Pin no.	Insulation color	Dot mark	Dot color
1	Light brown	■	Black
2	Light brown	■	Red
3	Yellow	■	Black
4	Yellow	■	Red
5	Light green	■	Black
6	Light green	■	Red
7	Gray	■	Black
8	Gray	■	Red
9	White	■	Black
10	White	■	Red
11	Light brown	■ ■	Black


Pin no.	Insulation color	Dot mark	Dot color
12	Light brown	■ ■	Red
13	Yellow	■ ■	Black
14	Yellow	■ ■	Red
15	Light green	■ ■	Black
16	Light green	■ ■	Red
17	Gray	■ ■	Black
18	Gray	■ ■	Red
19	White	■ ■	Black
20	White	■ ■	Red

Round terminal 0.5-5	Green
----------------------	-------

[Noise filter set]  
Step Motor Driver (Pulse Input Type)

**LEC-NFA**

Contents of the set: 2 noise filters  
(Manufactured by WURTH ELEKTRONIK: 74271222)

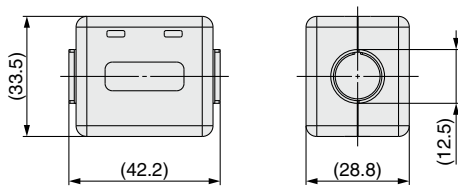

\* Refer to the LECPA series Operation Manual for installation.

Model Selection

LEHZ

LEHZJ

Step Motor (Servo24 VDC)

LEHF

LEHS

LECP6

LEC-G

LECP1

**LECPA**

Specific Product Precautions

Series **LEC**


Windows®XP, Windows®7 compatible

# Controller Setting Kit/LEC-W2

## How to Order

**LEC-W2**

Controller setting kit  
(Japanese and English are available.)

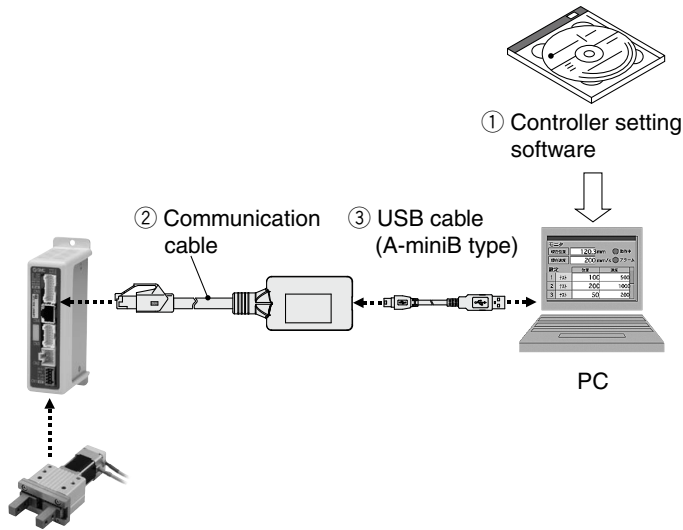

## Contents

- ① Controller setting software (CD-ROM)
- ② Communication cable
- ③ USB cable  
(Cable between the PC and the conversion unit)

## Compatible Controllers/Driver

- Step motor controller (Servo/24 VDC) Series **LECP6**
- Servo motor controller (24 VDC) Series **LECA6**
- Step motor driver (Pulse input type) Series **LECPA**

## Hardware Requirements

OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

\* Windows® and Windows®7 are registered trademarks of Microsoft Corporation in the United States.  
\* Refer to SMC website for version update information, <http://www.smcworld.com>

## Screen Example


### Easy mode screen example



### Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and testing of the drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

### Normal mode screen example

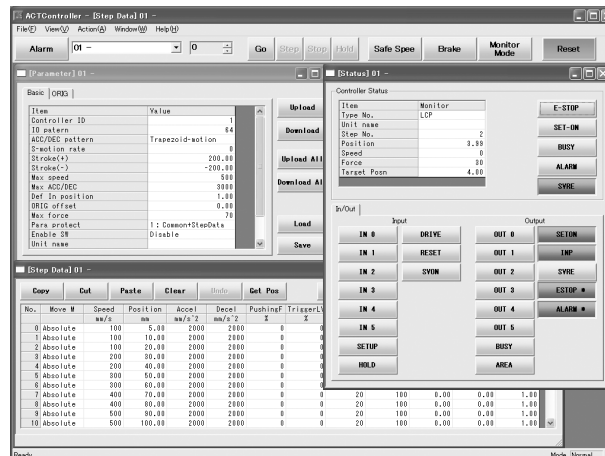

### Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.





## How to Order

**LEC-T1-3 J G**

Teaching box

Cable length [m]  
3 3

Initial language

J	Japanese
E	English

Enable switch

Nil	None
S	Equipped with enable switch

\* Interlock switch for jog and test function

Stop switch

G	Equipped with stop switch
---	---------------------------

\* The displayed language can be changed to English or Japanese.

## Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

### [CE-compliant products]

The EMC compliance of the teaching box was tested with the LECP6 series step motor controller (servo/24 VDC) and an applicable actuator.

### [UL-compliant products]

When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

### Standard functions

- Chinese character display
- Stop switch is provided.


### Option

- Enable switch is provided.

## Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation (Note 1) • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor

## Menu Operations Flowchart

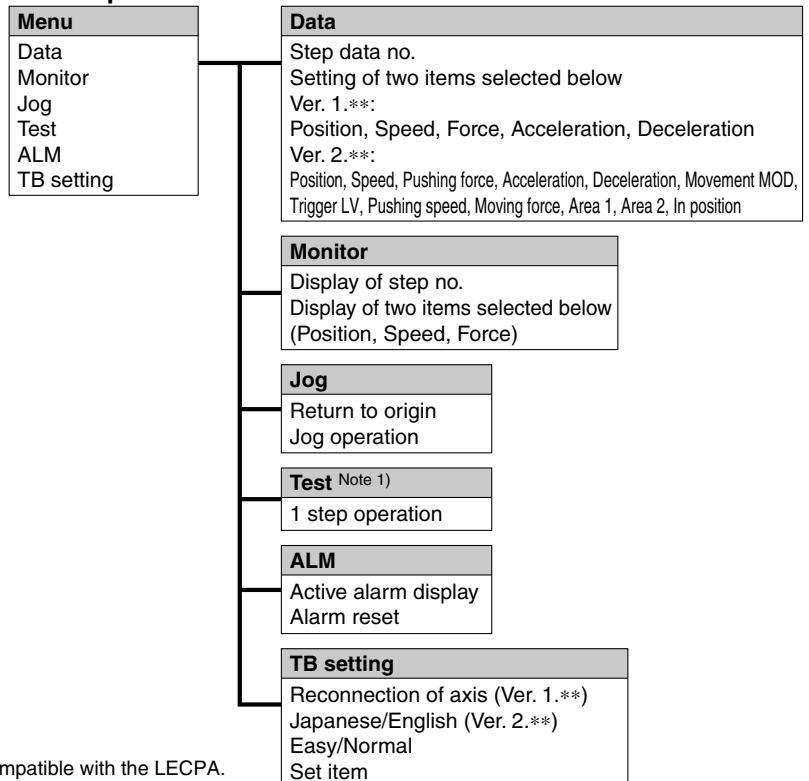


Note 1) Not compatible with the LECPA.


## Normal Mode

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	<ul style="list-style-type: none"> <li>• Jog operation/Constant rate movement</li> <li>• Return to origin</li> <li>• Test drive <sup>Note 1)</sup></li> </ul> (Specify a maximum of 5 step data and operate.) <ul style="list-style-type: none"> <li>• Forced output (Forced signal output, Forced terminal output) <sup>Note 2)</sup></li> </ul>
Monitor	<ul style="list-style-type: none"> <li>• Drive monitor</li> <li>• Output signal monitor <sup>Note 2)</sup></li> <li>• Input signal monitor <sup>Note 2)</sup></li> <li>• Output terminal monitor</li> <li>• Input terminal monitor</li> </ul>
ALM	<ul style="list-style-type: none"> <li>• Active alarm display (Alarm reset)</li> <li>• Alarm log record display</li> </ul>
File	<ul style="list-style-type: none"> <li>• Data saving Save the step data and parameters of the driver which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file).</li> <li>• Load to driver Loads the data which is saved in the teaching box to the driver which is being used for communication.</li> <li>• Delete the saved data.</li> <li>• File protection (Ver. 2.**)</li> </ul>
TB setting	<ul style="list-style-type: none"> <li>• Display setting (Easy/Normal mode)</li> <li>• Language setting (Japanese/English)</li> <li>• Backlight setting</li> <li>• LCD contrast setting</li> <li>• Beep sound setting</li> <li>• Max. connection axis</li> <li>• Distance unit (mm/inch)</li> </ul>
Reconnect	• Reconnection of axis

## Menu Operations Flowchart

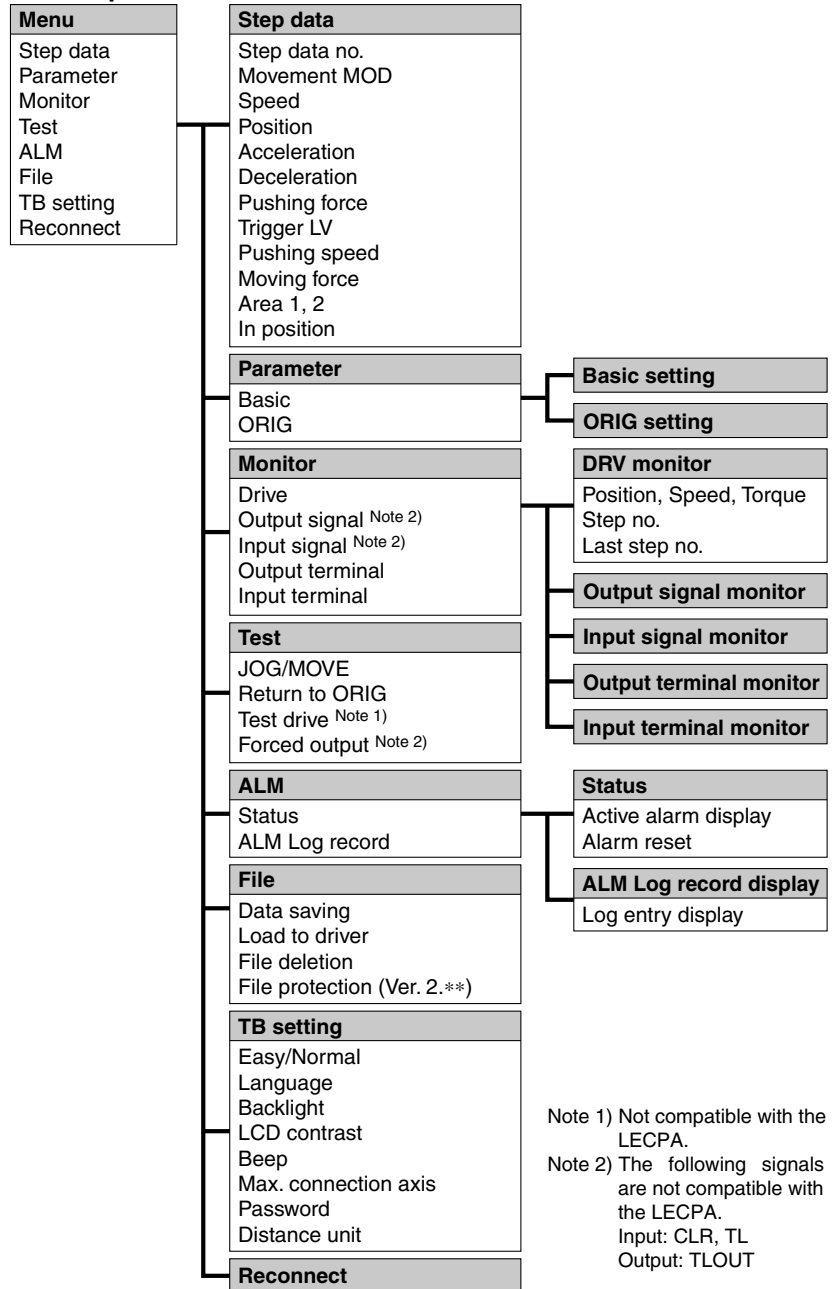

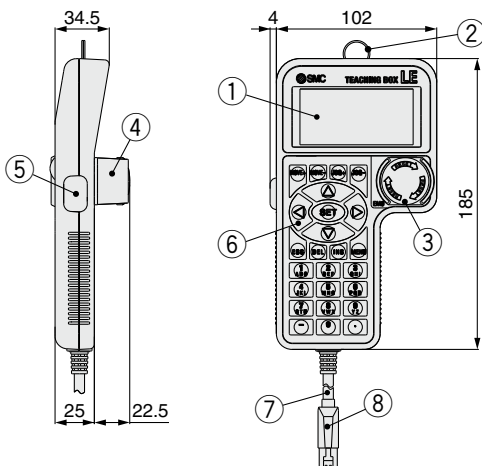


## Dimensions



No.	Description	Function
1	LCD	A screen of liquid crystal display (with backlight)
2	Ring	A ring for hanging the teaching box
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	Stop switch guard	A guard for the stop switch
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	Key switch	Switch for each input
7	Cable	Length: 3 meters
8	Connector	A connector connected to CN4 of the controller

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1, and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- \*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
 ISO 4413: Hydraulic fluid power – General rules relating to systems.  
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
 (Part 1: General requirements)  
 ISO 10218-1: Manipulating industrial robots – Safety.  
 etc.

### Warning

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**  
 Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- Only personnel with appropriate training should operate machinery and equipment.**  
 The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**
  - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**
  - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### Caution

- The product is provided for use in manufacturing industries.**  
 The product herein described is basically provided for peaceful use in manufacturing industries.  
 If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
 If anything is unclear, contact your nearest sales branch.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.  
 Read and accept them before using the product.

### Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
 Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
 This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.  
 \*2) **Vacuum pads are excluded from this 1 year warranty.**  
 A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Revision history

**Edition B** \* Electric gripper 3-finger type LEHS series is added.  
 \* How to order for the electric gripper 2-finger type LEHZ/LEHF series is changed.  
 \* Number of pages from 60 to 72


NZ

**Edition D** \* Electric gripper 2-finger type/with dust cover LEHZJ series is added.  
 \* Programless controller LECP1 series is added  
 \* Number of pages from 72 to 84

PY

**Edition E** \* Pulse input type LECPA series is added.  
 \* Gateway unit LEC-G series is added.  
 \* Number of pages from 84 to 104

RQ

 **Safety Instructions** Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

# SMC Corporation

Akihabara UDX 15F,  
 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN  
 Phone: 03-5207-8249 Fax: 03-5298-5362  
<http://www.smcworld.com>  
 © 2013 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.

D-G

1st printing NZ printing RQ 8150DN Printed in Japan.