2/3 Port Mechanical Valve Series VM200



- Large flow capacity
- Possible to choose mounting method: Side mounting, bottom mounting using screws, or mounting with special bracket
- A variety of actuator types



Specifications

Fluid		Air/Inert gas		
Operating pr	essure range	0 to 1 MPa		
Ambient and fl	uid temperature	–5 to 60°C (No freezing)		
Flow-rate characteristics		1 (P) \Rightarrow 2 (A)	$2 (A) \Rightarrow 3 (R)$	
	C [dm³/(s·bar)]	4	3.5	
	b	0.4	0.1	
	Cv	0.87	0.69	
Lubrication ¹	Note 1)	Not required		
Port size		1/4		
Weight (Basic)		90 g		
Bracket part number Note 2)		VM2-B		

Note 1) Use turbine oil Class 1 ISO VG32, if lubricated. Note 2) The bracket can only be used for side mounting.

Model

	Piping direction			Side	ported		Actu	uator
	Body option		Star	ndard	With bottom mounting thread		Actuator	Additional weight
	Numb	per of ports	2 port	3 port	2 port	3 port	part number	for actuator
	Basic		VM220-02-00A	VM230-02-00A	VM220U-02-00A	VM230U-02-00A	_	—
ç		Polyacetal roller	VM220-02-01A	VM230-02-01A	VM220U-02-01A	VM230U-02-01A	VM-01A	50 g
atio	Roller lever	Hard steel roller	VM220-02-01SA	VM230-02-01SA	VM220U-02-01SA	VM230U-02-01SA	VM-01AS	60 g
operation	One way	Polyacetal roller	VM220-02-02A	VM230-02-02A	VM220U-02-02A	VM230U-02-02A	VM-02A	60 g
		Hard steel roller	VM220-02-02SA	VM230-02-02SA	VM220U-02-02SA	VM230U-02-02SA	VM-02AS	70 g
Mechanical	Straight plung	ger	VM220-02-05A	VM230-02-05A	VM220U-02-05A	VM230U-02-05A	VM-05A	130 g
an	Roller	Polyacetal roller	VM220-02-06A	VM230-02-06A	VM220U-02-06A	VM230U-02-06A	VM-06A	120 g
ec	plunger	Hard steel roller	VM220-02-06SA	VM230-02-06SA	VM220U-02-06SA	VM230U-02-06SA	VM-06AS	130 g
Σ	Cross roller	Polyacetal roller	VM220-02-07A	VM230-02-07A	VM220U-02-07A	VM230U-02-07A	VM-07A	120 g
	plunger	Hard steel roller	VM220-02-07SA	VM230-02-07SA	VM220U-02-07SA	VM230U-02-07SA	VM-07AS	130 g
	Toggle lever		VM220-02-08A	VM230-02-08A	VM220U-02-08A	VM230U-02-08A	VM-08A	110 g
		Red	VM220-02-30RA	VM230-02-30RA	VM220U-02-30RA	VM230U-02-30RA	VM-30AR	
	Push button (Mushroom)	Black	VM220-02-30BA	VM230-02-30BA	VM220U-02-30BA	VM230U-02-30BA	VM-30AB	58 g
		Green	VM220-02-30GA	VM230-02-30GA	VM220U-02-30GA	VM230U-02-30GA	VM-30AG	
		Yellow	VM220-02-30YA	VM230-02-30YA	VM220U-02-30YA	VM230U-02-30YA	VM-30AY	
		Red	VM220-02-32RA	VM230-02-32RA	VM220U-02-32RA	VM230U-02-32RA	VM-32AR	52 g
	Push button	Black	VM220-02-32BA	VM230-02-32BA	VM220U-02-32BA	VM230U-02-32BA	VM-32AB	
	(Extended)	Green	VM220-02-32GA	VM230-02-32GA	VM220U-02-32GA	VM230U-02-32GA	VM-32AG	
l o		Yellow	VM220-02-32YA	VM230-02-32YA	VM220U-02-32YA	VM230U-02-32YA	VM-32AY	
operation	Push button (Flush)	With a set of red, black, green, yellow	VM220-02-33A	VM230-02-33A	VM220U-02-33A	VM230U-02-33A	VM-33A	50 g
		Red	VM220-02-34RA	VM230-02-34RA	VM220U-02-34RA	VM230U-02-34RA	VM-34AR	56 g
Manual	Twist selector	Black	VM220-02-34BA	VM230-02-34BA	VM220U-02-34BA	VM230U-02-34BA	VM-34AB	
Na	(2 position)	Green	VM220-02-34GA	VM230-02-34GA	VM220U-02-34GA	VM230U-02-34GA	VM-34AG	
-		Yellow	VM220-02-34YA	VM230-02-34YA	VM220U-02-34YA	VM230U-02-34YA	VM-34AY	
	Key selector (2 position)		VM220-02-36A	VM230-02-36A	VM220U-02-36A	VM230U-02-36A	VM-36A	78 g
	Twist selector	r (3 position)	3 port	5 port	3 port	5 port		
		Red	VM230-02-35RA	VM250-02-35RA	VM230U-02-35RA	VM250U-02-35RA]	230 g
		Black	VM230-02-35BA	VM250-02-35BA	VM230U-02-35BA	VM250U-02-35BA] —	(Add to 2
		Green	VM230-02-35GA	VM250-02-35GA	VM230U-02-35GA	VM250U-02-35GA]	basic units.)
		Yellow	VM230-02-35YA	VM250-02-35YA	VM230U-02-35YA	VM250U-02-35YA		
	Foot pedal		VM220-02-40A	VM230-02-40A	-	_	—	340 g

Note 1) It is possible to change the actuator assembly and mount to basic type when an actuator part number is specified in the column. Note 2) For push button (mushroom), push button (flush), push button (extended) and individual fastening ring, refer to page 25.


Note 3) The handle of the selector (2 position and 3 position) cannot be removed or replaced alone.

Note 4) Color of plunger: Gray (2 port), White (3 port)




2/3 Port Mechanical Valve Series VM200

How to Order

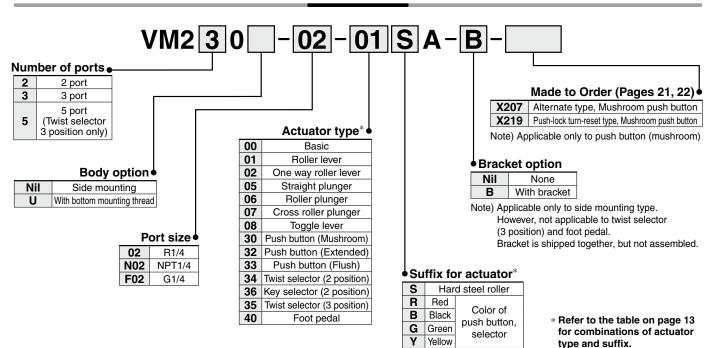



Construction

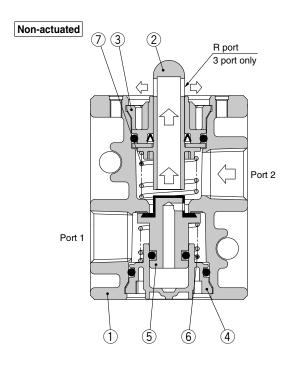

Component Parts

No.	Description	Material	No	ote
1	Valve	ADC	White coated	
2	Plunger	Polyacetal	2 port	Gray
2	Plunger		3 port	White
3	Plunger retainer	PBT		
4	Cover	PBT		
5	Inner valve	NBR, Brass		
6	Spring	Stainless steel		
7	Spring	Spring steel		

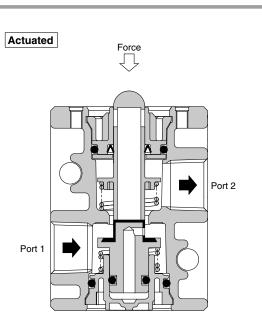


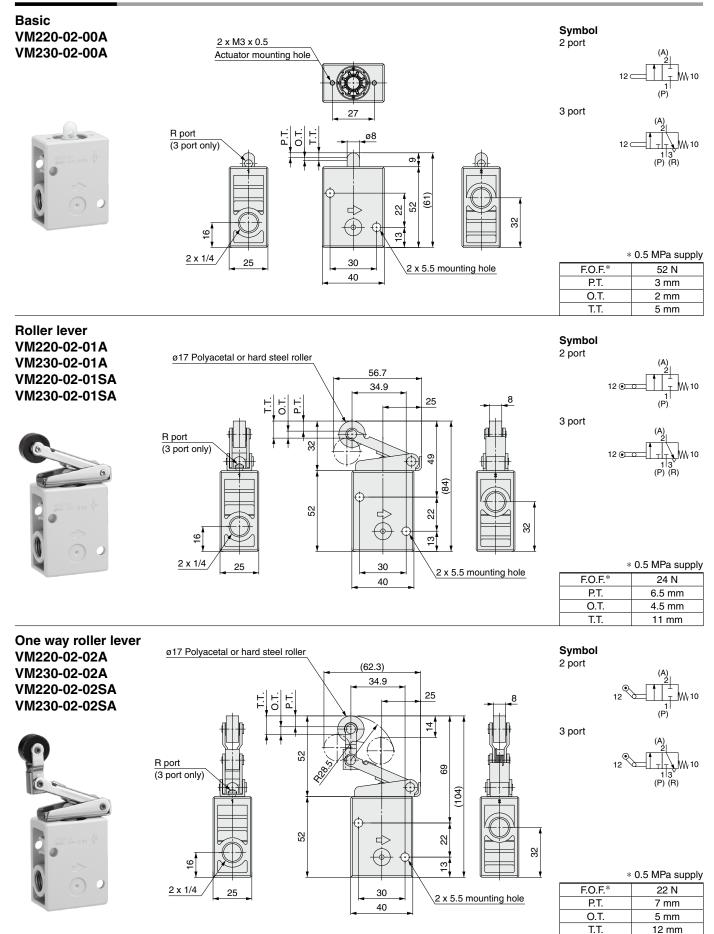



Series VM200 Straight plunger Panel mounting hole VM220-02-05A VM230-02-05A 2 x M20 x 1 ø12 P.T. 0.T. Ë Lock nut 20 Thickness 6, Max. 10 Width across flats 27 LC, Symbol 51. 33 (A) ß R port 2 port ЗЗ. (3 port only) 103.5) 7æľ 12 WW 10 1 (P) 3 port (A 52 ន 32 12 MA 10 9 β 1¹3 (P) (R) 2 x 1/4 25 30 2 x 5.5 mounting hole * 0.5 MPa supply 40 F.O.F.* 56 N P.T. 3.5 mm O.T. 2 mm T.T. 5.5 mm **Roller plunger** Panel mounting hole VM220-02-06A ø17 Polyacetal or hard steel roller VM230-02-06A 0.T. Е.Ч 2 x M20 x 1 20 VM220-02-06SA Lock nut Max. 10 VM230-02-06SA Thickness 6, Width across flats 27 Symbol 20 2 port (A) 33 33.5 R port (3 port only) 12 (WW 10 ΖфΓ 108) (P) 3 port 25 53 12 💽 g MA 10 9 <u></u> (P)(R) * 0.5 MPa supply 2 x 1/4 25 30 2 x 5.5 mounting hole F.O.F.* 56 N 40 P.T. 3.5 mm O.T. 2 mm T.T. 5.5 mm **Cross roller plunger** Panel mounting hole VM220-02-07A ø17 Polyacetal or hard steel roller VM230-02-07A Р.Т. 0. T. Ē 6 20 2 x M20 x 1 VM220-02-07SA Lock nut Max. 10 VM230-02-07SA Thickness 6, Width across flats 27 Symbol 56 (A 2 port 23 R port 33.5 (3 port only) W) 10 12 @ 740 7 .Ν ÷ 108) (P 3 port 22 52 12 💿 W) 10 32 6 (P)(R) 10 <u></u> * 0.5 MPa supply 2 x 1/4 25 30 2 x 5.5 mounting hole F.O.F.* 56 N 40 P.T. 3.5 mm O.T. 2 mm


5.5 mm

T.T.

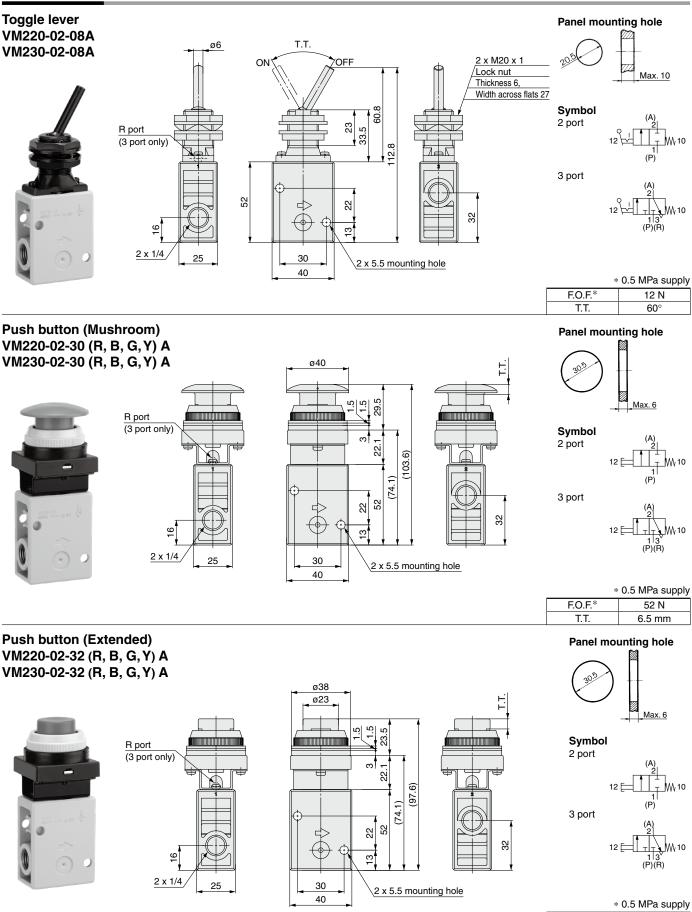

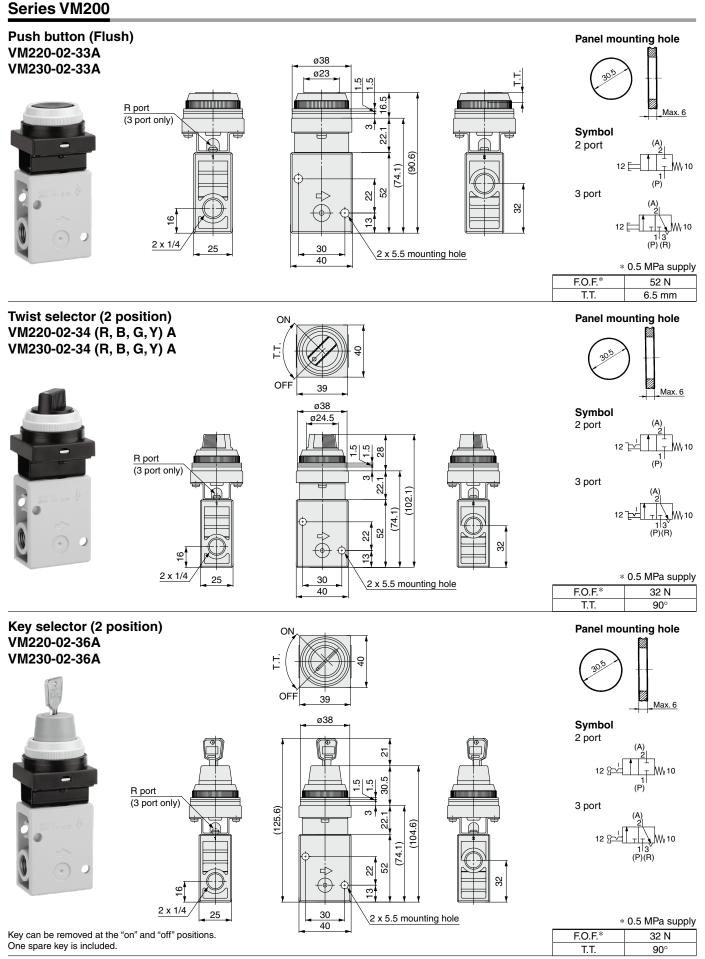

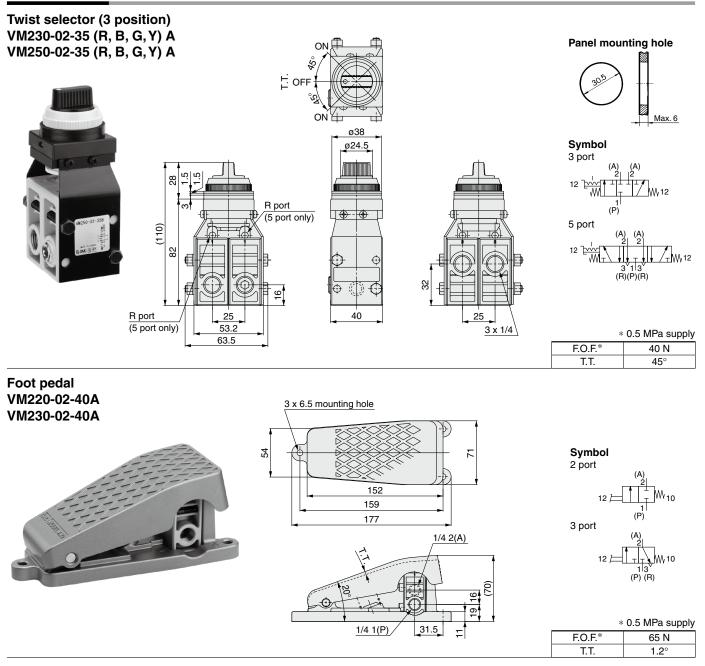

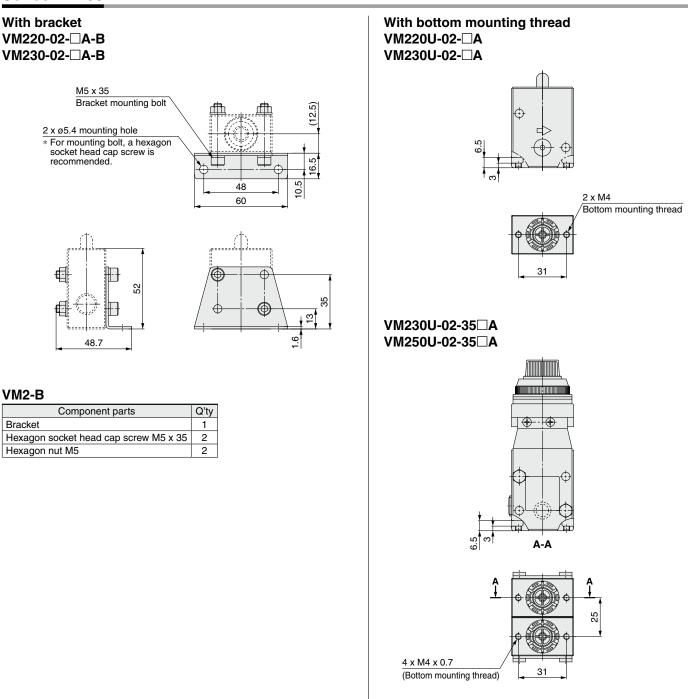

Please contact SMC for detailed specifications, dimensions and delivery.



Symbol

-X207

Panel mounting hole


1 Alternate type, Mushroom push button

Series VM100/200


Made to Order

Alternate type: When pressing the push button, the valve actuates and its status is self-retained even after your hand has been released. Pressing the button again will restore the valve to its previous status.

VM120-01-30 (R, B, G, Y) A-X207

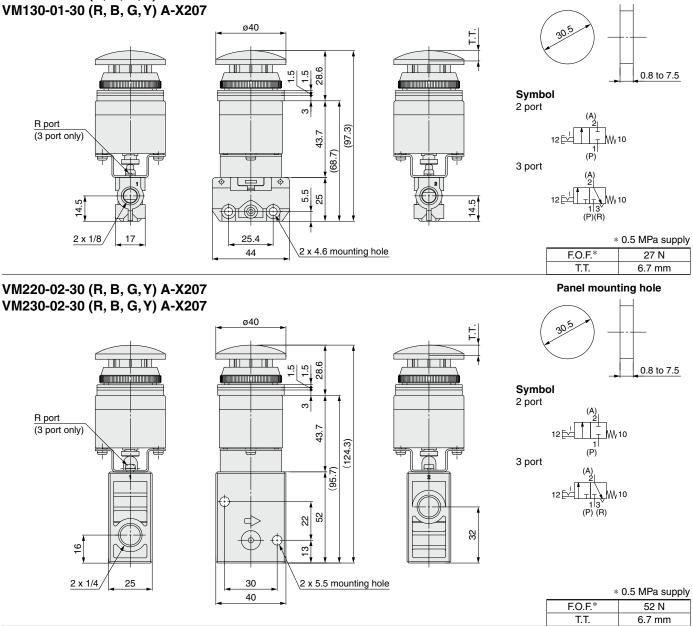

Made to Order Series VM100/200

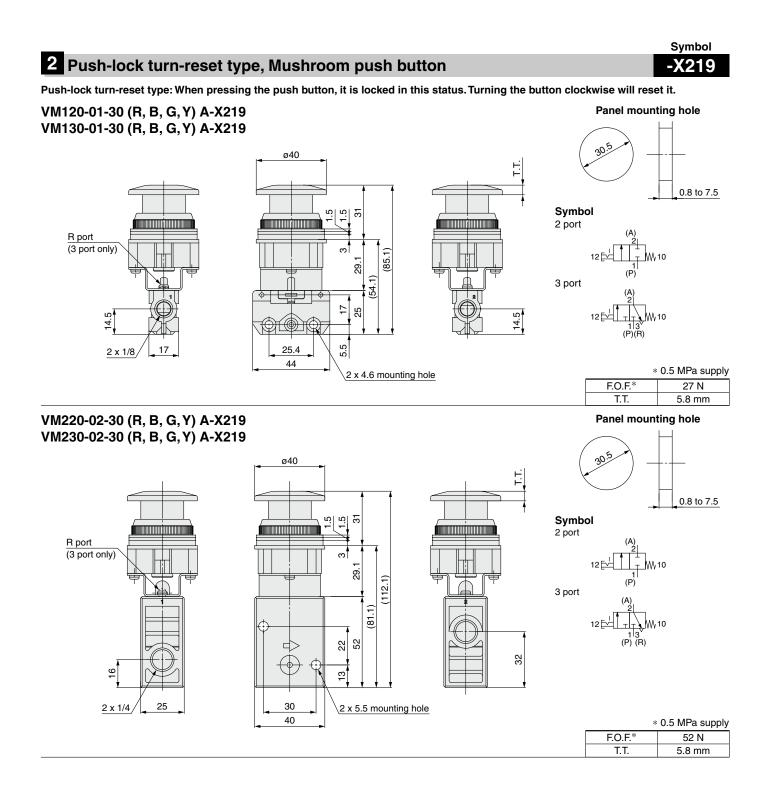




Be sure to read before handling.

Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Definition of Symbol

The abbreviations F.O.F. / P.T. / O.T. / T.T. shown in this catalog are detailed below.

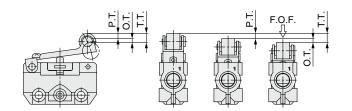

- F.O.F. <Full Operating Force> Required force to total travel position
- P.T. < Pre-travel>

From free position to initial valve operating position

- O.T. < Over Travel>
- From initial valve operating position to total travel position
- T.T. <Total Travel> From free position to total travel position

Design

\land Warning

1. This product cannot be used for applications in which the pressure must be sealed.

Since the VM100 and VM200 are poppet type valves, fluid flows backward when the pressure on port 2 (A) rises.

Since the valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum).

2. Not suitable for use as an emergency shutoff valve

This mechanical valve is not designed for safety applications such as an emergency shutoff valve. If the valves are used for the mentioned applications, additional safety measures should be adopted.

Mounting

\land Warning

1. When installing the mechanical operation type mechanical valves, adjust the position so that the valves do not operate over the operating limit range.

Operating over the limit could damage the mechanical valve or actuator, and lead to equipment malfunction.

Mounting

\land Warning


2. P.T. depends on pressure or differences between the individual product specifications. In order to ensure that the valve opens, keep the operating stroke value for the mechanical operation type within the range specified by the following formula.

Operating stroke = (P.T. + 0.5 x O.T.) to (P.T. + O.T. - 0.1)

Operating Stroke Range

Series	Actuator type	Operating stroke (mm)
	Basic	2.2 to 2.9
	Roller lever	4.3 to 5.4
VM100	One way roller lever	4.3 to 5.4
VIVITOU	Straight plunger	2.7 to 3.4
	Roller plunger	2.7 to 3.4
	Cross roller plunger	2.7 to 3.4
	Basic	4 to 4.9
	Roller lever	8.7 to 10.9
VM200	One way roller lever	9.5 to 11.9
VIVIZUU	Straight plunger	4.5 to 5.4
	Roller plunger	4.5 to 5.4
	Cross roller plunger	4.5 to 5.4

For straight and roller plunger types, there is a groove indicating P.T. and T.T. for stroke adjustment.

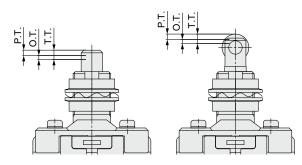

3. Do not make any alterations to the valve body, such as enlarging the body mounting holes.

As doing so could lead to unexpected abnormal conditions such as air leakage.

Operation

\land Warning

1. Operate the manual operation type mechanical valves (such as push button, twist selector and toggle lever types) with your finger.

The use of equipment such as a cylinder, cam or hammer, can result in the actuator and the valve being damaged.

Do not operate over the operation limit. If excessive operation force is applied over total travel position, actuator part can get deformed and lead to equipment malfunction.





Be sure to read before handling.

Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Operation


\land Warning


2. When operating the mechanical operation type mechanical valves, select the angle and the maximum speed limit of cam and dog so that valves do not operate over the following maximum values.

If operated over the maximum values, impact force from cam and dog will be applied to the actuator, leading to damage of the actuator or the valve itself.

Cam and Dog

Series	Actuator type		Max. speed limit of cam and dog (m/s)
	Roller lever	30°	0.7
		45°	0.3
	One way roller lever	30°	0.7
VM100	One way toller lever	45°	0.3
	Straight plunger	—	0.2
	Roller plunger	30°	0.3
	Cross roller plunger	30°	0.3
	Roller lever	30°	0.7
		45°	0.3
		30°	0.7
VM200	One way roller lever	45°	0.3
	Straight plunger		0.2
	Roller plunger	30°	0.3
	Cross roller plunger	30°	0.3

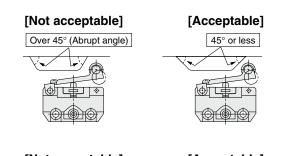

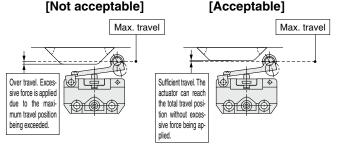

Cam and Dog Material

Roller material	Cam and dog material	Surface finish of cam and dog	
Polyacetal	Steel	6.3 z or less	
Hard steel	Steel, Resin	25 z or less	

A Caution

1. If the operating condition is maintained for long periods of time, it may take some time for the valve to restart due to the adherence of the seals and there might be a delay for recovery.

Air Supply

A Warning

1. Operable fluid is either air or inert gas only. It cannot be used for corrosive gas and fluid.

A Caution

- **1. Grease is used for the inside of the valves.** Grease may enter into the outlet port of the valve.
- 2. When using vacuum pressure for the VM100, supply vacuum pressure to P port.

Operating Environment

\land Warning

1. Do not operate it in an area in which fluids such as oil, coolant, or water splash on it or dust comes in contact with it.

Because it does not have a waterproof or dustproof construction, fluids or dust could enter the valve, leading to malfunction. Therefore, take measures such as providing a protective cover to prevent direct exposure.

2. Do not expose the product to direct sunlight for an extended period of time.

Maintenance

\land Warning

- 1. Perform inspections on a regular basis as necessary, such as at the beginning of an operation, to make sure that the mechanical valve operates properly.
- 2. Do not disassemble, modify or repair the product.

This may lead to malfunction of equipment, injury and equipment damage. Please contact SMC for repairs and maintenance of the product.





Be sure to read before handling.

Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.


How to Change the Buttons

A Caution

Replace the button in the following manner to change color of the button.

1. Push button (Flush type)


- Installation Of the four colors, red, green, black, and yellow, select and align the protruding portion of the button with the recessed portion of the body and push in.
- Removal ——— Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.

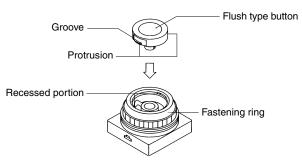

2. Push button (Mushroom and Extended types)


At the time of shipment, only 1 button of the color that you specified is attached to the body.

	,		
	Mushroom type	Extended type	
Installation	Align the protruding portion of the button with the recessed portion of the body and push in. (Use the mark on the button as a reference to align the protruding part.)	the button with the recessed portion of the body and push	
Removal	Placing your finger under the collar of the button on the side of the mark, tilt it upward.	Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.	

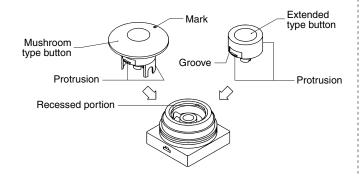


How to remove a mushroom type button

How to remove at panel mount

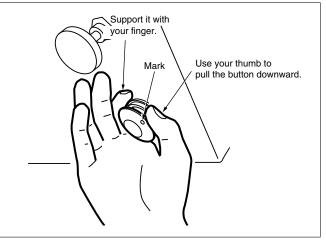

Removing the valve as a unit

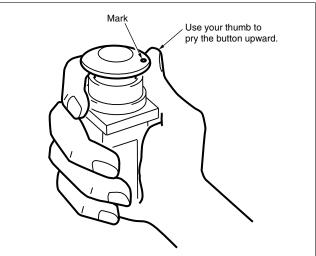

Replacement Parts

1. Use the part numbers listed below to order individual mushroom, extended, or flush type buttons.

Color	Mushroom type button	Extended type button
Red	3402186R	3402187R
Black	3402186B	3402187B
Green	3402186G	3402187G
Yellow	3402186Y	3402187Y

Color	Flush type button
Red	3402188R
Black	3402188B
Green	3402188G
Yellow	3402188Y

2. Use the part number below to order individual fastening ring. Fastening ring: 3402184






Be sure to read before handling.

Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Series VM-X219 How to Mount Panel


[Task 1] Removing the push button and fastening ring

Remove them from the body turning them counterclockwise in the order of the push button and fastening ring.

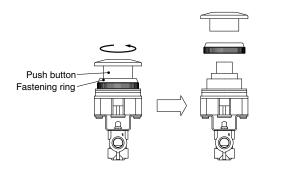

[Task 2] Mounting the valve to the panel


Insert the valve to the panel and fix it with a fastening ring. Remove three spacers attached to the valve depending on the panel thickness.

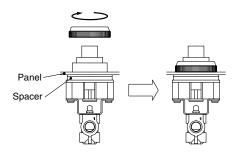

[Task 3] Mounting the push button

Tighten the push button clockwise by hand and further tighten it until load is applied.

Note) When the push button is not tightened enough, the valve may not output correctly after operating the push button. In other cases, the valve outputs temporarily, but when it is in the holding state, the valve may stop outputting. In this situation, tighten the push button again.

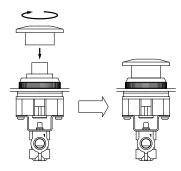



These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.



A Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.