
5 Port Air Operated Valve

Series VPA4□*50*/4□*70*


VPA4270-14 **VPA4150-04**

JIS Symbol 2 position double 2 position single VPA4150/4170 VPA4250/4270

3 1 5 (EB)(P)(EA) 3 1 5 (EB)(P)(EA) 3 position exhaust center 3 position closed center VPA4350 VPA4450

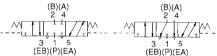

How to Order

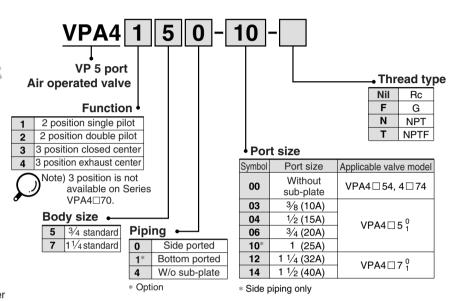


Specifications

Fluid	Air
Operating pressure range (MPa)	0.2 to 0.9
Pilot pressure range (MPa)	Refer to the pilot pressure graph shown in below.
Ambient and fluid temperature (°C)	0 to 60
Lubrication (1)	Required (Use turbine oil Class 1 ISO VG32.)
Mounting orientation	Free
Impact/Vibration resistance (m/s²) (2)	150/50

Note 1) Use turbine oil Class 1 (ISO VG32). Note 2) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve, each one time when pilot signal is ON and OFF (Valve in the inItial stage)

Vibration resistance: No malfunction from test with 45 to 1000 Hz one sweep, to axis and right angle direction of main valve, each one time when pilot signal ON and OFF. (Value in the initial stage)

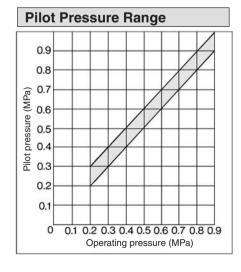

Precautions

Be sure to read this before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions. Precautions.

△Caution

- 1. Lubrication
 - Use turbine oil Class 1 (ISO VG32). Refer to page 6 for brand names of manufacturers.
- 2. Refer to page 607 regarding piping, air quality, operating condition and 3 position closed center.



5 Port Air Operated Valve *Series VPA4* \Box 50/4 \Box 70

Flow Characteristics/Mass

Function			Port		Flow characteristics						
		Valve model	size	1	→4/2(P→A/B)	4/2-	>5/3(A/B→EA/	/EB)	Mass (kg)	
			3126	C[dm³/(s·bar)]	b	Cv	C[dm³/(s·bar)]	b	Cv	(kg)	
			3/8	15	0.22	3.6	16	0.33	4.5	1.9	
	Single	VPA4150	1/2	17	0.15	4.0	19	0.28	5.1	1.9	
2 position	Jg		3/4	21	0.13	5.2	21	0.28	5.6	2.7	
2 position		Double VPA4250	3/8	15	0.22	3.6	16	0.33	4.5	1.9	
	Double		1/2	17	0.15	4.0	19	0.28	5.1	1.9	
			3/4	21	0.13	5.2	21	0.28	5.6	2.7	
	Closed	osed VPA4350	3/8	16	0.28	4.0	4.0 15 0.29		4.0	2.5	
			1/2	18	0.27	4.7	18	0.23	4.5	2.5	
3 position	center		3/4	22	0.19	5.3	20	0.23	5.0	3.3	
o position -	Exhaust	auet	3/8	16	0.28	3.9	16(15)	0.29(0.28)	4.2(4.0)	0.5	
	center	VPA4450	1/2	18	0.24	4.5	19(16)	0.24(0.27)	4.8(4.5)	2.5	
	COINCI		3/4	22	0.15	5.1	22(18)	0.23(0.30)	5.5(4.8)	3.3	

Note) (): Normal position

Fun	ction	Valve model	Port size	Effective area mm²	Mass (kg)
		VPA4150	1	120	2.7
	Single	VPA4170	1 1/4	280	8.8
2 position		VPA4170	1 1/2	300	8.8
2 position	Double	VPA4250	1	120	2.7
		VPA4270	1 1/4	280	0.0
		VFA4270	1 1/2	300	8.8
3 position	Closed center	VPA4350	1	110	3.3
	Exhaust center	VPA4450	1	110	3.3

SYA

SYJA

VZA


VFA


VFRA V□A

Series VPA4□50


Dimensions

VPA4150-□-□

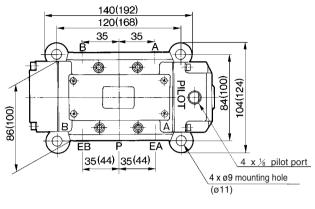

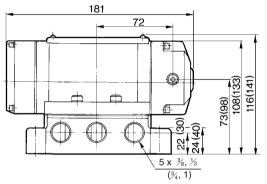



Bottom ported

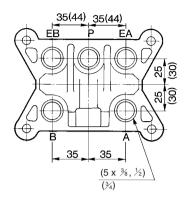




VPA4250-□**-**□**, VPA4350-**□**-**□**, VPA4450-**□**-**□

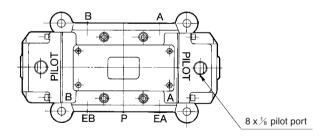

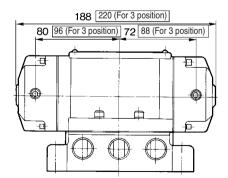


5 Port Air Operated Valve $Series\ VPA4\Box70$

Dimensions

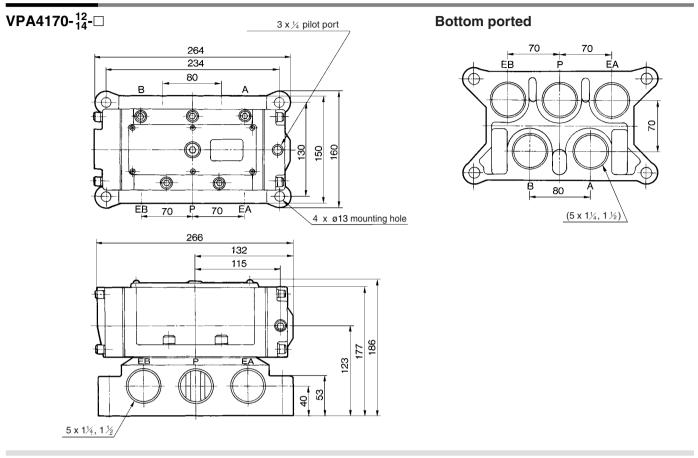

VPA4270-12-□

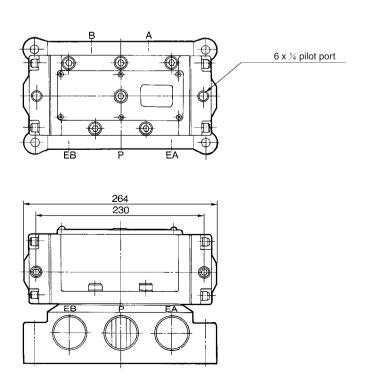

SYA

SYJA

VZA


VFA

VFRA

V□A

Series VPA4 □ 50

Manifold Specifications

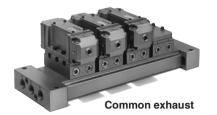



Specifications

Manifold type	B mount
Exhaust type	Common exhaust, Individual exhaust (1)
Supply type	Common supply port
Stations	Max. 10 stations (VVPA460: Max. 8 stations) (2)

Note 1) When valves are closed with diaphragm, back pressure may cause malfunction. Use individual exhaust to prevent such a problem.

Note 2) In the case of more than 4 stations, supply air to both sides of supply port and exhaust air from both sides.

Simultaneous Operation with Manifold Valves

Note) Pressure drop will occur by simultaneously using manifold valves.

Model


Dana madal	Exhaust		Applicable valve model			
Base model	type	Р	A, B	E	Applicable valve model	
VVPA450	Common	2/.	1/- 2/-	2/.	VPA4154-00	
	Individual	3/4	1/2,3/4	3/4	VPA4254-00	
VVPA460	Common	4	2/	4	VPA4354-00	
	Individual	l l	3/4, 1	, I	VPA4454-00	

Option

Blanking plate assembly	XT038N-4A	With Gasket, Bolt
-------------------------	-----------	-------------------




How to Order

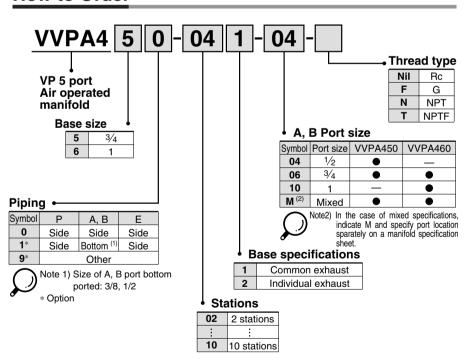

How to Assemble Manifold

To order valves and blanking plate assembly mounted onto the manifold, list valves and blanking plate assembly with manifold base part number.

EX) Base: 6 stations, common EXH, A & B port 1/2

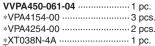


[→]To order valves and options mounted onto the manifold at the factory, list the valve/option with an asterisk (*) in front of each part number.




5 Port Air Operated Valve Series VPA4 50

Dimensions


Common EXH: VVPA450-Station 1-Port size-VVPA460-Station 1-Port size-

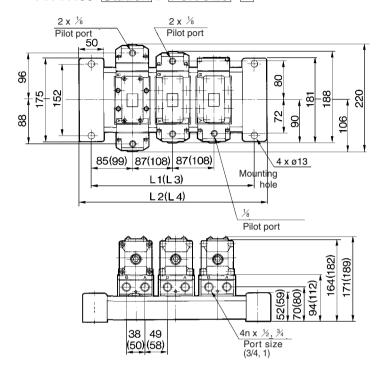


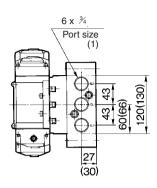



Individual EXH: VVPA450- Station 2- Port size - VVPA460- Station 2- Port size -

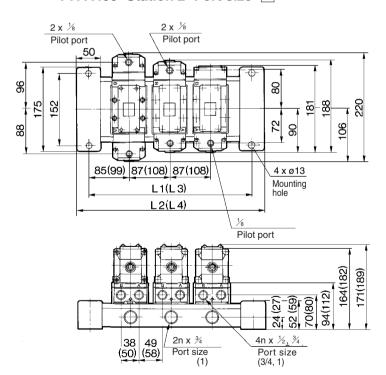

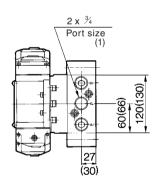

L Dimension

Model	L _	2	3	4	5	6	7	8	9	10	Formula
VVPA450	L1	257	344	431	518	605	692	779	866	953	$L_1=87 \times n+83$
	L2	307	394	481	568	655	742	829	916	1003	$L_2=87 \times n+133$
VVPA460	Lз	306	414	522	630	738	846	954	_	_	L3=108 \times n+90

() for VVPA460

	L2	307	394	481	568	655	742	829	916	1003	$L_2 = 87 \times n + 133$
VPA460	Lз	306	414	522	630	738	846	954	_	_	L3=108 × n+90
VPA460	L4	356	464	572	680	788	896	1004	_		L4=108 × n+140

n: Station

SYA

SYJA

VZA

VFA

VFRA

V□A