# Related Equipment: Differential Pressure Gauge

## Series GD40-2-01

The pressure differential at the inlet and the outlet of compressed air equipment can be viewed at a glance on the differential pressure gauge. It is ideal for the maintenance control of filters.

Compact and lightweight
Can be installed easily by merely
providing a bypass circuit.
Provided with a protective cover to
prevent hazards.



JIS Symbol

Model/Specifications

model/opecifications		
GD40-2-01		
Compressed air		
1 MPa		
1.5 MPa		
5 to 60°C		
1/8		
0 to 0.2 MPa		
±0.006 MPa		
ø40		
300		

#### **Main Parts Material**

Case	Zinc die-casted
Internal part	Brass, Phosphor bronze
Window	Polyester
Scale plate	Stainless steel

#### Accessory

Accessory		
	Nylon tube	T0425 (0.5 m)
	Male connector	H04-01 (1 pc.)
	Male elbow	DL04-01 (1 pc.)

### **⚠** Specific Product Precautions

Be sure to read before handling.

Refer to front matters 42 and 43 for Safety Instructions and pages 6 to 8 for Air Preparation Equipment Precautions.

#### Design

#### **⚠** Caution

 This product cannot be used in a location where pulsations could occur frequently.


#### Mounting

#### **⚠** Caution


1. Mounting


- The HIGH and LOW marks on the back of the differential pressure gauge indicate the high pressure and low pressure sides respectively. Connect the HIGH side to the inlet side of the filter or other devices and the LOW side to their outlet side. Do not use a stop valve to prevent damage to the differential pressure gauge if the valve is inadvertently left open or closed.
- 2) Install the differential pressure gauge vertically.
- 3) The piping of the differential pressure gauge must be connected securely because it will break if it becomes detached.


#### **Piping Example**

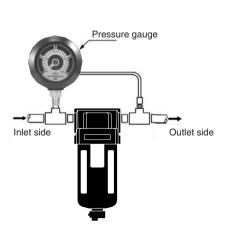

#### **Dimensions**

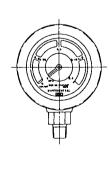

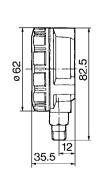

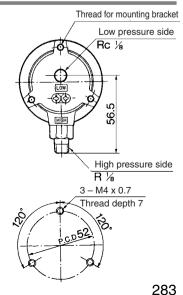



HAA HAW

IDF IDU

IDFA

IDFB

ID

IDG

AMG

AFF

AM

AMD

AMH AME

AMF

SF

SFD

LLB

AD□

GD